 
Menu Conventions



To exit a menu, press any rectangular key

Analyze Mode

Press **Analyze**. The SDA 601 will monitor the incoming signal for one second, analyze the data, and write the results to a "condition review list" and the OSD. Use the ▼ and ▲ keys to scroll through the condition list on the instrument LCD and to page the OSD.

Watch Mode

Press **Watch**. The SDA 601 will begin monitoring (watching) previously selected characteristics (conditions) of the input signal. Use the ▼ and ▲ keys to scroll through the condition list on the instrument LCD and to page the OSD. Seven conditions are always watched and reported when "Watch Menu Type" is set—through the Utility menu—to "Groups":

Video format EDH packet found/missing
Line standard (625 or 525) Audio present/missing
Video present or missing Stuck bits (if any)
Bits in active picture (8 or 10)

Four Watch groups contain the twelve remaining conditions. All conditions may be selected individually when the menu type is set to "Items."

•	•
Data Value Group:	CRC Change Group:
Illegal (word) values	APCRC changes (yes/no)
Video In/Out of range	FFCRC changes (yes/no)
Format Group:	APCRC is/not Ø
Line/field length (OK/incorrect	et) EDH Group:
ANC Format (OK/incorrect)	APCRC EDH errors (yes/no)
TRS (OK/incorrect)	FFCRC EDH errors (yes/no)
Zero length ANC (yes/no)	EDH flag set/not set

Copyright© 1994, Tektronix, Inc. All rights reserved.

Finding the Instrument Functions

Please use the following table as a guide to accessing and configuring the many SDA 601 functions. The symbols may help you find your way:

☐ = Key; ☐ = Menu (Shift, then Key); ●+● = Utility menu. Enter the Utility menu by holding Lock Out down and pressing ON when the SDA 601 is Watching or Idle.

To exit a menu, press any rectangular key

Function	Controlling Key or Menu		
Alarms, configure	→ Alarm Menu		
Alarms, toggle	☐ Alarm On/Off <i>or</i>		
	○□ Alarm Menu		
Analyze	☐ Analyze		
Auto power down	●+● Utility/Diagnostics/Power Manage menu		
AUX outputconfigure	☐ I/O Menu		
Beeper (alarm) configure	☐ Alarm Menu		
Current time on LCD	□ Display Select		
Cursor data on LCD	□ Display Select		
Cursor, in AUX video	☐ I/O Menu		
Highlighting	☐ I/O Menu		
OSD (on-screen display,	☐ Insert On/Off and		
inserted in AUX video)	◆+◆ Utility/OSD Setups submenu		
Presets, save/recall	→ Presets Menu		
Print analysis report	○□ Print Report		
Print errors (watch)	○□ Alarm Menu		
Printer Setup	●+● Utility/Printer Setup submenu and		
	●+● Utility/RS23 Setup submenu		
Pulse cross	☐ I/O Menu		
Signal level, LCD bar	□ Display Select		
Signal level, data on LCD	☐ Display Select		
Watch	☐ Watch		
Watch condition select	○□ Watch Menu		
Watch Menu type	●+● Utility menu		

Instructions

Tektronix

SDA 601 Serial Digital Analyzer

070-8912-00

First Printing July, 1994