

**TLA708EX Tektronix Logic Analyzer
Declassification and Security
Instructions**

Copyright © Tektronix. All rights reserved. Licensed software products are owned by Tektronix or its subsidiaries or suppliers, and are protected by national copyright laws and international treaty provisions.

Tektronix products are covered by U.S. and foreign patents, issued and pending. Information in this publication supersedes that in all previously published material. Specifications and price change privileges reserved.

TEKTRONIX and TEK are registered trademarks of Tektronix, Inc.

Contacting Tektronix

Tektronix, Inc.
14200 SW Karl Braun Drive
P.O. Box 500
Beaverton, OR 97077
USA

For product information, sales, service, and technical support:

- In North America, call 1-800-833-9200.
- Worldwide, visit www.tektronix.com to find contacts in your area.



Date: April 3, 2006

Subject: Memory Erasure & Memory Parts in TLA708EX.

MEMORY ERASURE PROCEDURE

- Turn the power off for at least 20 seconds to clear volatile memory.

MEMORY PARTS

Teklink Hub Board P/N: 671-5923-00

Part Number	Reference designator	Description	Use
156-8978-00	U500 U502	IC, Memory; CMOS, SDRAM; 4M X 16Bit X 4	SDRAM: Stores the instrument code in volatile memory.
156-9307-00	U501	IC, Memory; CMOS, Flash; 4M X 8	Flash: Stores the instrument code and MAC address in non-volatile memory.

If you have any questions, contact the Tektronix Technical Support Center at 1-800-833-9200*3.