

650-4644-00 Removable Hard Disk Drive Assembly for AWG710B Option11 User guide

071-1546-00



071154600

Copyright Notices

Copyright © Tektronix, Inc. All rights reserved.

Safety Summary

Only qualified personnel should perform service procedures.

To Avoid Fire or Personal Injury

Do Not Operate Without Covers.

Do not operate this product with covers or panels removed.

Avoid Exposed Circuitry.

Do not touch exposed connections and components when power is present.

Do Not Operate With Suspected Failures.

If you suspect there is damage to this product, have it inspected by qualified service personnel.

Do Not Operate In Wet/Damp Conditions.

Do Not Operate In An Explosive Atmosphere.

Keep Product Surfaces Clean and Dry.

Provide Proper Ventilation.

Refer to the manual's installation instructions for details on installing the product so it has proper ventilation.

Product Overview

Tektronix Removable Hard Disk Drive Assembly 650-4644-00 is designed for exclusive use for the AWG710B option 11 Arbitrary Waveform Generator.

Preparation for Use

- Power off the AWG710B when you remove or insert a disk assembly.
- The AWG710B does not start up without a disk assembly.
- Use only the disk assembly and drive specified for this product.
- Do not attempt to substitute any other Tektronix removable hard disk drive assembly that is not specified for the AWG710B option 11.

NOTE. Refer to the *AWG710B Arbitrary Waveform Generator User manual* for more information on the AWG710B.


Installation Instructions



CAUTION. Before you remove or insert a disk assembly, make sure that the instrument is powered off.

Remove a removable hard disk assembly


1. To release a removable hard disk assembly, push the release button then pull and extend the eject knobs to the outside.

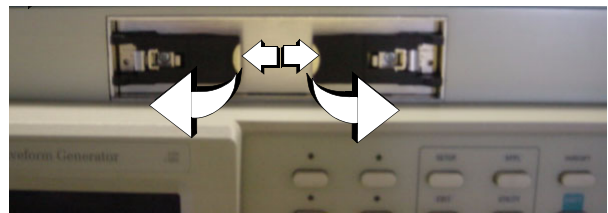

2. Holding the eject knobs, pull out a removable hard disk assembly calmly.

Insert a removable hard disk assembly

1. Check that the eject knobs are released.
2. Insert a removable hard disk assembly firmly according to the guide of a removable hard disk assembly bay.
3. Push the eject knobs to lock a removable hard disk assembly.

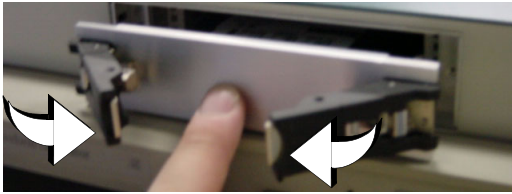

Storage a removable hard disk assembly

A hard disk drive is extremely susceptible to static-discharge damage, shock, dust and so on. When you keep a removable hard disk assembly simple substance, please put it into an anti-static plastic bag to prevent it from those damages.

WARRANTY SUMMARY

Tektronix warrants that the products that it manufactures and sells will be free from defects in materials and workmanship for a period of one (1) year from the date of shipment. If a product proves defective within the respective period, Tektronix will provide repair or replacement as described in the complete warranty statement.

To arrange for service or obtain a copy of the complete warranty statement, please contact your nearest Tektronix sales and service office.

EXCEPT AS PROVIDED IN THIS SUMMARY OR THE APPLICABLE WARRANTY STATEMENT, TEKTRONIX MAKES NO WARRANTY OF ANY KIND, EXPRESS OR IMPLIED, INCLUDING WITHOUT LIMITATION THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. IN NO EVENT SHALL TEKTRONIX BE LIABLE FOR INDIRECT, SPECIAL OR CONSEQUENTIAL DAMAGES.