



SPG700
Multiformat Reference Sync Generator
Release Notes

This document supports Firmware Version 3.2.

www.tek.com



077-1231-05

Copyright © Tektronix. All rights reserved. Licensed software products are owned by Tektronix or its subsidiaries or suppliers, and are protected by national copyright laws and international treaty provisions.

Tektronix products are covered by U.S. and foreign patents, issued and pending. Information in this publication supersedes that in all previously published material. Specifications and price change privileges reserved.

TEKTRONIX and TEK are registered trademarks of Tektronix, Inc.

Contacting Tektronix

Tektronix, Inc.
14150 SW Karl Braun Drive
P.O. Box 500
Beaverton, OR 97077
USA

For product information, sales, service, and technical support:

- In North America, call 1-800-833-9200.
- Worldwide, visit www.tek.com to find contacts in your area.

Release notes

This document describes new features, improvements, and limitations of Firmware Version 3.2 for the SPG700 Multiformat Reference Sync Generator.

New features

Event Log update

The Event Log was added in Version 3.0 and has been expanded in Version 3.2 to include Web UI support. For simplicity, the expanded log is shown here in its entirety. The event log captures 1000 events to help troubleshoot issues in a plant. Each log event shows the UTC time at which the event happened. Some event types display additional information about the event. There are three ways to view the log entries when using the Event Log:

EVENT LOG BY TYPE. Allows you to see all the log entries by the type of event. In each type, the log entries are listed by time. Use the up (▲) and down (▼) arrow buttons to view the different types of events. Use the left (◀) and right (▶) arrow buttons to view the later entries.

EVENT LOG BY TIME. Lists all the log entries in the order they occurred. The list starts with the oldest entry. Push the right arrow to get to later entries. Use the left (◀) arrow button to see the earlier entries and the right (▶) arrow button to view the later entries.

LAST EVENT BY TYPE. Displays the last entry of each type of event. Use the up (▲) and down (▼) arrow buttons to view the different types of events. The last entry of each type will be kept even if other types of events have filled the log.

The different types of logged events are listed below in the order in which they appear in the log:

- **Reference near loss of lock.** Indicates if the lock system was near the pull range limit (typically about ± 8 ppm).
- **Reference loss of lock.** Indicates that the instrument was unable to lock to the selected reference.
- **GPS missing.** Indicates that GPS was enabled and no GPS satellites were detected.
- **Fan fault.** Shows if any of the fans stalled or were running slow.
- **Temperature fault.** Indicates that the temperature sensors were detecting a temperature that was above or below the allowed limits.
- **Diagnostic error.** Shows if any of the diagnostics failed. This includes monitors on the power supplies, fans, temperature, and various phase locked loops. This log entry corresponds to the fault light on the front panel.

- **LTC/VITC missing.** Indicates that the selected time input of LTC or VITC was not present.
- **LTC not SMPTE.** Indicates that LTC was not timed to the reference within the limits defined by SMPTE ST 12.
- **Genlock input missing.** Indicates if Analog sync reference loop through input was selected and not present.
- **GPS/PTP FOM.** Indicates that the Figure of Merit dropped below the user configured threshold.
- **Alarm time.** Logs the time that the user configured alarm clock was triggered .
- **Power supply 1 fault.** Indicates that power supply 1 was not working or did not have AC power applied.
- **Power Supply 2 fault.** Indicates that power supply 2 was not working or did not have AC power applied.
- **Power supply 1 TWH.** Shows if the supply has logged more than 131,000 temperature-weighted hours of use. This indicates the supply is near the end of its design life and should be replaced.
- **Power supply 2 TWH.** Shows if the supply has logged more than 131,000 temperature-weighted hours of use. This indicates the supply is near the end of its design life and should be replaced.
- **PS switch.** Indicates if the instrument switched from one power supply to another.
- **Instrument reboot.** Records the time of each start up.
- **MTOD change.** Logs the time of any change to the master time of the instrument.
- **DST change.** Logs the time of any Daylight Saving Time change.
- **Frame 1, 2, 3 change.** Indicates that the internal frame pulse phase was adjusted. These adjustments may cause disruptions in the output signals. Adjustments are normal when initially locking to a reference or aligning outputs to an epoch. The additional value on the log entry indicates the number of clock cycles by which the frame pulse was adjusted.
- **Leap second change.** Indicates that a leap second has been detected and applied. The value indicates the leap second offset received from the GPS or PTP input.
- **Reference source change.** Indicates the new selected reference any time the reference source is changed. The values are: 0 is Internal, 1 is GPS, 2 is NTSC BURST, 3 is NTSC BURST 10 Field ID, 4 is PAL BURST, 5 is TRI LEVEL, 6 is CW, and 7 is PTP.

- **Reference locked.** Indicates the time at which the reference is locked. This is useful when used with the **Reference loss of lock** events to determine how long a system was unlocked.
- **Wait for user approval.** Indicates the time at which the system started waiting for a user to allow the system to lock.

NOTE. *The SPG700 does not support PTP or GPS. Any event log entries related to PTP or GPS will show in the menu, but will not be used.*

Option to require user approval for Locking Reference

In some cases, locking to a reference can cause a disruption or “shock” to the sync signals. To prevent this disruption, a new mode has been added whereby the system will wait for a user to allow the system to lock or re-lock to the reference. This mode is supported when locking to NTSC, PAL, Tri-level and CW signals.

To access this function, press the **REF** button, then press the down arrow multiple times to reach the **REFERENCE : GL LOCK ACTION MODE** menu. Press the left or right arrow to select either **Automatic** or **Wait for user approval**. In **Automatic** mode, the system will lock as soon as the conditions allow. This is equivalent to the operation in previous versions of code. In the **Wait for user approval** mode, the system will not lock until the user allows it. While waiting for the user to approve a lock, the **EXT** indicator on the front panel will be red, and the lock status readout will indicate **Unlocked - Waiting for user approval**.

To approve the system to lock, press the **REF** button, then press the down arrow multiple times to reach the **REFERENCE: GL MANUAL LOCK APPROVAL** menu. Follow the instructions, then press **ENTER** to approve the lock. The approval will be active for two seconds to allow the lock to occur. If the system is not able to lock, it will revert to waiting for the lock approval state. The **Manual Lock** feature is supported by the Web UI.

CW Frame Reset select menu

When the reference mode is set to **CW**, the genlock timing will only affect one of the frames. Use this menu to select which frame rate will be adjusted by the genlock timing controls. Each output signal frame rate is related to one of the three internal frame rates as indicated in the following menu selections:

- 2.997Hz : NTSC, 59.94. 23.98 Hz group
- 6.25Hz : PAL and 50Hz group
- 3.000Hz : 60 and 24 Hz group

To access this menu while referenced to CW, press **REF** button, then press the down arrow multiple times to reach the **REFERENCE : FRAME MENU (CW)** menu. Use the left and right arrow to select the desired frame rate.

- New HDR signals** Two new color bar type signals have been added to the SDI signal list. These are called BT2111-0 HLG Narrow and BT2111-0 PQ Narrow. These provide levels to test and design HDR systems and devices.
- Other HDR signals may be available. Please contact Tektronix Customer Service for details.

Fixed firmware limitations

The following limitations are fixed in this firmware version:

- Network Mask limitation** In previous versions, the Control port had some limitations on the netmask values for addresses in the 192.168.x.x range. Version 3.2 removes the special limits for netmasks when using those addresses.
- Web UI Read Only mode allowing changes** In previous versions, some parameters could be changed from the Web UI while it was in read-only mode. This has been fixed. Read only mode will not allow any changes.
- Web UI - Unable to set Time Source to Program Time for Black 1, 2, 3** Previously, this action did not work from the Web UI. This has been fixed.

General limitations

This firmware release has general limitations, which are outlined below. Please check the Tektronix Web site (www.tek.com/downloads) for any firmware updates to the SPG700 generator.

- Firmware upgrades**
- When the SPG700 Firmware is upgraded (using a USB drive or a network connection), all files created or installed by the user are deleted. The deleted files include presets, signal files, frame picture files, logo files, sequence files, and for Option SDI, can also include text and font files. The standard set of factory installed signal files, logo files, and Option SDI font files are restored when the firmware is upgraded.
- To prevent the loss of your user created files, use the **Backup all User Data to USB** function from the **SYSTEM** menu to save your user files before you upgrade the firmware. After the upgrade, use the **Restore all User Data From USB** function from the **SYSTEM** menu to restore your user created files.

- If you have loaded the SPG700 memory with a large number of test signals or frame picture files, you may not be able to upgrade the instrument firmware because the memory is too full. If you receive a memory error while attempting to upgrade the firmware, you need to delete some of the test signal or frame picture files and then perform the upgrade.

Clear the cache on the browser after an update to the Instrument code. This is necessary to get the new features on the Web UI.

Network configuration using Manual mode

A network connectivity problem may occur when using Manual mode to configure the instrument IP address or subnet mask settings and the instrument is communicating across network boundaries. The problem does not occur when using DHCP mode to configure the network settings.

If your instrument is configured for Manual mode, use the following steps to work around this problem:

1. Configure the instrument IP address or subnet mask settings using Manual mode.
2. After configuring the IP address or subnet mask, perform one of the following:
 - Change the network gateway address to a valid value.
 - If the network gateway address is already correct, toggle the gateway address. For example, change the gateway address to some other (incorrect) address, apply the change, and then change the gateway address back to the correct value.

Alert messages

If there is an active alert condition (e.g. reference input missing) while the **STATUS : ALERT** menu is displayed, the alert message(s) will not automatically change if the alert condition is cleared. To view any changes to the alert messages, you must change to another menu and then return to the **STATUS : ALERT** menu.

Resetting an output signal

A signal output interruption or synchronization shock may occur when the instrument rereads or resets signal data, such as format changing, preset recall, or signal-button assignment.

Incorrect CW reference signal

If an NTSC or PAL signal is connected to the **REF** input when the reference source is set to **CW**, the video timing of all SPG700 outputs will rattle every 1–2 seconds. To resolve this problem, use the **REFERENCE : SOURCE** menu to select the signal type that matches the reference input signal.

- Web UI / Remote control** Some performance issues have been observed when the SPG700 Web Interface is used with Internet Explorer 8. The use of newer browsers is recommended.
- Clear the cache on the browser after an update to the Instrument code. This is necessary to get the new features on the Web UI.
- In some instances, the Web UI will not recover well from a power cycle on the instrument. If this occurs, close the Web UI windows, cycle the power on the SPG, then clear the cache before re-starting the Web UI.
- Time of day changes for timecode outputs** When the time of day changes, such as when scheduled daylight savings adjustments are made or when the internal time is set from the front panel, there can be a delay before that change is reflected on timecode outputs.
- This delay may be a small number of frames (fraction of a second) when all timecode output formats are based on the same clock rate (for example, NTSC black burst and 1080i 59.94 HD tri-level on black outputs in addition to 30 fps drop-frame on LTC outputs), or up to several seconds when timecode formats based on different clock rates are used (for example, 29.97 fps and 24 fps on different outputs).
- Daylight Savings Time (DST) scheduler system** The DST scheduler system applies the DST offset even if the Time of Day (TOD) source is set to **VITC Input** or **LTC Input** and the SMPTE309 mode is set to **Ignore** or **Use as Input**. In these cases, the offset is applied whether or not a valid **VITC** or **LTC Input** signal is available. For proper DST scheduling, you need to ensure that the instrument has valid time information and manually enter the correct time of day if the system is not synchronized to an accurate time of day source.
- The manual Time of Day setting is not automatically reapplied when the instrument power is cycled. If the instrument powers up in with the Time of Day source set to **Internal** mode, the time of day will be acquired from the internal real-time clock in the instrument. Check the system time of day and adjust as needed to ensure that it is correct before the next transition of the DST scheduler when the Time of Day source is set to **Internal** mode.
- Option SDI** **SDI equalizer test signal.** Per SMPTE RP198 for HD-SDI, a polarity change word is used to ensure equal probabilities of the DC bias for the equalizer test pattern. However, some SDI formats still exhibit an unequal bias. Enabling a dynamic bit stream in the output signal, such as embedded audio or timecode data, will result in both DC levels appearing in the output signal.
- Test signal files.** The Option SDI signals use file-based test signal definitions. If you modify a signal file from the factory version, unpredictable results may occur. To recover from this situation, reload the factory version of the signal file from the Tektronix Web site (www.tek.com/downloads).

Multi-language support. Languages that require combined glyphs in order to be represented may not be correctly rendered in the Text ID display on SDI signals.

Multiburst signal motion. Do not set a Multiburst signal in motion on SDI signals. Otherwise, a corrupted signal will be generated.

Overlay and zone plate circles not round. For SD 525 and 625 signal formats, the overlay and zone plate circles are not perfectly round.

Bitmap files for logo overlays. When you create bitmap files for logo overlays, filter the sharp edges within the logo image before you download the bitmap file to the instrument. The SPG700 applies a filter to the left and right edges of the bitmap image to reduce high-frequency ringing on the signal waveform. However, this filter is not applied within the span of the image.