



**MSO4000 and DPO4000 Series
Digital Phosphor Oscilloscopes
Programmer Manual**

Revision A
www.tek.com

077-0248-01

Copyright © Tektronix. All rights reserved. Licensed software products are owned by Tektronix or its subsidiaries or suppliers, and are protected by national copyright laws and international treaty provisions.

Tektronix products are covered by U.S. and foreign patents, issued and pending. Information in this publication supersedes that in all previously published material. Specifications and price change privileges reserved.

TEKTRONIX and TEK are registered trademarks of Tektronix, Inc.

Contacting Tektronix

Tektronix, Inc.
14150 SW Karl Braun Drive
P.O. Box 500
Beaverton, OR 97077
USA

For product information, sales, service, and technical support:

- In North America, call 1-800-833-9200.
- Worldwide, visit www.tek.com to find contacts in your area.

Table of Contents

Getting Started	1-1
Setting Up Remote Communications	1-1
Command Syntax	2-1
Command and Query Structure	2-1
Clearing the oscilloscope	2-3
Command Entry	2-3
Constructed Mnemonics	2-5
Argument Types	2-7
Command Groups	2-11
Acquisition Command Group	2-11
Alias Command Group	2-12
Bus Command Group	2-13
Calibration and Diagnostic Command Group	2-17
Cursor Command Group	2-17
Display Command Group	2-19
Ethernet Command Group	2-20
File System Command Group	2-21
Hard Copy Command Group	2-22
Histogram Command Group	2-24
Horizontal Command Group	2-24
Mark Command Group	2-25
Math Command Group	2-26
Measurement Command Group	2-27
Miscellaneous Command Group	2-30
PictBridge Command Group	2-32
Power Command Group	2-32
Save and Recall Command Group	2-40
Search Command Group	2-41
Status and Error Command Group	2-48
Trigger Command Group	2-49
Vertical Command Group	2-60
Waveform Transfer Command Group	2-63
Zoom Command Group	2-68
Commands Listed in Alphabetical Order	2-71
Status and Events	3-1
Registers	3-1
Queues	3-4
Event Handling Sequence	3-5
Synchronization Methods	3-7

Appendix A: Character Set A-1

Appendix B: Reserved Words B-1

Appendix C: Factory Defaults C-1

 Default Setup C-1

Appendix D: Programming Example..... D-1

Index

List of Figures

Figure 3-1: The Standard Event Status Register (SESR)	3-1
Figure 3-2: The Status Byte Register (SBR)	3-2
Figure 3-3: The Device Event Status Enable Register (DESER)	3-3
Figure 3-4: The Event Status Enable Register (ESER)	3-3
Figure 3-5: The Service Request Enable Register (SRER)	3-4
Figure 3-6: Status and Event Handling Process.....	3-6
Figure 3-7: Command Processing Without Using Synchronization	3-8
Figure 3-8: Processing Sequence With Synchronization.....	3-8

List of Tables

Table 1-1: USB Device Parameters	1-2
Table 2-1: Symbols for Backus-Naur Form	2-1
Table 2-2: Command Message Elements	2-2
Table 2-3: Comparison of Header Off and Header On Responses	2-3
Table 2-4: End of Message Terminator	2-5
Table 2-5: Channel Mnemonics	2-6
Table 2-6: Cursor Mnemonics	2-6
Table 2-7: Math Specifier Mnemonics	2-6
Table 2-8: Measurement Specifier Mnemonics	2-6
Table 2-9: Reference Waveform Mnemonics	2-6
Table 2-10: Numeric Arguments	2-7
Table 2-11: Quoted String Argument	2-7
Table 2-12: Block Argument	2-8
Table 2-13: Acquisition Commands	2-11
Table 2-14: Alias Commands	2-12
Table 2-15: Bus Commands	2-13
Table 2-16: Calibration and Diagnostic Commands	2-17
Table 2-17: Cursor Commands	2-18
Table 2-18: Display Commands	2-20
Table 2-19: Ethernet Commands	2-20
Table 2-20: File System Commands	2-22
Table 2-21: Hard Copy Commands	2-22
Table 2-22: Histogram Commands	2-24
Table 2-23: Horizontal Commands	2-24
Table 2-24: Mark Commands	2-25
Table 2-25: Math Commands	2-26
Table 2-26: Measurement Commands	2-27
Table 2-27: Miscellaneous Commands	2-30
Table 2-28: PictBridge Commands	2-32
Table 2-29: Power Commands	2-32
Table 2-30: Save and Recall Commands	2-40
Table 2-31: Status and Error Commands	2-48
Table 2-32: Trigger Commands	2-49
Table 2-33: Vertical Commands	2-60
Table 2-34: Binary data ranges	2-64
Table 2-35: Waveform Transfer Commands	2-66
Table 2-36: Zoom Commands	2-68
Table 2-37: Supported display formats	2-95

Table 2-38: Channel Offset Range	2-126
Table 2-39: DATA and WFMOutpre Parameter Settings	2-153
Table 2-40: FPanel:PRESS arguments	2-184
Table 2-41: FPanel:TURN arguments	2-185
Table 2-42: Advanced Math expression elements	2-210
Table 2-43: Available HDTV formats	2-489
Table 2-44: Video Line Numbering Ranges	2-491
Table 2-45: Waveform Suffixes	2-524
Table 3-1: SESR Bit Functions	3-2
Table 3-2: SBR Bit Functions	3-2
Table 3-3: Oscilloscope operations that can generate OPC	3-7
Table 3-4: No Event Messages	3-12
Table 3-5: Command Error Messages (CME Bit 5)	3-13
Table 3-6: Execution Error Messages (EXE Bit 4)	3-13
Table 3-7: Device Error Messages (DDE Bit 3)	3-16
Table 3-8: System Event Messages	3-16
Table 3-9: Execution Warning Messages (EXE Bit 4)	3-17
Table 3-10: Execution Warning Messages (EXE Bit 4)	3-17
Table 3-11: Internal Warning Messages	3-17
Table C-1: Default values	C-1

Getting Started


This manual explains the use of commands for remotely controlling your oscilloscope. With this information, you can write computer programs to perform functions, such as setting the front-panel controls, taking measurements, performing statistical calculations, and exporting data for use in other programs.

Setting Up Remote Communications

You can remotely communicate between your oscilloscope and PC via the Ethernet, USB, and, GPIB using the TEK-USB-488 Adapter.

Ethernet

If you are using Ethernet, start by connecting an appropriate Ethernet cable to the Ethernet port (RJ-45 connector) on the rear panel of your oscilloscope. This connects the oscilloscope to a 10/100 Base-T local area network.

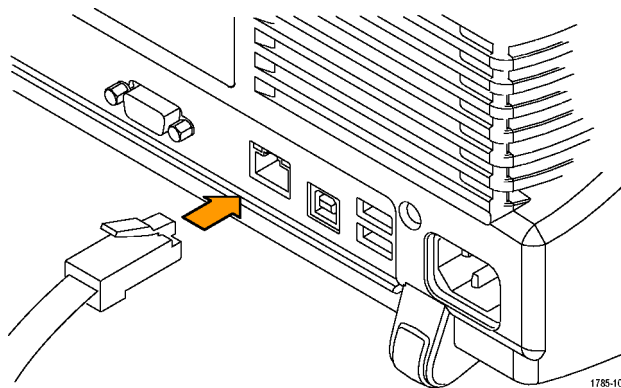


To change the Ethernet settings on your oscilloscope, do the following:

1. On the front panel, push **Utility**.
2. Push **Utility Page**.
3. Select **I/O** with the Multipurpose knob.
4. Push **Ethernet Network Settings**.
5. On the side-bezel menu, if you are on a DHCP Ethernet network and using a through cable, set DHCP/BOOTP to **On**.
6. If you are using a cross-over cable, set DHCP/BOOTP to **Off**, and set a hard coded TCP/IP address.

USB

If you are using USB, start by connecting an appropriate USB cable to the USB 2.0 high-speed device port on the rear panel of your oscilloscope.

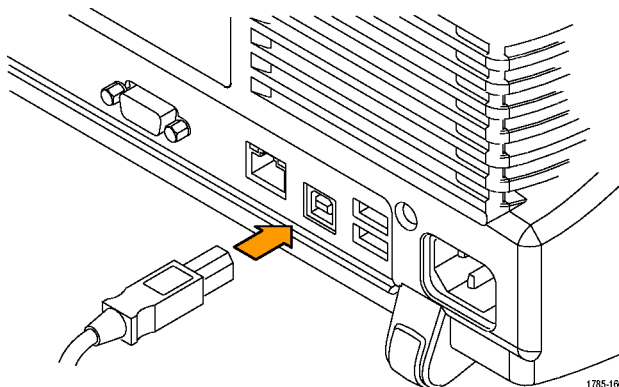

With USB, the system automatically configures itself. To verify that the USB is enabled:

1. On the front panel, push **Utility**.
2. Push **Utility Page**.
3. Select **I/O** with the Multipurpose knob.
4. Push **USB**, and verify that USB is enabled.
5. If USB is disabled, push **Connect to computer** on the side-bezel menu.

After connection, the host, with appropriate software, can list the oscilloscope as a USB device with the following parameters. (See Table 1-1.)

Table 1-1: USB Device Parameters

Parameter	Value
Manufacturer ID	0x0699 (decimal 1689)
Product ID	0x0401 (decimal 1025)
Serial number	Serial number
Manufacturer description	"Tektronix"
Interface description	"USBTMC-USB488"


GPIB

To use GPIB, start by connecting an appropriate USB cable to the USB 2.0 high speed device port on the rear panel of your oscilloscope. Connect the other end to the TEK-USB-488 Adapter host port. Then connect a GPIB cable from the TEK-USB-488 Adapter to your PC.

Supply power to the Adapter in either of these two ways:

1. Use the optional 5 V_{DC} power adapter connected to the 5 V_{DC} power input on the Adapter.
2. Use an appropriate USB cable connected to a powered USB host port on your PC and the Device port on the TEK-USB-488 Adapter.

The oscilloscope has a USB 2.0 High speed device port to control the oscilloscope through USBTMC or GPIB with a TEK-USB-488 Adapter. The USBTMC protocol allows USB devices to communicate using IEEE488 style messages. This lets you run your GPIB software applications on USB hardware.

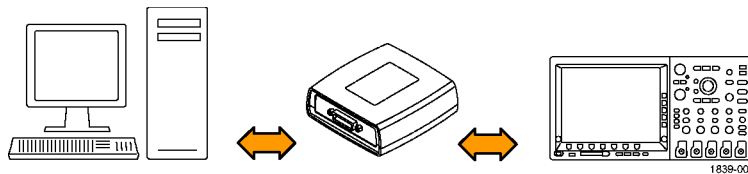

Before setting up the oscilloscope for remote communication using the electronic (physical) GPIB interface, you should familiarize yourself with the following GPIB requirements:

- A unique device address must be assigned to each device on the bus. No two devices can share the same device address.
- No than 15 devices can be connected to any one line.
- One device should be connected for every 6 feet (2 meters) of cable used.
- No than 65 feet (20 meters) of cable should be used to connect devices to a bus.
- At least two-thirds of the devices on the network should be powered on while using the network.
- Connect the devices on the network in a star or linear configuration. Do not use loop or parallel configurations.

To function correctly, your oscilloscope must have a unique device address. The default setting for the GPIB configuration is GPIB Address 1.

To change the GPIB address settings, do the following:

1. On the front panel, push **Utility**.
2. Push **Utility Page**.
3. Select **I/O** with the Multipurpose knob.
4. Push **GPIB**.
5. Enter the GPIB address on the side-bezel menu, using the multipurpose knob. This will set the GPIB address on an attached TEK-USB-488 Adapter

The oscilloscope is now set up for bidirectional communication with your controller.

Documentation

The following documents are available for download on the Manuals Finder Web site at www.tektronix.com:

MSO4000 and DPO4000 Series Digital Phosphor Oscilloscopes User Manual. Information about installing and operating the oscilloscope.

Getting Started with OpenChoice™ Solutions Manual. Options for getting data from your oscilloscope into any one of several available analysis tools.

MSO4000 and DPO4000 Series Digital Phosphor Oscilloscopes Technical Reference. Oscilloscope specifications and a performance verification procedure.

TekVISA Programmer Manual. Description of TekVISA, the Tektronix implementation of the VISA Application Programming Interface (API). TekVISA is industry-compliant software for writing interoperable oscilloscope drivers in a variety of Application Development Environments (ADEs).

Command Syntax

You can control the operations and functions of the oscilloscope through the Ethernet port or the USB 2.0 device port using commands and queries. The related topics listed below describe the syntax of these commands and queries. The topics also describe the conventions that the oscilloscope uses to process them. See the *Command Groups* topic in the table of contents for a listing of the commands by command group, or use the index to locate a specific command.

Backus-Naur Form Notation

This documentation describes the commands and queries using Backus-Naur Form (BNF) notation. Refer to the following table for the symbols that are used.

Table 2-1: Symbols for Backus-Naur Form

Symbol	Meaning
< >	Defined element
=	Is defined as
	Exclusive OR
{ }	Group; one element is required
[]	Optional; can be omitted
. . .	Previous element(s) may be repeated
()	Comment

Command and Query Structure

Commands consist of set commands and query commands (usually called commands and queries). Commands modify oscilloscope settings or tell the oscilloscope to perform a specific action. Queries cause the oscilloscope to return data and status information.

Most commands have both a set form and a query form. The query form of the command differs from the set form by its question mark at the end. For example, the set command `ACQuire:MODE` has a query form `ACQuire:MODE?`. Not all commands have both a set and a query form. Some commands have set only and some have query only.

Messages

A command message is a command or query name followed by any information the oscilloscope needs to execute the command or query. Command messages may contain five element types, defined in the following table.

Table 2-2: Command Message Elements

Symbol	Meaning
<Header>	This is the basic command name. If the header ends with a question mark, the command is a query. The header may begin with a colon (:) character. If the command is concatenated with other commands, the beginning colon is required. Never use the beginning colon with command headers beginning with a star (*).
<Mnemonic>	This is a header subfunction. Some command headers have only one mnemonic. If a command header has multiple mnemonics, a colon (:) character always separates them from each other.
<Argument>	This is a quantity, quality, restriction, or limit associated with the header. Some commands have no arguments while others have multiple arguments. A <space> separates arguments from the header. A <comma> separates arguments from each other.
<Comma>	A single comma is used between arguments of multiple-argument commands. Optionally, there may be white space characters before and after the comma.
<Space>	A white space character is used between a command header and the related argument. Optionally, a white space may consist of multiple white space characters.

Commands Commands cause the oscilloscope to perform a specific function or change one of the settings. Commands have the structure:

```
[ : ] <Header> [ <Space> <Argument> [ <Comma> <Argument> ] . . . ]
```

A command header consists of one or more mnemonics arranged in a hierarchical or tree structure. The first mnemonic is the base or root of the tree and each subsequent mnemonic is a level or branch off the previous one. Commands at a higher level in the tree may affect those at a lower level. The leading colon (:) always returns you to the base of the command tree.

Queries Queries cause the oscilloscope to return status or setting information. Queries have the structure:


- `[<:><Header>`
- `[<:><Header>[<Space><Argument> [<Comma><Argument>]...]`

You can specify a query command at any level within the command tree unless otherwise noted. These branch queries return information about all the mnemonics below the specified branch or level.

Headers Use the **HEADER** command to control whether the oscilloscope returns headers as part of the query response. If header is on, the query response returns command headers, then formats itself as a valid set command. When header is off, the response includes only the values. This may make it easier to parse and extract the information from the response. The table below shows the difference in responses.

Table 2-3: Comparison of Header Off and Header On Responses

Query	Header Off	Header On
TIME?	14:30:00	:TIME "14:30:00"
ACQUIRE:NUMAVG?	100	:ACQUIRE:NUMAVG 100

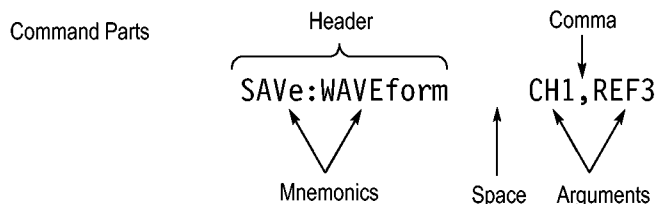

Clearing the oscilloscope

You can clear the Output Queue and reset the oscilloscope to accept a new command or query by using the selected Device Clear (DCL) function.

Command Entry

The following rules apply when entering commands:

- You can enter commands in upper or lower case.
- You can precede any command with white space characters. White space characters include any combination of the ASCII control characters 00 through 09 and 0B through 20 hexadecimal (0 through 9 and 11 through 32 decimal).
- The oscilloscope ignores commands consisting of any combination of white space characters and line feeds.

Abbreviating

You can abbreviate many oscilloscope commands. Each command in this documentation shows the minimum acceptable abbreviations in capitals. For example, you can enter the command `ACQuire:NUMAvg` simply as `ACQ:NUMA` or `acq:numa`.

Abbreviation rules may change over time as new oscilloscope models are introduced. Thus, for the most robust code, use the full spelling.

If you use the `HEADer` command to have command headers included as part of query responses, you can further control whether the returned headers are abbreviated or are full-length with the `VERBose` command.

Concatenating

You can concatenate any combination of set commands and queries using a semicolon (;). The oscilloscope executes concatenated commands in the order received.

When concatenating commands and queries, you must follow these rules:

1. Separate completely different headers by a semicolon and by the beginning colon on all commands except the first one. For example, the commands `TRIGger:MODE NORMa1` and `ACQuire:NUMAVg 8`, can be concatenated into the following single command:

```
TRIGger:MODE NORMa1;:ACQuire:NUMAVg 8
```

2. If concatenated commands have headers that differ by only the last mnemonic, you can abbreviate the second command and eliminate the beginning colon. For example, you can concatenate the commands `ACQuire:MODE ENVe1ope` and `ACQuire:NUMAVg 8` into a single command:

```
ACQuire:MODE ENVe1ope; NUMAVg 8
```

The longer version works equally well:

```
ACQuire:MODE ENVe1ope;:ACQuire:NUMAVg 8
```

3. Never precede a star (*) command with a colon:

```
ACQuire:STATE 1;*OPC
```

Any commands that follow will be processed as if the star command was not there so the commands, `ACQuire:MODE ENVe1ope;*OPC;NUMAVg 8` will set the acquisition mode to envelope and set the number of acquisitions for averaging to 8.

4. When you concatenate queries, the responses to all the queries are concatenated into a single response message. For example, if the display graticule is set to Full and the display style is set to dotsonly, the concatenated query `DISPlay:GRAticule?;STYle:DOTsonly?` will return the following.

If the header is on:

```
DISPLAY:GRATICULE FULL;:DISPLAY:STYLE:DOTSONLY 1
```

If the header is off:

```
FULL;1
```

5. Set commands and queries may be concatenated in the same message. For example,

```
ACQuire:MODE SAMple;NUMAVg?;STATE?
```

is a valid message that sets the acquisition mode to sample. The message then queries the number of acquisitions for averaging and the acquisition state. Concatenated commands and queries are executed in the order received.

Here are some invalid concatenations:

```
DISPlay:STYLE:NORMAl;ACQuire:NUMAVg 8 (no colon before ACQuire)
```

```
DISPlay:GRAticule FULL;;DOTSONLY OFF (extra colon before DOTSONLY. You could use DISPlay:DOTsonly OFF instead)
```

```
DISPlay:GRAticule FULL;:*TRG (colon before a star (*) command)
```

```
MATH:HORizontal:SCALE 1.0e-1;HORizontal:POSITION 5.0e1
```

(levels of the mnemonics are different; either remove the second use of `HORizontal:` or place `:MATH` in front of `HORizontal:POSITION`)

Terminating

This documentation uses <EOM> (End of Message) to represent a message terminator.

Table 2-4: End of Message Terminator

Symbol	Meaning
<EOM>	Message terminator

The end-of-message terminator must be the END message (EOI asserted concurrently with the last data byte). The last data byte may be an ASCII line feed (LF) character.

This oscilloscope does not support ASCII LF only message termination. The oscilloscope always terminates outgoing messages with LF and EOI.

Constructed Mnemonics

Some header mnemonics specify one of a range of mnemonics. For example, a channel mnemonic can be CH1, CH2, CH3, or CH4. You use these mnemonics in the command just as you do any other mnemonic. For example, there is a CH1:POSITION command, and there is also a CH2:POSITION command. In the command descriptions, this list of choices is abbreviated as CH<x>.

Cursor Position Mnemonics

When cursors are displayed, commands may specify which cursor of the pair to use.

Table 2-5: Channel Mnemonics

Symbol	Meaning
CH<x>	A channel specifier; <x> is 1 through 4.

Table 2-6: Cursor Mnemonics

Symbol	Meaning
CURSOR<x>	A cursor selector; <x> is either 1 or 2.
POSITION<x>	A cursor selector; <x> is either 1 or 2.
HPOS<x>	A cursor selector; <x> is either 1 or 2.

Math Specifier Mnemonics

Commands can specify the mathematical waveform to use as a mnemonic in the header.

Table 2-7: Math Specifier Mnemonics

Symbol	Meaning
Math<x>	A math waveform specifier; <x> is 1.

Measurement Specifier Mnemonics

Commands can specify which measurement to set or query as a mnemonic in the header. Up to eight automated measurements may be displayed.

Table 2-8: Measurement Specifier Mnemonics

Symbol	Meaning
MEAS<x>	A measurement specifier; <x> is 1 through 4.

Channel Mnemonics

Commands specify the channel to use as a mnemonic in the header.

Reference Waveform Mnemonics

Commands can specify the reference waveform to use as a mnemonic in the header.

Table 2-9: Reference Waveform Mnemonics

Symbol	Meaning
REF<x>	A reference waveform specifier; <x> is 1, 2, 3, or 4 for 4-channel oscilloscopes and 1 or 2 for 2-channel oscilloscopes.

Argument Types

Commands use arguments such as enumeration, numeric, quoted string and block. Each of these arguments are listed in detail below.

Enumeration Enter these arguments as unquoted text words. Like key words, enumeration arguments follow the same convention where the portion indicated in uppercase is required and that in lowercase is optional.

For example: `SAVE:WAVEform:FILEFormat INTERNa1`

Numeric Many oscilloscope commands require numeric arguments. The syntax shows the format that the oscilloscope returns in response to a query. This is also the preferred format when sending the command to the oscilloscope though any of the formats will be accepted. This documentation represents these arguments as described below.

Table 2-10: Numeric Arguments

Symbol	Meaning
<NR1>	Signed integer value
<NR2>	Floating point value without an exponent
<NR3>	Floating point value with an exponent
<bin>	Digital data in binary format

Most numeric arguments will be automatically forced to a valid setting, by either rounding or truncating,, when an invalid number is input, unless otherwise noted in the command description.

Quoted String Some commands accept or return data in the form of a quoted string, which is simply a group of ASCII characters enclosed by a single quote (') or double quote ("). The following is an example of a quoted string: "This is a quoted string". This documentation represents these arguments as follows:

Table 2-11: Quoted String Argument

Symbol	Meaning
<QString>	Quoted string of ASCII text

A quoted string can include any character defined in the 7-bit ASCII character set. Follow these rules when you use quoted strings:

1. Use the same type of quote character to open and close the string. For example: "this is a valid string".
2. You can mix quotation marks within a string as long as you follow the previous rule. For example: "this is an 'acceptable' string".
3. You can include a quote character within a string by repeating the quote. For example: "here is a "" mark".
4. Strings can have upper or lower case characters.
5. If you use a GPIB network, you cannot terminate a quoted string with the END message before the closing delimiter.
6. A carriage return or line feed embedded in a quoted string does not terminate the string. The return is treated as another character in the string.
7. The maximum length of a quoted string returned from a query is 1000 characters.

Here are some invalid strings:


- "Invalid string argument" (quotes are not of the same type)
- "test<EOI>" (termination character is embedded in the string)

Block Several oscilloscope commands use a block argument form, as defined in the table below.

Table 2-12: Block Argument

Symbol	Meaning
<NZDig>	A nonzero digit character in the range of 1–9
<Dig>	A digit character, in the range of 0–9
<DChar>	A character with the hexadecimal equivalent of 00 through FF (0 through 255 decimal)
<Block>	A block of data bytes defined as: <Block> ::= {#<NZDig><Dig>[<Dig>...][<DChar>...] #0[<DChar>...]<terminator>}

<NZDig> specifies the number of <Dig> elements that follow. Taken together, the <NZDig> and <Dig> elements form a decimal integer that specifies how many <DChar> elements follow.

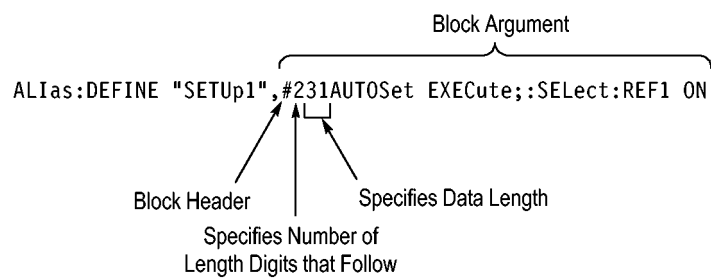

Command Groups

This manual lists the MSO4000 and DPO4000 Series IEEE488.2 commands in two ways. First, it presents them by functional groups. Then, it lists them alphabetically. The functional group list starts below. The alphabetical list provides detail on each command. (See page 2-71, *Commands Listed in Alphabetical Order*.)

Acquisition Command Group

Use the commands in the Acquisition Command Group to set up the modes and functions that control how the oscilloscope acquires signals input to the channels, and processes them into waveforms.

Using the commands in this group, you can do the following:

- Start and stop acquisitions.
- Control whether each waveform is simply acquired, averaged, or enveloped over successive acquisitions of that waveform.
- Set the controls or conditions that start and stop acquisitions.
- Control acquisition of channel waveforms.
- Set acquisition parameters.

Table 2-13: Acquisition Commands

Command	Description
ACQUIRE?	Returns acquisition parameters
ACQUIRE:MAGNIVU	Sets or returns the MagniVu feature
ACQUIRE:MAXSAMPLERATE?	Returns the maximum real-time sample rate
ACQUIRE:MODE	Sets or returns the acquisition mode
ACQUIRE:NUMACQ?	Returns number of acquisitions that have occurred
ACQUIRE:NUMAVG	Sets or returns the number of acquisitions for an averaged waveform
ACQUIRE:STATE	Starts or stops the acquisition system
ACQUIRE:STOPAFTER	Sets or returns whether the acquisition is continuous or single sequence

Alias Command Group

Use the Alias commands to define new commands as a sequence of standard commands. You may find this useful when repeatedly using the same commands to perform certain tasks like setting up measurements.

Aliases are similar to macros but do not include the capability to substitute parameters into alias bodies. The alias mechanism obeys the following rules:

- The alias name must consist of a valid IEEE488.2 message unit, which may not appear in a message preceded by a colon, comma, or a command or query program header.
- The alias name may not appear in a message followed by a colon, comma, or question mark.
- An alias name must be distinct from any keyword or keyword short form.
- An alias name cannot be redefined without first being deleted using one of the alias deletion functions.
- Alias names do not appear in response messages.

Table 2-14: Alias Commands

Command	Description
ALias	Sets or returns the alias state
ALias:CATalog?	Returns a list of the currently defined alias labels
ALias:DEFine	Assigns a sequence of program messages to an alias label
ALias:DELEte	Removes a specified alias
ALias:DELEte:ALL	Deletes all existing aliases
ALias:DELEte[:NAME]	Removes a specified alias
ALias[:STATE]	Sets or returns the alias state

Bus Command Group

Use the Bus commands when working with serial or parallel bus measurements.

- Install the DPOEMBD application module when working with I²C or SPI bus signals.
- Install the DPO4COMP module when working with RS-232, RS-422, RS-485, or UART bus signals.
- Install the DPO4AUDIO module when working with I²S, Left Justified (LJ), Right Justified (RJ), or TDM bus signals.
- Install the DPO4AUTO or DPO4AUTOMAX module when working with CAN or LIN bus signals.
- Install the DPO4AUTOMAX module when working with FlexRay bus signals.

NOTE. LIN and FlexRay work on DPO4000s with serial numbers greater than C020000 and on all MSO4000s.

NOTE. The parallel bus commands work with MSO4000 Series oscilloscopes only.

NOTE. The Search Command Group and the Trigger Command Group also contain bus-related commands.

Table 2-15: Bus Commands

Commands	Description
BUS?	Returns the parameters for each bus
BUS:B<x>:AUDio:BITDelay	Sets or returns the number of delay bits for the AUDIO bus
BUS:B<x>:AUDio:BITOrder	Sets or returns the bit order for the AUDIO bus
BUS:B<x>:AUDio:CHANnel:SIZE	Sets or returns the number of bits per channel for the AUDIO bus
BUS:B<x>:AUDio:CLOCK:POLarity	Sets or returns the clock polarity for the AUDIO bus
BUS:B<x>:AUDio:CLOCK:SOURce	Sets or returns the clock source waveform for the AUDIO bus
BUS:B<x>:AUDio:DATA:POLarity	Sets or returns the data polarity for the AUDIO bus
BUS:B<x>:AUDio:DATA:SIZE	Sets or returns the number of bits per word for the AUDIO bus

Table 2-15: Bus Commands (cont.)

Commands	Description
BUS:B<x>:AUDio:DAta:SOUrce	Sets or returns the data source waveform for the AUDIO bus
BUS:B<x>:AUDio:DISplay:FORMat	Sets or returns the display format for the AUDIO bus
BUS:B<x>:AUDio:FRAME:SIZE	Sets or returns the number of channels in each frame for the AUDIO bus
BUS:B<x>:AUDio:FRAMESync:POLarity	Sets or returns the frame sync polarity for the AUDIO bus
BUS:B<x>:AUDio:FRAMESync:SOUrce	Sets or returns the frame sync source waveform for the AUDIO bus
BUS:B<x>:AUDio:TYPE	Sets or returns the audio format (type) for the AUDIO bus
BUS:B<x>:AUDio:WORDSel:POLarity	Sets or returns the word select polarity for the AUDIO bus
BUS:B<x>:AUDio:WORDSel:SOUrce	Sets or returns the word select source waveform for the AUDIO bus
BUS:B<x>:CAN:BITRate	Sets or returns the bit rate for the CAN bus
BUS:B<x>:CAN:PRObe	Sets or returns the probing method used to probe the CAN bus
BUS:B<x>:CAN:SAMPLEpoint	Sets or returns the sample point (in %) to sample during each bit period
BUS:B<x>:CAN:SOUrce	Sets or returns the CAN data source
BUS:B<x>:DISplay:FORMAT	Sets the display format for the numerical information in the specified bus waveform
BUS:B<x>:DISplay:TYPE	Sets the display type for the specified bus
BUS:B<x>:FLEXray:BITRate	Sets or returns the bit rate for FLEXRAY
BUS:B<x>:FLEXray:CHannel	Sets or returns the FLEXRAY ID format
BUS:B<x>:FLEXray:SIGnal	Sets or returns the FLEXRAY standard
BUS:B<x>:FLEXray:SOUrce	Sets or returns the FLEXRAY data source
BUS:B<x>:I2C:ADDRes:RWINClude	Sets and returns whether the read/write bit is included in the address
BUS:B<x>:I2C{ :CLOCK[:SCLK] } :SOUrce	Sets or returns the I2C SCLK source
BUS:B<x>:I2C{ :DATA[:SDATA] } :SOUrce	Sets or returns the I2C SDATA source
BUS:B<x>:LABel	Sets or returns the waveform label for the specified bus
BUS:B<x>:LIN:BITRate	Sets or returns the bit rate for LIN
BUS:B<x>:LIN:IDFormat	Sets or returns the LIN ID format
BUS:B<x>:LIN:POLARity	Sets or returns the LIN polarity
BUS:B<x>:LIN:SAMPLEpoint	Sets or returns the sample point (in %) at which to sample during each bit period

Table 2-15: Bus Commands (cont.)

Commands	Description
BUS:B<x>:LIN:SOUrce	Sets or returns the LIN data source
BUS:B<x>:LIN:STANDard	Sets or returns the LIN standard
BUS:B<x>:PARallel:BIT<x>:SOUrce	Sets or returns the Parallel bit source for the specified bus
BUS:B<x>:PARallel:CLOCK:EDGE	Sets or returns the Parallel clock edge for the specified bus
BUS:B<x>:PARallel:CLOCK:ISCLOCKed	Sets or returns the Parallel bus clock function for the specified bus
BUS:B<x>:PARallel:CLOCK:SOUrce	Sets or returns the Parallel clock source for the specified bus
BUS:B<x>:PARallel:WIDth	Sets or returns the width of the Parallel bus
BUS:B<x>:POSition	Sets or returns the position of the specified bus waveform
BUS:B<x>:RS232C:BITRate	Sets or returns the RS-232 bit rate for the specified bus
BUS:B<x>:RS232C:DATABits	Sets or returns the number of bits for the data frame
BUS:B<x>:RS232C:DELIMiter	Sets or returns the RS-232 delimiting value for a packet on the specified bus
BUS:B<x>:RS232C:DISplaymode	Sets or returns the display mode for the specified bus display and event table
BUS:B<x>:RS232C:PARity	Sets or returns parity for RS-232 data
BUS:B<x>:RS232C:POLarity	Sets or returns the RS-232C polarity for the specified bus
BUS:B<x>:RS232C:RX:SOUrce	Sets or returns the RS-232 RX source
BUS:B<x>:RS232C:TX:SOUrce	Sets or returns the RS-232 TX Source
BUS:B<x>:SPI:BITOrder	Sets or returns the bit order for the specified SPI bus
BUS:B<x>:SPI{:CLOCK}:SCLK}:POLARity	Sets or returns the SPI SCLK polarity
BUS:B<x>:SPI{:CLOCK}:SCLK}:SOUrce	Sets or returns the SPI SCLK source
BUS:B<x>:SPI:DATA{:IN}:MISO}:POLARity	Sets or returns the SPI MISO polarity
BUS:B<x>:SPI:DATA{:IN}:MISO}:SOUrce	Sets or returns the SPI MISO source
BUS:B<x>:SPI:DATA{:OUT}:MOSI}:POLARity	Sets or returns the SPI MOSI polarity
BUS:B<x>:SPI:DATA{:OUT}:MOSI}:SOUrce	Sets or returns the SPI MOSI source
BUS:B<x>:SPI:DATA:SIZE	Sets or returns the number of bits per word for the specified bus
BUS:B<x>:SPI:FRAMING	Sets or returns the SPI framing type
BUS:B<x>:SPI:IDLETime	Sets or returns the SPI bus idle time in seconds for the specified bus

Table 2-15: Bus Commands (cont.)

Commands	Description
BUS:B<x>:SPI{:SElect :SS}:POLARity	Sets or returns the SPI SS polarity
BUS:B<x>:SPI{:SElect :SS}:SOURce	Sets or returns the SPI SS source
BUS:B<x>:STATE	Turns the specified bus on and off
BUS:B<x>:TYPE	Sets or returns the specified bus type
BUS:B<x>:USB:BITRate	Sets or returns the USB bit rate
BUS:B<x>:USB:PRObe	Sets or returns the type of probes attached to the USB signal
BUS:B<x>:USB:SOURce:DIFFerential	Sets or returns the USB source channels when using a differential probe
BUS:B<x>:USB:SOURce:DMINus	Sets or returns the USB D- source channel
BUS:B<x>:USB:SOURce:DPLUS	Sets or returns the USB D+ source channel
BUS:LOWerthreshold:CH<x>	Sets or returns the lower threshold for each channel
BUS:THReshold:CH<x>	Sets or returns the threshold for a channel
BUS:THReshold:D<x>	Sets or returns the threshold for a digital channel
BUS:UPPerthreshold:CH<x>	Sets or returns the upper threshold for each channel

Calibration and Diagnostic Command Group

The Calibration and Diagnostic commands provide information about the current state of oscilloscope calibration. They also initiate internal signal path calibration (SPC) or execute diagnostic tests. Commands that are specific to factory calibration are not described in this manual. They are described in the Service manual, located on the DPO4000 Documentation CD-ROM in PDF format. You can also order a printed copy.

Table 2-16: Calibration and Diagnostic Commands

Command	Description
*CAL?	Instructs the oscilloscope to perform self-calibration and returns the oscilloscope self calibration status
CALibrate:FACTory:STATus?	Returns the factory calibration status value saved in nonvolatile memory
CALibrate:INTERNaL	Starts a signal path compensation
CALibrate:INTERNaL:START	Starts the internal signal path calibration
CALibrate:INTERNaL:STATus?	Returns the current status of the internal signal path calibration
CALibrate:RESuLts?	Returns the status of all calibration subsystems without performing an SPC operation
CALibrate:RESuLts:FACTory?	Returns the status of internal and factory calibration
CALibrate:RESuLts:SPC?	Returns the results of the last SPC operation
DIAg:LOOP:OPTion	Sets the self-test loop option
DIAg:LOOP:OPTion:NTIMes	Sets the self-test loop option to run N times
DIAg:LOOP:STOP	Stops the self-test at the end of the current loop
DIAg:RESUlt:FLAg?	Returns the pass/fail status from the last self-test sequence execution
DIAg:RESUlt:LOG?	Returns the internal results log from the last self-test sequence execution
DIAg:SELEct:<function>	Selects one of the available self-test areas
DIAg:STATE	Sets the oscilloscope operating state
DIAg:SELEct	Runs self tests on the specified system subsystem

Cursor Command Group

Use the commands in the Cursor Command Group to control the cursor display and readout. You can use these commands to control the setups for cursor 1 and cursor 2, such as cursor position.

You can also use the commands to select one of the following cursor functions:

- Off. Turns off the display of all cursors.
- Waveform Cursors. Consists of two cursors. Waveform cursors enable you to conveniently measure waveform amplitude and time.
- Screen Cursors. Consists of two pairs of independent horizontal and vertical cursors. You can use these cursors to indicate an arbitrary position within the waveform display area.

Table 2-17: Cursor Commands

Command	Description
CURSor?	Returns cursor settings
CURSor:DDT?	Returns the cursor $\Delta Y/\Delta T$ (dY/dT) readout
CURSor:FUNctioN	Sets or returns the cursor type
CURSor:HBArs?	Returns hbar cursor settings
CURSor:HBArs:DELta?	Returns hbars cursors vertical difference
CURSor:HBArs:POSITION<x>	Sets or returns the hbar cursor<x> vertical position
CURSor:HBArs:UNIts	Returns hbar cursor units
CURSor:HBArs:USE	Sets the horizontal bar cursor measurement scale, for use with ratio cursors
CURSor:MODe	Sets or returns whether cursors move in unison or separately
CURSor:VBArS?	Sets or returns the position of vertical bar cursors
CURSor:VBArS:ALTERNATE<x>?	Returns the alternate readout for the waveform (Vbar) cursors
CURSor:VBArS:DELta?	Returns the horizontal difference between vbar cursors
CURSor:VBArS:HPOS<x>?	Returns the vertical value of the specified vertical bar tick
CURSor:VBArS:POSITION<x>	Sets or returns the vbar cursor<x> horizontal position
CURSor:VBArS:UNIts	Sets or returns the horizontal units for vbar cursors
CURSor:VBArS:USE	Sets the vertical bar cursor measurement scale
CURSor:VBArS:VDELta?	Returns the vertical difference between the two vertical bar cursor ticks
CURSor:XY:POLar:RADIUS:DELta?	Returns the difference between the cursors X radius and the cursor Y radius

Table 2-17: Cursor Commands (cont.)

Command	Description
CURSor:XY:POLar:RADIUS:POSITION<x>?	Returns the polar radius of the specified cursor
CURSor:XY:POLar:RADIUS:UNIts?	Returns the polar radius units
CURSor:XY:POLar:THETA:DELta?	Returns the XY cursor polar coordinate delta
CURSor:XY:POLar:THETA:POSITION<x>?	Returns the cursor X or cursor Y polar coordinate
CURSor:XY:POLar:THETA:UNIts?	Returns the cursor polar coordinate units
CURSor:XY:PRODUCT:DELta?	Returns the difference between the cursors X position and cursor Y position
CURSor:XY:PRODUCT:POSITION<x>?	Returns the position of the X or Y cursor used to calculate the X × Y cursor measurement
CURSor:XY:PRODUCT:UNIts?	Returns the XY cursor product units
CURSor:XY:RATIO:DELta?	Returns the ratio of the difference between the cursor X position and cursor Y position
CURSor:XY:RATIO:POSITION<x>?	Returns the X or Y position for the specified cursor
CURSor:XY:RATIO:UNIts?	Returns the X and Y cursor units for the ratio measurement
CURSor:XY:READOUT	Sets or returns the XY cursor readout selection.
CURSor:XY:RECTangular:X:DELta?	Returns the cursor X delta value in rectangular coordinates
CURSor:XY:RECTangular:X:POSITION<x>	Sets or returns the cursor X rectangular coordinates
CURSor:XY:RECTangular:X:UNIts?	Returns the Cursor X rectangular units
CURSor:XY:RECTangular:Y:DELta?	Returns The cursor Y delta value in rectangular coordinates
CURSor:XY:RECTangular:Y:POSITION<x>>	Sets or returns the cursor Y rectangular coordinate
CURSor:XY:RECTangular:Y:UNIts?	Returns the cursor Y rectangular units

Display Command Group

Use the commands in the Display Command Group to change the graticule style, the display intensities, and to set the characteristics of the waveform display.

NOTE. *Your settings globally affect all displayed waveforms.*

Table 2-18: Display Commands

Command	Description
DISplay?	Returns current display settings
DISplay:CLOCK	Sets or returns the display of the date/time stamp
DISplay:DIGital:HEight	Sets or returns the number of available digital waveform position slots
DISplay:GRAticule	Sets or returns the type of graticule that is displayed
DISplay:FORMat	Sets or returns the display format
DISplay:INTENSITY?	Returns all display intensity settings
DISplay:INTENSITY:BACKLight	Sets or returns the backlight intensity for the display
DISplay:INTENSITY:GRAticule	Sets or returns the graticule intensity for the display
DISplay:INTENSITY:WAVEform	Sets or returns the intensity of the waveforms
DISplay:PERSistence	Sets or returns display persistence setting
DISplay:STYle:DOTsonly	Sets a dots-only display
MESSage	Sets or queries message box (screen annotation) parameters
MESSage:BOX	Sets or returns the coordinates of the message box
MESSage:CLEAR	Clears the contents of the message box.
MESSage:SHOW	Sets or returns the contents of the message box
MESSage:STATE	Controls the display of the message box

Ethernet Command Group

Use the commands in the Ethernet Command Group to set up the Ethernet remote interface.

Table 2-19: Ethernet Commands

Command	Description
ETHERnet:DHCPbootp	Sets or returns the network initialization search for a DHCP/BOOTP server
ETHERnet:DNS:IPADdress	Sets or returns the network Domain Name Server (Dns) IP address
ETHERnet:DOMAINname	Sets or returns the network domain name
ETHERnet:ENET:ADdress?	Returns the Ethernet address value assigned to the oscilloscope

Table 2-19: Ethernet Commands (cont.)

Command	Description
<code>ETHERnet:GATEWay:IPADdress</code>	Sets or returns the remote interface gateway IP address
<code>ETHERnet:HTTPPort</code>	Sets or returns the remote interface HTTP port value
<code>ETHERnet:IPADdress</code>	Sets or returns the IP address assigned to the oscilloscope
<code>ETHERnet:NAME</code>	Sets or returns the network name assigned to the oscilloscope
<code>ETHERnet:PASSWord</code>	Sets or returns the Ethernet access password
<code>ETHERnet:PING</code>	Causes the oscilloscope to ping the gateway IP address
<code>ETHERnet:PING:STATUS?</code>	Returns the results from pinging the gateway IP address
<code>ETHERnet:SUBNETMask</code>	Sets or returns the remote interface subnet mask value

File System Command Group

Use the commands in the File System Command Group to help you use CompactFlash and USB media. You can use the commands to do the following:

- List the contents of a directory
- Create and delete directories
- Create, read, rename, or delete a file
- Format media

When using these commands, keep the following points in mind:

- File arguments are always enclosed within double quotes:
"D:/MYDIR/TEK00001.SET"
- File names follow the non-case sensitive, MSDOS format:
[DRIVE:][\PATH\]filename
- Path separators may be either forward slashes (/) or back slashes (\)

NOTE. Using back slash as a path separator may produce some unexpected results, depending on how your application treats escaped characters. Many applications recognize the sequence of back slash followed by an alphabetic character as an escaped character; and, as such, interpret that alphabetic character as a control character. For example, the sequence "\n" may be interpreted as a newline character; "\t" may be interpreted as a tab character. To ensure that this interpretation does not occur, you can use double back slashes. For example, "D:\\testfile.txt".

Table 2-20: File System Commands

Command	Description
FILESystem?	Returns the file system state
FILESystem:CWD	Sets or returns the current working directory for FILESystem commands
FILESystem:DELEte	Deletes a named file or directory
FILESystem:DIR?	Returns a list of directory contents
FILESystem:FORMat	Formats a named drive
FILESystem:FREEspace?	Returns the number of bytes of free space on the current drive
FILESystem:LDIR?	Returns a semicolon separated list of every file and directory in a folder.
FILESystem:MKDir	Creates a new directory
FILESystem:READFile	Writes the contents of the specified file to the specified interface
FILESystem:REName	Assigns a new name to an existing file
FILESystem:RMDir	Deletes a named directory
FILESystem:WRITEFile	Writes the specified block data to the oscilloscope current working directory

Hard Copy Command Group

Use the commands in the Hard Copy Command Group to make hard copies. PictBridge commands belong to a separate group. (See page 2-32, *PictBridge Command Group*.)

Table 2-21: Hard Copy Commands

Command	Description
HARDCopy	Sends a copy of the screen display to the selected printer
HARDCopy:ACTIVeprinter	Sets or returns the currently active printer

Table 2-21: Hard Copy Commands (cont.)

Command	Description
HARDCopy:INKSaver	Changes hard copy output to print color traces and graticule on a white background
HARDCopy:LAYout	Sets or returns the page orientation for hard copy
HARDCopy:PREVIEW	Previews the current screen contents with the InkSaver palette applied
HARDCopy:PRINTer:ADD	Adds a network printer to the list of available printers
HARDCopy:PRINTer:DELeTe	Removes a network printer from the list of available printers
HARDCopy:PRINTer:LIST?	Returns the list of currently attached printers
HARDCopy:PRINTer:REName	Renames a network printer in the list of available printers

Histogram Command Group

Use the commands in the Histogram Command Group to set up a histogram for measurements.

Table 2-22: Histogram Commands

Command	Description
HIStogram?	Returns all histogram parameters
HIStogram:BOX	Sets or returns the histogram box coordinates
HIStogram:COUNT	Clears the histogram count and statistics
HIStogram:DATA?	Returns the histogram data
HIStogram:DISPlay	Sets or returns the scaling of the histogram display
HIStogram:END?	Returns the time of the last bin of the histogram
HIStogram:MODE	Sets or returns the type of the histogram, vertical or horizontal
HIStogram:SOURce	Sets or queries the source used to create the histogram
HIStogram:START?	Returns the time of the first bin of the histogram

Horizontal Command Group

Use the commands in the Horizontal Command Group to control the oscilloscope horizontal parameters.

Table 2-23: Horizontal Commands

Command	Description
HORizontal?	Returns settings for the horizontal commands
HORizontal:DElay:MODE	Sets or returns the horizontal delay mode
HORizontal:DElay:TIME	Sets or returns the horizontal delay time
HORizontal:DIGital:RECOrdlength:MAGnivu?	Returns the record length of the MagniVu digital acquisition
HORizontal:DIGital:RECOrdlength:MAIN?	Returns the record length of the main digital acquisition
HORizontal:DIGital:SAMPLERate:MAGnivu?	Returns the sample rate of the MagniVu digital acquisition
HORizontal:DIGital:SAMPLERate:MAIN?	Returns the sample rate of the main digital acquisition
HORizontal:POSition	Sets or returns the horizontal position, in percent, that is used when delay is off

Table 2-23: Horizontal Commands (cont.)

Command	Description
HORizontal:PREViewstate?	Returns the display system preview state
HORizontal:RECOrdlength	Sets or returns the record length
HORizontal:SAMPLERate	Sets or returns the sample rate
HORizontal:SCALE	Sets or returns the horizontal scale

Mark Command Group

Use the commands in the Mark Command Group to identify areas of the acquired waveform that warrant further investigation.

Table 2-24: Mark Commands

Command	Description
MARK	Move to the next or previous mark on the waveform or returns all learnable settings from the mark commands
MARK:CREATE	Creates a mark on a particular waveform or all waveforms in a column
MARK:DELEte	Deletes a mark on a particular waveform, all waveforms in a column, or all marks
MARK:FREE?	Returns how many marks are free to be used
MARK:SElected:END?	Returns the end of the selected mark, in terms of 0 to 100% of the waveform
MARK:SElected:FOCUS?	Returns the focus of the selected mark, in terms of 0 to 100% of the waveform
MARK:SElected:MARKSINCOLumn?	Returns how many marks are in the current zoom pixel column
MARK:SElected:OWNer?	Returns the owner of the selected mark
MARK:SElected:SOURCE?	Returns the source waveform of the selected mark
MARK:SElected:START?	Returns the start of the selected mark, in terms of 0 to 100% of the waveform
MARK:SElected:STATe?	Returns the on or off state of the selected mark
MARK:SElected:ZOOM:POSition?	Returns the position of the selected mark, in terms of 0 to 100% of the upper window
MARK:TOTal?	Returns how many marks are used

Math Command Group

Use the commands in the Math Command Group to create and define a math waveform. Use the available math functions to define your math waveform.

The math waveform you create depends on sources listed in the math expression. If you change these sources, the math waveform you previously defined will be affected.

Math expressions can be simple, containing no mathematical computation, such as CH1, which specifies that a waveform shows the signal source of Channel 1. Math expressions can also be complex, consisting of up to 128 characters and comprising many sources, functions, and operands.

When a live waveform is updated or a reference waveform is altered, math waveforms containing those waveforms as sources are also updated to reflect the changes. Remember that sources must exist, but do not need to be displayed, to be used in and to update math waveforms.

Table 2-25: Math Commands

Command	Description
MATH[1]?	Returns the definition of the math waveform
MATH[1]:DEFine	Sets or returns the current math function as a text string
MATH[1]:HORizontal:SCAle	Sets or returns the math horizontal display scale for FFT or for Dual Math waveforms
MATH[1]:HORizontal:UNIts	Returns the math waveform horizontal unit value
{MATH MATH1}:LABel	Sets or queries the waveform label for the math waveform
MATH[1]:SPECTral:MAG	Sets or returns the units of spectral magnification in the math string
MATH[1]:SPECTral:WINDow	Sets or returns the window function for math waveform spectral input data
MATH[1]:VERTical:POSition	Sets or returns the vertical position of the currently selected math type
MATH[1]:VERTical:SCAle	Sets or returns the vertical scale of the currently selected math type
MATH[1]:VERTical:UNIts	Returns the math waveform vertical units
MATH[1]:HORizontal:POSition	Sets or returns the math horizontal display position for FFT or (non-live) math reference waveforms
MATH[1]:TYPE	Sets or returns the math waveform mode type

Table 2-25: Math Commands (cont.)

Command	Description
MATHVAR?	Returns all numerical values used within math expressions
MATHVAR:VAR<x>	Sets or returns numerical values you can use within math expressions

Measurement Command Group

Use the commands in the Measurement Command Group to control the automated measurement system.

Up to four automated measurements can be displayed on the screen. In the commands, these measurement readouts are named MEAS<x>, where <x> is the measurement number.

In addition to the four displayed measurements, the measurement commands let you specify an additional measurement, IMMed. The immediate measurement has no front-panel equivalent. Immediate measurements are never displayed. Because they are computed only when needed, immediate measurements slow the waveform update rate less than displayed measurements.

Whether you use displayed or immediate measurements, use the VALue query to obtain measurement results.

Measurement commands can set and query measurement parameters. You can assign some parameters, such as waveform sources, differently for each measurement. Other parameters, such as reference levels, have only one value, which applies to all measurements.

Table 2-26: Measurement Commands

Command	Description
MEASUrement?	Returns all measurement parameters
MEASUrement:CLEARSNapshot	Removes the measurement snapshot display
MEASUrement:GATing	Sets or returns the measurement gating
MEASUrement:IMMed?	Returns all immediate measurement setup parameters
MEASUrement:IMMed:DElay?	Returns information about the immediate delay measurement
MEASUrement:IMMed:DElay:DIRection	Sets or returns the search direction to use for immediate delay measurements
MEASUrement:IMMed:DElay:EDGE<x>	Sets or returns the slope of the edge used for immediate delay “from” and “to” waveform measurements

Table 2-26: Measurement Commands (cont.)

Command	Description
MEASUrement:IMMed:SOUrce<x>	Sets or returns the “from” source for all single channel immediate measurements Sets or returns the source to measure “to” for two-channel measurements
MEASUrement:IMMed:TYPe	Sets or returns the type of the immediate measurement
MEASUrement:IMMed:UNIts?	Returns the units of the immediate measurement
MEASUrement:IMMed:VALue?	Returns the value of the immediate measurement
MEASUrement:INDICators?	Returns all measurement indicator parameters
MEASUrement:INDICators:HORIZ<x>?	Returns the position of the specified horizontal measurement indicator
MEASUrement:INDICators:NUMHORIZ?	Returns the number of horizontal measurement indicators currently being displayed
MEASUrement:INDICators:NUMVERT?	Returns the number of vertical measurement indicators currently being displayed
MEASUrement:INDICators:STATE	Sets or returns the state of visible measurement indicators
MEASUrement:INDICators:VERT<x>?	Returns the value of the specified vertical measurement indicator
MEASUrement:MEAS<x>?	Returns all measurement parameters
MEASUrement:MEAS<x>:COUNT?	Returns the number of values accumulated since the last statistical reset
MEASUrement:MEAS<x>:DELay?	Returns the delay measurement parameters for the specified measurement
MEASUrement:MEAS<x>:DELay:DIRection	Sets or returns the search direction to use for delay measurements
MEASUrement:MEAS<x>:DELay:EDGE<x>	Sets or returns the slope of the edge to use for delay “from” and “to” waveform measurements
MEASUrement:MEAS<x>:MAXimum?	Returns the maximum value found since the last statistical reset
MEASUrement:MEAS<x>:MEAN?	Returns the mean value accumulated since the last statistical reset
MEASUrement:MEAS<x>:MINImum?	Returns the minimum value found since the last statistical reset

Table 2-26: Measurement Commands (cont.)

Command	Description
MEASUrement:MEAS<x>:SOUrce<x>	Sets or returns the “from” source for all single channel immediate measurements Sets or returns the source to measure “to” for two-channel measurements
MEASUrement:MEAS<x>:STATE	Sets or returns whether the specified measurement slot is computed and displayed
MEASUrement:MEAS<x>:STDdev?	Returns the standard deviation of values accumulated since the last statistical reset
MEASUrement:MEAS<x>:TYPe	Sets or returns the measurement<x> type
MEASUrement:MEAS<x>:UNIts?	Returns measurement<x> units
MEASUrement:MEAS<x>:VALue?	Returns the value of measurement<x>
MEASUrement:METhod	Sets or returns the method used for calculating reference levels
MEASUrement:REFLevel?	Returns the current reference level parameters
MEASUrement:REFLevel:ABSolute:HIGH	Sets or returns the top reference level for rise time
MEASUrement:REFLevel:ABSolute:LOW	Sets or returns the low reference level for rise time
MEASUrement:REFLevel:ABSolute:MID	Sets or returns the mid reference level for measurements
MEASUrement:REFLevel:ABSolute:MID<x>	Sets or returns the mid reference level in absolute units (e.g. volts)
MEASUrement:REFLevel:ABSolute:MID2	Sets or returns the mid reference level for delay “to” measurements
MEASUrement:REFLevel:METhod	Sets or returns the method for assigning high and low reference levels
MEASUrement:REFLevel:PERCent:HIGH	Sets or returns the top reference percent level for rise time
MEASUrement:REFLevel:PERCent:LOW	Sets or returns the low reference percent level for rise time
MEASUrement:REFLevel:PERCent:MID	Sets or returns the mid reference percent level for waveform measurements
MEASUrement:REFLevel:PERCent:MID2	Sets or returns the mid reference percent level for second waveform measurements
MEASUrement:REFLevel:ABSolute:MID<x>	Sets or returns the mid reference level for the specified channel in absolute volts
MEASUrement:REFLevel:PERCent:MID<x>	Sets or returns the mid reference level for the specified channel in percent
MEASUrement:SNAPShot	Displays the measurement snapshot list

Table 2-26: Measurement Commands (cont.)

Command	Description
MEASUrement:STATistics	Clears or returns all of the statistics accumulated for all period measurements (MEAS1 through MEAS4)
MEASUrement:STATistics:MODE	Turns measurement statistics on or off
MEASUrement:STATistics:WEIghting	Controls the responsiveness of the mean and standard deviation to waveform changes

Miscellaneous Command Group

Use the commands in the Miscellaneous Command Group to perform actions that do not fit into other categories.

Several commands and queries are common to all 488.2-1987 devices. The 488.2-1987 standard defines these commands. The common commands begin with an asterisk (*) character.

Table 2-27: Miscellaneous Commands

Command	Description
AUTOSet	Sets the vertical, horizontal and trigger controls to provide a stable display of the appropriate waveform. This is equivalent to pressing the front panel Autoset button
AUTOSet:ENable	Enables or disables the autoset feature
CLEARMenu	Clears the current menu from the display
DATE	Sets or returns the date displayed by the oscilloscope
*DDT	Sets or returns the commands that will be executed by the group execute trigger
DESkew	Causes the deskew values for all channels to be set to the recommended values
DESkew:DISPlay	Sets or returns the state of the deskew table display
FPAnel:PRESS	Simulates the action of pressing a specified front-panel button
FPAnel:TURN	Duplicates the action of turning a specified front-panel control knob
GPIBUsb:ADDress?	Returns the current GPIB address
GPIBUsb:ID?	Returns the identification string of the connected adaptor module and firmware version

Table 2-27: Miscellaneous Commands (cont.)

Command	Description
HEADer	Sets or returns the Response Header Enable State
ID?	Returns identifying information about the oscilloscope and its firmware
*IDN?	Returns the same information as the ID? command except the data is formatted according to Tektronix Codes & Formats
LANGuage	Sets or returns the user interface display language
LOCK	Sets or returns the front panel lock state
*LRN?	Returns a listing of oscilloscope settings
NEWpass	Changes the password for user protected data
PASSWord	Enables the *PUD and NEWpass set commands
REM	Specifies a comment, which is ignored by the oscilloscope
SET?	Returns a listing of oscilloscope settings
TEKSecure	Initializes both waveform and setup memories
TIME	Sets or returns the time displayed by the oscilloscope
TOTaluptime?	Returns the total number of hours that the oscilloscope has been turned on since the nonvolatile memory was last programmed
*TRG	Performs the group execute trigger (GET)
*TST?	Tests the interface and returns the status
UNLock	Unlocks front panel
USBTMC?	Returns the USBTMC information used by the USB hosts to determine the instrument interfaces
USBTMC:PRODUCTID:DECimal?	Returns the USBTMC product ID
USBTMC:PRODUCTID:HEXadecimal?	Returns the USBTMC product ID
USBTMC:SERIALnumber?	Returns the instrument serial number
USBTMC:VENDORID:DECimal?	Returns the USBTMC vendor ID
USBTMC:VENDORID:HEXadecimal?	Returns the USBTMC vendor ID
VERBose	Sets or returns the verbose state

PictBridge Command Group

Use the commands in the PictBridge Command Group to store printer settings.

Table 2-28: PictBridge Commands

Command	Description
PICTBridge:DATEPrint	Enables or disables printing the date on the print output
PICTBridge:DEFAult	Sets the arguments for all PICTBridge commands to their default values
PICTBridge:IDPrint	Enables or disables printing the oscilloscope model and serial number on the print output
PICTBridge:IMAGESize	Sets or returns the image print size
PICTBridge:PAPERSize	Sets the output print paper size
PICTBridge:PAPERType	Sets or returns the paper type
PICTBridge:PRINTQual	Sets or returns the output print quality
USBDevice:CONFigure	Enables or disables the rear USB port for use with Pictbridge printers

Power Command Group

Use the commands in the Power Command Group for power analysis. The power measurements include:

- Power quality
- Switching loss
- Safe operating area
- Harmonics
- Ripple
- Modulation analysis

This command group is available when the DPO4PWR application module is installed.

Table 2-29: Power Commands

Command	Description
POWer:CURRENTSource	Sets or returns the current source for the power application
POWer:DISplay	Sets or returns the display state for the power application
POWer:GATESource	Sets or returns the gate source for the power application

Table 2-29: Power Commands (cont.)

Command	Description
POWer:GATing	Sets or returns the power application gating
POWer:HARMonics:DISPlay:SElect	Sets or returns the harmonics to be displayed when the harmonics standard is None
POWer:HARMonics:DISPlay:TYPe	Sets or returns the display type for harmonics tests
POWer:HARMonics:FREQRef	Sets or returns the frequency reference waveform for harmonics tests
POWer:HARMonics:FREQRef:FIXEDFREQValue	Sets or returns the fixed reference frequency value for harmonics measurements
POWer:HARMonics:IEC:CLAss	Sets or returns the filtering class for IEC harmonics
POWer:HARMonics:IEC:FiLter	Sets or returns the enabled state for filtering of IEC harmonics
POWer:HARMonics:IEC:FUNDamental	Sets or returns the fundamental current for IEC harmonics
POWer:HARMonics:IEC:GROUPing	Sets or returns the enabled state for grouping of IEC harmonics
POWer:HARMonics:IEC:INPUTPOWer	Sets or returns the class D input power for IEC harmonics
POWer:HARMonics:IEC:LINEFREQuency	Sets or returns the line frequency for the IEC standard
POWer:HARMonics:IEC:OBSPERiod	Sets or returns the IEC observation period
POWer:HARMonics:IEC:POWERFACTOR	Sets or returns the power factor for IEC harmonics
POWer:HARMonics:MIL:FUNDamental:CALCmethod	Sets or returns the measurement method for the MIL harmonics fundamental frequency
POWer:HARMonics:MIL:FUNDamental:USER:CURREnt	Sets or returns RMS amperes for User calculation method
POWer:HARMonics:MIL:LINEFREQuency	Sets or returns the line frequency for MIL-STD-1399 harmonics tests
POWer:HARMonics:MIL:POWERLEVel	Sets or returns the power level for MIL-STD-1399 harmonics tests
POWer:HARMonics:NR_HARMonics	Sets or returns the number of harmonics (a value in the range of 20 to 400) when the harmonics standard is NONE
POWer:HARMonics:RESults:HAR<1-400>:FREQuency?	Returns the frequency of the harmonic

Table 2-29: Power Commands (cont.)

Command	Description
<code>POWer:HARMonics:RESults:HAR<1-400>:IECMAx?</code>	The IEC standard specifies harmonics measurements to be computed in windows of time, with each time window being nominally 200 ms. This returns the maximum of the RMS magnitude of the harmonic, computed across successive 200 ms time windows within an observation period entered by the user
<code>POWer:HARMonics:RESults:HAR<1-400>:LIMit?</code>	The IEC and MIL standards specify a limit for each harmonic magnitude. Returns the limit in absolute units, or as a percentage of the fundamental as specified by the standard. IEC Class C (Table 2) and MIL standards specify the limit as a percentage of the fundamental
<code>POWer:HARMonics:RESults:HAR<1-400>:PHASe?</code>	Returns the phase of the harmonic in degrees. The phase is measured relative to the zero-crossing of the reference waveform. When there is no reference waveform, the phase is relative to the fundamental component
<code>POWer:HARMonics:RESults:HAR<1-400>:RMS:ABSolute?</code>	Returns the RMS magnitude of the harmonic expressed in absolute units
<code>POWer:HARMonics:RESults:HAR<1-400>:RMS:PERCent?</code>	Returns the RMS magnitude of the harmonic expressed as a percentage of the fundamental
<code>POWer:HARMonics:RESults:HAR<1-400>:TEST:IEC:CLASSALIMit?</code>	Returns PASS, FAIL or NA. Specifies if the IEC Class A higher harmonic limit (and conditions) are met
<code>POWer:HARMonics:RESults:HAR<1-400>:TEST:IEC:NORMAL?</code>	Returns PASS, FAIL or NA. Specifies if the Normal IEC harmonic limits are met
<code>POWer:HARMonics:RESults:HAR<1-400>:TEST:IEC:POHCLIMit?</code>	Returns PASS, FAIL or NA. Specifies if the higher harmonic limit (and conditions) for the 21st and higher order odd harmonics are met
<code>POWer:HARMonics:RESults:HAR<1-400>:TEST:MIL:NORMAL?</code>	Returns the test result for the specified harmonic for the MIL-STD-1399 testing standard
<code>POWer:HARMonics:RESults:IEC:FUNDamental?</code>	Returns the IEC fundamental frequency
<code>POWer:HARMonics:RESults:IEC:HARM3ALTernate?</code>	Returns the IEC harmonics test result for the 3rd harmonic: PASS, FAIL or NA
<code>POWer:HARMonics:RESults:IEC:HARM5ALTernate?</code>	Returns the IEC harmonics test result for the 5th harmonic: PASS, FAIL or NA
<code>POWer:HARMonics:RESults:IEC:POHC?</code>	Returns the IEC POHC measurement

Table 2-29: Power Commands (cont.)

Command	Description
POWer:HARMonics:RESults:IEC:POHL?	Returns the IEC POHL measurement
POWer:HARMonics:RESults:IEC:POWer?	Returns the IEC input power measurement
POWer:HARMonics:RESults:IEC:POWerFactor?	Returns the IEC power factor measurement
POWer:HARMonics:RESults:PASSFail?	Returns the overall harmonics test result: PASS, FAIL or NA
POWer:HARMonics:RESults:RMS?	Returns the root mean square value of the source waveform
POWer:HARMonics:RESults:SAVe	Saves the harmonic results to the specified file in CSV format
POWer:HARMonics:RESults:THDF?	Returns the Total Harmonic Distortion (THD) in percentage, measured as a ratio to the RMS value of the fundamental component of the source waveform
POWer:HARMonics:RESults:THDR?	Returns the Total Harmonic Distortion (THD) in percentage, measured as a ratio to the RMS value of the source waveform
POWer:HARMonics:SOURce	Sets or returns the source waveform for harmonics tests
POWer:HARMonics:STANDard	Sets or returns the standard for harmonics tests
POWer:INDICators	Sets or returns the state of the measurement indicators for the power application
POWer:MODulation:SOURce	Sets or returns the source waveform for modulation tests
POWer:MODulation:TYPE	Sets or returns the modulation type
POWer:QUALity:APPpwr?	Returns the apparent power measurement
POWer:QUALity:DISplay:APPpwr	Sets or returns the display state for the apparent power readout
POWer:QUALity:DISplay:FREQuency	Sets or returns the display state for the frequency readout
POWer:QUALity:DISplay:ICRESTfactor	Sets or returns the display state for the current crest factor readout
POWer:QUALity:DISplay:IRMS	Sets or returns the display state for the rms current (IRMS) readout
POWer:QUALity:DISplay:PHASEangle	Sets or returns the display state for the phase angle readout
POWer:QUALity:DISplay:POWERFACTOR	Sets or returns the display state for the power factor readout
POWer:QUALity:DISplay:REACTpwr	Sets or returns the display state for the reactive power readout

Table 2-29: Power Commands (cont.)

Command	Description
POWer:QUALity:DISplay:TRUEpwr	Sets or returns the display state for the true power readout
POWer:QUALity:DISplay:VCRESTfactor	Sets or returns the display state for the voltage crest factor readout
POWer:QUALity:DISplay:VRMS	Sets or returns the display state for the rms voltage (VRMS) readout
POWer:QUALity:FREQREference	Sets or returns the power quality frequency reference
POWer:QUALity:FREQuency?	Returns the frequency measurement
POWer:QUALity:ICRESTfactor?	Returns the current crest factor measurement
POWer:QUALity:IRMS?	Returns the rms current measurement
POWer:QUALity:PHASEangle?	Returns the phase angle measurement
POWer:QUALity:POWERFACTOR?	Returns the power factor measurement
POWer:QUALity:REACTpwr?	Returns the reactive power measurement
POWer:QUALity:TRUEpwr?	Returns the true power measurement
POWer:QUALity:VRMS?	Returns the rms voltage measurement
POWer:REFLevel:ABSolute	Sets the reference levels to their default unit values
POWer:REFLevel:ABSolute:HIGH	Sets or returns the top reference level for rise time
POWer:REFLevel:ABSolute:LOW	Sets or returns the low reference level for rise time
POWer:REFLevel:ABSolute:MID<1-3>	Sets or returns the mid reference level for measurements
POWer:REFLevel:HYSTeresis	Sets or returns the measurement reference level hysteresis value
POWer:REFLevel:METHod	Sets or returns the method used to calculate the 0% and 100% reference level
POWer:REFLevel:PERCent	Sets the reference levels to the default percentage values
POWer:REFLevel:PERCent:HIGH	Sets or returns the top reference percent level for rise time
POWer:REFLevel:PERCent:LOW	Sets or returns the low reference percent level for rise time
POWer:REFLevel:PERCent:MID<1-3>	Sets or returns the mid reference percent level for waveform measurements
POWer:RIPple	Sets the vertical offset of the source waveform
POWer:RIPple:RESults:AMPLitude?	Returns the peak-to-peak ripple measurement

Table 2-29: Power Commands (cont.)

Command	Description
POWer:RIPPlE:RESults:MAX?	Returns the maximum of the peak-to-peak ripple measurements
POWer:RIPPlE:RESults:MEAN?	Returns the mean of the peak-to-peak ripple measurements
POWer:RIPPlE:RESults:MIN?	Returns the minimum of the peak-to-peak ripple measurement
POWer:RIPPlE:RESults:STDdev?	Returns the standard deviation of the peak-to-peak ripple measurements
POWer:RIPPlE:SOUrce	Sets or returns the source waveform for ripple tests
POWer:SOA:LINear:XMAX	Sets or returns the user XMAX value for use in linear SOA calculations
POWer:SOA:LINear:XMIN	Sets or returns the user XMIN value for use in linear SOA calculations
POWer:SOA:LINear:YMAX	Sets or returns the user YMAX value for use in linear SOA calculations
POWer:SOA:LINear:YMIN	Sets or returns the user YMIN value for use in linear SOA calculations
POWer:SOA:LOG:XMAX	Sets or returns the user XMAX value for use in log SOA calculations
POWer:SOA:LOG:XMIN	Sets or returns the user XMIN value for use in log SOA calculations
POWer:SOA:LOG:YMAX	Sets or returns the user YMAX value for use in log SOA calculations
POWer:SOA:LOG:YMIN	Sets or returns the user YMIN value for use in log SOA calculations
POWer:SOA:MASK:DEFine	Sets or returns the X (Volts) and Y (Amps) coordinates of the current SOA mask
POWer:SOA:MASK:MAXAmps	Sets or returns the maximum current applied to SOA mask testing
POWer:SOA:MASK:MAXVolts	Sets or returns the maximum voltage applied to SOA mask testing
POWer:SOA:MASK:MAXWatts	Sets or returns the maximum power applied to SOA mask testing
POWer:SOA:MASK:NR_PT?	Returns the number of mask points defined
POWer:SOA:MASK:STATe	Sets or returns the state of the mask for SOA calculations
POWer:SOA:MASK:STOPOnviol	Sets or returns the enabled state of the mask stop on violation condition
POWer:SOA:PLOTtYPe	Sets or returns the SOA plot type
POWer:SOA:RESult:FAILures:QTY?	Returns the number of failures in the test

Table 2-29: Power Commands (cont.)

Command	Description
POWer:SOA:RESult:NUMACq?	Returns the number of acquisitions in the test
POWer:SOA:RESult:STATe?	Returns the pass/fail state of the SOA test
POWer:STATIstics	Clears all the accumulated statistics of all measurements
POWer:STATIstics:MODE	Enables or disables the display of the measurement statistics
POWer:STATIstics:WEIghting	Sets the number of samples which are included for the statistics computations for mean and the standard deviation
POWer:SWLoss:CONDCALCmethod	Sets or returns the power application switching loss conduction calculation method
POWer:SWLoss:CONDUction:ENERGY:MAX?	Returns the maximum conduction energy for the switching loss calculation
POWer:SWLoss:CONDUction:ENERGY:MEAN?	Returns the mean conduction energy for the switching loss calculation
POWer:SWLoss:CONDUction:ENERGY:MIN?	Returns the minimum conduction energy for the switching loss calculation
POWer:SWLoss:CONDUction:POWER:MAX?	Returns the maximum conduction power for the switching loss calculation
POWer:SWLoss:CONDUction:POWER:MEAN?	Returns the mean conduction power for the switching loss calculation
POWer:SWLoss:CONDUction:POWER:MIN?	Returns the minimum conduction power for the switching loss calculation
POWer:SWLoss:DISPlay	Sets or returns the display selection for switching loss results
POWer:SWLoss:GATe:POLarity	Sets or returns the switching loss gate polarity
POWer:SWLoss:GATe:TURNON	Sets or returns the gate turn on level for switching loss power measurements
POWer:SWLoss:NUMCYCles?	Returns the number of cycles counted for the switching loss calculation
POWer:SWLoss:RDSON	Sets or returns RDSON value for use in switching loss calculations when the conduction calculation method is RDSON
POWer:SWLoss:REFLevel:ABSolute:GATEMid	Sets or returns the mid voltage reference level used in switching loss power measurements in volts
POWer:SWLoss:REFLevel:ABSolute:LOWCurrent	Sets or returns the low current reference level used in switching loss power measurements in amperes

Table 2-29: Power Commands (cont.)

Command	Description
POWer:SWLoss:REFLevel:ABSolute:LOWVoltage	Sets or returns the low voltage reference level used in switching loss power measurements in volts
POWer:SWLoss:REFLevel:PERCent:GATEMid	Sets or returns the mid voltage reference level used in switching loss power measurements in percentage
POWer:SWLoss:REFLevel:PERCent:LOWCurrent	Sets or returns the low current reference level used in switching loss power measurements in percentage
POWer:SWLoss:REFLevel:PERCent:LOWVoltage	Sets or returns the low voltage reference level used in switching loss power measurements in percentage
POWer:SWLoss:TOFF:ENERGY:MAX?	Returns the maximum Toff energy switching loss calculation
POWer:SWLoss:TOFF:ENERGY:MEAN?	Returns the mean Toff energy switching loss calculation
POWer:SWLoss:TOFF:ENERGY:MIN?	Returns the minimum Toff energy switching loss calculation
POWer:SWLoss:TOFF:POWER:MAX?	Returns the maximum Toff power switching loss calculation
POWer:SWLoss:TOFF:POWER:MEAN?	Returns the mean Toff power switching loss calculation
POWer:SWLoss:TOFF:POWER:MIN?	Returns the minimum Toff power switching loss calculation
POWer:SWLoss:TON:ENERGY:MAX?	Returns the maximum Ton energy switching loss calculation
POWer:SWLoss:TON:ENERGY:MEAN?	Returns the mean Ton energy switching loss calculation
POWer:SWLoss:TON:ENERGY:MIN?	Returns the minimum Ton energy switching loss calculation
POWer:SWLoss:TON:POWER:MAX?	Returns the maximum Ton power switching loss calculation
POWer:SWLoss:TON:POWER:MEAN?	Returns the mean Ton power switching loss calculation
POWer:SWLoss:TON:POWER:MIN?	Returns the minimum Ton power switching loss calculation
POWer:SWLoss:TOTal:ENERGY:MAX?	Returns the maximum total energy switching loss calculation
POWer:SWLoss:TOTal:ENERGY:MEAN?	Returns the mean total energy switching loss calculation
POWer:SWLoss:TOTal:ENERGY:MIN?	Returns the minimum total energy switching loss calculation

Table 2-29: Power Commands (cont.)

Command	Description
POWer:SWLoss:TOTal:POWer:MAX?	Returns the maximum total power switching loss calculation
POWer:SWLoss:TOTal:POWer:MEAN?	Returns the mean total power switching loss calculation
POWer:SWLoss:TOTal:POWer:MIN?	Returns the minimum total power switching loss calculation
POWer:SWLoss:VCESat	Sets or returns VCESAT value for use in switching loss calculations when the conduction calculation method is VCESAT
POWer:TYPE	Sets or returns the power application measurement type
POWer:VOLTAGESource	Sets or returns the voltage source for the power application

Save and Recall Command Group

Use the commands in the Save and Recall Command Group to store and retrieve waveforms and settings. When you save a setup, you save all the settings of the oscilloscope. When you recall a setup, the oscilloscope restores itself to the state it was in when you originally saved the setting.

Table 2-30: Save and Recall Commands

Command	Description
FACTory	Resets the oscilloscope to factory default settings
*RCL	Recalls saved oscilloscope settings
RECAIl:SETUp	Recalls saved oscilloscope settings
RECAIl:WAVEform	Recalls a stored waveform to a reference location
*SAV	Stores the state of the oscilloscope to a specified memory location
SAVe:ASSIgn:TYPE	Sets or returns the assignment of the save button
SAVe:EVENTable:BUS<x>	Saves event table data from bus<x> to a specified file
SAVe:IMAGe	Saves a capture of the screen image to the specified file

Table 2-30: Save and Recall Commands (cont.)

Command	Description
SAVe:IMAGe:FILEFormat	Sets or returns the file format to use for saving screen images. The file format is not automatically determined by the file name extension. You need to choose a file name with an extension which is consistent with the selected file format
SAVe:IMAGe:INKSaver	Sets or returns the current inksaver setting for the SAVe:IMAGe command
SAVe:IMAGe:LAYout	Sets or returns the layout to use for saved screen images
SAVe:SETUp	Saves the state of the oscilloscope to a specified memory location or file
SAVe:WAVEform	Saves a waveform to one of the reference memory locations or a file
SAVe:WAVEform:FILEFormat	Sets or returns the format for saved waveforms
SAVe:WAVEform:GATIng	Specifies whether save waveform operations should save the entire waveform or a specified portion of the waveform
SETUP<x>:DATE?	Returns the date when the specified oscilloscope setup was saved
SETUP<x>:LABEL	Sets or returns the specified oscilloscope setup label
SETUP<x>:TIME?	Returns the time when the specified oscilloscope setup was saved

Search Command Group

Use the commands in the Search Commands Group to seek out information in waveform records.

Search Commands

Command	Description
SEARCH?	Returns all search-related settings
SEARCH:SEARCH<x>:COPy	Copies the search criteria to the trigger, or the trigger criteria to the search
SEARCH:SEARCH<x>:STATE	Sets the search state to on or off
SEARCH:SEARCH<x>:TOTAL?	Returns the total number of matches for search <x>
SEARCH:SEARCH<x>:TRIGger:A:BUS?	Returns the search trigger bus type

Search Commands (cont.)

Command	Description
SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:AUDio:CONDition	Sets or returns the search trigger condition for the AUDIO bus: Start of Frame or Data
SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:AUDio:DATa:HIVALue	Sets or returns the search trigger data upper word for the AUDIO bus
SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:AUDio:DATa:OFFSet	Sets or returns the search trigger data offset for the AUDIO bus
SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:AUDio:DATa:QUALifier	Sets or returns the search trigger data qualifier for the AUDIO bus
SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:AUDio:DATa:VALue	Sets or returns the search trigger data lower word for the AUDIO bus
SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:AUDio:DATa:WORD	Sets or returns the search trigger data alignment for the AUDIO bus
SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:CAN:CONDition	Sets or returns the search condition for CAN search
SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:CAN:DATa:DIRection	Sets or returns the CAN search condition to be valid on a READ, WRITE or either
SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:CAN:DATa:QUALifier	Sets or returns the CAN data qualifier
SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:CAN:DATa:SIZE	Sets or returns the length of the data string in bytes to be used for CAN search
SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:CAN:DATa:VALue	Sets or returns the binary data string to be used for CAN search
SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:CAN:FRAMeType	Sets or returns the CAN Frame Type to be used
SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:CAN{:IDentifier}:ADDReSS}:MODE	Sets or returns the CAN addressing mode to standard or extended format
SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:CAN{:IDentifier}:ADDReSS}:VALue	Sets or returns the binary address string to be used for CAN search
SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:FLEXray:CONDition	Sets or returns the trigger condition for FLEXRAY
SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:FLEXray:CYCLEcount:HIVALue	Sets or returns the binary data string to be used for FLEXRAY cycle count high value
SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:FLEXray:CYCLEcount:QUALifier	Sets or returns the FLEXRAY cycle count qualifier
SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:FLEXray:CYCLEcount:VALue	Sets or returns the binary data string to be used for FLEXRAY cycle count low value
SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:FLEXray:DATa:HIVALue	Sets or returns the high binary data string
SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:FLEXray:DATa:OFFSet	Sets or returns the offset of the data string in bytes
SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:FLEXray:DATa:QUALifier	Sets or returns the FLEXRAY data qualifier

Search Commands (cont.)

Command	Description
SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:FLEXray:DATA:SIZE	Sets or returns the length of the data string in bytes
SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:FLEXray:DATA:VALue	Sets or returns the low binary data string
SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:FLEXray:EOFTYPE	Sets or returns the end of frame type
SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:FLEXray:ERRTYPE	Sets or returns the error type
SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:FLEXray:FRAMEID:HIVALue	Sets or returns the binary data string used for FLEXRAY frame ID high value
SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:FLEXray:FRAMEID:QUALifier	Sets or returns the FLEXRAY frame ID qualifier
SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:FLEXray:FRAMEID:VALue	Sets or returns the binary data string to be used for FLEXRAY frame ID low value
SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:FLEXray:FRAMEType	Sets or returns the frame type
SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:FLEXray:HEADER:CRC	Sets or returns the CRC portion of the binary header string
SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:FLEXray:HEADER:CYCLEcount	Sets or returns the cycle count portion of the binary header string
SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:FLEXray:HEADER:FRAMEID	Sets or returns the frame id portion of the binary header string
SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:FLEXray:HEADER:INDBits	Sets or returns the indicator bits portion of the binary header string
SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:FLEXray:HEADER:PAYLength	Sets or returns the payload length portion of the binary header string
SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:I2C:ADDRess:MODE	Sets or returns the I2C address mode to 7 or 10-Bit
SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:I2C:ADDRess:TYPE	Sets or returns the I2C address type to I2C special addresses
SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:I2C:ADDRess:VALue	Sets or returns the binary address string to be used for I2C search
SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:I2C:CONDition	Sets or returns the search condition for I2C search
SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:I2C:DATA:DIRection	Sets or returns the I2C search condition to be valid on a READ, WRITE or either
SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:I2C:DATA:SIZE	Sets or returns the length of the data string in bytes to be used for I2C search
SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:I2C:DATA:VALue	Sets or returns the binary data string to be used for I2C search
SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:LIN:CONDition	Sets or returns the search condition for a LIN search

Search Commands (cont.)

Command	Description
SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:LIN:DATa:HIVALue	Sets or returns the binary data string
SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:LIN:DATa:QUALifier	Sets or returns the LIN data qualifier
SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:LIN:DATa:SIZE	Sets or returns the length of the data string in bytes
SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:LIN:DATa:VALue	Sets or returns the binary data string used for a LIN search
SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:LIN:ERRType	Sets or returns the error type used for a LIN Search
SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:LIN:IDentifier:VALue	Sets or returns the binary address string used for LIN search
SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:PARallel:VALue	Sets or returns the binary data string to be used for a Parallel search
SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:RS232C:CONDition	Sets or returns the trigger condition for an RS-232 trigger
SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:RS232C:RX:DATa:SIZE	Sets or returns the length of the data string for an RS-232 trigger, if the trigger condition is RX
SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:RS232C:RX:DATa:VALue	Sets or returns the binary data string for an RS-232 trigger, if the condition involves RX
SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:RS232C:TX:DATa:SIZE	Sets or returns the length of the data string to be used for an RS-232 Trigger, if the Trigger condition is TX
SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:RS232C:TX:DATa:VALue	Sets or returns the binary data string to be used for an RS-232 trigger, if the condition involves RX
SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:SPI:CONDition	Sets or returns the search condition for SPI search
SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:SPI:DATa{MISO IN}:VALue	Sets or returns the binary data string to be used for SPI search if the search condition is MISO or MISOMOSI
SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:SPI:DATa{MOSI OUT}:VALue	Sets or returns the binary data string for an SPI search if the search condition is MISO or MISOMOSI
SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:SPI:DATa:SIZE	Sets or returns the length of the data string in bytes to be used for SPI search
SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:USB:ADDRess:HIVALue	Sets or returns the high limit for USB address searches
SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:USB:ADDRess:VALue	Sets or returns the value for USB address searches
SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:USB:CONDition	Sets or returns the USB search trigger condition

Search Commands (cont.)

Command	Description
SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:USB:DATA:HIVALue	Sets or returns the high limit for USB data searches
SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:USB:DATA:OFFSet	Sets or returns the data offset for USB data searches
SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:USB:DATA:SIZE	Sets or returns the number of data bytes for USB searches
SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:USB:DATA:TYPE	Sets or returns the data type for USB searches
SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:USB:DATA:VALue	Sets or returns the data value for USB data searches
SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:USB:ENDPoint:VALue	Sets or returns the endpoint value for USB searches
SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:USB:ERRORType	Sets or returns the error type for USB searches
SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:USB:HANDSHAKEType	Sets or returns the handshake type for USB searches
SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:USB:QUALifier	Sets or returns the qualifier for USB searches
SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:USB:SOFFRAMENUMber	Sets or returns the SOF number for USB searches
SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:USB:SPECIALType	Sets or returns the special packet type for USB searches
SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:USB:TOKENType	Sets or returns the token type for USB searches
SEARCH:SEARCH<x>:TRIGger:A:BUS:SOURce	Sets or returns the bus for a serial search
SEARCH:SEARCH<x>:TRIGger:A:EDGE:SLOpe	Sets or returns the slope for an edge search
SEARCH:SEARCH<x>:TRIGger:A:EDGE:SOURce	Sets or returns the source waveform for an edge search
SEARCH:SEARCH<x>:TRIGger:A:LEVel	Sets or returns the level for an edge search
SEARCH:SEARCH<x>:TRIGger:A:LEVel:CH<x>	Sets or returns the level for an edge search of the specified channel
SEARCH:SEARCH<x>:TRIGger:A:LEVel:MATH	Sets or returns the math waveform level for edge search
SEARCH:SEARCH<x>:TRIGger:A:LEVel:REF<x>	Sets or returns the reference waveform level for edge search
SEARCH:SEARCH<x>:TRIGger:A:LOGic:FUNCTION	Sets or returns the logic operator for the logic search
SEARCH:SEARCH<x>:TRIGger:A:LOGic:INPut:CH<x>	Sets or returns the Boolean logic criteria for the logic search

Search Commands (cont.)

Command	Description
SEARCH:SEARCH<x>:TRIGger:A:LOGic:INPut:CLOCK:EDGE	Sets or returns whether the clock edge is rise or fall for a logic search
SEARCH:SEARCH<x>:TRIGger:A:LOGic:INPut:CLOCK:SOURce	Sets or returns the clock source definition for logic search
SEARCH:SEARCH<x>:TRIGger:A:LOGic:INPut:D<x>	Sets or returns the criteria for a logic search to determine where to place a mark for digital channel <x>
SEARCH:SEARCH<x>:TRIGger:A:LOGic:INPut:MATH	Sets or returns the Boolean logic criteria for the logic search
SEARCH:SEARCH<x>:TRIGger:A:LOGic:INPut:REF<x>	Sets or returns the Boolean logic criteria for the logic search
SEARCH:SEARCH<x>:TRIGger:A:LOGic:PATtern:INPut:CH<x>	Sets or returns the Boolean logic criteria for the logic search
SEARCH:SEARCH<x>:TRIGger:A:LOGic:PATtern:INPut:D<x>	Sets or returns the criteria for a pattern search to determine where to place a mark for digital channel <x>
SEARCH:SEARCH<x>:TRIGger:A:LOGic:PATtern:INPut:MATH	Sets or returns the Boolean logic criteria for the logic search
SEARCH:SEARCH<x>:TRIGger:A:LOGic:PATtern:INPut:REF<x>	Sets or returns the Boolean logic criteria for the logic search
SEARCH:SEARCH<x>:TRIGger:A:LOGic:PATtern:WHEn	Sets or returns the condition for generating a logic pattern search
SEARCH:SEARCH<x>:TRIGger:A:LOGic:PATtern:WHEn:LESSLimit	Sets or returns the maximum time that the selected pattern may be true
SEARCH:SEARCH<x>:TRIGger:A:LOGic:PATtern:WHEn:MORELimit	Sets or returns the minimum time that the selected pattern may be true
SEARCH:SEARCH<x>:TRIGger:A:LOGic:THReshold:CH<x>	Sets or returns the channel threshold level for an logic search
SEARCH:SEARCH<x>:TRIGger:A:LOGic:THReshold:MATH	Sets or returns the math waveform threshold level for logic search
SEARCH:SEARCH<x>:TRIGger:A:LOGic:THReshold:REF<x>	Sets or returns the reference waveform threshold level for logic search
SEARCH:SEARCH<x>:TRIGger:A:LOWerthreshold:CH<x>	Sets or returns the lower waveform threshold level for all channel waveform searches
SEARCH:SEARCH<x>:TRIGger:A:LOWerthreshold:MATH	Sets or returns the lower waveform threshold level for all math waveform searches
SEARCH:SEARCH<x>:TRIGger:A:LOWerthreshold:REF<x>	Sets or returns the lower waveform threshold level for all reference waveform searches
SEARCH:SEARCH<x>:TRIGger:A:PULSEWidth:POLarity	Sets or returns the polarity for a pulse search
SEARCH:SEARCH<x>:TRIGger:A:PULSEWidth:SOURce	Sets or returns the source waveform for a pulse search

Search Commands (cont.)

Command	Description
SEARCH:SEARCH<x>:TRIGger:A:PULSEWidth:WHEn	Sets or returns the condition for generating a pulse width search
SEARCH:SEARCH<x>:TRIGger:A:PULSEWidth:WIDth	Sets or returns the pulse width setting for a pulse width search
SEARCH:SEARCH<x>:TRIGger:A:RUNT:POLarity	Sets or returns the polarity setting for a runt search
SEARCH:SEARCH<x>:TRIGger:A:RUNT:SOUrce	Sets or returns the source setting for a runt search
SEARCH:SEARCH<x>:TRIGger:A:RUNT:WHEn	sets or returns the condition setting for a runt search
SEARCH:SEARCH<x>:TRIGger:A:RUNT:WIDth	Sets or returns the width setting for a runt search
SEARCH:SEARCH<x>:TRIGger:A:SETHold:CLOCK:EDGE	Sets or returns the clock slope setting for a setup/hold search
SEARCH:SEARCH<x>:TRIGger:A:SETHold:CLOCK:SOUrce	Sets or returns the clock source setting for an setup/hold search
SEARCH:SEARCH<x>:TRIGger:A:SETHold:CLOCK:THReshold	Sets or returns the clock threshold setting for an setup/hold search
SEARCH:SEARCH<x>:TRIGger:A:SETHold:DATA:SOUrce	Sets or returns the data source setting for an setup/hold search
SEARCH:SEARCH<x>:TRIGger:A:SETHold:DATA:THReshold	Sets or returns the data threshold setting for an setup/hold search
SEARCH:SEARCH<x>:TRIGger:A:SETHold:HOLDTime	Sets or returns the hold time setting for an setup/hold search
SEARCH:SEARCH<x>:TRIGger:A:SETHold:SETTime	Sets or returns the setup time setting for an setup/hold search
SEARCH:SEARCH<x>:TRIGger:A:SETHold:THReshold:CH<x>	Sets or returns the trigger search setup and hold threshold for the selected channel
SEARCH:SEARCH<x>:TRIGger:A:SETHold:THReshold{:MATH :MATH1}	Sets or returns the trigger search setup and hold threshold for the math waveform
SEARCH:SEARCH<x>:TRIGger:A:SETHold:THReshold:REF<x>	Sets or returns the trigger search setup and hold threshold for the selected reference waveform
SEARCH:SEARCH<x>:TRIGger:A{:TRANSition :RISEFall :DELTatime	Sets or returns the transition time setting for an transition search
SEARCH:SEARCH<x>:TRIGger:A{:TRANSition :RISEFall :POLarity	Sets or returns the polarity setting for an transition search
SEARCH:SEARCH<x>:TRIGger:A{:TRANSition :RISEFall :SOUrce	Sets or returns the source setting for an transition search
SEARCH:SEARCH<x>:TRIGger:A{:TRANSition :RISEFall :WHEn	Sets or returns the condition setting for an transition search

Search Commands (cont.)

Command	Description
SEARCH:SEARCH<x>:TRIGger:A:TYPe	Sets or returns the trigger type setting for a search
SEARCH:SEARCH<x>:TRIGger:A:UPPerthreshold:CH<x>	Sets or returns the waveform upper threshold level for all channel waveform searches
SEARCH:SEARCH<x>:TRIGger:A:UPPerthreshold:MATH	Sets or returns the waveform upper threshold level for all math waveform searches
SEARCH:SEARCH<x>:TRIGger:A:UPPerthreshold:REF<x>	Sets or returns the waveform upper threshold level for all reference waveform searches

Status and Error Command Group

Use the commands in the Status and Error Command Group to determine the status of the oscilloscope and control events.

Several commands and queries used with the oscilloscope are common to all IEEE488.2 compliant devices. The IEEE Std 488.2-1987 defines these commands and queries. The common commands begin with an asterisk (*) character.

Table 2-31: Status and Error Commands

Command	Description
ALLEv?	Returns all events and their messages
BUSY?	Returns oscilloscope status
*CLS	Clears status
DESE	Sets or returns the bits in the Device Event Status Enable Register
*ESE	Sets or returns the bits in the Event Status Enable Register
*ESR?	Returns the contents of the Standard Event Status Register
EVENT?	Returns event code from the event queue
EVMsg?	Returns event code, message from the event queue
EVQty?	Return number of events in the event queue
*OPC	Generates the operation complete message in the standard event status register when all pending operations are finished Or returns "1" when all current operations are finished
*PSC	Sets or returns the power on status flag
*PUD	Sets or returns a string of protected user data

Table 2-31: Status and Error Commands (cont.)

Command	Description
*RST	Resets the oscilloscope to factory default settings
*SRE	Sets or returns the bits in the Service Request Enable Register
*STB?	Returns the contents of the Status Byte Register
*WAI	Prevents the oscilloscope from executing further commands until all pending operations finish

Trigger Command Group

Use the commands in the Trigger Command Group to control all aspects of triggering for the oscilloscope.

There are two triggers: A and B. Where appropriate, this command set has parallel construction between triggers.

You can set the A or B triggers to edge mode. Edge triggering lets you display a waveform at or near the point where the signal passes through a voltage level of your choosing.

You can also set A triggers to pulse, logic, or video modes. With pulse triggering, the oscilloscope triggers whenever it detects a pulse of a certain width or height. Logic triggering lets you logically combine the signals on one or channels. The oscilloscope then triggers when it detects a certain combination of signal levels. Video triggering enables you to trigger on the most common Standard Definition video standards.

Table 2-32: Trigger Commands

Command	Description
TRIGger	Forces a trigger event to occur
TRIGger:A	Sets A trigger level to 50% or returns current A trigger parameters
TRIGger:A:BUS	Sets or returns the serial trigger type
TRIGger:A:BUS:B<x>:AUDIO:CONDition	Sets or returns the trigger condition for the AUDIO bus: Start of Frame or Data

Table 2-32: Trigger Commands (cont.)

Command	Description
TRIGger:A:BUS:B<x>:AUDio:DATa:HIVALue	Sets or returns the trigger data upper word for the AUDIO bus
TRIGger:A:BUS:B<x>:AUDio:DATa:OFFSet	Sets or returns the trigger data offset for the AUDIO bus
TRIGger:A:BUS:B<x>:AUDio:DATa:QUALifier	Sets or returns the trigger data qualifier for the AUDIO bus
TRIGger:A:BUS:B<x>:AUDio:DATa:VALue	Sets or returns the trigger data lower word for the AUDIO bus
TRIGger:A:BUS:B<x>:AUDio:DATa:WORD	Sets or returns the trigger data alignment for the AUDIO bus.
TRIGger:A:BUS:B<x>:CAN:CONDition	Sets or returns the CAN condition
TRIGger:A:BUS:B<x>:CAN:DATa:DIRection	Sets or returns the CAN trigger condition to be valid on a READ, WRITE, or either
TRIGger:A:BUS:B<x>:CAN:DATa:QUALifier	Sets or returns the CAN data qualifier
TRIGger:A:BUS:B<x>:CAN:DATa:SIZE	Sets or returns the length of the data string in bytes to be used for CAN trigger
TRIGger:A:BUS:B<x>:CAN:DATa:VALue	Sets or returns the binary data string to be used for CAN trigger
TRIGger:A:BUS:B<x>:CAN:FRAMEtype	Sets or returns the CAN trigger frame type
TRIGger:A:BUS:B<x>:CAN{:IDentifier :ADDRess}:MODE	Sets or returns the CAN addressing mode
TRIGger:A:BUS:B<x>:CAN{:IDentifier :ADDRess}:VALue	Sets or returns the binary address string used for the CAN trigger
TRIGger:A:BUS:B<x>:FLEXray:CONDition	Sets or returns the trigger condition for FLEXRAY
TRIGger:A:BUS:B<x>:FLEXray:CYCLEcount:HIVALue	Sets or returns the binary data string to be used for FLEXRAY cycle count high value
TRIGger:A:BUS:B<x>:FLEXray:CYCLEcount:QUALifier	Sets or returns the FLEXRAY cycle count qualifier

Table 2-32: Trigger Commands (cont.)

Command	Description
TRIGger:A:BUS:B<x>:FLEXray:CYCLEcount:VALue	Sets or returns the binary data string to be used for FLEXRAY cycle count low value
TRIGger:A:BUS:B<x>:FLEXray:DATA:HIVALue	Sets or returns the high binary data string to be used for FLEXRAY trigger
TRIGger:A:BUS:B<x>:FLEXray:DATA:OFFSet	Sets or returns the offset of the data string in bytes
TRIGger:A:BUS:B<x>:FLEXray:DATA:QUALifier	Sets or returns the FLEXRAY data qualifier
TRIGger:A:BUS:B<x>:FLEXray:DATA:SIZE	Sets or returns the length of the data string in bytes
TRIGger:A:BUS:B<x>:FLEXray:DATA:VALue	Sets or returns the low binary data string to be used for FLEXRAY trigger condition
TRIGger:A:BUS:B<x>:FLEXray:EOFTYPE	Sets or returns the end of file type
TRIGger:A:BUS:B<x>:FLEXray:ERRTYPE	Sets or returns the error type
TRIGger:A:BUS:B<x>:FLEXray:FRAMEID:HIVALue	Sets or returns the binary data string to be used for FLEXRAY frame ID high value
TRIGger:A:BUS:B<x>:FLEXray:FRAMEID:QUALifier	Sets or returns the FLEXRAY frame ID qualifier
TRIGger:A:BUS:B<x>:FLEXray:FRAMEID:VALue	Sets or returns the binary data string to be used for FLEXRAY frame ID low value
TRIGger:A:BUS:B<x>:FLEXray:FRAMEType	Sets or returns the frame type
TRIGger:A:BUS:B<x>:FLEXray:HEADER:CRC	Sets or returns the CRC portion of the binary header string
TRIGger:A:BUS:B<x>:FLEXray:HEADER:CYCLEcount	Sets or returns the cycle count portion of the binary header string
TRIGger:A:BUS:B<x>:FLEXray:HEADER:FRAMEID	Sets or returns the frame id portion of the binary header string
TRIGger:A:BUS:B<x>:FLEXray:HEADER:INDBits	Sets or returns the indicator bits portion of the binary header string

Table 2-32: Trigger Commands (cont.)

Command	Description
TRIGger:A:BUS:B<x>:FLEXray:HEADER:PAYLength	Sets or returns the payload length portion of the binary header string
TRIGger:A:BUS:B<x>:I2C:ADDReSS:MODE	Sets or returns the I2C address mode to 7 or 10-bit
TRIGger:A:BUS:B<x>:I2C:ADDReSS:TYPE	Sets or returns the I2C address type to USER
TRIGger:A:BUS:B<x>:I2C:ADDReSS:VALue	Sets or returns the binary address string used for the I2C trigger
TRIGger:A:BUS:B<x>:I2C:CONDition	Sets or returns the trigger condition for I2C trigger
TRIGger:A:BUS:B<x>:I2C:DATA:DIRection	Sets or returns the I2C trigger condition valid on a READ, WRITE, or either
TRIGger:A:BUS:B<x>:I2C:DATA:SIZE	Sets or returns the length of the data string in bytes to be used for I2C trigger
TRIGger:A:BUS:B<x>:I2C:DATA:VALue	Sets or returns the binary data string used for I2C triggering
TRIGger:A:BUS:B<x>:LIN:CONDition	Sets or returns the trigger condition for LIN
TRIGger:A:BUS:B<x>:LIN:DATA:HIVALue	Sets or returns the binary data string to be used for LIN trigger
TRIGger:A:BUS:B<x>:LIN:DATA:QUALifier	Sets or returns the LIN data qualifier
TRIGger:A:BUS:B<x>:LIN:DATA:SIZE	Sets or returns the length of the data string in bytes to be used for LIN trigger
TRIGger:A:BUS:B<x>:LIN:DATA:VALue	Sets or returns the binary data string
TRIGger:A:BUS:B<x>:LIN:ERRTYPE	Sets or returns the error type
TRIGger:A:BUS:B<x>:LIN:IDentifier:VALue	Sets or returns the binary address string used for LIN trigger
TRIGger:A:BUS:B<x>:PARAllel:VALue	Sets or returns the binary data string to be used for a Parallel trigger
TRIGger:A:BUS:B<x>:RS232C:CONDition	Sets or returns the condition for an RS-232C trigger

Table 2-32: Trigger Commands (cont.)

Command	Description
TRIGger:A:BUS:B<x>:RS232C:RX:DATa:SIZE	Sets or returns the length of the data string in Bytes for an RX RS-232 Trigger
TRIGger:A:BUS:B<x>:RS232C:RX:DATa:VALue	Sets or returns the binary data string for an RX RS-232 trigger
TRIGger:A:BUS:B<x>:RS232C:TX:DATa:SIZE	Sets or returns the length of the data string for a TX RS-232 trigger
TRIGger:A:BUS:B<x>:RS232C:TX:DATa:VALue	Sets or returns the binary data string for an RS-232 trigger if the trigger condition involves TX
TRIGger:A:BUS:B<x>:SPI:CONDition	Sets or returns the trigger condition for SPI triggering
TRIGger:A:BUS:B<x>:SPI:DATa{:IN :MISO}:VALue	Sets or returns the binary data string to be used for SPI trigger
TRIGger:A:BUS:B<x>:SPI:DATa{:OUT :MOSI}:VALue	Sets or returns the binary data string used for the SPI trigger
TRIGger:A:BUS:B<x>:SPI:DATa:SIZE	Sets or returns the length of the data string in bytes to be used for SPI trigger
TRIGger:A:BUS:B<x>:USB:ADDRess:HIVALue	Sets or returns the high limit for the USB trigger address
TRIGger:A:BUS:B<x>:USB:ADDRess:VALue	Sets or returns the value for the USB trigger address
TRIGger:A:BUS:B<x>:USB:CONDition	Sets or returns the USB trigger condition
TRIGger:A:BUS:B<x>:USB:DATa:HIVALue	Sets or returns the high limit for the USB trigger data
TRIGger:A:BUS:B<x>:USB:DATa:OFFSet	Sets or returns the data offset for the USB trigger data
TRIGger:A:BUS:B<x>:USB:DATa:SIZE	Sets or returns the number of data bytes for the USB trigger
TRIGger:A:BUS:B<x>:USB:DATa:TYPE	Sets or returns the data type for the USB trigger
TRIGger:A:BUS:B<x>:USB:DATa:VALue	Sets or returns the data value for the USB trigger

Table 2-32: Trigger Commands (cont.)

Command	Description
TRIGger:A:BUS:B<x>:USB:ENDPoint:VALue	Sets or returns the endpoint value for the USB trigger
TRIGger:A:BUS:B<x>:USB:ERRORType	Sets or returns the error type for the USB trigger
TRIGger:A:BUS:B<x>:USB:HANDSHAKType	Sets or returns the handshake type for the USB trigger
TRIGger:A:BUS:B<x>:USB:QUALifier	Sets or returns the qualifier for USB trigger
TRIGger:A:BUS:B<x>:USB:SOFFRAMENUMber	Sets or returns the SOF number for the USB trigger
TRIGger:A:BUS:B<x>:USB:SPECIALType	Sets or returns the special packet type for the USB trigger
TRIGger:A:BUS:B<x>:USB:TOKENType	Sets or returns the token type for the USB trigger
TRIGger:A:BUS:SOUrce	Sets or returns the source for a bus trigger
TRIGger:A:EDGE?	Returns the source, coupling and source for the A edge trigger
TRIGger:A:EDGE:COUPling	Sets or returns the type of coupling for the A edge trigger
TRIGger:A:EDGE:SLOpe	Sets or returns the slope for the A edge trigger
TRIGger:A:EDGE:SOUrce	Sets or returns the source for the A edge trigger
TRIGger:A:HOLDoff?	Returns the A trigger holdoff parameters
TRIGger:A:HOLDoff:TIME	Sets or returns the A trigger holdoff time
TRIGger:A:LEVel	Sets or returns the trigger level for the A trigger
TRIGger:A:LEVel:AUXin	Sets or returns the trigger level for the AUXIN port
TRIGger:A:LEVel:CH<x>	Specifies or returns the trigger level for the specified trigger channel
TRIGger:A:LEVel:D<x>	Sets or returns the trigger level for the specified digital channel

Table 2-32: Trigger Commands (cont.)

Command	Description
TRIGger:A:LOGic?	Returns all A trigger logic settings
TRIGger:A:LOGic:CLAss	Sets or returns the type of A trigger logic
TRIGger:A:LOGic:FUNction	Sets or returns the logical combination of the input channels for the A logic trigger
TRIGger:A:LOGic:INPut?	Returns the logic input values for all channels
TRIGger:A:LOGic:INPut:CH<x>	Specifies or returns the logic setting for the specified channel
TRIGger:A:LOGic:INPut:CLOCK:EDGE	Sets the polarity of the clock channel
TRIGger:A:LOGic:INPut:CLOCK:SOUrce	Sets or returns the channel to use as the clock source
TRIGger:A:LOGic:INPut:D<x>	Sets or returns the logic pattern for a trigger on digital channel <x>
TRIGger:A:LOGic:PATtern?	Returns the conditions for generating an A logic pattern trigger
TRIGger:A:LOGic:PATtern:DELtetime	Sets or returns the pattern trigger delta time value
TRIGger:A:LOGic:PATtern:INPut:D<x>	Sets or returns the A logic trigger pattern for a trigger on digital channel <x>
TRIGger:A:LOGic:PATtern:WHEn	Sets or returns the pattern logic condition on which to trigger the oscilloscope
TRIGger:A:LOGic:PATtern:WHEn:LESSLimit	Sets or returns the maximum time that the selected pattern may be true and still generate an A logic pattern trigger
TRIGger:A:LOGic:PATtern:WHEn:MORELimit	Sets or returns the minimum time that the selected pattern may be true and still generate an A logic pattern trigger
TRIGger:A:LOGic:THReshold:CH<x>	Sets or queries the trigger A logic threshold voltage for the specified channel

Table 2-32: Trigger Commands (cont.)

Command	Description
TRIGger:A:LOGic:THReshold:D<x>	Sets or returns the trigger A logic threshold level for the specified digital channel
TRIGger:A:LOWerthreshold:CH<x>	Sets or returns the lower threshold for the channel selected
TRIGger:A:LOWerthreshold:D<x>	Sets the A trigger lower threshold for the digital channel selected
TRIGger:A:LOWerthreshold{:EXT}:AUX}	Sets or returns the lower threshold for the Auxiliary input.
TRIGger:A:MODE	Sets or returns the A trigger mode
TRIGger:A:PULse?	Returns the A pulse trigger parameters
TRIGger:A:PULse:CLAss	Sets or returns the type of pulse on which to trigger
TRIGger:A:PULSEWidth?	Returns the trigger A pulse width parameters
TRIGger:A:PULSEWidth:POLarity	Sets or returns the polarity for the A pulse width trigger
TRIGger:A:PULSEWidth:SOUrce	Sets or returns the source for the pulse width trigger
TRIGger:A:PULSEWidth:WHEn	Sets or returns the criteria for width specification of pulse width trigger events
TRIGger:A:PULSEWidth:WIDth	Sets or returns the width setting for the pulse width trigger
TRIGger:A:RUNT?	Returns the current A runt pulse trigger logic parameters
TRIGger:A:RUNT:POLarity	Sets or returns the polarity for the A pulse runt trigger
TRIGger:A:RUNT:SOUrce	Sets or returns the source for the A pulse trigger
TRIGger:A:RUNT:WHEn	Sets or returns the type of pulse width the trigger checks for when it uncovers a runt
TRIGger:A:RUNT:WIDth	Sets or returns the minimum width for A pulse runt trigger

Table 2-32: Trigger Commands (cont.)

Command	Description
TRIGger:A:SETHold?	Returns settings for setup and hold violation triggering
TRIGger:A:SETHold:CLOCK?	Returns clock edge polarity, voltage threshold and source input for setup/hold triggering
TRIGger:A:SETHold:CLOCK:EDGE	Sets or returns the clock edge polarity for setup and hold triggering
TRIGger:A:SETHold:CLOCK:SOURce	Sets or returns the clock source for the A logic trigger setup and hold input
TRIGger:A:SETHold:CLOCK:THReshold	Sets or returns the clock voltage threshold for setup and hold trigger
TRIGger:A:SETHold:DATA?	Returns the voltage threshold and data source for the setup/hold trigger
TRIGger:A:SETHold:DATA:SOURce	Sets or returns the data source for the setup and hold trigger
TRIGger:A:SETHold:DATA:THReshold	Sets or returns the data voltage threshold for setup and hold trigger
TRIGger:A:SETHold:HOLDTime	Sets or returns the hold time for the setup and hold violation triggering
TRIGger:A:SETHold:SETTime	Sets or returns the setup time for setup and hold violation triggering
TRIGger:A:SETHold:THReshold:CH<x>	Sets or queries the threshold for the channel
TRIGger:A:SETHold:THReshold:D<x>	Sets the A trigger setup and hold threshold for the selected digital channel
TRIGger:A:UPPerthreshold:CH<x>	Sets the upper threshold for the channel selected
TRIGger:A{:TRANSition :RISEFall}?	Returns the delta time, polarity, and both upper and lower threshold limits for the transition time trigger
TRIGger:A{:TRANSition :RISEFall}:DELTatime	Sets or returns the delta time used in calculating the transition value

Table 2-32: Trigger Commands (cont.)

Command	Description
TRIGger:A{:TRANsition}:RISEFall}:POLarity	Sets or returns the polarity for the A pulse transition trigger
TRIGger:A{:TRANsition}:RISEFall}:SOUrce	Sets or returns the source for transition trigger
TRIGger:A{:TRANsition}:RISEFall}:WHEn	Sets or returns the relationship of delta time to transitioning signal
TRIGger:A:TYPE	Sets or returns the type of A trigger
TRIGger:A:VIDeo?	Returns the video parameters for the A trigger
TRIGger:A:VIDeo:CUSTom{:FORMat}:TYPE}	Sets or returns the video trigger format
TRIGger:A:VIDeo:CUSTom:LINEPeriod	Sets or queries the line period
TRIGger:A:VIDeo:CUSTom:SCAN	Sets or returns the horizontal line scan rate of the A video trigger
TRIGger:A:VIDeo:CUSTom:SYNCInterval	Sets or queries the sync interval
TRIGger:A:VIDeo:HDTv:FORMat	Sets or returns the HDTV video signal format on which to trigger
TRIGger:A:VIDeo:HOLDoff:FIELD	Sets or returns the video trigger holdoff
TRIGger:A:VIDeo:LINE	Sets or returns the video line number on which the oscilloscope triggers
TRIGger:A:VIDeo:POLarity	Sets or returns the polarity of the A video trigger
TRIGger:A:VIDeo:SOUrce	Sets or returns the polarity of the video trigger
TRIGger:A:VIDeo:STANdard	Sets or returns the video standard
TRIGger:A:VIDeo{:SYNC}:FIELD}	Sets or returns the video field trigger
TRIGger:B	Sets the B trigger level to 50% or returns the B trigger parameters
TRIGger:B:BY	Sets or returns B trigger time or event qualifiers

Table 2-32: Trigger Commands (cont.)

Command	Description
TRIGger:B:EDGE?	Returns B trigger edge type parameters
TRIGger:B:EDGE:COUPling	Sets or returns the type of B trigger coupling
TRIGger:B:EDGE:SLOpe	Sets or returns the B edge trigger slope
TRIGger:B:EDGE:SOURce	Sets or returns the B edge trigger source
TRIGger:B:EVENTS?	Returns the current B trigger events parameter
TRIGger:B:EVENTS:COUNT	Sets or returns the number of events that must occur before the B trigger occurs
TRIGger:B:LEVel	Sets or returns the level for the B trigger
TRIGger:B:LEVel:CH<x>	Sets or returns the level for the B trigger for a specific channel
TRIGger:B:LEVel:D<x>	Sets or returns the B trigger level for digital channel <x>
TRIGger:B:LOWerthreshold:CH<x>	Sets or returns the B trigger lower threshold for the channel selected
TRIGger:B:LOWerthreshold:D<x>	Sets or queries the B trigger lower threshold for the digital channel selected
TRIGger:B:STATE	Returns the current state of the B trigger
TRIGger:B:TIME	Sets or returns the B trigger delay time
TRIGger:B:TYPE	Sets or returns the type of B trigger
TRIGger:B:UPPerthreshold:CH<x>	Sets or returns the B trigger upper threshold for the channel selected
TRIGger:EXTernal?	Returns external trigger parameters
TRIGger:EXTernal:PRObe	Sets or returns the attenuation factor value of the external probe connector
TRIGger:EXTernal:YUNITs?	Returns the external trigger vertical (Y) units value

Table 2-32: Trigger Commands (cont.)

Command	Description
TRIGger:FREQuency?	Returns the trigger frequency in hertz, if available
TRIGger:STATE?	Returns the current state of the triggering system

Vertical Command Group

Use the commands in the Vertical Command Group to control the vertical setup of all live (channel) waveforms for acquisition and display of channel, reference, and math waveforms.

Table 2-33: Vertical Commands

Command	Description
AUXin?	Returns auxiliary input parameters
AUXin:PRObe	Returns all information concerning the probe attached to auxiliary input
AUXin:PRObe:AUTOZero	Sets the TekVPI probe attached to the auxiliary input to autozero
AUXin:PRObe:COMMAND	Sets the state of the specified probe control
AUXin:PRObe:DEGAUss	Starts a degauss/autozero cycle on a TekVPI current probe attached to the auxiliary input
AUXin:PRObe:DEGAUss:STATE?	Returns the degauss state of the TekVPI current probe attached to the auxiliary input
AUXin:PRObe:FORCEDRange	Sets or returns the range of the TekVPI probe attached to the auxiliary input
AUXin:PRObe:GAIN	Sets or returns the gain factor of the probe that is attached to the auxiliary input
AUXin:PRObe:ID:SERnumber?	Returns the serial number of the probe that is attached to the auxiliary input
AUXin:PRObe:ID:TYPE?	Returns the type of probe that is attached to the auxiliary input
AUXin:PRObe:RESistance?	Returns the resistance of the probe that is attached to the Auxiliary input
AUXin:PRObe:SIGnal	Sets or returns the input bypass setting on VPI probes that support input bypass
AUXin:PRObe:UNIts?	Returns the units of measure of the probe that is attached to the auxiliary input
CH<x>?	Returns vertical parameters for the specified channel

Table 2-33: Vertical Commands (cont.)

Command	Description
CH<x>:AMPSVIAVOLTS:ENABle	Sets or returns the state of the amps via volts feature for the specified channel
CH<x>:AMPSVIAVOLTS:FACTOR	Sets or returns the amps via volts factor for the specified channel
CH<x>:BANdwidth	Sets or returns the bandwidth of the specified channel
CH<x>:COUPling	Sets or returns the coupling setting for the specified channel
CH<x>:DESKew	Sets or returns the deskew time for the specified channel
CH<x>:INVert	Sets or returns the invert function for the specified channel
CH<x>:LABel	Sets or returns the waveform label for channel <x>
CH<x>:OFFSet	Sets or returns the channel offset
CH<x>:POSition	Sets or returns the channel vertical position
CH<x>:PROBe?	Returns the gain, resistance, units, and ID of the probe that is attached to the specified channel
CH<x>:PROBe:AUTOZero	Sets the TekVPI probe attached to the specified channel input to autozero
CH<x>:PROBe:COMMAND	Sets the state of the specified probe control
CH<x>:PROBe:DEGAUss	Starts a degauss/autozero cycle on a TekVPI current probe attached to the specified channel input
CH<x>:PROBe:DEGAUss:STATE?	Returns the state of the probe degauss
CH<x>:PROBe:FORCEDRange	Sets or returns the range on a TekVPI probe attached to the specified channel
CH<x>:PROBe:GAIN	Sets or returns the gain factor of the probe that is attached to the specified channel
CH<x>:PROBe:ID?	Returns the type and serial number of the probe that is attached to the specified channel
CH<x>:PROBe:ID:SERnumber?	Returns the serial number of the probe that is attached to the specified channel
CH<x>:PROBe:ID:TYPE?	Returns the type of probe that is attached to the specified channel
CH<x>:PROBe:MODel	Sets or returns the probe model for the specified channel
CH<x>:PROBe:PROPDElay	Sets or returns the propagation delay for the probe connected to the specified channel

Table 2-33: Vertical Commands (cont.)

Command	Description
CH<x>:PRObe:RECDSEskew?	Returns the recommended deskew for the probe connected to the specified channel
CH<x>:PRObe:RESistance?	Returns the resistance of the probe that is attached to the specified channel
CH<x>:PRObe:SIGnal	Sets or returns the input bypass setting of channel <x>TekVPI probe
CH<x>:PRObe:UNIts?	Returns the units of measure of the probe that is attached to the specified channel
CH<x>:SCAle	Sets or returns the vertical scale of the specified channel
CH<x>:TERmination	Sets or returns channel input termination
CH<x>:YUNits	Sets or returns the units for the specified channel
D<x>	Returns parameters for digital channel <x>
D<x>:LABel	Sets or returns the waveform label for digital channel<x>
D<x>:THREshold	Sets or returns the logical threshold for digital channel <x>
D<x>:POSition	Sets or returns the vertical position for digital channel <x>
DESkew	Causes the deskew values for all channels to be set to the recommended values
DESkew:DISPlay	Sets or returns the state of the deskew table display
REF<x>?	Returns reference waveform data for channel <x>
REF<x>:DATE?	Returns the date that a reference waveform was stored
REF<x>:HORizontal:DELAy:TIME	Sets or returns the horizontal position of the specified reference waveform in percent of the waveform that is displayed to the right of the center vertical graticule
REF<x>:HORizontal:SCAle	Sets or returns the horizontal scale for a reference waveform
REF<x>:LABel	Sets or returns the specified reference waveform label
	Sets or returns the vertical position for reference channel <x>
REF<x>:TIME?	Returns the time that a reference waveform was stored
REF<x>:VERTical:POSition	Sets or returns the vertical position of the specified reference waveform

Table 2-33: Vertical Commands (cont.)

Command	Description
REF<x>:VERTical:SCAl	Sets or returns the reference waveform vertical scale in vertical units/div
SElect	Returns information on which waveforms are on or off and which waveform is selected.
SElect:BUS<x>	Turns on or off the specified bus waveform or returns whether the specified bus channel is on or off
SElect:CH<x>	Turns on or off the specified waveform or returns whether the specified channel is on or off
SElect:CONTROl	Sets or returns the waveform that is selected as the implied recipient of channel-related commands
SElect:D<x>	Turns on the display of digital channel <x> and resets the acquisition
SElect:MATH[1]	Turns on or off the math waveform or returns whether the math waveform is on or off
SElect:REF<x>	Turns on or off the specified reference waveform or returns whether the specified reference waveform is on or off

Waveform Transfer Command Group

Use the commands in the Waveform Transfer Command Group to transfer waveform data points to and from the oscilloscope. Waveform data points are a collection of values that define a waveform. One data value usually represents one data point in the waveform record. When working with envelope waveforms, each data value is either the minimum or maximum of a min/max pair.

Before you transfer waveform data, you must specify the data format, record length, and waveform source or destination.

Data Formats

All data points for DPO and MSO models are signed integer format only. Valid data widths for CH1-CH4, MATH, REF1-REF4 and D0-D15 are 1 and 2-byte widths. The valid data widths for the digital collection is either 4 or 8-byte widths.

The oscilloscope can transfer waveform data in either ASCII or binary format. You specify the format with the DATA:ENCdg command.

ASCII Data. ASCII data is represented by signed integer values. The range of the values depends on the byte width specified. One byte wide data ranges from -128 to 127. Two byte wide data ranges from -32768 to 32767.

Each data value requires two to seven characters. This includes one to five characters to represent the value, another character, if the value is negative, to represent a minus sign, and a comma to separate the data points.

An example ASCII waveform data string may look like this:

CURVE<space>-110,-109,-110,-110,-109,-107,-109,-107,-106,
-105,-103,-100,-97,-90,-84,-80

NOTE. *You can use ASCII to obtain a readable and easier to format output than binary. However, the oscilloscope may require bytes to send the same values with ASCII than with binary, reducing transmission speed.*

The use of ASCII for waveform data transfer is inefficient. ASCII-formatted Waveform (WAVFRM?) and Curve (CURVE?) queries, exceeding 1 M points, are not supported.

Binary Data. Binary data is represented by signed integer or positive integer values. The range of the values depends on the byte width specified. When the byte width is one, signed integer data ranges from -128 to 127, and positive integer values range from 0 to 255. When the byte width is two, the values range from -32768 to 32767. and positive integer values range from 0 to 65,535.

Table 2-34: Binary data ranges

Byte width	Signed integer range	Positive integer range
1	-128 to 127	0 to 255
2	32,768 to 32,767	0 to 65,535

The defined binary formats also specify the order in which the bytes are transferred. The four binary formats are RIBinary, RPBinary, SRIBinary, and SRPBinary.

RIBinary is signed integer where the most significant byte is transferred first, and RPBinary is positive integer where the most significant byte is transferred first. SRIBinary and SRPBinary correspond to RIBinary and RPBinary respectively but use a swapped byte order where the least significant byte is transferred first. The byte order is ignored when DATA:WIDth is set to 1.

Waveform Data and Record Lengths

You can transfer multiple points for each waveform record. You can transfer a portion of the waveform or you can transfer the entire record. You can use the DATA:START and DATA:STOP commands to specify the first and last data points of the waveform record.

When transferring data into the oscilloscope, you must first specify the record length of the destination waveform record. You do this with the WFMInpre:NR_Pt

command. Next, specify the first data point within the waveform record. For example, when you set DATA:START to 1, data points will be stored starting with the first point in the record. The oscilloscope will ignore the value set by DATA:STOP when reading in data. It will stop reading data when there is no data to read or when it has reached the specified record length.

When transferring data from the oscilloscope, you must specify the first and last data points in the waveform record. Setting DATA:START to 1 and DATA:STOP to the record length will always return the entire waveform.

Waveform Data Locations and Memory Allocation

The DATA:SOURce command specifies the waveform source when transferring a waveform from the oscilloscope. You can only transfer one waveform at a time. Waveforms sent to the oscilloscope are always stored in one of the reference memory locations. Use the DATA:DESTination command to specify a reference memory location.

Waveform Preamble

Each waveform you transfer has an associated waveform preamble, which contains information such as horizontal scale, vertical scale, and the other settings in effect when the waveform was created. Refer to the individual WFMInpre and WFMOupre commands for information.

Scaling Waveform Data

Once you transfer the waveform data to the controller, you can convert the data points into voltage values for analysis using information from the waveform preamble.

Transferring Waveform Data from the Oscilloscope

You can transfer waveforms from the oscilloscope to an external controller using the following sequence:

1. Select the waveform source(s) using DATA:SOURce.
2. Specify the waveform data format using DATA:ENCdg.
3. Specify the number of bytes per data point using WFMOupre:BYT_Nr.
4. Specify the portion of the waveform that you want to transfer using DATA:START and DATA:STOP.
5. Transfer waveform preamble information using the WFMOupre? query.
6. Transfer waveform data from the oscilloscope using the CURVe? query.

Transferring Waveform Data to the Oscilloscope

You can transfer waveforms to the oscilloscope from an external controller using the following sequence:

1. Specify the reference waveform using `DATA:DESTination`.
2. Specify the record length of the reference waveform using `WFMPre:NR_Pt`.
3. Specify the waveform data format using `WFMinpre:ENCdg`.
4. Specify the number of bytes per data point using `WFMinpre:BYT_Nr`.
5. Specify first data point in the waveform record using `DATA:START`.
6. Transfer waveform preamble information using `WFMinpre`.
7. Transfer waveform data to the oscilloscope using `CURVe`.

Table 2-35: Waveform Transfer Commands

Command	Description
<code>CURVe</code>	The command format transfers waveform data to the oscilloscope (reference waveform specified by <code>DATA:DESTination</code>) The query format transfers waveform data from oscilloscope specified by the <code>DATA:SOURce</code> command
<code>DATA</code>	Sets the format and location of the waveform data that is transferred with the <code>CURVe</code> Command Or returns the format and location of the waveform data that is transferred with the <code>CURVe?</code> command
<code>DATA:DESTination</code>	Sets or returns the reference waveform for storing waveform data sent to the oscilloscope
<code>DATA:ENCdg</code>	Sets or returns the format of outgoing waveform data
<code>DATA:SOURce</code>	Sets or returns the location of waveform data transferred from the oscilloscope
<code>DATA:START</code>	Sets or returns the starting point in waveform transfer
<code>DATA:STOP</code>	Sets or returns the ending data point in waveform transfer
<code>WAVFrm?</code>	Returns a branch query containing waveform data in either binary or ASCII format, waveform formatting data, and the location of the waveform data source
<code>WFMinpre?</code>	Returns the waveform formatting specification to be applied to the next incoming <code>CURVe</code> command data

Table 2-35: Waveform Transfer Commands (cont.)

Command	Description
WFMinpre:BIT_Nr	Sets or returns the number of bits per binary waveform point for the incoming waveform
WFMinpre:BN_Fmt	Sets or returns the format of binary data for the incoming waveform
WFMinpre:BYT_Nr	Sets or returns the data width for the incoming waveform
WFMinpre:BYT_Or	Sets or returns the byte order of waveform points for the incoming waveform
WFMinpre:ENCdg	Sets or returns the type of encoding for incoming waveform data
WFMinpre:NR_Pt	Sets or returns the number of points in the incoming waveform record
WFMinpre:PT_Fmt	Sets or returns the point format of incoming waveform data
WFMinpre:PT_Off	This query always returns a 0
WFMinpre:XINcr	Sets or returns the horizontal sampling interval between incoming waveform points
WFMinpre:XUNit	Sets or returns the horizontal units of the incoming waveform
WFMinpre:XZEro	Sets or returns the time of the first point in the incoming waveform
WFMinpre:YMUlt	Sets or returns the vertical scale factor, per digitizing level, of the incoming waveform points
WFMinpre:YOFf	Sets or returns the vertical position of the incoming waveform in digitizing levels
WFMinpre:YUNit	Sets or returns the vertical units of the incoming waveform
WFMinpre:YZEro	Sets or returns the vertical offset of the incoming waveform
WFMOupre?	Returns the waveform formatting data for the waveform specified by the DATA:SOURCE command
WFMOupre:BIT_Nr	Sets or returns the number of bits per waveform point that outgoing waveforms contain
WFMOupre:BN_Fmt	Sets or returns the format of binary data for the outgoing waveform
WFMOupre:BYT_Nr	Sets or returns the data width for the outgoing waveform
WFMOupre:BYT_Or	Sets or returns the byte order of waveform points for the outgoing waveform

Table 2-35: Waveform Transfer Commands (cont.)

Command	Description
WFMOutpre:ENCdg	Sets or returns the type of encoding for outgoing waveforms
WFMOutpre:FRACTIONal?	This query always returns a 0 if the waveform specified by DATA:SOURce is on or displayed
WFMOutpre:NR_Pt?	Returns the number of points for the waveform transmitted in response to a CURVe? query
WFMOutpre:PT_Fmt?	Returns the point format for the outgoing waveform
WFMOutpre:PT_Off?	This query always returns a 0 if the waveform specified by DATA:SOURce is on or displayed
WFMOutpre:PT_ORder?	This query always returns LINEAR
WFMOutpre:WFId?	Returns a string describing the acquisition parameters for the outgoing waveform
WFMOutpre:XINcr?	Returns the horizontal sampling interval for the outgoing waveform
WFMOutpre:XUNit?	Returns the horizontal units for the outgoing waveform
WFMOutpre:XZEro?	Returns the time of the first point in the outgoing waveform
WFMOutpre:YMUlt?	Returns the vertical scale factor per digitizing level for the outgoing waveform
WFMOutpre:YOFf?	Returns the vertical position in digitizing levels for the outgoing waveform
WFMOutpre:YUNit?	Returns the vertical units for the outgoing waveform
WFMOutpre:YZEro?	Returns the vertical offset for the outgoing waveform

Zoom Command Group

Use the commands in the Zoom Command Group to expand and position the waveform display horizontally, without changing the time base settings.

Table 2-36: Zoom Commands

Command	Description
ZOOM?	Returns the horizontal positioning and scaling of the zoom display
ZOOM:MODE	Sets or returns the zoom mode
ZOOM:ZOOM<x>?	Returns the current horizontal positioning and scaling of the zoom display

Table 2-36: Zoom Commands (cont.)

Command	Description
ZOOM:ZOOM<x>:FACTOR?	Returns the zoom factor of the zoom window. <x> can only be 1
ZOOM:ZOOM<x>:POSITION	Sets or returns the horizontal position of the zoom window in terms of 0 to 100% of the overview window. <x> can only be 1
ZOOM:ZOOM<x>:SCALE	Sets or returns the horizontal zoom scale of the zoom window. <x> can only be 1
ZOOM:ZOOM<x>:STATE	Specifies or returns a trace as zoomed, on or off. <x> can only be 1

Commands Listed in Alphabetical Order

ACQuire? (Query Only)

Returns the following current acquisition parameters:

- Stop after
- Acquisition state
- Mode
- Number of averages
- Sampling mode

Group Acquisition

Syntax ACQuire?

Related Commands [ACQuire:MODE](#), [ACQuire:NUMACq?](#), [ACQuire:NUMAVg](#), [ACQuire:STOPAfter](#)

ACQuire:MAGnivu

Sets or returns the MagniVu feature, which provides up to 32 times signal detail for fast viewing of short events. This feature is not recommended for slow data formats such as RS-232.

NOTE. *MagniVu channel sampling is available on MSO oscilloscopes only.*

Group Acquisition

Syntax ACQuire:MAGnivu {<NR1>|OFF|ON}
ACQuire:MAGnivu?

Arguments <NR1> = 0 disables the MagniVu feature; any other value turns this feature on.
ON enables the MagniVu feature.
OFF disables the MagniVu feature.

ACQuire:MAXSamplerate? (Query Only)

Returns the maximum real-time sample rate, which varies from model to model.

Group	Acquisition
Syntax	ACQuire:MAXSamplerate?
Examples	ACQUIRE:MAXSAMPLERATE? might return 2.5000E+9 in a DPO4034 indicating the maximum real-time sample rate is 2.5GS/s.

ACQuire:MODE

Sets or returns the acquisition mode of the oscilloscope for all live waveforms.

Waveforms are the displayed data point values taken from acquisition intervals. Each acquisition interval represents a time duration set by the horizontal scale (time per division). The oscilloscope sampling system always samples at the maximum rate, so the acquisition interval may include than one sample.

The acquisition mode (which you set using this ACQuire:MODE command) determines how the final value of the acquisition interval is generated from the many data samples.

Group	Acquisition
Syntax	ACQuire:MODE {SAMPle PEAKdetect HIREs AVERage ENVelope} ACQuire:MODE?
Related Commands	ACQuire:NUMAVg , CURVe

Arguments	<p>SAMPle specifies that the displayed data point value is the first sampled value that is taken during the acquisition interval. In sample mode, all waveform data has 8 bits of precision. You can request 16 bit data with a CURVe query but the lower-order 8 bits of data will be zero. SAMple is the default mode.</p> <p>PEAKdetect specifies the display of high-low range of the samples taken from a single waveform acquisition. The high-low range is displayed as a vertical column that extends from the highest to the lowest value sampled during the acquisition interval. PEAKdetect mode can reveal the presence of aliasing or narrow spikes.</p> <p>HIREs specifies Hi Res mode where the displayed data point value is the average of all the samples taken during the acquisition interval. This is a form</p>
------------------	--

of averaging, where the average comes from a single waveform acquisition. The number of samples taken during the acquisition interval determines the number of data values that compose the average.

Average specifies averaging mode, in which the resulting waveform shows an average of **SAMPLE** data points from several separate waveform acquisitions. The oscilloscope processes the number of waveforms you specify into the acquired waveform, creating a running exponential average of the input signal. The number of waveform acquisitions that go into making up the average waveform is set or queried using the **ACQUIRE:NUMAVg** command.

Envelope specifies envelope mode, where the resulting waveform shows the **PEAKdetect** range of data points from every waveform acquisition.

Examples **ACQUIRE:MODE ENVELOPE** sets the acquisition mode to display a waveform that is an envelope of many individual waveform acquisitions.

ACQUIRE:MODE? might return **:ACQUIRE:MODE AVERAGE** indicating that the displayed waveform is the average of the specified number of waveform acquisitions.

ACQUIRE:NUMACq? (Query Only)

Returns the number of waveform acquisitions that have occurred since starting acquisition with the **ACQUIRE:STATE:RUN** command. This value is reset to zero when any acquisition, horizontal, or vertical arguments that affect the waveform are changed. The maximum number of acquisitions that can be counted is $2^{32} - 1$.

Group Acquisition

Syntax **ACQUIRE:NUMACq?**

Related Commands [ACQUIRE:STATE](#)

Returns **ACQUIRE:NUMACq?** might return **:ACQUIRE:NUMACQ 350** indicating that 350 acquisitions have occurred since executing an **ACQUIRE:STATE RUN** command.

ACQUIRE:NUMAVg

Sets or returns the number of waveform acquisitions that make up an averaged waveform. Use the **ACQUIRE:MODE** command to enable the Average mode. Sending this command is equivalent to turning a multipurpose knob to enter the number of waveform acquisitions to average.

Group	Acquisition
Syntax	ACQuire:NUMAVg <NR1> ACQuire:NUMAVg?
Related Commands	ACQuire:MODE
Arguments	<NR1> is the number of waveform acquisitions to average. The range of values is from 2 to 512 in powers of two.
Examples	<p>ACQUIRE:NUMAVG 16 specifies that 16 waveform averages will be performed before exponential averaging starts.</p> <p>ACQUIRE:NUMAVG? might return :ACQUIRE:NUMAVG 64 indicating that there are 64 acquisitions specified for averaging.</p>

ACQuire:STATE

Starts or stops acquisitions. When state is set to ON or RUN, a new acquisition will be started. If the last acquisition was a single acquisition sequence, a new single sequence acquisition will be started. If the last acquisition was continuous, a new continuous acquisition will be started.

If RUN is issued in the middle of completing a single sequence acquisition (for example, averaging or enveloping), the acquisition sequence is restarted, and any accumulated data is discarded. Also, the oscilloscope resets the number of acquisitions. If the RUN argument is issued while in continuous mode, acquisition continues.

Group	Acquisition
Syntax	ACQuire:STATE {OFF ON RUN STOP <NR1>} ACQuire:STATE?
Related Commands	ACQuire:STOPAfter
Arguments	<p>OFF stops acquisitions.</p> <p>STOP stops acquisitions.</p> <p>ON starts acquisitions.</p> <p>RUN starts acquisitions.</p>

<NR1> = 0 stops acquisitions; any other value starts acquisitions.

- Examples** `ACQUIRE:STATE RUN` starts the acquisition of waveform data and resets the count of the number of acquisitions.
- `ACQUIRE:STATE?` might return `:ACQUIRE:STATE 0` indicating that the acquisition is stopped.

ACQUIRE:STOPAfter

Sets or returns whether the oscilloscope continually acquires acquisitions or acquires a single sequence.

Group Acquisition

Syntax `ACQUIRE:STOPAfter {RUNSTOP|SEQUENCE}`
`ACQUIRE:STOPAfter?`

Related Commands [ACQUIRE:STATE](#)

Arguments `RUNSTOP` specifies that the oscilloscope will continually acquire data, if [ACQUIRE:STATE](#) is turned on.

`SEQUENCE` specifies that the next acquisition will be a single-sequence acquisition.

Examples `ACQUIRE:STOPAFTER RUNSTOP` sets the oscilloscope to continually acquire data.

`ACQUIRE:STOPAFTER?` might return `:ACQUIRE:STOPAFTER SEQUENCE` indicating that the next acquisition the oscilloscope makes will be of the single-sequence type.

Alias

Sets or returns the state of alias functionality. Use Alias commands to define new commands as a sequence of standard commands. You may find this useful when repeatedly using the same commands to perform certain tasks like setting up measurements. Aliases are similar to macros but do not include the capability to substitute parameters into alias bodies.

To use Alias commands, first define the alias, then turn on the alias state.

Group Alias

Syntax	<p>ALIAS {OFF ON <NR1>}</p> <p>ALIAS?</p>
Related Commands	<p>ALIAS:DEFine</p> <p>ALIAS[:STATE]</p>
Arguments	<p>OFF turns alias expansion off. If a defined alias is sent when ALIAS is off, a command error (110) will be generated.</p> <p>ON turns alias expansion on. When a defined alias is received, the specified command sequence is substituted for the alias and executed.</p> <p><NR1> = 0 disables alias mode; any other value enables alias mode.</p>
Examples	<p>ALIAS ON turns the alias feature on. When a defined alias is received, the specified command sequence is substituted for the alias and executed.</p> <p>ALIAS? might return :ALIAS 1 indicating that the alias feature is on.</p>

ALIAS:CATALOG? (Query Only)

Returns a list of the currently defined alias labels, separated by commas. If no aliases are defined, the query returns the string "".

Group	Alias
Syntax	ALIAS:CATALOG?
Examples	<p>ALIAS:CATALOG? might return the string :ALIAS:CATALOG "SETUP1", "TESTMENU1", "DEFAULT" showing that there are three aliases named SETUP1, TESTMENU1, and DEFAULT.</p>

ALIAS:DEFine

Assigns a sequence of program messages to an alias label. These messages are then substituted for the alias whenever it is received as a command or query, provided that ALIAS:STATE has been turned on. The query form of this command returns the definitions of a selected alias.

NOTE. Attempting to give two aliases the same name causes an error. To give a new alias the name of an existing alias, the existing alias must first be deleted.

Group	Alias
Syntax	<code>ALias:DEFine <QString><,>{<QString> <Block>}</code> <code>ALias:DEFine? <QString></code>
Related Commands	ALias[:STATE]
Arguments	<p>The first <QString> is the alias label.</p> <p>This label cannot be a command name. Labels must start with a letter and can contain only letters, numbers, and underscores; other characters are not allowed. The label must be less than or equal to 12 characters.</p> <p>The second<QString> or <Block> is a complete sequence of program messages.</p> <p>The messages can contain only valid commands that must be separated by semicolons and must follow all rules for concatenating commands. The sequence must be less than or equal to 256 characters.</p>
Examples	<pre>ALIAS:DEFINE "ST1"," :RECALL:SETUP 5; :AUTOSET EXECUTE; :SELECT:CH1 ON" defines an alias named "ST1" that sets up the oscilloscope.</pre> <pre>ALIAS:DEFINE? "ST1" returns :ALIAS:DEFINE "ST1",#246 :RECALL:SETUP 5; :AUTOSET EXECUTE; :SELECT:CH1 ON</pre>

ALias:DELEte (No Query Form)

Removes a specified alias and is identical to ALias:DELEte:NAME. An error message is generated if the named alias does not exist.

Group	Alias
Syntax	<code>ALias:DELEte <QString></code>
Related Commands	*ESR? , ALias:DELEte:ALL
Arguments	<p><QString> is the name of the alias to be removed. Using <code>ALias:DELEte</code> without specifying an alias causes an execution error. <QString> must be a previously defined value.</p>

Examples `ALIAS:DELETE "SETUP1"` deletes the alias named SETUP1.

Alias:DELEte:ALL (No Query Form)

Deletes all existing aliases.

Group Alias

Syntax `ALIAS:DELEte:ALL`

Related Commands [ALIAS:DELEte](#), [ALIAS:DELEte\[:NAME\]](#)

Examples `ALIAS:DELETE:ALL` deletes all existing aliases.

Alias:DELEte[:NAME] (No Query Form)

Removes a specified alias. This command is identical to [ALIAS:DELEte](#)

Group Alias

Syntax `ALIAS:DELEte[:NAME] <QString>`

Arguments `<QString>` is the name of the alias to remove. Using `ALIAS:DELEte[:NAME]` without specifying an alias causes an execution error. `<QString>` must be an existing alias.

Examples `ALIAS:DELETE[:NAME] "STARTUP"` deletes the alias named STARTUP.

Alias[:STATE]

Turns aliases on or off. This command is identical to the [ALIAS](#) command.

Group Alias

Syntax `ALIAS[:STATE] {<NR1>|OFF|ON}`
`ALIAS[:STATE]?`

Arguments	OFF or <NR1> = 0 turns alias expansion off. If a defined alias is sent when ALIAS:STATE is OFF, a command error (102) is generated. ON or <NR1>0 turns alias expansion on. When a defined alias is received, the specified command sequence is substituted for the alias and executed.
Examples	ALIAS[:STATE] OFF turns the command alias feature off. ALIAS[:STATE]? returns 0 when the alias feature is off.

ALLEV? (Query Only)

Prompts the oscilloscope to return all events and their messages (delimited by commas), and removes the returned events from the Event Queue. Use the *ESR? query to enable the events to be returned. This command is similar to repeatedly sending *EVMsg? queries to the oscilloscope.

Group	Status and Error
Syntax	ALLEV?
Related Commands	*ESR? , EVMsg?
Examples	ALLEV? might return :ALLEV 2225,"Measurement error, No waveform to measure; "420,"Query UNTERMINATED;"

AUTOSet (No Query Form)

Sets the vertical, horizontal, and trigger controls of the oscilloscope to automatically acquire and display the selected waveform.

Group	Miscellaneous
Syntax	AUTOSet {EXECute UNDo}
Arguments	EXECute autosets the displayed waveform. UNDo restores the oscilloscope settings to those present prior to the autoset execution.

Examples AUTOSET EXECUTE vertical, horizontal, and trigger controls of the oscilloscope to automatically acquire and display the selected waveform.

AUTOSet:ENABle

Enables or disables the autoset feature. This is useful for classroom purposes where the instructor wants the students to achieve the desired instrument settings without the benefit of the autoset feature. This setting is not saved in setup files or SET? or *LRN? queries. The default state is 1 (autoset enabled).

Group Miscellaneous

Syntax AUTOSet:ENABle {OFF|ON|0|1}
AUTOSet:ENABle?

Arguments OFF or 0 disables autoset.
ON or 1 enables autoset.

Examples AUTOSET:ENABLE 1 enables the front-panel **Autoset** button.
AUTOSET:ENABLE? might return AUTOSET:ENABLE 0 indicating that the autoset feature is disabled.

AUXin? (Query Only)

Returns all auxiliary input parameters.

Group Vertical

Syntax AUXin?

AUXin:PROBe

Returns all information concerning the probe attached to auxiliary input.

Group Vertical

Syntax AUXin:PROBe
AUXin:PROBe?

Examples `AUXIN:PROBE?` might return `AUXIN:PROBE:ID:TYPE "No Probe Detected";SERNUMBER "";:AUXIN:PROBE:UNITS "";RESISTANCE 1.0000E+6` giving information about the probe attached to the AUX In input.

AUXin:PRObe:AUTOZero (No Query Form)

Sets the TekVPI probe attached to the Aux In input to autozero. The oscilloscope will ignore this command if the Auxiliary input does not have a TekVPI probe connected to it.

Group Vertical

Syntax `AUXin:PRObe:AUTOZero {EXECute}`

Arguments `EXECute` sets the probe to autozero.

Examples `AUXin:PROBE:AUTOZERO EXECUTE`

AUXin:PRObe:COMMAND (No Query Form)

Sets the state of the probe control specified with the first argument to the state specified with the second argument. The commands and states are unique to the attached probe type. Only certain VPI probes support this command. See the probe documentation for how to set these string arguments.

Group Vertical

Syntax `AUXin:PRObe:COMMAND <QString>, <QString>`

Arguments `<QString>` are quoted strings specifying the probe command and value to set in the probe attached to the auxiliary input.

Examples `AUXIN:PROBE:COMMAND "OUTPUT", "ON"` turns the output of a Tektronix VPI-DPG probe on.

`AUXIN:PROBE:COMMAND "MODE", "4-4V1MHZ"` sets a Tektronix VPI-DPG probe to the 4-4V1MHz mode.

`AUXIN:PROBE:COMMAND?"MODE"` might return `AUXIN:PROBE:COMMAND "MODE", "4-4V1MHZ"`.

AUXin:PRObe:DEGAUss (No Query Form)

Starts a degauss/autozero cycle on a TekVPI current probe attached to the Aux In input. If you send this command to a probe that does not support this function, it is ignored

Group Vertical

Syntax AUXin:PRObe:DEGAUss {EXECute}

Arguments EXECute starts a probe degauss cycle.

Examples AUXin:PROBE:DEGAUSS EXECUTE degausses the probe attached to the Aux In input.

AUXin:PRObe:DEGAUss:STATE? (Query Only)

Returns the state of the probe degauss (NEEDED, RECOMMENDED, PASSED, FAILED, RUNNING). The command will return PASSED for probes that do not support degauss operations.

Group Vertical

Syntax AUXin:PRObe:DEGAUSS:STATE?

Examples AUXin:PROBE:DEGAUSS:STATE? might return:
AUXin:PROBE:DEGAUSS:STATE PASSED indicating that the probe has been degaussed.

AUXin:PRObe:FORCEDRange

Changes or returns the range on a TekVPI probe attached to the Aux In input.

Group Vertical

Syntax AUXin:PRObe:FORCEDRange <NR3>
AUXin:PRObe:FORCEDRange?

Arguments <NR3> is the probe range, which is probe dependent.

AUXin:PRObe:GAIN

Sets or returns the gain factor of a probe that is attached to the Aux In input.

Group Vertical

Syntax AUXin:PRObe:GAIN <NR3>
AUXin:PRObe:GAIN?

Arguments <NR3> is the probe gain, which is probe dependent.

Examples AUXin:PROBE:GAIN? might return :AUXin:PROBE:GAIN 100.0000E-3 indicating that the attached 10x probe delivers 0.1 V to the Aux In BNC for every 1.0 V applied to the probe input.

AUXin:PRObe:ID:SERnumber? (Query Only)

Returns the serial number of the probe that is attached to the auxiliary input.

Group Vertical

Syntax AUXin:PRObe:ID:SERnumber?

AUXin:PRObe:ID:TYPE? (Query Only)

Returns the type of probe that is attached to the auxiliary input.

Group Vertical

Syntax AUXin:PRObe:ID:TYPE?

AUXin:PRObe:RESistance? (Query Only)

Returns the resistance of the probe attached to the front panel Aux In connector.

Group	Vertical
Syntax	AUXin:PRObe:RESistance?
Examples	AUXin:PRObe:RESistance? might return :AUXin:PROBE:RESISTANCE 1.0000E+6 indicating that the input resistance of the probe attached to the front panel Aux In connector is 1 MΩ.
<hr/> <i>NOTE. This query will return 0.0 if no probe is attached or the attached probe does not report the input resistance.</i> <hr/>	

AUXin:PRObe:SIGnal

This command changes the input bypass setting on VPI probes that support input bypass, for example the TCP0001. If sent to a probe that does not support input bypass, it is ignored.

Group	Vertical
Syntax	AUXin:PRObe:SIGna] {BYPass PASS} AUXin:PRObe:SIGna]?
Arguments	ByPass sets the probe to Bypass mode. PASS sets the probe to Pass mode.

AUXin:PRObe:UNIts? (Query Only)

Returns a string describing the units of measure of the probe attached to the Aux In input.

Group	Vertical
Syntax	AUXin:PRObe:UNIts?
Examples	AUXin:PROBE:UNITS? might return: :AUXin:PROBE:UNITS "V" indicating that the units of measure for the attached probe are volts.

BUS? (Query Only)

Returns the parameters for each bus. These parameters affect either the Serial Trigger Setup or the Bus Display.

Conditions This command requires a serial bus analysis module.

Group Bus

Syntax BUS?

BUS:B<x>:AUDIO:BITDelay

Sets or returns the number of delay bits for the AUDIO bus.

NOTE. This command is applicable only for TDM audio bus type
(BUS:B<x>:AUDIO:TYPE TDM)

Conditions This command requires DPO4AUDIO application module.

Group Bus

Syntax BUS:B<x>:AUDIO:BITDelay <NR1>
BUS:B<x>:AUDIO:BITDelay?

Arguments <NR1> specifies the number of delay bits.

Examples BUS:B1:AUDIO:BITDELAY 2 sets the bit delay to 2.

BUS:B1:AUDIO:BITDELAY? might return :BUS:B1:AUDIO:BITDELAY 1
indicating that the number of delay bits is 1.

BUS:B<x>:AUDIO:BITOrder

Sets or returns the bit order for the AUDIO bus.

Conditions This command requires DPO4AUDIO application module.

Group	Bus
Syntax	<code>BUS:B<x>:AUDIO:BITOrder {MSB LSB}</code> <code>BUS:B<x>:AUDIO:BITOrder?</code>
Arguments	MSB specifies that the most significant bit will be expected first in the order. LSB specifies that the least significant bit will be expected first in the order.
Examples	<code>BUS:B1:AUDIO:BITORDER LSB</code> sets the bit order to LSB. <code>BUS:B1:AUDIO:BITORDER?</code> might return <code>:BUS:B1:AUDIO:BITORDER MSB</code> indicating that the MSB is first in the bit order.

BUS:B<x>:AUDIO:CHANnel:SIZE

Sets or returns the number of bits per channel for the AUDIO bus.

NOTE. This command is applicable only for TDM audio bus type
(`BUS:B<x>:AUDIO:TYPE TDM`)

Conditions	This command requires DPO4AUDIO application module.
Group	Bus
Syntax	<code>BUS:B<x>:AUDIO:CHANnel:SIZE <NR1></code> <code>BUS:B<x>:AUDIO:CHANnel:SIZE?</code>
Arguments	<NR1> specifies the number of bits per channel.
Examples	<code>BUS:B1:AUDIO:CHANNEL:SIZE 8</code> sets the number of bits per channel to 8. <code>BUS:B1:AUDIO:CHANNEL:SIZE?</code> might return <code>:BUS:B1:AUDIO:CHANNEL:SIZE 24</code> indicating that the number of bits per channel is 24.

BUS:B<x>:AUDIO:CLOCK:POLarity

Sets or returns the clock polarity for the AUDIO bus.

Conditions	This command requires DPO4AUDIO application module.
Group	Bus
Syntax	<code>BUS:B<x>:AUDio:CLOCK:POLArity {FALL RISe}</code> <code>BUS:B<x>:AUDio:CLOCK:POLArity?</code>
Arguments	FALL sets falling edge as the clock polarity. RISe sets rising edge as the clock polarity.
Examples	<code>BUS:B1:AUDIO:CLOCK:POLARITY Fall</code> sets the clock polarity to Fall. <code>BUS:B1:AUDIO:CLOCK:POLARITY?</code> might return <code>:BUS:B1:AUDIO:CLOCK:POLARITY RISE</code> indicating that the clock polarity is set to Rise.

BUS:B<x>:AUDio:CLOCK:SOURce

Sets or returns the clock source waveform for the AUDIO bus.

Conditions	This command requires DPO4AUDIO application module.
Group	Bus
Syntax	<code>BUS:B<x>:AUDio:CLOCK:SOURce {CH1 CH2 CH3 CH4 D0 D1 D2 D3 D4 D5 D6 D7 D8 D9 D10 D11 D12 D13 D14 D15}</code> <code>BUS:B<x>:AUDio:CLOCK:SOURce?</code>
Arguments	CH1–CH4 or D0–D15 specifies the clock source for the audio bus.
Examples	<code>BUS:B1:AUDIO:CLOCK:SOURCE D1</code> sets D1 as the clock source for the audio bus. <code>BUS:B1:AUDIO:CLOCK:SOURCE?</code> might return <code>:BUS:B1:AUDIO:CLOCK:SOURCE CH1</code> indicating that the clock source is set to CH1.

BUS:B<x>:AUDio:DATa:POLarity

Sets or returns the data polarity for the AUDIO bus.

Conditions This command requires DPO4AUDIO application module.

Group Bus

Syntax BUS:B<x>:AUDio:DATa:POLarity {NORMa1|INVERTed}
BUS:B<x>:AUDio:DATa:POLarity?

Arguments NORMa1 specifies positive data polarity for the audio bus.
INVERTed specifies negative data polarity for the audio bus.

Examples BUS:B1:AUDIO:DATA:POLARITY INVERTed sets the data polarity to Inverted.
BUS:B1:AUDIO:DATA:POLARITY? might return
:BUS:B1:AUDIO:DATA:POLARITY NORMAL indicating that the data polarity is set to Normal.

BUS:B<x>:AUDio:DATa:SIZE

Sets or returns the number of bits per word for the AUDIO bus.

NOTE. The number of bits specified for this command must be always less than or equal to the number of bits per channel (BUS:B<x>:AUDio:CHANnel:SIZE)

Conditions This command requires DPO4AUDIO application module.

Group Bus

Syntax BUS:B<x>:AUDio:DATa:SIZE <NR1>
BUS:B<x>:AUDio:DATa:SIZE?

Arguments NR1 specifies the number of bits per word.

Examples `BUS:B1:AUDIO:DATA:SIZE 8` sets the number of bits per word to 8.

`BUS:B1:AUDIO:DATA:SIZE?` might return `:BUS:B1:AUDIO:DATA:SIZE 24` indicating that the number of bits per word is set to 24.

BUS:B<x>:AUDio:DATa:SOUrce

Sets or returns the data source waveform for the AUDIO bus.

Conditions This command requires DPO4AUDIO application module.

Group Bus

Syntax `BUS:B<x>:AUDio:DATa:SOUrce {CH1|CH2|CH3|CH4|D0|D1|D2|D3|D4|D5|D6|D7|D8|D9|D10|D11|D12|D13|D14|D15}`
`BUS:B<x>:AUDio:DATa:SOUrce?`

Arguments CH1–CH4 or D0–D15 specifies the channel to use for data source for the audio bus.

Examples `BUS:B1:AUDIO:DATA:SOURCE D1` sets the data source to D1.

`BUS:B1:AUDIO:DATA:SOURCE?` might return `:BUS:B1:AUDIO:DATA:SOURCE CH3` indicating that the data source is set to CH3.

BUS:B<x>:AUDio:DISplay:FORMat

Sets or returns the display format for the AUDIO bus.

Conditions This command requires DPO4AUDIO application module.

Group Bus

Syntax `BUS:B<x>:AUDio:DISplay:FORMat {BINary|HEXadecimal|SIGNEDDECimal}`
`BUS:B<x>:AUDio:DISplay:FORMat?`

Arguments `BINary` specifies a binary data display.

`HEXadecimal` specifies a hexadecimal data display.

SIGNEDDECIMAL specifies a signed decimal data display.

Examples `BUS:B1:AUDIO:DISPLAY:FORMAT BINARY` sets the display format to Binary.
 `BUS:B1:AUDIO:DISPLAY:FORMAT?` might return
 `:BUS:B1:AUDIO:DISPLAY:FORMAT SIGNEDDECIMAL` indicating that the
 display format is set to signed decimal.

BUS:B<x>:AUDIO:FRAME:SIZE

Sets or returns the number of channels in each frame for the AUDIO bus.

NOTE. *This command is applicable only for TDM audio bus type
 (BUS:B<x>:AUDIO:TYPE TDM)*

Conditions This command requires DPO4AUDIO application module.

Group Bus

Syntax `BUS:B<x>:AUDIO:FRAME:SIZE <NR1>`
 `BUS:B<x>:AUDIO:FRAME:SIZE?`

Arguments `<NR1>` specifies the number of channels in each frame.

Examples `BUS:B1:AUDIO:FRAME:SIZE 2` sets the frame size to 2.
 `BUS:B1:AUDIO:FRAME:SIZE?` might return `:BUS:B1:AUDIO:FRAME:SIZE 8`
 indicating that the number of channels in each frame is set to 8.

BUS:B<x>:AUDIO:FRAMESync:POLarity

Sets or returns the frame sync polarity for the AUDIO bus.

Conditions This command requires DPO4AUDIO application module.

Group Bus

Syntax `BUS:B<x>:AUDIO:FRAMESync:POLarity {FALL|RISE}`
 `BUS:B<x>:AUDIO:FRAMESync:POLarity?`

Arguments	FALL specifies the falling edge as the frame sync polarity. RISe specifies the rising edge as the frame sync polarity.
Examples	BUS:B1:AUDIO:FRAMESYNC:POLARITY FALL sets the falling edge for frame sync polarity. BUS:B1:AUDIO:FRAMESYNC:POLARITY? might return :BUS:B1:AUDIO:FRAMESYNC:POLARITY RISe indicating that the polarity is set to Rise.

BUS:B<x>:AUDio:FRAMESync:SOUrce

Sets or returns the frame sync source waveform for the AUDIO bus.

Conditions	This command requires DPO4AUDIO application module.
Group	Bus
Syntax	BUS:B<x>:AUDio:FRAMESync:SOUrce {CH1 CH2 CH3 CH4 D0 D1 D2 D3 D4 D5 D6 D7 D8 D9 D10 D11 D12 D13 D14 D15} BUS:B<x>:AUDio:FRAMESync:SOUrce?
Arguments	CH1–CH4 or D0–D15 specifies the channel to use as the frame sync source.
Examples	BUS:B1:AUDIO:FRAMESYNC:SOURCE CH1 sets CH1 as the frame sync source. BUS:B1:AUDIO:FRAMESYNC:SOURCE? might return :BUS:B1:AUDIO:FRAMESYNC:SOURCE Ch2 indicating that the source is set to Ch2.

BUS:B<x>:AUDio:TYPE

Sets or returns the audio format (type) for the AUDIO bus.

Conditions	This command requires DPO4AUDIO application module.
Group	Bus

Syntax `BUS:B<x>:AUDio:TYPe {I2S|LJ|RJ|TDM}`
 `BUS:B<x>:AUDio:TYPe?`

Arguments I2S specifies I2S audio format.
 LJ specifies left-justified audio format.
 RJ specifies right justified audio format.
 TDM specifies time-division multiplexing audio format.

Examples `BUS:B1:AUDIO:TYPE RJ` sets right-justified as the audio format.
 `BUS:B1:AUDIO:TYPE?` might return `:BUS:B1:AUDIO:TYPE I2S` indicating that the audio format is set to I2S.

BUS:B<x>:AUDio:WORDSel:POLarity

Sets or returns the word select polarity for the AUDIO bus.

Conditions This command requires DPO4AUDIO application module.

Group Bus

Syntax `BUS:B<x>:AUDio:WORDSel:POLarity {NORMal|INVERTed}`
 `BUS:B<x>:AUDio:WORDSel:POLarity?`

Arguments `NORMal` specifies positive WORDSel polarity.
 `INVERTed` specifies negative WORDSel polarity.

Examples `BUS:B1:AUDIO:WORDSEL:POLARITY NORMal` sets normal as the word select polarity.
 `BUS:B1:AUDIO:WORDSEL:POLARITY?` might return `:BUS:B1:AUDIO:WORDSEL:POLARITY NORMAL` indicating that the word select polarity is set to normal.

BUS:B<x>:AUDio:WORDSel:SOURce

Sets or returns the word select source waveform for the AUDIO bus.

Conditions This command requires DPO4AUDIO application module.

Group	Bus
Syntax	<code>BUS:B<x>:AUDIO:WORDSEL:SOURce {CH1 CH2 CH3 CH4 D0 D1 D2 D3 D4 D5 D6 D7 D8 D9 D10 D11 D12 D13 D14 D15} BUS:B<x>:AUDIO:WORDSEL:SOURce?</code>
Arguments	CH1–CH4 specifies the channel to use as the word select source. D0–D15 specifies the digital channel to use as the word select source.
Examples	<code>BUS:B1:AUDIO:WORDSEL:SOURCE CH1</code> sets CH1 as the word select source. <code>BUS:B1:AUDIO:WORDSEL:SOURCE?</code> might return <code>:BUS:B1:AUDIO:WORDSEL:SOURCE CH2</code> indicating that the word select source is set to CH2.

BUS:B<x>:CAN:BITRate

Sets or returns the bit rate for CAN bus <x>, where x is the bus number.

Conditions	This command requires a DPO4AUTO application module.
Group	Bus
Syntax	<code>BUS:B<x>:CAN:BITRate <NR1> {RATE10K RATE20K RATE33K RATE37K RATE50K RATE62K RATE83K RATE92K RATE100K RATE125K RATE250K RATE500K RATE800K RATE1M} BUS:B<x>:CAN:BITRate?</code>
Arguments	<NR1> is the bit rate. The instrument supports bit rates at 10 bps intervals. You can enter any positive integer, and the instrument will coerce the value to the closest supported bit rate.
Returns	The query always returns the numerical bit rate value.
Examples	<code>bus:b1:can:bitrate rate400k</code> sets the CAN bit rate to 400K. <code>bus:b1:can:bitrate?</code> might return <code>:BUS:B1:CAN:BITRATE RATE800K</code> indicating the bit rate is set to 800K.

BUS:B<x>:CAN:PRObe

Sets or returns the probing method to probe CAN bus <x>, where x is the bus number.

Conditions This command requires a DPO4AUTO application module.

Group Bus

Syntax BUS:B<x>:CAN:PRObe {CANH|CANL|RX|TX|DIFFerential}
BUS:B<x>:CAN:PRObe?

Arguments CANH specifies the single-ended CANH signal, as specified by the CAN standard.
CANL specifies the single-ended CANL signal, as specified by the CAN standard.
RX specifies the receive signal on the bus side of the CAN transceiver.
TX specifies the transmit signal.
DIFFerential specifies the differential CAN signal.

BUS:B<x>:CAN:SAMPLEpoint

Sets or returns the sampling point during each bit period for bus <x>, where x is the bus number

Conditions This command requires a DPO4AUTO application module.

Group Bus

Syntax BUS:B<x>:CAN:SAMPLEpoint <NR1>
BUS:B<x>:CAN:SAMPLEpoint?

Arguments <NR1> is the sample point in percent. Values are limited to 25, 30, ... 70, 75.

BUS:B<x>:CAN:SOURce

Sets or returns the CAN bus data source for bus <x>, where x is the bus number.

Conditions This command requires a DPO4AUTO application module.

Group	Bus
Syntax	<code>BUS:B<x>:CAN:SOURce {CH1 CH2 CH3 CH4 D0 D1 D2 D3 D4 D5 D6 D7 D8 D9 D10 D11 D12 D13 D14 D15}</code> <code>BUS:B<x>:CAN:SOURce?</code>
Arguments	CH1–CH4 is the analog channel to use as the data source. D0–D15 is the digital channel to use as the data source.

BUS:B<x>:DISplay:FORMAT

Sets or returns the display format for the numerical information in the bus waveform , where <x> is the bus number. The display formats supported depend on the [BUS:B<x>:TYPE](#).

Table 2-37: Supported display formats

Bus type	Display format
Parallel	BiNary HEXadecimal
I ² C	BiNary HEXadecimal
SPI	BiNary HEXadecimal
CAN	BiNary HEXadecimal
RS232C	BiNary HEXadecimal ASCII
Audio	BiNary HEXadecimal ASCII SIGNEDDECimal ¹
LIN	BiNary HEXadecimal MiXed
FlexRay	BiNary HEXadecimal MiXed
USB	BiNary HEXadecimal MiXed MIXED2

¹ SIGNEDDECimal is set using the audio application [BUS:B<x>:AUDio:DISplay:FORMAT](#) command.

Conditions This command requires a serial bus analysis module.

Group Bus

Syntax `BUS:B<x>:DISplay:FORMAT {BiNary|HEXadecimal|ASCII|MiXed|MIXED2}`
`BUS:B<x>:DISplay:FORMAT?`

Related Commands [BUS:B<x>:TYPE](#)

Arguments	BINary – All values are displayed in binary.
	HEXadecimal – All values are displayed in hexadecimal.
	ASCII – All values are displayed in an ASCII format, for RS-232 only.
	MIXed – Values are displayed in a mixture of hexadecimal, binary, and decimal, depending on the field.
	MIXED2 – Values are displayed in a mixture of hexadecimal, binary, decimal and ASCII, depending on the field.

BUS:B<x>:DISplay:TYPe

Sets or returns the display type for bus <x>, where x is the bus number. You can set up the bus to display the protocol information, the logic waveforms that comprise the bus, or both.

Conditions	This command requires a serial bus analysis module.
-------------------	---

Group	Bus
--------------	-----

Syntax	BUS:B<x>:DISplay:TYPe {BUS BOTH} BUS:B<x>:DISplay:TYPe?
---------------	--

Arguments	BUS displays the bus waveforms only.
	BOTH displays both the bus and logic waveforms.

BUS:B<x>:FLEXray:BITRate

Sets or returns the bit rate for FLEXRAY.

Group	Bus
--------------	-----

Syntax	BUS:B<x>:FLEXray:BITRate <NR1> BUS:B<x>:FLEXray:BITRate?
---------------	---

Arguments	<NR1> specifies the FLEXRAY bit rate. You can enter any positive integer, and the instrument will coerce the value to the closest supported bit rate.
------------------	---

Examples `BUS:B1:FLEXRAY:BITRATE 9600` sets the FLEXRAY bit rate to 9600 bits per second.

`BUS:B1:FLEXRAY:BITRATE?` might return `BUS:B1:FLEXRAY:BITRATE 10000000` indicating the FLEXRAY bit rate is 10,000,000 bits per second.

BUS:B<x>:FLEXray:CHannel

Sets or returns the FLEXRAY ID format.

Group Bus

Syntax `BUS:B<x>:FLEXray:CHannel {A|B}`
`BUS:B<x>:FLEXray:CHannel?`

Arguments A sets the FLEXRAY id format to channel A.
 B sets the FLEXRAY id format to channel B.

Examples `BUS:B1:FLEXRAY:CHANNEL B` sets the FLEXRAY id format to channel B.
`BUS:B1:FLEXRAY:CHANNEL?` might return `BUS:B1:FLEXRAY:CHANNEL A` indicating that FLEXRAY id format is channel A.

BUS:B<x>:FLEXray:SIGnal

Sets or returns the FLEXRAY standard.

Group Bus

Syntax `BUS:B<x>:FLEXray:SIGnal {BDIFFBP|BM|TXRX}`
`BUS:B<x>:FLEXray:SIGnal?`

Arguments BDIFFBP sets the FLEXRAY standard to BDIFFBP.
 BM sets the FLEXRAY standard to BM.
 TXRX sets the FLEXRAY standard to TXRX.

Examples `BUS:B1:FLEXRAY:SIGNAL BM` sets the FLEXRAY standard is BM.
`BUS:B1:FLEXRAY:SIGNAL?` might return `BUS:B1:FLEXRAY:SIGNAL BDIFFBP` indicating the FLEXRAY standard is BDIFFBP.

BUS:B<x>:FLEXray:SOUrce

Sets or returns the FLEXRAY data source.

Group Bus

Syntax `BUS:B<x>:FLEXray:SOUrce`
`{CH1|CH2|CH3|CH4|D0|D1|D2|D3|D4|D5|D6|D7|D8|D9|D10|D11|D12|D13|D14|D15}`
`BUS:B<x>:FLEXray:SOUrce?`

Arguments `CH<x>` sets the FLEXRAY source to channel x, where x is 1 to 4.
`D<x>` sets the FLEXRAY source to digital channel x, where x is 1 to 16.

Examples `BUS:B1:FLEXRAY:SOURCE CH4` sets the FLEXRAY source to channel 4.
`BUS:B1:FLEXRAY:SOURCE?` might return `BUS:B1:FLEXRAY:SOURCE CH1` indicating the FLEXRAY source is channel 1.

BUS:B<x>:I2C:ADDReSS:RWINClude

Sets and returns whether the read/write bit is included in the address.

Group Bus

Syntax `BUS:B<x>:I2C:ADDReSS:RWINClude {<NR1>|OFF|ON}`
`BUS:B<x>:I2C:ADDReSS:RWINClude?`

Arguments `<NR1> = 0` does not include the read/write bit in the address; any other value includes the read/write bit in the address..
`OFF` does not include the read/write bit in the address.
`ON` includes the read/write bit in the address.

Examples `BUS:B1:I2C:ADDRESS:RWINCLUDE ON` includes the read/write bit in the address.

BUS:B1:I2C:ADDRESS:RWINCLUDE? might return
 BUS:B1:I2C:ADDRESS:RWINCLUDE 0 indicating the read/write bit is not
 included in the address.

BUS:B<x>:I2C{:CLOCK|:SCLK}:SOUrce

Sets or returns the I2C SCLK source for bus <x>, where x is the bus number.

Conditions This command requires a DPO4EMBD or DPO4COMP application module.

Group Bus

Syntax BUS:B<x>:I2C{:CLOCK|:SCLK}:SOUrce {CH1|CH2|CH3|CH4|
 D0|D1|D2|D3|D4|D5|D6|D7|D8|D9|D10|D11|D12|D13|D14|D15}
 BUS:B<x>:I2C{:CLOCK|:SCLK}:SOUrce?

Arguments CH1–CH4 specifies the analog channel to use as the I2C SCLK source.
 D0–D15 specifies the digital channel to use as the I2C SCLK source.

BUS:B<x>:I2C{:DATA|:SDATA}:SOUrce

Sets or returns the I2C SDATA source for bus <x>, where x is the bus number.

Conditions This command requires a DPO4EMBD application module.

Group Bus

Syntax BUS:B<x>:I2C{:DATA|:SDATA}:SOUrce {CH1|CH2|CH3|CH4|
 D0|D1|D2|D3|D4|D5|D6|D7|D8|D9|D10|D11|D12|D13|D14|D15}
 BUS:B<x>:I2C{:DATA|:SDATA}:SOUrce?

Arguments CH1–CH4 specifies the analog channel to use as the I2C SDATA source.
 D0–D15 specifies the digital channel to use as the I2C SCLK source.

BUS:B<x>:LABel

Sets or returns the waveform label for bus <x>, where x is the bus number
 1 through 4.

Group	Bus
Syntax	<code>BUS:B<x>:LABel <Qstring></code> <code>BUS:B<x>:LABel?</code>
Arguments	<code><Qstring></code> is an alphanumeric string of text, enclosed in quotes, that contains the text label information for bus <code><x></code> . The text string is limited to 30 characters.

BUS:B<x>:LIN:BITRate

Sets or returns the bit rate for LIN.

Group	Bus
Syntax	<code>BUS:B<x>:LIN:BITRate <NR1></code> <code>BUS:B<x>:LIN:BITRate?</code>
Arguments	<code><NR1></code> is the LIN bit rate. You can enter any positive integer, and the instrument will coerce the value to the closest supported bit rate.
Examples	<code>BUS:B1:LIN:BITRATE 9600</code> sets the bit rate 9600. <code>BUS:B1:LIN:BITRATE?</code> might return <code>BUS:B1:LIN:BITRATE 2400</code> indicating the bit rate is set to 2400.

BUS:B<x>:LIN:IDFOrmat

Sets or returns the LIN ID format.

Group	Bus
Syntax	<code>BUS:B<x>:LIN:IDFOrmat {NOPARity PARity}</code> <code>BUS:B<x>:LIN:IDFOrmat?</code>
Arguments	<code>NOPARity</code> sets the LIN id format to no parity. <code>PARity</code> sets the LIN id format to parity.

Examples `BUS:B1:LIN:IDFORMAT PARITY` sets the LIN id format to parity.

`BUS:B1:LIN:IDFORMAT?` might return `BUS:B1:LIN:IDFORMAT NOPARITY` indicating the LIN id format is no parity.

BUS:B<x>:LIN:POLARity

Sets or returns the LIN polarity.

Group Bus

Syntax `BUS:B<x>:LIN:POLARity {NORMal|INVerted}`
`BUS:B<x>:LIN:POLARity?`

Arguments `NORMal` specifies normal LIN polarity.
`INVerted` specifies inverted LIN polarity.

Examples `BUS:B1:LIN:POLARITY INVERTED` sets the LIN polarity to INVERTED..

`BUS:B1:LIN:POLARITY?` might return `BUS:B1:LIN:POLARITY NORMAL` indicating the LIN polarity is normal.

BUS:B<x>:LIN:SAMPLEpoint

Sets or returns the sample point (in %) at which to sample during each bit period.

Group Bus

Syntax `BUS:B<x>:LIN:SAMPLEpoint <NR1>`
`BUS:B<x>:LIN:SAMPLEpoint?`

Arguments `<NR1>` is the sample point (in %) at which to sample during each bit period.

Examples `BUS:B1:LIN:SAMPLEPOINT 10` sets the sample point is at 10% of the bit period

`BUS:B1:LIN:SAMPLEPOINT?` might return `BUS:B1:LIN:SAMPLEPOINT 50` indicating that the sample point is at 50% of the bit period

BUS:B<x>:LIN:SOURce

Sets or returns the LIN data source.

Group	Bus
Syntax	BUS:B<x>:LIN:SOURce {CH1 CH2 CH3 CH4 D0 D1 D2 D3 D4 D5 D6 D7 D8 D9 D10 D11 D12 D13 D14 D15} BUS:B<x>:LIN:SOURce?
Arguments	CH<x> specifies the LIN source channel where x is 1 to 4. D<x> specifies the LIN source channel where x is 1 to 16.
Examples	BUS:B1:LIN:SOURCE CH4 sets the LIN source to channel 4. BUS:B1:LIN:SOURCE? might return BUS:B1:LIN:SOURCE CH1 indicating the LIN source is channel 1.

BUS:B<x>:LIN:STANDard

Sets or returns the LIN standard.

Group	Bus
Syntax	BUS:B<x>:LIN:STANDard {V1X V2X MIXed} BUS:B<x>:LIN:STANDard?
Arguments	V1X sets the LIN standard to V1X. V2X sets the LIN standard to V2X MIXed sets the LIN standard to MIXED.
Examples	BUS:B1:LIN:STANDARD V1X sets the LIN standard is V1X. BUS:B1:LIN:STANDARD? might return BUS:B1:LIN:STANDARD V2X indicating the LIN standard is V2X.

BUS:B<x>:PARAllel:BIT<x>:SOUrce

Sets or returns the parallel bit source for B<x>, where x is the bus number and Bit<x> is the bit number.

Group Bus

Syntax BUS:B<x>:PARAllel:BIT<x>:SOUrce {CH1|CH2|CH3|CH4|
D0|D1|D2|D3|D4|D5|D6|D7|D8|D9|D10|D11|D12|D13|D14|D15}
BUS:B<x>:PARAllel:BIT<x>:SOUrce?

Arguments CH1–CH4 or D0–D15 specifies the bit source B<x>. BIT<x> specifies the bit number.

BUS:B<x>:PARAllel:CLOCK:EDGE

Sets or returns the parallel clock edge for bus <x>, where x is the bus number.

Group Bus

Syntax BUS:B<x>:PARAllel:CLOCK:EDGE {EITHer|RISing|FALLing}
BUS:B<x>:PARAllel:CLOCK:EDGE?

Arguments EITHer specifies either edge as the clock edge.
RISing specifies the rising edge as the clock edge.
FALLing specifies the falling edge as the clock edge.

BUS:B<x>:PARAllel:CLOCK:ISCLOCKed

Sets or returns the parallel bus clock function for bus <x>, where x is the bus number.

Group Bus

Syntax BUS:B<x>:PARAllel:CLOCK:ISCLOCKed {YES|NO}
BUS:B<x>:PARAllel:CLOCK:ISCLOCKed?

Arguments YES specifies that the Parallel bus is clocked.
NO specifies that the Parallel bus is not clocked.

BUS:B<x>:PARAllel:CLOCK:SOUrce

Sets or returns the Parallel bus source <x>, where x is the bus number.

Group Bus

Syntax BUS:B<x>:PARAllel:CLOCK:SOUrce {CH1|CH2|CH3|CH4|
D0|D1|D2|D3|D4|D5|D6|D7|D8|D9|D10|D11|D12|D13|D14|D15}
BUS:B<x>:PARAllel:CLOCK:SOUrce?

Arguments CH1-CH4 or D0-D15 specifies the channel to use as the Parallel bit source.

BUS:B<x>:PARAllel:WIDTh

Sets or returns the number of bits used for the width of the Parallel bus <x>, where x is the bus number.

Group Bus

Syntax BUS:B<x>:PARAllel:WIDTh <NR1>
BUS:B<x>:PARAllel:WIDTh?

Arguments <NR1> is the number of bits.

BUS:B<x>:POSition

Sets or returns the position of the bus <x> waveform on the display, where x is the bus number 1 through 4.

Conditions This command requires a serial bus analysis module.

Group Bus

Syntax `BUS:B<x>:POSition <NR3>`
 `BUS:B<x>:POSition?`

Arguments `<NR3>` specifies the position.

BUS:B<x>:RS232C:BITRate

Sets or returns the RS-232 bit rate for bus `<x>`, where `x` is the bus number.

Conditions This command requires a DPO4COMP application module.

Group Bus

Syntax `BUS:B<x>:RS232C:BITRate <NR1>`
 `BUS:B<x>:RS232C:BITRate?`

Arguments `<NR1>` is the bit rate in bits-per-second. You can enter any positive integer, and the instrument will coerce the value to the closest supported bit rate.

BUS:B<x>:RS232C:DATABits

Sets or returns the number of RS-232 data bits for bus `<x>`, where `x` is the bus number.

Conditions This command requires a DPO4COMP application module.

Group Bus

Syntax `BUS:B<x>:RS232C:DATABits {7|8}`
 `BUS:B<x>:RS232C:DATABits?`

Arguments 7 specifies seven bits in the RS-232 data frame.
 8 specifies eight bits in the RS-232 data frame.

BUS:B<x>:RS232C:DELIMiter

Sets or returns the RS-232 delimiting value for a packet on bus <x>, where x is the bus number.

Conditions This command requires a DPO4COMP application module.

Group Bus

Syntax BUS:B<x>:RS232C:DELIMiter {NUL|LF|CR|Space|XFF}
BUS:B<x>:RS232C:DELIMiter?

Arguments NUL specifies 0x00.
LF specifies 0x0A.
CR specifies 0x0D.
XFF specifies 0xFF.

BUS:B<x>:RS232C:DISplaymode

Sets or returns the display mode for the bus <x> display and event table, where x is the bus number.

Conditions This command requires a DPO4COMP application module.

Group Bus

Syntax BUS:B<x>:RS232C:DISplaymode {FRame|PACKET}
BUS:B<x>:RS232C:DISplaymode?

Arguments FRame displays each frame as a single entity.
PACKET displays a group of frames terminated with a single frame defined by the BUS:B<x>:RS232C:DELIMiter command or the front panel.

BUS:B<x>:RS232C:PARity

Sets or returns the RS-232C parity for bus <x>, where x is the bus number.

Conditions This command requires a DPO4COMP application module.

Group Bus

Syntax BUS:B<x>:RS232C:PARity {NONE|EVEN|ODD}
BUS:B<x>:RS232C:PARity?

Arguments NONE specifies no parity.
EVEN specifies even parity.
ODD specifies odd parity.

BUS:B<x>:RS232C:POLarity

Sets or returns the RS-232C polarity for bus <x>, where x is the bus number.

Conditions This command requires a DPO4COMP application module.

Group Bus

Syntax BUS:B<x>:RS232C:POLarity {NORMAl|INVERTed}
BUS:B<x>:RS232C:POLarity?

Arguments NORMAl sets the RS-232C bus polarity to positive.
INVERTed sets the RS-232C bus polarity to negative.

BUS:B<x>:RS232C:RX:SOURce

Sets or returns the RS-232 RX source for bus <x>, where x is the bus number.

Conditions This command requires a DPO4COMP application module.

Group Bus

Syntax BUS:B<x>:RS232C:RX:SOURce {CH1|CH2|CH3|CH4|
D0|D1|D2|D3|D4|D5|D6|D7|D8|D9|D10|D11|D12|D13|D14|D15|off}
BUS:B<x>:RS232C:RX:SOURce?

Arguments CH1–CH4 or D0–D15 specifies the channel to use for the RS-232 RX source.
Off sets the specified bus input to off.

BUS:B<x>:RS232C:TX:SOURce

Sets or returns the RS-232 TX Source for bus <x>, where x is the bus number.

Conditions This command requires a DPO4COMP application module.

Group Bus

Syntax BUS:B<x>:RS232C:TX:SOURce {CH1|CH2|CH3|CH4|
D0|D1|D2|D3|D4|D5|D6|D7|D8|D9|D10|D11|D12|D13|D14|D15|off}
BUS:B<x>:RS232C:TX:SOURce?

Arguments CH1–CH4 or D0–D15 specifies the channel to use as the RS-232 TX source.
Off sets the specified bus input to off.

BUS:B<x>:SPI:BITOrder

Sets or returns the bit order for the specified SPI bus. LSB is least significant bit first; MSB is most significant bit first.

Group Bus

Syntax BUS:B<x>:SPI:BITOrder {LSB|MSB}
BUS:B<x>:SPI:BITOrder?

Arguments LSB sets the bit order to least significant bit first.
MSB sets the bit order to most significant bit first.

Examples BUS:B1:SPI:BITORDER LSB sets the bit order to least significant bit first.
BUS:B1:SPI:BITORDER? might return BUS:B1:SPI:BITORDER MSB
indicating the SPI bit order is set to most significant bit first.

BUS:B<x>:SPI{:CLOCK|:SCLK}:POLARity

Sets or returns the SPI SCLK polarity for bus <x>, where x is the bus number.

Conditions This command requires a DPO4EMBD application module.

Group Bus

Syntax BUS:B<x>:SPI{:CLOCK|:SCLK}:POLARity {FALL|RISe}
BUS:B<x>:SPI{:CLOCK|:SCLK}:POLARity?

Arguments FALL specifies the falling edge.
RISe specifies the rising edge.

BUS:B<x>:SPI{:CLOCK|:SCLK}:SOUrce

Sets or returns the SPI SCLK source for bus <x>, where x is the bus number.

Conditions This command requires a DPO4EMBD application module.

Group Bus

Syntax BUS:B<x>:SPI{:CLOCK|:SCLK}:SOUrce {CH1|CH2|CH3|CH4|
D0|D1|D2|D3|D4|D5|D6|D7|D8|D9|D10|D11|D12|D13|D14|D15}
BUS:B<x>:SPI{:CLOCK|:SCLK}:SOUrce?

Arguments CH1-CH4 or D0-D15 is the channel to use as the SPI SCLK source.

BUS:B<x>:SPI:DATA{:IN|:MISO}:POLARity

Sets or returns the SPI MISO polarity for bus <x>, where x is the bus number.

Conditions This command requires a DPO4EMBD application module.

Group Bus

Syntax `BUS:B<x>:SPI:DATA{:IN|:MISO}:POLARity {LOW|HIGH}`
 `BUS:B<x>:SPI:DATA{:IN|:MISO}:POLARity?`

Arguments LOW specifies an active low polarity.
 HIGH specifies an active high polarity.

BUS:B<x>:SPI:DATA{:IN|:MISO}:SOURCE

Sets or returns the SPI MISO source for bus <x>, where x is the bus number.

Conditions This command requires a DPO4EMBD application module.

Group Bus

Syntax `BUS:B<x>:SPI:DATA{:IN|:MISO}:SOURCE {CH1|CH2|CH3|CH4|`
 `D0|D1|D2|D3|D4|D5|D6|D7|D8|D9|D10|D11|D12|D13|D14|D15}`
 `BUS:B<x>:SPI:DATA{:IN|:MISO}:SOURCE?`

Arguments CH1-CH4 or D0-D15 is the channel to use as the SPI MISO source.

BUS:B<x>:SPI:DATA{:OUT|:MOSI}:POLARity

Sets or returns the SPI MOSI polarity for bus <x>, where x is the bus number.

Conditions This command requires a DPO4EMBD application module.

Group Bus

Syntax `BUS:B<x>:SPI:DATA{:OUT|:MOSI}:POLARity {LOW|HIGH}`
 `BUS:B<x>:SPI:DATA{:OUT|:MOSI}:POLARity?`

Arguments LOW specifies the active low polarity.
 HIGH specifies the active high polarity.

BUS:B<x>:SPI:DATA{:OUT|:MOSI}:SOURCE

Sets or returns the SPI MOSI source for bus <x>, where x is the bus number.

Conditions	This command requires a DPO4EMBD application module.
Group	Bus
Syntax	<code>BUS:B<x>:SPI:DATA{:OUT :MOSI}:Source {CH1 CH2 CH3 CH4 D0 D1 D2 D3 D4 D5 D6 D7 D8 D9 D10 D11 D12 D13 D14 D15}</code> <code>BUS:B<x>:SPI:DATA{:OUT :MOSI}:Source?</code>
Arguments	CH1-CH4 or D0-D15 is the channel to use as the SPI MISO source.

BUS:B<x>:SPI:DATA:SIZE

Sets or returns the number of bits per word for the specified SPI bus.

Group	Bus
Syntax	<code>BUS:B<x>:SPI:DATA:SIZE <NR1></code> <code>BUS:B<x>:SPI:DATA:SIZE?</code>
Arguments	NR1 is the data size of the specified bus.
Examples	<code>BUS:B1:SPI:DATA:SIZE 8</code> sets the data size for the specified bus to 8 bits per word. <code>BUS:B1:SPI:DATA:SIZE?</code> might return <code>BUS:B1:SPI:DATA:SIZE 8</code> indicating the data size for the SPI B1 bus is 8 bits per word.

BUS:B<x>:SPI:FRAMING

Sets or returns the type of SPI framing.

Group	Bus
Syntax	<code>BUS:B<x>:SPI:FRAMING {SS IDLEtime}</code> <code>BUS:B<x>:SPI:FRAMING?</code>
Arguments	SS specifies framing by SS (non 2-wire). IDLEtime specifies framing by Idle Time (2-wire).

Examples `BUS:B1:SPI:FRAMING SS` sets the SPI framing type to SS.

`BUS:B1:SPI:FRAMING IDELTIME` might return `BUS:B1:SPI:FRAMING IDELTIME` indicating the SPI framing type is set to IDLETIME.

BUS:B<x>:SPI:IDLETime

Sets or returns the SPI bus idle time in seconds for the specified bus.

Group Bus

Syntax `BUS:B<x>:SPI:IDLETime <NR3>`
`BUS:B<x>:SPI:IDLETime?`

Arguments NR3 is the SPI bus idle time in seconds.

Examples `BUS:B1:SPI:IDLETIME 100.0000E-9` sets the idle time to 100 ns.

`BUS:B1:SPI:IDLETIME?` might return `BUS:B1:SPI:IDLETIME 100.0000E-9` indicating the idle time is set to 100 ns.

BUS:B<x>:SPI{:SElect|:SS}:POLARity

Sets or returns the SPI SS polarity for bus <x>, where x is the bus number.

Conditions This command requires a DPO4EMBD application module.

Group Bus

Syntax `BUS:B<x>:SPI{:SElect|:SS}:POLARity {LOW|HIGH}`
`BUS:B<x>:SPI{:SElect|:SS}:POLARity?`

Arguments LOW specifies an active low polarity.
HIGH specifies an active high polarity.

BUS:B<x>:SPI{:SElect|:SS}:SOURCE

Sets or returns the SPI SS source for bus <x>, where x is the bus number.

Conditions	This command requires a DPO4EMBD application module.
Group	Bus
Syntax	<code>BUS:B<x>:SPI{:SElect :SS}:SOUrce {CH1 CH2 CH3 CH4 D0 D1 D2 D3 D4 D5 D6 D7 D8 D9 D10 D11 D12 D13 D14 D15}</code> <code>BUS:B<x>:SPI{:SElect :SS}:SOUrce?</code>
Arguments	CH1–CH4 or D0–D15 is the channel to use as the SPI SS source.

BUS:B<x>:STATE

Sets or returns the on/off state of bus <x>, where x is the bus number.

Group	Bus
Syntax	<code>BUS:B<x>:STATE {<NR1> OFF ON}</code> <code>BUS:B<x>:STATE?</code>
Related Commands	SElect:BUS<x>
Arguments	ON or <NR1> \neq 0 turns on the bus. OFF or <NR1> = 0 turns off the bus.

BUS:B<x>:TYPE

Sets or returns the bus type for <x>, where x is the bus number. The supported bus types are dependent on the oscilloscope model and the installed application keys.

Group	Bus
Syntax	<code>BUS:B<x>:TYPE {I2C SPI CAN RS232C PARa11e1 USB}</code> <code>BUS:B<x>:TYPE?</code>
Arguments	I2C specifies the Inter-IC bus. SPI specifies the Serial Peripheral Interface bus (not available on two-channel models).

CAN specifies the Controller Area Network bus.

RS232C specifies the RS-232C bus.

PARa11e1 specifies the Parallel bus.

USB specifies the USB bus.

BUS:B<x>:USB:BITRate

Sets or returns the bit rate for the USB signal.

Group	Bus
Syntax	BUS:B<x>:USB:BITRate {LOW FULL HIGH} BUS:B<x>:USB:BITRate?
Arguments	LOW indicates the bit rate is 1.5 Mbps. FULL indicates the bit rate is 12 Mbps. HIGH indicates the bit rate is 480 Mbps.
Examples	BUS:B1:USB:BITRATE FULL sets the bit rate to 12 Mbps. BUS:B1:USB:BITRATE? might return :BUS:B1:USB:BITRATE LOW, which indicates that the bit rate is 1.5 Mbps.

BUS:B<x>:USB:PRObe

Sets or returns the type of probe connected to the USB signal.

Group	Bus
Syntax	BUS:B<x>:USB:PRObe {DIFFerential SINGleended} BUS:B<x>:USB:PRObe?
Arguments	DIFFerential indicates that the bus probe is a differential probe. SINGleended indicates that the bus probe is not a differential probe.
Examples	BUS:B1:USB:PROBE DIFFERENTIAL sets the bus probe to be a differential probe.

BUS:B1:USB:PROBE? might return :BUS:B1:USB:PROBE SINGLEENDED, which indicates that the bus probe is not a differential probe.

BUS:B<x>:USB:SOUrce:DIFFerential

Sets or returns the USB Data Source when using a differential probe.

Group	Bus
Syntax	BUS:B<x>:USB:SOUrce:DIFFerential {CH1 CH2 CH3 CH4} BUS:B<x>:USB:SOUrce:DIFFerential?
Arguments	CH1–CH4 specifies the channel to use for data source for the USB bus. This channel should have an attached differential probe.
Examples	<p>BUS:B1:USB:SOUrce:DIFFerential CH2 sets the source to channel 2. You should have a differential probe attached to channel 2 and connect it to the USB data signal.</p> <p>BUS:B1:USB:SOUrce:DIFFerential? might return :BUS:B1:USB:SOUrce:DIFFerential CH4 indicating that channel 4 is set to be the differential input for USB data.</p>

BUS:B<x>:USB:SOUrce:DMINus

Sets or returns the USB Data Source for D- input. If you are using single-ended probes, you need to set the sources for both the D+ and D- inputs.

Group	Bus
Syntax	BUS:B<x>:USB:SOUrce:DMINus {CH1 CH2 CH3 CH4 D0 D1 D2 D3 D4 D5 D6 D7 D8 D9 D10 D11 D12 D13 D14 D15} BUS:B<x>:USB:SOUrce:DMINus?
Arguments	CH1–CH4 or D0–D15 specifies the channel to use for D- data source for the USB bus.

Examples `BUS:B1:USB:SOURCE:DMINUS CH2` sets the D-source to channel 2.

`BUS:B1:USB:SOURCE:DMINUS?` might return `:BUS:B1:USB:SOURCE:DMINUS CH4` indicating that channel 4 is set to be the D- input for USB data.

BUS:B<x>:USB:SOURce:DPLUS

Sets or returns the USB Data Source for D+ input. If you are using single-ended probes, you need to set the sources for both the D+ and D- inputs.

Group Bus

Syntax `BUS:B<x>:USB:SOURce:DPLUS`
`{CH1|CH2|CH3|CH4|D0|D1|D2|D3|D4|D5|D6|D7|D8`
`|D9|D10|D11|D12|D13|D14|D15}`
`BUS:B<x>:USB:SOURce:DPLUS?`

Arguments CH1–Ch4 or D0–D15 specifies the channel to use for D+ data source for the USB bus.

Examples `BUS:B1:USB:SOURce:DPLUS CH1` sets the D+ source to channel 1.

`BUS:B1:USB:SOURce:DPLUS?` might return `:BUS:B1:USB:SOURce:DPLUS CH3` indicating that channel 3 is set to be the D+ input for USB data.

BUS:LOWerthreshold:CH<x>

Sets the lower threshold for each channel. This applies to all search and trigger types that use the channel. This command supersedes the `:BUS:THReshoId:CH<x>` above.

Group Bus

Syntax `BUS:LOWerthreshold:CH<x> {<NR3>|ECL|TTL}`
`BUS:LOWerthreshold:CH<x>?`

Arguments `<NR3>` specifies the threshold in volts.

ECL specifies a preset ECL high level of -1.3V.

TTL specifies a preset TTL high level of 1.4V.

Examples `BUS:LOWERTHRESHOLD:CH1 TTL` sets the CH1 lower threshold to 800mV.
 `BUS:LOWERTHRESHOLD:CH1?` might return `:BUS:LOWERTHRESHOLD:CH1`
 `-800.0000E-3` indicating the CH1 lower threshold is -800 mV.

BUS:THReshold:CH<x>

Sets or returns the threshold for analog channel <x>, where x is the channel number. This setting applies to all trigger types that use the channel.

Conditions This command requires a serial bus analysis module.

Group Bus

Syntax `BUS:THReshold:CH<x> {ECL | TTL | <NR3>}`
 `BUS:THReshold:CH<x>?`

Related Commands [TRIGger:A:LEVel:CH<x>](#)

Arguments ECL specifies a preset ECL high level of -1.3V.
 TTL specifies a TTL preset high level of 1.4V.
 <NR3> specifies the threshold level in volts.

BUS:THReshold:D<x>

Sets or returns the threshold for digital channel <x>, where x is the digital channel number. This will apply to all Search and Trigger Types that use the channel.

Conditions This command requires a DPO4COMP application module or RS-232C.

Group Bus

Syntax `BUS:THReshold:D<x> {<NR3> | ECL | TTL}`
 `BUS:THReshold:D<x>?`

Related Commands [TRIGger:A:LEVel:D<x>](#)

Arguments ECL specifies a preset ECL high level of -1.3V.
TTL specifies a preset TTL high level of 1.4V.
<NR3> specifies the threshold level in volts.

BUS:UPPerthreshold:CH<x>

Sets the upper threshold for each channel. This applies to all search and trigger types that use the channel.

Group Bus

Syntax BUS:UPPerthreshold:CH<x> {<NR3>|ECL|TTL}
BUS:UPPerthreshold:CH<x>?

Arguments <NR3> specifies the threshold in volts.
ECL specifies a preset ECL high level of -1.3V.
TTL specifies a preset TTL high level of 1.4V.

Examples BUS:UPPERTHRESHOLD:CH1 800.0000E-3 sets the CH1 upper threshold to 800 mV.
BUS:UPPERTHRESHOLD:CH1? might return :BUS:UPPERTHRESHOLD:CH1 -800.0000E-3 indicating that the CH1 upper threshold is set to -800 mV.

BUSY? (Query Only)

Returns the status of the oscilloscope. This command allows you to synchronize the operation of the oscilloscope with your application program. (See page 3-7, *Synchronization Methods*.)

Certain oscilloscope operations can affect the BUSY? response. (See Table 3-3 on page 3-7.)

Group Status and Error

Syntax BUSY?

Related Commands *OPC, *WAI

Returns	<p><NR1> = 0 means the oscilloscope is not busy processing a command whose execution time is extensive.</p> <p><NR1> = 1 means the oscilloscope is busy processing a command whose execution time is extensive. (See Table 3-3 on page 3-7.)</p>
Examples	BUSY? might return :BUSY 1 indicating that the oscilloscope is currently busy.

*CAL? (Query Only)

Performs an internal self-calibration and returns the oscilloscope calibration status.

NOTE. *Disconnect or otherwise remove all input signals prior to starting self-calibration. The self-calibration can take several minutes to complete.*

No other commands are executed until calibration is complete.

Group	Calibration and Diagnostic
Syntax	*CAL?
Returns	<p><NR1> = 1 indicates the calibration did not complete successfully.</p> <p><NR1> = 0 indicates the calibration completed without errors.</p>
Examples	*CAL? starts the internal signal path calibration and might return 0 to indicate that the calibration was successful.

CALibrate:FACTory:STATus? (Query Only)

Returns the factory calibration status value saved in nonvolatile memory.

Group	Calibration and Diagnostic
Syntax	CALibrate:FACTory:STATus?
Examples	CALIBRATE:FACTORY:STATUS? might return CALIBRATE:FACTORY:STATUS PASS indicating that factory calibration passed.

CALibrate:INTERNAL (No Query Form)

This command starts a signal path compensation.

Group	Calibration and Diagnostic
Syntax	CALibrate:INTERNAL
Arguments	None
Examples	CALIBRATE:INTERNAL starts a serial path compensation cycle.

CALibrate:INTERNAL:START (No Query Form)

Starts the internal signal path calibration (SPC) of the oscilloscope. You can use the [CALibrate:INTERNAL:STATUS?](#) query to return the current status of the internal signal path calibration of the oscilloscope.

Group	Calibration and Diagnostic
Syntax	CALibrate:INTERNAL:START
Related Commands	CALibrate:RESults:SPC?
Examples	CALIBRATE:INTERNAL:START initiates the internal signal path calibration of the oscilloscope.

CALibrate:INTERNAL:STATUS? (Query Only)

Returns the current status of the oscilloscope internal signal path calibration for the last SPC operation.

Group	Calibration and Diagnostic
Syntax	CALibrate:INTERNAL:STATUS?
Related Commands	*CAL?

- Returns** This query will return one of the following:
- INIT indicates the oscilloscope has not had internal signal path calibration run.
 - PASS indicates the signal path calibration completed successfully.
 - FAIL indicates the signal path calibration did not complete successfully.
 - RUNNING indicates the signal path calibration is currently running.

Examples CALIBRATE:INTERNAL:STATUS? might return
:CALIBRATE:INTERNAL:STATUS INIT indicating that the current status of the internal signal path calibration is that it has not been run.

CALibrate:RESuLts? (Query Only)

Returns the status of internal and factory calibrations, without performing any calibration operations. The results returned do not include the calibration status of attached probes. The CALibrate:RESuLts? query is intended to support GO/NoGO testing of the oscilloscope calibration readiness: all returned results should indicate PASS status if the oscilloscope is "fit for duty". It is quite common, however, to use uncalibrated probes (particularly when the oscilloscope inputs are connected into a test system with coaxial cables).

Group Calibration and Diagnostic

Syntax CALibrate:RESuLts?

Related Commands [*CAL?](#)

CALibrate:RESuLts:FACTory? (Query Only)

Returns the status of internal and factory calibration, without performing any calibration operations.

Group Calibration and Diagnostic

Syntax CALibrate:RESuLts:FACTory?

CALibrate:RESults:SPC? (Query Only)

Returns the status of the SPC operation. This query does not initiate a SPC.

Group Calibration and Diagnostic

Syntax CALibrate:RESults:SPC?

Related Commands [*CAL?](#)

Returns INIT indicates that SPC has never successfully completed.
 PASS indicates that the last SPC operation passed.
 FAIL indicates that the last SPC operation failed.
 RUNNING indicates that the SPC operation is running.

Examples CALIBRATE:RESULTS:SPC? returns the results of the last SPC operation: either PASS or FAIL.

CH<x>? (Query Only)

Returns the vertical parameters for channel <x>, where x is the channel number.

Group Vertical

Syntax CH<x>?

CH<x>:AMPSVIAVOLTS:ENAbLe

Sets or returns the state of the amps via volts feature for the specified channel. This feature supports measuring current via the voltage drop across a resistor.

Group Vertical

Syntax CH<x>:AMPSVIAVOLTS:ENAbLe {<NR1>|OFF|ON}
 CH<x>:AMPSVIAVOLTS:ENAbLe?

Arguments	OFF sets the amps via volts function for channel <x> to off.
	ON sets the amps via volts function for channel <x> to on.
	<NR1> = 0 sets the amps via volts function to off. Any other value sets the function to on.
Examples	CH1:AMPSVIAVOLTS:ENABLE ON turns on the amps via volts feature for channel 1.

CH<x>:AMPSVIAVOLTS:FACTOR

Sets or returns the amps via volts factor for the specified channel.

Group	Vertical
Syntax	CH<x>:AMPSVIAVOLTS:FACTOR <NR3> CH<x>:AMPSVIAVOLTS:FACTOR?
Arguments	<NR3> is a double-precision ASCII string that represents the amps via volts factor.
Examples	CH1:AMPSVIAVOLTS:FACTOR 15.5 sets the amps via volts factor for channel 1 to 15.5.

CH<x>:BANDwidth

Sets or returns the selectable low-pass bandwidth limit filter for channel <x>, where x is the channel number.

Group	Vertical
Syntax	CH<x>:BANDwidth {TWEnty TWOfifty FUL1 <NR3>} CH<x>:BANDwidth?
Arguments	TWEnty sets the upper bandwidth limit of channel <x> to 20 MHz.
	TWOfifty sets the upper bandwidth limit of channel <x> to 250 MHz.
	FUL1 disables any optional bandwidth limiting. The specified channel operates at its maximum attainable bandwidth.

<NR3> is a double-precision ASCII string. The oscilloscope rounds this value to an available bandwidth using geometric rounding, and then uses this value to set the upper bandwidth limit.

NOTE. *Other values may be possible depending on the attached probes.*

Examples CH1:BANDWIDTH TWENTY sets the bandwidth of channel 1 to 20 MHz.

CH<x>:COUPling

Sets or returns the input attenuator coupling setting for channel <x>, where x is the channel number.

Group Vertical

Syntax CH<x>:COUPling {AC|DC|GND}
CH<x>:COUPling?

Arguments AC sets channel <x> to AC coupling.
DC sets channel <x> to DC coupling.
GND sets channel<x> to ground. Only a flat, ground-level waveform will be displayed.

Examples CH2:COUPLING GND sets channel 2 to ground.
CH3:COUPling? might return :CH3:COUPling DC indicating that channel 3 is set to DC coupling.

CH<x>:DESKew

Sets or returns the deskew time for channel <x>, where x is the channel number. You can adjust the deskew time to add an independent, channel-based delay time to the delay (set by the horizontal position control and common to all channels) from the common trigger point to first sample taken for each channel. This lets you compensate individual channels for different delays introduced by their individual input hook ups.

Group Vertical

Syntax	CH<x>:DESKew <NR3> CH<x>:DESKew?
Arguments	<NR3> is the deskew time for channel <x>, ranging from -100 ns to +100 ns with a resolution of 1 ps.
Examples	CH4:DESKew 5.0E-9 sets the deskew time for channel 4 to 5 ns. CH2:DESKew? might return :CH2:DESKEW 2.0000E-09 indicating that the deskew time for channel 2 is set to 2 ns.

CH<x>:INVert

Sets or returns the invert function for channel <x>, where x is the channel number. When on, the invert function inverts the waveform for the specified channel.

NOTE. *This command inverts the waveform for display purposes only. The oscilloscope does not use an inverted waveform for triggers or trigger logic inputs.*

Group	Vertical
Syntax	CH<x>:INVert {ON OFF} CH<x>:INVert?
Arguments	OFF sets the invert function for channel <x> to off. ON sets the invert function for channel <x> to on.
Examples	CH4:INVert ON inverts the waveform on channel 4. CH2:INVert? might return :CH2:INVERT 0 indicating that channel 2 is not inverted.

CH<x>:LABel

Sets or returns the waveform label for channel <x>, where x is the channel number.

Group	Vertical
--------------	----------

Syntax CH<x>:LAbel <Qstring>
CH<x>:LAbel?

Arguments <Qstring> is an alphanumeric string of text, enclosed in quotes, that contains the text label information for the channel <x> waveform. The text string is limited to 30 characters.

CH<x>:OFFSet

Sets or returns the vertical offset for channel <x>, where x is the channel number.

This command offsets the vertical acquisition window (moves the level at the vertical center of the acquisition window) for the specified channel. Visualize offset as scrolling the acquisition window towards the top of a large signal for increased offset values, and scrolling towards the bottom for decreased offset values. The resolution of the vertical window sets the offset increment for this control.

Offset adjusts only the vertical center of the acquisition window for channel waveforms to help determine what data is acquired. The oscilloscope always displays the input signal minus the offset value.

The channel offset range depends on the vertical scale factor.

Table 2-38: Channel Offset Range

V/Div Setting	Offset range	
	1 M Ω Input	50 Ω Input
1 mV/div — 50 mV/div	± 1 V	± 1 V
50.5 mV/div — 99.5 mV/div	± 0.5 V	± 0.5 V
100 mV/div — 500 mV/div	± 10 V	± 5 V
505 mV/div — 995 mV/div	± 5 V	± 5 V
1 V/div — 5 V/div	± 100 V	± 5 V
¹		
5.05 V/div — 10 V/div	± 50 V	N/A
¹		

¹ For 50 Ω input, 1 V/div is the maximum setting.

NOTE. The above table describes oscilloscope behavior only when no probe is attached, and when the external attenuation factor is 1.0.

Group Vertical

Syntax CH<x>:OFFSet <NR3>
CH<x>:OFFSet?

Related Commands [CH<x>:POSition](#)

Arguments <NR3> is the offset value for the specified channel <x>.

Examples CH3:OFFSet 2.0E-3 sets the offset for channel 3 to 2 mV.
CH4:OFFSet? might return :CH4:OFFSet 1.0000E-03 indicating that the offset for channel 4 is set to 1 mV.

CH<x>:POSition

Sets or returns the vertical position of channel <x>, where x is the channel number. The position value is applied to the signal before it is digitized.

Increasing the position value of a waveform causes the waveform to move up. Decreasing the position value causes the waveform to move down. The position value determines the vertical graticule coordinate at which input signal values, minus the present offset setting for that channel, are displayed. For example, if the position for Channel 3 is set to 2.0 and the offset is set to 3.0, then input signals equal to 3.0 units are displayed 2.0 divisions above the center of the screen (at 1 V/div).

Group Vertical

Syntax CH<x>:POSition <NR3>
CH<x>:POSition?

Related Commands [CH<x>:OFFSet](#), [REF<x>:VERTical:POSition](#), [MATH\[1\]:VERTical:POSition](#)

Arguments <NR3> is the position value for channel <x>, in divisions, from the center graticule. The range is 8 to -8 divisions.

Examples CH2:POSition 1.3 positions the Channel 2 input signal 1.3 divisions above the center graticule.

CH1:POSition? might return :CH1:POSITION -1.3000 indicating that the current position of Channel 1 is 1.3 divisions below the center graticule.

CH<x>:PRObe? (Query Only)

Returns all information concerning the probe attached to channel <x>, where x is the channel number.

Group Vertical

Syntax CH<x>:PRObe?

CH<x>:PRObe:AUTOZero (No Query Form)

Sets the TekVPI probe attached to channel <x> to zero, where x is the channel number

Group Vertical

Syntax CH<x>:PRObe:AUTOZero EXECute

Arguments Execute auto zeros the probe.

CH<x>:PRObe:COMMAND (No Query Form)

Sets the state of the probe control specified with the first argument to the state specified with the second argument. The commands and states are unique to the attached probe type. Only certain VPI probes support this command. See the probe documentation for how to set these string arguments.

Group Vertical

Syntax CH<x>:PRObe:COMMAND <QString>, <QString>

Arguments <QString> are quoted strings specifying the probe command and value to set in the probe attached to the specified channel.

Examples CH1:PROBE:COMMAND "MODE", "4-4V1MHZ" sets a Tektronix VPI-DPG probe to the 4-4V1MHz mode.

CH1:PROBE:COMMAND "OUTPUT", "ON" turns the output of a Tektronix VPI-DPG probe on.

CH1:PROBE:COMMAND?"MODE" might return CH1:PROBE:COMMAND
"MODE", "4-4V1MHZ".

CH<x>:PRObe:DEGAUss (No Query Form)

Starts a degauss auto-zero cycle on a TekVPI current probe attached to the input channel specified by <x>, where x is the channel number.

Group Vertical

Syntax CH<x>:PRObe:DEGAUss EXECute

Arguments EXECute initiates the degauss operation.

CH<x>:PRObe:DEGAUss:STATE? (Query Only)

Returns the state of the probe degauss for the channel specified by <x>, where x is the channel number.

NOTE. This command will return *PASSED* for probes that do not support degauss operations.

Group Vertical

Syntax CH<x>:PRObe:DEGAUss:STATE?

Returns NEEDED indicates the probe should be degaussed before taking measurements.
RECOMMENDED indicates the measurement accuracy might be improved by degaussing the probe.
PASSED indicates the probe is degaussed.
FAILED indicates the degauss operation failed.
RUNNING indicates the probe degauss operation is currently in progress.

CH<x>:PRObe:FORCEDRange

Sets or returns the range of a TekVPI probe attached to the channel specified by <x>, where x is the channel number.

NOTE. This command will return *PASSED* for probes that do not support degauss operations.

Group	Vertical
Syntax	CH<x>:PRObe:FORCEDRange <NR3> CH<x>:PRObe:FORCEDRange?
Arguments	<NR3> specifies the range, which is probe specific.
Returns	This command returns 0.0 for probes that do not support forced range.

CH<x>:PRObe:GAIN

Sets or returns the gain factor for the probe attached to the channel specified by <x>, where x is the channel number. The "gain" of a probe is the output divided by the input transfer ratio. For example, a common 10x probe has a gain of 1V.

Group	Vertical
Syntax	CH<x>:PRObe:GAIN <NR3> CH<x>:PRObe:GAIN?
Related Commands	CH<x>:SCAlc
Arguments	<NR3> is the probe gain. Allowed values depend on the specific probe.
Examples	CH2:PROBE:GAIN? might return :CH2:PROBE:GAIN 0.1000E+00 indicating that the attached 10x probe delivers 1 V to the channel 2 BNC for every 10 V applied to the probe input.

CH<x>:PRObe:ID? (Query Only)

Returns the type and serial number of the probe attached to channel <x>, where x is the channel number.

Group	Vertical
--------------	----------

Syntax CH<x>:PRObe:ID?

Examples CH2:PROBE:ID? might return :CH2:PROBE:ID:TYPE "10X";SERNUMBER "N/A" indicating that a passive 10x probe of unknown serial number is attached to channel 2.

CH<x>:PRObe:ID:SERnumber? (Query Only)

Returns the serial number of the probe attached to channel <x>, where x is the channel number.

NOTE. For Level 0 and 1 probes, the serial number will be "".

Group Vertical

Syntax CH<x>:PRObe:ID:SERnumber?

Examples CH1:PROBE:ID:SERNUMBER? might return :CH1:PROBE:ID:SERNUMBER "B010289" indicating that the serial number of the probe attached to channel 1 is B010289.

CH<x>:PRObe:ID:TYPE? (Query Only)

Returns the type of probe attached to the channel specified by <x>, where x is the channel number. Level 2 (or higher) probes supply their exact product nomenclature; for Level 0 or 1 probes, a generic "No Probe Detected" message is returned.

Group Vertical

Syntax CH<x>:PRObe:ID:TYPE?

Examples CH1:PROBE:ID:TYPE? might return :CH1:PROBE:ID:TYPE "P6203" indicating that P6203-type probe is attached to channel 1.

CH<x>:PRObe:MODEl

Sets or returns the probe model for the specified channel. If a coded probe is attached or the specified model is not recognized, an error event is set. The argument must be a supported probe.

To find the list of supported probes, push the front-panel channel **1, 2, 3, or 4** button, then push the lower-menu **More** item as many times as needed to select **Deskew**. Push **Probe Model** on the side menu and turn knob **a** to help you read from the resulting list. Alternatively, you can push **Test > Analysis > Deskew > Configure > Probe Model** and read from the resulting list.

Group Vertical

Syntax CH<x>:PRObe:MODEl<String>
CH<x>:PRObe:MODEl?

CH<x>:PRObe:PROPDElay

Sets or returns the propagation delay for the probe connected to the specified channel.

Group Vertical

Syntax CH<x>:PRObe:PROPDElay<NR3>
CH<x>:PRObe:PROPDElay?

Arguments <NR3> specifies the propagation time delay for the connected probe.

Examples CH1:PROBE:PROPDELAY 100E-12 sets the CH1 propagation delay to 100 ps.
CH1:PROBE:PROPDELAY? might return :CH1:PROBE:PROPDELAY 1.1E-9 indicating that the CH1 propagation delay is set to 1.1 ns.

CH<x>:PRObe:RECDESkew? (Query Only)

Returns the recommended deskew for the probe connected to the specified channel.

Group Vertical

Syntax CH<x>:PRObe:RECDESkeW?

CH<x>:PRObe:RESistance? (Query Only)

Returns the resistance factor of the probe attached to channel <x>, where x is the channel number.

Group Vertical

Syntax CH<x>:PRObe:RESistance?

Examples CH2:PRObe:RESistance? might return :CH2:PROBE:RESISTANCE
10.0000E+6 indicating that the input resistance of the probe attached to Channel
2 is 1 MΩ.

NOTE. This query will return 0.0 if no probe is attached or the attached probe does not report the input resistance.

CH<x>:PRObe:SIGnal

Sets or returns the input bypass setting of a TekVPI probe attached to channel <x>, where x is the channel number. The probe must support input bypass, for example TCP0001. This command is ignored if sent to an unsupported probe.

Group Vertical

Syntax CH<x>:PRObe:SIGnaL {BYPass|PASS}
CH<x>:PRObe:SIGnaL?

Arguments BYPass sets the probe to Bypass mode.

PASS sets the probe to Pass mode.

CH<x>:PRObe:UNIts? (Query Only)

Returns a string describing the units of measure for the probe attached to channel <x>, where x is the channel number.

Group Vertical

Syntax CH<x>:PRObe:UNITs?

Examples CH4:PROBE:UNITS? might return :CH4:PROBE:UNITS "V" indicating that the units of measure for the probe attached to channel 4 are volts.

CH<x>:SCALE

Sets or returns the vertical scale for the channel specified by <x>, where x is the channel number.

Each waveform has a vertical scale parameter. For a signal with constant amplitude, increasing the Scale causes the waveform to be displayed smaller. Decreasing the scale causes the waveform to be displayed larger.

Scale affects all waveforms, but affects channel waveforms differently from other waveforms:

- For channel waveforms, this setting controls the vertical size of the acquisition window as well as the display scale. The range and resolution of scale values depends on the probe attached and any other external factors you have specified.
- For reference and math waveforms, this setting controls the display only, graphically scaling these waveforms and having no affect on the acquisition hardware.

Group Vertical

Syntax CH<x>:SCALE <NR3>
CH<x>:SCALE?

Related Commands [CH<x>:OFFSet](#), [CH<x>:POSition](#), [REF<x>:VERTical:SCALE](#), [MATH\[1\]:VERTical:SCALE](#)

Arguments <NR3> is the vertical channel scale in units-per-division. The value entered here is truncated to three significant digits.

Examples CH4:SCALE 100E-03 sets the channel 4 scale to 100 mV per division.
CH2:SCALE? might return :CH2:SCALE 1.0000 indicating that the current scale setting of channel 2 is 1 V per division.

CH<x>:TERmination

Sets the connected-disconnected status of a 50 Ω resistor, which may be connected between the specified channel's coupled input and oscilloscope ground. The channel is specified by <x>. There is also a corresponding query that requests the termination parameter and translates this enumeration into one of the two float values.

Group Vertical

Syntax CH<x>:TERmination {FIFTy|MEG|<NR3>}
CH<x>:TERmination?

Arguments FIFTy sets the channel <x> input resistance to 50 Ω .
MEG sets the channel <x> input resistance to 1 M Ω .
<NR3> specifies the channel <x> input resistance numerically.

Examples CH4:TERMINATION 50.0E+0 establishes 50 Ω impedance on channel 1.
CH2:TERMINATION? might return :CH2:TERMINATION 50.0E+0 indicating that channel 2 is set to 50 Ω impedance.

CH<x>:YUNits

Sets or returns the units for the channel specified by <x>, where x is the channel number. String arguments are case insensitive and any unsupported units will generate an error.

Supported units are:

%, /Hz, A, A/A, A/V, A/W, A/dB, A/s, AA, AW, AdB, As, B, Hz, IRE, S/s, V, V/A, V/V, V/W, V/dB, V/s, VV, VW, VdB, Volts, Vs, W, W/A, W/V, W/W, W/dB, W/s, WA, WV, WW, WdB, Ws, dB, dB/A, dB/V, dB/W, dB/dB, dBA, dBV, dBW, dBdB, day, degrees, div, hr, min, ohms, percent, s

Group Vertical

Syntax CH<x>:YUNits <QString>
CH<x>:YUNits?

Arguments QString is a string of text surrounded by quotes, specifying the supported units.

CLEARMenu (No Query Form)

Clears the current menu from the display. This command is equivalent to pressing the front panel Menu off.

Group Miscellaneous

Syntax CLEARMenu

*CLS (No Query Form)

Clears the following:

- Event Queue
- Standard Event Status Register
- Status Byte Register (except the MAV bit)

If the *CLS command immediately follows an <EOI>, the Output Queue and MAV bit (Status Byte Register bit 4) are also cleared. The MAV bit indicates that information is in the output queue. The device clear (DCL) GPIB control message will clear the output queue and thus MAV. *CLS does not clear the output queue or MAV.

*CLS can suppress a Service Request that is to be generated by an *OPC. This will happen if a single sequence acquisition operation is still being processed when the *CLS command is executed.

Group Status and Error

Syntax *CLS

Related Commands [DESE](#), [*ESE](#), [*ESR?](#), [EVENT?](#), [EVMsg?](#), [*SRE](#), [*STB?](#)

Examples *CLS clears the oscilloscope status data structures.

CURSor?

Returns all of the current cursor settings.

Group Cursor

Syntax `CURSor?`

Examples `CURSOR?` might return the following as the current cursor settings:
`:CURSOR:FUNCTION SCREEN;HBARS:POSITION1 0.0000;POSITION2`
`0.0000;UNITS BASE;;CURSOR:MODE INDEPENDENT;VBARS:POSITION1`
`-19.0006E-6;POSITION2 -18.9994E-6;UNITS SECONDS`

CURSor:DDT? (Query Only)

Returns the cursor deltaY/deltaT (dY/dT) readout.

Conditions This command requires a DPO4PWR application module.

Group Cursor

Syntax `CURSor:DDT?`

Examples `CURSOR:DDT?` might return `:CURSOR:DDT -166.6670` indicating that the cursor dV/dt read out is -166.6670

CURSor:FUNCTION

Sets or returns the cursor type. Cursors are attached to the selected waveform in Waveform mode and are attached to the display area in Screen mode.

Group Cursor

Syntax `CURSor:FUNCTION {OFF|SCREEN|WAVEform}`
`CURSor:FUNCTION?`

Arguments `OFF` removes the cursors from the display but does not change the cursor type.

`SCREEN` specifies both horizontal and vertical bar cursors, which measure the selected waveform in horizontal and vertical units. Use these cursors to measure anywhere in the waveform display area.

`WAVEform` specifies paired cursors in YT display format for measuring waveform amplitude and time. In XY and XYZ format, these cursors indicate the amplitude positions of an XY pair (Ch1 vs Ch2 voltage, where Ch1 is the X axis and Ch2 is the Y axis) relative to the trigger.

- Examples** `CURSOR:FUNCTION WAVEFORM` selects the paired cursors for measuring waveform amplitude and time.
- `CURSOR:FUNCTION?` might return `:CURSOR:FUNCTION SCREEN` indicating that the screen cursors are currently selected.

CURSOR:HBARS? (Query Only)

Returns the current settings for the horizontal bar cursors.

- Group** Cursor
- Syntax** `CURSOR:HBARS?`
- Examples** `CURSOR:HBARS?` might return the horizontal bar setting as `:CURSOR:HBARS:POSITION1 320.0000E-03;POSITION2-320.0000E-03;UNITS BASE`

CURSOR:HBARS:DELTA? (Query Only)

Returns the vertical difference between the two horizontal bar cursors.

- Group** Cursor
- Syntax** `CURSOR:HBARS:DELTA?`
- Related Commands** [CURSOR:HBARS:UNITS](#)
- Returns** A floating point value with an exponent.
- Examples** `CURSOR:HBARS:DELTA?` might return `:CURSOR:HBARS:DELTA 5.0800E+00` indicating that the difference between the two cursors is 5.08.

CURSOR:HBARS:POSITION<x>

Sets or returns the horizontal bar cursor position relative to ground, which is expressed in vertical units (usually volts). The cursor is specified by x, which can be 1 or 2.

Group	Cursor
Syntax	<code>CURSor:HBARS:POSITION<x> <NR3></code> <code>CURSor:HBARS:POSITION<x>?</code>
Related Commands	CURSor:FUNctioN
Arguments	<NR3> specifies the cursor position relative to ground.
Examples	<code>CURSOR:HBARS:POSITION1 25.0E-3</code> positions Cursor 1 of the horizontal cursors at 25 mV. <code>CURSOR:HBARS:POSITION2?</code> might return <code>:CURSOR:HBARS:POSITION2 -64.0000E-03</code> indicating that Cursor 2 of the horizontal bar cursors is at -64 mV.

CURSor:HBARS:UNIts

Sets or returns the units for the horizontal bar cursors.

Group	Cursor
Syntax	<code>CURSor:HBARS:UNIts {BASE PERcent}</code> <code>CURSor:HBARS:UNIts?</code>
Arguments	BASE selects the vertical units for the selected waveform. PERcent selects ratio cursors.
Examples	<code>CURSOR:HBARS:UNITS</code> might return <code>:CURSOR:HBARS:UNITS BASE</code> indicating that the units for the horizontal bar cursors are base.

CURSor:HBARS:USE (No Query Form)

Sets the horizontal bar cursor measurement scale. This command is only applicable when ratio cursors are on.

Group	Cursor
Syntax	<code>CURSor:HBARS:USE {CURrent HALFgrat}</code>

Related Commands [CURSor:HBArS:UNIts](#)

- Arguments** **CURrent** sets the H Bar measurement scale so that 0% is the current position of the lowest H Bar cursor and 100% is the current position of the highest H Bar cursor.
- HALFgrat** sets H Bar measurement scale so that half the screen major divisions (five on the MSO/DPO4000) is 100%, where 0% is -2.5 divisions and 100% is +2.5 divisions from the center horizontal graticule.
- Examples** **CURSOR:HBARS:USE HALFGRAT** sets the H Bar measurement scale so that five screen major divisions equals 100%.

CURSor:MODE

Sets or returns whether the two cursors move linked together in unison or separately. This command is equivalent to setting Linked to On or Off in the Cursor menu.

- Group** Cursor
- Syntax** **CURSor:MODE {TRACK|INdependent}**
CURSor:MODE?
- Arguments** **TRACK** ties the navigational functionality of the two cursors together. For cursor 1 adjustments, this ties the movement of the two cursors together; however, cursor 2 continues to move independently of cursor 1. This mode only applies when the [DISplay:FORMat](#) is set to YT.
- INdependent** allows independent adjustment of the two cursors.
- Examples** **CURSOR:MODE TRACK** specifies that the cursor positions move in unison.
- CURSOR:MODE?** might return **:CURSOR:MODE TRACK** indicating that the two cursors move in unison.

CURSor:VBArS? (Query Only)

Returns the current settings for the vertical bar cursors.

- Group** Cursor

Syntax `CURSor:VBArS?`

Examples `CURSOR:VBARS?` might return the following vertical bar settings
 `:CURSOR:VBARS:UNITS SECONDS;POSITION1 1.0000E-06;POSITION2`
 `9.0000E-06`

CURSor:VBArS:ALTErNATE<x>? (Query Only)

Returns the alternate readout for the waveform (Vbar) cursors specified by <x>. This alternate readout is in effect when the selected waveform is a bus or digital channel.

Group Cursor

Syntax `CURSor:VBArS:ALTErNATE<x>?`

Arguments `X = 1` specifies vertical bar cursor1.
 `X = 2` specifies vertical bar cursor2.

CURSor:VBArS:DELTA? (Query Only)

Returns the horizontal difference between the two vertical bar cursors. The units are specified by the `CURSor:VBArS:UNItS` command.

This is equivalent to watching the cursor readout in the display while using the appropriate cursor mode.

Group Cursor

Syntax `CURSor:VBArS:DELTA?`

Related Commands [CURSor:VBArS:UNItS](#)

Returns <NR3>

Examples `CURSOR:VBARS:DELTA?` might return `:CURSOR:VBARS:DELTA 1.0640E+00` indicating that the time between the vertical bar cursors is 1.064 s.

CURSor:VBArS:HPOS<x>? (Query Only)

Returns the vertical value of the specified vertical bar ticks for cursor <x>.

Group Cursor

Syntax CURSor:VBArS:HPOS<x>?

Related Commands [CURSor:VBArS:UNIts](#)

Arguments <x> specifies the cursor. Valid values are 1 and 2.

Returns <NR3> indicates the value of one of the ticks. The units are the same as the selected waveform.

Examples CURSor:VBArS:HPOS2? might return CURSOR:VBARS:HPOS2 100E-3, indicating the waveform value where the cursor intersects it is 0.100.

CURSor:VBArS:POSITION<x>

Sets or returns the horizontal position for the specified vertical bar cursor. The cursor is specified by <x>, which can be 1 or 2. Values are with respect to trigger position or the zero reference point for the designated waveform (if horizontal units are not set to time). Use the CURSor:VBArS:UNIts command to specify units.

Group Cursor

Syntax CURSor:VBArS:POSITION<x> <NR3>
CURSor:VBArS:POSITION<x>?

Related Commands [CURSor:VBArS:UNIts](#)

Arguments <NR3> specifies the cursor position.

Returns A floating point value with an exponent.

Examples `CURSOR:VBARS:POSITION2 9.00E-6` positions the cursor2 vertical bar cursor at 9 ms.

`CURSOR:VBARS:POSITION1?` this command might return `:CURSOR:VBARS:POSITION1 1.0000E-06` indicating that the cursor1 vertical bar is positioned at 1 μ s.

CURSOR:VBARS:UNITS

Sets or returns the units for the vertical bar cursors.

Group Cursor

Syntax `CURSOR:VBARS:UNITS {SECONDS|HERTZ|DEGREES|PERCENT}`
`CURSOR:VBARS:UNITS?`

Arguments `SECONDS` sets the units of the vertical bar cursors for the time domain (seconds).
`HERTZ` sets the units of the vertical bar cursors for the frequency domain (Hertz).
`DEGREES` sets the units to degrees for measuring phase.
`PERCENT` sets the units to percent for use with ratio cursors.

Returns `SECONDS`, `HERTZ`, `DEGREES`, or `PERCENT`, depending on the current vertical bar cursor units.

Examples `CURSOR:VBARS:UNITS HERTZ` sets the units of the VBARS cursors to 1/seconds.
`CURSOR:VBARS:UNITS?` might return `:CURSOR:VBARS:UNITS SECONDS` indicating that the units for the vertical bar cursor are currently set to seconds.

CURSOR:VBARS:USE (No Query Form)

Sets the vertical bar cursor measurement scale.

Conditions This command is only applicable when ratio cursors are on.

Group Cursor

Syntax `CURSOR:VBARS:USE {CURRENT|HALFGRAT|FIVEDIVS}`

Related Commands [CURSor:VBArS:UNIts](#)

- Arguments** **CURrent** sets the V Bar measurement scale so that 0% is the current position of the left-most V Bar cursor and 100% is the current position of the right-most V Bar cursor.
- HALFgrat** resets the ratio range to the default positions on the screen, half of the number of horizontal divisions (five on the MSO/DPO4000), from 25% to 75% of the screen.
- FIVEdivs** sets V Bar measurement scale so that 5 screen major divisions is 100%, where 0% is -2.5 divisions and 100% is +2.5 divisions from the center vertical graticule.
- Examples** **CURSOR:VBARS:USE CURRENT** sets the V Bar measurement scale to use the current cursor positions as 0% and 100% of scale if units are set to %.

CURSor:VBArS:VDELtA? (Query Only)

Returns the vertical difference between the two vertical bar cursor ticks.

Group Cursor

Syntax CURSor:VBArS:VDELtA?

Related Commands [CURSor:HBArS:UNIts](#)

Returns <NR3> indicates the vertical difference between the two vertical bar cursors' ticks.

Examples **CURSOR:VBARS:VDELTA?** might return **CURSOR:VBARS:VDELTA 1.064E+0**, indicating that the vertical difference between the vertical bar cursors ticks is 1.064 units.

CURSor:XY:POLar:RADIUS:DELtA? (Query Only)

Returns the difference between the cursors X radius and the cursor Y radius (ΔY , ΔX). The ratio is calculated as (cursor 2 Y - cursor 1 Y) \div (cursor 2 X - cursor 1 X).

Group Cursor

Syntax `CURSor:XY:POLar:RADIUS:DELta?`

CURSor:XY:POLar:RADIUS:POSITION<x>? (Query Only)

Returns the polar radius for the specified cursor, where x can be either 1 or 2.

Group Cursor

Syntax `CURSor:XY:POLar:RADIUS:POSITION<x>?`

CURSor:XY:POLar:RADIUS:UNIts? (Query Only)

Returns the polar radius units.

Group Cursor

Syntax `CURSor:XY:POLar:RADIUS:UNIts?`

CURSor:XY:POLar:THETA:DELta? (Query Only)

Returns the XY cursor polar angle delta.

Group Cursor

Syntax `CURSor:XY:POLar:THETA:DELta?`

CURSor:XY:POLar:THETA:POSITION<x>? (Query Only)

Returns the cursor X or cursor Y polar coordinate, where x is either 1 or 2.

Group Cursor

Syntax `CURSor:XY:POLar:THETA:POSITION<x>?`

CURSor:XY:POLar:THETA:UNIts? (Query Only)

Returns the cursor coordinate units.

Group Cursor

Syntax CURSor:XY:POLar:THETA:UNIts?

CURSor:XY:PRODUCT:DELta? (Query Only)

Returns the difference between the cursors X position and cursor Y position. The $\Delta X \times \Delta Y$ value is calculated as $(X2 - X1) \times (Y2 - Y1)$.

Group Cursor

Syntax CURSor:XY:PRODUCT:DELta?

CURSor:XY:PRODUCT:POSITION<x>? (Query Only)

Returns the position of the X or Y cursor used to calculate the $X \times Y$ cursor measurement, Position 1 = $(X1 \times Y1)$; Position 2 = $(X2 \times Y2)$. The cursor is specified by x, which can be 1 or 2.

Group Cursor

Syntax CURSor:XY:PRODUCT:POSITION<x>?

CURSor:XY:PRODUCT:UNIts? (Query Only)

Returns the XY cursor product units.

Group Cursor

Syntax CURSor:XY:PRODUCT:UNIts?

CURSor:XY:RATIO:DELta? (Query Only)

Returns the ratio of the difference between the cursors X position and cursor Y position (ΔY , ΔX). The ratio is calculated as $(Y2 - Y1) / (X2 - X1)$.

Group Cursor

Syntax CURSor:XY:RATIO:DELta?

CURSor:XY:RATIO:POSITION<x>? (Query Only)

Returns the X (horizontal) or Y (vertical) position for the specified cursor, which can be 1 (X) or 2 (Y). The ratio is calculated as Position 1 = $(Y1/X1)$; Position 2 = $(Y2/X2)$.

Group Cursor

Syntax CURSor:XY:RATIO:POSITION<x>?

CURSor:XY:RATIO:UNIts? (Query Only)

Returns the cursor X and cursor Y units for the ratio measurement.

Group Cursor

Syntax CURSor:XY:RATIO:UNIts?

CURSor:XY:READOUT

Sets or returns the XY cursor readout selection. This command is useful for oscilloscope models with limited display room. Oscilloscopes with sufficient display, such as the MSO4000 and DPO4000 series, show all the readouts simultaneously.

Group Cursor

Syntax CURSor:XY:READOUT {RECTangular|POLARCORD|PRODUCT|RATIO}
CURSor:XY:READOUT?

Arguments **RECTangular** specifies the XY readout as rectangular coordinates.
 POLARCord specifies the XY readout as polar coordinates.
 PRODuct specifies the XY readout in X*Y format.
 RATio specifies the XY readout in X:Y format.

CURSor:XY:RECTangular:X:DELta? (Query Only)

Returns the cursor X delta value in rectangular coordinates.

Group Cursor

Syntax CURSor:XY:RECTangular:X:DELta?

CURSor:XY:RECTangular:X:POSITION<x>

Sets or returns the X rectangular coordinate for cursor 1 or cursor 2. The cursor is specified by x and can be either 1 or 2.

Group Cursor

Syntax CURSor:XY:RECTangular:X:POSITION<x> <NR3>
 CURSor:XY:RECTangular:X:POSITION<x>?

Arguments <NR3> is the coordinate in volts.

CURSor:XY:RECTangular:X:UNIts? (Query Only)

Returns the cursor X rectangular units.

Group Cursor

Syntax CURSor:XY:RECTangular:X:UNIts?

CURSor:XY:RECTangular:Y:DELta? (Query Only)

Returns The cursor Y delta value in rectangular coordinates.

Group Cursor

Syntax CURSor:XY:RECTangular:Y:DELta?

CURSor:XY:RECTangular:Y:POSITION<x>

Sets or returns the Y rectangular coordinate for cursor 1 or cursor 2. The cursor is specified by x and can be either 1 or 2.

Group Cursor

Syntax CURSor:XY:RECTangular:Y:POSITION<x> <NR3>
CURSor:XY:RECTangular:Y:POSITION<x>?

Arguments <NR3> is the coordinate in volts.

CURSor:XY:RECTangular:Y:UNIts? (Query Only)

Returns the cursor Y rectangular units.

Group Cursor

Syntax CURSor:XY:RECTangular:Y:UNIts?

CURVe

Transfers waveform data to and from the oscilloscope in binary or ASCII format. Each waveform transferred includes a waveform preamble which contains the data format, scale, and associated information.

For analog waveforms, the CURVe? query transfers data from the oscilloscope. The data source is specified by the [DATA:SOUrce](#) command. The first and last data points are specified by the [DATA:STARt](#) and [DATA:STOP](#) commands.

The oscilloscope returns data from the last acquisition if the source is a channel waveform that is being previewed. The data does not reflect the acquisition preview parameters. The user should always follow acquisition parameter changes with a single sequence OPC command prior to CURVe? to ensure the return data reflects the new acquisition parameters.

The CURVE command transfers waveform data to the oscilloscope. The data is stored in the reference memory location specified by [DATA:DESTination](#), starting with the data point specified by [DATA:START](#). Only one waveform can be transferred at a time. The waveform will only be displayed if the reference is displayed.

NOTE. *Transferring large volumes of data to or from the oscilloscope takes time. ASCII waveform transfer is very inefficient.*

Group	Waveform Transfer
Syntax	CURVE {<Block> <asc curve> DIGtal} CURVE?
Related Commands	DATA:DESTination , DATA:SOUrce , DATA:STARt , DATA:STOP , WFMinpre? , WFMinpre:BYT_Nr , WFMOupre? , HEADer
Arguments	<p><Block> is the waveform data in binary format. The waveform is formatted as: #<x><yyy><data><newline>, where:</p> <ul style="list-style-type: none"> <x> is the number of y bytes. For example, if <yyy>=500, then <x>=3) <yyy> is the number of bytes to transfer. If width is 1, then all bytes on the bus are single data points. If width is 2, then all bytes on the bus are 2-bytes wide. Use the WFMinpre:BYT_Nr command to set the width for waveforms transferred into the oscilloscope. Use WFMOupre:BYT_Nr to set the width for waveforms transferred out from the oscilloscope. <data> is the curve data. <newline> is a single byte new line character at the end of the data. <p><asc curve> is the waveform data in ASCII format. The format for ASCII data is <NR1>[,<NR1>...], where each <NR1> represents a data point.</p> <p>DIGital Sends the data to the specified reference waveform slot, as specified by the DATA:DESTINATION command. If the data encoding is a binary format, then depending upon the setting of HEADER, the binary block header is prepended to the output data. (MSO models only)</p>
Examples	<p>CURVE? with ASCII encoding, start and stop of 1 and 10 respectively, and a width set to 1 might return :CURVE 61,62,61,60,60,-59,-59,-58,-58,-59</p>

NOTE. Curve data is transferred from the oscilloscope asynchronously, depending on the length of the curve record. Such transfers may require several seconds to complete. During this period, the oscilloscope will not respond to the user controls. You can interrupt these asynchronous data transfers by sending a device clear message to the oscilloscope or by interrupting the query with another command or query. In order to verify that curve data has been completely transferred, it is recommended that you follow such queries with an **ESR?* query to verify there are no error bits set. You can also check the event queue to determine the cause of the error. If the error was caused by an interrupted query, then the asynchronous data transfer was not complete when the **ESR?* query was sent. In such cases, it may be necessary to increase the program's time-out value to ensure that all data is transferred and read.

DATa

Sets or returns the format and location of waveform data transferred with the *CURVe?* query or *CURVe* command.

Group Waveform Transfer

Syntax DATa {INIT|SNAp}
DATa?

Related Commands *CURVe*, *DATa:START*, *DATa:STOP*, *DATa:ENCdg*, *WFMInpre:NR_Pt*, *WFMOupre:NR_Pt?*

Arguments INIT initializes the waveform data parameters to their factory defaults except for *DATa:STOP*, which is set to the current acquisition record length.

SNAp sets *DATa:START* and *DATa:STOP* to match the current waveform cursor positions.

Examples DATa? might return :DATA:DESTINATION REF1:ENCDG RIBINARY;SOURCE CH1;START 1;STOP 500;WIDTH 1

DATa INIT initializes the waveform data parameters to their factory defaults.

DATa:DESTination

Sets or returns the reference memory location for storing waveform data transferred into the oscilloscope by the *CURVe* command.

Group	Waveform Transfer
Syntax	DATA:DESTination REF<X> DATA:DESTination?
Related Commands	CURVe
Arguments	REF<X> is the reference location where the waveform will be stored.
Examples	DATA:DESTINATION? might return :DATA:DESTINATION REF3 indicating that reference 3 is the currently selected reference memory location for incoming waveform data. DATA:DESTINATION REF1 indicates that incoming waveform data be stored in reference 1.

DATA:ENCdg

Sets or returns the format of outgoing waveform data. This command is equivalent to setting [WFMOutpre:ENCdg](#), [WFMOutpre:BN_Fmt](#), and [WFMOutpre:BYT_Or](#). Setting the DATA:ENGdg value causes the corresponding WFMOutpre values to be updated and conversley.

NOTE. *This command and query does not apply to incoming waveform data.*

Group	Waveform Transfer
Syntax	DATA:ENCdg {ASCIi FASTest RIBinary RPBinary SRIBinary SRPbinary} DATA:ENCdg?
Related Commands	WFMOutpre:ENCdg , WFMOutpre:BN_Fmt , WFMOutpre:BYT_Or
Arguments	<p>ASCIi specifies the ASCII representation for waveform data points. If ASCII is the value, then :BN_Fmt and :BYT_Or are ignored.</p> <p>FASTest specifies that the data be sent in the fastest possible manner consistent with maintaining accuracy and is interpreted with respect to the waveform specified by DATA:SOUrce.</p> <p>RIBINARY specifies signed integer data point representation with the most significant byte transferred first.</p>

When :BYT_Nr is 1, the range is from -128 through 127. When :BYT_Nr is 2, the range is from -32,768 through 32,767. Center screen is 0 (zero). The upper limit is the top of the screen and the lower limit is the bottom of the screen. This is the default argument.

RPBinary specifies the positive integer data-point representation, with the most significant byte transferred first.

When :BYT_Nr is 1, the range from 0 through 255. When :BYT_Nr is 2, the range is from 0 to 65,535. The center of the screen is 127. The upper limit is the top of the screen and the lower limit is the bottom of the screen.

SRIBinary is the same as **RIBinary** except that the byte order is swapped, meaning that the least significant byte is transferred first. This format is useful when transferring data to IBM compatible PCs.

SRPbinary is the same as **RPBinary** except that the byte order is swapped, meaning that the least significant byte is transferred first. This format is useful when transferring data to PCs.

Table 2-39: DATa and WFMOutpre Parameter Settings

DATa:ENCdg Setting	WFMOutpre Settings			
	:ENCdg	:BN_Fmt	:BYT_Or	:BYT_NR
ASCIi	ASC	N/A	N/A	1,2
FAStest	BIN	RI	MSB	1,2
RIBinary	BIN	RI	MSB	1,2
RPBinary	BIN	RP	MSB	1,2
SRIBinary	BIN	RI	LSB	1,2
SRPbinary	BIN	RP	LSB	1,2

Examples **DATA:ENCDG?** might return **:DATa:ENCDG SRPBINARY** for the format of the outgoing waveform data.

DATA:ENCDG RPBinary sets the data encoding format to be a positive integer where the most significant byte is transferred first.

DATa:SOURce

Sets or returns the location of the waveform data transferred from the oscilloscope by the **CURVe?** query.

Group Waveform Transfer

Syntax	DATA:SOURCE {CH1 CH2 CH3 CH4 MATH REF1 REF2 REF3 REF4 D0 D1 D2 D3 D4 D5 D6 D7 D8 D9 D10 D11 D12 D13 D14 D15} DATA:SOURCE?
Related Commands	CURVe
Arguments	<p>CH1–CH4 specifies which analog channel data will be transferred from the oscilloscope to the controller, channels 1 through 4.</p> <p>MATH specifies that the Math waveform data will be transferred from the oscilloscope to the controller.</p> <p>REF1–REF4 specifies which Reference waveform data will be transferred from the oscilloscope to the controller, waveforms, 1 through 4.</p> <p>D0–D15 specifies which digital channel data will be transferred from the oscilloscope to the controller, channels 0 through 15. (MSO models only)</p> <p>DIGi tal specifies that the Digital waveform data will be transferred from the oscilloscope to the controller. (MSO models only)</p>
Examples	<p>DATA:SOURCE? might return :DATA:SOURCE REF3 indicating that the source for the waveform data which is transferred using a CURVe? query is reference 3.</p> <p>DATA:SOURCE CH1 specifies that the CH1 waveform will be transferred in the next CURVe? query.</p>

DATA:START

Sets or returns the starting data point for incoming or outgoing waveform transfer. This command allows for the transfer of partial waveforms to and from the oscilloscope.

Group	Waveform Transfer
Syntax	DATA:START <NR1> DATA:START?
Related Commands	CURVe , DATA , DATA:STOP , WFMinpre:NR_Pt , WFMOupre:NR_Pt?
Arguments	<p><NR1> is the first data point that will be transferred, which ranges from 1 to the record length. Data will be transferred from <NR1> to DATA:STOP or the record length, whichever is less. If <NR1> is greater than the record length, the last data point in the record is transferred.</p>

DATA:START and DATA:STOP are order independent. When DATA:STOP is greater than DATA:START, the values will be swapped internally for the CURVE? query.

Examples DATA:START? might return :DATA:START 214 indicating that data point 214 is the first waveform data point that will be transferred.

DATA:START 10 specifies that the waveform transfer will begin with data point 10.

DATA:STOP

Sets or returns the last data point that will be transferred when using the CURVE? query. This command allows for the transfer of partial waveforms from the oscilloscope.

Changes to the record length value are not automatically reflected in the DATA:STOP value. As record length is varied, the DATA:STOP value must be explicitly changed to ensure the entire record is transmitted. In other words, curve results will not automatically and correctly reflect increases in record length if the distance from DATA:START to DATA:STOP stays smaller than the increased record length.

Group Waveform Transfer

Syntax DATA:STOP <NR1>
DATA:STOP?

Related Commands CURVe, DATA, DATA:START, WFMInpre:NR_Pt, WFMOutpre:NR_Pt

Arguments <NR1> is the last data point that will be transferred, which ranges from 1 to the record length. If <NR1> is greater than the record length, then data will be transferred up to the record length. If both DATA:START and DATA:STOP are greater than the record length, the last data point in the record is returned.

DATA:START and DATA:STOP are order independent. When DATA:STOP is less than DATA:START, the values will be swapped internally for the CURVE? query.

If you always want to transfer complete waveforms, set DATA:START to 1 and DATA:STOP to the maximum record length, or larger.

Examples DATA:STOP? might return :DATA:STOP 14900 indicating that 14900 is the last waveform data point that will be transferred.

DATA:STOP 15000 specifies that the waveform transfer will stop at data point 15000.

DATE

Sets or returns the date the oscilloscope displays.

Group Miscellaneous

Syntax DATE <QString>
DATE?

Related Commands [TIME](#)

Arguments <QString> is a date in the form "yyyy-mm-dd" where yyyy refers to a four-digit year number, mm refers to a two-digit month number from 01 to 12, and dd refers to a two-digit day number in the month.

Examples DATE "2006-01-24" specifies that the date is set to January 24, 2006.

DATE? might return :DATE 2006-01-24 indicating the current date is set to January 24, 2006.

*DDT

Allows you to specify a command or a list of commands that execute when the oscilloscope receives a [*TRG](#) command or the GET IEEE488.2 interface message. Define Device Trigger (*DDT) is a special alias that the *TRG command uses.

Group Miscellaneous

Syntax *DDT {<Block>|<QString>}
*DDT?

Related Commands [ALias](#), [*TRG](#)

Arguments <Block> is a complete sequence of program messages. The messages can contain only valid commands that must be separated by semicolons and must follow all

rules for concatenating commands. The sequence must be less than or equal to 80 characters. The format of this argument is always returned as a query.

<QString> is a complete sequence of program messages. The messages can contain only valid commands that must be separated by semicolons and must follow all rules for concatenating commands. The sequence must be less than or equal to 80 characters.

Examples *DDT #OACQUIRE:STATE RUN specifies that the acquisition system will be started each time a *TRG command is sent.

DESE

Sets or returns the bits in the Device Event Status Enable Register (DESER). The DESER is the mask that determines whether events are reported to the Standard Event Status Register (SESR), and entered into the Event Queue. For a detailed discussion of the use of these registers, see Registers.

Group Status and Error

Syntax DESE <NR1>
DESE?

Related Commands *CLS, *ESE, *ESR?, EVENT?, EVMsg?, *SRE, *STB?

Arguments <NR1> sets the binary bits of the DESER according to this value, which ranges from 1 through 255. For example, DESE 209 sets the DESER to the binary value 11010001 (that is, the most significant bit in the register is set to 1, the next most significant bit to 1, the next bit to 0, etc.).

The power-on default for DESER is all bits set if *PSC is 1. If *PSC is 0, the DESER maintains the previous power cycle value through the current power cycle.

NOTE. Setting the DESER and ESER to the same value allows only those codes to be entered into the Event Queue and summarized on the ESB bit (bit 5) of the Status Byte Register. Use the *ESE command to set the ESER.

Examples DESE 209 sets the DESER to binary 11010001, which enables the PON, URQ, EXE and OPC bits.

DESE? might return :DESE 186, showing that the DESER contains the binary value 10111010.

DESkew (No Query Form)

Causes the deskew values for all channels to be set to the recommended values. Equivalent to pressing the "Set all deskews to recommended values" button in the application UI.

NOTE. *The actual deskew values for each channel can be set or queried using the [CH<x>:DESKew](#) command.*

Group	Vertical
Syntax	DESkew {SETALLtorec}
Arguments	<SETALLtorec> sets the deskew for all channels to the recommended values.

DESkew:DISPlay

Sets or returns the state of the deskew table display.

Group	Vertical
Syntax	DESkew:DISPlay {OFF ON 0 1} DESkew:DISPlay?
Arguments	OFF or 0 turns off the deskew table display. ON or 1 turns on the deskew table display.

DIAG:LOOP:OPTion

Sets the self-test loop option.

Group	Calibration and Diagnostic
Syntax	DIAG:LOOP:OPTion {ALWAYS FAIL ONFAIL ONCE NTIMES}
Arguments	ALWAYS continues looping until the self tests (diagnostics) are stopped via the front panel or by an oscilloscope command.

FAIL causes looping until the first self test (diagnostic) failure or until self tests (diagnostics) are stopped.

ONFAIL causes looping on a specific test group as long as a FAIL status is returned from the test.

ONCE executes self test (diagnostics test) sequence once.

NTIMES runs “n” number of loops.

Examples `DIAG:LOOP:OPTION ONCE` runs one loop of self tests.

DIAG:LOOP:OPTion:NTIMes

Sets the self-test loop option to run N times.

Group Calibration and Diagnostic

Syntax `DIAG:LOOP:OPTion:NTIMes <NR1>`
`DIAG:LOOP:OPTion:NTIMes?`

Arguments <NR1> is the number of self-test loops.

Examples `DIAG:LOOP:OPTION:NTIMES 3` sets the self-test loop to run three times.
`DIAG:LOOP:OPTION:NTIMES?` might return `:DIAG:LOOP:OPTION:NTIMES 5`, indicating the self-test loop is set to run five times.

DIAG:LOOP:STOP (No Query Form)

Stops the self-test at the end of the current loop.

Group Calibration and Diagnostic

Syntax `DIAG:LOOP:STOP`

Examples `DIAG:LOOP:STOP` stops the self test at the end of the current loop.

DIAG:RESUlt:FLAg? (Query Only)

Returns the pass/fail status from the last self-test sequence execution. Use this query to determine which test(s) has failed.

Group Calibration and Diagnostic

Syntax DIAG:RESUlt:FLAg?

Related Commands [DIAG:RESUlt:LOG?](#)

Returns PASS indicates that all of the selected self (diagnostic) tests have passed.
 FAIL indicates that at least one of the selected self (diagnostic) tests has failed.
 IN PROGRESS indicates that at least one of the selected self (diagnostic) tests is ongoing.
 NOT RUN indicates that the selected diagnostic test suite has not been run since the instrument was powered on.

Examples DIAG:RESULT:FLAG? might return DIAG:RESULT:FLAG PASS.

DIAG:RESUlt:LOG? (Query Only)

Returns the internal results log from the last self-test sequence execution. The list contains all modules and module interfaces that were tested along with the pass/fail status of each.

Group Calibration and Diagnostic

Syntax DIAG:RESUlt:LOG?

Related Commands [DIAG:RESUlt:FLAg?](#)

Returns <QString> in the following format:
 <Status>--<Module name>[,<Status>--<Module name>...]

Examples `DIAG:RESULT:LOG?` might return `:DIAG:RESULT:LOG "NOT RUN--CPU,NOT RUN--DISPLAY,NOT RUN--FPANEL,NOT RUN--IO,NOT RUN--ACQ,NOT RUN--ROM,NOT RUN--APPKEY"`

DIAG:SElect (No Query Form)

Sets the type of diagnostics grouping.

Group Calibration and Diagnostic

Syntax `DIAG:SElect {ALL|APPKey|CPU|DISPlay|FPANel|IO|ROM|ACQ}`

Arguments ALL runs all diagnostic groups.
 APPKey runs just the application key diagnostic group.
 CPU runs just the CPU diagnostic group.
 DISPlay runs just the display circuit diagnostic group.
 FFPANel runs just the front panel diagnostic group.
 IO runs just the IO board diagnostic group.
 ROM runs just the IO board diagnostic group.
 ACQ runs just the acquisition system diagnostic group.

DIAG:SElect:<function> (No Query Form)

Runs self-tests on the specified system subsystem.

Group Calibration and Diagnostic

Syntax `DIAG:SElect:<function>`

Arguments <function> specifies a single oscilloscope subsystem on which to run self tests (diagnostics). Valid values are:
 ACQ tests the acquisition system.
 APPKey tests the application keys.
 CPU tests the CPU.
 DISPlay tests the display.

FPAnel tests the front panel controls.

IO tests the IO ports.

ROM tests the system read only memory.

Examples **DIAG:SELECT:CPU** sets the oscilloscope to run just CPU tests.

DIAG:STATE (No Query Form)

This command starts or stops the oscilloscope self-test. Depending on the argument, self-test capabilities are either turned on or off.

Group Calibration and Diagnostic

Syntax **DIAG:STATE {EXECute|ABORT}**

Arguments **EXECute** starts diagnostics.

ABORT stops diagnostics at the end of the current loop.

Examples **DIAG:STATE EXECute** starts diagnostics.

DISplay? (Query Only)

Returns the current display settings.

Group Display

Syntax **DISplay?**

DISplay:CLOCK

Sets or returns whether the oscilloscope displays the date and time. The query form of this command returns an ON (1) or an OFF (0).

Group Display

Syntax `DISPlay:CLOCK {ON|OFF|<NR1>}`
`DISPlay:CLOCK?`

Related Commands [DATE](#), [TIME](#)

Arguments ON enables the display of date and time.
 OFF disables the display of date and time.
 <NR1> = 0 disables the display of date and time; any other value enables the display of date and time.

Examples `DISPLAY:CLOCK ON` enables display of date and time.
`DISPLAY:CLOCK?` might return `:DISPLAY:CLOCK 1` indicating that the display of date and time is currently enabled.

DISplay:DIGital:HEIght

Sets or returns the number of available digital waveform position slots.

NOTE. *If the number of live digital channels exceeds the number of slots, their height is reduced to a smaller size, allowing all digital channels to be displayed.*

Group Display

Syntax `DISPlay:DIGital:HEIght {SMAlL|MEDium|LARGe}`
`DISPlay:DIGital:HEIght?`

Arguments `SMAlL` sets the height to 40.
`MEDium` sets the height to 20.
`LARGe` sets the height to 10.

DISplay:FORMat

Sets or returns the display format.

Group Display

Syntax `DISplay:FORMat {YT|XY}`
`DISplay:FORMat?`

Arguments YT sets the display to a voltage versus time format and is the default mode.

XY argument displays one waveform against another. Selecting one source causes its corresponding source to be implicitly selected, producing a single trace from the two input waveforms.

Examples `DISPLAY:FORMAT XY` sets the display format to XY.

`DISPLAY:FORMAT?` might return `DISPLAY:FORMAT YT` indicating the display format is YT.

DISplay:GRAticule

Selects or queries the type of graticule the oscilloscope displays.

Group Display

Syntax `DISplay:GRAticule {CROSSHair|FRame|FULl|GRId}`
`DISplay:GRAticule?`

Arguments `CROSSHair` specifies a frame and cross hairs.

`FRame` specifies a frame only.

`FULl` specifies a frame, a grid and cross hairs.

`GRId` specifies a frame and grid only.

Examples `DISPLAY:GRATICULE FRame` sets the graticule type to display the frame only.

`DISPLAY:GRATICULE?` might return `:DISPLAY:GRATICULE FULL` indicating that all graticule elements are selected.

DISplay:INTENSITY? (Query Only)

Returns the display intensity settings.

Group Display

Syntax `DISPlay:INTENSITY?`

Examples `DISPLAY:INTENSITY?` might return: `:DISPLAY:INTENSITY:WAVEFORM
30;GRATICULE 75;BACKLIGHT HIGH`

DISplay:INTENSITY:BACKLight

Sets and returns the waveform backlight intensity settings.

Group Display

Syntax `DISPlay:INTENSITY:BACKLight {LOW|MEDIUM|HIGH}`
`DISPlay:INTENSITY:BACKLight?`

Examples `DISPLAY:INTENSITY:BACKLIGHT?` might return
`DISPLAY:INTENSITY:BACKLIGHT HIGH`

DISplay:INTENSITY:GRAticule

Sets and returns the display graticule intensity settings.

Group Display

Syntax `DISPlay:INTENSITY:GRAticule <NR1>`
`DISPlay:INTENSITY:GRAticule?`

Arguments `<NR1>` is the graticule intensity and ranges from 0 to 100 percent.

Examples `DISPLAY:INTENSITY:GRATICULE?` might return
`DISPLAY:INTENSITY:GRATICULE 30`

DISplay:INTENSITY:WAVEform

Sets and returns the display waveform intensity settings.

Group Display

Syntax	DISplay:INTENSITY:WAVEform <NR1> DISplay:INTENSITY:WAVEform?
Arguments	<NR1> is the waveform intensity and ranges from 1 to 100 percent.
Examples	DISPLAY:INTENSITY:WAVEFORM? might return DISPLAY:INTENSITY:WAVEFORM 60 as the intensity of the waveforms.

DISplay:PERsistence

Sets or returns the display persistence. This affects the display only.

NOTE. *When Persistence is set to Infinite, it does not mean that the brightness of any pixel should never decrease. The brightness of a pixel is proportionally dependent on the ratio between its intensity (which does NOT decrease at Infinite Persistence) and the maximum value of intensity of any pixel on the screen. If a particular pixel get hit less often than others, its brightness will decrease over time. It will become less bright relative to the pixels that get hit often.*

Group	Display
Syntax	DISplay:PERsistence {<NR3> CLEAR AUTO MINImum INFInite} DISplay:PERsistence?
Arguments	<p><NR3> specifies the time of the persistence.</p> <p>CLEAR resets the persist time count down and clears the display of acquired points.</p> <p>INFInite displays waveform points until a control change resets the acquisition system. When persistence is set to infinite, it does not mean that the brightness of any pixel should never decrease. The brightness of a pixel is proportionally dependent on the ratio between its intensity, which does NOT decrease at infinite persistence, and the maximum value of intensity of any pixel on the screen. Thus, if a particular pixel gets hit less often than others, its brightness will decrease over time. It will become less bright relative to the pixels that get hit often.</p> <p>AUTO specifies that the oscilloscope automatically determines the best waveform persistence based on the value of waveform intensity (DISPLAY:INTEnsITY:WAVEFORM)</p> <p>MINImum specifies that the waveform persistence is set to the minimum value of 0.0E0.</p>

Examples `DISPLAY:PERSISTENCE 3` specifies that the waveform points are displayed fading for 3 seconds before they completely disappear.

DISplay:STYle:DOTsonly

Turns on or off the dots-only mode for the waveform display.

Group Display

Syntax `DISplay:STYle:DOTsonly {ON|OFF|<NR1>}`
`DISplay:STYle:DOTsonly?`

Arguments ON or `<NR1> ≠ 0` turns on the dots-only display.
OFF or `<NR1> = 0` turns off the dots-only display.

D<x>

Sets or returns parameters for digital channel `<x>`, where x is the channel number.

Group Vertical

Syntax `D<x>`

D<x>:LABel

Sets or returns the waveform label for digital channel `<x>`, where x is the channel number.

Group Vertical

Syntax `D<x>:LABel <Qstring>`
`D<x>:LABel?`

Arguments `<Qstring>` is an alphanumeric string of text, enclosed in quotes, that contains the text label information for the digital channel `<x>` waveform. The text string is limited to 30 characters.

Examples D4:LABEL? might return :D4:LABEL "Clk wfm 4".

D<x>:POSition

Sets or returns the vertical position for digital channel <x>, where x is the channel number.

NOTE. Unlike analog channels, which use the center baseline as the zero point, digital channels use the bottom logic level as the zero point. Because of the slot model used to describe digital channel position, the oscilloscope rounds off divisions to the nearest slot.

Group Vertical

Syntax D<x>:POSition <NR3>
D<x>:POSition?

Arguments <NR3> is the position of the digital channel in slot units. Use the oscilloscope front-panel controls to place the channel; then query the channel to obtain an exact value for the position.

D<x>:THREShold

Sets or returns the logical threshold for digital channel <x>, where x is the channel number.

Group Vertical

Syntax D<x>:THREShold {ECL|TTL|<NR3>}
D<x>:THREShold?

Arguments ECL sets the digital threshold for channel <x> to a preset ECL high level of -1.3V.
TTL sets the digital threshold for channel <x> to a preset TTL high level of 1.4V.
<NR3> specifies the digital threshold for channel <x> in volts.

Examples D5:THRESHOLD ECL sets the threshold for D5 digital channel to ECL levels.
D14:threshold? might return :D14:THRESHOLD 1.2500 indicating that the threshold level for the D14 digital channel is 1.25 volts.

*ESE

Sets and queries the bits in the Event Status Enable Register (ESER). The ESER prevents events from being reported to the Status Byte Register (STB). For a detailed discussion on how to use registers, see Registers.

Group Status and Error

Syntax *ESE <NR1>
*ESE?

Related Commands [*CLS](#), [DESE](#), [*ESR?](#), [EVENT?](#), [EVMsg?](#), [*SRE](#), [*STB?](#)

Arguments <NR1> specifies the binary bits of the ESER according to this value, which ranges from 0 through 255.

The power-on default for the ESER is 0 if *PSC is 1. If *PSC is 0, the ESER maintains the previous power cycle value through the current power cycle.

NOTE. Setting the *DESER* and the *ESER* to the same values allows only those codes to be entered into the Event Queue and summarized on the *ESB* bit (bit 5) of the Status Byte Register. Use the *DESE* command to set the *DESER*.

Examples *ESE 209 sets the ESER to binary 11010001, which enables the PON, URQ, EXE, and OPC bits.

*ESE? might return 186, showing that the ESER contains the binary value 10111010.

*ESR? (Query Only)

Returns the contents of the Standard Event Status Register (SESR). *ESR? also clears the SESR (reading the SESR clears it). For a detailed discussion on how to use registers, see Registers.

Group Status and Error

Syntax *ESR?

Related Commands [ALLEv?](#), [*CLS](#), [DESE](#), [*ESE](#), [EVENT?](#), [EVMsg?](#), [*SRE](#), [*STB?](#)

Examples *ESR? might return 213, showing that the SESR contains the binary value 11010101.

ETHERnet:DHCPbootp

Sets or returns the network initialization search for a DHCP/BOOTP server.

Group Ethernet

Syntax ETHERnet:DHCPbootp {ON|OFF}
ETHERnet:DHCPbootp?

Arguments ON enables the oscilloscope to search the network for a DHCP or BOOTP server in order to automatically assign a dynamic IP address to the oscilloscope.

NOTE. Do not use DHCP/BOOTP searching if your oscilloscope has been assigned a static address on a network. If you set this command to ON, the DHCP/BOOTP search will delete or change your static IP address information.

OFF disables the oscilloscope to search the network for a DHCP or BOOTP server.

Examples ETHERNET:DHCPBOOTP ON sets the oscilloscope to search for a DHCP or BOOTP server and assign a dynamic IP address to the oscilloscope.

ETHERnet:DNS:IPADDRESS

Sets or returns the network Domain Name Server (Dns) IP address.

Group Ethernet

Syntax ETHERnet:DNS:IPADDRESS <QString>
ETHERnet:DNS:IPADDRESS?

Arguments <QString> is a standard IP address value, enclosed in quotes.

Examples ETHERNET:DNS:IPADDRESS "128.196.13.352" sets the Dns IP address that the oscilloscope uses to communicate with the network.

ETHERnet:DOMAINname

Sets or returns the network domain name.

Group Ethernet

Syntax ETHERnet:DOMAINname <Qstring>
ETHERnet:DOMAINname?

Arguments <Qstring> is the network domain name, enclosed in quotes.

Examples ETHERNET:DOMAINNAME "Alpha1.Mycorp.com" sets the domain name that the oscilloscope uses to communicate with the network.

ETHERnet:ENET:ADDRESS? (Query Only)

Returns the Ethernet address value assigned to the oscilloscope. This is assigned at the factory and can not be changed.

Group Ethernet

Syntax ETHERnet:ENET:ADDRESS?

Examples ETHERNET:ENET:ADDRESS? returns an Ethernet address such as 08:00:11:01:02:03

ETHERnet:GATEWay:IPADDRESS

Sets or returns the remote interface gateway IP address.

Group Ethernet

Syntax ETHERnet:GATEWay:IPADDRESS <Qstring>
ETHERnet:GATEWay:IPADDRESS?

Arguments <Qstring> is a standard IP address value, enclosed in quotes.

Examples ETHERNET:GATEWAY:IPADDRESS "128.143.16.1" sets the gateway IP address.

ETHERnet:HTTPPort

Sets or returns the remote interface HTTP port value.

Group Ethernet

Syntax ETHERnet:HTTPPort <QString>
ETHERnet:HTTPPort?

Arguments <QString> is an integer port number, enclosed in quotes.

NOTE. Consider the following if you are using the e*Scope™ control software. If you don't enter a port address in the URL, then the ETHERnet:HTTPPort value must be set to "80", which is the default port for HTTP protocol. If you use a URL with a port address (for example: http://DPO4104-04WKL4:1234), the port number is specified by the number after the colon. Set the ETHERnet:HTTPPort value to this same number.

Examples ETHERNET:HTTPPORT "80" sets the HTTP port value to 80.

ETHERnet:IPADdress

Sets or returns the IP address assigned to the oscilloscope.

Group Ethernet

Syntax ETHERnet:IPADdress <QString>
ETHERnet:IPADdress?

Arguments <QString> is a standard IP address value, enclosed in quotes.

Examples ETHERNET:IPADDRESS "123.121.13.214" sets the oscilloscope's IP address.

ETHERnet:NAME

Sets or returns the network name assigned to the oscilloscope.

Group Ethernet

Syntax ETHERnet:NAME <QString>
ETHERnet:NAME?

Arguments <QString> is the network name assigned to the oscilloscope, enclosed in quotes.

Examples ETHERNET:NAME "labscope1" sets the oscilloscope's network name.

ETHERnet:PASSWord

Sets or returns the HTTP Ethernet access password. If a password is set, the user must enter the password before the user's Web browser can access the oscilloscope.

Group Ethernet

Syntax ETHERnet:PASSWord <new>
ETHERnet:PASSWord?

Arguments <new> is a new password, enclosed in quotes.

Examples ETHERNET:PASSWORD "ZEN53" replaces the current Ethernet password with the new password ZEN53.

ETHERNET:PASSWORD? might return :ETHERNET:PASSWORD "ZEN53".

ETHERnet:PING (No Query Form)

Causes the oscilloscope to ping the gateway IP address.

Group Ethernet

Syntax ETHERnet:PING EXECute

Examples ETHERNET:PING EXECUTE causes the oscilloscope to ping the gateway IP address.

ETHERnet:PING:STATUS? (Query Only)

Returns the results from sending the [ETHERnet:PING](#) command to ping the gateway IP address.

Group Ethernet

Syntax ETHERnet:PING:STATUS?

Returns OK is returned if the computer at the gateway IP address answers.

NORESPONSE is returned if the computer at the gateway IP address does not answer.

INPROGRESS is returned if the ping operation is still executing.

ETHERnet:SUBNETMask

Sets or returns the remote interface subnet mask value.

Group Ethernet

Syntax ETHERnet:SUBNETMask <QString>
ETHERnet:SUBNETMask?

Arguments <QString> is the subnet mask value, enclosed in quotes.

Examples ETHERNET:SUBNETMASK "255.255.255.0" sets the subnet mask value using standard IP address notation format.

EVENT? (Query Only)

Returns an event code from the Event Queue that provides information about the results of the last [*ESR?](#) read. EVENT? also removes the returned value from the Event Queue.

Group	Status and Error
Syntax	EVENT?
Related Commands	ALLEv? , *CLS , DESE , *ESE , *ESR? , EVMsg? , *SRE , *STB?
Examples	EVENT? might return :EVENT 110, showing that there was an error in a command header. (See page 3-12, <i>Messages</i> .)

EVMsg? (Query Only)

Removes a single event code from the Event Queue that is associated with the results of the last [*ESR?](#) read and returns the event code along with an explanatory message. For information, see Event Handling.

Group	Status and Error
Syntax	EVMSG?
Related Commands	ALLEv? *CLS , DESE , *ESE , *ESR? , EVENT? , *SRE , *STB?
Returns	The event code and message in the following format: <Event Code><Comma><QString>[<Event Code><Comma><QString>...]<QString>::= <Message>;[<Command>] where <Command> is the command that caused the error and may be returned when a command error is detected by the oscilloscope. As much of the command will be returned as possible without exceeding the 60 character limit of the <Message> and <Command> string combined. The command string is right-justified.
Examples	EVMSG? might return :EVMSG 110,"Command header error".

EVQty? (Query Only)

Returns the number of event codes in the Event Queue. This is useful when using the [ALLEv?](#) query, which returns the exact number of events.

Group	Status and Error
Syntax	EVQty?
Related Commands	ALLEv? , EVENT? , EVMsg?
Examples	EVQTY? might return :EVQTY 3, indicating the number of event codes in the Event Queue.

FACTory (No Query Form)

Resets the oscilloscope to its factory default settings.

This command does the following:

- Clears the Event Status Enable Register
- Clears the Service Request Enable Register
- Sets the Device Event Status Enable Register to 255
- Purges all defined aliases
- Enables all Command Headers
- Sets the macro defined by *DDT to a "zero-length field"
- Clears the pending operation flag and associated operations

This command does not reset the following:

- Communication settings
- Selected GPIB address.
- State of the VXI-11 (Ethernet IEEE Std 488.2) interface.
- Calibration data that affects device specifications
- Protected user data
- Stored settings
- Power On Status Clear Flag
- Oscilloscope password

Group Save and Recall

Syntax FACTory

Related Commands	*PSC , *RCL , RECALL:SETUp , *RST , *SAV , SAVE:SETUp
Arguments	None
Examples	FACTORY resets the oscilloscope to its factory default settings.

FILESystem? (Query Only)

Returns the directory listing of the current working directory and the number of bytes of free space available. This query is the same as the [FILESystem:DIR?](#) query and the [FILESystem:FREESpace?](#) query.

Group	File System
Syntax	FILESystem?
Related Commands	FILESystem:CWD , FILESystem:DELEte , FILESystem:DIR? , FILESystem:REName
Arguments	None.
Examples	<p>FILESYSTEM? might return</p> <pre>:FILESYSTEM:DIR "tek00000.bmp","elusiveGlitch1.png","TEMP.TMP", "file1.wfm","file2.wfm", "MATH1.wfm"," REF1.wfm","REF2.wfm";FREESPACE 30212096</pre>

FILESystem:CWD

Sets or returns the current working directory (CWD) for FILESystem commands. The default working directory is "D:". Anytime you use this command to change the directory, the directory that you specify is retained as the current working directory until you either change the directory or you delete the directory. If you delete the current working directory, the oscilloscope resets current working directory to the default directory (D:) the next time the oscilloscope is powered on or the next time you execute a file system command.

This command supports the permutations of file and directory names supported by Microsoft Windows:

- Relative path names; for example, `"/Temp"`
- Absolute path names; for example, `"D:/MyWaveform"`
- Implied relative path names; for example `"newfile.txt"` becomes `"D:/TekScope/newfile.txt"` if the current working directory is `"D:/TekScope"`

Group	File System
Syntax	<code>FILESystem:CWD {<new working directory path>}</code>
Arguments	<code><new working directory path></code> is a quoted string that defines the current working; a directory name can be up to 128 characters.
Examples	<p><code>FILESYSTEM:CWD "D:/TekScope/images"</code> sets the current working directory to images.</p> <p><code>FILESYSTEM:CWD?</code> might return</p> <p><code>:FILESYSTEM:CWD "D:/TekScope/waveforms"</code> indicating that the current working directory is set to Waveforms.</p>

FILESystem:DELEte (No Query Form)

This command deletes a named file. If you specify a directory name, it will delete the directory and all of its contents, the same as the `RMDir` command. You can also specify the filename as `*.*` to delete all of the files in the current or specified directory.

Group	File System
Syntax	<code>FILESystem:DELEte <file path></code>
Related Commands	<p>FILESystem:CWD</p> <p>FILESystem:RMDir</p>
Arguments	<code><file path></code> is a quoted string that defines the file name and path. If the file path is within the current working directory, you need only specify the file name.

The argument *.* will delete all files and subdirectories within the current working directory.

Examples `FILESYSTEM:DELETE "NOT_MINE.SET"` deletes the file named NOT_MINE.SET from the current working directory.

FILESystem:DIR? (Query Only)

Returns a list of quoted strings. Each string contains the name of a file or directory in the current working directory.

Group File System

Syntax `FILESystem:DIR?`

Related Commands [FILESystem:CWD](#), [FILESystem:MKDir](#)

Arguments None

Returns `FILESystem:DIR?` returns a list of files and directories in the current working directory.

Examples `FILESYSTEM:DIR?` might return
:`FILESYSTEM:DIR`
"tek00000.png", "my_CAN_setup.set", "savedwfm1.isf", "myImages"

FILESystem:FORMat (No Query Form)

Formats a mass storage device. This command should be used with extreme caution as it causes all data on the specified mass storage device to be lost. Drive letters (e.g., E:) are case sensitive and must be upper case. For all other FILESYSTEM commands, drives letters are not case sensitive. Example: `FILES:FORMAT "E:/"` Formats the USB flash drive installed in the oscilloscope's front panel USB port.

Group File System

Syntax `FILESystem:FORMat`

Arguments <drive name> is a quoted string that defines the disk drive to format.

Examples `FILESYSTEM:FORMAT "E:/"`
 Formats the USB flash drive installed in the oscilloscope's front panel USB port.

FILESystem:FREESpace? (Query Only)

Returns the number of bytes of free space on the current drive.

Group File System

Syntax `FILESystem:FREESpace?`

Related Commands [FILESystem:FREESpace?](#), [FILESystem:CWD](#)

FILESystem:LDIR? (Query Only)

Returns a semicolon separated list of every file and directory in the folder referred to by the [FILESystem:CWD](#) command. This is different than the [FILESystem:DIR?](#) query in that it provides a long output format with the file size, type, and modification date/time. Each entry is a semicolon separated list:

<file name>;<type DIR or FILE>;<size in bytes>;<date>;<time>

Group File System

Syntax `FILESystem:LDIR?`

Related Commands [FILESystem:CWD](#), [FILESystem:DIR?](#)

Returns A string of the form: <file name>;<type DIR or FILE>;<size in bytes>;<date>;<time>

Examples `FILESYSTEM:LDIR?` might return `:FILESYSTEM:LDIR
 "...;DIR;4096;2007-06-22;14:13:43";"tek0000CH1.isf;FILE;
 20342;2009-05-21;13:58:24";"TEMP;DIR;4096;2009-09-15;06:20:44"`

FILESystem:MKDir (No Query Form)

Creates a new folder.

Group File System

Syntax FILESystem:MKDir <directory path>

Related Commands [FILESystem:CWD](#), [FILESystem:DIR?](#)

Arguments <directory path> is a quoted string that specifies the directory to create

Examples FILESYSTEM:MKDIR "D:/NewDirectory" creates the directory named *NewDirectory* at the root of the D drive.

These two commands create the directory MyNewSubDirectory within the existing directory MyDirectory at the root of the D drive:

```
FILESYSTEM:CWD "D:/MyDirectory"; FILESYSTEM:MKDIR  
"MyNewSubDirectory"
```

This, of course, assumes that *D:/MyDirectory* already existed and was not a read-only directory.

FILESystem:READFile (No Query Form)

Writes the contents of the specified file to the specified interface. If the specified file does not exist or is not readable, an appropriate error event is posted.

Group File System

Syntax FILESystem:READFile <QString>

Related Commands [FILESystem:CWD](#)

Arguments <QString> is a quoted string that defines the file name and path. If the file path is within the current working directory, specify only the file name.

Examples `FILESYSTEM:READFILE "D:/test_data/tek00016CH1.csv"` reads the content of the specified file, if the file exists and is readable, and sends the content of the file to the current interface.

FILESystem:REName (No Query Form)

Assigns a new name to an existing file.

Group File System

Syntax `FILESystem:REName <old file path>,<new file path>`

Related Commands [FILESystem:CWD](#)

Arguments `<old file path>` is a quoted string that defines the file name and path. If the file path is within the current working directory, you need only specify the file name.

`<new file path>` is a quoted string that defines the file name and path. If the file path is within the current working directory, you need only specify the file name.

Examples `FILESYSTEM:RENAME "D:/TEK00000.SET", "D:/MYSETTING.SET"` gives the file named TEK00000.SET the new name of MYSETTING.SET. The file remains in the root directory on the D drive.

FILESystem:RMDir (No Query Form)

Deletes a named directory. This command deletes the specified directory and all of its contents. The directory must not be a read-only directory.

Group File System

Syntax `FILESystem:RMDir <directory path>`

Related Commands [FILESystem:CWD](#)

Arguments `<directory path>` is a quoted string that defines the directory name and path. If the file path is within the current working directory, you need only specify the file name.

Examples `FILESYSTEM:RMDIR "D:/OldDirectory"` removes the directory named OldDirectory from the root of the D drive.

FILESystem:WRITEFile (No Query Form)

Writes the specified block data to a file in the oscilloscope current working directory. If the specified file does not exist or is not readable, an appropriate error event is posted.

Group File System

Syntax `FILESystem:WRITEFile <file path>, <data>`

Related Commands [FILESystem:CWD](#)

Arguments `<file path>` is the quoted string that defines the file name and path. If the path is within the current working directory, specify the file name only.

`<data>` can be either DEFINITE LENGTH encoding or INDEFINITE LENGTH ARBITRARY BLOCK PROGRAM DATA encoding as described in IEEE488.2.

FPAnel:PRESS (No Query Form)

Simulates the action of pressing a specified front-panel button.

When the front panel is locked, the front-panel button and multipurpose knob operations are suspended. The `FPAnel:PRESS` and the [FPAnel:TURN](#) commands will also not work. You can work around this by using the appropriate programmatic interface commands, instead of the front-panel commands.

Group Miscellaneous

Syntax `FPAnel:PRESS <button>`

Arguments `<button>` is the name of a front-panel button. Most of the argument names associate directly with their front panel buttons. For example, `AUTOSet` is for the Autoset button. The few commands that do not have obvious associations are listed below.

Table 2-40: FPanel:PRESS arguments

Argument	Description
ACQuire	Acquire button
AUTOset	Autoset button
BMENU<x>	Screen bottom menu buttons, where <x>=1 for the left-most bottom menu button and <x>=7 for the right-most bottom menu button
B<x>	Bus select buttons, where <x> = 1 through 4.
CH<x>	Channel select button, where <x>=1 for channel 1, <x>=2 for channel 2, and so on
CURsor	Cursors button
D15D0	D0–D15 button
DEFaultsetup	Default Setup button
FINE	Fine button
FORCetrig	Force Trig button
HARDcopy	Hardcopy button
INTensity	Intensity button
MAGnify	Magnify (zoom) button (not the zoom/pan knob)
MARK	Mark Set/Clear button
MATH	M button
MENUOff	Menu Off button
MEASurement	Measure button
NEXt	Next arrow button
PAUse	Play/pause button
PREv	Previous arrow button
REF	R button
RMENU<x>	Screen side menu buttons, where <x>=1 for the top-most side menu button and <x>=5 for the bottom-most side menu button
RUUnstop	Run/Stop button
SAVEBUtton	Save button
SAVERecall	Save/Recall Menu button
SEArch	Search button
SElect	Select button
SETTO50	Set to 50% button
SINGleseq	Single button
TEST	Test button
TRIGger	Trigger Menu button
UTILity	Utility button

Examples `FPANEL:PRESS AUTOSET` executes the oscilloscope Autoset function.

FPAnel:TURN (No Query Form)

Simulates the action of turning a specified front-panel control knob.

When the front panel is locked, the front-panel button and multipurpose knob operations are suspended. The `FPAnel:PRESS` and `FPAnel:TURN` commands will also not work, and, they will not generate an error. You can work around this by using the appropriate programmatic interface commands, instead of the front-panel commands. For example, to set the trigger level to 50%, you could use `TRIGger:A SETLevel`. To force a trigger, you could use `TRIGger FORCe`.

Group Miscellaneous

Syntax `FPAnel:TURN <knob>,<n>`

Arguments `<knob>` is the name of a rotating control.

A comma (,) separates the control knob argument from the numeric rotation value argument. You do not need a white space between the arguments and the comma.

`<n>` represents the rotation direction and magnitude of rotation. Negative values represent a counterclockwise knob rotation, and positive values represent a clockwise rotation. The magnitude of `<n>` specifies the amount of the turn, where `<n> = 1` represents turning the knob one unit, `<n> = 2` represents turning the knob two units, `<n> = 4` represents turning the knob four units, and so on. The range of units depends on which front panel knob is specified.

Table 2-41: FPAnel:TURN arguments

Argument	Description
GPKNOB1	Multipurpose a knob
GPKNOB2	Multipurpose b knob
HORZPos	Horizontal Position knob
HORZScale	Horizontal Scale knob
PANKNOB1	Outer pan knob
TRIGLevel	Trigger Level knob
VERTPOS<n>	Vertical Position knob
VERTSCALE<n>	Vertical Scale knob
ZOOM	Inner zoom knob

Examples `FPANEL:TURN TRIGLEVEL,10` duplicates turning the front-panel Trigger Level knob clockwise by 10 units.

GPIBUsb:ADdResS? (Query Only)

Returns the current GPIB address setting for a connected TEK-USB-488 adaptor module.

Group Miscellaneous

Syntax `GPIBUsb:ADdResS?`

GPIBUsb:ID? (Query Only)

Returns the identification string of the connected TEK-USB-488 adaptor module and firmware version. If a TEK-USB-488.2 module is not connected, the system returns “Not detected”.

Group Miscellaneous

Syntax `GPIBUsb:ID?`

HARDCopy (No Query Form)

Sends a hard copy of the screen display to the currently active printer using the current palette and layout settings.

Group Hard Copy

Syntax `HARDCopy {START}`
`HARDCopy?`

Related Commands [*WAI](#), [*CLS](#)

Arguments `START` sends a block of data representing the current screen image to the requested port. The data sent is in the image format specified by the [SAVe:IMAGe:FILEFormat](#) command and the compression level is controlled by the selected format (BMP and TIFF are uncompressed where as PNG is

compressed). The [SAVE:IMAGe:INKSaver](#) determines whether the data sent is in InkSaver mode.

NOTE. *The Hardcopy command with no arguments is equivalent to pressing the “HardCopy” button on the front panel, when the data is sent to the printer. As there is no front panel equivalent of the HARDCOPY START, you can choose to save the images to a different location using the “SAVE” button.*

Examples HARDCOPY initiates a screen copy to the active printer.

HARDCopy:ACTIVEprinter

Sets or returns the currently active printer. When a hard copy operation is performed, the output will be sent to this printer. One of two methods of specifying the printer can be used: specifying an index value obtained from looking at the list of attached printers or by specifying the printer name.

Group Hard Copy

Syntax HARDCopy:ACTIVEprinter {<NR1>|<name>}
HARDCopy:ACTIVEprinter?

Arguments <NR1> is the index of the desired printer as returned from [HARDCopy:PRINTer:LIST?](#)

<name> is the name of the printer as specified in the printer list. This name is case sensitive and must be entered exactly as shown in the list.

HARDCopy:INKSaver

Changes hard copy output to print traces and graticule on a white background while retaining waveform color information (except for channel 1, which prints as dark blue because yellow does not show well and is difficult to see on a white background). This option can significantly reduce print time and quantities of ink required compared with WYSIWYG dark background images.

Group Hard Copy

Syntax HARDCopy:INKSaver?

Arguments	ON or <NR1> ≠ 0 sets the ink saver mode on. OFF or <NR1> = 0 sets the ink saver mode off.
Examples	HARDCOPY:INKSAVER ON will cause subsequent hard copy output to display the screen on a white background.

HARDCopy:LAYout

Sets or returns the page orientation for hard copy. If you set the layout to LANdscape, the printer will print hard copies in landscape mode where the long edge of the screen will print to the long edge of the sheet of paper. If you set the layout to PORTRait, the printer will print hard copies in portrait mode.

This command is not applicable for PictBridge hardcopies.

Group	Hard Copy
Syntax	HARDCopy:LAYout {PORTRait LANdscape} HARDCopy:LAYout?
Arguments	PORTRait orients the screen image vertically on the printed page. LANdscape orients the screen image horizontally on the printed page.
Examples	HARDCOPY:LAYOUT LANDSCAPE sets the hard copy page orientation to Landscape. HARDCOPY:LAYOUT? might return :HARDCOPY:LAYOUT PORTRAIT indicating that the hard copy page orientation is set to portrait.

HARDCopy:PREVIEW (No Query Form)

Displays a preview of the current screen contents with the InkSaver palette applied.

Group	Hard Copy
Syntax	HARDCopy:PREVIEW {ON OFF <NR1>}
Arguments	ON or <NR1> ≠ 0 turns preview mode on. OFF or <NR1> = 0 turns preview mode off.

HARDCopy:PRINTer:ADD (No Query Form)

Adds a network printer to the list of available printers. All three arguments must be present, but only one of server name or server IP address may be specified. An empty string can be used for blank arguments.

Group Hard Copy

Syntax HARDCopy:PRINTer:ADD <name>,<server>,<address>

Arguments <name> is the name of the network printer queue.
<server> is the host name of the print (LPR) server.
<address> is the IP address of the print server.

HARDCopy:PRINTer:DELeTe (No Query Form)

Removes a network printer from the list of available printers. The printer name is case sensitive.

Group Hard Copy

Syntax HARDCopy:PRINTer:DELeTe <name>

Arguments <name> is the name of the printer to be deleted.

HARDCopy:PRINTer:LIST? (Query Only)

Returns a list of currently attached printers.

Group Hard Copy

Syntax HARDCopy:PRINTer:LIST?

HARDCopy:PRINTer:REName (No Query Form)

Renames a network printer on the list of available printers, replacing the currently stored settings with the settings specified in this command. Four arguments must

be present, but the arguments may be empty strings if the value for a field is to be deleted.

Group Hard Copy

Syntax HARDCopy: PRINTER: RENAME
<name>, <new_name>, <new_server>, <new_address>

Arguments <name> is the name of the printer to be deleted.
<new_name> is the new name for this printer.
<new_server> is the new print server for this printer.
<new_address> is the new IP address for the server.

HEADer

Sets or returns the Response Header Enable State that causes the oscilloscope to either include or omit headers on query responses.

NOTE. This command does not affect IEEE Std 488.2-1987 Common Commands (those starting with an asterisk); these commands never return headers. This command does affect the Response Header Enable State of both the USBTMC and VXI-11 interfaces. Refer to the Introduction for additional information.

Group Miscellaneous

Syntax HEADer {OFF|ON|<NR1>}
HEADer?

Related Commands [VERBose](#)

Arguments OFF sets the Response Header Enable State to false. This causes the oscilloscope to omit headers on query responses, so that only the argument is returned.

ON sets the Response Header Enable State to true. This causes the oscilloscope to include headers on applicable query responses. You can then use the query response as a command.

<NR1> = 0 sets the Response Header Enable State to false; any other value sets this state to true.

- Examples** **HEADER OFF** specifies that the oscilloscope omits headers on query responses, so that only the argument is returned.
- HEADER?** might return **:HEADER 1** indicating that the oscilloscope is including headers on applicable query responses.

HIStogram? (Query Only)

This query-only command returns all histogram parameters; it queries the state of all histogram parameters that the user can set. This command is equivalent to selecting Waveform Histograms from the Measure menu.

Group Histogram

Syntax HIStogram?

Related Commands [MEASUrement:METHod](#)

- Examples** HISTOGRAM? might return the histogram parameters as **:HISTOGRAM:BOXPCNT 30.0000,25.1000,70.0000,75.2000;DISPLAY LINEAR;STATE 1;FUNCTION VERTICAL;SIZE 2.0000;SOURCE CH1.**

HIStogram:BOX

This command sets or returns the histogram box coordinates in terms of source waveform vertical and horizontal units.

Group Histogram

Syntax HIStogram:BOX <NR3>, <NR3>, <NR3>, <NR3>
HIStogram:BOX?

Related Commands HIStogram:BOXPent

- Arguments** <NR3> specifies the left position of the histogram box in source waveform horizontal units.
- <NR3> specifies the top position of the histogram box in source waveform vertical units.

<NR3> specifies the right position of the histogram box in source waveform horizontal units.

<NR3> specifies the bottom position of the histogram box in source waveform vertical units.

Examples HISTOGRAM:BOX 1E-9, 0.250, 2E-9, 0.500 defines the coordinates of the histogram box in source waveform coordinates.

HISTOGRAM:BOX? might return :HISTOGRAM:BOX 1.0000E-09, 0.2500, 2.0000E-09, 0.5000, which identifies the coordinates of the histogram box in source waveform coordinates.

HIStogram:BOXPcnt

This command sets or returns the histogram box coordinates in terms of percentages of the full screen extents of the source waveform. The arguments refer to the left (percent of the horizontal screen extent), top (percent of the vertical screen extent), right (percent of the horizontal screen extent), bottom (percent of the vertical screen extent). The valid range for these values is 0.0 to 100.0.

Group Hisstogram

Syntax HIStogram:BOXPcnt <NR2>, <NR2>, <NR2>, <NR2>
HIStogram:BOXPcnt?

Related Commands HIStogram:BOX

Arguments <NR3> specifies the left position of the histogram box in percentage coordinates. The default value is 20%

<NR3> specifies the top position of the histogram box in percentage coordinates. The default value is 80%

<NR3> specifies the right position of the histogram box in percentage coordinates. The default value is 80%

<NR3> specifies the bottom position of the histogram box in percentage coordinates. The default value is 20%

Examples HISTOGRAM:BOXPCNT 30.0,25.0,70.0,75.0 sets the left boundary of the histogram box to 30% of the graticule (3 divisions from the left edge); the top boundary to 25% of the graticule ($0.25 \times 10 = 2.5$ divisions from the top edge); the right boundary to 70% of the graticule (7 divisions from the left edge); and

the bottom boundary to 75% of the graticule ($0.75 \times 10 = 7.5$ divisions from the top edge).

HISTOGRAM:BOXPCNT? might return :HISTOGRAM:BOXPCNT
30.0000,25.1000,70.0000,75.2000.

HISistogram:COUNT (No Query Form)

This command (no query form) clears the count and statistics for the histogram and the histogram source data. If the histogram is on, then counting restarts.

Group Histogram

Syntax HISistogram:COUNT RESET

Related Commands [HISistogram:BOX](#)
[HISistogram:BOXPent](#)

Arguments RESET

Examples HISTOGRAM:COUNT RESET clears the count and statistics for the histogram and the histogram source data.

HISistogram:DATa? (Query Only)

This query returns the histogram data when the :HISistogram:MODE is **HORizontal** or **VERTical**. If the mode is **OFF**, then no data is returned and an error event is set.

The data values returned for this query represent the number of times the histogram source waveform samples were coincident with a particular histogram bin.

For vertical histograms, this query returns 256 values, representing the number of times the histogram source waveform samples were coincident with each of the 256 digitizing levels. Of these 256 values, the first 2 and last 3 are always 0, as they represent digitizing levels that fall above and beneath the waveform graticule, respectively.

For horizontal histograms, this query returns 1000 values, representing the number of times the histogram source waveform samples were coincident with each horizontal pixel column. The time of occurrence for each of the horizontal bins can be derived using the [HISistogram:START?](#) and [HISistogram:END?](#) queries.

[illegible]

Group	Histogram
Syntax	HISTogram:DISPlay {OFF LOG LINEAr} HISTogram:DISPlay?
Commands	HISTogram:MODE

Arguments	<p><LOG> sets the histogram display to logarithmic scaling</p> <p><LINEAR> sets the histogram display to linear scaling. This is the default setting.</p>
Examples	<p>HISTOGRAM:DISPLAY LOG sets the histogram scaling to be the log count of each histogram bin.</p> <p>HISTOGRAM:DISPLAY? might return :HISTOGRAM:DISPLAY LOG indicating that the current histogram display scaling is the log count of each histogram bin.</p>

HIStogram:END? (Query Only)

Returns the time (horizontal) or vertical units value (vertical) of the last bin where the histogram data ends. The [HIStogram:MODE](#) must be either **HORizontal** or **VERTical** for a value to be returned. If the mode is **OFF**, an error event is set and nothing is returned.

If the [HIStogram:MODE](#) is **HORizontal**, the value returned is the time of the right bin. If the [HIStogram:MODE](#) is **VERTical** the value returned is the vertical units value of the bottom bin. The returned value is an <NR3>.

Group	Histogram
Syntax	HIStogram:END?
Related Commands	HIStogram:MODE HIStogram:START?
Returns	<NR3>
Examples	HISTOGRAM:END? might return :HISTOGRAM:END 1.6000E-05 indicating that the last bin is at 16 μ s.

HIStogram:MODE

This command selects the type of histogram to create or disables the histogram display. The query form either returns the current histogram type or that the histogram display is disabled.

Group	Histogram
--------------	-----------

Syntax	<code>HISTogram:MODE {HORIZONTAL VERTICAL OFF}</code> <code>HISTogram:MODE?</code>
Related Commands	HISTogram:DISplay
Arguments	<p><code>HORIZONTAL</code> enables a horizontally positioned histogram that shows time distribution.</p> <p><code>VERTICAL</code> enables a vertically positioned histogram that shows a voltage distribution, or another distribution such as amperes.</p> <p><code>OFF</code> disables the collection of the histogram measurement.</p>
Examples	<p><code>HISTOGRAM:MODE HORIZONTAL</code> sets the type of histogram created to horizontal, which displays a horizontally positioned histogram that shows time distribution.</p> <p><code>HISTOGRAM:MODE?</code> might return <code>:HISTOGRAM:MODE OFF</code>, indicating that the histogram display is disabled.</p>

HISTogram:SOURce

This command sets or queries which source will be compared against the histogram box when the histogram testing is enabled.

Group	Histogram
Syntax	<code>HISTogram:SOURce {CH<x> MATH REF<x>}</code> <code>HISTogram:SOURce?</code>
Related Commands	HISTogram:DISplay
Arguments	<p><code>CH<x></code> selects a channel waveform as the source for the histogram. The x variable can be expressed as an integer ranging from 1 through 4.</p> <p><code>MATH</code> selects the math waveform as the source for the histogram.</p> <p><code>REF<x></code> selects a reference waveform as the source for the histogram. The x variable can be expressed as an integer ranging from 1 through 4.</p>
Examples	<code>HISTOGRAM:SOURCE CH1</code> enables the Channel 1 waveform to be compared against the histogram box.

HISTOGRAM:SOURCE? might return :HISTOGRAM:SOURCE CH1, indicating that the waveform for Channel 1 is the source for the histogram.

HIStogram:STARt? (Query Only)

Returns the time (horizontal) or vertical units value (vertical) of the first bin where the histogram data starts. The [HIStogram:MODE](#) must be either **HORizontal** or **VERTical** for a value to be returned. If the mode is **OFF**, an error event is set and nothing is returned.

If the [HIStogram:MODE](#) is **HORizontal**, the value returned is the time of the left bin. If the [HIStogram:MODE](#) is **VERTical** the value returned is the vertical units value of the top bin. The returned value is an <NR3>.

Group Histogram

Syntax HIStogram:STARt?

Related Commands [HIStogram:END?](#)
[HIStogram:MODE](#)

Returns <NR3> showing the returned value.

Examples HISTOGRAM:STARt? might return :HISTOGRAM:STARt 2.0000E-06 indicating that the first bin is at 2 μ s.

HORizontal? (Query Only)

Returns all settings for the horizontal commands.

Group Horizontal

Syntax HORizontal?

Examples HORIZONTAL? might return the following horizontal settings
:HORIZONTAL:DELAY:MODE 1;TIME 0.0000;:HORIZONTAL:MAIN:SCALE
20.0000E-9;SAMPLERATE 5.0000E+9;UNITS "s";UNITS:STRING
"s";:HORIZONTAL:SAMPLERATE 5.0000E+9;RECORDLENGTH 100000

HORizontal:DElay:MODE

Sets or returns the horizontal delay mode.

Group Horizontal

Syntax HORizontal:DElay:MODE {OFF|ON|<NR1>}
HORizontal:DElay:MODE?

Related Commands [HORizontal:POSition](#)

Arguments OFF sets the Horizontal Delay Mode to off. This causes the HORizontal:POSition command to operate like the HORIZONTAL POSITION knob on the front panel.

ON sets the Horizontal Delay Mode to on. This causes the HORizontal:DElay:TIME command to operate like the HORIZONTAL POSITION knob on the front panel.

<NR1> = 0 sets the Horizontal Delay Mode to off; any other value sets this mode to on.

Examples HORIZONTAL:DELAY:MODE OFF sets the Horizontal Delay Mode to off, allowing the horizontal position command to operate like the HORIZONTAL POSITION knob on the front panel.

HORIZONTAL:DELAY:MODE? might return HORIZONTAL:DELAY:MODE OFF indicating that the Horizontal Delay Mode is off and that the horizontal position command operates like the HORIZONTAL POSITION knob on the front panel.

HORizontal:DElay:TIME

Sets or returns the horizontal delay time (position) that is used when delay is on (the default mode).

Group Horizontal

Syntax HORizontal:DElay:TIME <NR3>
HORizontal:DElay:TIME?

Related Commands HORizontal:POSition

Arguments NR3 is the delay in seconds.

Examples `HORizontal:DELay:TIME 0.3` sets the delay of acquisition data so that the resulting waveform is centered 300 ms after the trigger occurs.

HORizontal:DIGital:RECOrdlength:MAGnivu? (Query Only)

Returns the record length of the MagniVu digital acquisition.

Group Horizontal

Syntax `HORizontal:DIGital:RECOrdlength:MAGnivu?`

HORizontal:DIGital:RECOrdlength:MAIN? (Query Only)

Returns the record length of the main digital acquisition.

Group Horizontal

Syntax `HORizontal:DIGital:RECOrdlength:MAIN?`

HORizontal:DIGital:SAMPLERate:MAGnivu? (Query Only)

Returns the sample rate of the MagniVu digital acquisition.

Group Horizontal

Syntax `HORizontal:DIGital:SAMPLERate:MAGnivu?`

HORizontal:DIGital:SAMPLERate:MAIN? (Query Only)

Returns the sample rate of the main digital acquisition.

Group Horizontal

Syntax `HORizontal:DIGital:SAMPLERate:MAIN?`

HORizontal:POSition

Sets or returns the horizontal position, in percent, that is used when delay is off. If Horizontal Delay Mode is turned off, this command is equivalent to adjusting the HORIZONTAL POSITION knob on the front panel. When Horizontal Delay Mode is on, this command stores a new horizontal position that is used when Horizontal Delay Mode is turned off.

Group Horizontal

Syntax `HORizontal:POSition <NR3>`
`HORizontal:POSition?`

Related Commands `HORizontal:DELay:TIME`

Arguments `<NR3>` is the horizontal position expressed as the percentage of the waveform acquired before the trigger.

Examples `HORIZONTAL:POSITION 50` sets the horizontal position to 50%.
`HORIZONTAL:POSITION?` might return `:HORIZONTAL:POSITION 100` indicating that the horizontal position is set to 100%.

HORizontal:PREViewstate? (Query Only)

Returns a boolean value to indicate whether the display system is in the preview state.

Group Horizontal

Syntax `HORizontal:PREViewstate?`

Returns `<NR1> = 1` if the display system is in the preview state.
`<NR1> = 0` if the display system is not in the preview state.

HORizontal:RECOrdlength

Sets the horizontal record length. The query form of this command returns the current horizontal record length.

Group	Horizontal
Syntax	<code>HORizontal:RECOrdlength <NR1></code> <code>HORizontal:RECOrdlength?</code>
Arguments	<NR1> represents the supported values for horizontal record lengths, which are: 1000, 10000, 100000, 1000000, or 10000000.
Examples	<code>HORIZONTAL:RECORDLENGTH 10000</code> specifies that 10000 data points will be acquired for each record. <code>HORIZONTAL:RECORDLENGTH?</code> might return <code>:HORIZONTAL:RECOrdlength 1000</code> indicating that the horizontal record length is equal to 1000 data points.

HORizontal:SAMPLERate

Sets or returns the current horizontal sample rate.

Group	Horizontal
Syntax	<code>HORizontal:SAMPLERate <NR3></code> <code>HORizontal:SAMPLERate?</code>
Arguments	<NR3> is the rate in samples per second.

HORizontal:SCALE

Sets or returns the time base horizontal scale.

Group	Horizontal
Syntax	<code>HORizontal:SCALE <NR3></code> <code>HORizontal:SCALE?</code>
Arguments	<NR3> specifies the range from 400 ps to 1000 s, depending on the record length.

Examples `HORIZONTAL:SCALE 2E-6` sets the main scale to 2µs per division.

`HORIZONTAL:SCALE?` might return `:HORIZONTAL:MAIN:SCALE 2.0000E-06` indicating that the main scale is currently set to 2 µs per division.

ID? (Query Only)

Returns identifying information about the oscilloscope and related firmware.

Group Miscellaneous

Syntax ID?

Related Commands [*IDN?](#)

Examples ID? might return `TEK/DPO4034,CF:91.1CT,FV:v1.0000`. This indicates the oscilloscope model number, configured format, and firmware version number.

*IDN? (Query Only)

Returns the oscilloscope identification code.

Group Miscellaneous

Syntax *IDN?

Related Commands [ID?](#)

Examples *IDN? might return `:TEKTRONIX,DPO4034,SN123456789,CF:91.1CT FV:v1.00000` indicating the oscilloscope model number, serial number, configured number, and firmware version number.

LANGuage

Sets or returns the user interface display language. This command only affects the oscilloscope displayed language. Remote commands and their responses are always in English.

Group	Miscellaneous
Syntax	LANGUage {ENGLish FRENch GERMan ITALian SPANish PORTUguese JAPANese KOREan RUSSian SIMPlifiedchinese TRADitionalchinese} LANGUage?
Examples	LANGUAGE? might return :LANGUAGE ENGLISH.

LOCK

Enables or disables all front-panel buttons and knobs. There is no front panel equivalent.

When the front panel is locked, neither the [FPanel:PRESS](#) nor the [FPanel:TURN](#) commands will work. They will not generate an error event either. You can work around this by using the appropriate programmatic interface commands, instead of the front-panel commands. For example, to set the trigger level to 50%, you could use TRIGger:A SETLevel. To force a trigger, you could use TRIGger FORCe.

Group	Miscellaneous
Syntax	LOCK {ALL NONE} LOCK?
Related Commands	UNLock
Arguments	ALL disables all front-panel controls. NONE enables all front-panel controls. This is equivalent to the UNLock ALL command.
Examples	LOCK ALL locks the front-panel controls. LOCK? might return :LOCK NONE indicating that the front-panel controls are enabled by this command.

*LRN? (Query Only)

Returns the commands that list the oscilloscope settings except for configuration information for the calibration values, the [WFMInpre?](#) query, and the [WFMOutpre?](#) query. This query allows you to record or "learn" the current

oscilloscope settings. You can use these commands to return the oscilloscope to the state it was in when you made the *LRN? query. This command is identical to the [SET?](#) Command.

Group Miscellaneous

Syntax *LRN?

Related Commands [SET?](#)

Examples *LRN? might return a long response, part of which could be as follows:

```
:ACQUIRE:STOPAFTER RUNSTOP;STATE 1;MODE SAMPLE;NUMENV
INFINITE;NUMAVG 16;SAMPLINGMODE RT;:HEADER 1;:LOCK
NONE;:LANGUAGE ENGLISH;:VERBOSE 1;:ALIAS:STATE
0;:DISPLAY:COLOR:PALETTE NORMAL;:DISPLAY:STYLE:DOTSONLY
0;:DISPLAY:PERSISTENCE 0.0000;CLOCK 1;GRATICULE
FULL;INTENSITY:WAVEFORM 30;GRATICULE 75;BACKLIGHT
HIGH;:HARDCOPY :INKSAVER OFF;LAYOUT LANDSCAPE;PREVIEW
0;:SAVE:IMAGE:FILEFORMAT BMP;:SAVE:WAVEFORM:FILEFORMAT
INTERNAL;:SAVE:ASSIGN:TYPE SETUP;:TRIGGER:A:MODE
AUTO;TYPE EDGE;LE VEL 20.0000E-3;LEVEL:CH1
20.0000E-3;CH2 0.0000;CH3 0.0000;CH4 0.0000;:TRIGGER:A:
UPPERTHRESHOLD:CH1 1.4000;CH2 800.0000E-3;CH3
800.0000E-3;CH4 800.0000E-3;:TRIGGER:A:LOWERTHRESHOLD:CH1
20.0000E-3;CH2 0.0000;CH3 0.0000;CH4 0.0000;:TRIGGER:A:H
OLDOFF:TIME 20.0000E-9;:TRIGGER:A:EDGE:SOURCE
CH1;COUPLING DC;SLOPE RISE;:TRIGGER:A:LOGIC:CLASS
SETHOLD;FUNCTION AND;THRESHOLD:CH1 20.0000E-3;CH2
0.0000;CH3 0.0000;CH4 0.0000;:TRIGGER:A:LOGIC:INPUT:CH1
X;CH2 X;CH3 X;CH4 X;CLOCK:SOURCE NONE; EDGE
RISE;:TRIGGER:A:LOGIC:PATTERN:INPUT:CH1 X;CH2
X;CH3 X;CH4 X;:TRIGGER:A:LOGIC:PATTERN:WHEN
TRUE;WHEN:LESSLIMIT 4.0000E-9;LIMIT
4.0000E-9;:TRIGGER:A:SETHOLD:CLOCK:SOURCE CH1;EDGE
RISE;THRESHOLD 20.0000E-3;:TRIGGER:A:SETHOLD:DATA:SOURCE
CH2;THRESHOLD 0.0000;:TRIGGER:A:SETHOLD:HOLDTIME
4.0000E-9;SETTIME 4.0000E-9;:TRIGGER:A:PULSE:CLASS
TRANSITION;:TRIGGER:A:PULSEWIDTH:SOURCE
CH1;POLARITY POSITIVE;WHEN LESSTHAN;WIDTH
4.0000E-9;:TRIGGER:A:RUNT:SOURCE CH1;POLARITY POSITIVE; WHEN
OCCURS;WIDTH 4.0000E-9;:TRIGGER:A:TRANSITION:SOURCE CH1
...
```

MARK

Moves to the next or previous reference mark on the waveform. Returns the current mark position.

Group Mark

Syntax MARK {NEXT|PREVIOUS}
MARK?

Arguments NEXT moves to the next reference mark on the right.
PREVIOUS moves to the next reference mark on the left.

MARK:CREATE (No Query Form)

Creates a mark on a specified waveform or all waveforms in a column.

Group Mark

Syntax MARK:CREATE {CH<x>|MATH|B<x>|REF<x>|DIGITAL|COLUMN}

Arguments CH<x> creates the mark on a channel waveform, where <x> is the channel number.
MATH creates the mark on the math waveform.
B<x> creates the mark on a bus waveform, where <x> is the bus number.
REF<x> creates the mark on a reference waveform, where <x> is the reference waveform number.
DIGITAL creates the mark on a digital waveform. (An error will result if no digital channel is turned on.)
COLUMN creates marks on all waveforms in the current zoom pixel column.

MARK:DELEte (No Query Form)

Deletes a mark on a particular waveform, all waveforms in a column, the selected mark, or all marks.

Group Mark

Syntax `MARK:DELEte {CH<x>|MATH|B<x>|REF<x>|DIGita1|COLUMN}`

Arguments CH<x> deletes the mark on a channel waveform, where <x> is the channel number.
 MATH deletes the mark on the math waveform.
 B<x> deletes the mark on a bus waveform, where <x> is the bus number.
 REF<x> deletes the mark on a reference waveform, where <x> is the reference waveform number.
 DIGita1 deletes all marks on all digital channels.
 COLUMN deletes marks on all waveforms in the current zoom pixel column.

MARK:FREE? (Query Only)

Returns how many marks are available for use.

Group Mark

Syntax `MARK:FREE?`

MARK:SELEcted:END? (Query Only)

Returns the end of the selected mark, 0 to 100% of the waveform.

Group Mark

Syntax `MARK:SELEcted:END?`

MARK:SELEcted:FOCUS? (Query Only)

Returns the focus of the selected mark, 0 to 100% of the waveform.

Group Mark

Syntax `MARK:SELEcted:FOCUS?`

MARK:SElected:MARKSINCOLumn? (Query Only)

Returns the number of marks in the current zoom pixel column.

Group Mark

Syntax MARK:SElected:MARKSINCOLumn?

MARK:SElected:OWNer? (Query Only)

Returns the owner of the selected mark.

Group Mark

Syntax MARK:SElected:OWNer?

Returns <QString> is the owner of the mark.

Examples MARK:SELECTED:OWNER? might return: USER, SEARCH1

MARK:SElected:SOURCE? (Query Only)

Returns the source waveform for the selected mark.

Group Mark

Syntax MARK:SElected:SOURCE?

MARK:SElected:START? (Query Only)

Returns the starting point of the selected mark, 0 to 100% of the waveform.

Group Mark

Syntax MARK:SElected:START?

MARK:SElected:STATe? (Query Only)

Returns the on or off state of the selected mark. The selected mark is at or near the center of the screen. If you press the front-panel Set/Clear button, this mark will disappear.

Group Mark

Syntax MARK:SElected:STATe?

MARK:SElected:ZOOM:POSition? (Query Only)

Returns the position of the selected mark, 0 to 100% of the zoom overview window.

Group Mark

Syntax MARK:SElected:ZOOM:POSition?

MARK:TOTal? (Query Only)

Returns how many marks are currently in use.

Group Mark

Syntax MARK:TOTal?

{MATH|MATH1}:LABel

Sets or queries the waveform label for the math waveform.

Group Math

Syntax {MATH|MATH1}:LABel <QString>
{MATH|MATH1}:LABel?

Arguments <QString> is the quoted string used as the label for the math waveform.

Examples `MATH:LABEL "Output"` sets the label for the math waveform to Output.

`MATH:LABEL?` might return `MATH:LABEL "Sum of channel 1 and channel 2"` indicating the current label for the math waveform.

MATH[1]? (Query Only)

Returns the definition of the math waveform. The returned data depends on the setting of the [MATH\[1\]:TYPE](#) command.

Group Math

Syntax `MATH[1]?`

Related Commands [MATH\[1\]:TYPE](#)

Examples `MATH?` or `MATH1?` might return `:MATH:TYPE DUAL;DEFINE "CH1+CH2";VERTICAL:SCALE 100.0000E-3;POSITION 0.0000;UNITS "V";:MATH:HORIZONTAL:SCALE 4.0000E-6;POSITION 50.0000;UNITS "s";:MATH:SPECTRAL:MAG DB;WINDOW HANNING`

MATH[1]:DEFine

Sets or returns the current math function as a text string.

Dual math is defined if the string is of the form `<wfm> <operation> <wfm>`, where the `<wfm>`s are any combination of live channels or reference waveforms, `<operation>` is any of `+`, `-`, `*` or `/`, and the [MATH\[1\]:TYPE](#) is DUAL.

FFT math is defined if the string is in the form `FFT(<wfm>)`, where `<wfm>` is any live channel or reference waveform, and the [MATH\[1\]:TYPE](#) is FFT.

Advanced math is defined if the contents of the string can be parsed by the advanced math parser without errors and the [MATH\[1\]:TYPE](#) is ADVanced.

On the front panel, the Dual Wfm Math, FFT and Advanced Math menus contain controls that allow building equivalent math expressions to those described above.

Group Math

Syntax `MATH[1]:DEFine <QString>`
`MATH[1]:DEFine?`

Related Commands **MATHVAR:VAR<x>, MATH[1]:TYPE**

Arguments <QString> quoted string argument is the mathematical expression that defines the waveform.

Table 2-42: Advanced Math expression elements

Expression	Description
CH1-CH4, REF1-REF4	Specifies a waveform data source.
FFT(, INTG(, DIFF(Executes a Fast Fourier Transform, integration, or differentiation operation on the expression that follows. The FFT operator must be the first (left-most) operator in an expression. All these operations must end with a right parenthesis.
AMplitude(, AREa(, BURst(, CARea(, CMEan(, CRMs(, DELay(, FALL(, FREQuency(, HIGH(, LOW(, MAXimum(, MEAN(, MINImum(, NDUTy(, NOVershoot(, NWIdth(, PDUTy(, PERIod(, PHAse(, PK2pk(, POVershoot(, PWIdth(, RISe(, RMS(, !	Executes the selected measurement operation on the waveform (active or reference) that follows. All these operations must end with a right parenthesis.
LOG(, EXP(, SQRT(, SINE(, COSINE(, TANGENT(Executes trigonometric and other functions. All these operations must end with a right parenthesis.
VAR1, VAR2	Adds the user-defined variable to the expression. Refer to the MATHVAR<x> command.
+, -, *, /	Executes an addition, subtraction, multiplication, or division operation on the following expression. + and - are also unary; use - to negate the expression that follows.
<, >, <=, >=, ==, !=, , &&	Executes relational and logical operations.
() ,	Parentheses provide a way to control evaluation order in an expression. The comma is used to separate the "from" and "to" waveforms in Delay and Phase measurement operations.
1-0 , . , E	Specifies a numeric value in (optional) scientific notation.

Examples **MATH1:DEFINE " CH1+CH2"** adds the Ch 1 waveform and Ch 2 waveform, storing the results in Math 1.

MATH:DEFINE? might return **:MATH1:DEFINE "CH2*REF2"** as the expression that defines Math 1.

MATH[1]:HORizontal:POSition

Sets or returns the math horizontal display position for FFT or (non-live) math reference waveforms.

Group Math

Syntax MATH[1]:HORizontal:POSition <NR3>
MATH[1]:HORizontal:POSition?

Arguments <NR3> is the % of the math waveform that precedes center screen. It can vary from 0.0 to 100.0.

Examples MATH:HORIZONTAL:POSITION 10 sets the horizontal position to 10% pretrigger

MATH[1]:HORizontal:SCAle

Sets or returns the math horizontal display scale for FFT or for dual math waveforms that have source waveforms that are reference waveforms. The horizontal scale of a dual math waveform with a channel source waveform is set through the HORizontal:SCAle command.

Group Math

Syntax MATH[1]:HORizontal:SCAle <NR3>
MATH[1]:HORizontal:SCAle?

Arguments <NR3> is the math horizontal scale in seconds.

Examples MATH:HORIZONTAL:SCALE? might return MATH:HORIZONTAL:SCALE 2.0E-4 indicating that the math horizontal scale is 200 μ

MATH[1]:HORizontal:UNIts

Returns the math waveform horizontal measurement unit value.

Group Math

Syntax `MATH[1]:HORIZONTAL:UNITS?`

Examples `MATH:HORIZONTAL:UNITS?` might return `MATH:HORIZONTAL:UNITS "?"` indicating that the math horizontal unit label for unknown values is the default question mark unit.

MATH[1]:SPECTral:MAG

Sets or returns the units of the Spectral Magnification function in the math string.

Group Math

Syntax `MATH[1]:SPECTral:MAG {LINEAR|DB}`
`MATH[1]:SPECTral:MAG?`

Arguments `LINEAR` sets the SpectralMag units to linear.
`DB` sets the SpectralMag units to decibels.

Examples `MATH1:SPECTRAL:MAG DB` sets the SpectralMag units for Math1 to decibels.
`MATH1:SPECTRAL:MAG?` might return `:MATH1:SPECTRAL:MAG DB` indicating that the SpectralMag units for Math1 are set to decibels.

MATH[1]:SPECTral:WINDow

Sets or returns the window function for the spectral analyzer input data for the specified math waveform. A spectral window determines what the filter shape of the spectral analyzer will be in the frequency domain. It can be described by a mathematical function that is multiplied point-by-point times the input data to the spectral analyzer.

Group Math

Syntax `MATH[1]:SPECTral:WINDow`
`{RECTangular|HAMming|HANning|BLACKmanharris}`
`MATH[1]:SPECTral:WINDow?`

Arguments	<p>RECTangular window function is equivalent to multiplying all gate data by one.</p> <p>HAMming window function is based on a cosine series.</p> <p>HANNing window function is based on a cosine series.</p> <p>BLAckmanharris window function is based on a cosine series.</p>
Examples	<p>MATH1:SPECTRAL:WINDOW HANNING applies a Hanning window to the spectral analyzer input data.</p> <p>MATH1:SPECTRAL:WINDOW? might return :MATH1:SPECTRAL:WINDOW HAMMING indicating that the window function used to multiply the spectral analyzer input data is the Hamming window.</p>

MATH[1]:TYPE

Sets or returns the math waveform mode type.

Group	Math
Syntax	<p>MATH[1]:TYPE {ADVanced DUAL FFT}</p> <p>MATH[1]:TYPE?</p>
Arguments	<p>ADVanced sets the math waveform mode to advanced math.</p> <p>DUAL sets the math waveform mode to dual waveform math.</p> <p>FFT sets the math waveform mode to FFT math.</p>
Examples	<p>MATH:TYPE FFT sets the math waveform mode to FFT.</p> <p>MATH:TYPE FFT;:MATH:DEFINE "FFT(CH1)" sets the math type to FFT and displays an FFT waveform of the channel 1 waveform, using the current FFT scale and window settings.</p> <p>MATH:TYPE ADVANCED;:MATH:DEFINE "INTG(REF1*CH3)+DELAY(CH1,CH2)" sets the math type to FFT and displays an advanced math waveform that is the integration of the product of REF1 and CH3 plus the result of the delay measurement between channel 1 and 2.</p>

MATH[1]:VERTical:POSition

Sets or returns the vertical position of the currently selected math type.

Group	Math
Syntax	MATH[1]:VERTical:POSition <NR3> MATH[1]:VERTical:POSition?
Related Commands	CH<x>:POSition , REF<x>:VERTical:POSition
Arguments	<NR3> is the desired position in divisions from the center graticule.
Examples	MATH1:VERTICAL:POSITION 1.3E+00 positions the Math 1 input signal 1.3 divisions higher than a position of 0. MATH1:VERTICAL:POSITION? might return :MATH1:VERTICAL:POSITION -1.3000E+00 indicating that the current position of Math 1 is 1.3 divisions below the center graticule.

MATH[1]:VERTical:SCAle

Sets or returns the vertical scale of the currently selected math type.

Group	Math
Syntax	MATH[1]:VERTical:SCAle <NR3> MATH[1]:VERTical:SCAle?
Related Commands	CH<x>:SCAle , REF<x>:VERTical:SCAle
Arguments	<NR3> is the scale-per-division in the current math vertical units. The range is from 1.0E-12 through 500.0E+12.
Examples	MATH1:VERTICAL:SCALE 100E-03 sets the Math scale to 100 mV per division. MATH:VERTICAL:SCALE? might return :MATH:VERTICAL:SCALE 1.0000E+00 indicating that the current scale setting of Math is 1 V per division.

MATH[1]:VERTical:UNIts

Returns the math waveform vertical measurement unit value.

Group	Math
Syntax	MATH[1]:VERTICAL:UNITS?
Examples	MATH:VERTICAL:UNITS? might return MATH:VERTICAL:UNITS "joules" indicating that the math vertical unit label for unknown values is joules.

MATHVAR? (Query Only)

Queries both numerical values you can use within math expressions.

Group	Math
Syntax	MATHVAR?
Related Commands	MATHVAR:VAR<x> , MATH[1]:DEFine
Returns	<NR3> are the stored numerical values.
Examples	MATHVAR? returns the values of all variables stored in locations 1 through 2.

MATHVAR:VAR<x>

Sets or returns one of two different numerical values you can use within math expressions. These values can range from -10.0e-18 to 1.0e+15; the default values are 0.0. <x> specifies the location, 1 or 2, in which you can store values. Stored math variables can be referenced within math expressions as VAR1 and VAR2.

For example, the following command defines MATH1 as the product of Channel 1 and math variable 1: MATH1:DEFINE "CH1 * VAR1".

Group	Math
Syntax	MATHVAR:VAR<x> <NR3> MATHVAR:VAR<x>?
Related Commands	MATHVAR:VAR<x> , MATH[1]:DEFine

Arguments	<NR3> specifies the numerical value to be stored in location x <1 through 2>.
Examples	<p>MATHVAR:VAR2 -2.43E-5 stores the value -2.43e-5 in the second math variable location.</p> <p>MATHVAR:VAR2? might return :MATHVAR:VAR2 24.3000E-6 for the expression stored in location 2.</p>

MEASUrement? (Query Only)

Returns all measurement parameters.

Group	Measurement
Syntax	MEASUrement?
Examples	<p>MEASUREMENT? might return :MEASUREMENT:IMMED:DELAY:DIRECTION FORWARDS;EDGE1 RISE;EDGE2 RISE;;MEASUREMENT:IMMED:TYPE PERIOD;UNITS "s";SOURCE1 CH1;SOURCE2 CH2;;MEASUREMENT:MEAS1:DELAY:DIRECTION FORWARDS;EDGE1 RISE;EDGE2 RISE;;MEASUREMENT:MEAS1:STATE 1;TYPE FREQUENCY;UNITS "Hz";SOURCE1 CH1;SOURCE2 CH2;COUNT 0;MAXIMUM 0.0000;MEAN 0.0000;MINIMUM 0.0 000;STDDEV 0.0000;;MEASUREMENT:MEAS2:DELAY:DIRECTION FORWARDS;EDGE1 RISE;EDGE2 RISE;;MEASUREMENT:MEAS2:STATE 1;TYPE PERIOD;UNITS "s";SOURCE1 CH1;SOURCE2 CH2;COUNT 0;MAXIMUM 0.0000;MEAN 0.0000;MINIMUM 0.0000;STDDEV 0.0000;;MEASUREMENT:MEAS3: DELAY:DIRECTION FORWARDS;EDGE1 RISE;EDGE2 RISE;;MEASUREMENT:MEAS3:STATE 1;TYPE PK2PK;UNITS "v";SOURCE1 CH1;SOURCE2 CH2;COUNT 0;MAXIMUM 0.0000;MEAN 0.0000;MINIMUM 0.0000;STDDEV 0.0000;;MEASUREMENT:MEAS4:DELAY:DIRECTION FORWARDS;EDGE1 RISE;EDGE2 RISE;;MEASUREMENT:MEAS4:STATE 0;TYPE PERIOD;UNITS "s";SOURCE1 CH1;SOURCE2 CH2;COUNT 0;MAXIMUM 0.0000;MEAN 0.0000;MINIMUM 0.0000;STDDEV 0.0000;;MEASUREMENT:METHO AUTO;REFLEVEL:METHO PERCENT;ABSOLUTE:HIGH 0.0000;LOW 0.0000;MID1 0.0000;MID2 0.0000;;MEASUREMENT:REFLEVEL:PERCENT:HIGH 90.0000;LOW 10.0000;MID1 50.0000;MID2 50.0000;;MEASUREMENT:INDICATORS:STATE OFF;NUMHORZ 0;NUMVERT 0;HORZ1 99.0000E +36;HORZ2 99.0000E+36;HORZ3 99.0000E+36;HORZ4 99.0000E+36;VERT1 99.0000E+36;VERT2 99.0000E+36;VERT3 99.0000E+36;VERT4 99.0000E+36;;MEASUREMENT:STATISTICS:MODE OFF;WEIGHTING 32;;MEASUREMENT:GATING SCREEN.</p>

MEASUrement:CLEARSnapshot (No Query Form)

Removes the measurement snapshot display.

Group Measurement

Syntax MEASUrement:CLEARSnapshot

Related Commands [CLEARMenu](#)

MEASUrement:GATing

Specifies or returns the measurement gating setting.

Group Measurement

Syntax MEASUrement:GATing {OFF|SCREen|CURSor}
MEASUrement:GATing?

Arguments OFF turns off measurement gating (full record).
SCREen turns on gating, using the left and right edges of the screen.
CURSor limits measurements to the portion of the waveform between the vertical bar cursors, even if they are off screen.

Examples MEASUREMENT:GATING CURSOR turns on measurement gating using the cursors as limits.
MEASUREMENT:GATING? might return :MEASUREMENT:GATING CURSOR indicating that measurements are limited to the portion of the waveform between the vertical bar cursors.

MEASUrement:IMMed? (Query Only)

Returns all immediate measurement setup parameters.

Group Measurement

Syntax MEASUrement:IMMed?

Examples MEASUREMENT:IMMED? might return
 :MEASUREMENT:IMMED:DELAY:DIRECTION FORWARDS;EDGE1 RISE;EDGE2
 RISE;;MEASUREMENT:IMMED:TYPE PERIOD;UNITS "s";SOURCE1
 CH1;SOURCE2 CH2

MEASUrement:IMMed:DELaY? (Query Only)

Returns information about the immediate delay measurement. This command is equivalent to viewing the delay measurement settings on the measurement readout.

Group Measurement

Syntax MEASUrement:IMMed:DELaY?

Examples MEASUREMENT:IMMED:DELAY? might return
 :MEASUREMENT:IMMED:DELAY:DIRECTION FORWARDS; EDGE1
 RISE;EDGE2 RISE

MEASUrement:IMMed:DELaY:DIRection

Sets or returns the starting point and direction that determines the delay "to" edge when taking an immediate delay measurement.

NOTE. Use the [MEASUrement:IMMed:SOUrce<x>](#) command to specify the delay "to" waveform.

Group Measurement

Syntax MEASUrement:IMMed:DELaY:DIRection {BACKwards|FORwards}
 MEASUrement:IMMed:DELaY:DIRection?

Related Commands [MEASUrement:IMMed:SOUrce<x>](#)

Arguments BACKwards starts the search at the end of the waveform and looks for the last rising or falling edge in the waveform.

 FORwards starts the search at the beginning of the waveform and looks for the first rising or falling edge in the waveform.

Examples `MEASUREMENT:IMMED:DELAY:DIRECTION FORWARDS` starts searching from the beginning of the waveform record and looks for the first rising or falling edge.

`MEASUREMENT:IMMED:DELAY:DIRECTION?` might return
`:MEASUREMENT:IMMED:DELAY:DIRECTION BACKWARDS` indicating that searching begins at the end of the waveform record and looks for the last rising or falling edge.

MEASUrement:IMMed:DElay:EDGE<x>

Sets or returns the slope of the edge the oscilloscope uses for the delay "from" or "to" waveform when taking an immediate delay measurement.

Group Measurement

Syntax `MEASUrement:IMMed:DElay:EDGE<x> {FALL|RISe}`
`MEASUrement:IMMed:DElay:EDGE<x>?`

Related Commands [MEASUrement:IMMed:SOUrce<x>](#)

Arguments `<x>` specifies which waveform to use, where `<x> = 1` is the "from" waveform, and `<x> = 2` is the "to" waveform.

FALL specifies the falling edge.

RISe specifies the rising edge.

Examples `MEASUREMENT:IMMED:DELAY:EDGE1 RISe` specifies that the "from" waveform rising edge be used for the immediate delay measurement.

`MEASUREMENT:IMMED:DELAY:EDGE1?` returns either RISe or FALL.

MEASUrement:IMMed:SOUrce<x>

For `SOUrce1`: Sets or returns the source for all single channel measurements. For delay or phase measurements, sets or returns the waveform to measure "from".

For `SOUrce2`: Sets or returns the waveform to measure "to" when taking a delay measurement or phase measurement.

NOTE. *If you do not specify a numerical suffix, the source is assumed to be `SOUrce1`.*

Group	Measurement
Syntax	<p>MEASUREMENT:IMMED:SOURCE<x> {CH1 CH2 CH3 CH4 MATH D<x> HISTOGRAM} MEASUREMENT:IMMED:SOURCE<x>?</p>
Arguments	<p>CH1–CH4 or MATH is the source waveform.</p> <p>MATH is the math waveform.</p> <p>D<X> is a digital waveform. The x variable can be expressed as an integer, where x is the digital channel number. Digital channels are available only on MSO models.</p> <p>HISTOGRAM indicates the histogram as the object to be measured. HISTOGRAM only applies to SOURCE1; it is not available for SOURCE2.</p>

MEASUREMENT:IMMED:TYPE

Sets or returns the immediate measurement type.

Digital channel measurements do not have a user-settable midRef threshold. If you specify a digital channel measurement that is not available on MSO models, measurement error 2200: measurement system error occurs and 9.9e37 is returned.

Group	Measurement
Syntax	<p>MEASUREMENT:IMMED:TYPE {AMPLITUDE AREA BURST CAREA CMEAN CRMS DELAY FALL FREQUENCY HIGH HITS LOW MAXIMUM MEAN MEDIAN MINIMUM NDUTY NEDGECount NOVERSHOOT NPULSECount NWIDTH PEAKHITS PEDGECount PDUTY PERIOD PHASE PK2Pk POVERSHOOT PPULSECount PWIDTH RISE RMS SIGMA1 SIGMA2 SIGMA3 STDdev WAVEFORMS} MEASUREMENT:IMMED:TYPE?</p>
Arguments	<p>AMPLITUDE measures the amplitude of the selected waveform. In other words, it measures the high value less the low value measured over the entire waveform or gated region. This measurement is applicable only to the analog channels.</p> $Amplitude = High - Low$ <p>AREA measures the voltage over time. The area is over the entire waveform or gated region and is measured in volt-seconds. The area measured above the ground is positive, while the area below ground is negative. This measurement is applicable only to the analog channels.</p>

BURSt measures the duration of a burst. The measurement is made over the entire waveform or gated region.

CARea (cycle area) measures the voltage over time. In other words, it measures, in volt-seconds, the area over the first cycle in the waveform or the first cycle in the gated region. The area measured above the common reference point is positive, while the area below the common reference point is negative. This measurement is applicable only to the analog channels.

CMEan (cycle mean) measures the arithmetic mean over the first cycle in the waveform or the first cycle in the gated region. This measurement is applicable only to the analog channels.

CRMS (cycle rms) measures the true Root Mean Square voltage over the first cycle in the waveform or the first cycle in the gated region. This measurement is applicable only to the analog channels.

DELAy measures the time between the middle reference (default = 50%) amplitude point of the source waveform and the destination waveform.

FALL measures the time taken for the falling edge of the first pulse in the waveform or gated region to fall from a high reference value (default is 90%) to a low reference value (default is 10%). This measurement is applicable only to the analog channels.

FREQuency measures the first cycle in the waveform or gated region. Frequency is the reciprocal of the period and is measured in hertz (Hz), where 1 Hz = 1 cycle per second.

HIGH measures the High reference (100% level, sometimes called Topline) of a waveform. This measurement is applicable only to the analog channels.

HITS (histogram hits) measures the number of points in or on the histogram box.

LOW measures the Low reference (0% level, sometimes called Baseline) of a waveform. This measurement is applicable only to the analog channels.

MAXimum finds the maximum amplitude. This value is the most positive peak voltage found. It is measured over the entire waveform or gated region. This measurement is applicable only to the analog channels.

MEAN amplitude measurement finds the arithmetic mean over the entire waveform or gated region. This measurement is applicable only to the analog channels.

MEDian (histogram measurement) measures the middle point of the histogram box. Half of all acquired points within or on the histogram box are less than this value and half are greater than this value.

MINimum finds the minimum amplitude. This value is typically the most negative peak voltage. It is measured over the entire waveform or gated region. This measurement is applicable only to the analog channels.

NDuty (negative duty cycle) is the ratio of the negative pulse width to the signal period, expressed as a percentage. The duty cycle is measured on the first cycle in the waveform or gated region.

$$\text{Negative Duty Cycle} = ((\text{Negative Width}) / \text{Period}) \times 100\%$$

NEDGECount is the count of falling edges.

NOvershoot (negative overshoot) finds the negative overshoot value over the entire waveform or gated region. This measurement is applicable only to the analog channels.

$$\text{Negative Overshoot} = ((\text{Low} - \text{Minimum}) / \text{Amplitude}) \times 100\%$$

NPULSECount is the count of negative pulses.

NWidth (negative width) measurement is the distance (time) between the middle reference (default = 50%) amplitude points of a negative pulse. The measurement is made on the first pulse in the waveform or gated region.

PEAKHits measures the number of points in the largest bin of the histogram.

PDuty (positive duty cycle) is the ratio of the positive pulse width to the signal period, expressed as a percentage. It is measured on the first cycle in the waveform or gated region.

$$\text{Positive Duty Cycle} = ((\text{Positive Width}) / \text{Period}) \times 100\%$$

PEDGECount is the count of rising edges.

PERIOD is the time required to complete the first cycle in a waveform or gated region. Period is the reciprocal of frequency and is measured in seconds.

PHASE measures the phase difference (amount of time a waveform leads or lags the reference waveform) between two waveforms. The measurement is made between the middle reference points of the two waveforms and is expressed in degrees, where 360° represents one waveform cycle.

PK2Pk (peak-to-peak) finds the absolute difference between the maximum and minimum amplitude in the entire waveform or gated region. This measurement is applicable only to the analog channels.

POvershoot is the positive overshoot value over the entire waveform or gated region. This measurement is applicable only to the analog channels.

$$\text{Positive Overshoot} = ((\text{Maximum} - \text{High}) / \text{Amplitude}) \times 100\%$$

PPULSECount is the count of positive pulses.

PWidth (positive width) is the distance (time) between the middle reference (default = 50%) amplitude points of a positive pulse. The measurement is made on the first pulse in the waveform or gated region.

RISE timing measurement finds the rise time of the waveform. The rise time is the time it takes for the leading edge of the first pulse encountered to rise from a

low reference value (default is 10%) to a high reference value (default is 90%). This measurement is applicable only to the analog channels.

RMS amplitude measurement finds the true Root Mean Square voltage in the entire waveform or gated region. This measurement is applicable only to the analog channels.

SIGMA1 (histogram measurement) measures the percentage of points in the histogram that are within one standard deviation of the histogram mean.

SIGMA2 (histogram measurement) measures the percentage of points in the histogram that are within two standard deviations of the histogram mean.

SIGMA3 (histogram measurement) measures the percentage of points in the histogram that are within three standard deviations of the histogram mean.

STDdev measures the standard deviation (Root Mean Square (RMS) deviation) of all acquired points within or on the histogram box.

WAVEFORMS (waveform count) measures the number of waveforms used to calculate the histogram.

Examples MEASUREMENT:IMMED:TYPE FREQUENCY defines the immediate measurement to be a frequency measurement.

MEASUREMENT:IMMED:TYPE? might return :MEASUREMENT:IMMED:TYPE RMS indicating that the immediate measurement is the true Root Mean Square voltage.

MEASUREMENT:IMMED:UNITS? (Query Only)

Returns a string containing the units of the immediate measurement.

Group Measurement

Syntax MEASUREMENT:IMMED:UNITS?

Returns This query returns one of the following strings.

Unit string	Description
"%"	percent
"/Hz"	inverse hertz
"?"	indeterminate
"A"	amperes
"A/A"	amperes per ampere
"A/V"	amperes per volt

Unit string	Description
"A/W"	ampere per watt
"A/dB"	amperes per decibel
"A/s"	amperes per second
"AA"	amperes squared
"AW"	ampere-watts
"AdB"	ampere-decibels
"As"	ampere-seconds
"B"	bytes
"Hz"	hertz
"IRE"	Institute of Radio Engineers units
"S/s"	samples per second
"V"	volts
"V/A"	volts per ampere
"V/V"	volts per volt
"V/W"	volts per watt
"V/dB"	volts per decibel
"V/s"	volts per second
"VA"	volt-amperes
"VAR"	volt-amperes resistive
"VV"	volts squared
"VW"	volt-watts
"VdB"	volts-decibels
"Vs"	volt-seconds
"W"	watts
"W/A"	watts per ampere
"W/V"	watts per volt
"W/W"	watts per watt
"W/dB"	watt per decibel
"W/s"	watts per second
"WA"	watt-amperes
"WV"	watt-volts
"WW"	watts squared
"WdB"	watt-decibels
"Wfms"	waveforms
"Ws"	watt-seconds
"dB"	decibels
"dB/A"	decibels per ampere
"dB/V"	decibels per volt

Unit string	Description
"dB/W"	decibels per watt
"dB/dB"	decibels per decibel
"dBA"	decibel-amperes
"dBV"	decibel-volts
"dBW"	decibel-watts
"dBdB"	decibels squared
"day"	days
"degrees"	degrees
"div"	divisions
"edges"	edges
"hits"	hits
"hr"	hours
"joules"	joules
"min"	minutes
"ohms"	ohms
"percent"	percent
"pulses"	pulses
"s"	seconds
"unk"	unknown

Examples `MEASUREMENT:IMMED:UNITS?` might return
`:MEASUREMENT:IMMED:UNITs "s"`
indicating that units for the immediate measurement are in seconds.

MEASUREMENT:IMMed:VALue? (Query Only)

Returns the value of the measurement specified by the [MEASUREMENT:IMMed:TYPE](#) command. The measurement is immediately taken on the source(s) specified by a [MEASUREMENT:IMMed:SOURCE<x>](#) command.

NOTE. *A change to `HORIZONTAL:MAIN:SCALE` or `CH<x>:SCALE` will not necessarily have taken affect if immediately followed by this command.*

Group Measurement

Syntax `MEASUREMENT:IMMed:VALue?`

Related Commands [MEASUrement:IMMed:TYPe](#), [MEASUrement:IMMed:SOUrce<x>](#), [*ESR?](#), [ALLEv?](#)

Examples `MEASUREMENT:IMMED:VALUE?` might return `:MEASUREMENT:IMMED:VALUE 9.9000E+37`. If the measurement has an error or warning associated with it, then an item is added to the error queue. The error can be checked for with the [*ESR?](#) and [ALLEv?](#) commands.

MEASUrement:INDICators? (Query Only)

Returns all measurement indicator parameters.

Group Measurement

Syntax `MEASUrement:INDICators?`

Examples `MEASUREMENT:INDICATORS?` might return
`MEASUREMENT:INDICATORS:STATE MEAS1;NUMHORZ 0;NUMVERT 4;HORZ1 7.5E0;HORZ2 -3.400000095367E0;HORZ3 0.0E0;HORZ4 0.0E0;VERT1 -6.351123E-6;VERT2 -3.179753E-6;VERT3 -6.40943E-6;VERT4 -6.403E-6`

MEASUrement:INDICators:HORIZ<x>? (Query Only)

Returns the position of the specified horizontal measurement indicator <x>, where <x> can be 1, 2, 3, or 4.

Group Measurement

Syntax `MEASUrement:INDICators:HORIZ<x>?`

Examples `MEASUREMENT:INDICATORS:HORIZ1?` might return
`MEASUREMENT:INDICATORS:HORIZ1 -2.0E-3` indicating that horizontal indicator1 has a value of -2mV.

MEASUrement:INDICators:NUMHORZ? (Query Only)

Returns the number of horizontal measurement indicators currently being displayed.

Group	Measurement
Syntax	MEASurement:INDICators:NUMHORZ?
Examples	MEASUREMENT:INDICATORS:NUMHORZ? might return MEASUREMENT:INDICATORS:NUMHORZ 2 indicating there are currently 2 horizontal lines drawn on the graticule. The indicators show where the measurement specified by MEASurement:INDICators:STATE is being performed.

MEASurement:INDICators:NUMVERT? (Query Only)

Returns the number of vertical measurement indicators currently being displayed.

Group	Measurement
Syntax	MEASurement:INDICators:NUMVERT?
Examples	MEASUREMENT:INDICATORS:NUMVERT? might return MEASUREMENT:INDICATORS:NUMVERT 2 indicating there are currently 2 vertical lines drawn on the graticule. The indicators show where the measurement specified by MEASurement:INDICators:STATE is being performed.

MEASurement:INDICators:STATE

Sets or returns the state of visible measurement indicators.

Group	Measurement
Syntax	MEASurement:INDICators:STATE {OFF MEAS<x>} MEASurement:INDICators:STATE?
Arguments	OFF turns the visible measurement indicators off. MEAS<x> displays the visible measurement indicators for measurement <x>, where <x> can be 1 through 8.

NOTE. *There must be an active measurement before you can activate an indicator for a specified measurement.*

Examples MEASUREMENT:INDICATORS:STATE MEAS2 turns on the display of visible measurement indicators for measurement 2.

MEASUREMENT:INDICATORS:STATE? might return
 MEASUREMENT:INDICATORS:STATE OFF indicating that no measurement indicators are active.

MEASUrement:INDICators:VERT<x>? (Query Only)

Returns the value of the specified vertical measurement indicator <x> from the trigger point, where <x> can be 1 through 8. A negative value means that the indicator is positioned earlier in the waveform record than the trigger point.

Group Measurement

Syntax MEASUrement:INDICators:VERT<x>?

Examples MEASUREMENT:INDICATORS:VERT2? might return
 MEASUREMENT:INDICATORS:VERT2 -3.724507E-6 indicating that the second measurement indicator is positioned 3.72 μ s before the trigger point.

MEASUrement:MEAS<x>? (Query Only)

Returns all measurement parameters for the specified active measurement <x>.

Group Measurement

Syntax MEASUrement:MEAS<x>?

MEASUrement:MEAS<x>:COUNT? (Query Only)

Returns the number of values accumulated for this measurement since the last statistical reset. Values may be ignored if they generated an error. Measurements are specified by x, which ranges from 1 through 8.

Group Measurement

Syntax MEASUrement:MEAS<x>:COUNT?

Examples MEASUREMENT:MEAS3:COUNT? might return :MEASUREMENT:MEAS3:COUNT 3247.

MEASUREMENT:MEAS<x>:DELAY? (Query Only)

Returns the delay measurement parameters for the measurement specified by <x>, which ranges from 1 through 8.

Group Measurement

Syntax MEASUREMENT:MEAS<x>:DELAY?

Examples MEASUREMENT:MEAS1? might return :MEASUREMENT:MEAS1:DELAY:DIRECTION FORWARDS;EDGE1 RISE;EDGE2 RISE.

MEASUREMENT:MEAS<x>:DELAY:DIRECTION

Sets or returns the starting point and direction that determines the delay "to" edge when taking a delay measurement. Use the [MEASUREMENT:MEAS<x>:SOURCE<x>](#) command to specify the waveform.

Group Measurement

Syntax MEASUREMENT:MEAS<x>:DELAY:DIRECTION {BACKWARDS|FORWARDS}
MEASUREMENT:MEAS<x>:DELAY:DIRECTION?

Related Commands [MEASUREMENT:MEAS<x>:SOURCE<x>](#)

Arguments BACKWARDS means the search starts at the end of the waveform and looks for the last rising or falling edge in the waveform. Use the [MEASUREMENT:MEAS<x>:DELAY:EDGE<x>](#) command to specify the slope of the edge.

FORWARDS means the search starts at the beginning of the waveform and looks for the first rising or falling edge in the waveform. Use the [MEASUREMENT:MEAS<x>:DELAY:EDGE<x>](#) command to specify the slope of the edge.

Examples `MEASUREMENT:MEAS3:DELAY:DIRECTION BACKWARDS` starts searching from the end of the waveform record.

`MEASUREMENT:MEAS3:DELAY:DIRECTION?` might return
`:MEASUREMENT:MEAS3:DELAY:DIRECTION BACKWARDS` indicating
that the current search direction is backwards.

MEASUrement:MEAS<x>:DELay:EDGE<x>

Sets or returns the slope of the edge used for the delay "from" or "to" waveform when taking an immediate delay measurement. The waveform is specified by [MEASUrement:MEAS<x>:SOUrce<x>](#).

Group Measurement

Syntax `MEASUrement:MEAS<x>:DELay:EDGE<x> {FALL|RISe}`
`MEASUrement:MEAS<x>:DELay:EDGE<x>?`

Arguments <x> specifies which waveform to use, where <x> = 1 is the "from" waveform, and <x> = 2 is the "to" waveform.

FALL specifies the falling edge.

RISe specifies the rising edge.

Examples `MEASUREMENT:MEAS1:DELAY:EDGE1 RISe` specifies that the "from" waveform rising edge be used for the immediate delay measurement.

`MEASUREMENT:MEAS1:DELAY:EDGE1?` returns either RISE or FALL.

MEASUrement:MEAS<x>:MAXimum? (Query Only)

Returns the maximum value found for this measurement since the last statistical reset. Measurements are specified by x, which ranges from 1 through 8.

Group Measurement

Syntax `MEASUrement:MEAS<x>:MAXimum?`

Examples `MEASUREMENT:MEAS3:MAXIMUM?` might return
`:MEASUREMENT:MEAS3:MAXIMUM 4.18E-9.`

MEASUrement:MEAS<x>:MEAN? (Query Only)

Returns the mean value accumulated for this measurement since the last statistical reset. Measurements are specified by x, which ranges from 1 through 8.

Group Measurement

Syntax MEASUrement:MEAS<x>:MEAN?

Examples MEASUREMENT:MEAS1:MEAN? might return :MEASUREMENT:MEAS1:MEAN 514.71E-09.

MEASUrement:MEAS<x>:MINImum? (Query Only)

Returns the minimum value for this measurement since the last statistical reset. Measurements are specified by <x>, which ranges from 1 through 8.

Group Measurement

Syntax MEASUrement:MEAS<x>:MINImum?

Examples MEASUREMENT:MEAS1:MINIMUM? might return :MEASUREMENT:MEAS1:MINIMUM 1.75E-09.

MEASUrement:MEAS<x>:SOUrce<x>

For SOURce1: Sets or returns the source for all single channel measurements. For delay or phase measurements, sets or returns the waveform to measure "from".

For SOURce2: Sets or returns the waveform to measure "to" when taking a delay measurement or phase measurement.

Measurements are specified by <x>, which ranges from 1 to 8.

NOTE. *If you do not specify a numeric suffix, the source is assumed to be SOURce1.*

Group Measurement

Syntax MEASUrement:MEAS<x>:SOUrce<x> {CH<x>|MATH|D<x>|HISTogram}
MEASUrement:MEAS<x>:SOUrce<x>?

Related Commands [MEASUrement:MEAS<x>:TYPE](#)

Arguments CH<x> is an input channel waveform, where x is the channel number.

MATH is the math waveform.

REF<x> is a reference waveform, where x is the reference channel number.

D<x> is a digital waveform, where x is the digital channel number. Digital channels are available only on MSO models.

HISTogram indicates the histogram is the object to be measured. HISTogram only applies to SOURce1; it is not allowed on SOURce2.

Examples MEASUREMENT:MEAS4:SOURCE2 CH1 specifies CH1 as the delay "to" source when making delay measurement.

MEASUREMENT:MEAS2:SOURCE2? might return
:MEASUREMENT:MEAS2:SOURCE2 MATH1 indicating that Math 1 is the measurement 2 source.

MEASUrement:MEAS<x>:STATE

Sets or returns whether the specified measurement slot is computed and displayed. The measurement slot is specified by <x>, which ranges from 1 through 8.

For a measurement to display, you must have selected a source waveform and defined the measurement you want to take and display. You select the measurement using the [MEASUrement:MEAS<x>:SOURce<x>](#) command. You define the measurement type using the [MEASUrement:MEAS<x>:TYPE](#) command.

Group Measurement

Syntax MEASUrement:MEAS<x>:STATE {OFF|ON|<NR1>}
MEASUrement:MEAS<x>:STATE?

Related Commands [MEASUrement:MEAS<x>:SOURce<x>](#), [MEASUrement:MEAS<x>:TYPE](#)

Arguments OFF disables calculation and display of the specified measurement slot.

ON enables calculation and display of the specified measurement slot.

<NR1> = 0 disables calculation and display of the specified measurement slot; any other value enables calculation and display of the specified measurement slot.

- Examples** `MEASUREMENT:MEAS2:STATE ON` computes and displays the measurement defined as measurement 2.
- `MEASUREMENT:MEAS1:STATE?` might return `:MEASUREMENT:MEAS1:STATE 0` indicating that measurement defined for measurement slot 1 is disabled.

MEASUrement:MEAS<x>:STDdev? (Query Only)

Returns the standard deviation of values accumulated for this measurement since the last statistical reset. Measurements are specified by <x>, the measurement slots, from 1 through 8.

Group Measurement

Syntax `MEASUrement:MEAS<x>:STDdev?`

- Examples** `MEASUREMENT:MEAS1:STDDEV?` might return `:MEASUREMENT:MEAS1:STDDEV 21.0E-12.`

MEASUrement:MEAS<x>:TYPE

Sets or returns the measurement type defined for the specified measurement slot. The measurement slot is specified by <x>, which ranges from 1 through 8.

Digital channel measurements do not have a user-settable midRef threshold. If you specify a digital channel measurement that is not available on MSO models, measurement error 2200: measurement system error occurs and 9.9e37 is returned.

Group Measurement

Syntax `MEASUrement:MEAS<x>:TYPE`
`{AMPli tude|AREa|BURst|CAREa|CMEan|CRMs|DELay|FALL|FREQuency`
`|HIGH|HITS|LOW|MAXimum|MEAN|MEDIan|MINImum|NDuty|NEDGECount|NOVersho`
`|NPULSECount|NWidth|PEAKHits|PDuty|PEDGECount|PERIOD|PHASE|PK2Pk`
`|POVershoot|PPULSECount|PWidth|RISe|RMS`
`|SIGMA1|SIGMA2|SIGMA3|STDdev|WAVEFORMS}`
`MEASUrement:MEAS<x>:TYPE?`

- Arguments** `AMPli tude` measures the amplitude of the selected waveform. In other words, it measures the high value less the low value measured over the entire waveform or gated region. This measurement is applicable only to the analog channels.

$$\textit{Amplitude} = \textit{High} - \textit{Low}$$

AREa measures the voltage over time. The area is over the entire waveform or gated region and is measured in volt-seconds. The area measured above the ground is positive, while the area below ground is negative. This measurement is applicable only to the analog channels.

BURSt measures the duration of a burst. The measurement is made over the entire waveform or gated region.

CARea (cycle area) measures the voltage over time. In other words, it measures, in volt-seconds, the area over the first cycle in the waveform or the first cycle in the gated region. The area measured above the common reference point is positive, while the area below the common reference point is negative. This measurement is applicable only to the analog channels.

CMEan (cycle mean) measures the arithmetic mean over the first cycle in the waveform or the first cycle in the gated region. This measurement is applicable only to the analog channels.

CRMS (cycle rms) measures the true Root Mean Square voltage over the first cycle in the waveform or the first cycle in the gated region. This measurement is applicable only to the analog channels.

DELAy measures the time between the middle reference (default = 50%) amplitude point of the source waveform and the destination waveform. This measurement is applicable only to the analog channels.

FALL measures the time taken for the falling edge of the first pulse in the waveform or gated region to fall from a high reference value (default is 90%) to a low reference value (default is 10%). This measurement is applicable only to the analog channels.

FREQuency measures the first cycle in the waveform or gated region. Frequency is the reciprocal of the period and is measured in hertz (Hz), where 1 Hz = 1 cycle per second.

HIGH measures the High reference (100% level, sometimes called Topline) of a waveform. This measurement is applicable only to the analog channels.

HITS (histogram hits) measures the number of points in or on the histogram box.

LOW measures the Low reference (0% level, sometimes called Baseline) of a waveform. This measurement is applicable only to the analog channels.

MAXimum finds the maximum amplitude. This value is the most positive peak voltage found. It is measured over the entire waveform or gated region. This measurement is applicable only to the analog channels.

MEAN amplitude measurement finds the arithmetic mean over the entire waveform or gated region. This measurement is applicable only to the analog channels.

MEDian (histogram measurement) measures the middle point of the histogram box. Half of all acquired points within or on the histogram box are less than this value and half are greater than this value.

MINImum finds the minimum amplitude. This value is typically the most negative peak voltage. It is measured over the entire waveform or gated region. This measurement is applicable only to the analog channels.

NDuty (negative duty cycle) is the ratio of the negative pulse width to the signal period, expressed as a percentage. The duty cycle is measured on the first cycle in the waveform or gated region.

$$\text{Negative Duty Cycle} = ((\text{Negative Width}) / \text{Period}) \times 100\%$$

NEDGECount is the count of negative edges.

NOVershoot (negative overshoot) finds the negative overshoot value over the entire waveform or gated region. This measurement is applicable only to the analog channels.

$$\text{Negative Overshoot} = ((\text{Low} - \text{Minimum}) / \text{Amplitude}) \times 100\%$$

NPULSECount is the count of negative pulses.

NWidth (negative width) measurement is the distance (time) between the middle reference (default = 50%) amplitude points of a negative pulse. The measurement is made on the first pulse in the waveform or gated region.

PEAKHits measures the number of points in the largest bin of the histogram.

PDuty (positive duty cycle) is the ratio of the positive pulse width to the signal period, expressed as a percentage. It is measured on the first cycle in the waveform or gated region.

$$\text{Positive Duty Cycle} = ((\text{Positive Width}) / \text{Period}) \times 100\%$$

PEDGECount is the count of positive edges.

PERIod is the time required to complete the first cycle in a waveform or gated region. Period is the reciprocal of frequency and is measured in seconds.

PHASE measures the phase difference (amount of time a waveform leads or lags the reference waveform) between two waveforms. The measurement is made between the middle reference points of the two waveforms and is expressed in degrees, where 360° represents one waveform cycle.

PK2Pk (peak-to-peak) finds the absolute difference between the maximum and minimum amplitude in the entire waveform or gated region. This measurement is applicable only to the analog channels.

POVershoot is the positive overshoot value over the entire waveform or gated region. This measurement is applicable only to the analog channels.

$$\text{Positive Overshoot} = ((\text{Maximum} - \text{High}) / \text{Amplitude}) \times 100\%$$

PPULSECount is the count of positive pulses.

PWidth (positive width) is the distance (time) between the middle reference (default = 50%) amplitude points of a positive pulse. The measurement is made on the first pulse in the waveform or gated region.

RISe timing measurement finds the rise time of the waveform. The rise time is the time it takes for the leading edge of the first pulse encountered to rise from a low reference value (default is 10%) to a high reference value (default is 90%). This measurement is applicable only to the analog channels.

RMS amplitude measurement finds the true Root Mean Square voltage in the entire waveform or gated region. This measurement is applicable only to the analog channels.

SIGMA1 (histogram measurement) measures the percentage of points in the histogram that are within one standard deviation of the histogram mean.

SIGMA2 (histogram measurement) measures the percentage of points in the histogram that are within two standard deviations of the histogram mean.

SIGMA3 (histogram measurement) measures the percentage of points in the histogram that are within three standard deviations of the histogram mean.

STDdev measures the standard deviation (Root Mean Square (RMS) deviation) of all acquired points within or on the histogram box.

WAVEFORMS (waveform count) measures the number of waveforms used to calculate the histogram.

Examples

`MEASUREMENT:MEAS2:TYPE FREQUENCY` defines measurement 2 as a measurement of the frequency of a waveform.

`MEASUREMENT:MEAS1:TYPE?` might return `:MEASUREMENT:MEAS1:TYPE RMS` indicating that measurement 1 is defined to measure the RMS value of a waveform.

MEASUrement:MEAS<x>:UNIts? (Query Only)

Returns the units associated with the specified measurement. The measurement slots are specified by <x>, which ranges from 1 through 8.

Group Measurement

Syntax `MEASUrement:MEAS<x>:UNIts?`

Related Commands [MEASUrement:MEAS<x>:TYPE](#)

Returns This query returns one of the following strings.

Unit string	Description
"%"	percent
"/Hz"	inverse hertz
"?"	indeterminate
"A"	amperes
"A/A"	amperes per ampere
"A/V"	amperes per volt
"A/W"	ampere per watt
"A/dB"	amperes per decibel
"A/s"	amperes per second
"AA"	amperes squared
"AW"	ampere-watts
"AdB"	ampere-decibels
"As"	ampere-seconds
"B"	bytes
"Hz"	hertz
"IRE"	Institute of Radio Engineers units
"S/s"	samples per second
"V"	volts
"V/A"	volts per ampere
"V/V"	volts per volt
"V/W"	volts per watt
"V/dB"	volts per decibel
"V/s"	volts per second
"VA"	volt-amperes
"VAR"	volt-amperes resistive
"VV"	volts squared
"VW"	volt-watts
"VdB"	volts-decibels
"Vs"	volt-seconds
"W"	watts
"W/A"	watts per ampere
"W/V"	watts per volt
"W/W"	watts per watt
"W/dB"	watt per decibel
"W/s"	watts per second
"WA"	watt-amperes
"WV"	watt-volts
"WW"	watts squared

Unit string	Description
"WdB"	watt-decibels
"Wfms"	waveforms
"Ws"	watt-seconds
"dB"	decibels
"dB/A"	decibels per ampere
"dB/V"	decibels per volt
"dB/W"	decibels per watt
"dB/dB"	decibels per decibel
"dBA"	decibel-amperes
"dBV"	decibel-volts
"dBW"	decibel-watts
"dBdB"	decibels squared
"day"	days
"degrees"	degrees
"div"	divisions
"edges"	edges
"hits"	hits
"hr"	hours
"joules"	joules
"min"	minutes
"ohms"	ohms
"percent"	percent
"pulses"	pulses
"s"	seconds
"unk"	unknown

Examples `MEASUREMENT:MEAS1:UNITS?` might return `:MEASUREMENT:MEAS1:UNITs %` indicating units for measurement 1 are set to percent.

MEASUrement:MEAS<x>:VALue? (Query Only)

Returns a calculate value for the measurement specified by <x>, which ranges from 1 through 8.

NOTE. *This is the same value as displayed on-screen. If measurement statistics are enabled, a new value is calculated with every waveform. In addition, this value is updated approximately every 1/3 second. If you are acquiring a long acquisition record, the oscilloscope may take longer to update.*

Group	Measurement
Syntax	MEASUREMENT:MEAS<x>:VALUE?
Related Commands	MEASUREMENT:MEAS<x>:UNITS?, *ESR?, ALLEv?
Examples	MEASUREMENT:MEAS1:VALUE? might return :MEASUREMENT:MEAS1:VALUE 2.8740E-06. If the measurement has an error or warning associated with it, then an item is added to the error queue. The error can be checked for with the *ESR? and ALLEv? commands.

MEASUREMENT:METHod

Sets or returns the method used to calculate the 0% and 100% reference level.

Group	Measurement
Syntax	MEASUREMENT:METHod {Auto HISTogram MINMax} MEASUREMENT:METHod?
Related Commands	MEASUREMENT:REFLevel:PERCent:HIGH, MEASUREMENT:REFLevel:PERCent:LOW, MEASUREMENT:REFLevel:PERCent:MID, MEASUREMENT:REFLevel:PERCent:MID2
Arguments	<p>Auto selects the best method for each data set.</p> <p>HISTogram sets the high and low waveform levels statistically using a histogram algorithm.</p> <p>MINMax uses the highest and lowest values of the waveform record. This selection is best for examining waveforms with no large, flat portions of a common value, such as sine waves and triangle waves.</p>
Examples	MEASUREMENT:METHod? might return :MEASUREMENT:METHod MINMAX indicating that the reference levels are set to MIN and MAX.

MEASUREMENT:REFLevel? (Query Only)

Returns the current reference level parameters.

Group	Measurement
Syntax	MEASUREMENT:REFLEVEL?
Examples	<p>MEASUREMENT:REFLEVEL? might return these reference level settings :MEASUREMENT:REFLEVEL:METHOd PERCENT;ABSOLUTE:HIGH 0.0000;LOW 0.0000;MID1 0.0000 ;MID2 0.0000;;MEASUREMENT:REFLEVEL:PERCENT:HIGH 90.0000;LOW 10.0000;MID1 50.0000 ;MID2 50.0000</p>

MEASUREMENT:REFLEVEL:ABSOLUTE:HIGH

Sets or returns the high reference level, and is the upper reference level when [MEASUREMENT:REFLEVEL:METHOd](#) is set to Absolute. This command affects the results of rise and fall measurements.

NOTE. *this command affects the associated reference level parameter for all MEASUREMENTS:IMMed and the four periodic measurements.*

Group	Measurement
Syntax	<p>MEASUREMENT:REFLEVEL:ABSOLUTE:HIGH <NR3> MEASUREMENT:REFLEVEL:ABSOLUTE:HIGH?</p>
Related Commands	MEASUREMENT:REFLEVEL:METHOd , MEASUREMENT:IMMed:TYPE , MEASUREMENT:MEAS<x>:TYPE
Arguments	<NR3> is the high reference level, in volts. The default is 0.0 V.
Examples	<p>MEASUREMENT:REFLEVEL:ABSOLUTE:HIGH 1.71 sets the high reference level to 1.71 V.</p> <p>MEASUREMENT:REFLEVEL:ABSOLUTE:HIGH? might return :MEASUREMENT:REFLEVEL:ABSOLUTE:HIGH 1.7100E+00 indicating that the absolute high reference level is set to 1.71 V.</p>

MEASUREMENT:REFLEVEL:ABSOLUTE:LOW

Sets or returns the low reference level, and is the lower reference level when [MEASUREMENT:REFLEVEL:METHOd](#) is set to Absolute.

NOTE. *this command affects the associated reference level parameter for all MEASurements:IMMed and the four periodic measurements.*

Group	Measurement
Syntax	<pre>MEASurement:REFLevel:ABSolute:LOW <NR3> MEASurement:REFLevel:ABSolute:LOW?</pre>
Related Commands	MEASurement:REFLevel:METHod , MEASurement:IMMed:TYPe , MEASurement:MEAS<x>:TYPe
Arguments	<NR3> is the low reference level, in volts. The default is 0.0 V.
Examples	<p>MEASUREMENT:REFLEVEL:ABSOLUTE:LOW 0.0 sets the low reference level to 0.0 V.</p> <p>MEASUREMENT:REFLEVEL:ABSOLUTE:LOW? might return :MEASUREMENT:REFLEVEL:ABSOLUTE:LOW 0.0000E+00 indicating that the absolute low reference level is set to 0.0 V.</p>

MEASurement:REFLevel:ABSolute:MID[1]

Sets or returns the mid reference level, and is the 50% reference level when [MEASurement:REFLevel:METHod](#) is set to Absolute. This command affects the results of period, frequency, delay, and all cyclic measurements.

NOTE. *this command affects the associated reference level parameter for all MEASurements:IMMed and the four periodic measurements.*

Group	Measurement
Syntax	<pre>MEASurement:REFLevel:ABSolute:MID[1] <NR3> MEASurement:REFLevel:ABSolute:MID[1]?</pre>
Related Commands	MEASurement:REFLevel:METHod
Arguments	<NR3> is the mid reference level, in volts. The default is 0.0 V.

Examples `MEASUREMENT:REFLEVEL:ABSOLUTE:MID 1 .71` sets the mid reference level to .71 V.

`MEASUREMENT:REFLEVEL:ABSOLUTE:MID?` might return
`:MEASUREMENT:REFLEVEL:ABSOLUTE:MID 0.7100E+00` indicating that the absolute mid1 reference level is set to .71 V.

MEASUrement:REFLevel:ABSolute:MID2

Sets or returns the mid reference level for the "to" waveform when taking a delay measurement, and is the 50% reference level when [MEASUrement:REFLevel:METHod](#) is set to Absolute. This command affects the results of delay measurements.

NOTE. *this command affects the associated reference level parameter for all MEASurements:IMMed and the four periodic measurements.*

Group Measurement

Syntax `MEASUrement:REFLevel:ABSolute:MID2 <NR3>`
`MEASUrement:REFLevel:ABSolute:MID2?`

Related Commands [MEASUrement:REFLevel:METHod](#)

Arguments `<NR3>` is the mid reference level, in volts. The default is 0.0 V.

Examples `MEASUREMENT:REFLEVEL:ABSOLUTE:MID2 0.5` sets the mid reference level for the delay waveform to 0.5 V.

`MEASUREMENT:REFLEVEL:ABSOLUTE:MID2?` might return
`:MEASUREMENT:REFLEVEL:ABSOLUTE:MID2 0.5000E+00` indicating that the absolute mid2 reference level is set to 0.5 V.

MEASUrement:REFLevel:ABSolute:MID<x>

Sets or returns the mid reference level for channel `<x>`, where x is the measurement channel.

Group Measurement

Syntax `MEASUREMENT:REFLEVEL:ABSOLUTE:MID<x> <NR3>`
`MEASUREMENT:REFLEVEL:ABSOLUTE:MID<x>?`

Arguments <NR3> is the mid reference level in volts.

MEASUREMENT:REFLEVEL:METHOd

Specifies or returns the reference level units used for measurement calculations.

NOTE. *this command affects the associated reference level parameter for all MEASUREMENTS:IMMed and the eight periodic measurements. To change the parameter for individual measurements, use the MEASUREMENT:MEAS<x>:REFLEVEL commands.*

Group Measurement

Syntax `MEASUREMENT:REFLEVEL:METHOd {ABSOLUTE|PERCENT}`
`MEASUREMENT:REFLEVEL:METHOd?`

Arguments **ABSOLUTE** specifies that the reference levels are set explicitly using the MEASUREMENT:REFLEVEL:ABSOLUTE commands. This method is useful when precise values are required (for example, when designing to published interface specifications, such as RS-232-C).

PERCENT specifies that the reference levels are calculated as a percent relative to HIGH and LOW. The percentages are defined using the MEASUREMENT:REFLEVEL:PERCENT commands.

Examples `MEASUREMENT:REFLEVEL:METHOd ABSOLUTE` specifies that explicit user-defined values are used for the reference levels.

`MEASUREMENT:REFLEVEL:METHOd?` might return
`:MEASUREMENT:REFLEVEL:METHOd PERCENT` indicating that the reference level units used are calculated as a percent relative to HIGH and LOW.

MEASUREMENT:REFLEVEL:PERCENT:HIGH

Sets or returns the percent (where 100% is equal to HIGH) used to calculate the high reference level when [MEASUREMENT:REFLEVEL:METHOd](#) is set to Percent. This command affects the results of rise and fall measurements.

NOTE. This command affects the associated reference level parameter for all *MEASurements:IMMed* and the four periodic measurements.

Group	Measurement
Syntax	<pre>MEASUREMENT:REFLEVEL:PERCENT:HIGH <NR3> MEASUREMENT:REFLEVEL:PERCENT:HIGH?</pre>
Related Commands	MEASUREMENT:REFLEVEL:METHod , MEASUREMENT:IMMed:TYPE , MEASUREMENT:MEAS<x>:TYPE
Arguments	<NR3> is the high reference level, ranging from 0 to 100%. The default high reference level is 90%.
Examples	<p>MEASUREMENT:REFLEVEL:PERCENT:HIGH 95 sets the high reference level to 95% of HIGH.</p> <p>MEASUREMENT:REFLEVEL:PERCENT:HIGH? might return :MEASUREMENT:REFLEVEL:PERCENT:HIGH 90 indicating that the percentage high reference level is set to 90% of HIGH.</p>

MEASUREMENT:REFLEVEL:PERCENT:LOW

Sets or returns the percent (where 100% is equal to HIGH) used to calculate the low reference level when [MEASUREMENT:REFLEVEL:METHod](#) is set to Percent. This command affects the results of rise and fall measurements.

NOTE. this command affects the associated reference level parameter for all *MEASurements:IMMed* and the four periodic measurements.

Group	Measurement
Syntax	<pre>MEASUREMENT:REFLEVEL:PERCENT:LOW <NR3> MEASUREMENT:REFLEVEL:PERCENT:LOW?</pre>
Related Commands	MEASUREMENT:REFLEVEL:METHod , MEASUREMENT:IMMed:TYPE , MEASUREMENT:MEAS<x>:TYPE

Arguments	<NR3> is the low reference level, ranging from 0 to 100%. The default low reference level is 10%.
Examples	<p>MEASUREMENT:REFLEVEL:PERCENT:LOW 15 sets the high reference level to 15% of HIGH.</p> <p>MEASUREMENT:REFLEVEL:PERCENT:LOW? might return :MEASUREMENT:REFLEVEL:PERCENT:LOW 10 indicating that the percentage high reference level is set to 10% of HIGH.</p>

MEASUREMENT:REFLevel:PERCent:MID[1]

Sets or returns the percent (where 100% is equal to HIGH) that is used to calculate the mid reference level when MEASUREMENT:REFLevel:METHod is set to Percent. This command affects the results of period, frequency, delay, and all cyclic measurements.

NOTE. *this command affects the associated reference level parameter for all MEASUREMENTS:IMMed and the four periodic measurements.*

Group	Measurement
Syntax	<p>MEASUREMENT:REFLevel:PERCent:MID[1] <NR3> MEASUREMENT:REFLevel:PERCent:MID[1]?</p>
Related Commands	MEASUREMENT:REFLevel:METHod
Arguments	<NR3> is the mid reference level, ranging from 0 to 100%. The default mid reference level is 50%.
Examples	<p>MEASUREMENT:REFLEVEL:PERCENT:MID 1 60 sets the mid reference level to 60% of HIGH.</p> <p>MEASUREMENT:REFLEVEL:PERCENT:MID? might return :MEASUREMENT:REFLEVEL:PERCENT:MID 65 indicating that the percentage mid reference level is set to 65% of HIGH.</p>

MEASUREMENT:REFLevel:PERCent:MID2

Sets or returns the percent (where 100% is equal to HIGH) that is used to calculate the mid reference level for the second waveform specified when

MEASUrement:REFLevel:METHod is set to Percent. This command affects the results of delay measurements.

NOTE. *this command affects the associated reference level parameter for all MEASurements:IMMed and the four periodic measurements.*

Group	Measurement
Syntax	<pre>MEASUrement:REFLevel:PERCent:MID2 <NR3> MEASUrement:REFLevel:PERCent:MID2?</pre>
Related Commands	MEASUrement:REFLevel:METHod
Arguments	<NR3> is the mid reference level, ranging from 0 to 100%. The default mid reference level is 50%.
Examples	<p>MEASUREMENT:REFLEVEL:PERCENT:MID2 40 sets the mid2 reference level to 40% of HIGH.</p> <p>MEASUREMENT:REFLEVEL:PERCENT:MID2? might return :MEASUREMENT:REFLEVEL:PERCENT:MID2 45 indicating that the percentage mid2 reference level is set to 45% of HIGH.</p>

MEASUrement:REFLevel:PERCent:MID<x>

Sets or returns the mid reference level for channel <x>, where x is the measurement channel.

Group	Measurement
Syntax	<pre>MEASUrement:REFLevel:PERCent:MID<x> <NR3> MEASUrement:REFLevel:PERCent:MID<x>?</pre>
Arguments	<NR3> is the mid reference level in percent.

MEASUrement:SNAPShot (No Query Form)

Displays the measurement snapshot list on the oscilloscope screen. The list contains the immediate values for all available measurements of the active signal.

Group Measurement

Syntax MEASUREMENT:SNAPSHOT

MEASUREMENT:STATISTICS (No Query Form)

Clears all of the statistics accumulated for all periodic measurements (MEAS1 through MEAS4).

The query form returns statistic settings.

Group Measurement

Syntax MEASUREMENT:STATISTICS RESET
MEASUREMENT:STATISTICS?

Arguments RESET clears the measurements.

MEASUREMENT:STATISTICS:MODE

Controls the operation and display of management statistics.

Group Measurement

Syntax MEASUREMENT:STATISTICS:MODE {OFF|ON}
MEASUREMENT:STATISTICS:MODE?

Related Commands [MEASUREMENT:STATISTICS](#)

Arguments OFF turns all measurements off. This is the default value.
ON turns on statistics and displays all statistics for each measurement.

Examples MEASUREMENT:STATISTICS:MODE OFF turns statistic measurements off.
MEASUREMENT:STATISTICS:MODE? might return
:MEASUREMENT:STATISTICS:MODE ON indicating that measurement statistics are turned on and all statistics are being displayed for each measurement.

MEASUrement:STATIstics:WEIghting

Sets or returns the time constant for mean and standard deviation statistical accumulations.

Group Measurement

Syntax MEASUrement:STATIstics:WEIghting <NR1>
MEASUrement:STATIstics:WEIghting?

Related Commands [MEASUrement:STATIstics:MODE](#)

Arguments <NR1> is the number of samples used for the mean and standard deviation statistical accumulations.

Examples MEASUREMENT:STATISTICS:WEIGHTING 4 sets statistical weighting to four samples.

MEASUREMENT:STATISTICS:WEIGHTING? might return
:MEASUREMENT:STATISTICS:WEIGHTING 4 indicating that
measurement statistics weighting is currently set to 4 samples.

MESSage

This command sets or queries message box (screen annotation) parameters.

Group Display

Syntax MESSage
MESSage?

Examples MESSAGE? might return MESSAGE:SHOW "TP401";BOX
271,82,292,114;STATE 0 indicating the message parameters.

MESSage:BOX

Sets or returns the co-ordinates of the message box. This command does not display the message unless MESSage:STATE is on.

X1 and Y1 are the screen coordinates of the top left corner of the message box. X2 and Y2 are the screen coordinates of the bottom right corner of the message box. All four coordinates are returned by the query.

Changing the text in the message box, using the MESSAGE:SHOW command, automatically resizes the message box. If you want a custom message box size, send the MESSAGE:BOX command after changing the text using the MESSAGE:SHOW command.

Message box settings and data are saved and restored in saved setups.

Group Display

Syntax MESSAGE:BOX <X1>,<Y1>[,<X2>,<Y2>]
MESSAGE:BOX?

Related Commands [MESSAGE:STATE](#), [MESSAGE:SHOW](#), [MESSAGE:CLEAR](#)

Arguments <X1> and <X2> = 0 to 1023, and are pixel positions along the horizontal axis. <X1> defines the left and <X2> defines the right side of the window.

<Y1> and <Y2> = 0 to 767, and are pixel positions along the vertical axis. <Y1> defines the top and <Y2> defines the bottom of the window. The reserved height of all characters is 16 pixels so the window must be at least that high to fully display characters. <X2> and <Y2> are optional because the MESSAGE:SHOW command automatically sizes the box to fit the message. All four values are returned in a query.

MESSAGE:CLEAR (No Query Form)

Clears the contents of the message box.

Group Display

Syntax MESSAGE:CLEAR

Related Commands [MESSAGE:BOX](#), [MESSAGE:SHOW](#), [MESSAGE:STATE](#)

Examples MESSAGE:CLEAR
removes the message from the message window.

MESSage:SHOW

Sets or returns the contents of the message box. MESSage:SHOW <Qstring> defines the content of the message box. Change in string length causes automatic resize of the message box to fit the text. The box may be resized using the [MESSage:BOX](#) command. The [MESSage:STATE](#) command is used to turn on and off the message box display.

Group Display

Syntax MESSage:SHOW <QString>
MESSage:SHOW?

Related Commands [MESSage:BOX](#), [MESSage:CLEAR](#), [MESSage:STATE](#)

Arguments <QString> is the message and can include any of the characters shown in the Character Set, Appendix A. The maximum length of the message is 1000 characters; the instrument ignores longer strings.

The message box size is set to fit the message. You can also set the message area height and width using the [MESSage:BOX](#) command. The length of the message that fits in the message area depends on the contents of the message because the width of characters varies.

If the message exceeds the limits of the message box, either horizontally or vertically, the portion of the message that exceeds the limits will not be displayed. The message string itself is not altered. The entire message can be returned as a query response regardless of what is displayed in the message box.

The message is left-justified, and is displayed on a single line starting with the top most line in the window. A new line character can be embedded in the string to position the message on multiple lines. You can also use white space and tab characters to position the message within a line. Text which does not fit within the message box is truncated. Defining a message box text string erases any previously displayed text within the message box.

You can send a tab by transmitting a tab character (\t or \x09) followed characters representing the most significant eight bits followed by significant eight bits of a 16-bit number. The number specifies the position relative to the left margin of the message area. For example, to tab send TAB (\t or \x09), NUL (decimal 0), and CR (decimal 13).

For example, using hexadecimal escape sequences, MESSAGE:SHOW '\x09\x01\x17Hello' when sent as a command would cause the 'Hello' to be displayed starting at pixel position 279 relative to the left margin set by the MESSAGE:BOX command. If you want to display characters starting at position

279, then 279 = 0x0117; split the hexadecimal number into two characters 0x01 and 0x17 and send \x09\x01\x17.

Special characters which control decoration are two character sequences where the first character is an escape (0x1b) and the second character is as described below.

Bit 7	0
Bit 6	If set, inverse video is toggled from current state and the following text is displayed in the new inverse state until the state is toggled again. Remaining bits are ignored
Bit 5	If set, the color index in the four LSB's (bits 0 through 3) is applied to the foreground or background color depending on the fg/bg bit (bit 4).
Bit 4	If set, color change is applied to the background, otherwise applies to the foreground.
Bit 0 – 3	Specifies the color index (0 through 15) to change color as specified below:
	Index 0 Black (background)
	Index 1 Yellow (Ch 1)
	Index 2 Cyan (Ch 2)
	Index 3 Magenta (Ch 3)
	Index 4 Green (Ch 4)
	Index 5 Red (math)
	Index 6 White (reference)
	Index 7 Orange
	Index 8 Gray (Graticule)
	Index 9 White (text)
	Index 10 Tek blue
	Index 11 Bright blue
	Index 12 Undefined
	Index 13 Blue
	Index 14 Undefined
	Index 15 Dark blue
Bit 4	If set, the foreground color is set to the default foreground color.
Bit 3	If set, the background color is set to the default background color.
Bit 2	Undefined
Bit 1	Undefined
Bit 0	Undefined

The ESC (escape) character followed by the @ character turns inverse video on or off and can be embedded in the message string. Example: “abcESC@defESC@ghi” specifies the string “abcdefghi” where the “def” portion is displayed in inverse video.

Example: “abcESC#defESC)ESC@ghi” specifies the string “abcdefghi” where the “def” portion appears in the channel 3 color (magenta) and the “ghi” portion appears in the normal text color except it’s in inverse video.

An alternate way to enter characters is octal escape sequences. This consists of a backslash followed by numerals in the standard C language printf fashion.

Another way to enter characters is \xnn where the nn is the hexadecimal value of the character to display.

An advantage of these methods is that any controller program can be used. Another advantage is it’s easy to access characters with the high bit set, that is, those characters with a decimal value greater than 127.

An alternate way to enter certain characters is with a backslash followed by a single character (following “standard” Unix) as described in the table below.

n	Newline (carriage return and line feed)
\	Backslash (\ is required to get a backslash character)
t	Horizontal tab; the next 2 characters specify the pixel column to tab to as explained earlier

If a backslash is followed by an undefined special character, the backslash is ignored and the character following it is accepted as is.

NOTE. *The use of any escape codes other than those described above may produce unpredictable results.*

Examples MESSage:SHOW “Hello World”
displays “Hello world” in the upper left corner of the box (you can define the box size with the MESSAGE BOX command).

MESSage:SHOW “␣@Hello World␣@ ... hello”
displays “Hello world ... hello” in the upper left corner of the box and the word “world” is displayed in inverse video. In this example, ␣ stands for the escape character. The escape character may appear differently for you depending on your controller program.

MESSage:STATE

Controls the display of the message box.

Group Display

Syntax MESSage:STATE {OFF|ON|<NR1>}
MESSage:STATE?

Related Commands [MESSage:BOX](#)
[MESSage:SHOW](#), [MESSage:CLEAR](#)

Arguments OFF or <NR1> = 0 removes the message window from the screen.
 ON or <NR1> ≠ 0 displays the message window and its contents on the screen.

NEWpass (No Query Form)

This command changes the password that enables access to password protected data. The PASSWord command must be successfully executed before using this command or an execution error will be generated.

Group Miscellaneous

Syntax NEWpass <QString>

Related Commands [*PUD](#)
[PASSWord](#)

Arguments <QString> is the new password, which can contain up to 16 characters.

Examples NEWPASS "mypassword" creates a new password (mypassword) for accessing your protected data.

*OPC

Generates the operation complete message in the Standard Event Status Register (SESR) when all pending commands that generate an OPC message are complete. The *OPC? query places the ASCII character "1" into the output queue when all such OPC commands are complete. The *OPC? response is not available to read until all pending operations finish. (See page 3-1, *Status and Events*.)

The *OPC command allows you to synchronize the operation of the oscilloscope with your application program. (See page 3-7, *Synchronization Methods*.)

Certain oscilloscope operations can affect the *OPC response. (See Table 3-3 on page 3-7.)

Group Status and Error

Syntax	*OPC *OPC?
Related Commands	BUSY?, *WAI
Examples	<p>*OPC generates the operation complete message in the SESR at the completion of all pending OPC operations.</p> <p>*OPC? might return 1 to indicate that all pending OPC operations are finished.</p>

PASSWord(No Query Form)

Enables the *PUD and NEWpass set commands. Sending PASSWord without any arguments disables these same commands. Once the password is successfully entered, the *PUD and NEWpass commands are enabled until the oscilloscope is powered off, or until the FACTory command or the PASSWord command with no arguments is issued.

To change the password, you must first enter the valid password with the PASSWord command and then change to your new password with the NEWpass command. Remember that the password is case sensitive.

Group	Miscellaneous
Syntax	PASSWord <QString>
Related Commands	NEWpass, *PUD
Arguments	<QString> is the password and can include up to 10 characters. The factory default password is "XYZZY" and is always valid.
Examples	<p>PASSWORD "XYZZY" enables the *PUD and NEWpass set commands.</p> <p>PASSWORD disables the *PUB and NEWpass set commands. You can still use the query version of *PUD.</p>

PICTBridge:DATEPrint

Enables or disables printing the date on the print output

Group	PictBridge
--------------	------------

Syntax	<code>PICTBridge:DATEPrint {DEFLT OFF ON}</code>
Arguments	<p>DEFLT is the default setting of the printer.</p> <p>ON enables the date print on the print output.</p> <p>OFF disables the date print on the print output.</p>
Examples	<p><code>PICTBRIDGE:DATEPRINT ON</code> enables the date print on the print output.</p> <p><code>PICTBRIDGE:DATEPRINT?</code> might return <code>PICTBRIDGE:DATEPRINT DEFLT</code> indicating the default setting of the printer.</p>

PICTBridge:DEfault (No Query Form)

Sets the arguments for all PictBridge commands to their default values. The default values are same as printer default settings.

Group	PictBridge
Syntax	<code>PICTBridge:DEfault</code>
Examples	<code>PICTBRIDGE:DEFAULT</code> sets all PICTBridge commands to their default values.

PICTBridge:IDPrint

Enables or disables printing the oscilloscope model and serial number on the print output.

Group	PictBridge
Syntax	<code>PICTBridge:IDPrint {DEFLT OFF ON}</code>
Related Commands	
Arguments	<p>DEFLT is the default setting of the printer.</p> <p>ON enables the oscilloscope model and serial number print on the print output.</p> <p>OFF disables the oscilloscope model and serial number print on the print output.</p>

Examples `PICTBRIDGE:IDPRINT ON` enables the printing of oscilloscope model and serial number on the print output.

`PICTBRIDGE:IDPRINT?` might return `PICTBRIDGE:IDPRINT OFF` indicating that the ID print is disabled on the print output.

PICTBridge:IMAGESize

Sets or returns the image print size.

Group PictBridge

Syntax `PICTBridge:IMAGESize`
`{DEFLT|IN2P5BY3P25|L|IN4BY6|L2|IN8BY10|L4|E|CARD|HAGAKIPcard|CM6BY8|CM7BY10|CM9BY13|CM10BY15|CM13BY18|CM15BY21|CM18BY24|A4|LETTER}`

Arguments `DEFLT` for a default image print size.

`IN2P5BY3P25` for a 2_5*3_25 image print size.

`L` for a 3_5*5 image print size.

`IN4BY6` for a 4*6 image print size.

`L2` for a 5*7 image print size.

`IN8BY10` for a 8*10 image print size.

`L4` for a 254 MM*178 MM image print size.

`E` for a 110 MM*74 MM image print size.

`CARD` for a 89 MM*55 MM image print size.

`HAGAKIPcard` for a 100 MM*148 MM image print size.

`CM6BY8` for a 6 CM*8 CM image print size.

`CM7BY10` for a 7 CM*10 CM image print size.

`CM9BY13` for a 9 CM*13 CM image print size.

`CM10BY15` for a 10 CM*15 CM image print size.

`CM13BY18` or a 13 CM*18 CM image print size.

`CM15BY21` for a 15 CM*21 CM image print size.

`CM18BY24` for a 18 CM*24 CM image print size.

`A4` for a A4 image print size.

`LETTER` for a Letter image print size.

Examples `PICTBRIDGE:IMAGESIZE CARD` sets the image print size to 89 MM* 55 MM.

`PICTBRIDGE:IMAGESIZE?` might return `PICTBRIDGE:IMAGESIZE DEFLT` indicating the default image print size.

PICTBridge:PAPERSize

Sets the output print paper size.

Group PictBridge

Syntax `PICTBridge:PAPERSize`
`DEFLT|L|L2|HAGAKIPCARD|MM54BY86|MM100BY150|IN4BY6|IN8BY10|LETTER|IN11BY17|A0|A1|A2|A3|A4|A5|A6|A7|A8|B4|B5|B6|B7|B8|B9|ROLL89MM|ROLL127MM|ROLL100MM|ROLL210MM}`

Arguments `DEFLT` for a default paper size.

`L` for a paper size L

`L2` for a paper size 2L.

`HAGAKIPCARD` for a paper size Hagaki.

`MM54BY86` for a card paper size.

`MM100BY150` for paper size of 100*150 MM.

`IN4BY6` for a paper size of 4*6.

`IN8BY10` for a paper size of 8*10.

`LETTER` for a letter paper size.

`IN11BY17` for a paper size of 11*17.

`A0` for a A0 paper size.

`A1` for a A1 paper size.

`A2` for a A2 paper size.

`A3` for a A3 paper size.

`A4` for a A4 paper size.

`A5` for a A5 paper size.

`A6` for a A6 paper size.

`A7` for a A7 paper size.

`A8` for a A8 paper size..

A9 for a A9 paper size.
 B0 for a B0 paper size.
 B1 for a B1 paper size.
 B2 for a B2 paper size.
 B3 for a B3 paper size.
 B4 for a B4 paper size.
 B5 for a B5 paper size.
 B6 for a B6 paper size.
 B7 for a B7 paper size.
 B8 for a B8 paper size.
 B9 for a B9 paper size.
 ROLL89MM for a 89 MM Roll paper size.
 ROLL127MM for a 127 MM Roll paper size.
 ROLL100MM for a 100 MM Roll paper size.
 ROLL210MM for a 210 MM Roll paper size.

Examples `PICTBRIDGE:PAPERSIZEL` sets the paper size to L.
 `PICTBRIDGE:PAPERSIZE?` might return `PICTBRIDGE:PAPERSIZE DEFLT`
 indicating the paper size is set to Default.

PICTBridge:PAPERType

Sets or returns the paper type.

Group PictBridge

Syntax `PICTBridge:PAPERType {DEFLT|PLAIN|PHOTO|FASTPHOTO}`

Arguments `DEFLT` for a default print paper type.
 `PLAIN` for a plain print paper type.
 `PHOTO` for a photo print paper type.
 `FASTPHOTO` for a fastphoto print paper type.

Examples `PICTBRIDGE:PAPERTYPE PLAIN` sets the paper type to Plain.

`PICTBRIDGE:PAPERTYPE?` might return `PICTBRIDGE:PAPERTYPE DEFLT` indicating the default paper type.

PICTBridge:PRINTQual

Sets or returns the output print quality.

Group PictBridge

Syntax `PICTBridge:PRINTQual {DEFLT|NRMAL|FINE|DRAFT}`

Arguments `DEFLT` for the default quality print.

`NRMAL` for a normal quality print.

`FINE` for a fine quality print.

`DRAFT` for a draft quality print.

Examples `PICTBRIDGE:PRINTQUAL FINE` sets the print quality to Fine.

`PICTBRIDGE:PRINTQUAL?` might return `PICTBRIDGE:PRINTQUAL DEFLT` indicating the default quality print.

POWer:CURRENTSource

Sets or returns the current source for the power application.

Conditions This command requires a DPO4PWR application module.

Group Power

Syntax `Power:CURRENTSource {CH1|CH2|CH3|CH4|REF1|REF2|REF3|REF4}`
`Power:CURRENTSource?`

Arguments `CH1–CH4` sets an analog channel as the current source.

`REF1–REF4` sets a reference as the current source.

Examples `POWER:CURRENTSOURCE CH1` sets the current source as CH1.

`POWER:CURRENTSOURCE?` might return `POWER:CURRENTSOURCE CH2` indicating that CH2 is the current source.

POWer:DISplay

Sets or returns the display state for the power application. This is the equivalent to pressing the **Test** button and then selecting the power application. The same control is provided for each application.

Conditions This command requires a DPO4PWR application module.

Group Power

Syntax `Power:DISplay {OFF|ON|0|1}`
`Power:DISplay?`

Arguments OFF or 0 turns off the display settings.
ON or 1 turns on the display settings.

Examples `POWER:DISPLAY 1` turns on the display.

`POWER:DISPLAY?` might return `:POWER:DISPLAY 0` indicating that the display is off.

POWer:GATESource

Sets or returns the gate source for the power application.

Conditions This command requires a DPO4PWR application module.

Group Power

Syntax `Power:GATESource {CH1|CH2|CH3|CH4|REF1|REF2|REF3|REF4|NONE}`
`Power:GATESource?`

Arguments CH1–CH4 sets an analog channel as the gate source.
REF1–REF4 sets a reference as the gate source.

NONE is set when the gate source is not used in the application.

Examples `POWER:GATESOURCE CH1` sets the gated source as CH1.

`POWER:GATESOURCE?` might return `POWER:GATESOURCE CH2` indicating that CH2 is the gated source.

POWer:GATing

Sets or returns the power application gating.

Conditions This command requires a DPO4PWR application module.

Group Power

Syntax `POWer:GATing {OFF|SCREen|CURSor}`
`POWer:GATing?`

Arguments OFF turns off measurement gating (full record).

SCREen turns on gating, using the left and right edges of the screen.

CURSor limits measurements to the portion of the waveform between the vertical bar cursors, even if they are off screen.

Examples `POWer:GATING CURSOR` sets cursor gating on the oscilloscope.

`POWer:GATING?` might return `POWer:GATING OFF` indicating that gating is turned off on the oscilloscope.

POWer:HARMonics:DISPlay:SElect

Sets or returns the harmonics to be displayed when the harmonics standard is NONE.

Conditions This command requires a DPO4PWR application module.

Group Power

Syntax `POWer:HARMonics:DISPlay:SElect {ODD|EVEN|ALL}`
`POWer:HARMonics:DISPlay:SElect?`

Arguments	<p>ODD to display only odd harmonics.</p> <p>EVEN to display only even harmonics.</p> <p>ALL to display both odd and even harmonics.</p>
Examples	<p>POWER:HARMONICS:DISPLAY:SELECT EVEN displays only even harmonics.</p> <p>POWER:HARMONICS:DISPLAY:SELECT? might return :POWER:HARMONICS:DISPLAY:SELECT ALL indicating that both odd and even harmonics are displayed.</p>

POWer:HARMonics:DISPlay:TYPe

Sets or returns the display type for harmonics tests.

Conditions	This command requires a DPO4PWR application module.
Group	Power
Syntax	<p>POWER:HARMonics:DISP lay:TYPe {GRAPh TAB le}</p> <p>POWER:HARMonics:DISP lay:TYPe?</p>
Arguments	<p>GRAPh displays harmonic tests results in graphical format.</p> <p>TAB le displays harmonic tests results in tabular format.</p>
Examples	<p>POWER:HARMONICS:DISPLAY:TYPE GRAPh sets the display type to graphical.</p> <p>POWER:HARMONICS:DISPLAY:TYPE? might return :POWER:HARMONICS:DISPLAY:TYPE TAB indicating that the display type is set to tabular.</p>

POWer:HARMonics:FREQRef

Sets or returns the frequency reference used when the harmonic standard is None.

Conditions	This command requires a DPO4PWR application module.
Group	Power

Syntax	Power:HARMonics:FREQRef {VOLTage CURRent HARMSOURce FIXEDFREQUENCY} Power:HARMonics:FREQRef?
Arguments	VOLTage to use a voltage waveform as the frequency reference. CURRent to use a current waveform as the frequency reference. HARMSOURce to use a harmonic source waveform as the frequency reference. FIXEDFREQUENCY to use a fixed frequency value instead of a waveform for the frequency reference.
Examples	POWER:HARMONICS:FREQREF VOLTage sets voltage source as the frequency reference. POWER:HARMONICS:FREQREF? might return :POWER:HARMONICS:FREQREF FIXEDFREQ indicating that the frequency reference is a fixed value.

POWer:HARMonics:FREQRef:FIXEDFREQValue

Sets or returns the frequency value when the :FREQRef selection is **FIXEDFREQUENCY**.

Conditions	This command requires a DPO4PWR application module.
Group	Power
Syntax	Power:HARMonics:FREQRef:FIXEDFREQValue <NR3> Power:HARMonics:FREQRef:FIXEDFREQValue?
Arguments	<NR3> is the fixed frequency value.
Examples	POWER:HARMONICS:FREQREF:FIXEDFREQVALUE 100 sets the frequency to 100 Hz. POWER:HARMONICS:FREQREF:FIXEDFREQVALUE? might return :POWER:HARMonics:FREQREF:FIXEDFREQVALUE 60 indicating that the fixed frequency value is set to 60 Hz.

POWer:HARMonics:IEC:CLass

Sets or returns the equipment class for IEC harmonics.

Conditions	This command requires a DPO4PWR application module.
Group	Power
Syntax	<code>Power:HARMonics:IEC:CLASS {A B C1 C2 C3 D}</code> <code>Power:HARMonics:IEC:CLASS?</code>
Arguments	<p>A specifies Class A Equipment.</p> <p>B specifies Class B Equipment.</p> <p>C1 specifies Class C Equipment that use Table 1 limits of the IEC standard.</p> <p>C2 specifies Class C Equipment that use Table 2 limits of the IEC standard.</p> <p>C3 specifies Class C Equipment that use Table 3 limits of the IEC standard.</p> <p>D specifies Class D Equipment.</p>
Examples	<p><code>POWER:HARMONICS:IEC:CLASSB</code> sets Equipment Class B for IEC harmonics.</p> <p><code>POWER:HARMONICS:IEC:CLASS?</code> might return :<code>POWER:HARMONICS:IEC:CLASS A</code> indicating that the Equipment Class is A for IEC harmonics.</p>

POWER:HARMonics:IEC:FILTER

Sets or returns the enabled state for filtering of IEC harmonics.

Conditions	This command requires a DPO4PWR application module.
Group	Power
Syntax	<code>Power:HARMonics:IEC:FILTer {OFF ON 0 1}</code> <code>Power:HARMonics:IEC:FILTer?</code>
Arguments	<p>ON or 1 enables filtering of IEC harmonics.</p> <p>OFF or 0 disables filtering of IEC harmonics.</p>

Examples `POWER:HARMONICS:IEC:FILTER OFF` disables filtering of IEC harmonics.

`POWER:HARMONICS:IEC:FILTER?` might return
: `POWER:HARMONICS:IEC:FILTER 1` indicating that the IEC harmonics are filtered.

POWer:HARMonics:IEC:FUNDamental

Sets or returns the rated fundamental current for IEC harmonics. Valid values ranges from 0 to 16 in increments of 0.1. The unit is ampere.

Conditions This command requires a DPO4PWR application module.

Group Power

Syntax `Power:HARMonics:IEC:FUNDamental <NR3>`
`Power:HARMonics:IEC:FUNDamental?`

Arguments `<NR3>` is the fundamental current in amperes.

Examples `POWER:HARMONICS:IEC:FUNDAMENTAL 1` sets the fundamental current to 1.0000 A.

`POWER:HARMONICS:IEC:FUNDAMENTAL?` might return
: `POWER:HARMONICS:IEC:FUNDAMENTAL 16` indicating that the fundamental current for IEC harmonics is set to 16.0000 A.

POWer:HARMonics:IEC:GROUPing

Sets or returns the enabled state for grouping of IEC harmonics.

Conditions This command requires a DPO4PWR application module.

Group Power

Syntax `Power:HARMonics:IEC:GROUPing {OFF|ON|1|0}`
`Power:HARMonics:IEC:GROUPing?`

Arguments	ON or 1 enables grouping of IEC harmonics. OFF or 0 disables grouping of IEC harmonics.
Examples	POWER:HARMONICS:IEC:GROUPING OFF disables grouping of IEC harmonics. POWER:HARMONICS:IEC:GROUPING? might return :POWER:HARMONICS:IEC:GROUPING 1 indicating that the grouping is enabled for IEC harmonics.

POWER:HARMonics:IEC:INPUTPOWER

Sets or returns the class D rated input power for IEC harmonics.

Conditions	This command requires a DPO4PWR application module.
Group	Power
Syntax	Power:HARMonics:IEC:INPUTPOWER <NR3> Power:HARMonics:IEC:INPUTPOWER?
Arguments	<NR3> is the class D input power. Valid values ranges from 0 to 600 in increments of 10. The unit of measure is watt.
Examples	POWER:HARMONICS:IEC:INPUTPOWER 600 sets the class D input power to 600 W. POWER:HARMONICS:IEC:INPUTPOWER? might return :POWER:HARMONICS:IEC:INPUTPOWER 100 indicating that the class D input power is set to 100 W.

POWER:HARMonics:IEC:LINEFREQuency

Sets or returns the line frequency for the IEC standard.

Conditions	This command requires a DPO4PWR application module.
Group	Power

Syntax	<code>Power:HARMonics:IEC:LINEFREQUENCY <NR3></code> <code>Power:HARMonics:IEC:LINEFREQUENCY?</code>
Arguments	<NR3> is the line frequency. The valid values are 50 and 60.
Examples	<code>POWER:HARMONICS:IEC:LINEFREQUENCY 50</code> sets the line frequency to 50 Hz. <code>POWER:HARMONICS:IEC:LINEFREQUENCY?</code> might return <code>:POWER:HARMONICS:IEC:LINEFREQUENCY 60</code> indicating that the line frequency value is set to 60 Hz.

POWer:HARMonics:IEC:OBSPERiod

Sets or returns the IEC observation period.

Conditions	This command requires a DPO4PWR application module.
Group	Power
Syntax	<code>Power:HARMonics:IEC:OBSPERiod <NR3></code> <code>Power:HARMonics:IEC:OBSPERiod?</code>
Arguments	<NR3> is the IEC observation period. Valid values ranges from 0.2 to 10 s.
Examples	<code>POWER:HARMONICS:IEC:OBSPERIOD 3</code> sets the IEC observation period to 3.0000 s. <code>POWER:HARMONICS:IEC:OBSPERIOD?</code> might return <code>:POWER:HARMONICS:IEC:OBSPERIOD 10</code> indicating that the IEC observation period is set to 10 s.

POWer:HARMonics:IEC:POWERFActor

Sets or returns the rated power factor for IEC harmonics.

Conditions	This command requires a DPO4PWR application module.
Group	Power

Syntax	<code>Power:HARMonics:IEC:POWERFACTOR <NR3></code> <code>Power:HARMonics:IEC:POWERFACTOR?</code>
Arguments	<NR3> is the power factor. Valid values ranges from 0 to 1 in increments of 0.1.
Examples	<code>POWER:HARMONICS:IEC:POWERFACTOR 1</code> sets the power factor to 1.0000. <code>POWER:HARMONICS:IEC:POWERFACTOR?</code> might return <code>:POWER:HARMONICS:IEC:POWERFACTOR 900.0000E-03</code> indicating that the power factor is set to 0.9.

POWer:HARMonics:MIL:FUNDamental:CALCmethod

Sets or returns the measurement method for the MIL harmonics fundamental current for use in calculating limits.

Conditions	This command requires a DPO4PWR application module.
Group	Power
Syntax	<code>Power:HARMonics:MIL:FUNDamental:CALCmethod {MEAS USER}</code> <code>Power:HARMonics:MIL:FUNDamental:CALCmethod?</code>
Arguments	MEAS specifies that the value of the fundamental current used in calculating limits is measured. USER specifies that the value of the fundamental current used in calculated limits is user defined.
Examples	<code>POWER:HARMONICS:MIL:FUNDAMENTAL:CALCMETHOD USER</code> sets the measurement method to User. <code>POWER:HARMONICS:MIL:FUNDAMENTAL:CALCMETHOD?</code> might return <code>:POWER:HARMONICS:MIL:FUNDAMENTAL:CALCMETHOD MEAS</code> indicating that the measurement method is set to Meas.

POWer:HARMonics:MIL:FUNDamental:USER:CURRent

Sets or returns RMS amperes for USER CALCmethod.

Conditions	This command requires a DPO4PWR application module.
-------------------	---

Group	Power
Syntax	<pre>POWER:HARMONICS:MIL:FUNDAMENTAL:USER:CURRENT <NR3> POWER:HARMONICS:MIL:FUNDAMENTAL:USER:CURRENT?</pre>
Arguments	<NR3> is the current in amperes for USER CALCmethod.
Examples	<p>POWER:HARMONICS:MIL:FUNDAMENTAL:USER:CURRENT 2 sets the RMS fundamental current to 2 A in calculating limits.</p> <p>POWER:HARMONICS:MIL:FUNDAMENTAL:USER:CURRENT? might return :POWER:HARMONICS:MIL:FUNDAMENTAL:USER:CURRENT 1.0000 indicating that the RMS fundamental current for use in calculating limits is 1.0000 A.</p>

POWER:HARMONICS:MIL:LINEFREQUENCY

Sets or returns the line frequency for MIL-STD-1399 harmonics tests. Valid values are 60 or 400 Hz.

Conditions	This command requires a DPO4PWR application module.
Group	Power
Syntax	<pre>POWER:HARMONICS:MIL:LINEFREQUENCY <NR3> POWER:HARMONICS:MIL:LINEFREQUENCY?</pre>
Arguments	<NR3> is the line frequency for MIL standard.
Examples	<p>POWER:HARMONICS:MIL:LINEFREQUENCY 60 sets the MIL line frequency to 60 Hz.</p> <p>POWER:HARMONICS:MIL:LINEFREQUENCY? might return :POWER:HARMONICS:MIL:LINEFREQUENCY 400 indicating that the MIL line frequency is set to 400 Hz.</p>

POWER:HARMONICS:MIL:POWERLEVEL

Sets or returns the power level for calculating limits for MIL-STD-1399 harmonics tests.

Conditions	This command requires a DPO4PWR application module.
Group	Power
Syntax	<pre>Power:HARMonics:MIL:POWERLEVEL {LOW HIGH} Power:HARMonics:MIL:POWERLEVEL?</pre>
Arguments	<p>LOW specifies low power level for MIL-STD-1399 harmonics tests.</p> <p>HIGH specifies high power level for MIL-STD-1399 harmonics tests.</p>
Examples	<p>POWER:HARMONICS:MIL:POWERLEVEL HIGH sets the MIL power level to High.</p> <p>POWER:HARMONICS:MIL:POWERLEVEL? might return :POWER:HARMONICS:MIL:POWERLEVEL LOW indicating that the MIL power level is set to Low.</p>

POWer:HARMonics:NR_HARMonics

Sets or returns the number of harmonics (value ranging from 20 to 400) when the harmonics standard is NONE.

Conditions	This command requires a DPO4PWR application module.
Group	Power
Syntax	<pre>Power:HARMonics:NR_HARMonics <NR3> Power:HARMonics:NR_HARMonics?</pre>
Arguments	<NR3> is the number of harmonics.
Examples	<p>POWER:HARMONICS:NR_HARMONICS 100 sets the number of harmonics to 100.</p> <p>POWER:HARMONICS:NR_HARMONICS? might return :POWER:HARMonics:NR_HARMONICS 40 indicating that the number of harmonics is set to 40.</p>

POWer:HARMonics:RESults:HAR<1-400>:FREQuency? (Query Only)

Returns the frequency of the harmonic.

NOTE. The command returns NA, if the current harmonic standard is set to a new standard other than the returned query.

Conditions This command requires a DPO4PWR application module.

Group Power

Syntax `Power:HARMonics:RESuLts:HAR<1-400>:FREQUENCY?`

Examples `POWER:HARMONICS:RESULTS:HAR400:FREQUENCY?` might return
:`POWER:HARMONICS:RESULTS:HAR400:FREQUENCY 24000` indicating that the harmonic frequency is set to 24000.

POWer:HARMonics:RESuLts:HAR<1-400>:IECMAX? (Query Only)

The IEC Standard specifies harmonics measurements to be computed in time windows, with each time window being nominally 200 ms. This returns the maximum of the RMS magnitude of the harmonic, computed across successive 200 ms time windows within an observation period entered by the user.

NOTE. The command returns NA, if the current harmonic standard is set to a new standard other than the returned query.

Conditions This command requires a DPO4PWR application module.

Group Power

Syntax `Power:HARMonics:RESuLts:HAR<1-400>:IECMAX?`

Examples `POWER:HARMONICS:RESULTS:HAR400:IECMAX?` might return
:`POWER:HARMONICS:RESULTS:HAR400:IECMAX 1.0` indicating that the maximum value is 1.0 A for the 400th harmonic.

POWer:HARMonics:RESuLts:HAR<1-400>:LIMit? (Query Only)

The IEC and MIL standards specify a limit for each harmonic magnitude. Returns the limit in absolute units, or as a percentage of the fundamental as specified by

the standard. IEC Class C (Table 2) and MIL standards specify the limit as a percentage of the fundamental.

Conditions This command requires a DPO4PWR application module.

Group Power

Syntax `POWER:HARMONICS:RESULTS:HAR<1-400>:LIMIT?`

Examples `POWER:HARMONICS:RESULTS:HAR3:LIMIT?` might return `:POWER:HARMONICS:RESULTS:HAR3:LIMIT 2.30` indicating that the harmonic magnitude limit for IEC standard for the 3rd harmonic is set to 2.30 A.

POWER:HARMONICS:RESULTS:HAR<1-400>:PHASE? (Query Only)

Returns the phase of the harmonic in degrees. The phase is measured relative to the zero-crossing of the reference waveform. When there is no reference waveform, the phase is relative to the fundamental component.

Conditions This command requires a DPO4PWR application module.

Group Power

Syntax `POWER:HARMONICS:RESULTS:HAR<1-400>:PHASE?`

Examples `POWER:HARMONICS:RESULTS:HAR400:PHASE?` might return `:POWER:HARMONICS:RESULTS:HAR400:PHASE 0` indicating that the harmonic phase is set to 0 in degrees.

POWER:HARMONICS:RESULTS:HAR<1-400>:RMS:ABSOLUTE? (Query Only)

Returns the RMS magnitude of the harmonic in absolute units.

Conditions This command requires a DPO4PWR application module.

Group Power

Syntax `Power:HARMONics:RESuLts:HAR<1-400>:RMS:ABSolute?`

Examples `POWER:HARMONICS:RESULTS:HAR400:RMS:ABSOLUTE?` might return
:POWER:HARMONICS:RESULTS:HAR400:RMS:ABSOLUTE 1.0 indicating that
the RMS magnitude of the harmonic is set to 1.0 A.

POWer:HARMONics:RESuLts:HAR<1-400>:RMS:PERCent? (Query Only)

Returns the RMS magnitude of the harmonic expressed as a percentage of the fundamental.

Conditions This command requires a DPO4PWR application module.

Group Power

Syntax `Power:HARMONics:RESuLts:HAR<1-400>:RMS:PERCent?`

Examples `POWER:HARMONICS:RESULTS:HAR400:RMS:PERCENT?` might return
:POWER:HARMONICS:RESULTS:HAR400:RMS:PERCENT 33 indicating that the
RMS magnitude of the harmonic is set to 33%.

POWer:HARMONics:RESuLts:HAR<1-400>:TEST:IEC:CLASSALIMit? (Query Only)

Specifies if the IEC Class A higher harmonic limit (and conditions) are met.

NOTE. *The command returns NA if the standard does not specify a limit or the equipment is not class A.*

Conditions This command requires a DPO4PWR application module.

Group Power

Syntax `Power:HARMONics:RESuLts:HAR<1-400>:TEST:IEC:CLASSALIMit?`

Returns PASS, FAIL, or NA.

POWer:HARMonics:RESuLts:HAR<1-400>:TEST:IEC:NORMAL? (Query Only)

Specifies if the Normal IEC harmonic limits are met.

NOTE. *The command returns NA if the standard does not specify a limit.*

Conditions	This command requires a DPO4PWR application module.
Group	Power
Syntax	POWer:HARMonics:RESuLts:HAR<1-400>:TEST:IEC:NORMAL?
Returns	PASS, FAIL, or NA.

POWer:HARMonics:RESuLts:HAR<1-400>:TEST:IEC:POHCLIMit? (Query Only)

Specifies if the higher harmonic limit (and conditions) for the 21st and higher order odd harmonics are met.

NOTE. *The command returns NA if the limit does not apply for a specific harmonic.*

Conditions	This command requires a DPO4PWR application module.
Group	Power
Syntax	POWer:HARMonics:RESuLts:HAR<1-400>:TEST:IEC:POHCLIMit?
Returns	PASS, FAIL, or NA.

POWer:HARMonics:RESuLts:HAR<1-400>:TEST:MIL:NORMAL? (Query Only)

Returns the test result for the specified harmonic for the MIL-STD-1399 testing standard.

This query is analogous to that for the IEC 61000-3-2 standard
[POWer:HARMonics:RESuLts:HAR<1-400>:TEST:IEC:NORMAL?](#) command.

NOTE. *The command returns NA if the standard does not specify a limit for the specific harmonic.*

Conditions	This command requires a DPO4PWR application module.
Group	Power
Syntax	POWER:HARMONICS:RESULTS:HAR<1-400>:TEST:MIL:NORMAL?
Returns	PASS, FAIL, or NA.

POWER:HARMONICS:RESULTS:IEC:FUNDamental? (Query Only)

Returns the IEC fundamental current used in calculating limits.

Conditions	This command requires a DPO4PWR application module.
Group	Power
Syntax	POWER:HARMONICS:RESULTS:IEC:FUNDamental?
Examples	POWER:HARMONICS:RESULTS:IEC:FUNDAMENTAL? might return :POWER:HARMONICS:RESULTS:IEC:FUNDAMENTAL 1.0 indicating that the IEC fundamental frequency is set to 1.0 A.

POWER:HARMONICS:RESULTS:IEC:HARM3ALternate? (Query Only)

Returns the IEC harmonics test result for the 3rd harmonic.

NOTE. *The command returns NA if the limit does not apply.*

Conditions	This command requires a DPO4PWR application module.
Group	Power
Syntax	POWER:HARMONICS:RESULTS:IEC:HARM3ALternate?

Returns PASS, FAIL, or NA.

Examples POWER:HARMONICS:RESULTS:IEC:HARM3ALTERNATE? might return
POWER:HARMONICS:RESULTS:IEC:HARM3ALTERNATE PASS indicating the
test result.

POWer:HARMonics:RESuLts:IEC:HARM5ALTernate? (Query Only)

Returns the overall harmonics test result for the 5th harmonic.

NOTE. *The command returns NA the harmonic limit does not apply.*

Conditions This command requires a DPO4PWR application module.

Group Power

Syntax POWER:HARMONICS:RESULTS:IEC:HARM5ALTERNATE?

Returns PASS, FAIL, or NA.

Examples POWER:HARMONICS:RESULTS:IEC:HARM5ALTERNATE? might return
POWER:HARMONICS:RESULTS:IEC:HARM5ALTERNATE PASS indicating the
test result.

POWer:HARMonics:RESuLts:IEC:POHC? (Query Only)

Returns the IEC POHC measurement.

Conditions This command requires a DPO4PWR application module.

Group Power

Syntax POWER:HARMONICS:RESULTS:IEC:POHC?

Examples POWER:HARMONICS:RESULTS:IEC:POHC? might return
:POWER:HARMONICS:RESULTS:IEC:POHC 0.5 indicating that the
IEC POHC is set to 0.5 A.

POWer:HARMonics:RESuLts:IEC:POHL? (Query Only)

Returns the IEC POHL measurement.

Conditions This command requires a DPO4PWR application module.

Group Power

Syntax `POWer:HARMonics:RESuLts:IEC:POHL?`

Examples `POWer:HARMonics:RESuLts:IEC:POHL?` might return
`:POWer:HARMonics:RESuLts:IEC:POHL 0.5` indicating that the
IEC POHL is set to 0.5 A.

POWer:HARMonics:RESuLts:IEC:POWer? (Query Only)

Returns the IEC input power that is used to calculate limits.

Conditions This command requires a DPO4PWR application module.

Group Power

Syntax `POWer:HARMonics:RESuLts:IEC:POWer?`

Examples `POWer:HARMonics:RESuLts:IEC:POWer?` might return
`:POWer:HARMonics:RESuLts:IEC:POWer 5` indicating that the
IEC power is set to 5 W.

POWer:HARMonics:RESuLts:IEC:POWerFactor? (Query Only)

Returns the IEC power factor measurement.

Conditions This command requires a DPO4PWR application module.

Group Power

Syntax `POWer:HARMonics:RESuLts:IEC:POWerFactor?`

Examples `POWER:HARMONICS:RESULTS:IEC:POWERFACTOR?` might return
 `:POWER:HARMONICS:RESULTS:IEC:POWERFACTOR 9.1900E+37` indicating
 that the IEC power factor is set to 9.1900E+37.

POWer:HARMonics:RESuLts:PASSFail? (Query Only)

Returns the overall harmonics test result: PASS, FAIL or NA.

Conditions This command requires a DPO4PWR application module.

Group Power

Syntax `POWer:HARMonics:RESuLts:PASSFail?`

Examples `POWER:HARMONICS:RESULTS:PASSFAIL?` might return
 `:POWER:HARMONICS:RESULTS:PASSFAIL PASS` indicating that the
 harmonics test passed.

POWer:HARMonics:RESuLts:RMS? (Query Only)

Returns the root mean square value of the harmonics source waveform.

Conditions This command requires a DPO4PWR application module.

Group Power

Syntax `POWer:HARMonics:RESuLts:RMS?`

Examples `POWER:HARMONICS:RESULTS:RMS?` might return
 `:POWER:HARMONICS:RESULTS:RMS 1.0` indicating that the harmonics source
 waveform RMS is set to 1.0.

POWer:HARMonics:RESuLts:SAVe (No Query Form)

Saves the harmonic results to the specified file in CSV format.

Conditions This command requires a DPO4PWR application module.

Group Power

Syntax `Power:HARMONICS:RESULTS:SAVE <String>`

POWer:HARMONICS:RESuLts:THDF? (Query Only)

Returns the Total Harmonic Distortion (THD) in percentage, measured as a ratio to the RMS value of the fundamental component of the source waveform.

Conditions This command requires a DPO4PWR application module.

Group Power

Syntax `Power:HARMONICS:RESULTS:THDF?`

Examples `POWER:HARMONICS:RESULTS:THDF?` might return
`:POWER:HARMONICS:RESULTS:THDF 40` indicating that the THDF is set to 40.

POWer:HARMONICS:RESuLts:THDR? (Query Only)

Returns the Total Harmonic Distortion (THD) in percentage, measured as a ratio to the RMS value of the source waveform.

Conditions This command requires a DPO4PWR application module.

Group Power

Syntax `Power:HARMONICS:RESULTS:THDR?`

Examples `POWER:HARMONICS:RESULTS:THDR?` might return
`:POWER:HARMONICS:RESULTS:THDR 40` indicating that the THDR is set to 40.

POWer:HARMONICS:SOURce

Sets or returns the source waveform for harmonics tests. The voltage source waveform is specified using the [POWer:VOLTAGESource](#) command and the current waveform is specified using the [POWer:CURRENTSource](#) command.

Conditions	This command requires a DPO4PWR application module.
Group	Power
Syntax	<pre>Power:HARMonics:SOURce {VOLTage CURRent} Power:HARMonics:SOURce?</pre>
Arguments	<p>VOLTage specifies voltage source waveform for harmonic tests.</p> <p>CURRent specifies current source waveform for harmonic tests.</p>
Examples	<p>POWER:HARMONICS:SOURCE VOLTage sets voltage source for harmonic tests.</p> <p>POWER:HARMONICS:SOURCE? might return :POWER:HARMonics:SOURCE CURRENT indicating that the harmonic source is set to current.</p>

POWER:HARMonics:STANDARD

Sets or returns the standard for harmonics tests.

Conditions	This command requires a DPO4PWR application module.
Group	Power
Syntax	<pre>Power:HARMonics:STANDARD {NONE IEC MIL} Power:HARMonics:STANDARD?</pre>
Arguments	<p>NONE sets no standard for harmonic tests.</p> <p>IEC sets IEC 610003-2 standard for harmonic tests.</p> <p>MIL sets MIL1399 standard for harmonic tests.</p>
Examples	<p>POWER:HARMONICS:STANDARD IEC sets IEC standard for harmonic tests.</p> <p>POWER:HARMONICS:STANDARD? might return :POWER:HARMonics:STANDARD NONE indicating that no standard is set.</p>

POWER:INDICators

Sets or returns the state of the measurement indicators for the power application.

Conditions	This command requires a DPO4PWR application module.
Group	Power
Syntax	<code>Power:INDICators {OFF ON 0 1}</code> <code>Power:INDICators?</code>
Arguments	OFF or 0 turns off the measurement indicators. ON or 1 turns on the measurement indicators.
Examples	<code>POWER:INDICATORS 1</code> turns on the indicator. <code>POWER:INDICATORS?</code> might return <code>:POWER:INDICators 0</code> indicating that the indicator is off.

POWer:MODulation:SOUrce

Sets or returns the source waveform for modulation tests. The voltage source waveform is specified using the [POWer:VOLTAGESource](#) command and the current waveform is specified using the [POWer:CURRENTSource](#) command.

Conditions	This command requires a DPO4PWR application module.
Group	Power
Syntax	<code>Power:MODulation:SOUrce {VOLTage CURRENT}</code> <code>Power:MODulation:SOUrce?</code>
Arguments	VOLTage specifies voltage source waveform for modulation tests. CURRENT specifies current source waveform for modulation tests.
Examples	<code>POWER:MODULATION:SOURCE CURRENT</code> sets the modulation source to Current. <code>POWER:MODULATION:SOURCE?</code> might return <code>:POWER:MODULATION:SOURCE VOLT</code> indicating that the modulation source is set to Voltage.

POWer:MODulation:TYPe

Sets or returns the modulation type.

Conditions This command requires a DPO4PWR application module.

Group Power

Syntax `POWer:MODulation:TYPe`
`{PWidth|NWidth|PERiod|PDuty|NDuty|FREQUENCY}`
`POWer:MODulation:TYPe?`

Arguments **PWidth** (positive width) is the distance (time) between the middle reference (default = 50%) amplitude points of a positive pulse. The measurement is made on all the cycles in the waveform or gated region.

NWidth (negative width) measurement is the distance (time) between the middle reference (default = 50%) amplitude points of a negative pulse. The measurement is made on all the cycles in the waveform or gated region.

PERiod is the time required to complete the first cycle in a waveform or the gated region. The time is measured between the mid reference (default being 50%) amplitude points of the waveform.

PDuty (positive duty cycle) is the ratio of the positive pulse width to the signal period, expressed as a percentage. It is measured on all the cycles in the waveform or gated region.

$$\text{Positive Duty Cycle} = ((\text{Positive Width}) / \text{Period}) \times 100\%$$

NDuty (negative duty cycle) is the ratio of the negative pulse width to the signal period, expressed as a percentage. The duty cycle is measured on all the cycles in the waveform or gated region.

$$\text{Negative Duty Cycle} = ((\text{Negative Width}) / \text{Period}) \times 100\%$$

FREQUENCY measures all the cycles in the waveform or gated region. Frequency is the reciprocal of the period and is measured in hertz (Hz), where 1 Hz = 1 cycle per second.

$$\text{Frequency} = 1 / \text{Period}$$

Examples `POWer:MODULATION:TYPe NWIDTH` sets the modulation type to Negative Width.

`POWer:MODULATION:TYPe?` might return `:POWer:MODULATION:TYPe PWI` indicating that the modulation type is set to Positive Width.

POWer:QUALity:APPpwr? (Query Only)

Returns the apparent power measurement.

Conditions This command requires a DPO4PWR application module.

Group Power

Syntax `POWer:QUALity:APPpwr?`

Examples `POWer:QUALITY:APPPWR?` might return `:POWer:QUALITY:APPpwr 100` indicating that the apparent power value is set to 100 VA.

POWer:QUALity:DISplay:APPpwr

Sets or returns the display state for the apparent power readout.

Conditions This command requires a DPO4PWR application module.

Group Power

Syntax `POWer:QUALity:DISplay:APPpwr {OFF|ON|0|1}`
`POWer:QUALity:DISplay:APPpwr?`

Arguments OFF or 0 turns off the apparent power display.
ON or 1 turns on the apparent power display.

Examples `POWer:QUALITY:DISPLAY:APPPWR 1` turns on the apparent power display.
`POWer:QUALITY:DISPLAY:APPPWR?` might return `:POWer:QUALITY:DISPLAY:APPPWR 0` indicating that the apparent power display is off.

POWer:QUALity:DISplay:FREquency

Sets or returns the display state for the frequency readout.

Conditions This command requires a DPO4PWR application module.

Group	Power
Syntax	Power:QUALity:DISPlay:FREQuency {OFF ON 0 1} Power:QUALity:DISPlay:FREQuency?
Arguments	OFF or 0 turns off the frequency display. ON or 1 turns on the frequency display.
Examples	POWER:QUALITY:DISPLAY:FREQUENCY 1 turns on the frequency readout display. POWER:QUALITY:DISPLAY:FREQUENCY? might return :POWER:QUALITY:DISPLAY:FREQUENCY 0 indicating that the frequency readout display is off.

POWER:QUALity:DISPlay:ICRESTfactor

Sets or returns the display state for the current crest factor readout.

Conditions	This command requires a DPO4PWR application module.
Group	Power
Syntax	Power:QUALity:DISPlay:ICRESTfactor {OFF ON 0 1} Power:QUALity:DISPlay:ICRESTfactor?
Arguments	OFF or 0 turns off the current crest factor display. ON or 1 turns on the current crest factor display.
Examples	POWER:QUALITY:DISPLAY:ICRESTFACTOR 1 turns on the current crest factor display. POWER:QUALITY:DISPLAY:ICRESTFACTOR? might return :POWER:QUALITY:DISPLAY:ICRESTFACTOR 0 indicating that the current crest factor display is off.

POWER:QUALity:DISPlay:IRMS

Sets or returns the display state for the rms current readout.

Conditions	This command requires a DPO4PWR application module.
Group	Power
Syntax	<code>Power:QUALity:DISplay:IRMS {OFF ON 0 1}</code> <code>Power:QUALity:DISplay:IRMS?</code>
Arguments	OFF or 0 turns off the rms current display. ON or 1 turns on the rms current display.
Examples	<code>POWER:QUALITY:DISPLAY:IRMS 1</code> turns on the rms current display. <code>POWER:QUALITY:DISPLAY:IRMS?</code> might return <code>:POWER:QUALITY:DISPLAY:IRMS 0</code> indicating that the rms current display is off.

POWER:QUALity:DISplay:PHASEangle

Sets or returns the display state for the phase angle readout.

Conditions	This command requires a DPO4PWR application module.
Group	Power
Syntax	<code>Power:QUALity:DISplay:PHASEangle {OFF ON 0 1}</code> <code>Power:QUALity:DISplay:PHASEangle?</code>
Arguments	OFF or 0 turns off the phase angle display. ON or 1 turns on the phase angle display.
Examples	<code>POWER:QUALITY:DISPLAY:PHASEANGLE 1</code> turns on the phase angle display. <code>POWER:QUALITY:DISPLAY:PHASEANGLE?</code> might return <code>:POWER:QUALITY:DISPLAY:PHASEANGLE 0</code> indicating that the phase angle display is off.

POWER:QUALity:DISplay:POWERFACTOR

Sets or returns the display state for the power factor readout.

Conditions	This command requires a DPO4PWR application module.
Group	Power
Syntax	<code>Power:QUALity:DISPlay:POWERFACTOR {OFF ON 0 1}</code> <code>Power:QUALity:DISPlay:POWERFACTOR?</code>
Arguments	OFF or 0 turns off the power factor display. ON or 1 turns on the power factor display.
Examples	<code>POWER:QUALITY:DISPLAY:POWERFACTOR 1</code> turns on the power factor display. <code>POWER:QUALITY:DISPLAY:POWERFACTOR?</code> might return <code>:POWER:QUALITY:DISPLAY:POWERFACTOR 0</code> indicating that the power factor display is off.

POWER:QUALity:DISPlay:REACTpwr

Sets or returns the display state for the reactor power readout.

Conditions	This command requires a DPO4PWR application module.
Group	Power
Syntax	<code>Power:QUALity:DISPlay:REACTpwr {OFF ON 0 1}</code> <code>Power:QUALity:DISPlay:REACTpwr?</code>
Arguments	OFF or 0 turns off the reactor power display. ON or 1 turns on the reactor power display.
Examples	<code>POWER:QUALITY:DISPLAY:REACTPWR 1</code> turns on the reactor power display. <code>POWER:QUALITY:DISPLAY:REACTPWR?</code> might return <code>:POWER:QUALITY:DISPLAY:REACTPWR 0</code> indicating that the reactor power display is off.

POWER:QUALity:DISPlay:TRUEpwr

Sets or returns the display state for the true power readout.

Conditions	This command requires a DPO4PWR application module.
Group	Power
Syntax	<code>POWER:QUALity:DISplay:TRUEpwr {OFF ON 0 1}</code> <code>POWER:QUALity:DISplay:TRUEpwr?</code>
Arguments	OFF or 0 turns off the true power display. ON or 1 turns on the true power display.
Examples	<code>POWER:QUALITY:DISPLAY:TRUEPWR 1</code> turns on the true power display. <code>POWER:QUALITY:DISPLAY:TRUEPWR?</code> might return <code>:POWER:QUALITY:DISPLAY:TRUEPWR 0</code> indicating that the true power display is off.

POWER:QUALity:DISplay:VCRESTfactor

Sets or returns the display state for the voltage crest factor readout.

Conditions	This command requires a DPO4PWR application module.
Group	Power
Syntax	<code>POWER:QUALity:DISplay:VCRESTfactor {OFF ON 0 1}</code> <code>POWER:QUALity:DISplay:VCRESTfactor?</code>
Arguments	OFF or 0 turns off the voltage crest factor display. ON or 1 turns on the voltage crest factor display.
Examples	<code>POWER:QUALITY:DISPLAY:VCRESTFACTOR 1</code> turns on the voltage crest factor display. <code>POWER:QUALITY:DISPLAY:VCRESTFACTOR?</code> might return <code>:POWER:QUALITY:DISPLAY:VCRESTFACTOR 0</code> indicating that the voltage crest factor display is off.

POWer:QUALity:DISplay:VRMS

Sets or returns the display state for the rms voltage readout.

Conditions	This command requires a DPO4PWR application module.
Group	Power
Syntax	POWer:QUALity:DISplay:VRMS {OFF ON 0 1} POWer:QUALity:DISplay:VRMS?
Arguments	OFF or 0 turns off the rms voltage display. ON or 1 turns on the rms voltage display.
Examples	POWer:QUALITY:DISPLAY:VRMS0 turns off the rms voltage display. POWer:QUALITY:DISPLAY:VRMS? might return :POWer:QUALITY:DISPLAY:VRMS 1 indicating that the rms voltage display is on.

POWer:QUALity:FREQREference

Sets or returns the power quality frequency reference.

Conditions	This command requires a DPO4PWR application module.
Group	Power
Syntax	POWer:QUALity:FREQREference {VOLTage CURRent} POWer:QUALity:FREQREference?
Arguments	VOLTage sets voltage as the power quality frequency reference source. CURRent sets current as the power quality frequency reference source.
Examples	POWer:QUALITY:FREQREFERENCE CURRent sets current as the power quality frequency reference source.

POWER:QUALITY:FREQREFERENCE? might return
:POWER:QUALITY:FREQREFERENCE VOLTAGE indicating that the power quality
frequency reference source is set to Voltage.

POWer:QUALity:FREQuency? (Query Only)

Returns the frequency measurement.

Conditions This command requires a DPO4PWR application module.

Group Power

Syntax POWER:QUALity:FREQuency?

Examples POWER:QUALITY:FREQUENCY? might return :POWER:QUALITY:FREQUENCY
60 indicating that the frequency is set to 60 Hz.

POWer:QUALity:ICRESTfactor? (Query Only)

Returns the current crest factor measurement.

Conditions This command requires a DPO4PWR application module.

Group Power

Syntax POWER:QUALity:ICRESTfactor?

Examples POWER:QUALITY:ICRESTFACTOR? might return
:POWER:QUALITY:ICRESTfactor 1.4 indicating that the current crest factor
value is set to 1.4.

POWer:QUALity:IRMS? (Query Only)

Returns the RMS current measurement.

Conditions This command requires a DPO4PWR application module.

Group	Power
Syntax	POWER:QUALity:IRMS?
Examples	POWER:QUALITY:IRMS? might return :POWER:QUALITY:IRMS 1.00 indicating that the RMS current value is set to 1.00 A.

POWER:QUALity:PHASEangle? (Query Only)

Returns the phase angle measurement.

Conditions	This command requires a DPO4PWR application module.
Group	Power
Syntax	POWER:QUALity:PHASEangle?
Examples	POWER:QUALITY:PHASEANGLE? might return :POWER:QUALITY:PHASEANGLE 0 indicating that the phase angle is set to 0.

POWER:QUALity:POWERFACTOR? (Query Only)

Returns the power factor measurement.

Conditions	This command requires a DPO4PWR application module.
Group	Power
Syntax	POWER:QUALity:POWERFACTOR?
Examples	POWER:QUALITY:POWERFACTOR? might return :POWER:QUALITY:POWERFACTOR 1.0 indicating that the power factor is set to 1.0.

POWER:QUALity:REACTpwr? (Query Only)

Returns the reactive power measurement.

Conditions	This command requires a DPO4PWR application module.
Group	Power
Syntax	POWER:QUALITY:REACTpwr?
Examples	POWER:QUALITY:REACTPWR? might return :POWER:QUALITY:REACTpwr 100 indicating that the reactor power value is set to 100 VAR.

POWER:QUALITY:TRUEpwr? (Query Only)

Returns the true power measurement.

Conditions	This command requires a DPO4PWR application module.
Group	Power
Syntax	POWER:QUALITY:TRUEpwr?
Examples	POWER:QUALITY:TRUEPWR? might return :POWER:QUALITY:TRUEpwr 1000 w indicating that the true power value is set to 1000 W.

POWER:QUALITY:VRMS? (Query Only)

Returns the RMS voltage measurement.

Conditions	This command requires a DPO4PWR application module.
Group	Power
Syntax	POWER:QUALITY:VRMS?
Examples	POWER:QUALITY:VRMS? might return :POWER:QUALITY:VRMS 115 indicating that the rms voltage value is set to 115 V.

POWer:REFLevel:ABSolute (No Query Form)

Sets the reference levels to their default unit values.

Conditions	This command requires a DPO4PWR application module.
Group	Power
Syntax	POWer:REFLevel:ABSolute {SETTODEFau1ts}
Arguments	SETTODEFau1ts sets the reference levels to their default values.

POWer:REFLevel:ABSolute:HIGH

Sets or returns the top reference level for power measurements.

Conditions	This command requires a DPO4PWR application module.
Group	Power
Syntax	POWer:REFLevel:ABSolute:HIGH <NR3>; Ranges={D,-1e6,+1E6} POWer:REFLevel:ABSolute:HIGH?
Arguments	<NR3> is the absolute high value in volts. Default value is 0.0E+0
Examples	POWer:REFLEVEL:ABSOLUTE:HIGH 2 sets the absolute high value to 2.000. POWer:REFLEVEL:ABSOLUTE:HIGH? might return POWer:REFLEVEL:ABSOLUTE:HIGH 2 indicating that the absolute high value is set to 2 V.

POWer:REFLevel:ABSolute:LOW

Sets or returns the low reference level for power measurements.

Conditions	This command requires a DPO4PWR application module.
Group	Power

Syntax	<code>Power:REFLevel:ABSolute:LOW <NR3>; Ranges={D,-1e6,+1E6}</code> <code>Power:REFLevel:ABSolute:LOW?</code>
Arguments	<NR3> is the absolute low value in volts. Default value is 0.0E+0.
Examples	<code>POWER:REFLEVEL:ABSOLUTE:LOW 1.0</code> sets the absolute high value to 1.0000. <code>POWER:REFLEVEL:ABSOLUTE:LOW?</code> might return <code>POWER:REFLEVEL:ABSOLUTE:LOW 1.0000</code> indicating that the absolute low value is set to 1 V.

POWer:REFLevel:ABSolute:MID<1-3>

Sets or returns the mid reference level for measurements. MID3 is specific to the power application.

Conditions	This command requires a DPO4PWR application module.
Group	Power
Syntax	<code>Power:REFLevel:ABSolute:MID<1-3> <NR3>; Ranges={D,-1e6,+1E6}</code> <code>Power:REFLevel:ABSolute:MID<1-3>?</code>
Arguments	<NR3> is the absolute mid reference value.
Examples	<code>POWER:REFLEVEL:ABSOLUTE:MID1 1</code> sets the mid reference voltage to 1V. <code>POWER:REFLEVEL:ABSOLUTE:MID1?</code> might return <code>POWER:REFLEVEL:ABSOLUTE:MID1 0.0E+0</code> indicating that the absolute reference voltage level is set to 0.0E+0 V.

POWer:REFLevel:HYSTeresis

Sets or returns the measurement reference level hysteresis value.

Conditions	This command requires a DPO4PWR application module.
Group	Power

Syntax `POWER:REFLevel:HYSTERESIS <NR3>`
`POWER:REFLevel:HYSTERESIS?`

Arguments `<NR3>` is the hysteresis value.

Examples `POWER:REFLEVEL:HYSTERESIS 30` sets the hysteresis value to 30.
`POWER:REFLEVEL:HYSTERESIS?` might return
`POWER:REFLEVEL:HYSTERESIS 10` indicating that the hysteresis value is set to 10.

POWER:REFLevel:METHod

Sets or returns the method used to calculate the 0% and 100% reference level.

Conditions This command requires a DPO4PWR application module.

Group Power

Syntax `POWER:REFLevel:METHod {ABSolute|PERCent}`
`POWER:REFLevel:METHod?`

Arguments `ABSolute` specifies that the reference levels are set explicitly using the `MEASUREMENT:REFLevel:ABSolute` commands. This method is useful when precise values are required.
`PERCent` specifies that the reference levels are calculated as a percent of the signal amplitude. The percentages are defined using the `MEASUREMENT:REFLevel:PERCent` commands.

Examples `POWER:REFLEVEL:METHOD ABSOLUTE` specifies that explicit user-defined values are used for the reference levels.
`POWER:REFLEVEL:METHOD?` might return `POWER:REFLEVEL:METHOD PERCENT` indicating that the reference level units used are calculated as a percent relative to HIGH and LOW.

POWER:REFLevel:PERCent (No Query Form)

Sets the reference levels to the default percentage values.

Conditions	This command requires a DPO4PWR application module.
Group	Power
Syntax	<code>Power:REFLevel:PERCent <SETTODEFAULTs></code>
Arguments	<code>SETTODEFAULTs</code> sets the reference levels to their default percentage values.

POWER:REFLevel:PERCent:HIGH

Sets or returns the top reference percent level for power measurements.

Conditions	This command requires a DPO4PWR application module.
Group	Power
Syntax	<code>Power:REFLevel:PERCent:HIGH <NR3>; Ranges={D,0.0,100.0}</code> <code>Power:REFLevel:PERCent:HIGH?</code>
Arguments	<code><NR3></code> is the high value in percent.
Examples	<code>POWER:REFLEVEL:PERCENT:HIGH 95</code> sets the high reference level to 95% of the signal amplitude. <code>POWER:REFLEVEL:PERCENT:HIGH?</code> might return <code>:POWER:REFLEVEL:PERCENT:HIGH 90</code> indicating that the percentage high reference level is set to 90% of the signal amplitude.

POWER:REFLevel:PERCent:LOW

Sets or returns the low reference percent level for power measurements.

Conditions	This command requires a DPO4PWR application module.
Group	Power
Syntax	<code>Power:REFLevel:PERCent:LOW <NR3>; Ranges={D,0.0,100.0}</code> <code>Power:REFLevel:PERCent:LOW?</code>

Arguments	<NR3> is the low value in percentage.
Examples	<p>POWER:REFLEVEL:PERCENT:LOW 15 sets the low reference level to 15% of the signal amplitude.</p> <p>POWER:REFLEVEL:PERCENT:LOW? might return :POWER:REFLEVEL:PERCENT:LOW 10 indicating that the percentage low reference level is set to 90% of the signal amplitude.</p>

POWer:REFLevel:PERCent:MID<1-3>

Sets or returns the mid reference percent level for waveform measurements. Mid3 is specific to the power application.

Conditions	This command requires a DPO4PWR application module.
Group	Power
Syntax	<p>Power:REFLevel:PERCent:MID<1-3> <NR3>; Ranges={D,0.0,100.0}</p> <p>Power:REFLevel:PERCent:MID<1-3>?</p>
Arguments	<NR3> is the mid value in percentage.
Examples	<p>POWER:REFLEVEL:PERCENT:MID1 25 sets the mid reference voltage to 25%.</p> <p>POWER:REFLEVEL:PERCENT:MID1? might return POWER:REFLEVEL:PERCENT:MID1 50.0000 indicating that the mid reference voltage level is set to 50%.</p>

POWer:RIPPlE (No Query Form)

Does a vertical autoset for ripple measurements or sets the vertical offset to 0.

Conditions	This command requires a DPO4PWR application module.
Group	Power
Syntax	Power:RIPPlE {VERTAUToset VERTDEFauLt}

Arguments	VERTAUTOset automatically scales the source waveform to optimize ripple measurements. VERTDEFault sets the vertical offset of the source waveform to 0 volts (for voltage source) or 0 amperes (for current source).
------------------	---

POWer:RIPPlE:RESuLts:AMPLitude? (Query Only)

Returns the peak-to-peak ripple measurement.

Conditions	This command requires a DPO4PWR application module.
-------------------	---

Group	Power
--------------	-------

Syntax	POWer:RIPPlE:RESuLts:AMPLitude?
---------------	---------------------------------

Examples	POWer:RIPPlE:RESuLts:AMPLitude? might return :POWer:RIPPlE:RESuLts:AMPLitude 1 indicating that the peak-to-peak amplitude is set to 1 V.
-----------------	---

POWer:RIPPlE:RESuLts:MAX? (Query Only)

Returns the maximum of the peak-to-peak ripple measurements.

Conditions	This command requires a DPO4PWR application module.
-------------------	---

Group	Power
--------------	-------

Syntax	POWer:RIPPlE:RESuLts:MAX?
---------------	---------------------------

Examples	POWer:RIPPlE:RESuLts:MAX? might return :POWer:RIPPlE:RESuLts:MAX 1.1 indicating that the maximum peak-to-peak amplitude is set to 1.1 V.
-----------------	---

POWer:RIPPlE:RESuLts:MEAN? (Query Only)

Returns the mean of the peak-to-peak ripple measurements.

Conditions	This command requires a DPO4PWR application module.
-------------------	---

Group	Power
Syntax	POWER:RIPPLE:RESULTS:MEAN?
Examples	POWER:RIPPLE:RESULTS:MEAN? might return :POWER:RIPPLE:RESULTS:MEAN 1.0 indicating that the mean peak-to-peak amplitude is set to 1.0 V.

POWER:RIPPLE:RESULTS:MIN? (Query Only)

Returns the minimum of the peak-to-peak ripple measurement.

Conditions	This command requires a DPO4PWR application module.
Group	Power
Syntax	POWER:RIPPLE:RESULTS:MIN?
Examples	POWER:RIPPLE:RESULTS:MIN? might return :POWER:RIPPLE:RESULTS:MIN 0.9 indicating that the minimum peak-to-peak amplitude is set to 0.9 V.

POWER:RIPPLE:RESULTS:STDdev? (Query Only)

Returns the standard deviation of the peak-to-peak ripple measurements.

Conditions	This command requires a DPO4PWR application module.
Group	Power
Syntax	POWER:RIPPLE:RESULTS:STDdev?
Examples	POWER:RIPPLE:RESULTS:STDDEV? might return :POWER:RIPPLE:RESULTS:STDDEV 0.14 indicating that the standard deviation of the peak-to-peak amplitude is set to 0.14.

POWer:RIPPlE:SOURce

Sets or returns the source waveform for ripple tests. The voltage source waveform is specified using the **POWer:VOLTAGESource** command and the current waveform is specified using the **POWer:CURRENTSource** command.

Conditions	This command requires a DPO4PWR application module.
Group	Power
Syntax	<code>POWer:RIPPlE:SOURce {VOLTage CURRENT}</code>
Arguments	VOLTage specifies voltage source waveform for ripple tests. CURRENT specifies current source waveform for ripple tests.
Examples	POWer:RIPPLE:SOURCE CURRENT sets the ripple source to Current. POWer:RIPPLE:SOURCE? might return :POWer:RIPPLE:SOURCE VOLT indicating that the ripple source is set to Voltage.

POWer:SOA:LINear:XMAX

Sets or returns the user XMAX value for use in linear SOA calculations.

Conditions	This command requires a DPO4PWR application module.
Group	Power
Syntax	<code>POWer:SOA:LINear:XMAX <NR3></code> <code>POWer:SOA:LINear:XMAX?</code>
Arguments	<NR3> is the XMAX value used for linear SOA calculations.
Examples	POWer:SOA:LINEAR:XMAX 700 sets the XMAX value to 700.0000. POWer:SOA:LINEAR:XMAX ? might return :POWer:SOA:LINear:XMAX 500.0000 indicating that the XMAX value for linear plot type is set to 500.0000.

POWer:SOA:LINear:XMIN

Sets or returns the user XMIN value for use in linear SOA calculations.

Conditions	This command requires a DPO4PWR application module.
Group	Power
Syntax	POWer:SOA:LINear:XMIN <NR3> POWer:SOA:LINear:XMIN?
Arguments	<NR3> is the XMIN value used for linear SOA calculations.
Examples	POWer:SOA:LINEAR:XMIN 2 sets the XMIN value to 2.0000. POWer:SOA:LINEAR:XMIN ? might return :POWer:SOA:LINear:XMIN 0.0E+0 indicating that the XMIN value for linear plot type is set to 0.0E+0.

POWer:SOA:LINear:YMAX

Sets or returns the user YMAX value for use in linear SOA calculations.

Conditions	This command requires a DPO4PWR application module.
Group	Power
Syntax	POWer:SOA:LINear:YMAX <NR3> POWer:SOA:LINear:YMAX?
Arguments	<NR3> is the YMAX value used for linear SOA calculations.
Examples	POWer:SOA:LINEAR:YMAX 700 sets the YMAX value to 700.0000. POWer:SOA:LINEAR:YMAX ? might return :POWer:SOA:LINear:YMAX 50.0000 indicating that the YMAX value for linear plot type is set to 50.0000.

POWer:SOA:LINear:YMIN

Sets or returns the user YMIN value for use in linear SOA calculations.

Conditions	This command requires a DPO4PWR application module.
Group	Power
Syntax	<code>POWER:SOA:LINEar:YMIN <NR3></code> <code>POWER:SOA:LINEar:YMIN?</code>
Arguments	<NR3> is the YMIN value used for linear SOA calculations.
Examples	<code>POWER:SOA:LINEar:YMIN 2</code> sets the YMIN value to 2.0000. <code>POWER:SOA:LINEar:YMIN ?</code> might return <code>:POWER:SOA:LINEar:YMIN 0.0E+0</code> indicating that the YMIN value for linear plot type is set to 0.0E+0.

POWer:SOA:LOG:XMAX

Sets or returns the user XMAX value for use in Log SOA calculations.

Conditions	This command requires a DPO4PWR application module.
Group	Power
Syntax	<code>POWER:SOA:LOG:XMAX <NR3></code> <code>POWER:SOA:LOG:XMAX?</code>
Arguments	<NR3> is the XMAX value used for log SOA calculations.
Examples	<code>POWER:SOA:LOG:XMAX 1</code> sets the XMAX value to 1.0000. <code>POWER:SOA:LOG:XMAX ?</code> might return <code>:POWER:SOA:LOG:XMAX 1.0000E+3</code> indicating that the XMAX value for log plot type is set to 1.0000E+3.

POWer:SOA:LOG:XMIN

Sets or returns the user XMIN value for use in Log SOA calculations.

Conditions	This command requires a DPO4PWR application module.
-------------------	---

Group	Power
Syntax	<pre>POWER:SOA:LOG:XMIN <NR3> POWER:SOA:LOG:XMIN?</pre>
Arguments	<NR3> is the XMIN value used for log SOA calculations.
Examples	<p>POWER:SOA:LOG:XMIN 2 sets the XMIN value to 2.0000.</p> <p>POWER:SOA:LOG:XMIN ? might return :POWER:SOA:LOG:XMIN 100.0000E-3 indicating that the XMIN value for log plot type is set to 100.0000E-3.</p>

POWER:SOA:LOG:YMAX

Sets or returns the user YMAX value for use in Log SOA calculations.

Conditions	This command requires a DPO4PWR application module.
-------------------	---

Group	Power
Syntax	<pre>POWER:SOA:LOG:YMAX <NR3> POWER:SOA:LOG:YMAX?</pre>
Arguments	<NR3> is the YMAX value used for log SOA calculations.
Examples	<p>POWER:SOA:LOG:YMAX 10 sets the YMAX value to 10.0000.</p> <p>POWER:SOA:LOG:YMAX ? might return :POWER:SOA:LOG:YMAX 100.0000 indicating that the YMAX value for log plot type is set to 100.0000.</p>

POWER:SOA:LOG:YMIN

Sets or returns the user YMIN value for use in Log SOA calculations.

Conditions	This command requires a DPO4PWR application module.
-------------------	---

Group	Power
--------------	-------

Syntax	<code>POWER:SOA:LOG:YMIN <NR3></code> <code>POWER:SOA:LOG:YMIN?</code>
Arguments	<NR3> is the YMIN value used for log SOA calculations.
Examples	<code>POWER:SOA:LOG:YMIN 1</code> sets the YMIN value to 1.0000. <code>POWER:SOA:LOG:YMIN ?</code> might return <code>:POWER:SOA:LOG:YMIN 100.0000E-3</code> indicating that the YMIN value for log plot type is set to 100.0000E-3.

POWER:SOA:MASK:DEFine

Sets or returns the X (Volts) and Y (Amps) coordinates of the current SOA mask. You can specify the number of points from 2 to 10, minimum being 2. Successive X values must be \geq the preceding X values. The number of XY points sent determines the value of NR_PT.

Conditions	This command requires a DPO4PWR application module.
Group	Power
Syntax	<code>POWER:SOA:MASK:DEFine <NR3></code> <code>POWER:SOA:MASK:DEFine?</code>
Arguments	<NR3> represents SOA mask coordinates.
Examples	<code>POWER:SOA:MASK:DEFINE 10</code> specifies the SOA mask coordinates as 0.0E+0,0.0E+0,0.0E+0,0.0E+0,0.0E+0,30.0000,25.0000,30.0000,300.0000,2.5000,300.0000 <code>POWER:SOA:MASK:DEFINE ?</code> might return <code>:POWER:SOA:MASK:DEFINE</code> 0.0E+0,30.0000,25.0000,30.0000,300.0000,2.5000,300.0000,0.0E+0 indicating that the SOA mask coordinates are set to 0.0E+0,30.0000,25.0000,30.0000,300.0000,2.5000,300.0000,0.0E+0.

POWER:SOA:MASK:MAXAmps

Sets or returns the maximum current applied to SOA mask testing.

Conditions	This command requires a DPO4PWR application module.
-------------------	---

Group	Power
Syntax	<pre>Power:SOA:MASK:MAXAmps <NR3> Power:SOA:MASK:MAXAmps?</pre>
Arguments	<NR3> is the maximum current applied to SOA mask testing.
Examples	<p>POWER:SOA:MASK:MAXAMPS 40 sets the SOA mask testing current to 40 A.</p> <p>POWER:SOA:MASK:MAXAMPS ? might return :POWER:SOA:MASK:MAXAMPS 30.0000 indicating that the SOA mask testing maximum current is set to 30 A.</p>

POWer:SOA:MASK:MAXVolts

Sets or returns the maximum voltage applied to SOA mask testing.

Conditions	This command requires a DPO4PWR application module.
Group	Power
Syntax	<pre>Power:SOA:MASK:MAXVolts <NR3> Power:SOA:MASK:MAXVolts?</pre>
Arguments	<NR3> is the maximum voltage applied to SOA mask testing.
Examples	<p>POWER:SOA:MASK:MAXVOLTS 200 sets the SOA mask testing voltage to 200 V.</p> <p>POWER:SOA:MASK:MAXVOLTS ? might return :POWER:SOA:MASK:MAXVOLTS 300.0000 indicating that the SOA mask testing maximum voltage is set to 300 V.</p>

POWer:SOA:MASK:MAXWatts

Sets or returns the maximum power applied to SOA mask testing.

Conditions	This command requires a DPO4PWR application module.
Group	Power

Syntax	Power:SOA:MASK:MAXwatts <NR3> Power:SOA:MASK:MAXwatts?
Arguments	<NR3> is the maximum power applied to SOA mask testing.
Examples	<p>POWER:SOA:MASK:MAXWATTS 1000 sets the SOA mask testing power to 1.0000E+3 W.</p> <p>POWER:SOA:MASK:MAXWATTS ? might return :POWER:SOA:MASK:MAXWATTS 750.0000 indicating that the SOA mask testing maximum power is set to 750 W.</p>

POWer:SOA:MASK:NR_PT? (Query Only)

Returns the number of mask points defined.

Conditions	This command requires a DPO4PWR application module.
Group	Power
Syntax	Power:SOA:MASK:NR_PT?
Examples	<p>POWER:SOA:MASK:NR_PT? might return :POWER:SOA:MASK:NR_PT 4 indicating that the number of mask points defined is 4.</p>

POWer:SOA:MASK:STATe

Sets or returns the state of the mask for SOA calculations.

Conditions	This command requires a DPO4PWR application module.
Group	Power
Syntax	Power:SOA:MASK:STATe {OFF LIMITS POINTS} Power:SOA:MASK:STATe?

Arguments	<p>OFF disables mask testing.</p> <p>LIMITS enables mask testing based on limits specified using POWer:SOA:MASK:MAXAmps, POWer:SOA:MASK:MAXVolts, and POWer:SOA:MASK:MAXWatts commands</p> <p>POINTS enables mask testing based on masks points defined.</p>
Examples	<p>POWER:SOA:MASK:STATEPOINTS enables mask testing power based on points defined.</p> <p>POWER:SOA:MASK:STATE? might return :POWER:SOA:MASK:STATE LIMITS indicating that the mask testing is enabled based on limits.</p>

POWer:SOA:MASK:STOPOnviol

Sets or returns the enabled state of the mask stop on violation condition.

Conditions	This command requires a DPO4PWR application module.
Group	Power
Syntax	<p>Power:SOA:MASK:STOPOnviol {OFF ON 0 1}</p> <p>Power:SOA:MASK:STOPOnviol?</p>
Arguments	<p>OFF or 0 enables mask stop on violations.</p> <p>ON or 1 disables mask stop on violations.</p>
Examples	<p>POWER:SOA:MASK:STOPONVIOL 1 disables the state of the mask stop on violation condition.</p> <p>POWER:SOA:MASK:STOPONVIOL ? might return :POWER:SOA:MASK:STOPONVIOL 0 indicating that the mask stop is enabled.</p>

POWer:SOA:PLOTTPe

Sets or returns the Safe Operating Area (SOA) plot type.

Conditions	This command requires a DPO4PWR application module.
Group	Power

Syntax	<code>POWer:SOA:PLOTTYPE {LOG LINEar}</code> <code>POWer:SOA:PLOTTYPE?</code>
Arguments	LOG for logarithmic SOA plot type. LINEar for linear SOA plot type.
Examples	<code>POWer:SOA:PLOTTYPE LINEar</code> sets the SOA plot type to Linear. <code>POWer:SOA:PLOTTYPE ?</code> might return <code>:POWer:SOA:PLOTTYPE LOG</code> indicating that the SOA plot type is set to Log.

POWer:SOA:RESult:FAILures:QTY? (Query Only)

Returns the number of failures in the test.

Conditions	This command requires a DPO4PWR application module.
Group	Power
Syntax	<code>POWer:SOA:RESult:FAILures:QTY?</code>
Examples	<code>POWer:SOA:RESULT:FAILURES:QTY?</code> might return <code>:POWer:SOA:RESULT:FAILURES 0</code> indicating that the number of failures is 0.

POWer:SOA:RESult:NUMACq? (Query Only)

Returns the number of acquisitions in the test.

Conditions	This command requires a DPO4PWR application module.
Group	Power
Syntax	<code>POWer:SOA:RESult:NUMACq?</code>
Examples	<code>POWer:SOA:RESULT:NUMACQ?</code> might return <code>:POWer:SOA:RESULT:NUMACQ 10</code> indicating that the number of acquisitions is 10.

POWer:SOA:RESuLt:STATe? (Query Only)

Returns the pass/fail state of the SOA test.

Conditions This command requires a DPO4PWR application module.

Group Power

Syntax POWer:SOA:RESuLt:STATe?

Returns PASS or FAIL.

Examples POWer:SOA:RESuLt:STATe? might return :POWER:SOA:MASK:STATE PASS indicating that the SOA test state is PASS.

POWer:STATIstics (No Query Form)

Clears all the accumulated statistics of all measurements. Performs the same function as the [MEASUrement:STATIstics](#) command.

Conditions This command requires a DPO4PWR application module.

Group Power

Syntax POWer:STATIstics {RESET}

Arguments RESET clears the measurement statistics.

POWer:STATIstics:MODE

Enables or disables the display of the measurement statistics. Performs the same function as the [MEASUrement:STATIstics:MODE](#) command.

Conditions This command requires a DPO4PWR application module.

Group Power

Syntax	<code>Power:STATISTICS:MODE {OFF ALL}</code> <code>Power:STATISTICS:MODE?</code>
Arguments	ALL turns on measurement statistics display. OFF turns all measurements statistics off.
Examples	<code>POWER:STATISTICS:MODE OFF</code> turns measurements statistics display off. <code>POWER:STATISTICS:MODE?</code> might return <code>:MEASUREMENT:STATISTICS:MODE ALL</code> indicating that measurement statistics are turned on and all statistics are being displayed for each measurement.

POWer:STATistics:WEIghing

Sets the number of samples which are included for the statistics computations for mean and the standard deviation. Performs the same function as the [MEASUrement:STATistics:WEIghing](#) command.

Conditions	This command requires a DPO4PWR application module.
Group	Power
Syntax	<code>Power:STATISTICS:WEIGHTING <NR1>; Ranges {L,2,1000}</code> <code>Power:STATISTICS:WEIGHTING?</code>
Arguments	<NR1> is the number of samples used for the mean and standard deviation statistical accumulations
Examples	<code>POWER:STATISTICS:WEIGHTING 4</code> sets statistical weighting to four samples. <code>POWER:STATISTICS:WEIGHTING ?</code> might return <code>:POWER:STATISTICS:WEIGHTING 4</code> indicating that statistics weighting is currently set to 4 samples.

POWer:SWLoss:CONDCALCmethod

Sets or returns the power application switching loss conduction calculation method.

Conditions	This command requires a DPO4PWR application module.
-------------------	---

Group	Power
Syntax	Power:SWLoss:CONDCALCmethod {VOLTage RDson VCEsat} Power:SWLoss:CONDCALCmethod?
Arguments	<p>VOLTage sets voltage as the conduction calculation method.</p> <p>RDson sets RDson as the conduction calculation method.</p> <p>VCEsat sets VCEsat as the conduction calculation method.</p>
Examples	<p>POWER:SWLOSS:CONDCALCMETHOD RDson sets the conduction calculation method to RDson.</p> <p>POWER:SWLOSS:CONDCALCMETHOD ? might return :POWER:SWLOSS:CONDCALCMETHOD VOLT indicating that the conduction calculation method is set to Voltage.</p>

POWER:SWLoss:CONduction:ENERGY:MAX? (Query Only)

Returns the maximum conduction energy for switching loss calculation.

Conditions	This command requires a DPO4PWR application module.
Group	Power
Syntax	Power:SWLoss:CONduction:ENERGY:MAX?
Examples	<p>POWER:SWLOSS:CONDUCTION:ENERGY:MAX? might return :POWER:SWLOSS:CONDUCTION:ENERGY:MAX 1 indicating that the maximum conduction energy switching loss calculation is set to 1 J.</p>

POWER:SWLoss:CONduction:ENERGY:MEAN? (Query Only)

Returns the mean conduction energy in the conduction period for the switching loss calculation.

Conditions	This command requires a DPO4PWR application module.
Group	Power

Syntax `Power:SWLoss:CONduction:ENERGY:MEAN?`

Examples `POWER:SWLOSS:CONDUCTION:ENERGY:MEAN?` might return
 `:POWER:SWLOSS:CONDUCTION:ENERGY:MEAN 1` indicating that the mean
 conduction energy switching loss calculation is set to 1 J.

POWer:SWLoss:CONduction:ENERGY:MIN? (Query Only)

Returns the minimum conduction energy for the switching loss calculation.

Conditions This command requires a DPO4PWR application module.

Group Power

Syntax `Power:SWLoss:CONduction:ENERGY:MIN?`

Examples `POWER:SWLOSS:CONDUCTION:ENERGY:MIN?` might return
 `:POWER:SWLOSS:CONDUCTION:ENERGY:MIN 1` indicating that the
 minimum conduction energy switching loss calculation is set to 1 J.

POWer:SWLoss:CONduction:POWER:MAX? (Query Only)

Returns the maximum conduction power for the switching loss calculation.

Conditions This command requires a DPO4PWR application module.

Group Power

Syntax `Power:SWLoss:CONduction:POWER:MAX?`

Examples `POWER:SWLOSS:CONDUCTION:POWER:MAX?` might return
 `:POWER:SWLOSS:CONDUCTION:POWER:MAX 1` indicating that the
 maximum conduction power switching loss calculation is set to 1 W.

POWer:SWLoss:CONduction:POWER:MEAN? (Query Only)

Returns the mean conduction power for the switching loss calculation.

Conditions	This command requires a DPO4PWR application module.
Group	Power
Syntax	<code>Power:SWLoss:CONDUCTION:POWER:MEAN?</code>
Examples	<code>POWER:SWLOSS:CONDUCTION:POWER:MEAN?</code> might return <code>:POWER:SWLOSS:CONDUCTION:POWER:MEAN 1</code> indicating that the mean conduction power switching loss calculation is set to 1 W.

POWER:SWLoss:CONDUCTION:POWER:MIN? (Query Only)

Returns the minimum conduction power for the switching loss calculation.

Conditions	This command requires a DPO4PWR application module.
Group	Power
Syntax	<code>Power:SWLoss:CONDUCTION:POWER:MIN?</code>
Examples	<code>POWER:SWLOSS:CONDUCTION:POWER:MIN?</code> might return <code>:POWER:SWLOSS:CONDUCTION:POWER:MIN 1</code> indicating that the minimum conduction power switching loss calculation is set to 1 W.

POWER:SWLoss:DISplay

Sets or returns the display selection for switching loss results: All measurements, energy loss measurements or power loss measurements.

Conditions	This command requires a DPO4PWR application module.
Group	Power
Syntax	<code>Power:SWLoss:DISplay {ALL ENERGYLoss POWERLoss}</code> <code>Power:SWLoss:DISplay?</code>

Arguments	<p>ALL displays both energy and power loss measurements in the results.</p> <p>ENERGYLOSS displays only energy loss measurements in the results.</p> <p>POWERLOSS displays only power loss measurements in the results.</p>
Examples	<p>POWER:SWLOSS:DISPLAY ENERGYLOSS displays only energy loss measurements in the results.</p> <p>POWER:SWLOSS:DISPLAY ? might return :POWER:SWLOSS:DISPLAY ALL indicating that the results displays both energy and power loss measurements.</p>

POWer:SWLoss:GATe:POLarity

Sets or returns the switching loss gate polarity.

Conditions	This command requires a DPO4PWR application module.
-------------------	---

Group	Power
--------------	-------

Syntax	<pre>POWER:SWLoss:GATe:POLarity {FALL RISe} POWER:SWLoss:GATe:POLarity?</pre>
---------------	---

Arguments	<p>FALL sets falling edge as the switching loss gate polarity.</p> <p>RISe sets rising edge as the switching loss gate polarity.</p>
------------------	--

Examples	<p>POWER:SWLOSS:GATE:POLARITY FALL sets the gate polarity to Fall.</p> <p>POWER:SWLOSS:GATE:POLARITY ? might return :POWER:SWLOSS:GATE:POLARITY RISE indicating that the gate polarity is set to Rise.</p>
-----------------	--

POWer:SWLoss:GATe:TURNON

Sets or returns the gate turn on level for switching loss power measurements.

Conditions	This command requires a DPO4PWR application module.
-------------------	---

Group	Power
--------------	-------

Syntax `Power:SWLoss:GATE:TURNON <NR3>`
 `Power:SWLoss:GATE:TURNON?`

Examples `POWER:SWLOSS:GATE:TURNON 3.5` sets the gate turn on level to 3.5000.
 `POWER:SWLOSS:GATE:TURNON ?` might return `:POWER:SWLOSS:GATE:TURNON 1.5` indicating that the gating turn on level is set to 1.5.

POWER:SWLoss:NUMCYCles? (Query Only)

Returns the number of cycles counted for the switching loss calculation.

Conditions This command requires a DPO4PWR application module.

Group Power

Syntax `Power:SWLoss:NUMCYCles? <NR3>`

Examples `POWER:SWLOSS:NUMCYCLES?` might return the number of cycles for switching loss calculation, if the [POWER:TYPE](#) is set to Switching Loss (`POWER:TYPE:SWITCHingLoss`). If the query times out with the Switching Loss power enabled, it indicates the possibility of incorrect settings and might return the following :

```
*ESR?
20
ALLEV?
2202,"Measurement error, No period found;
:power:swloss:numcycles?",410,"Query INTERRUPTED"
```

POWER:SWLoss:RDSON

Sets or returns the user RDSON value for use in switching loss calculations when the conduction calculation method is RDSON.

Conditions This command requires a DPO4PWR application module.

Group Power

Syntax	POWER:SWLOSS:RDSon <NR3> POWER:SWLOSS:RDSon?
Arguments	<NR3> is the RDSOn switching loss calculation.
Examples	POWER:SWLOSS:RDSOn 30 sets the RDSon value to 30.0000. POWER:SWLOSS:RDSOn ? might return :POWER:SWLOSS:RDSon 20.0000E-3 indicating that the RDSon value is set to 20.0000E-3.

POWER:SWLoss:REFLevel:ABSolute:GATEMid

Sets or returns the mid voltage reference level used in switching loss power measurements in volts.

Conditions	This command requires a DPO4PWR application module.
Group	Power
Syntax	POWER:SWLoss:REFLevel:ABSolute:GATEMid <NR3> POWER:SWLoss:REFLevel:ABSolute:GATEMid?
Arguments	<NR3> is the mid voltage reference level in volts.
Examples	POWER:SWLOSS:REFLEVEL:ABSOLUTE:GATEMID 100 sets the absolute gate mid reference voltage to 100.0000 V. POWER:SWLOSS:REFLEVEL:ABSOLUTE:GATEMID ? might return :POWER:SWLOSS:REFLEVEL:ABSOLUTE:GATEMID 50.0000 indicating that the gate mid reference voltage is set to 50.0000 V.

POWER:SWLoss:REFLevel:ABSolute:LOWCurrent

Sets or returns the low current reference level used in switching loss power measurements in amperes.

Conditions	This command requires a DPO4PWR application module.
Group	Power

Syntax `Power:SWLoss:REFLevel:ABSolute:LOWCurrent <NR3>`
`Power:SWLoss:REFLevel:ABSolute:LOWCurrent?`

Arguments <NR3> is the low voltage current level in amperes.

Examples `POWER:SWLOSS:REFLEVEL:ABSOLUTE:LOWCURRENT 2.8` sets the absolute reference low current to 2.8000 A.

`POWER:SWLOSS:REFLEVEL:ABSOLUTE:LOWCURRENT ?` might return
`:POWER:SWLOSS:REFLEVEL:ABSOLUTE:LOWCURRENT 5.0000` indicating that the absolute reference low current is set to 5.0000 A.

POWer:SWLoss:REFLevel:ABSolute:LOWVoltage

Sets or returns the low voltage reference level used in switching loss power measurements in volts.

Conditions This command requires a DPO4PWR application module.

Group Power

Syntax `Power:SWLoss:REFLevel:ABSolute:LOWVoltage <NR3>`
`Power:SWLoss:REFLevel:ABSolute:LOWVoltage?`

Arguments <NR3> is the low voltage reference level in volts.

Examples `POWER:SWLOSS:REFLEVEL:ABSOLUTE:LOWVOLTAGE 2.5` sets the absolute reference low voltage to 2.5000 V.

`POWER:SWLOSS:REFLEVEL:ABSOLUTE:LOWVOLTAGE ?` might return
`:POWER:SWLOSS:REFLEVEL:ABSOLUTE:LOWVOLTAGE 5.0000` indicating that the absolute reference low voltage is set to 5.0000 V.

POWer:SWLoss:REFLevel:PERCent:GATEMid

Sets or returns the mid voltage reference level used in switching loss power measurements in percent.

Conditions This command requires a DPO4PWR application module.

Group	Power
Syntax	<pre>POWER:SWLoss:REFLevel:PERCent:GATEMid <NR3> POWER:SWLoss:REFLevel:PERCent:GATEMid?</pre>
Arguments	<NR3> is the mid voltage reference level in volts.
Examples	<p>POWER:SWLOSS:REFLEVEL:PERCENT:GATEMID 30 sets the gate mid reference voltage to 30%.</p> <p>POWER:SWLOSS:REFLEVEL:PERCENT:GATEMID ? might return :POWER:SWLOSS:REFLEVEL:PERCENT:GATEMID 50.0000 indicating that the gate mid reference voltage is set to 50%.</p>

POWER:SWLoss:REFLevel:PERCent:LOWCurrent

Sets or returns the low current reference level used in switching loss power measurements in percent.

Conditions	This command requires a DPO4PWR application module.
Group	Power
Syntax	<pre>POWER:SWLoss:REFLevel:PERCent:LOWCurrent <NR3> POWER:SWLoss:REFLevel:PERCent:LOWCurrent?</pre>
Arguments	<NR3> is the low voltage reference level percent.
Examples	<p>POWER:SWLOSS:REFLEVEL:PERCENT:LOWCURRENT 15 sets the reference low current to 15%.</p> <p>POWER:SWLOSS:REFLEVEL:PERCENT:LOWCURRENT ? might return :POWER:SWLOSS:REFLEVEL:PERCENT:LOWCURRENT 5.0000 indicating that the reference low current is set to 5%.</p>

POWER:SWLoss:REFLevel:PERCent:LOWVoltage

Sets or returns the low voltage reference level used in switching loss power measurements in percent.

Conditions	This command requires a DPO4PWR application module.
Group	Power
Syntax	<pre>Power:SWLoss:REFLevel:PERCent:LOWVoltage <NR3> Power:SWLoss:REFLevel:PERCent:LOWVoltage?</pre>
Arguments	<NR3> is the low voltage reference level in percent.
Examples	<p>POWER:SWLOSS:REFLEVEL:PERCENT:LOWVOLTAGE 10 sets the reference low voltage to 10%.</p> <p>POWER:SWLOSS:REFLEVEL:PERCENT:LOWVOLTAGE ? might return :POWER:SWLOSS:REFLEVEL:PERCENT:LOWVOLTAGE 5.0000 indicating that the reference low voltage is set to 5%.</p>

POWER:SWLoss:TOFF:ENERGY:MAX? (Query Only)

Returns the maximum Toff energy for the switching loss calculation.

Conditions	This command requires a DPO4PWR application module.
Group	Power
Syntax	<pre>Power:SWLoss:TOFF:ENERGY:MAX?</pre>
Examples	<p>POWER:SWLOSS:TOFF:ENERGY:MAX? might return :POWER:SWLOSS:TON:ENERGY:MAX 1 indicating that the maximum Toff energy switching loss calculation is set to 1 J.</p>

POWER:SWLoss:TOFF:ENERGY:MEAN? (Query Only)

Returns the mean Toff energy for the switching loss calculation.

Conditions	This command requires a DPO4PWR application module.
Group	Power

Syntax `Power:SWLoss:TOFF:ENERGY:MEAN?`

Examples `POWER:SWLOSS:TOFF:ENERGY:MEAN?` might return
 `:POWER:SWLOSS:TON:ENERGY:MEAN 1` indicating that the mean Toff energy
 switching loss calculation is set to 1 J.

POWer:SWLoss:TOFF:ENERGY:MIN? (Query Only)

Returns the minimum Toff energy for the switching loss calculation.

Conditions This command requires a DPO4PWR application module.

Group Power

Syntax `Power:SWLoss:TOFF:ENERGY:MIN?`

Examples `POWER:SWLOSS:TOFF:ENERGY:MIN?` might return
 `:POWER:SWLOSS:TON:ENERGY:MIN 1` indicating that the minimum Toff energy
 switching loss calculation is set to 1 J.

POWer:SWLoss:TOFF:POWER:MAX? (Query Only)

Returns the maximum Toff power for the switching loss calculation.

Conditions This command requires a DPO4PWR application module.

Group Power

Syntax `Power:SWLoss:TOFF:POWER:MAX?`

Examples `POWER:SWLOSS:TOFF:POWER:MAX?` might return
 `:POWER:SWLOSS:TON:POWER:MAX 1` indicating that the maximum Toff power
 switching loss calculation is set to 1 W.

POWer:SWLoss:TOFF:POWER:MEAN? (Query Only)

Returns the mean Toff power for the switching loss calculation.

Conditions	This command requires a DPO4PWR application module.
Group	Power
Syntax	Power:SWLoss:TOFF:POWER:MEAN?
Examples	POWER:SWLOSS:TOFF:POWER:MEAN? might return :POWER:SWLOSS:TON:POWER:MEAN 1 indicating that the mean Toff power switching loss calculation is set to 1 W.

POWer:SWLoss:TOFF:POWER:MIN? (Query Only)

Returns the minimum Toff power for the switching loss calculation.

Conditions	This command requires a DPO4PWR application module.
Group	Power
Syntax	Power:SWLoss:TOFF:POWER:MIN?
Examples	POWER:SWLOSS:TOFF:POWER:MIN? might return :POWER:SWLOSS:TON:POWER:MIN 1 indicating that the minimum Toff power switching loss calculation is set to 1 W.

POWer:SWLoss:TON:ENERGY:MAX? (Query Only)

Returns the maximum Ton energy for the switching loss calculation.

Conditions	This command requires a DPO4PWR application module.
Group	Power
Syntax	Power:SWLoss:TON:ENERGY:MAX?
Examples	POWER:SWLOSS:TON:ENERGY:MAX? might return :POWER:SWLOSS:TON:ENERGY:MAX 1 indicating that the maximum Ton energy switching loss calculation is set to 1 J.

POWer:SWLoss:TON:ENERGY:MEAN? (Query Only)

Returns the mean Ton energy for the switching loss calculation.

Conditions This command requires a DPO4PWR application module.

Group Power

Syntax POWER:SWLOSS:TON:ENERGY:MEAN?

Examples POWER:SWLOSS:TON:ENERGY:MEAN? might return
:POWER:SWLOSS:TON:ENERGY:MEAN 1 indicating that the mean Ton energy
switching loss calculation is set to 1 J.

POWer:SWLoss:TON:ENERGY:MIN? (Query Only)

Returns the minimum Ton energy for the switching loss calculation.

Conditions This command requires a DPO4PWR application module.

Group Power

Syntax POWER:SWLOSS:TON:ENERGY:MIN?

Examples POWER:SWLOSS:TON:ENERGY:MIN? might return
:POWER:SWLOSS:TON:ENERGY:MIN 1 indicating that the minimum Ton energy
switching loss calculation is set to 1 J.

POWer:SWLoss:TON:POWER:MAX? (Query Only)

Returns the maximum Ton power for the switching loss calculation.

Conditions This command requires a DPO4PWR application module.

Group Power

Syntax POWER:SWLOSS:TON:POWER:MAX?

Examples `POWER:SWLOSS:TON:POWER:MAX?` might return
 `:POWER:SWLOSS:TON:POWER:MAX 1` indicating that the maximum Ton power
 switching loss calculation is set to 1 W.

POWer:SWLoss:TON:POWER:MEAN? (Query Only)

Returns the mean Ton power for the switching loss calculation.

Conditions This command requires a DPO4PWR application module.

Group Power

Syntax `POWer:SWLoss:TON:POWER:MEAN?`

Examples `POWER:SWLOSS:TON:POWER:MEAN?` might return
 `:POWER:SWLOSS:TON:POWER:MEAN 1` indicating that the mean Ton power
 switching loss calculation is set to 1 W.

POWer:SWLoss:TON:POWER:MIN? (Query Only)

Returns the minimum Ton power for the switching loss calculation.

Conditions This command requires a DPO4PWR application module.

Group Power

Syntax `POWer:SWLoss:TON:POWER:MIN?`

Examples `POWER:SWLOSS:TON:POWER:MIN?` might return
 `:POWER:SWLOSS:TON:POWER:MIN 1` indicating that the minimum Ton power
 switching loss calculation is set to 1 W.

POWer:SWLoss:TOTal:ENERGY:MAX? (Query Only)

Returns the maximum total energy for the switching loss calculation.

Conditions This command requires a DPO4PWR application module.

Group	Power
Syntax	<code>Power:SWLoss:TOTal:ENERGY:MAX?</code>
Examples	<code>POWER:SWLOSS:TOTAL:ENERGY:MAX?</code> might return <code>:POWER:SWLOSS:TOTAL:ENERGY:MAX 1</code> indicating that the maximum conduction energy switching loss calculation is set to 1 J.

POWer:SWLoss:TOTal:ENERGY:MEAN? (Query Only)

Returns the mean total energy for the switching loss calculation.

Conditions	This command requires a DPO4PWR application module.
Group	Power
Syntax	<code>Power:SWLoss:TOTal:ENERGY:MEAN?</code>
Examples	<code>POWER:SWLOSS:TOTAL:ENERGY:MEAN?</code> might return <code>:POWER:SWLOSS:TOTAL:ENERGY:MEAN 1</code> indicating that the mean conduction energy switching loss calculation is set to 1 J.

POWer:SWLoss:TOTal:ENERGY:MIN? (Query Only)

Returns the minimum total energy for the switching loss calculation.

Conditions	This command requires a DPO4PWR application module.
Group	Power
Syntax	<code>Power:SWLoss:TOTal:ENERGY:MIN?</code>
Examples	<code>POWER:SWLOSS:TOTAL:ENERGY:MIN?</code> might return <code>:POWER:SWLOSS:TOTAL:ENERGY:MIN 1</code> indicating that the minimum conduction energy switching loss calculation is set to 1 J.

POWer:SWLoss:TOTal:POWer:MAX? (Query Only)

Returns the maximum total power loss.

Conditions This command requires a DPO4PWR application module.

Group Power

Syntax `POWer:SWLoss:TOTal:POWer:MAX?`

Examples `POWer:SWLOSS:TOTAL:POWer:MAX?` might return
`:POWer:SWLOSS:TOTAL:POWer:MAX 1` indicating that the maximum total
 power switching loss calculation is set to 1 W.

POWer:SWLoss:TOTal:POWer:MEAN? (Query Only)

Returns the mean total power loss.

Conditions This command requires a DPO4PWR application module.

Group Power

Syntax `POWer:SWLoss:TOTal:POWer:MEAN?`

Examples `POWer:SWLOSS:TOTAL:POWer:MEAN?` might return
`:POWer:SWLOSS:TOTAL:POWer:MEAN 1` indicating that the mean total power
 switching loss calculation is set to 1 W.

POWer:SWLoss:TOTal:POWer:MIN? (Query Only)

Returns the minimum total power loss.

Conditions This command requires a DPO4PWR application module.

Group Power

Syntax `POWer:SWLoss:TOTal:POWer:MIN?`

Examples `POWER:SWLOSS:TOTAL:POWER:MIN?` might return
`:POWER:SWLOSS:TOTAL:POWER:MIN 1` indicating that the minimum total
power switching loss calculation is set to 1 W.

POWer:SWLoss:VCEsat

Sets or returns VCESAT value for use in switching loss calculations when the conduction calculation method is VCESAT.

Conditions This command requires a DPO4PWR application module.

Group Power

Syntax `POWer:SWLoss:VCEsat <NR3>`
`POWer:SWLoss:VCEsat?`

Arguments <NR3> is the VCEsat switching loss calculation.

Examples `POWER:SWLOSS:VCEsat 5` sets the VCEsat value to 5.0000.
`POWER:SWLOSS:VCEsat ?` might return `:POWER:SWLOSS:VCEsat 2.0000`
indicating that the VCEsat value is set to 2.0000.

POWer:TYPE

Sets or returns the power application measurement type.

Conditions This command requires a DPO4PWR application module.

Group Power

Syntax `POWer:TYPE {NONE|QUALity|SWITCHingloss|SOA
|HARMonics|RIPple|MODULationanalysis|DESKew}`
`POWer:TYPE?`

Arguments **NONE** Use to set the measurement type to None.
QUALity Use the power quality functions to obtain measurements and statistics about the general power quality in your test circuit

SWITCHingloss Use the switching loss functions to obtain the power loss and energy loss across the acquired waveform, including turn-on loss, turn-off loss, conduction loss, and total loss. Typically, use these functions to characterize losses in power supply switching devices, as they switch on and off.

SOA Use the safe operating functions to obtain an X-Y display of the switching device-under-test's voltage and current. Also use them to perform a mask test of the X-Y signal relative to the graphical X-Y description of the device specification table. The safe operating area is typically the voltage and current values that a semiconductor can operate without damaging itself.

HARMonics Use the harmonics functions to obtain the frequency spectrum of the source waveform and associated measurement values. Harmonic measurements can help one perform in-depth troubleshooting of power quality problems.

RIPPlE Use the ripple functions to obtain measurements and statistics for the AC components of the acquired waveform. Ripples are often found on top of a large DC signal.

MODULationanalysis Use the modulation functions to obtain a trend plot of a measurement value across the acquired waveform. This is useful for showing the variations in the modulated switching signal.

DESKew Run the deskew procedure to match the delays through the probes. Different probes introduce different delays between the probe tip and the oscilloscope. Many oscilloscope users do not have to worry about this because they use the same type of probe on all channels. Power measurement users, however, frequently use both a voltage probe and a current probe. A current probe typically has a larger delay than a voltage probe, so setting deskew values becomes important.

Examples **POWER:TYPE HARMonics** sets the measurement type to Harmonics.
POWER:TYPE? might return **POWER:TYPE NON** indicating that no measurement type is set.

POWer:VOLTAGESource

Sets or returns the voltage source for the power application.

Conditions This command requires a DPO4PWR application module.

Group Power

Syntax **Power:VOLTAGESource** {CH1|CH2|CH3|CH4|REF1|REF2|REF3|REF4}
Power:VOLTAGESource?

Arguments CH1–CH4 or REF1–REF4 sets channel or ref as the voltage source.

Examples POWER:VOLTAGESOURCE CH1 sets the voltage source as CH1.
 POWER:VOLTAGESOURCE? might return POWER:VOLTAGESOURCE CH1 indicating that the voltage source is set to CH1.

*PSC

Sets or returns the power-on status flag that controls the automatic power-on handling of the DESER, SRER, and ESER registers. When *PSC is true, the DESER register is set to 255 and the SRER and ESER registers are set to 0 at power-on. When *PSC is false, the current values in the DESER, SRER, and ESER registers are preserved in nonvolatile memory when power is shut off and are restored at power-on.

Group Status and Error

Syntax *PSC {OFF|ON|NR1>}
 *PSC?

Related Commands [DESE](#), [*ESE](#), [FACTory](#), [*RST](#), [*SRE](#)

Arguments OFF sets the power-on status clear flag to false.
 ON sets the power-on status clear flag to true.
 <NR1> = 0 sets the power-on status clear flag to false. This disables the power-on clear allowing the oscilloscope to possibly assert SRQ after power-on; any other value sets the power-on status clear flag to true, enabling the power-on status clear preventing any SRQ assertion after power on.

Examples *PSC 0 sets the power-on status clear flag to false.
 *PSC? might return 1 to indicate that the power-on status clear flag is set to true.

*PUD

Sets or returns a string of Protected User Data. This data is protected by the PASSWord command. You can modify it only by first entering the correct password. This password is not necessary to query the data.

Group	Status and Error
Syntax	*PUD {<Block> <QString>} *PUD?
Related Commands	PASSWord
Arguments	<Block> is a block containing up to 300 ASCII characters. <QString> is a string containing up to 300 ASCII characters.
Examples	*PUD #229This oscilloscope belongs to me stores the string "This oscilloscope belongs to me" in the user protected data area. *PUD? might return #221PROPERTY OF COMPANY X

*RCL (No Query Form)

This command restores the state of the oscilloscope from a copy of the settings stored in memory (The settings are stored using the *SAV command).

Group	Save and Recall
Syntax	*RCL <NR1>
Related Commands	FACtory , *LRN? , RECALL:SETUp , *RST , *SAV , SAVe:SETUp
Arguments	<NR1> is a value in the range from 1 to 10, which specifies a saved setup storage location.
Examples	*RCL 3 restores the oscilloscope from a copy of the settings stored in memory location 3.

RECALL:SETUp (No Query Form)

Restores the state of the oscilloscope from a copy of the settings stored in memory. The settings are stored using the *SAV command.

Group	Save and Recall
--------------	-----------------

Syntax	RECALL:SETUP {FACTORY <NR1> <file path>}
Related Commands	FACTORY , *RCL , *RST , *SAV , SAVE:SETUP , FILESystem:CWD
Arguments	<p>FACTORY restores the factory setup.</p> <p><NR1> is a value in the range from 1 to 10, which specifies a saved setup storage location.</p> <p><file path> specifies a location for an oscilloscope setup file. <file path> is a quoted string that defines the file name and path. Input the file path using the form <drive>:/<dir>/<filename>.<extension> and one or <dir>s are optional. If you do not specify them, the oscilloscope will read the file from the default directory (see FILESystem:CWD). <filename> stands for a filename; the use of wildcard characters in filenames is not supported. Filename extensions are not required, but highly recommended.</p>
Examples	<p>RECALL:SETUP FACTORY recalls (and makes current) the oscilloscope setup to its factory defaults.</p> <p>RECALL:SETUP 2 recalls the oscilloscope setup from setup storage location 2.</p> <p>RECALL:SETUP "TEK00000.SET" recalls the setup from the file TEK00000.SET in the current working directory.</p>

RECALL:WAVEform (No Query Form)

This command (no query form) recalls a stored waveform to a reference location.

Group	Save and Recall
Syntax	RECALL:WAVEform <file path>,REF<x>
Related Commands	SAVE:WAVEform , FILESystem:CWD , FILESystem?
Arguments	<p>REF<x> specifies a location in internal reference memory. Reference memory location values range from 1 through 4.</p> <p><file path> specifies a location for an oscilloscope setup file. <file path> is a quoted string that defines the file name and path. Input the file path using the form <drive>:/<dir>/<filename>.<extension> and one or <dir>s are optional. If you do not specify them, the oscilloscope will read the file from the default directory (see FILESystem:CWD). <filename> stands for a filename; the</p>

use of wildcard characters in filenames is not supported. Filename extensions are not required, but highly recommended.

Examples `RECALL:WAVEFORM "TEK00000.ISF"`, REF1 recalls the waveform stored in the file named TEK00000.ISF from the current directory for waveforms to the reference location 1.

REF<x>? (Query Only)

Returns reference waveform data for the channel specified by <x>, where x is the reference channel number.

Group Vertical

Syntax `REF<x>?`

REF<x>:DATE? (Query Only)

Returns the date that reference waveform data for channel <x> was copied into the internal reference memory, where x is the reference channel number.

Group Vertical

Syntax `REF<x>:DATE?`

REF<x>:HORIZONTAL:DELAY:TIME

Sets or returns the horizontal delay time for reference waveform <x>, where x is the reference channel number. The delay time is expressed in seconds and is limited to ± 5 times the reference horizontal scale.

Group Vertical

Syntax `REF<x>:HORIZONTAL:DELAY:TIME <NR3>`
`REF<x>:HORIZONTAL:DELAY:TIME?`

Arguments <NR3> is the delay time in seconds.

Examples `REF2:HORIZONTAL:DELAY:TIME 4.0E-6` sets the horizontal delay time for the REF2 waveform to 4 μ s.

REF<x>:HORizontal:SCAle

Sets or returns the horizontal scale for reference waveform <x>, where x is the reference channel number.

Group Vertical

Syntax `REF<x>:HORizontal:SCAle <NR3>`
`REF<x>:HORizontal:SCAle?`

Arguments <NR3> is the horizontal scale in seconds.

Examples `REF1:HORIZONTAL:SCALE?` might return `REF1:HORIZONTAL:SCALE 4.0E-4`.

REF<x>:LABel

Sets or returns the reference waveform label for the channel specified by <x>, where x is the reference channel number.

Group Vertical

Syntax `REF<x>:LABel <Qstring>`
`REF<x>:LABel?`

Arguments <Qstring> is an alphanumeric string of text, enclosed in quotes, that contains the label text for the reference channel <x> waveform. The text string is limited to 30 characters.

Examples `REF4:LABEL?` might return `:REF4:LABEL "Clk wfm 2"`.

REF<x>:TIMe? (Query Only)

Returns the time that reference waveform data was copied into the internal reference memory for reference channel <x>, where x is the reference channel number.

Group	Vertical
Syntax	REF<x>:TIME?
Examples	REF4:TIME? might return "16:54:05".

REF<x>:VERTical:POSition

Sets or returns the vertical position of the reference waveform specified by <x>, where x is the reference channel number.

Increasing the position value of a waveform causes the waveform to move up, and decreasing the position value causes the waveform to move down. Position adjusts only the display position of a waveform. The position value determines the vertical graticule coordinate at which signal values are displayed. For example, if the position for Reference 3 is set to 2.0, the signal represented by that reference will be displayed at 2.0 divisions above the center of the screen.

Group	Vertical
Syntax	REF<x>:VERTical:POSition <NR3> REF<x>:VERTical:POSition?
Related Commands	CH<x>:POSition , MATH[1]:VERTical:POSition
Arguments	<NR3> is the desired position, in divisions from the center horizontal graticule. The range is from -5.0 to 5.0 divisions.
Examples	REF2:VERTICAL:POSITION 1.3E+00 positions the Reference 2 input signal 1.3 divisions above the center horizontal graticule. REF1:VERTICAL:POSITION? might return :REF1:VERTICAL:POSITION -1.3000E+00 indicating that the current position of Reference 1 is 1.3 divisions below the center horizontal graticule.

REF<x>:VERTical:SCAle

Sets or returns the vertical scale for the reference waveform specified by <x>, where x is the reference channel number.

Each waveform has a vertical scale parameter. For a signal with constant amplitude, increasing the Scale causes the waveform to be displayed smaller. Decreasing the scale causes the waveform to be displayed larger.

Scale affects all waveforms, but affects reference and math waveforms differently from channel waveforms:

- For reference and math waveforms, this setting controls the display only, graphically scaling these waveforms and having no affect on the acquisition hardware.
- For channel waveforms, this setting controls the vertical size of the acquisition window as well as the display scale. The range and resolution of scale values depends on the probe attached and any other external factors you have specified.

Group Vertical

Syntax REF<X>:VERTICAL:SCALE <NR3>
REF<X>:VERTICAL:SCALE?

Related Commands [CH<x>:SCALE](#), [MATH\[1\]:VERTICAL:SCALE](#)

Arguments <NR3> is the gain in user units-per-division.

Examples REF4:VERTICAL:SCALE 100E-03 sets the Reference 4 scale to 100 mV per division.

REF4:VERTICAL:SCALE? might return :REF2:VERTICAL:SCALE 1.0000e+00 indicating that the current vertical scale setting for Reference 2 is 1 V per division.

REM (No Query Form)

Embeds a comment within programs as a means of internally documenting the programs. The oscilloscope ignores these embedded comment lines.

Group Miscellaneous

Syntax REM <QString>

Arguments <QString> is a string that can contain a maximum of 80 characters.

Examples REM "This is a comment" is a comment string that the oscilloscope will ignore.

*RST (No Query Form)

Resets the oscilloscope to the factory default settings. The *RST command does not alter the following:

- Calibration data that affect device specifications
- The Output Queue
- The Service Request Enable Register setting
- The Power-on status clear flag setting
- Alias definitions
- Stored settings
- The *PUD? Response
- Any of the values associated with the DATA command.
- Oscilloscope password

Group Status and Error

Syntax *RST

Related Commands [FACtory](#), [RECALL:SETUp](#), [SAVe:SETUp](#), [*PSC](#), [*RCL](#), [*SAV](#)

Arguments None

Examples *RST resets the oscilloscope settings to factory defaults.

*SAV (No Query Form)

Stores the state of the oscilloscope to a specified memory location. You can use the *RCL command to restore the oscilloscope to this saved state at a later time.

Group Save and Recall

Syntax *SAV <NR1>

Related Commands *RCL, RECALL:SETUP, SAVE:SETUP

Arguments <NR1> specifies a location in which to save the state of the oscilloscope. Location values range from 1 through 10. Using an out-of-range location value causes an execution error. Any settings that have been stored previously at this location will be overwritten.

Examples *SAV 2 saves the current oscilloscope state in memory location 2.

SAVE:ASSIGN:TYPE

Sets or returns the assignment of the data to be saved when the front-panel Save button is pressed.

Group Save and Recall

Syntax SAVE:ASSIGN:TYPE {IMAGE|WAVEform|SETUP}
SAVE:ASSIGN:TYPE?

Arguments IMAGE assigns the Save button to save screen images.
WAVEform assigns the Save button to save waveforms.
SETUP assigns the Save button to save setups.

SAVE:EVENTtable:BUS<x> (No Query Form)

Saves the data from bus<x> to a specified file and location; where x is the bus number

Group Save and Recall

Syntax SAVE:EVENTtable:BUS<x> <file path>

Arguments <file path> is a quoted string that defines the file name and path location where the event table will be stored.

NOTE. <filename> stands for a filename of up to 125 characters, followed by a period (".") and the three-character extension. Waveform files should have a .csv extension for comma-separated spreadsheet format files.

SAVe:IMAGe (No Query Form)

Saves a capture of the screen image into the specified file. Supported image formats are PNG, Windows Bitmap, and TIFF. If an extension for a supported file type is added to the file name, then the corresponding format will be used. If no supported extension is added to the file, the format to use will be determined by the value obtained from the :SAVe:IMAGe:FILEFormat? query.

Group Save and Recall

Syntax SAvE:IMAGe <file path>

Related Commands [SAVe:ASSIgn:TYPe](#)

Arguments <file path> is a filename, including path, where the image will be saved. If you do not specify a directory, the oscilloscope will store the file in the current working directory. File name extensions are not required but are highly recommended. The path “D:/foo.png” will save an image to the file “foo.png” on the Compact Flash card.

SAVe:IMAGe:FILEFormat

Sets or returns the file format to use for saving screen images.

NOTE. *The file format is not automatically determined by the file name extension. You need to choose a file format with an extension which is consistent with the selected file format.*

Group Save and Recall

Syntax SAvE:IMAGe:FILEFormat {PNG|BMP|TIFF}
SAVe:IMAGe:FILEFormat?

Related Commands [SAVe:IMAGe](#)

Arguments PNG saves the file in Portable Network Graphics format.
BMP saves the file in Microsoft Windows bitmap format.
TIFF saves the file in Tagged Image File Format.

SAVe:IMAGe:INKSaver

Sets or returns the current ink saver setting for the [SAVe:IMAGe](#) command. If set to “ON” or “1”, images will be generated using the ink saver palette. If set to “OFF” or “0”, images will be generated using the standard palette.

Group Save and Recall

Syntax SAvE:IMAGe:INKSaver {OFF|ON|0|1}
SAVe:IMAGe:INKSaver?

Related Commands [SAVe:IMAGe](#)

Arguments OFF or 0 generates images from the Inksaver palette.
ON or 1 generates images using the Standard palette.

SAVe:IMAGe:LAYout

Sets or returns the layout to use for saved screen images.

Group Save and Recall

Syntax SAvE:IMAGe:LAYout {LANDscape|PORTRait}
SAVe:IMAGe:LAYout?

Arguments LANDscape specifies that screen images are saved in landscape format.
PORTRait specifies that screen images are saved in portrait format.

SAVe:SETUp (No Query Form)

Stores the state of the oscilloscope to a specified memory location. You can later use the *RCL command to restore the oscilloscope to this saved state.

Group Save and Recall

Syntax SAvE:SETUp {<file path>|<NR1>}

Related Commands [*RCL](#), [RECALL:SETUp](#), [*SAV](#)

Arguments <file path> is the target location for storing the setup file. <file path> is a quoted string that defines the file name and path. Input the file path using the form <drive>:<dir>/<filename>. <extension> and one or <dir>s are optional. If you do not specify them, the oscilloscope will store the file in the current working directory. <filename> stands for a filename. (Use of wildcard characters in filenames is not supported.) Filename extensions are not required but are highly recommended. For setups, use the extension ".SET".

<NR1> specifies a location for saving the current front-panel setup. The front-panel setup value ranges from 1 to 10. Using an out-of-range value causes an execution error. Any settings that have been stored previously at this location will be overwritten.

Examples SAVE:SETUP 5 saves the current oscilloscope setup in memory location 5.

SAVE:SETUP "TEK00000.SET" saves the current oscilloscope setup in the file TEK00000.SET in the current working directory.

SAVe:WAVEform (No Query Form)

This command saves a specified waveform or all displayed waveforms (excluding serial bus waveforms). Only individual analog waveforms (CH<x>, MATH and REF<x>) can be saved to reference memory locations.

You can save all displayed waveforms, excluding serial bus waveforms, to a single CSV file when the SAVE:WAVEFORM:FILEFORMAT is set to SPREADSHEET.

You can save all displayed waveforms, excluding serial bus waveforms and digital channels (MSO models) to consecutive ISF (internal save format) files when the SAVE:WAVEFORM:FILEFORMAT is set to INTERNAL.

Group Save and Recall

Syntax SAvE:WAVEform [<wfm>,{REF<x>}] | [<wfm>, <Qstring>] | [ALL, <Qstring>]

Related Commands [RECALL:WAVEform](#), [SAVe:WAVEform:FILEFormat](#)

Arguments <wfm>, <REF<x>> saves the specified waveform to the specified reference memory location. <wfm> can be any live analog channel (where <x> is the channel number), the MATH1 waveform, or another reference waveform (such as REF1).

<wfm>, <QString> saves the specified waveform to the file specified in the quoted string argument. Any live channel (such as CH1), the MATH1 waveform, any reference waveform, and, for MSO models, digital waveforms (such as D0) can be saved to a file. Digital waveforms can only be saved when the `SAVE:WAVEFORM:FILEFORMAT` is set to `SPREADSHEET`.

`ALL`, <QString> saves all displayed waveforms, excluding serial bus waveforms, to a single CSV file specified by the quoted string argument when the `SAVE:WAVEFORM:FILEFORMAT` is set to `SPREADSHEET`, or saves all displayed waveforms, excluding serial bus waveforms and digital channel waveforms (MSO models), to individual ISF (internal save format) files with a file name prefix specified by the argument with an underscore (_) and the waveform ID (such as CH1, REF1, MATH) appended to the file name(s).

Examples

`SAVE:WAVEFORM CH1,REF1` saves the CH1 waveform in reference memory location 1.

`:SAVE:WAVEFORM:FILEFORMAT SPREADSHEET; :SAVE:WAVEFORM ALL, "D:/test_folder/test1_all.csv"` saves all displayed waveforms (excluding serial bus waveforms) to `D:/test_folder/test1_all.csv`.

`:SAVE:WAVEFORM:FILEFORMAT INTERNAL; :SAVE:WAVEFORM ALL, "D:/test_folder/test1"` saves all displayed waveforms (excluding serial bus waveforms and digital channels for MSO models) to individual files named `D:/test_folder/test1_<wfm>.isf` (for example `test1_CH1.isf`).

SAVE:WAVEform:FILEFormat

Specifies or returns the file format for saved waveforms. Waveform header and timing information is included in the resulting file of non-internal formats. The oscilloscope saves DPO waveforms as a 500 x 200 matrix, with the first row corresponding to the most recently acquired data. The values specified by [DATA:START](#) and [DATA:STOP](#) determine the range of waveform data to output. In the event that `DATA:STOP` value is greater than the current record length, the current record length determines the last output value.

Group Save and Recall

Syntax `SAVE:WAVEform:FILEFormat {INTERNAL|SPREADSheet}`
`SAVE:WAVEform:FILEFormat?`

Related Commands [CURVe](#), [DATA](#), [DATA:START](#), [DATA:STOP](#), [SAVE:WAVEform](#), [WFMinpre:NR_Pt](#), [WFMOuppre:NR_Pt?](#)

Arguments	<p>INTERNAL specifies that waveforms are saved in an internal format, using a .isf filename extension. These files can be recalled as reference waveforms. When this argument is specified, the settings specified via the DATA:START and DATA:STOP commands have no meaning as the entire waveform is saved.</p> <p>SPREADSheet specifies that waveform data is saved in a format that contains comma delimited values. These waveform data files are named using the .csv filename extension. Saving waveforms in CSV format enables spreadsheet programs to import the data.</p>
Examples	<p>SAVE:WAVEFORM:FILEFORMAT INTERNAL specifies that the internal file format is the format used for saving waveforms.</p> <p>SAVE:WAVEFORM:FILEFORMAT? might return :SAVE:WAVEFORM:FILEFORMAT INTERNAL indicating that waveforms are saved using the internal format.</p>

SAVe:WAVEform:GATIng

Specifies whether save waveform operations should save the entire waveform (NONE) or a specified portion of the waveform.

Group	Save and Recall
Syntax	<p>SAVe:WAVEform:GATIng {NONE CURSors SCREEN}</p> <p>SAVe:WAVEform:GATIng?</p>
Arguments	<p>CURSors turns on cursors and the gates are the waveform record points at the cursor positions.</p> <p>NONE saves the entire waveform.</p> <p>SCREEN, if zoom is on, the gates are the start and end waveform record points of the zoom (upper) graticule, otherwise the gates are the start and end waveform record points of the main graticule.</p>
Examples	<p>SAVE:WAVEFORM:GATING CURSors specifies that, when the waveform gating is set to cursors, save waveform operations should save the waveform points between the cursors. If cursors are turned off, waveform gating automatically reverts to NONE.</p>

SEARCH? (Query Only)

Returns all search-related settings.

Group	Search
Syntax	SEARCH?
Examples	<p>SEARCH? might return:</p> <pre>:SEARCH:SEARCH1:TRIG:A:BUS:B1:SPI:COND SS;DAT:MOSI:VAL "XXXXXXXX";:SEARCH:SEARCH1:TRIG:A:BUS:B1:SPI: DAT:MISO:VAL "XXXXXXXX";:SEARCH:SEARCH1:TRIG:A:BUS:B1:SPI:DAT:SI Z 1;:SEARCH:SEARCH1:TRIG:A:BUS:B1:I2C:COND STAR;DAT:VAL "XXXXXXXX";SIZ 1;DIR NOCARE;:SEARCH:SEARCH1:TRIG:A:BUS:B1:I2C:ADDR:MOD ADDR7;TYP USER;VAL "XXXXXXXX";:SEARCH:SEARCH1:TRIG:A:BUS:B1:CAN:COND SOF;FRAME DATA;DAT:VAL "XXXXXXXX";SIZ 1;D IR NOCARE;QUAL EQU;:SEARCH:SEARCH1:TRIG:A:BUS:B1:CAN:ID:MOD ST;VAL "XXXXXXXXXXXX";:SEARCH:SEARCH1:TRI G:A:BUS:B2:SPI:COND SS;DAT:MOSI:VAL "XXXXXXXX";:SEARCH:SEARCH1:TRIG:A:BUS:B2:SPI:DAT:MISO:VAL "XXXXX XXX";:SEARCH:SEARCH1:TRIG:A:BUS:B2:SPI:DAT:SI Z 1;:SEARCH:SEARCH1:TRIG:A:BUS:B2:I2C:COND STAR;DAT:VAL "XXXXXXXX";SIZ 1;DIR NOCARE;:SEARCH:SEARCH1:TRIG:A:BUS:B2:I2C:ADDR:MOD ADDR7;TYP USER;VAL "XXXXXXXX" ;:SEARCH:SEARCH1:TRIG:A:BUS:B2:CAN:COND SOF;FRAME DATA;DAT:VAL "XXXXXXXX";SIZ 1;DIR NOCARE;QUAL EQU; :SEARCH:SEARCH1:TRIG:A:BUS:B2:CAN:ID:MOD ST;VAL "XXXXXXXXXXXX";:SEARCH:SEARCH1:TRIG:A:BUS:SOU B1;:SEA RCH:SEARCH1:TRIG:A:TYP EDG;LEV 0.0000;LEV:CH1 0.0000;CH2 0.0000;CH3 0.0000;CH4 0.0000;MATH 0.0000;RE F1 0.0000;REF2 0.0000;REF3 0.0000;REF4 0.0000;:SEARCH:SEARCH1:TRIG:A:UPP:CH1 800.0000E-3;CH2 800.000 0E-3;CH3 800.0000E-3;CH4 800.0000E-3;MATH 800.0000E-3;REF1 800.0000E-3;REF2 800.0000E-3;REF3 800.000 0E-3;REF4 800.0000E-3;:SEARCH:SEARCH1:TRIG:A:LOW:CH1 0.0000;CH2 0.0000;CH3 0.0000;CH4 0.0000;MATH 0. 0000;REF1 0.0000;REF2 0.0000;REF3 0.0000;REF4 0.0000;:SEARCH:SEARCH1:TRIG:A:EDGE:SOU CH1;SLO RIS;:SE ARCH:SEARCH1:TRIG:A:LOGI:FUNC AND;THR:CH1 0.0000;CH2 0.0000;CH3 0.0000;CH4 0.0000;MATH 0.0000;REF1 0 .0000;REF2 0.0000;REF3 0.0000;REF4 0.0000;:SEARCH:SEARCH1:TRIG:A:LOGI:INP:CH1 X;CH2 X;CH3 X;CH4 X;MA TH X;REF1 X;REF2 X;REF3 X;REF4 X;CLOC:SOU NONE;EDGE RIS;:SEARCH:SEARCH1:TRIG:A:LOGI:PAT:INP:CH1 X;CH 2 X;CH3 X;CH4 X;MATH X;REF1 X;REF2 X;REF3 X;REF4 X;:SEARCH:SEARCH1:TRIG:A:LOGI:PAT:WHE TRU;WHE:LESSL 8.0000E-9;L 8.0000E-9;:SEARCH:SEARCH1:TRIG:A:PULSEW:SOU CH1;POL POS;WHE LESS;WID 8.0000E-9;:SEA</pre>

```
RCH:SEARCH1:TRIG:A:RUNT:SOU CH1;POL POS;WHE OCCURS;WID
8.0000E-9;:SEARCH:SEARCH1:TRIG:A:TRAN:SOU CH1 ;POL POS;WHE
SLOW;DELT 8.0000E-9;:SEARCH:SEARCH1:TRIG:A:SETH:CLOC:SOU
CH1;EDGE RIS;THR 0.0000;:SEARC H:SEARCH1:TRIG:A:SETH:DAT:SOU
CH2;THR 0.0000;:SEARCH:SEARCH1:TRIG:A:SETH:HOLDT
8.0000E-9;SETT 8.0000 E-9;:SEARCH:SEARCH1:STATE 0
```

SEARCH:SEARCH<x>:COPy (No Query Form)

Copies the search criteria to the trigger, or the trigger criteria to a search. <x> is the search number.

Group	Search
Syntax	SEARCH:SEARCH<x>:COPy {SEARCHtotrigger TRIGgertosearch}
Arguments	SEARCHtotrigger copies the search criteria to the trigger TRIGgertosearch copies the trigger criteria to the search

SEARCH:SEARCH<x>:STATE

Sets the search state to on or off. <x> is the search number, which is always 1. The query form returns the search state.

Group	Search
Syntax	SEARCH:SEARCH<x>:STATE {<NR1> OFF ON} SEARCH:SEARCH<x>:STATE?
Arguments	OFF or <NR1> = 0 sets the search state to off. ON or <NR1> ≠ 0 sets the search state to on.

SEARCH:SEARCH<x>:TOTAL? (Query Only)

Returns the total number of matches for the search. The total number of matches may be than the number of marks placed. <x> is the search number, which is always 1.

Group Search

Syntax SEARCH:SEARCH<x>:TOTAL?

Returns <NR1> is the total number of matches.

SEARCH:SEARCH<x>:TRIGger:A:BUS? (Query Only)

Returns the serial search type. <x> is the search number, which is always 1. There are four serial buses, B1 through B4.

Conditions This command requires a DPO4AUTO or DPO4EMBD application module.

Group Search

Syntax SEARCH:SEARCH<x>:TRIGger:A:BUS?

Returns I2C specifies the Inter-IC bus.
SPI specifies the Serial Peripheral Interface bus.
CAN specifies the Controller Area Network bus.

Examples SEARCH:SEARCH1:TRIGGER:A:BUS? might return
SEARCH:SEARCH1:TRIGGER:A:BUS:B1:SPI:CONDITION
SS;;SEARCH:SEARCH1:TRIGGER:A:BUS:B2:SPI:CONDITION
SS;;SEARCH:SEARCH1:TRIGGER:A:BUS:B3:SPI:CONDITION
SS;;SEARCH:SEARCH1:TRIGGER:A:BUS:B4:SPI:CONDITION
SS;;SEARCH:SEARCH1:TRIGGER:A:BUS:B1:SPI:DATA:MOSI:VALUE "XX".

SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:AUDio:CONDition

Sets or returns the search trigger condition for the AUDIO bus: Start of Frame or Data.

Conditions This command requires DPO4AUDIO application module.

Group Search

Syntax SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:AUDio:CONDition
{SOF|DATA}
SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:AUDio:CONDition?

Arguments SOF enables triggering at the start of frame for the audio bus.
DATA enables triggering on matching data for the audio bus.

SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:AUDio:DATA:HIVALue

Sets or returns the search trigger data upper word for the AUDIO bus.

Conditions This command requires DPO4AUDIO application module.

Group Search

Syntax SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:AUDio:DATA:HIVALue
<String>
SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:AUDio:DATA:HIVALue?

Arguments <String> specifies the search data trigger data upper word.

SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:AUDio:DATA:OFFSet

Sets or returns the search trigger data offset for the AUDIO bus.

Conditions This command requires DPO4AUDIO application module.

Group Search

Syntax SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:AUDio:DATA:OFFSet <NR1>
SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:AUDio:DATA:OFFSet?

Arguments <NR1> is the search trigger data offset value.

SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:AUDio:DATA:QUALifier

Sets or returns the search trigger data qualifier for the AUDIO bus.

Conditions	This command requires DPO4AUDIO application module.
Group	Search
Syntax	SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:AUDio:DATA:QUALifier {LESSThan MOREThan EQUal UNEQUal LESSEQUal MOREEQUal INrange OUTrang SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:AUDio:DATA:QUALifier?
Arguments	LESSThan sets the search trigger data qualifier to less than. MOREThan sets the search trigger data qualifier to greater than. EQUal sets the search trigger data qualifier to equal. UNEQUal sets the search trigger data qualifier to not equal. LESSEQUal sets the search trigger data qualifier to less than or equal. MOREEQUal sets the search trigger data qualifier to greater than or equal. INrange sets the search trigger data qualifier to in range. OUTrange sets the search trigger data qualifier to out of range.

SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:AUDio:DATA:VALue

Sets or returns the search trigger data lower word for the AUDIO bus.

Conditions	This command requires DPO4AUDIO application module.
Group	Search
Syntax	SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:AUDio:DATA:VALue <String> SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:AUDio:DATA:VALue?
Arguments	<String> is the search trigger data lower word.

SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:AUDio:DATA:WORD

Sets or returns the search trigger data alignment for the AUDIO bus.

Conditions	This command requires DPO4AUDIO application module.
-------------------	---

Group	Search
Syntax	<pre>SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:AUDio:DATA:WORD {EITHer LEFt RIGht} SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:AUDio:DATA:WORD?</pre>
Arguments	<p>EITHer aligns the search trigger data to either left or right.</p> <p>LEFt aligns the search trigger data to the left.</p> <p>RIGht aligns the search trigger data to the right.</p>

SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:CAN:CONDition

Sets or returns the search condition for a CAN trigger search. SEARCH<x> is the search number and B<x> is the bus number.

Conditions	This command requires a DPO4AUTO application module.
Group	Search
Syntax	<pre>SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:CAN:CONDition {SOF FRAMetype IDentifier DATA IDANDDATA EOF ACKMISS} SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:CAN:CONDition?</pre>
Arguments	<p>SOF specifies a search based on the start of frame.</p> <p>FRAMetype specifies a search based on the frame type.</p> <p>IDentifier specifies a search based on the frame identifier.</p> <p>DATA specifies a search based on the frame data.</p> <p>IDANDDATA specifies a search based on the frame identifier and data.</p> <p>EOF specifies a search base on the end of frame.</p> <p>ACKMISS specifies a search based on the missing ACK field.</p>

SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:CAN:DATA:DIRection

Sets or returns the CAN search to be valid for Read, Write, or Either condition if the criteria is IDentifier. SEARCH<x> is the search number and B<x> is the bus number. This only applies if the search condition is IDentifier.

Conditions	This command requires a DPO4AUTO application module.
Group	Search
Syntax	<pre>SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:CAN:DATA:DIRection {READ WRITE NOCARE} SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:CAN:DATA:DIRection?</pre>
Related Commands	SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:CAN:CONDition
Arguments	<p>READ specifies the read condition.</p> <p>WRITE specifies the write condition.</p> <p>NOCARE specifies either a read or write condition.</p>

SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:CAN:DATA:QUALifier

Sets or returns the CAN data qualifier for a search. **SEARCH<x>** is the search number and **B<x>** is the bus number. This only applies if the trigger condition is IDANDDATA or DATA.

Conditions	This command requires a DPO4AUTO application module.
Group	Search
Syntax	<pre>SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:CAN:DATA:QUALifier {LESSThan Than EQUa1 UNEQUa1 LESSEQUa1 EQUa1} SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:CAN:DATA:QUALifier?</pre>
Related Commands	SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:CAN:DATA:VALue
Arguments	<p>LESSThan searches for bus data less than the value specified by SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:CAN:DATA:VALue.</p> <p>Than searches for bus data greater than the value specified by SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:CAN:DATA:VALue.</p> <p>EQUa1 searches for bus data equal to the value specified by SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:CAN:DATA:VALue.</p>

UNEQUAL searches for bus data not equal to the value specified by [SEARCH:SEARCH<x>:TRIGGER:A:BUS:B<x>:CAN:DATA:VALUE](#).

LESSEQUAL searches for bus data less equal to the value specified by [SEARCH:SEARCH<x>:TRIGGER:A:BUS:B<x>:CAN:DATA:VALUE](#).

EQUAL searches for bus data equal to the value specified by [SEARCH:SEARCH<x>:TRIGGER:A:BUS:B<x>:CAN:DATA:VALUE](#).

SEARCH:SEARCH<x>:TRIGGER:A:BUS:B<x>:CAN:DATA:SIZE

Sets or returns the length of the data string in bytes to be used for a CAN search if the search condition is DATA or IDANDDATA. SEARCH<x> is the search number and B<x> is the bus number.

Conditions	This command requires a DPO4AUTO application module.
Group	Search
Syntax	SEARCH:SEARCH<x>:TRIGGER:A:BUS:B<x>:CAN:DATA:SIZE <NR1> SEARCH:SEARCH<x>:TRIGGER:A:BUS:B<x>:CAN:DATA:SIZE?
Arguments	<NR1> is the data string length in bytes.

SEARCH:SEARCH<x>:TRIGGER:A:BUS:B<x>:CAN:DATA:VALUE

Sets or returns the binary data string to be used for a CAN search if the search condition is ID or IDANDDATA. SEARCH<x> is the search number and B<x> is the bus number.

Conditions	This command requires a DPO4AUTO application module.
Group	Search
Syntax	SEARCH:SEARCH<x>:TRIGGER:A:BUS:B<x>:CAN:DATA:VALUE <bin> SEARCH:SEARCH<x>:TRIGGER:A:BUS:B<x>:CAN:DATA:VALUE?
Related Commands	SEARCH:SEARCH<x>:TRIGGER:A:BUS:B<x>:CAN:DATA:QUALIFIER
Arguments	<bin> is the data in binary format.

SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:CAN:FRAMEtype

Sets or returns the CAN Frame Type to be used if the trigger search condition is Frame Type. SEARCH<x> is the search number and B<x> is the bus number.

Conditions	This command requires a DPO4AUTO application module.
Group	Search
Syntax	<pre>SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:CAN:FRAMEtype {DATA REMOte ERRor OVERLoad} SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:CAN:FRAMEtype?</pre>
Arguments	<p>DATA specifies a data frame.</p> <p>REMOte specifies a remote frame.</p> <p>ERRor specifies an error frame.</p> <p>OVERLoad specifies an overload frame.</p>

SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:CAN{:IDentifier|:ADDRESS}:MODE

Sets or returns the CAN addressing mode for a trigger search to a standard or extended format. SEARCH<x> is the search number and B<x> is the bus number.

Conditions	This command requires a DPO4AUTO application module.
Group	Search
Syntax	<pre>SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:CAN{:IDentifier : ADDRESS}:MODE {STandard EXTended} SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:CAN{:IDentifier : ADDRESS}:MODE?</pre>
Arguments	<p>STandard specifies an 11-bit identifier field.</p> <p>EXTended specifies a 29-bit identifier field.</p>

SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:CAN{:IDentifier|:ADDReSS}:VALue

Sets or returns the binary address string to be used for a CAN trigger search if the search condition is ID or IDANDDATA. SEARCH<x> is the search number and B<x> is the bus number.

Conditions This command requires a DPO4AUTO application module.

Group Search

Syntax SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:CAN{:IDentifier|:ADDReSS}:VALue <bin>
SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:CAN{:IDentifier|:ADDReSS}:VALue?

Arguments <bin> is the address in binary format.

SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:FLEXray:CONDition

Sets or returns the trigger condition for FLEXRAY.

Group Search

Syntax SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:FLEXray:CONDition {SOF|FRAMETypeId|CYCLEcount|HEADER|DATA|IDANDDATA|EOF|ERROR}
SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:FLEXray:CONDition?

Arguments SOF sets the FLEXRAY trigger condition to start of frame.
FRAMETypeId sets the FLEXRAY trigger condition to a frame type id.
CYCLEcount sets the FLEXRAY trigger condition to cycle count.
HEADER sets the FLEXRAY trigger condition to header.
DATA sets the FLEXRAY trigger condition to data.
IDANDDATA sets the FLEXRAY trigger condition to ID and data.
EOF sets the FLEXRAY trigger condition to EOF.
ERROR sets the FLEXRAY trigger condition to an error.

Examples `SEARCH:SEARCH1:TRIGGER:A:BUS:B1:FLEXRAY:CONDITION ERROR` sets the FLEXRAY condition to ERROR

`SEARCH:SEARCH1:TRIGGER:A:BUS:B1:FLEXRAY:CONDITION?` might return `SEARCH:SEARCH1:TRIGGER:A:BUS:B1:FLEXRAY:CONDITION SOF` indicating the FLEXRAY condition is start of frame.

SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:FLEXray:CYCLEcount:HIVALue

Sets or returns the binary data string to be used for FLEXRAY cycle count high value.

Group Search

Syntax `SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:FLEXray:CYCLEcount:HIVALue <QString>`
`SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:FLEXray:CYCLEcount:HIVALue?`

Arguments <QString> is a quoted string that is the cycle count high value.

Examples `SEARCH:SEARCH1:TRIGGER:A:BUS:B1:FLEXRAY:CYCLECOUNT:HIVALUE "110010"` sets the cycle count high value to 110010.

`SEARCH:SEARCH1:TRIGGER:A:BUS:B1:FLEXRAY:CYCLECOUNT:HIVALUE?` might return `SEARCH:SEARCH1:TRIGGER:A:BUS:B1:FLEXRAY:CYCLECOUNT:HIVALUE "XXXXXX"` indicating the cycle count high value is set to don't cares.

SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:FLEXray:CYCLEcount:QUALifier

Sets or returns the FLEXRAY cycle count qualifier.

Group Search

Syntax `SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:FLEXray:CYCLEcount:QUALifier {LESSThan|MOREThan|EQUa1|UNEQUa1|LESSEQUa1|MOREEQUa1|INrange|OUTrang`
`SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:FLEXray:CYCLEcount:QUALifier?`

Arguments	<p>LESSThan sets the cycle count qualifier to less than.</p> <p>MOREThan sets the cycle count qualifier to greater than.</p> <p>EQUal sets the cycle count qualifier to equal.</p> <p>UNEQual sets the cycle count qualifier to not equal.</p> <p>LESSEQual sets the cycle count qualifier to less than or equal.</p> <p>MOREEQual sets the cycle count qualifier to greater than or equal.</p> <p>INrange sets the cycle count qualifier to in range.</p> <p>OUTrange sets the cycle count qualifier to out of range.</p>
Examples	<p>SEARCH:SEARCH1:TRIGGER:A:BUS:B1:FLEXRAY:CYCLECOUNT:QUALIFIER LESSTHANsets the cycle count qualifier to LESSTHAN.</p> <p>SEARCH:SEARCH1:TRIGGER:A:BUS:B1:FLEXRAY:CYCLECOUNT:QUALIFIER? might return SEARCH:SEARCH1:TRIGGER:A:BUS:B1:FLEXRAY:CYCLECOUNT:QUALIFIER EQUAL indicating the cycle count qualifier is set to EQUAL.</p>

SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:FLEXray:CYCLEcount:VALue

Sets or returns the binary data string to be used for FLEXRAY cycle count low value.

Group	Search
Syntax	<p>SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:FLEXray:CYCLEcount:VALue <QString></p> <p>SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:FLEXray:CYCLEcount: VALue?</p>
Arguments	<QString> is a quoted string that is the binary cycle count value.
Examples	<p>SEARCH:SEARCH1:TRIGGER:A:BUS:B1:FLEXRAY:CYCLECOUNT:VALUE "110010" sets the cycle count value to 110010.</p> <p>SEARCH:SEARCH1:TRIGGER:A:BUS:B1:FLEXRAY:CYCLECOUNT:VALUE? might return SEARCH:SEARCH1:TRIGGER:A:BUS:B1:FLEXRAY:CYCLECOUNT:VALUE "XXXXXX" indicating the cycle count value is don't cares.</p>

SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:FLEXray:DATa:HIVALue

Sets or returns the high binary data string used for FLEXRAY trigger if trigger condition is ID or IDANDDATA.

Group	Search
Syntax	<pre>SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:FLEXray:DATa:HIVALue <QString> SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:FLEXray:DATa:HIVALue?</pre>
Arguments	<QString> is a quoted string that is the binary high value.
Examples	<pre>SEARCH:SEARCH1:TRIGGER:A:BUS:B1:FLEXRAY:DATA:HIVALUE "11001010" sets the high value 11001010. SEARCH:SEARCH1:TRIGGER:A:BUS:B1:FLEXRAY:DATA:HIVALUE? might return SEARCH:SEARCH1:TRIGGER:A:BUS:B1:FLEXRAY:DATA:HIVALUE "XXXXXXXX" indicating the high value is don't cares.</pre>

SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:FLEXray:DATa:OFFSet

Sets or returns the offset of the data string in bytes to be used for FLEXRAY trigger.

Group	Search
Syntax	<pre>SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:FLEXray:DATa:OFFSet <NR1> SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:FLEXray:DATa:OFFSet?</pre>
Arguments	<NR1> is the FLEXRAY data offset in bytes. A byte offset of -1 signifies don't care, and no byte offset is used. The instrument will trigger or match any byte value that fits.
Examples	<pre>SEARCH:SEARCH1:TRIGGER:A:BUS:B1:FLEXRAY:DATA:OFFSET 10 sets the FLEXRAY data offset to 10 bytes. SEARCH:SEARCH1:TRIGGER:A:BUS:B1:FLEXRAY:DATA:OFFSET? might return SEARCH:SEARCH1:TRIGGER:A:BUS:B1:FLEXRAY:DATA:OFFSET 0 indicating the offset is set to 0 bytes.</pre>

SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:FLEXray:DATa:QUALifier

Sets or returns the FLEXRAY data qualifier.

Group	Search
Syntax	<pre>SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:FLEXray:DATa:QUALifier {LESSThan MOREThan EQUa1 UNEQUa1 LESSEQUa1 MOREEQUa1 INrange OUTrange} SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:FLEXray:DATa:QUALifier?</pre>
Arguments	<p>LESSThan sets the FLEXRAY data qualifier to less than.</p> <p>MOREThan sets the FLEXRAY data qualifier to greater than.</p> <p>EQUa1 sets the FLEXRAY data qualifier to equal.</p> <p>UNEQUa1 sets the FLEXRAY data qualifier to not equal.</p> <p>LESSEQUa1 sets the FLEXRAY data qualifier to less than or equal.</p> <p>MOREEQUa1 sets the FLEXRAY data qualifier to greater than or equal.</p> <p>INrange sets the FLEXRAY data qualifier to in range.</p> <p>OUTrange sets the FLEXRAY data qualifier to out of range.</p>
Examples	<pre>SEARCH:SEARCH1:TRIGGER:A:BUS:B1:FLEXRAY:DATA:QUALIFIER LESSTHAN sets the data qualifier to LESSTHAN.</pre> <p>SEARCH:SEARCH1:TRIGGER:A:BUS:B1:FLEXRAY:DATA:QUALIFIER? might return SEARCH:SEARCH1:TRIGGER:A:BUS:B1:FLEXRAY:DATA:QUALIFIER EQUAL indicating the data qualifier is EQUAL.</p>

SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:FLEXray:DATa:SIZE

Sets or returns the length of the data string in bytes to be used for FLEXRAY trigger.

Group	Search
Syntax	<pre>SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:FLEXray:DATa:SIZE <NR1> SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:FLEXray:DATa:SIZE?</pre>
Arguments	<NR1> is the length of the data string in bytes. Length range is 1 to 8.

Examples `SEARCH:SEARCH1:TRIGGER:A:BUS:B1:FLEXRAY:DATA:SIZE 8` sets the data size to 8 bytes.

`SEARCH:SEARCH1:TRIGGER:A:BUS:B1:FLEXRAY:DATA:SIZE?` might return `SEARCH:SEARCH1:TRIGGER:A:BUS:B1:FLEXRAY:DATA:SIZE 1` indicating the data size is 1 byte.

SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:FLEXray:DATA:VALue

Sets or returns the low binary data string used for FLEXRAY trigger condition if trigger condition is ID or IDANDDATA.

Group Search

Syntax `SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:FLEXray:DATA:VALue <QString>`
`SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:FLEXray:DATA:VALue?`

Arguments `<QString>` is a quoted string that is the low binary data string to be used for FLEXRAY trigger condition if trigger condition is ID or IDANDDATA.

Examples `SEARCH:SEARCH1:TRIGGER:A:BUS:B1:FLEXRAY:DATA:VALUE "11001010"` sets the binary data string to 11001010.

`SEARCH:SEARCH1:TRIGGER:A:BUS:B1:FLEXRAY:DATA:VALUE?` might return `SEARCH:SEARCH1:TRIGGER:A:BUS:B1:FLEXRAY:DATA:VALUE "XXXXXXXX"` indicates the binary data string is don't cares.

SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:FLEXray:EOFTYPE

Sets or returns the end of frame type used for FLEXRAY trigger.

Group Search

Syntax `SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:FLEXray:EOFTYPE {STATic|DYNAMic|ANY}`
`SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:FLEXray:EOFTYPE?`

Arguments `STATic` sets the FLEXRAY end of frame type to STATIC.

`DYNAMic` sets the FLEXRAY end of frame type to DYNAMIC.

`ANY` sets the FLEXRAY end of frame type to ANY type.

Examples `SEARCH:SEARCH1:TRIGGER:A:BUS:B1:FLEXRAY:EOFTYPE ANY` sets the FLEXRAY end of frame type to any type.

`SEARCH:SEARCH1:TRIGGER:A:BUS:B1:FLEXRAY:EOFTYPE?` might return `SEARCH:SEARCH1:TRIGGER:A:BUS:B1:FLEXRAY:EOFTYPE STATIC` indicating the FLEXRAY end of frame type is static.

SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:FLEXray:ERRTYPE

Sets or returns the error type be used for FLEXRAY trigger.

Group Search

Syntax `SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:FLEXray:ERRTYPE {CRCHeader|CRCTrailer|SYNCFrame|STARTupnosync|NULLFRStatic|NULLFRDynamic}`
`SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:FLEXray:ERRTYPE?`

Arguments `CRCHeader` sets the FLEXRAY error type to CRC header.
`CRCTrailer` sets the FLEXRAY error type to CRC trailer.
`SYNCFrame` sets the FLEXRAY error type to SYNC frame.
`STARTupnosync` sets the FLEXRAY error type to start up with no sync.
`NULLFRStatic` sets the FLEXRAY error type to null frame static.
`NULLFRDynamic` sets the FLEXRAY error type to null frame dynamic.

Examples `SEARCH:SEARCH1:TRIGGER:A:BUS:B1:FLEXRAY:ERRTYPE SYNCFRAME` sets the FLEXRAY error type SYNCFRAME

`SEARCH:SEARCH1:TRIGGER:A:BUS:B1:FLEXRAY:ERRTYPE?` might return `SEARCH:SEARCH1:TRIGGER:A:BUS:B1:FLEXRAY:ERRTYPE CRCHEADER` indicating the FLEXRAY error type is CRCHEADER

SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:FLEXray:FRAMEID:HIVALue

Sets or returns the binary data string used for FLEXRAY frame ID high value.

Group Search

Syntax `SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:FLEXray:FRAMEID:HIVALue <QString>`

SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:FLEXray:FRAMEID:HIVALue?

Arguments <QString> is a quoted string representing the binary data string used for FLEXRAY frame ID high value.

Examples SEARCH:SEARCH1:TRIGGER:A:BUS:B1:FLEXRAY:FRAMEID:HIVALUE
"00101100101" sets the frame id high value to 00101100101.

SEARCH:SEARCH1:TRIGGER:A:BUS:B1:FLEXRAY:FRAMEID:HIVALUE?
might return
SEARCH:SEARCH1:TRIGGER:A:BUS:B1:FLEXRAY:FRAMEID:HIVALUE
"XXXXXXXXXXXX" indicating the frame id high value is don't cares.

SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:FLEXray:FRAMEID:QUALifier

Sets or returns the FLEXRAY frame ID qualifier.

Group Search

Syntax SEARCH:SEARCH<x>:TRIGger:A:BUS:
B<x>:FLEXray:FRAMEID:QUALifier
{LESSThan|MOREThan|EQua|UNEQua|LESSEQua|MOREEQua|
INrange|OUTrange}
SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:FLEXray:FRAMEID:
QUALifier?

Arguments LESSThan sets the frame id qualifier to LESSThan
MOREThan sets the frame id qualifier to MOREThan
Qua sets the frame id qualifier to QUa
UNEQua sets the frame id qualifier to UNEQual
LESSEQua sets the frame id qualifier to LESSEQual
MOREEQua sets the frame id qualifier to MOREEQual
INrange sets the frame id qualifier to INrange
OUTrange sets the frame id qualifier to OUTrange

Examples SEARCH:SEARCH1:TRIGGER:A:BUS:B1:FLEXRAY:FRAMEID:QUALIFIER
OUTRANGE sets the frame id qualifier to out of range.

SEARCH:SEARCH1:TRIGGER:A:BUS:B1:FLEXRAY:FRAMEID:QUALIFIER?
might return

SEARCH:SEARCH1:TRIGGER:A:BUS:B1:FLEXRAY:FRAMEID:QUALIFIER
EQUAL indicating the frame id qualifier is EQUAL.

SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:FLEXray:FRAMEID:VALue

Sets or returns the binary data string to be used for FLEXRAY frame ID low value.

Group	Search
Syntax	SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:FLEXray:FRAMEID:VALue <QString> SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:FLEXray:FRAMEID:VALue?
Arguments	<QString> is a quoted string representing the binary data string used for FLEXRAY frame ID low value.
Examples	SEARCH:SEARCH1:TRIGGER:A:BUS:B1:FLEXRAY:FRAMEID:VALUE "11001101010" sets the value of the frame id is 11001101010. SEARCH:SEARCH1:TRIGGER:A:BUS:B1:FLEXRAY:FRAMEID:VALUE? might return SEARCH:SEARCH1:TRIGGER:A:BUS:B1:FLEXRAY:FRAMEID:VALUE "10110010101" indicating the value of the frame id is 10110010101.

SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:FLEXray:FRAMEType

Sets or returns the frame type for FLEXRAY.

Group	Search
Syntax	SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:FLEXray:FRAMEType {NORMa1 PAYLoad NULL SYNC STARTUp} SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:FLEXray:FRAMEType?
Arguments	NORMa1 sets the FLEXRAY frame type to normal. PAYLoad sets the FLEXRAY frame type to payload. NULL sets the FLEXRAY frame type to NULL. SYNC sets the FLEXRAY frame type to sync. STARTUp sets the FLEXRAY frame type to start up.

Examples `SEARCH:SEARCH1:TRIGGER:A:BUS:B1:FLEXRAY:FRAMETYPE STARTUP`
sets the flexray frame type to startup.

`SEARCH:SEARCH1:TRIGGER:A:BUS:B1:FLEXRAY:FRAMETYPE?` might return
`SEARCH:SEARCH1:TRIGGER:A:BUS:B1:FLEXRAY:FRAMETYPE NORMAL`
indicating the flexray frame type is normal.

SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:FLEXray:HEADER:CRC

Sets or returns the CRC portion of the binary header string to be used for FLEXRAY trigger.

Group Search

Syntax `SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:FLEXray:HEADER:CRC`
`<QString>`
`SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:FLEXray:HEADER:CRC?`

Arguments `<QString>` is a quoted string representing the CRC portion of the binary header string used for FLEXRAY trigger.

Examples `SEARCH:SEARCH1:TRIGGER:A:BUS:B1:FLEXRAY:HEADER:CRC`
"00110010101" sets the CRC protion of the binary header string 00110010101.

`SEARCH:SEARCH1:TRIGGER:A:BUS:B1:FLEXRAY:HEADER:CRC?` might
return `SEARCH:SEARCH1:TRIGGER:A:BUS:B1:FLEXRAY:HEADER:CRC`
"XXXXXXXXXXXX" indicating the CRC protion of the binary header string is don't
cares.

SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:FLEXray:HEADER:CYCLEcount

Sets or returns the cycle count portion of the binary header string used for FLEXRAY trigger.

Group Search

Syntax `SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:FLEXray:HEADER:`
`CYCLEcount <QString>`
`SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:FLEXray:HEADER:`
`CYCLEcount?`

Arguments <QString> is a quoted string representing the cycle count portion of the binary header String used for FLEXRAY trigger.

Examples SEARCH:SEARCH1:TRIGGER:A:BUS:B1:FLEXRAY:HEADER:CYCLECOUNT
 "001101" sets the cycle count to 001101.

SEARCH:SEARCH1:TRIGGER:A:BUS:B1:FLEXRAY:HEADER:CYCLECOUNT?
 might return
 SEARCH:SEARCH1:TRIGGER:A:BUS:B1:FLEXRAY:HEADER:CYCLECOUNT
 "XXXXXX" indicating the cycle count is don't cares.

SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:FLEXray:HEADER:FRAMEID

Sets or returns the frame id portion of the binary header string used for FLEXRAY trigger.

Group Search

Syntax SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:FLEXray:HEADER:FRAMEID
 <QString>
 SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:FLEXray:HEADER:FRAMEID?

Arguments <QString> is a quoted string representing the frame id portion of the binary header string used for FLEXRAY trigger.

Examples SEARCH:SEARCH1:TRIGGER:A:BUS:B1:FLEXRAY:HEADER:FRAMEID
 "10110010101" sets the frame id portion of the binary header string to
 10110010101.

SEARCH:SEARCH1:TRIGGER:A:BUS:B1:FLEXRAY:HEADER:FRAMEID? might
 return SEARCH:SEARCH1:TRIGGER:A:BUS:B1:FLEXRAY:HEADER:FRAMEID
 "XXXXXXXXXXXX" indicating the frame id portion of the binary header string is
 don't cares.

SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:FLEXray:HEADER:INDBits

Sets or returns the indicator bits portion of the binary header string used for FLEXRAY trigger.

Group Search

Syntax	<pre>SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:FLEXray:HEADER:INDBits <QString> SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:FLEXray:HEADER:INDBits?</pre>
Arguments	<QString> is a quoted string representing the indicator bits portion of the binary header string used for FLEXRAY trigger.
Examples	<pre>SEARCH:SEARCH1:TRIGGER:A:BUS:B1:FLEXRAY:HEADER:INDBITS "10100" sets the indicator bits of the header to 10100.</pre> <pre>SEARCH:SEARCH1:TRIGGER:A:BUS:B1:FLEXRAY:HEADER:INDBITS? might return SEARCH:SEARCH1:TRIGGER:A:BUS:B1:FLEXRAY:HEADER:INDBITS "XXXXXX" indicating the indicator bits of the header are don't cares.</pre>

SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:FLEXray:HEADER:PAYLength

Sets or returns the payload length portion of the binary header string used for FLEXRAY trigger.

Group	Search
Syntax	<pre>SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:FLEXray:HEADER:PAYLength <QString> SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:FLEXray:HEADER: PAYLength?</pre>
Arguments	<QString> is a quoted string representing the payload length portion of the binary header string used for FLEXRAY trigger.
Examples	<pre>SEARCH:SEARCH1:TRIGGER:A:BUS:B1:FLEXRAY:HEADER:PAYLENGTH "1001101" sets the payload length portion of the binary header string to 1001101.</pre> <pre>SEARCH:SEARCH1:TRIGGER:A:BUS:B1:FLEXRAY:HEADER:PAYLENGTH? might return SEARCH:SEARCH1:TRIGGER:A:BUS:B1:FLEXRAY:HEADER:PAYLENGTH "XXXXXXXX" indicating the payload length portion of the binary header string is don't cares.</pre>

SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:I2C:ADDReSS:MODe

Sets or returns the I2C address mode to 7 or 10-Bit. SEARCH<x> is the search number and B<x> is the bus number.

Conditions	This command requires a DPO4EMBD application module.
Group	Search
Syntax	SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:I2C:ADDRess:MODE {ADDR7 ADDR10} SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:I2C:ADDRess:MODE?
Arguments	ADDR7 specifies 7-bit addresses. ADDR10 specifies 10-bit addresses.

SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:I2C:ADDRess:TYPE

Sets or returns the I2C address type. SEARCH<x> is the search number and B<x> is the bus number.

Conditions	This command requires a DPO4EMBD application module.
Group	Search
Syntax	SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:I2C:ADDRess:TYPE {GENERALcall STARTbyte HSMODE EEPROM USER} SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:I2C:ADDRess:TYPE?
Arguments	GENERALcall specifies the GENERALcall address type. STARTbyte specifies the STARTbyte address type. HSMODE specifies the HSMODE address type. EEPROM specifies the EEPROM address type. USER specifies a user address.

SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:I2C:ADDRess:VALUE

Sets or returns the binary address string to be used for an I2C trigger search if the search condition is ADDR or ADDRANDDATA. SEARCH<x> is the search number and B<x> is the bus number.

Conditions	This command requires a DPO4EMBD application module.
-------------------	--

Group	Search
Syntax	SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:I2C:ADDDress:VALue <bin> SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:I2C:ADDDress:VALue?
Arguments	<bin> is the address in binary format.

SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:I2C:CONDition

Sets or returns the search condition for an I2C trigger search. SEARCH<x> is the search number and B<x> is the bus number.

Conditions	This command requires a DPO4EMBD application module.
-------------------	--

Group	Search
Syntax	SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:I2C:CONDition {START STOP REPEATstart ACKMISS ADDRESS DATA ADDRANDDATA} SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:I2C:CONDition?
Arguments	<p>START specifies a search based on a start condition.</p> <p>STOP specifies a search based on a stop condition.</p> <p>REPEATstart specifies a search based on a repeat of start condition.</p> <p>ACKMISS specifies a search based on a missing acknowledgement condition.</p> <p>ADDRESS specifies a search based on an address.</p> <p>DATA specifies a search based on a data condition.</p> <p>ADDRANDDATA specifies a search based on an address and data condition.</p>

SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:I2C:DATA:DIRection

Sets or returns the I2C search condition to be valid on a Read, Write, or Either condition. SEARCH<x> is the search number and B<x> is the bus number.

Conditions	This command requires a DPO4EMBD application module.
-------------------	--

Group	Search
--------------	--------

Syntax SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:I2C:DATA:DIRection
{READ|WRITE|NOCARE}
SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:I2C:DATA:DIRection?

Arguments READ specifies a read condition.
WRITE specifies a write condition.
NOCARE specifies either a read or write condition.

SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:I2C:DATA:SIZE

Sets or returns the length of the data string in bytes to be used for an I2C trigger search if the search condition is DATA or ADDRANDDATA. SEARCH<x> is the search number and B<x> is the bus number.

Conditions This command requires a DPO4EMBD application module.

Group Search

Syntax SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:I2C:DATA:SIZE <NR1>
SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:I2C:DATA:SIZE?

Arguments <NR1> is the data string length in bytes.

SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:I2C:DATA:VALue

Sets or returns the binary data string to be used for an I2C trigger search if the search condition is DATA or ADDRANDDATA. SEARCH<x> is the search number and B<x> is the bus number.

Conditions This command requires a DPO4EMBD application module.

Group Search

Syntax SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:I2C:DATA:VALue <bin>
SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:I2C:DATA:VALue?

Arguments <bin> is the data in binary format.

SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:LIN:CONDition

Sets or returns the search condition for a LIN search.

Group	Search
Syntax	<pre>SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:LIN:CONDition {SYNCFieLd IDentifier DATA IDANDDATA WAKEup SLEEP ERROR} SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:LIN:CONDition?</pre>
Arguments	<p>SYNCFieLd specifies to search on the sync field.</p> <p>IDentifier specifies to search on the identifier.</p> <p>DATA specifies to search on the data.</p> <p>IDANDDATA specifies to search on the identifier and the data.</p> <p>WAKEup specifies to search on wake up.</p> <p>SLEEP specifies to search on sleep.</p> <p>ERROR specifies to search on errors.</p>
Examples	<pre>SEARCH:SEARCH1:TRIGGER:A:BUS:B1:LIN:CONDITION? might return SEARCH:SEARCH1:TRIGGER:A:BUS:B1:LIN:CONDITION SYNCFIELD indicating a search on the sync field.</pre>

SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:LIN:DATA:HIVALue

Sets or returns the binary data string to be used for LIN searches if the search condition is ID or IDANDDATA.

Group	Search
Syntax	<pre>SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:LIN:DATA:HIVALue <QString> SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:LIN:DATA:HIVALue?</pre>
Arguments	<p><QString> is a quoted string of 1s, 0s, or Xs representing the binary data string to be used for LIN searches if the search condition is ID or IDANDDATA.</p>
Examples	<pre>SEARCH:SEARCH1:TRIGGER:A:BUS:B1:LIN:DATA:HIVALUE? might return SEARCH:SEARCH1:TRIGGER:A:BUS:B1:LIN:DATA:HIVALUE</pre>

"XX
XXXXXXXXXXXX" indicating the high value is don't care.

SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:LIN:DATa:QUALifier

Sets or returns the LIN data qualifier. This only applies if the trigger condition is IDANDDATA or DATA.

Group	Search
Syntax	<pre>SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:LIN:DATA:QUALifier {LESSThan MOREThan EQUa1 UNEQUa1 LESSEQUa1 MOREEQUa1 INrange OUTrange} SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:LIN:DATA:QUALifier?</pre>
Arguments	<p>LESSThan sets the LIN data qualifier to less than.</p> <p>MOREThan sets the LIN data qualifier to greater than.</p> <p>EQUa1 sets the LIN data qualifier to equal.</p> <p>UNEQUa1 sets the LIN data qualifier to not equal.</p> <p>LESSEQUa1 sets the LIN data qualifier to less than or equal.</p> <p>MOREEQUa1 sets the LIN data qualifier to greater than or equal.</p> <p>INrange sets the LIN data qualifier to in range.</p> <p>OUTrange sets the LIN data qualifier to out of range.</p>
Examples	<pre>SEARCH:SEARCH1:TRIGGER:A:BUS:B1:LIN:DATA:QUALIFIER LESSThan sets the data qualifier to lessthan. SEARCH:SEARCH1:TRIGGER:A:BUS:B1:LIN:DATA:QUALIFIER? might return SEARCH:SEARCH1:TRIGGER:A:BUS:B1:LIN:DATA:QUALIFIER EQUAL indicating the data qualifier is equal.</pre>

SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:LIN:DATA:SIZE

Sets or returns the length of the data string in bytes to be used for LIN Search, if search condition is DATA or IDANDDATA.

Group Search

Syntax	SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:LIN:DATA:SIZE <NR1> SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:LIN:DATA:SIZE?
Arguments	<NR1> is the length of the data in bytes.
Examples	SEARCH:SEARCH1:TRIGGER:A:BUS:B1:LIN:DATA:SIZE 8 sets the LIN data size is 8 bytes. SEARCH:SEARCH1:TRIGGER:A:BUS:B1:LIN:DATA:SIZE? might return SEARCH:SEARCH1:TRIGGER:A:BUS:B1:LIN:DATA:SIZE 1 indicating that the LIN data size is 1 byte.

SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:LIN:DATA:VALUE

Sets or returns the binary data string used for a LIN search if the search condition is ID or IDANDDATA.

Group	Search
Syntax	SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:LIN:DATA:VALUE <QString> SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:LIN:DATA:VALUE?
Arguments	<QString> is the binary data string for the search.
Examples	SEARCH:SEARCH1:TRIGGER:A:BUS:B1:LIN:DATA:VALUE? might return SEARCH:SEARCH1:TRIGGER:A:BUS:B1:LIN:DATA:VALUE "XXXXXXXX" indicating the data value is don't care.

SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:LIN:ERRTYPE

Sets or returns the error type used for a LIN Search.

Group	Search
Syntax	SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:LIN:ERRTYPE {SYNC PARity Checksum HEADertime RESptime FRAMetime} SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:LIN:ERRTYPE?

Arguments	<p>SYNC specifies a sync error type.</p> <p>PARity specifies a parity error type.</p> <p>CHECKsum specifies a checksum error type.</p> <p>HEADertime specifies a header time error type.</p> <p>RESPtime specifies a response time error type.</p> <p>RAMetime specifies a frame time error type.</p>
Examples	<p>SEARCH:SEARCH1:TRIGGER:A:BUS:B1:LIN:ERRTYPE? might return SEARCH:SEARCH1:TRIGGER:A:BUS:B1:LIN:ERRTYPE SYNC indicating a SYNC error type.</p>

SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:LIN:IDentifier:VALue

Sets or returns the binary address string used for LIN search if search condition is ID or IDANDDATA.

Group	Search
Syntax	<p>SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:LIN:IDentifier:VALue <QString> SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:LIN:IDentifier:VALue?</p>
Arguments	<QString> is a quoted string specifying the binary address string to be used for LIN search if search condition is ID or IDANDDATA.
Examples	<p>SEARCH:SEARCH1:TRIGGER:A:BUS:B1:LIN:IDENTIFIER:VALUE? might return SEARCH:SEARCH1:TRIGGER:A:BUS:B1:LIN:IDENTIFIER:VALUE "XXXXXX" indicating the binary address is undefined.</p>

SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:PARallel:VALue

Sets or returns the binary data string to be used for a Parallel trigger search.
SEARCH<x> is the search number and B<x> is the bus number.

Group	Search
Syntax	<p>SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:PARallel:VALue <QString> SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:PARallel:VALue?</p>

Arguments <QString> is the binary data string.

SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:RS232C:CONDition

Sets or returns the condition for an RS-232 trigger search. SEARCH<x> is the search number and B<x> is the bus number.

Conditions This command requires a DPO4COMP application module.

Group Search

Syntax SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:RS232C:CONDition
{RXSTArt | RXDATA | RXENDPacket | TXSTArt | TXDATA | TXENDPacket}
SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:RS232C:CONDition?

Arguments RXSTArt specifies a search based on the RX Start Bit.
RXDATA specifies a search based on RX Data.
RXENDPacket specifies a search based on the RX End of Packet condition.
TXSTArt specifies a search base on the TX Start Bit.
TXDATA specifies a search based on TX Data.
TXENDPacket specifies a search based on the TX End of Packet condition.

SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:RS232C:RX:DATa:SIZE

Sets or returns the length of the data string for an RS-232 trigger search if the trigger condition is RX. SEARCH<x> is the search number and B<x> is the bus number.

Conditions This command requires a DPO4COMP application module.

Group Search

Syntax SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:RS232C:RX:DATa:SIZE
SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:RS232C:RX:DATa:SIZE?

Arguments <NR1> is the length of the data string in Bytes.

SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:RS232C:RX:DATA:VALue

Sets or returns the binary data string for an RS-232 trigger search if the condition involves RX. SEARCH<x> is the search number and B<x> is the bus number.

Conditions This command requires a DPO4COMP application module.

Group Search

Syntax SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:RS232C:RX:DATA:VALue
SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:RS232C:RX:DATA:VALue?

SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:RS232C:TX:DATA:SIZE

Sets or returns the length of the data string to be used for an RS-232 trigger search if the Trigger condition is TX. SEARCH<x> is the search number and B<x> is the bus number.

Conditions This command requires a DPO4COMP application module.

Group Search

Syntax SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:RS232C:TX:DATA:SIZE
SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:RS232C:TX:DATA:SIZE?

Arguments <NR1> is the length of the data string in Bytes.

SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:RS232C:TX:DATA:VALue

Sets or returns the binary data string to be used for an RS-232 trigger search if the condition involves RX. SEARCH<x> is the search number and B<x> is the bus number.

Conditions This command requires a DPO4COMP application module.

Group Search

Syntax `SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:RS232C:TX:DATA:VALue`
`SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:RS232C:TX:DATA:VALue?`

SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:SPI:CONDition

Sets or returns the search condition for a SPI trigger search. `SEARCH<x>` is the search number and `B<x>` is the bus number.

Conditions This command requires a DPO4EMBD application module.

Group Search

Syntax `SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:SPI:CONDition`
`{SS|STARTofframe|MISO|MOSI|MISOMOSI}`
`SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:SPI:CONDition?`

Related Commands [BUS:B<x>:SPI:IDLETime](#), [BUS:B<x>:SPI:FRAMING](#)

Arguments `SS` specifies a search based on the Slave Selection condition.

`STARTofframe` is applicable when `BUS:B<x>:SPI:FRAMING` is set to `IDLEtime`. When the trigger condition is set to `STARTofframe`, the instrument triggers on the first SPI clock after an idle time when there are no clocks.

`MISO` specifies a search based on the Master-In Slave-Out condition.

`MOSI` specifies a search based on the Master-Out Slave-In condition.

`MISOMOSI` specifies a search based on the Master-In Slave-Out and Master-Out Slave-In conditions.

SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:SPI:DATA{MISO|IN}:VALue

Sets or returns the binary data string for an SPI trigger search if the search condition is `MISO` or `MISOMOSI`. `SEARCH<x>` is the search number and `B<x>` is the bus number.

Conditions This command requires a DPO4EMBD application module.

Group Search

Syntax SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:SPI:DATA{:MISO|:IN}:
VALUE <bin>
SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:SPI:DATA{:MISO|:IN}:
VALUE?

Arguments <bin> is the data string in binary format.

SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:SPI:DATA{:MOSI|:OUT}:VALUE

Sets or returns the binary data string for an SPI trigger search if search the condition is MOSI, or MISOMOSI. SEARCH<x> is the search number and B<x> is the bus number.

Conditions This command requires a DPO4EMBD application module.

Group Search

Syntax SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:SPI:DATA{:MOSI|:OUT}:
VALUE <bin>
SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:SPI:DATA{:MOSI|:OUT}:
VALUE?

Arguments <bin> is the data in binary format.

SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:SPI:DATA:SIZE

Sets or returns the length of the data string for an SPI trigger search if the search condition is MISO, MOSI, or MISOMOSI. SEARCH<x> is the search number and B<x> is the bus number.

Conditions This command requires a DPO4EMBD application module.

Group Search

Syntax SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:SPI:DATA:SIZE <NR1>
SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:SPI:DATA:SIZE?

Arguments <NR1> is the data string length in bytes.

SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:USB:ADDRess:HIVALue

Sets or returns the binary address string for the upper limit for inside-of-range and outside-of-range qualifiers for the USB search trigger. Use the command [SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:USB:ADDRess:VALue](#) to set the lower limit.

Conditions This command requires the DPO4USB application module.

Group Search

Syntax SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:USB:ADDRess:HIVALue
<QString>
SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:USB:ADDRess:HIVALue?

Related Commands [SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:USB:CONDition](#),
[SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:USB:ADDRess:VALue](#)

Arguments <QString> within the range 0000000 to 1111111 (00 hex to 7F hex).

Examples SEARCH:SEARCH1:TRIGGER:A:BUS:B1:USB:ADDRESS:HIVALUE
"0001000" sets the upper limit to binary 0001000 (08 hex).

SEARCH:SEARCH1:TRIGGER:A:BUS:B1:USB:ADDRESS:HIVALUE? might
return :SEARCH:SEARCH1:TRIGGER:A:BUS:B1:USB:ADDRESS:HIVALUE
"1111111", which indicates that the upper limit is 1111111 (7F hex).

SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:USB:ADDRess:VALue

Sets or returns the binary address string to be used for the USB search trigger.

This command also sets or returns the binary address string for the lower limit for inside-of-range and outside-of-range qualifiers for the USB search trigger.

Conditions This command requires the DPO4USB application module.

Group Search

Syntax SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:USB:ADDRess:VALue
<QString>
SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:USB:ADDRess:VALue?

Related Commands [SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:USB:CONDition](#)

Arguments <QString> within the range 0000000 to 1111111 (00 hex to 7F hex).

Examples SEARCH:SEARCH1:TRIGGER:A:BUS:B1:USB:ADDRESS:VALUE "0001000" sets the binary address to 0001000 (08 hex).

SEARCH:SEARCH1:TRIGGER:A:BUS:B1:USB:ADDRESS:VALUE? might return :SEARCH:SEARCH1:TRIGGER:A:BUS:B1:USB:ADDRESS:VALUE "1000000", which indicates that the binary address is 100000 (40 hex).

SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:USB:CONDition

Sets or returns the trigger condition for the USB search.

Conditions This command requires the DPO4USB application module.

Group Search

Syntax SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:USB:CONDition {SYNC|RESET|SUSPEND|RESUME|EOP|TOKENPacket|DATAPacket|HANDSHAKEPacket|SPECIALPacket|ERROR}
SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:USB:CONDition?

Arguments SYNC indicates triggering on a Sync field of a packet.
RESET sets triggering on a reset condition.
SUSPEND sets triggering on a suspend condition.
RESUME sets triggering on a resume condition.
EOP indicates triggering on an end-of-packet signal.
TOKENPacket indicates triggering on a token packet.
DATAPacket indicates triggering on a data packet
HANDSHAKEPacket indicates triggering on a handshake packet.
SPECIALPacket indicates triggering on a special status packet.
ERROR indicates triggering on an error condition.

Examples SEARCH:SEARCH1:TRIGGER:A:BUS:B1:USB:CONDITION TOKENPACKET sets the trigger condition to be a token packet.

SEARCH:SEARCH1:TRIGGER:A:BUS:B1:USB:CONDITION? might return
:SEARCH:SEARCH1:TRIGGER:A:BUS:B1:USB:CONDITION SYNC, which
indicates that the trigger condition is a sync field.

SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:USB:DATA:HIVALue

Sets or returns the binary data string for the upper limit for inside-of-range and outside-of-range qualifiers for the USB search trigger when trigger search condition is DATAPacket. Use the command [SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:USB:DATA:VALue](#) to set the lower limit.

Conditions	This command requires the DPO4USB application module.
Group	Search
Syntax	SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:USB:DATA:HIVALue <QString> SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:USB:DATA:HIVALue?
Related Commands	SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:USB:CONDition , SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:USB:DATA:VALue
Arguments	<QString> within the range 00000000 to 11111111 (00 hex to FF hex).
Examples	SEARCH:SEARCH1:TRIGGER:A:BUS:B1:USB:DATA:HIVALUE "00001000" sets the upper limit to binary 00001000 (08 hex). SEARCH:SEARCH1:TRIGGER:A:BUS:B1:USB:DATA:HIVALUE? might return :SEARCH:SEARCH1:TRIGGER:A:BUS:B1:USB:DATA:HIVALUE "01111111", which indicates that the upper limit is 01111111 (7F hex).

SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:USB:DATA:OFFSet

Sets or returns the data offset in bytes to trigger the search on. The minimum and default values are 0 and the maximum is 1024.

Conditions	This command requires the DPO4USB application module.
Group	Search

Syntax SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:USB:DATA:OFFSet <NR1>
SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:USB:DATA:OFFSet?

Arguments <NR1> is number in the range 0 to 1024.

Examples SEARCH:SEARCH1:TRIGGER:A:BUS:B1:USB:DATA:OFFSET 36 sets the data offset to 36.

SEARCH:SEARCH1:TRIGGER:A:BUS:B1:USB:DATA:OFFSET? might return
:SEARCH:SEARCH1:TRIGGER:A:BUS:B1:USB:DATA:OFFSET 0, indicating
that the data offset is the default value, 0.

SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:USB:DATA:SIZE

Sets or returns the number of contiguous data bytes to trigger the search on. The minimum and default values are 1 and the maximum value is 16.

Conditions This command requires the DPO4USB application module.

Group Search

Syntax SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:USB:DATA:SIZE <NR1>
SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:USB:DATA:SIZE?

Arguments <NR1> is number in the range 1 to 16.

Examples SEARCH:SEARCH1:TRIGGER:A:BUS:B1:USB:DATA:SIZE 4 sets the oscilloscope to trigger on four contiguous data bytes.

SEARCH:SEARCH1:TRIGGER:A:BUS:B1:USB:DATA:SIZE? might return ,
:SEARCH:SEARCH1:TRIGGER:A:BUS:B1:USB:DATA:SIZE 6 indicating that
the oscilloscope will trigger on 6 contiguous data bytes.

SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:USB:DATA:TYPE

Sets or returns the data type for the search trigger when the search trigger condition is set to DATAPacket.

Conditions This command requires the DPO4USB application module.

Group	Search
Syntax	<pre>SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:USB:DATA:TYPE {ANY DATA0 DATA1} SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:USB:DATA:TYPE?</pre>
Related Commands	SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:USB:CONDition
Arguments	<p>ANY indicates either a DATA0 or DATA1 data packet type.</p> <p>DATA0 indicates a DATA0 data packet type.</p> <p>DATA1 indicates a DATA1 data packet type.</p>
Examples	<p>SEARCH:SEARCH1:TRIGGER:A:BUS:B1:USB:DATA:TYPE DATA0 sets the oscilloscope to trigger on a DATA0 data packet type.</p> <p>SEARCH:SEARCH1:TRIGGER:A:BUS:B1:USB:DATA:TYPE? might return :SEARCH:SEARCH1:TRIGGER:A:BUS:B1:USB:DATA:TYPE DATA1, indicating that the data packet type is set to DATA1.</p>

SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:USB:DATA:VALue

Sets or returns the binary data string to be used for the USB search trigger when the search trigger condition is DATAPacket.

This command also sets or returns the binary data string for the lower limit for inside-of-range and outside-of-range qualifiers for USB search trigger when the trigger search condition is DATAPacket.

Conditions	This command requires the DPO4USB application module.
Group	Search
Syntax	<pre>SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:USB:DATA:VALue <QString> SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:USB:DATA:VALue?</pre>
Related Commands	SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:USB:CONDition
Arguments	<QString> within the range 00000000 to 11111111 (00 hex to FF hex).

Examples `SEARCH:SEARCH1:TRIGGER:A:BUS:B1:USB:DATA:VALUE "00001000"` sets the binary address to 00001000 (08 hex).

`SEARCH:SEARCH1:TRIGGER:A:BUS:B1:USB:DATA:VALUE?` might return `:SEARCH:SEARCH1:TRIGGER:A:BUS:B1:USB:DATA:VALUE "01000000"`, which indicates that the binary address is 01000000 (40 hex).

SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:USB:ENDPoint:VALue

Sets or returns the binary endpoint string to be used for the USB search trigger.

Conditions This command requires the DPO4USB application module.

Group Search

Syntax `SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:USB:ENDPoint:VALue <QString>`
`SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:USB:ENDPoint:VALue?`

Related Commands [`SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:USB:CONDition`](#)

Arguments <QString> within the range 0000 to 1111 (00 hex to 0F hex).

Examples `SEARCH:SEARCH1:TRIGGER:A:BUS:B1:USB:ENDPOINT:VALUE "1000"` sets the binary address to 1000 (08 hex).

`SEARCH:SEARCH1:TRIGGER:A:BUS:B1:USB:ENDPOINT:VALUE?` might return `:SEARCH:SEARCH1:TRIGGER:A:BUS:B1:USB:ENDPOINT:VALUE "1001"`, which indicates that the binary address is 1001 (09 hex).

SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:USB:ERRORTYPE

Sets or returns the error type used when the search trigger condition is set to ERRor.

Conditions This command requires the DPO4USB application module.

Group Search

Syntax SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:USB:ERRORTYPE
{PID|CRC5|CRC16|BITSTUFFing}
SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:USB:ERRORTYPE?

Related Commands [SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:USB:CONDition](#)

Arguments PID indicates the error type is set to packet ID.
CRC5 indicates the error type is set to 5-bit CRC.
CRC16 indicates the error type is set to 16-bit CRC.
BITSTUFFing indicates the error type is set to bit stuffing.

Examples SEARCH:SEARCH1:TRIGGER:A:BUS:B1:USB:CONDITION PID sets the error trigger condition to packet ID.
SEARCH:SEARCH1:TRIGGER:A:BUS:B1:USB:CONDITION? might return :SEARCH:SEARCH1:TRIGGER:A:BUS:B1:USB:CONDITION PID, indicating the error trigger condition is packet ID.

SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:USB:HANDSHAKETYPE

Sets or returns the handshake type for the USB search trigger.

Conditions This command requires the DPO4USB application module.

Group Search

Syntax SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:USB:HANDSHAKETYPE
{ANY|NAK|ACK|STALL}
SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:USB:HANDSHAKETYPE?

Related Commands [SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:USB:CONDition](#)

Arguments ANY indicates the oscilloscope will trigger on any handshake type.
NAK indicates the oscilloscope will trigger when a device cannot send or receive data.
ACK indicates the oscilloscope will trigger when a packet is successfully received.
STALL indicates the oscilloscope will trigger when a device requires intervention from the host.

Examples `SEARCH:SEARCH1:TRIGGER:A:BUS:B1:USB:HANDSHAKETYPE ACK` sets the handshake type to acknowledgement.

`SEARCH:SEARCH1:TRIGGER:A:BUS:B1:USB:HANDSHAKETYPE?` might return `:SEARCH:SEARCH1:TRIGGER:A:BUS:B1:USB:HANDSHAKETYPE STALL`, indicating that the handshake type is set to stall.

SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:USB:QUALifier

Sets or returns the USB search trigger qualifier for address, endpoint and data.

Conditions This command requires the DPO4USB application module.

Group Search

Syntax `SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:USB:QUALifier`
 `{LESSThan|MOREThan|EQUa1|UNEQua1|LESSEQua1`
 `|MOREEQua1|INrange|OUTrange}`
 `SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:USB:QUALifier?`

Related Commands [`SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:USB:CONDition`](#)

Arguments `LESSThan` triggers the search on an value that is less than a set value.

`MOREThan` triggers the search on an value that is greater than a set value.

`EQUa1` triggers the search on an value that is to a set value.

`UNEQua1` triggers the search on an value that is not equal to a set value.

`LESSEQua1` triggers the search on an value that is less than or equal to a set value.

`MOREEQua1` triggers the search on an value that is that is more than or equal to a set value.

`INrange` triggers the search on an value that is within a range set by two values.

`OUTrange` triggers the search on an value that is outside of a range set by two values.

Examples `SEARCH:SEARCH1:TRIGGER:A:BUS:B1:USB:QUALIFIER LESSTHAN` sets the oscilloscope to trigger when an address, data, or endpoint value is less than a set value.

`SEARCH:SEARCH1:TRIGGER:A:BUS:B1:USB:QUALIFIER?` might return `:SEARCH:SEARCH1:TRIGGER:A:BUS:B1:USB:QUALIFIER EQUAL` indicating

that the trigger condition is to trigger when an address, data, or endpoint is equal to a set value.

SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:USB:SOFFRAMENUMber

Sets or returns the binary data string to be used for start of frame number, when the search trigger condition is Token Packet and the token type is Start of Frame.

Conditions This command requires the DPO4USB application module.

Group Search

Syntax SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:USB:SOFFRAMENUMber
<QString>
SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:USB:SOFFRAMENUMber?

Related Commands [SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:USB:CONDition](#)

Arguments <QString> within the range 000 0000 0000 to 111 1111 1111 (000 hex to 7FF hex).

Examples SEARCH:SEARCH1:TRIGGER:A:BUS:B1:USB:SOFFRAMENUMBER
"00000001000" sets the start of frame number to 00000001000 (008 hex).

SEARCH:SEARCH1:TRIGGER:A:BUS:B1:USB:SOFFRAMENUMBER? might
return :SEARCH:SEARCH1:TRIGGER:A:BUS:B1:USB:SOFFRAMENUMBER
"00000001001", which indicates that the start of frame number is 00000001001
(009 hex).

SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:USB:SPECIALType

Sets or returns the packet ID (PID) for the special packet.

Conditions This command requires the DPO4USB application module.

Group Search

Syntax SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:USB:SPECIALType
{ANY|PREAmble|RESERVED}
SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:USB:SPECIALType?

Arguments	<p>ANY indicates any type of special packet.</p> <p>PREAMBLE indicates a preamble special packet.</p> <p>RESERVED indicates a reserved special packet.</p>
Examples	<p>SEARCH:SEARCH1:TRIGGER:A:BUS1:USB:SPECIALTYPE PREAMBLE sets the special packet type to preamble.</p> <p>SEARCH:SEARCH1:TRIGGER:A:BUS1:USB:SPECIALTYPE? might return :SEARCH:SEARCH1:TRIGGER:A:BUS1:USB:SPECIALTYPE PREAMBLE, indicating that the special type is set to preamble.</p>

SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:USB:TOKENType

Sets or returns the token type for the USB search trigger.

Conditions	This command requires the DPO4USB application module.
Group	Search
Syntax	<p>SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:USB:TOKENType {ANY SOF OUT IN SETUP}</p> <p>SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:USB:TOKENType?</p>
Arguments	<p>ANY indicates any of the token types.</p> <p>SOF indicates a SOF (start-of-frame) token type</p> <p>OUT indicates an OUT token type.</p> <p>IN indicates an IN token type.</p> <p>SETUP indicates a SETUP token type.</p>
Examples	<p>SEARCH:SEARCH1:TRIGGER:A:BUS:B1:USB:TOKENType SETUP sets the token type to SETUP.</p> <p>SEARCH:SEARCH1:TRIGGER:A:BUS:B1:USB:TOKENType? might return :SEARCH:SEARCH1:TRIGGER:A:BUS:B1:USB:TOKENType SOF if the token type is SOF.</p>

SEARCH:SEARCH<x>:TRIGger:A:BUS:SOURce

Sets or returns a bus serial search. <x> is the search number.

Conditions This command requires a DPO4AUTO or DPO4EMBD application module.

Group Search

Syntax SEARCH:SEARCH<x>:TRIGger:A:BUS:SOURce {B1|B2|B3|B4}
SEARCH:SEARCH<x>:TRIGger:A:BUS:SOURce?

Arguments B1 specifies the Bus 1 source.

B2 specifies the Bus 2 source.

B3 specifies the Bus 3 source.

B4 specifies the Bus 4 source.

SEARCH:SEARCH<x>:TRIGger:A:EDGE:SLOPe

Sets or returns the slope for an edge trigger search to determine where to place a mark. <x> is the search number.

Group Search

Syntax SEARCH:SEARCH<x>:TRIGger:A:EDGE:SLOPe {RISe|FALL}
SEARCH:SEARCH<x>:TRIGger:A:EDGE:SLOPe?

Arguments RISe specifies a rising edge.

FALL specifies a falling edge.

SEARCH:SEARCH<x>:TRIGger:A:EDGE:SOURce

Sets or returns the source waveform for an edge trigger search to determine where to place a mark. <x> is the search number.

Group Search

Syntax SEARCH:SEARCH<x>:TRIGger:A:EDGE:SOURce
{CH1|CH2|CH3|CH4|MATH}
SEARCH:SEARCH<x>:TRIGger:A:EDGE:SOURce?

- Arguments** CH<x> specifies one input channel as the edge source, where <x> is the channel number.
- MATH specifies the math waveform as the search source.

SEARCH:SEARCH<x>:TRIGger:A:LEVel

Sets or returns the level for an edge trigger search to determine where to place a mark. <x> is the search number.

Group Search

Syntax SEARCH:SEARCH<x>:TRIGger:A:LEVel {<NR3>|TTL}
SEARCH:SEARCH<x>:TRIGger:A:LEVel?

- Arguments** <NR3> specifies the trigger level, in volts.
- TTL specifies a preset TTL high level of 1.4V.

SEARCH:SEARCH<x>:TRIGger:A:LEVel:CH<x>

Sets or returns the level for an edge trigger search to determine where to place a mark. SEARCH<x> is the search number and CH<x> is the channel number. Each channel can have an independent level.

Group Search

Syntax SEARCH:SEARCH<x>:TRIGger:A:LEVel:CH<x> {<NR3>|TTL}
SEARCH:SEARCH<x>:TRIGger:A:LEVel:CH<x>?

- Arguments** <NR3> specifies the trigger level in volts.
- TTL specifies a preset TTL high level of 1.4 V.

SEARCH:SEARCH<x>:TRIGger:A:LEVel:MATH[1]

Sets or returns the math waveform level for an edge trigger search to determine where to place a mark. <x> is the search number. The value of MATH is 1 for all oscilloscopes.

Group Search

Syntax SEARCH:SEARCH<x>:TRIGger:A:LEVel:MATH {TTL}
SEARCH:SEARCH<x>:TRIGger:A:LEVel:MATH?

Arguments TTL specifies a preset TTL high level of 1.4 V.

SEARCH:SEARCH<x>:TRIGger:A:LEVel:REF<x>

Sets or returns the specified reference waveform level for an edge trigger search to determine where to place a mark. SEARCH<x> is the search number and REF<x> is the reference channel number.

Group Search

Syntax SEARCH:SEARCH<x>:TRIGger:A:LEVel:REF<x> {TTL}
SEARCH:SEARCH<x>:TRIGger:A:LEVel:REF<x>?

Arguments TTL specifies a preset TTL high level of 1.4 V.

SEARCH:SEARCH<x>:TRIGger:A:LOGIc:FUNctIon

Sets or returns the logic operator for a logic trigger search to determine where to place a mark. <x> is the search number.

Group Search

Syntax SEARCH:SEARCH<x>:TRIGger:A:LOGIc:FUNctIon {AND|NAND|NOR|OR}
SEARCH:SEARCH<x>:TRIGger:A:LOGIc:FUNctIon?

Arguments AND places a mark if all conditions are true.
NAND places a mark if any of the conditions are false.
NOR places a mark if all conditions are false.
OR places a mark if any of the conditions are true.

SEARCH:SEARCH<x>:TRIGger:A:LOGIc:INPut:CH<x>

Sets or returns the Boolean logic criteria for a logic trigger search to determine where to place a mark. SEARCH<x> is the search number and CH<x> is the channel number.

Group	Search
Syntax	SEARCH:SEARCH<x>:TRIGger:A:LOGic:INPut:CH<x> {HIGH LOW X} SEARCH:SEARCH<x>:TRIGger:A:LOGic:INPut:CH<x>?
Arguments	HIGH specifies the logic high. LOW specifies the logic low. X specifies a "don't care" state.

SEARCH:SEARCH<x>:TRIGger:A:LOGic:INPut:CLOCK:EDGE

Sets or returns whether the clock edge is a rising or falling for a logic search to determine where to place a mark. <x> is the search number.

Group	Search
Syntax	SEARCH:SEARCH<x>:TRIGger:A:LOGic:INPut:CLOCK:EDGE {FALL RISe} SEARCH:SEARCH<x>:TRIGger:A:LOGic:INPut:CLOCK:EDGE?
Arguments	RISe specifies a rising edge. FALL specifies a falling edge.

SEARCH:SEARCH<x>:TRIGger:A:LOGic:INPut:CLOCK:SOUrce

Sets or returns the clock source definition for a logic trigger search. <x> is the search number. If a clock source is defined, then the logic search is determined by the state of the other inputs at the clock transition. If no clock source is defined, then the logic search is determined only by the state of the inputs.

Group	Search
Syntax	SEARCH:SEARCH<x>:TRIGger:A:LOGic:INPut:CLOCK:SOUrce {CH1 CH2 CH3 CH4 MATH REF NONE} SEARCH:SEARCH<x>:TRIGger:A:LOGic:INPut:CLOCK:SOUrce?
Arguments	CH<x> specifies a channel input as the clock source, where <x> = 1, 2, 3, or 4. MATH specifies the math waveform as the clock source.

REF specifies the reference waveform as the clock source.

NONE specifies no clock source.

SEARCH:SEARCH<x>:TRIGger:A:LOGic:INPut:D<x>

Sets or returns the waveform logic criteria for a trigger search. SEARCH<x> is the search number and D<x> is the digital channel number.

Group Search

Syntax SEARCH:SEARCH<x>:TRIGger:A:LOGic:INPut:D<x> {HIGH|LOW|X}
SEARCH:SEARCH<x>:TRIGger:A:LOGic:INPut:D<x>?

Arguments HIGH specifies a high logic level.
LOW specifies a low logic level.
X specifies a “don't care” condition.

SEARCH:SEARCH<x>:TRIGger:A:LOGic:INPut:MATH

Sets or returns the Boolean logic criteria for a logic trigger search to determine where to place a mark. <x> is the search number.

Group Search

Syntax SEARCH:SEARCH<x>:TRIGger:A:LOGic:INPut:MATH {HIGH|LOW|X}
SEARCH:SEARCH<x>:TRIGger:A:LOGic:INPut:MATH?

Arguments HIGH specifies a high logic level.
LOW specifies a low logic level.
X specifies a “don't care” condition.

SEARCH:SEARCH<x>:TRIGger:A:LOGic:INPut:REF<x>

Sets or returns the Boolean logic criteria for a logic trigger search to determine where to place a mark. SEARCH<x> is the search number and REF<x> is the reference channel number.

Group	Search
Syntax	SEARCH:SEARCH<x>:TRIGger:A:LOGic:INPut:REF<x> {HIGH LOW X} SEARCH:SEARCH<x>:TRIGger:A:LOGic:INPut:REF<x>?
Arguments	HIGH specifies a high logic level. LOW specifies a low logic level. X specifies a “don't care” condition.

SEARCH:SEARCH<x>:TRIGger:A:LOGic:PATtern:INPut:CH<x>

Sets or returns the logic criteria for a logic pattern trigger search to determine where to place a mark. SEARCH<x> is the search number and CH<x> is the channel number.

Group	Search
Syntax	SEARCH:SEARCH<x>:TRIGger:A:LOGic:PATtern:INPut:CH<x> {HIGH LOW X} SEARCH:SEARCH<x>:TRIGger:A:LOGic:PATtern:INPut:CH<x>?
Arguments	HIGH specifies a high logic level. LOW specifies a low logic level. X specifies a “don't care” condition.

SEARCH:SEARCH<x>:TRIGger:A:LOGic:PATtern:INPut:D<x>

Sets or returns the logic criteria for a logic pattern search to determine where to place a mark. SEARCH<x> is the search number and D<x> is the digital channel number.

Group	Search
Syntax	SEARCH:SEARCH<x>:TRIGger:A:LOGic:PATtern:INPut:D<x> {HIGH LOW X} SEARCH:SEARCH<x>:TRIGger:A:LOGic:PATtern:INPut:D<x>?

Arguments HIGH specifies a high logic level.
 LOW specifies a low logic level.
 X specifies a “don't care” condition.

SEARCH:SEARCH<x>:TRIGger:A:LOGic:PATtern:INPut:MATH

Sets or returns the Boolean logic criteria for a logic pattern trigger search to determine where to place a mark. <x> is the search number.

Group Search

Syntax SEARCH:SEARCH<x>:TRIGger:A:LOGic:PATtern:INPut:MATH
 {HIGH|LOW|X}
 SEARCH:SEARCH<x>:TRIGger:A:LOGic:PATtern:INPut:MATH?

Arguments HIGH specifies a high logic level.
 LOW specifies a low logic level.
 X specifies a “don't care” condition.

SEARCH:SEARCH<x>:TRIGger:A:LOGic:PATtern:INPut:REF<x>

Sets or returns the Boolean logic criteria for a pattern trigger search to determine where to place a mark. SEARCH<x> is the search number and REF<x> is the reference channel number.

Group Search

Syntax SEARCH:SEARCH<x>:TRIGger:A:LOGic:PATtern:INPut:REF<x>
 {HIGH|LOW|X}
 SEARCH:SEARCH<x>:TRIGger:A:LOGic:PATtern:INPut:REF<x>?

Arguments HIGH specifies a high logic level.
 LOW specifies a low logic level.
 X specifies a “don't care” condition.

SEARCH:SEARCH<x>:TRIGger:A:LOGic:PATtern:WHEn

Sets or returns the condition for generating a logic pattern trigger search to determine where to place a mark. <x> is the search number.

Group	Search
Syntax	<pre>SEARCH:SEARCH<x>:TRIGger:A:LOGic:PATtern:WHEn {TRUE FALSE LESSThan Than EQUAL UNEQUAL} SEARCH:SEARCH<x>:TRIGger:A:LOGic:PATtern:WHEn?</pre>
Arguments	<p>TRUE places a mark when the pattern becomes true.</p> <p>FALSE places a mark when the pattern becomes false.</p> <p>LESSThan places a mark if the specific pattern is true less than the time set by the SEARCH:SEARCH<x>:TRIGger:A:LOGic:PATtern:WHEn:LESSLimit command.</p> <p>Than places a mark if the specific pattern is true longer than the specified time set by the SEARCH:SEARCH<x>:TRIGger:A:LOGic:PATtern:WHEn:MORELimit command.</p> <p>EQUAL places a mark if the specific pattern is true longer than the time set by the SEARCH:SEARCH<x>:TRIGger:A:LOGic:PATtern:WHEn:LESSLimit command, but less than the specified time set by the SEARCH:SEARCH<x>:TRIGger:A:LOGic:PATtern:WHEn:MORELimit command.</p> <p>UNEQUAL places a mark if the specific pattern is true less than the time set by the SEARCH:SEARCH<x>:TRIGger:A:LOGic:PATtern:WHEn:LESSLimit command, or longer than the specified time set by the SEARCH:SEARCH<x>:TRIGger:A:LOGic:PATtern:WHEn:MORELimit command.</p>

SEARCH:SEARCH<x>:TRIGger:A:LOGic:PATtern:WHEn:LESSLimit

Sets or returns the maximum time that the selected pattern may be true and still generate an A logic pattern search to place a mark. <x> is the search number.

Group	Search
Syntax	<pre>SEARCH:SEARCH<x>:TRIGger:A:LOGic:PATtern:WHEn:LESSLimit <NR3> SEARCH:SEARCH<x>:TRIGger:A:LOGic:PATtern:WHEn:LESSLimit?</pre>
Arguments	<NR3> specifies the maximum amount of time to hold the pattern true.

SEARCH:SEARCH<x>:TRIGger:A:LOGic:PATtern:WHEn:MORELimit

Sets or returns the minimum time that the selected pattern may be true and still generate an A logic pattern search to place a mark. <x> is the search number.

Group Search

Syntax SEARCH:SEARCH<x>:TRIGger:A:LOGic:PATtern:WHEn:MORELimit
<NR3>
SEARCH:SEARCH<x>:TRIGger:A:LOGic:PATtern:WHEn:MORELimit?

Arguments <NR3> specifies the minimum amount of time to hold the pattern true.

SEARCH:SEARCH<x>:TRIGger:A:LOGic:THReshold:CH<x>

Sets or returns the channel threshold level for a logic trigger search to determine where to place a mark. SEARCH<x> is the search number and CH<x> is the channel number.

Group Search

Syntax SEARCH:SEARCH<x>:TRIGger:A:LOGic:THReshold:CH<x> {<NR3>|TTL}
SEARCH:SEARCH<x>:TRIGger:A:LOGic:THReshold:CH<x>?

Arguments <NR3> specifies the trigger level, in volts.
TTL specifies a preset TTL high level of 1.4 V.

SEARCH:SEARCH<x>:TRIGger:A:LOGic:THReshold:MATH

Sets or returns the math waveform threshold level for a logic trigger search to determine where to place a mark. <x> is the search number.

Group Search

Syntax SEARCH:SEARCH<x>:TRIGger:A:LOGic:THReshold:MATH {TTL}
SEARCH:SEARCH<x>:TRIGger:A:LOGic:THReshold:MATH?

Arguments TTL specifies a preset TTL high level of 1.4 V.

SEARCH:SEARCH<x>:TRIGger:A:LOGic:THReshold:REF<x>

Sets or returns the reference waveform threshold level for a logic trigger search to determine where to place a mark. SEARCH<x> is the search number and REF<x> is the reference channel number.

Group Search

Syntax SEARCH:SEARCH<x>:TRIGger:A:LOGic:THReshold:REF<x> {TTL}
SEARCH:SEARCH<x>:TRIGger:A:LOGic:THReshold:REF<x>?

Arguments TTL specifies a preset TTL high level of 1.4 V.

SEARCH:SEARCH<x>:TRIGger:A:LOWerthreshold:CH<x>

Sets or returns the channel waveform lower threshold to determine where to place a mark. This setting is applied to all channel searches that use a lower threshold. SEARCH<x> is the search number and CH<x> is the channel number.

Group Search

Syntax SEARCH:SEARCH<x>:TRIGger:A:LOWerthreshold:CH<x> {TTL}
SEARCH:SEARCH<x>:TRIGger:A:LOWerthreshold:CH<x>?

Arguments TTL specifies a preset TTL high level of 1.4 V.

SEARCH:SEARCH<x>:TRIGger:A:LOWerthreshold:MATH

Sets or returns the math waveform lower threshold to determine where to place a mark. This setting is applied to all math searches that use a lower threshold. <x> is the search number.

Group Search

Syntax SEARCH:SEARCH<x>:TRIGger:A:LOWerthreshold:MATH {TTL}
SEARCH:SEARCH<x>:TRIGger:A:LOWerthreshold:MATH?

Arguments TTL specifies a preset TTL high level of 1.4 V.

SEARCH:SEARCH<x>:TRIGger:A:LOWerthreshold:REF<x>

Sets or returns the reference waveform lower threshold to determine where to place a mark. This setting is applied to all reference searches that use a lower threshold.

SEARCH<x> is the search number and REF<x> is the reference channel number.

Group Search

Syntax SEARCH:SEARCH<x>:TRIGger:A:LOWerthreshold:REF<x> {TTL}
SEARCH:SEARCH<x>:TRIGger:A:LOWerthreshold:REF<x>?

Arguments TTL specifies a preset TTL high level of 1.4 V.

SEARCH:SEARCH<x>:TRIGger:A:PULSEWidth:POLarity

Sets or returns the polarity for a pulse trigger search to determine where to place a mark. <x> is the search number.

Group Search

Syntax SEARCH:SEARCH<x>:TRIGger:A:PULSEwidth:POLarity
{NEGative|POSitive}
SEARCH:SEARCH<x>:TRIGger:A:PULSEwidth:POLarity?

Arguments POSITIVE places a mark only when the polarity of the pulse is positive.
NEGative places a mark only when the polarity of the pulse is negative.

SEARCH:SEARCH<x>:TRIGger:A:PULSEWidth:SOURce

Sets or returns the source waveform for a pulse trigger search to determine where to place a mark. <x> is the search number.

Group Search

Syntax SEARCH:SEARCH<x>:TRIGger:A:PULSEwidth:SOURce
{CH1|CH2|CH3|CH4|MATH|REF}
SEARCH:SEARCH<x>:TRIGger:A:PULSEwidth:SOURce?

- Arguments** CH<x> specifies one input channel as the edge source, where <x> = 1, 2, 3 or 4.
- MATH specifies the math waveform as the search source.
- REF specifies the reference waveform as the search source.

SEARCH:SEARCH<x>:TRIGger:A:PULSEWidth:WHEn

Sets or returns the condition for generating a pulse width search to determine where to place a mark. <x> is the search number.

- Group** Search
- Syntax** SEARCH:SEARCH<x>:TRIGger:A:PULSEwidth:WHEn
{LESSthan|than|EQua1|UNEQua1}
SEARCH:SEARCH<x>:TRIGger:A:PULSEwidth:WHEn?
- Arguments** LESSThan places a mark if the pulse width is less than the time set by the [SEARCH:SEARCH<x>:TRIGger:A:PULSEWidth:WIDTh](#) command.
- Than places a mark if the pulse width is true longer than the specified time set by the [SEARCH:SEARCH<x>:TRIGger:A:PULSEWidth:WIDTh](#) command.
- EQua1 places a mark if the pulse width is equal to the time set by the [SEARCH:SEARCH<x>:TRIGger:A:PULSEWidth:WIDTh](#) command within a tolerance of $\pm 5\%$.
- UNEQua1 places a mark if the pulse width is unequal to the time the time set by the [SEARCH:SEARCH<x>:TRIGger:A:PULSEWidth:WIDTh](#) command within a tolerance of $\pm 5\%$.

SEARCH:SEARCH<x>:TRIGger:A:PULSEWidth:WIDTh

Sets or returns the pulse width setting for a pulse width trigger search to determine where to place a mark. <x> is the search number.

- Group** Search
- Syntax** SEARCH:SEARCH<x>:TRIGger:A:PULSEwidth:WIDTh <NR3>
SEARCH:SEARCH<x>:TRIGger:A:PULSEwidth:WIDTh?
- Arguments** <NR3> is the pulse width.

SEARCH:SEARCH<x>:TRIGger:A:RUNT:POLarity

Sets or returns the polarity setting for a runt trigger search to determine where to place a mark. <x> is the search number.

Group Search

Syntax SEARCH:SEARCH<x>:TRIGger:A:RUNT:POLarity
{EITher|NEGative|POSitive}
SEARCH:SEARCH<x>:TRIGger:A:RUNT:POLarity?

Arguments POSitive places a mark when the rising edge crosses the low threshold and the falling edge re-crosses the low threshold without either edge ever crossing the high threshold.

NEGative places a mark when the falling edge crosses the high threshold and the rising edge re-crosses the high threshold without either edge ever crossing the low threshold.

EITher places a mark on a runt of either polarity.

SEARCH:SEARCH<x>:TRIGger:A:RUNT:SOUrce

Sets or returns the source setting for a runt trigger search to determine where to place a mark. <x> is the search number.

Group Search

Syntax SEARCH:SEARCH<x>:TRIGger:A:RUNT:SOUrce
{CH1|CH2|CH3|CH4|MATH|REF}
SEARCH:SEARCH<x>:TRIGger:A:RUNT:SOUrce?

Arguments CH1–CH4 specifies an input channel as the edge source.

MATH specifies the math waveform as the search source.

REF specifies the reference waveform as the search source.

SEARCH:SEARCH<x>:TRIGger:A:RUNT:WHEn

Sets or returns the condition setting for a runt trigger search to determine where to place a mark. <x> is the search number.

Group	Search
Syntax	<pre>SEARCH:SEARCH<x>:TRIGger:A:RUNT:WHEN {LESSthan than EQua1 UNEQua1 OCCURS} SEARCH:SEARCH<x>:TRIGger:A:RUNT:WHEN?</pre>
Arguments	<p>OCCURS argument specifies a trigger event if a runt of any detectable width occurs.</p> <p>LESSthan argument sets the oscilloscope to trigger if the a runt pulse is detected with width less than the time set by the SEARCH:SEARCH<x>:TRIGger:A:RUNT:WIDTH command.</p> <p>than argument sets the oscilloscope to trigger if the a runt pulse is detected with width than the time set by the SEARCH:SEARCH<x>:TRIGger:A:RUNT:WIDTH command.</p> <p>EQua1 argument sets the oscilloscope to trigger when the pattern is true for a time period equal to the time period specified in SEARCH:SEARCH<x>:TRIGger:A:RUNT:WIDTH within a $\pm 5\%$ tolerance.</p> <p>NOTEQua1 argument sets the oscilloscope to trigger when the pattern is true for a time period greater than or less than (but not equal) the time period specified in SEARCH:SEARCH<x>:TRIGger:A:RUNT:WIDTH within a $\pm 5\%$ tolerance.</p>

SEARCH:SEARCH<x>:TRIGger:A:RUNT:WIDTH

Sets or returns the width setting for a runt trigger search to determine where to place a mark. <x> is the search number.

Group	Search
Syntax	<pre>SEARCH:SEARCH<x>:TRIGger:A:RUNT:WIDTH <NR3> SEARCH:SEARCH<x>:TRIGger:A:RUNT:WIDTH?</pre>
Arguments	<NR3> specifies the minimum width, in seconds.

SEARCH:SEARCH<x>:TRIGger:A:SETHold:CLOCK:EDGE

Sets or returns the clock slope setting for a setup/hold trigger search to determine where to place a mark. <x> is the search number.

Group	Search
--------------	--------

Syntax SEARCH:SEARCH<x>:TRIGger:A:SETHold:CLOCK:EDGE {FALL|RISe}
SEARCH:SEARCH<x>:TRIGger:A:SETHold:CLOCK:EDGE?

Arguments FALL specifies polarity as the clock falling edge.
RISe specifies polarity as the clock rising edge.

SEARCH:SEARCH<x>:TRIGger:A:SETHold:CLOCK:SOURce

Sets or returns the clock source setting for an setup/hold trigger search to determine where to place a mark. <x> is the search number.

Group Search

Syntax SEARCH:SEARCH<x>:TRIGger:A:SETHold:CLOCK:SOURce
{CH1|CH2|CH3|CH4|MATH|REF}
SEARCH:SEARCH<x>:TRIGger:A:SETHold:CLOCK:SOURce?

Related Commands [SEARCH:SEARCH<x>:TRIGger:A:SETHold:DATA:SOURce](#)

Arguments CH1–CH4 specifies an input channel as the edge source.
MATH specifies the math waveform as the search source.
REF specifies the reference waveform as the search source.

SEARCH:SEARCH<x>:TRIGger:A:SETHold:CLOCK:THReshold

Sets or returns the clock threshold setting for an setup/hold trigger search to determine where to place a mark. <x> is the search number.

Group Search

Syntax SEARCH:SEARCH<x>:TRIGger:A:SETHold:CLOCK:THReshold
{<NR3>|TTL|ECL}
SEARCH:SEARCH<x>:TRIGger:A:SETHold:CLOCK:THReshold?

Arguments TTL specifies a preset TTL high level of 1.4 V.
ECL specifies a preset ECL high level of -1.3V.
<NR3> is the clock level, in volts.

SEARCH:SEARCH<x>:TRIGger:A:SETHold:DATa:SOUrce

Sets or returns the data source setting for an setup/hold trigger search to determine where to place a mark. <x> is the search number. You cannot specify the same source for both clock and data.

Group Search

Syntax DPO Models:
SEARCH:SEARCH<x>:TRIGger:A:SETHold:DATa:SOUrce
{CH1|CH2|CH3|CH4|MATH|REF}
MSO Models:
SEARCH:SEARCH<x>:TRIGger:A:SETHold:DATa:SOUrce <wfm>[,<wfm>]
[,<wfm>] [,<wfm>] [,<wfm>] [,<wfm>] [,<wfm>] [,<wfm>]
[,<wfm>] [,<wfm>] [,<wfm>] [,<wfm>] [,<wfm>] [,<wfm>]
[,<wfm>] [,<wfm>] [,<wfm>] [,<wfm>]
SEARCH:SEARCH<x>:TRIGger:A:SETHold:DATa:SOUrce?

Related Commands [SEARCH:SEARCH<x>:TRIGger:A:SETHold:CLOCK:SOUrce](#)

Arguments DPO Models:

CH1-CH4 specifies an input channel as the search source.

MATH specifies the math waveform as the search source.

REF specifies the reference waveform as the search source.

MSO Models:

<wfm> can be any combination of the channel, math, reference, and digital waveforms.

SEARCH:SEARCH<x>:TRIGger:A:SETHold:DATa:THReshold

Sets or returns the data threshold setting for an setup/hold trigger search to determine where to place a mark. <x> is the search number.

Group Search

Syntax SEARCH:SEARCH<x>:TRIGger:A:SETHold:DATa:THReshold
{<NR3>|TTL}
SEARCH:SEARCH<x>:TRIGger:A:SETHold:DATa:THReshold?

Arguments TTL specifies a preset TTL high level of 1.4 V.
<NR3> is the clock level, in volts.

SEARCH:SEARCH<x>:TRIGger:A:SETHold:HOLDTime

Sets or returns the hold time setting for an setup/hold trigger search to determine where to place a mark. <x> is the search number.

Group Search

Syntax SEARCH:SEARCH<x>:TRIGger:A:SETHold:HOLDTime <NR3>
SEARCH:SEARCH<x>:TRIGger:A:SETHold:HOLDTime?

Arguments <NR3> specifies the hold time setting in seconds. Positive values for hold time occur after the clock edge. Negative values occur before the clock edge.

SEARCH:SEARCH<x>:TRIGger:A:SETHold:SETTime

Sets or returns the setup time setting for an setup/hold trigger search to determine where to place a mark. <x> is the search number.

Group Search

Syntax SEARCH:SEARCH<x>:TRIGger:A:SETHold:SETTime <NR3>
SEARCH:SEARCH<x>:TRIGger:A:SETHold:SETTime?

Arguments <NR3> specifies the setup time for setup and hold violation triggering.

SEARCH:SEARCH<x>:TRIGger:A:SETHold:THReshold:CH<x>

Sets or returns the trigger search setup and hold lower threshold for the selected channel. This helps determine where to place search marks. Search<x> is the search number, which is always 1. CH<x> is the channel number.

Conditions MSO oscilloscopes only.

Group Search

Syntax SEARCH:SEARCH<x>:TRIGger:A:SETHold:THReshold:CH<x> <NR3>
SEARCH:SEARCH<x>:TRIGger:A:SETHold:THReshold:CH<x>?

Arguments <NR3> is the lower threshold in volts.

SEARCH:SEARCH<x>:TRIGger:A:SETHold:THReshold{:MATH|:MATH1}

Sets or returns the trigger search setup and hold threshold for the math waveform. This helps to determine where to place search marks. Search<x> is the search number, which is always 1.

Conditions MSO oscilloscopes only.

Group Search

Syntax SEARCH:SEARCH<x>:TRIGger:A:SETHold:THReshold{:MATH|:MATH1}
<NR3>
SEARCH:SEARCH<x>:TRIGger:A:SETHold:THReshold{:MATH|:MATH1}?

Arguments <NR3> is the lower threshold in volts.

SEARCH:SEARCH<x>:TRIGger:A:SETHold:THReshold:REF<x>

Sets or returns the trigger search setup and hold threshold for the selected reference waveform. This helps to determine where to place search marks. Search<x> is the search number, which is always 1. REF<x> is the reference waveform number.

Conditions MSO oscilloscopes only.

Group Search

Syntax SEARCH:SEARCH<x>:TRIGger:A:SETHold:THReshold:REF<x> <NR3>
SEARCH:SEARCH<x>:TRIGger:A:SETHold:THReshold:REF<x>?

Arguments <NR3> is the lower threshold in volts.

SEARCH:SEARCH<x>:TRIGger:A{:TRANSition|:RISEFall}:DELTatime

Sets or returns the transition time setting for an transition trigger search to determine where to place a mark. <x> is the search number.

Group Search

Syntax SEARCH:SEARCH<x>:TRIGger:A{:TRANSition|:RISEFall}:DELTatime
<NR3>
SEARCH:SEARCH<x>:TRIGger:A{:TRANSition|:RISEFall}:DELTatime?

Arguments <NR3> specifies the transition time, in seconds.

SEARCH:SEARCH<x>:TRIGger:A{:TRANSition|:RISEFall}:POLarity

Sets or returns the polarity setting for an transition trigger search to determine where to place a mark. <x> is the search number.

Group Search

Syntax SEARCH:SEARCH<x>:TRIGger:A{:TRANSition|:RISEFall}:POLarity
{EITHer|NEGative|POSitive}
SEARCH:SEARCH<x>:TRIGger:A{:TRANSition|:RISEFall}:POLarity?

Arguments POSitive specifies that a pulse edge must traverse from the lower (most negative) to higher (most positive) level for transition triggering to occur.

NEGative specifies that a pulse edge must traverse from the upper (most positive) to lower (most negative) level for transition triggering to occur.

EITHer specifies either positive or negative polarity.

SEARCH:SEARCH<x>:TRIGger:A{:TRANSition|:RISEFall}:SOUrce

Sets or returns the source setting for an transition trigger search to determine where to place a mark. <x> is the search number.

Group Search

Syntax SEARCH:SEARCH<x>:TRIGger:A{:TRANSition|:RISEFall}:SOUrce
{CH1|CH2|CH3|CH4|MATH}

SEARCH:SEARCH<x>:TRIGger:A{:TRANSition|:RISEFall}:SOURCE?

Arguments CH1-CH4 specifies one input channel as the edge source.
MATH specifies the math waveform as the search source.

SEARCH:SEARCH<x>:TRIGger:A{:TRANSition|:RISEFall}:WHEN

Sets or returns the condition setting for an transition trigger search to determine where to place a mark. <x> is the search number.

Group Search

Syntax SEARCH:SEARCH<x>:TRIGger:A{:TRANSition|:RISEFall}:WHEN
{SLOWer|FASTER|EQUal|UNEQUal}
SEARCH:SEARCH<x>:TRIGger:A{:TRANSition|:RISEFall}:WHEN?

Arguments FASTER sets the trigger to occur when the transitioning signal is faster than the set volts/second rate.

SLOWer sets the trigger to occur when the transitioning signal is slower than the set volts/second rate.

EQUal sets the trigger to occur when the transitioning signal is equal to the set volts/second rate within a $\pm 5\%$ tolerance.

UNEQUal sets the trigger to occur when the transitioning signal is not equal to the set volts/second rate $\pm 5\%$.

SEARCH:SEARCH<x>:TRIGger:A:TYPE

Sets or returns the trigger type setting for a search to determine where to place a mark. <x> is the search number.

Group Search

Syntax SEARCH:SEARCH<x>:TRIGger:A:TYPE
{EDGE|SETHold|PULSEwidth|RUNT|TRANSition|LOGic|BUS (with the appropriate application module installed)}
SEARCH:SEARCH<x>:TRIGger:A:TYPE?

Arguments RUNT triggers when a pulse crosses the first preset voltage threshold but does not cross the second preset threshold before recrossing the first. The thresholds are

set with the `SEARCH:SEARCH<x>:TRIGger:A:LOWerthreshold:CH<x>` and `SEARCH:SEARCH<x>:TRIGger:A:UPPerthreshold:CH<x>` commands.

`PULSEWidth` triggers when a pulse is found that has the specified polarity and is either inside or outside the limits as specified by `SEARCH:SEARCH<x>:TRIGger:A:LOGic:PATtern:WHEn:LESSLimit` and `SEARCH:SEARCH<x>:TRIGger:A:LOGic:PATtern:WHEn:MORELimit`. The polarity is selected using the `SEARCH:SEARCH<x>:TRIGger:A:RUNT:POLarity` command.

`TRANSition` triggers when a pulse crosses both thresholds in the same direction as the specified polarity and the transition time between the two threshold crossings is greater or less than the specified time delta.

SEARCH:SEARCH<x>:TRIGger:A:UPPerthreshold:CH<x>

Sets or returns the channel waveform upper threshold to determine where to place a mark. This setting is applied to all channel searches that uses an upper threshold. `SEARCH<x>` is the search number and `CH<x>` is the channel number.

Group	Search
Syntax	<code>SEARCH:SEARCH<x>:TRIGger:A:UPPerthreshold:CH<x> {TTL}</code> <code>SEARCH:SEARCH<x>:TRIGger:A:UPPerthreshold:CH<x>?</code>
Arguments	TTL specifies a preset TTL high level of 1.4 V.

SEARCH:SEARCH<x>:TRIGger:A:UPPerthreshold:MATH

Sets or returns the math waveform upper threshold to determine where to place a mark. This setting is applied to all math waveform searches that uses an upper threshold. `<x>` is the search number.

Group	Search
Syntax	<code>SEARCH:SEARCH<x>:TRIGger:A:UPPerthreshold:MATH {TTL}</code> <code>SEARCH:SEARCH<x>:TRIGger:A:UPPerthreshold:MATH?</code>
Arguments	TTL specifies a preset TTL high level of 1.4 V.

SEARCH:SEARCH<x>:TRIGger:A:UPPerthreshold:REF<x>

Sets or returns the reference waveform upper threshold to determine where to place a mark. This setting is applied to all reference waveform searches that uses an upper threshold. SEARCH<x> is the search number and REF<x> is the reference channel number.

Group Search

Syntax SEARCH:SEARCH<x>:TRIGger:A:UPPerthreshold:REF<x> {TTL}
SEARCH:SEARCH<x>:TRIGger:A:UPPerthreshold:REF<x>?

Arguments TTL specifies a preset TTL high level of 1.4 V.

SElect

Sets or returns the selected waveform display (controlled by the front-panel) on or off.

Group Vertical

Syntax SElect {ON|OFF}

Arguments ON turns the selected waveform display on.
OFF turns the selected waveform display off.

Examples SELECT might return the following
:SELECT:BUS1 0;BUS2 0;CH1 1;CH2 0;CH3 0;CH4 0;MATH 0;REF1
0;REF2 0;REF3 0;REF4 0;CONTROL CH1

SElect:BUS<x>

This command turns on and off the display of the waveform for <x>, where x is the bus number. The query returns whether the channel is on or off but does not indicate whether it is the selected waveform.

Group Vertical

Syntax `SElect:BUS<x> {<NR1>|OFF|ON}`
`SElect:BUS<x>?`

SElect:CH<x>

Turns the display of the channel <x> waveform on or off, where <x> is the channel number. This command also resets the acquisition. The query returns whether the channel is on or off but does not indicate whether it is the selected waveform.

Group Vertical

Syntax `SElect:CH<x> {ON|OFF|<NR1>}`
`SElect:CH<x>?`

Arguments ON turns on the display of the specified waveform. This waveform also becomes the selected waveform.

OFF turns off the display of the specified waveform.

<NR1> = 0 turns off the display of the specified waveform; any other value turns on the display of the specified waveform.

Examples `SELECT:CH2 ON` turns the channel 2 waveform display on, and selects channel 2.
`SELECT:CH1?` might return `:SELECT:CH1 1` indicating that channel 1 is being displayed.

SElect:CONTROI

Sets or returns the waveform that is the recipient of future channel-related commands, for example, the cursor commands. The command form also performs the equivalent of a [SElect:CH<x> ON](#) command, as well as the Math, Reference, and Bus variations of that command.

Group Vertical

Syntax `SElect:CONTROI {CH<x>|MATH|BUS<x>}`
`SElect:CONTROI?`

Arguments CH<x> specifies a channel waveform as the waveform affected by the front-panel controls. <x> is the channel number.

MATH specifies the math waveform as the waveform that is affected by the front-panel controls.

BUS<x> specifies a bus waveform as the waveform affected by the front-panel controls. <x> specifies the bus number.

Returns NONE if all the channels are turned off. NONE is ignored on input.

Examples SELECT:CONTROL CH2 resets acquisition displays on channel 2, and causes the selected waveform to be the implied object of waveform commands.

SELECT:CONTROL? might return :SELECT:CONTROL MATH indicating that math is the implied object of waveform commands.

SElect:D<x>

Turns on the display of the digital channel <x> and resets the acquisition. <x > is the channel number. The query returns whether the channel is on or off but does not indicate whether it is the selected waveform.

Group Vertical

Syntax SElect:D<x> {<NR1>|OFF|ON}
SElect:D<x>?

Arguments ON turns on the display of the specified waveform. This waveform also becomes the selected waveform.

OFF turns off the display of the specified waveform.

<NR1> = 0 turns off the display of the specified waveform; any other value turns on the display of the specified waveform.

Examples SELECT:D2 ON turns the digital channel 2 waveform display on, and selects digital channel 2.

SELECT:D2? might return :SELECT:D2 1 indicating that digital channel 2 is being displayed.

SElect:MATH[1]

Turns on and off the display of the math waveform. The query returns whether the math waveform is on or off but does not indicate whether it is the selected waveform.

Group Vertical

Syntax SElect:MATH[1] {ON|OFF|<NR1>}
SElect:MATH[1]?

Arguments ON turns on the display of the specified waveform. This waveform also becomes the selected waveform.

OFF turns off the display of the specified waveform.

<NR1> = 0 turns off the display of the specified waveform; any other value turns on the display of the specified waveform.

Examples SELECT:MATH ON turns the math waveform display on, and selects it.

SELECT:MATH? might return :SELECT:MATH 1 indicating that the math waveform is being displayed.

SElect:REF<x>

Turns on and off the display of the reference waveform <x>. The <x> variable represents the reference channel number. The query returns whether the channel is on or off.

Group Vertical

Syntax SElect:REF<x> {ON|OFF|<NR1>}
SElect:REF<x>?

Arguments ON turns on the display of the specified waveform. This waveform also becomes the selected waveform.

OFF turns off the display of the specified waveform.

<NR1> = 0 turns off the display of the specified waveform; any other value turns on the display of the specified waveform.

Examples `SELECT:REF2 ON` turns the channel 2 waveform display on, and selects reference waveform 2.

`SELECT:REF2?` might return `:SELECT:REF2 1` indicating that reference waveform 2 is being displayed.

SET? (Query Only)

Returns the commands that list the oscilloscope settings except for configuration information for the calibration values, the [WFMinpre?](#) query, and the [WFMOutpre?](#) query. This query allows you to record or "learn" the current oscilloscope settings. You can use these commands to return the oscilloscope to the state it was in when you made the SET? query. The SET? query always returns command headers, regardless of the setting of the [HEADer](#) command. This is because the returned commands are intended to be sent back to the oscilloscope as a command string. The [VERBose](#) command can still be used to specify whether the returned headers should be abbreviated or full-length.

This command is identical to the [*LRN?](#) command.

Group Miscellaneous

Syntax SET?

Related Commands [HEADer](#), [*LRN?](#), [VERBose](#)

Examples SET? returns a long response, part of which could be as follows: `:SET:ACQUIRE:STOPAFTER RUNSTOP;STATE 1;MODE SAMPLE;NUMENV INFINITE;NUMAVG 16;SAMPLINGMODE RT;;HEADER 1;;LOCK NONE;;LANGUAGE ENGLISH;;VERBOSE 1;;ALIAS:STATE 0;;:DISPLAY:COLOR:PALETTE NORMAL;;:DISPLAY:STYLE:DOTSONLY 0;;:DISPLAY:PERSISTENCE 0.0000;CLOCK 1;GRATICULE FULL;INTensity:WAVEFORM 30;GRATICULE 75;BACKLIGHT HIGH;;HARDCOPY:INKSAVER OFF;LAYOUT LANDSCAPE;PREVIEW 0; :SAVE:IMAGE:FILEFORMAT BMP;;SAVE:WAVEFORM:FILEFORMAT INTERNAL;;SAVE:ASSIGN:TYPE SETUP;;TRIGGER:A:MODE AUTO;TYPE EDGE;LEVEL 20.0000E-3;LEVEL:CH1 20.0000E-3;CH2 0.0000;CH3 0.0000;CH4 0.0000;;TRIGGER:A:UPPERTHRESHOLD:CH1 1.4000;CH2 800.0000E-3;CH3 800.0000E-3;CH4 800.0000E-3;;:TRIGGER:A:LOWERTHRESHOLD:CH1 20.0000E-3;CH2 0.0000;CH3 0.0000;CH4 0.0000;;TRIGGER:A:HOLDOFF:TIME 20.0000E-9;;TRIGGER:A:EDGE:SOURCE CH1;COUPLING DC;SLOPE RISE;;TRIGGER:A:LOGIC:CLASS SETHOLD;FUNCTION AND;THRESHOLD:CH1 20.0000E-3;CH2 0.0000;CH3`

```
0.0000;CH4 0.0000;:TRIGGER:A:LOGIC:INPUT:CH1
X;CH2 X;CH3 X;CH4 X;CLOCK:SOURCE NONE;EDGE
RISE;:TRIGGER:A:LOGIC:PATTERN:INPUT:CH1 X;CH2
X;CH3 X;CH4 X;:TRIGGER:A :LOGIC:PATTERN:WHEN
TRUE;WHEN:LESSLIMIT 4.0000E-9;LIMIT 4.0000E-9;:TRIGGER:A
:SETHOLD:CLOCK:SOURCE CH1;EDGE RISE;THRESHOLD
20.0000E-3;:TRIGGER:A:SETHOLD:DATA:SOURCE CH2;
```

SETUP<x>:DATE? (Query Only)

Returns the date when the oscilloscope setup was saved for the specified channel <x>.

Group Save and Recall

Syntax SETUP<x>:DATE?

Examples SETUP4:DATE? might return SETUP4:DATE: 04-18-06 which is the setup date for channel 4.

SETUP<x>:LABEL

Sets or returns the setup label for the specified channel <x>, where x can be 1 through 10.

Group Save and Recall

Syntax SETUP<x>:LABEL <Qstring>

Arguments <Qstring> is an alphanumeric string of characters, enclosed in quotes, that defines the label text for SETUP<x>. The length of the string is limited to 30 characters.

Examples SETUP:LABEL? might return SETUP1:LABEL: TEST 2 which is the label setup for channel 1.

SETUP<x>:TIME? (Query Only)

Returns the time when the oscilloscope setup was saved for the specified channel <x>.

Group	Save and Recall
Syntax	SETUP<x>:TIME?
Examples	SETUP2:TIME? might return "SETUP2:TIME: 15:24:07 which is the setup time for channel 2.

*SRE

The *SRE (Service Request Enable) command sets or returns the bits in the Service Request Enable Register. For information, refer to Registers.

Group	Status and Error
Syntax	*SRE <NR1> *SRE?
Related Commands	*CLS , DESE , *ESE , *ESR? , EVENT? , EVMsg? , FACTory , *STB?
Arguments	<NR1> is a value in the range from 0 through 255. The binary bits of the SRER are set according to this value. Using an out-of-range value causes an execution error. The power-on default for SRER is 0 if *PSC is 1. If *PSC is 0, the SRER maintains the previous power cycle value through the current power cycle.
Examples	*SRE 48 sets the bits in the SRER to binary 00110000. *SRE? might return 32, showing that the bits in the SRER have the binary value of 00100000.

*STB? (Query Only)

*STB? (Read Status Byte) returns the contents of the Status Byte Register (SBR) using the Master Summary Status (MSS) bit. For information, refer to Registers.

Group	Status and Error
Syntax	*STB?
Related Commands	*CLS , DESE , *ESE , *ESR? , EVENT? , EVMsg? , FACTory , *SRE
Returns	<NR1>
Examples	*STB? might return 96, showing that the SBR contains the binary value 01100000.

TEKSecure (No Query Form)

This command initializes both waveform and setup memories, overwriting any previously stored data. These are the [WFMinpre?](#), [WFMOupre?](#), and [DATA](#) command values after the TEKSecure operation.

```
:WFMOUTPRE:BYT_NR 1 :WFMOUTPRE:BIT_NR 8 :WFMOUTPRE:ENCDG
BIN :WFMOUTPRE:BN_FMT RI :WFMOUTPRE:BYT_OR MSB
:WFMOUTPRE:WFID "Ch1, DC coupling, 100.0mV/div,
4.000us/div, 10000 points, Sample mode" :WFMOUTPRE:NR_PT
10000 :WFMOUTPRE:PT_FMT Y :WFMOUTPRE:XUNIT "s"
:WFMOUTPRE:XINCR 4.0000E-9 :WFMOUTPRE:XZERO -20.0000E-6
:WFMOUTPRE:PT_OFF 0 :WFMOUTPRE:YUNIT "V" :WFMOUTPRE:YMULT
4.0000E-3 :WFMOUTPRE:YOFF 0.0000 :WFMOUTPRE:YZERO 0.0000
:WFMINPRE:BYT_NR 1 :WFMINPRE:BIT_NR 8 :WFMINPRE:ENCDG
BIN :WFMINPRE:BN_FMT RI :WFMINPRE:BYT_OR MSB
:WFMINPRE:NR_PT 10000 :WFMINPRE:PT_FMT Y :WFMINPRE:XUNIT
"s" :WFMINPRE:XINCR 4.0000E-9 :WFMINPRE:XZERO 0.0000
:WFMINPRE:PT_OFF 0 :WFMINPRE:YUNIT "V" :WFMINPRE:YMULT
4.0000E-3 :WFMINPRE:YOFF 0.0000 :WFMINPRE:YZERO 0.0000
DATA:DESTINATION REF1 DATA:ENCDG RIBINARY DATA:SOURCE CH1
DATA:START 1 DATA:STOP 10000 DATA:WIDTH 1
```

NOTE. The TEKSecure command can take up to five minutes to complete. The oscilloscope is inoperable during this period.

Group Miscellaneous

Syntax TEKSecure

Examples TEKSECURE initializes both waveform and setup memories.

This is a program example of how to generate an SRQ when TEKSECURE completes:

```
# Bit 0 of the DESE (Device Event Status Enable Register)
# enables OPC to be reported to the SESR (Standard Event
# Status Register)
DESE 255
# Bit 0 of the ESER (Event Status Enable Register)
# enables OPC to be summarized in the ESB (Event Status #
# Bit) of the SBR (Status Byte Register)
*ESE 255
# Bit 5 of the SRE (Service Request Enable Register)
enables
# the generation of SRQ when the ESB bit of the SBR
becomes # TRUE
*SRE 32
TEKSECURE;*OPC
```

When the TEKSECURE operation has completed, the OPC bit of the SESR will be TRUE and SRQ will have been generated.

TIME

Sets or returns the time that the oscilloscope displays.

Group Miscellaneous

Syntax TIME <QString>
TIME?

Related Commands [DATE](#)

Arguments <QString> is a time in the form "hh:mm:ss" where hh refers to a two-digit hour number, mm refers to a two-digit minute number from 00 to 59, and ss refers to a two-digit second number from 00 to 59.

Examples TIME "14:00:00" sets the time to exactly 2:00 p.m.

TIME? might return :TIME "14:05:17" indicating the current time is set to 2:05 p.m. and 17 seconds.

TOTaluptime? (Query Only)

This command returns the total number of hours that the oscilloscope has been powered on since the nonvolatile memory was last programmed (usually since the initial manufacturing process).

Group Miscellaneous

Syntax TOTaluptime?

*TRG (No Query Form)

Performs a group execute trigger on commands defined by *DDT.

Group Miscellaneous

Syntax *TRG

Related Commands [*DDT](#)

Examples *TRG immediately executes all commands that have been defined by *DDT.

TRIGger (No Query Form)

Forces a trigger event to occur.

Group Trigger

Syntax TRIGger FORCE
TRIGger?

Arguments FORCE creates a trigger event. If TRIGger:STATE is set to READy, the acquisition will complete. Otherwise, this command will be ignored.

Examples TRIGGER FORCE forces a trigger event to occur.

TRIGger:A

Sets the A trigger level automatically to 50% of the range of the minimum and maximum values of the trigger input signal. The query returns current A trigger parameters. The trigger level is the voltage threshold through which the trigger source signal must pass to generate a trigger event. This command works for the following cases: Edge Trigger (when source is Not Line), Logic Trigger (when Clock Source is not Off or Logic Pattern is Don't Care), and Pulse Width Trigger.

Group Trigger

Syntax TRIGger:A SETLevel
TRIGger:A?

Related Commands [TRIGger:A:EDGE?](#), [TRIGger:A:LOGic?](#), [TRIGger:A:PULse?](#)

Arguments SETLevel sets the A trigger level to 50% of the range of the minimum and maximum values of the trigger input signal.

Examples TRIGGER:A SETLEVEL sets the A trigger level to 50% of the range of the minimum and maximum values of the trigger input signal.

TRIGGER:A? might return a long response with A trigger parameters, some of which could be as follows: :TRIGGER:A:MODE AUTO;TYPE EDGE;LEVEL 20.0000E-3;LEVEL:CH1 20.0000E-3;CH2 0.0000;CH3 0.0000;CH4 0.0000;:TRIGGER:A:UPPERTHRESHOLD:CH1 1.4000;CH2 800.0000E-3;CH3 8 00.0000E-3;CH4 800.0000E-3;:TRIGGER:A:LOWERTHRESHOLD:CH1 20.0000E-3;CH2 0.0000;CH3 0.0000;CH4 0.0000;:TRIGGER:A:HOLDOFF:TIME 20.0000E-9;:TRIGGER:A:EDGE:SOURCE CH1;COUPLING DC;SLOPE RISE;:TRIGGER:A:LOGIC:CLASS SETHOLD;FUNCTION AND;THRESHOLD: CH1 20.0000E-3;CH2 0.0000;CH3 0.0000;CH4 0.0000;:TRIGGER:A:LOGIC:INPUT:CH1 X;CH2 X;CH3 X;CH4 X;CLOCK:SOURCE NONE;EDGE RISE;:TRIGGER:A:LOGIC:PATTERN:INPUT:CH1 X; CH2 X;CH3 X;CH4 X;:TRIGGER:A:LOGIC:PATTERN:WHEN TRUE;WHEN:LESSLIMIT 4.0000E-9;MO RELIMIT 4.0000E-9;:TRIGGER:A:SETHOLD:CLOCK:SOURCE CH1;EDGE RISE;THRESHOLD 20.000 0E-3;:TRIGGER:A:SETHOLD:DATA:SOURCE CH2;THRESHOLD 0.0000;:TRIGGER:A:SETHOLD:HOLD TIME 4.0000E-9;SETTIME 4.0000E-9;:TRIGGER:A:PULSE:CLASS TRANSITION;:TRIGGER:A:PULSEWIDTH:SOURCE CH1;POLARITY POSITIVE;WHEN LESSTHAN;WIDTH 4.0000E-9;:TRIGGER:A:RUNT:SOURCE CH1;POLARITY POSITIVE;WHEN

```
OCCURS;WIDTH 4.0000E-9;:TRIGGER:A:TRANSITION:SOURCE
CH1;POLARITY POSITIVE;WHEN SLOWER;DELTATIME
4.0000E-9;:TRIGGER:A:VIDEO :POLARITY POSITIVE;SOURCE
CH1;STANDARD NTSC;SYNC ALLLINES;HOLDOFF:FIELD 0.0000;:
TRIGGER:A:VIDEO:CUSTOM:FORMAT PROGRESSIVE;SCAN
RATE15K;:TRIGGER:A:VIDEO:LINE 1;H DTV:FORMAT
HD1080I60;:TRIGGER:A:BUS:SOURCE B1;B1:I2C:CONDITION
START;DATA:VALUE "XXXXXXXX";SIZE 1;START 0.0000;DIRECTION
NOCARE;:TRIGGER:A:BUS:B1:I2C:ADDRESS:MODE
ADDR7;TYPE USER;VALUE
"XXXXXXXX";:TRIGGER:A:BUS:B1:SPI:CONDITION MOSI;DATA:OUT
:VALUE "XXXXXXXX";:TRIGGER:A:BUS:B1:SPI:DATA:IN:VALUE
"XXXXXXXX";:TRIGGER:A:BUS: B1:SPI:DATA:SIZE 1;START 0.0000;:
```

TRIGger:A:BUS

Sets or returns the trigger type: I2C, CAN, SPI, RS-232, or Parallel. There are up to four serial buses, B1–B4, depending on your instrument model. Each can be independently set to one of the serial trigger types. The serial parameters related to the trigger are broken into two sections: Trigger:A:SERIAL xxx, consisting of parameters the user will change frequently, and BUS:B1:xxx, consisting of parameters the user will specify once (bus definition).

Conditions Requires a DPO4AUTO, DPO4EMBD, or DPO4COMP application module.

Group Trigger

Syntax TRIGger:A:BUS {I2C|SPI|CAN|RS232|PARAllel}
TRIGger:A:BUS?

Arguments I2C specifies the Inter-IC bus.

SPI specifies the Serial Peripheral Interface bus.

CAN specifies the Controller Area Network bus.

PARAllel specifies the Parallel bus.

NOTE. Parallel bus commands work with MSO4000 Series oscilloscopes only.

TRIGger:A:BUS:B<x>:AUDio:CONDition

Sets or returns the trigger condition for the AUDIO bus: Start of Frame or Data.

Conditions	This command requires DPO4AUDIO application module.
Group	Trigger
Syntax	TRIGger:A:BUS:B<x>:AUDio:CONDition {SOF DATA} TRIGger:A:BUS:B<x>:AUDio:CONDition?
Arguments	SOF enables triggering on the start of frame. DATA enables triggering on matching data.

TRIGger:A:BUS:B<x>:AUDio:DATA:HIVALue

Sets or returns the trigger data upper word for the AUDIO bus.

Conditions	This command requires DPO4AUDIO application module.
Group	Trigger
Syntax	TRIGger:A:BUS:B<x>:AUDio:DATA:HIVALue <String> TRIGger:A:BUS:B<x>:AUDio:DATA:HIVALue?

TRIGger:A:BUS:B<x>:AUDio:DATA:OFFSet

Sets or returns the trigger data offset for the AUDIO bus.

Conditions	This command requires DPO4AUDIO application module.
Group	Trigger
Syntax	TRIGger:A:BUS:B<x>:AUDio:DATA:OFFSet <NR1> TRIGger:A:BUS:B<x>:AUDio:DATA:OFFSet?
Arguments	<NR1> is the trigger data offset value.

TRIGger:A:BUS:B<x>:AUDio:DATA:QUALifier

Sets or returns the trigger data qualifier for the AUDIO bus.

Conditions	This command requires DPO4AUDIO application module.
Group	Trigger
Syntax	<pre>TRIGger:A:BUS:B<x>:AUDio:DATA:QUALifier {LESSThan MOREThan EQual UNEQual LESSEQual MOREEQual INrange OUTrang TRIGger:A:BUS:B<x>:AUDio:DATA:QUALifier?</pre>
Arguments	<p>LESSThan sets the Audio data qualifier to less than.</p> <p>MOREThan sets the Audio data qualifier to greater than.</p> <p>EQual sets the Audio data qualifier to equal.</p> <p>UNEQual sets the Audio data qualifier to not equal.</p> <p>LESSEQual sets the Audio data qualifier to less than or equal.</p> <p>MOREEQual sets the Audio data qualifier to greater than or equal.</p> <p>INrange sets the Audio data qualifier to in range.</p> <p>OUTrange sets the Audio data qualifier to out of range.</p>

TRIGger:A:BUS:B<x>:AUDio:DATA:VALue

Sets or returns the trigger data lower word for the AUDIO bus.

Conditions	This command requires DPO4AUDIO application module.
Group	Trigger
Syntax	<pre>TRIGger:A:BUS:B<x>:AUDio:DATA:VALue <String> TRIGger:A:BUS:B<x>:AUDio:DATA:VALue?</pre>
Arguments	<String> specifies the trigger data lower word.

TRIGger:A:BUS:B<x>:AUDio:DATA:WORD

Sets or returns the trigger data alignment for the AUDIO bus.

Conditions	This command requires DPO4AUDIO application module.
-------------------	---

Group	Trigger
Syntax	<pre>TRIGger:A:BUS:B<x>:AUDio:DATA:WORD {EITHer LEFt RIGht} TRIGger:A:BUS:B<x>:AUDio:DATA:WORD?</pre>
Arguments	<p>EITHer aligns the trigger data to either left or right.</p> <p>LEFt aligns the trigger data to the left.</p> <p>RIGht aligns the trigger data to the right.</p>

TRIGger:A:BUS:B<x>:CAN:CONDition

Sets or returns the CAN trigger condition for bus <x>, where x is the bus number.

Conditions	Requires a DPO4AUTO application module.
Group	Trigger
Syntax	<pre>TRIGger:A:BUS:B<x>:CAN:CONDition {SOF FRAMetype IDentifier DATA IDANDDATA EOF ACKMISS} TRIGger:A:BUS:B<x>:CAN:CONDition?</pre>
Arguments	<p>SOF enables triggering on the start of frame.</p> <p>FRAMetype enables triggering on the type of frame.</p> <p>IDentifier enables triggering on a matching identifier.</p> <p>DATA enables triggering on matching data.</p> <p>IDANDDATA enables triggering on a matching identifier and matching data.</p> <p>EOF enables triggering on the end of frame.</p> <p>ACKMISS enables triggering on a missing acknowledge.</p>
Examples	<p>TRIGGER:A:BUS:B1:CAN:CONDITION? might return :TRIGGER:A:BUS:B1:CAN:CONDITION EOF indicating an end of file condition.</p> <p>TRIGGER:A:BUS:B1:CAN:CONDITION DATA enables triggering on matching CAN data.</p>

TRIGger:A:BUS:B<x>:CAN:DATA:DIRection

Sets or returns the CAN trigger data direction to be valid on a Read, Write, or Either condition for bus <x>, where x is the bus number. This applies only, if the trigger condition is ID.

Conditions	Requires a DPO4AUTO application module.
Group	Trigger
Syntax	<pre>TRIGger:A:BUS:B<x>:CAN:DATA:DIRection {READ WRITE NOCARE} TRIGger:A:BUS:B<x>:CAN:DATA:DIRection?</pre>
Arguments	<p>READ sets the CAN data direction to READ.</p> <p>WRITE sets the CAN data direction to WRITE.</p> <p>NOCARE sets the CAN data direction to either.</p>
Examples	<pre>TRIGGER:A:BUS:B1:CAN:DATA:DIRECTION WRITE</pre> <p>sets the CAN data direction to Write.</p>

TRIGger:A:BUS:B<x>:CAN:DATA:QUALifier

Sets or returns the CAN data qualifier for bus <x>, where x is the bus number. This applies only, if the trigger condition is IDANDDATA or DATA.

Conditions	Requires a DPO4AUTO application module.
Group	Trigger
Syntax	<pre>TRIGger:A:BUS:B<x>:CAN:DATA:QUALifier {LESSThan Than EQUAL UNEQUAL LESSEQUAL EQUAL} TRIGger:A:BUS:B<x>:CAN:DATA:QUALifier?</pre>
Arguments	<p>LESSThan sets the oscilloscope to trigger when the data is less than the qualifier value.</p> <p>Than sets the oscilloscope to trigger when the data is than the qualifier value.</p> <p>EQUAL sets the oscilloscope to trigger when the data is equal to the qualifier value.</p>

UNEQUAL sets the oscilloscope to trigger when the data is not equal to the qualifier value.

LESSEQUAL sets the oscilloscope to trigger when the data is less than or equal to the qualifier value.

EQUAL sets the oscilloscope to trigger when the data is than or equal to the qualifier value.

Examples TRIGGER:A:BUS:B1:CAN:DATA:QUALIFIER LESSTHAN sets the oscilloscope to trigger when the data is less than the qualifier value.

TRIGGER:A:BUS:B1:CAN:DATA:QUALIFIER? might return
:TRIGGER:A:BUS:B1:CAN:DATA:QUALIFIER THAN, indicating that the oscilloscope is set to trigger when the data is than the qualifier value.

TRIGger:A:BUS:B<x>:CAN:DATA:SIZE

Sets or returns the length of the data string in bytes for a CAN trigger if the condition is DATA or IDANDDATA. Applies to bus <x>, where x is the bus number.

Conditions This command requires a DPO4AUTO application module.

Group Trigger

Syntax TRIGger:A:BUS:B<x>:CAN:DATA:SIZE <NR1>
TRIGger:A:BUS:B<x>:CAN:DATA:SIZE?

Arguments <NR1> is the length of the data string in bytes.

TRIGger:A:BUS:B<x>:CAN:DATA:VALue

Sets or returns the binary data string to be used for a CAN trigger if the trigger condition is ID or IDANDDATA. Applies to bus <x>, where x is the bus number.

Conditions This command requires a DPO4AUTO application module.

Group Trigger

Syntax	TRIGger:A:BUS:B<x>:CAN:DATA:VALue <QString> TRIGger:A:BUS:B<x>:CAN:DATA:VALue?
Arguments	<QString> is the CAN data value in binary format. The only allowed characters in the QString are 0, 1, and X.
Examples	TRIGGER:A:BUS:B1:CAN:DATA:VALUE 1011 sets the CAN data value to 1011.

TRIGger:A:BUS:B<x>:CAN:FRAMEType

Sets or returns the frame type for a CAN FRAMEType trigger. Applies to bus <x>, where x is the bus number.

Conditions	This command requires a DPO4AUTO application module. This command is only valid when the TRIGger:A:BUS:B<x>:CAN:CONDition is FRAMETYPE.
Group	Trigger
Syntax	TRIGger:A:BUS:B<x>:CAN:FRAMEType {DATA REMOte ERRor OVERLoad} TRIGger:A:BUS:B<x>:CAN:FRAMEType?
Arguments	DATA specifies a data frame type. REMOte specifies a remote frame type. ERRor specifies an error frame type. OVERLOld specifies an overload frame type.
Examples	TRIGGER:A:BUS:B1:CAN:FRAMETYPE DATA sets the CAN trigger frame type to DATA.

TRIGger:A:BUS:B<x>:CAN{:IDentifier|:ADDRess}:MODE

Sets or returns the CAN addressing mode for bus <x>, where x is the bus number. Use this command to do the following:

- Trigger on ID
- Trigger in IDANDDATA

Conditions	This command requires a DPO4AUTO application module.
Group	Trigger
Syntax	<pre>TRIGger:A:BUS:B<x>:CAN{:IDentifier :ADDRESS}:MODE {STandard EXTended} TRIGger:A:BUS:B<x>:CAN{:IDentifier :ADDRESS}:MODE?</pre>
Arguments	<p>STandard specifies the standard addressing mode.</p> <p>EXTended specifies the extended addressing mode.</p>

TRIGger:A:BUS:B<x>:CAN{:IDentifier|:ADDRESS}:VALue

Sets or returns the binary address string used for a CAN trigger if the trigger condition is ID or IDANDDATA. Applies to bus <x>, where x is the bus number.

Conditions	This command requires a DPO4AUTO application module.
Group	Trigger
Syntax	<pre>TRIGger:A:BUS:B<x>:CAN{:IDentifier :ADDRESS}:VALue <QString> TRIGger:A:BUS:B<x>:CAN{:IDentifier :ADDRESS}:VALue?</pre>
Arguments	<QString> is up to 29 bits specifying the binary CAN identifier value. The only allowed characters in the QString are 0, 1, and X.
Examples	TRIGGER:A:BUS:B1:CAN:IDENTIFIER:VALUE 1011 sets the CAN trigger identifier value to 1011.

TRIGger:A:BUS:B<x>:FLEXray:CONDition

Sets or returns the trigger condition for FLEXRAY.

Group	Trigger
Syntax	<pre>TRIGger:A:BUS:B<x>:FLEXray:CONDition {SOF FRAMEType IDentifier CYCLEcount HEADER DATA IDANDDATA EOF ERROR} TRIGger:A:BUS:B<x>:FLEXray:CONDition?</pre>

Arguments

SOF sets the FLEXRAY trigger condition to start of frame.

FRAMEType sets the FLEXRAY trigger condition to frame type.

IDentifier sets the FLEXRAY trigger condition to identifier.

CYCLEcount sets the FLEXRAY trigger condition to cycle count.

HEADer sets the FLEXRAY trigger condition to header.

DATA sets the FLEXRAY trigger condition to data.

IDANDDATA sets the FLEXRAY trigger condition to id and data.

EOF sets the FLEXRAY trigger condition to end of frame.

ERROR sets the FLEXRAY trigger condition to error.

Examples

TRIGGER:A:BUS:B1:FLEXRAY:CONDITION? might return
 TRIGGER:A:BUS:B1:FLEXRAY:CONDITION SOF indicating the
 GLEXRAY condition is start of frame.

TRIGGER:A:BUS:B1:FLEXRAY:CONDITION? might return
 TRIGGER:A:BUS:B1:FLEXRAY:CONDITION SOF indicating the
 GLEXRAY condition is start of frame.

TRIGger:A:BUS:B<x>:FLEXray:CYCLEcount:HIVALue

Sets or returns the binary data string to be used for FLEXRAY cycle count high value.

Group Trigger

Syntax TRIGger:A:BUS:B<x>:FLEXray:CYCLEcount:HIVALue <QString>
 TRIGger:A:BUS:B<x>:FLEXray:CYCLEcount:HIVALue?

Arguments <QString> is a quoted string that is the cycle count high value.

Examples

TRIGGER:A:BUS:B1:FLEXRAY:CYCLECOUNT:HIVALUE "110010" sets the
 cycle count high value to 110010.

TRIGGER:A:BUS:B1:FLEXRAY:CYCLECOUNT:HIVALUE? might return
 TRIGGER:A:BUS:B1:FLEXRAY:CYCLECOUNT:HIVALUE "XXXXXX" indicating
 the cycle count high value is don't care.

TRIGger:A:BUS:B<x>:FLEXray:CYCLEcount:QUALifier

Sets or returns the FLEXRAY cycle count qualifier.

Group	Trigger
Syntax	<pre>TRIGger:A:BUS:B<x>:FLEXray:CYCLEcount:QUALifier {LESSThan MOREThan EQUa1 UNEQUa1 LESSEQUa1 MOREEQUa1 INrange OUTrange} TRIGger:A:BUS:B<x>:FLEXray:CYCLEcount:QUALifier?</pre>
Arguments	<p>LESSThan sets the FLEXRAY cycle count qualifier to less than.</p> <p>MOREThan sets the FLEXRAY cycle count qualifier to more than.</p> <p>EQUa1 sets the FLEXRAY cycle count qualifier to equal.</p> <p>UNEQUa1 sets the FLEXRAY cycle count qualifier to not equal.</p> <p>LESSEQUa1 sets the FLEXRAY cycle count qualifier to less than or equal.</p> <p>MOREEQUa1 sets the FLEXRAY cycle count qualifier to greater than or equal.</p> <p>INrange sets the FLEXRAY cycle count qualifier to in range.</p> <p>OUTrange sets the FLEXRAY cycle count qualifier to out of range.</p>
Examples	<p>TRIGGER:A:BUS:B1:FLEXRAY:CYCLECOUNT:QUALIFIER LESSTHAN sets the cycle count qualifier to LESSTHAN.</p> <p>TRIGGER:A:BUS:B1:FLEXRAY:CYCLECOUNT:QUALIFIER? might return TRIGGER:A:BUS:B1:FLEXRAY:CYCLECOUNT:QUALIFIER EQUAL indicating that the cycle count qualifier is set to EQUAL.</p>

TRIGger:A:BUS:B<x>:FLEXray:CYCLEcount:VALue

Sets or returns the binary data string to be used for FLEXRAY cycle count low value.

Group	Trigger
Syntax	<pre>TRIGger:A:BUS:B<x>:FLEXray:CYCLEcount:VALue <QString> TRIGger:A:BUS:B<x>:FLEXray:CYCLEcount:VALue?</pre>

Arguments	<QString> is a quoted string that is the FLEXRAY binary data string that is the cycle count low value.
Examples	<p>TRIGGER:A:BUS:B1:FLEXRAY:CYCLECOUNT:VALUE "11001101" sets the cycle count value to 11001101.</p> <p>TRIGGER:A:BUS:B1:FLEXRAY:CYCLECOUNT:VALUE? might return TRIGGER:A:BUS:B1:FLEXRAY:CYCLECOUNT:VALUE "XXXXXX" indicating the cycle count value is don't care.</p>

TRIGger:A:BUS:B<x>:FLEXray:DATa:HIVALue

Sets or returns the high binary data string to be used for FLEXRAY trigger if trigger condition is ID or IDANDDATA.

Group	Trigger
Syntax	<p>TRIGger:A:BUS:B<x>:FLEXray:DATa:HIVALue <QString></p> <p>TRIGger:A:BUS:B<x>:FLEXray:DATa:HIVALue?</p>
Arguments	<QString> is a quoted string that is the FLEXRAY binary data high value.
Examples	<p>TRIGGER:A:BUS:B1:FLEXRAY:DATA:HIVALUE "11001101XXX XXXXXX1" sets the binary data string high value to "11001101XXX XXXXXX1".</p> <p>TRIGGER:A:BUS:B1:FLEXRAY:DATA:HIVALUE? might return TRIGGER:A:BUS:B1:FLEXRAY:DATA:HIVALUE "XXX XXXXXX" indicating the binary data string high value is don't care.</p>

TRIGger:A:BUS:B<x>:FLEXray:DATa:OFFSet

Sets or returns the offset of the data string in bytes to be used for FLEXRAY trigger.

Group	Trigger
--------------	---------

Syntax	<pre>TRIGger:A:BUS:B<x>:FLEXray:DATA:OFFSet <NR1> TRIGger:A:BUS:B<x>:FLEXray:DATA:OFFSet?</pre>
Arguments	<p><NR1> is the offset of the data string in bytes. A byte offset of -1 signifies don't care, and no byte offset is used. The instrument will trigger or match any byte value that fits.</p>
Examples	<p>TRIGGER:A:BUS:B1:FLEXRAY:DATA:OFFSET? might return TRIGGER:A:BUS:B1:FLEXRAY:DATA:OFFSET 0 indicating that a data offset of 0.</p> <p>TRIGGER:A:BUS:B1:FLEXRAY:DATA:OFFSET? might return TRIGGER:A:BUS:B1:FLEXRAY:DATA:OFFSET 0 indicating that a data offset of 0.</p>

TRIGger:A:BUS:B<x>:FLEXray:DATA:QUALifier

Sets or returns the FLEXRAY data qualifier.

Group	Trigger
Syntax	<pre>TRIGger:A:BUS:B<x>:FLEXray:DATA:QUALifier {LESSThan MOREThan EQUa1 UNEQUa1 LESSEQUa1 MOREEQUa1 INrange OUTrange} TRIGger:A:BUS:B<x>:FLEXray:DATA:QUALifier?</pre>
Arguments	<p>LESSThan sets the FLEXRAY data qualifier to less than.</p> <p>MOREThan sets the FLEXRAY data qualifier to greater than.</p> <p>EQUa1 sets the FLEXRAY data qualifier to equal.</p> <p>UNEQUa1 sets the FLEXRAY data qualifier to not equal.</p> <p>LESSEQUa1 sets the FLEXRAY data qualifier to less than or equal.</p> <p>MOREEQUa1 sets the FLEXRAY data qualifier to greater than or equal.</p> <p>INrange sets the FLEXRAY data qualifier to in range.</p> <p>OUTrange sets the FLEXRAY data qualifier to out of range.</p>
Examples	<p>TRIGGER:A:BUS:B1:FLEXRAY:DATA:QUALIFIER LESSTHAN sets the data qualifier to LESSTHAN.</p>

TRIGGER:A:BUS:B1:FLEXRAY:DATA:QUALIFIER? might return
 TRIGGER:A:BUS:B1:FLEXRAY:DATA:QUALIFIER EQUAL indicating the data
 qualifier is EQUAL.

TRIGger:A:BUS:B<x>:FLEXray:DATa:SIZE

Sets or returns the length of the data string in bytes to be used for FLEXRAY trigger.

Group	Trigger
Syntax	TRIGger:A:BUS:B<x>:FLEXray:DATa:SIZE <NR1> TRIGger:A:BUS:B<x>:FLEXray:DATa:SIZE?
Arguments	<NR1> is the FLEXRAY data string length in bytes.
Examples	TRIGGER:A:BUS:B1:FLEXRAY:DATA:SIZE 8 sets the data string size to 8 bytes. TRIGGER:A:BUS:B1:FLEXRAY:DATA:SIZE? might return TRIGGER:A:BUS:B1:FLEXRAY:DATA:SIZE 1 indicating the data size is 1 byte.

TRIGger:A:BUS:B<x>:FLEXray:DATa:VALue

Sets or returns the low binary data string to be used for FLEXRAY trigger condition if trigger condition is ID or IDANDDATA.

Group	Trigger
Syntax	TRIGger:A:BUS:B<x>:FLEXray:DATa:VALue <QString> TRIGger:A:BUS:B<x>:FLEXray:DATa:VALue?
Arguments	<QString> is a quoted string that is the binary data string for a FLEXRAY trigger if the trigger condition is ID or IDANDDATA.
Examples	TRIGGER:A:BUS:B1:FLEXRAY:DATA:VALUE "11001101" sets the FLEXRAY data value for triggering to 11001101.

TRIGGER:A:BUS:B1:FLEXRAY:DATA:VALUE? might return
 TRIGGER:A:BUS:B1:FLEXRAY:DATA:VALUE "XXXXXXXX" indicating the
 FLEXRAY data value is don't care.

TRIGger:A:BUS:B<x>:FLEXray:EOFTYPE

Sets or returns the end of file type used for FLEXRAY trigger.

Group	Trigger
Syntax	TRIGger:A:BUS:B<x>:FLEXray:EOFTYPE {STAtic DYNAMic ANY} TRIGger:A:BUS:B<x>:FLEXray:EOFTYPE?
Arguments	STAtic specifies triggering on the STATIC end of file type. DYNAMic specifies triggering on the DYNAMIC end of file type. ANY specifies triggering on a STATIC or DYNAMIC end of file type.
Examples	TRIGGER:A:BUS:B1:FLEXRAY:EOFTYPE ANY sets the FLEXRAY end of file type to ANY. TRIGGER:A:BUS:B1:FLEXRAY:EOFTYPE? might return TRIGGER:A:BUS:B1:FLEXRAY:EOFTYPE STATIC indicating the FLEXRAY end of file type is STATIC

TRIGger:A:BUS:B<x>:FLEXray:ERRTYPE

Sets or returns the error type be used for FLEXRAY trigger.

Group	Trigger
Syntax	TRIGger:A:BUS:B<x>:FLEXray:ERRTYPE {CRCHeader CRCTrai ler SYNCFrame STARTupnosync NULLFRStati c NULLFRDynam i c} TRIGger:A:BUS:B<x>:FLEXray:ERRTYPE?
Arguments	CRCHeader sets the FLEXRAY error type for a trigger to CRCHeader. CRCTrai ler sets the FLEXRAY error type for a trigger to CRCTrailer. SYNCFrame sets the FLEXRAY error type for a trigger to SYNCFrame.

STARTupnosync sets the FLEXRAY error type for a trigger to STARTupnosync.
 NULLFRStatic sets the FLEXRAY error type for a trigger to NULLFRStatic.
 NULLFRDynamic sets the FLEXRAY error type for a trigger to NULLFRDynamic.

Examples TRIGGER:A:BUS:B1:FLEXRAY:ERRTYPE SYNCFRAME sets the FLEXRAY trigger type is SYNCFRAME.
 TRIGGER:A:BUS:B1:FLEXRAY:ERRTYPE? might return
 TRIGGER:A:BUS:B1:FLEXRAY:ERRTYPE CRCHEADER indicating the FLEXRAY trigger type is CRCHeader.

TRIGger:A:BUS:B<x>:FLEXray:FRAMEID:HIVALue

Sets or returns the binary data string to be used for FLEXRAY frame ID high value.

Group Trigger

Syntax TRIGger:A:BUS:B<x>:FLEXray:FRAMEID:HIVALue <QString>
 TRIGger:A:BUS:B<x>:FLEXray:FRAMEID:HIVALue?

Arguments <QString> is a quoted string that is the binary frame id high value.

Examples TRIGGER:A:BUS:B1:FLEXRAY:FRAMEID:HIVALUE "11001100101" sets the frame id high value to 11001100101.
 TRIGGER:A:BUS:B1:FLEXRAY:FRAMEID:HIVALUE? might return
 TRIGGER:A:BUS:B1:FLEXRAY:FRAMEID:HIVALUE "XXXXXXXXXXXX" indicating the frame id high value is don't care.

TRIGger:A:BUS:B<x>:FLEXray:FRAMEID:QUALifier

Sets or returns the FLEXRAY frame ID qualifier.

Group Trigger

Syntax TRIGger:A:BUS:B<x>:FLEXray:FRAMEID:QUALifier
 {LESSThan|MOREThan|EQUa|UNEQUa|LESSEQUa|MOREEQUa|INrange|OUTrange}
 TRIGger:A:BUS:B<x>:FLEXray:FRAMEID:QUALifier?

Arguments

LESSThan sets the frame id qualifier to less than.

MOREThan sets the frame id qualifier to greater than.

EQUa1 sets the frame id qualifier to equal.

UNEQUa1 sets the frame id qualifier to not equal.

LESSEQUa1 sets the frame id qualifier to less than or equal.

MOREEQUa1 sets the frame id qualifier to greater than or equal.

INrange sets the frame id qualifier to in range.

OUTrange sets the frame id qualifier to out of range.

Examples

TRIGGER:A:BUS:B1:FLEXRAY:FRAMEID:QUALIFIER LESSTHAN sets the frame id qualifier to less than.

TRIGGER:A:BUS:B1:FLEXRAY:FRAMEID:QUALIFIER? might return
TRIGGER:A:BUS:B1:FLEXRAY:FRAMEID:QUALIFIER EQUAL indicating the frame id qualifier is set to equal.

TRIGger:A:BUS:B<x>:FLEXray:FRAMEID:VALue

Sets or returns the binary data string to be used for FLEXRAY frame ID low value.

Group Trigger

Syntax TRIGger:A:BUS:B<x>:FLEXray:FRAMEID:VALue <QString>
TRIGger:A:BUS:B<x>:FLEXray:FRAMEID:VALue?

Arguments <QString> is a quoted string that is the FLEXRAY frame ID low value.

Examples

TRIGGER:A:BUS:B1:FLEXRAY:FRAMEID:VALUE "11001100101" sets the frame id value to 11001100101.

TRIGGER:A:BUS:B1:FLEXRAY:FRAMEID:VALUE? might return
TRIGGER:A:BUS:B1:FLEXRAY:FRAMEID:VALUE "XXXXXXXXXXXX" indicating the frame id value is don't care.

TRIGger:A:BUS:B<x>:FLEXray:FRAMEType

Sets or returns the frame type for FLEXRAY.

Group	Trigger
Syntax	<pre>TRIGger:A:BUS:B<x>:FLEXray:FRAMEType {NORMAl PAYLoad NULL SYNC STARTUp} TRIGger:A:BUS:B<x>:FLEXray:FRAMEType?</pre>
Arguments	<p>NORMAl specifies the normal frame type.</p> <p>PAYLoad specifies the payload frame type.</p> <p>NULL specifies the null frame type.</p> <p>SYNC specifies the sync frame type.</p> <p>STARTUp specifies the startup frame type.</p>
Examples	<p>TRIGGER:A:BUS:B1:FLEXRAY:FRAMETYPE PAYLOAD sets the frame type to payload.</p> <p>TRIGGER:A:BUS:B1:FLEXRAY:FRAMETYPE? might return</p> <p>TRIGGER:A:BUS:B1:FLEXRAY:FRAMETYPE NORMAL indicating the frame type is set to normal.</p>

TRIGger:A:BUS:B<x>:FLEXray:HEADER:CRC

Sets or returns the CRC portion of the binary header string to be used for FLEXRAY trigger.

Group	Trigger
Syntax	<pre>TRIGger:A:BUS:B<x>:FLEXray:HEADER:CRC <QString> TRIGger:A:BUS:B<x>:FLEXray:HEADER:CRC?</pre>
Arguments	<QString> is a quoted string that is the CRC portion of the binary header string.
Examples	<p>TRIGGER:A:BUS:B1:FLEXRAY:HEADER:CRC "11001100101" sets the CRC portion of the binary header string to 11001100101.</p> <p>TRIGGER:A:BUS:B1:FLEXRAY:HEADER:CRC? might return</p> <p>TRIGGER:A:BUS:B1:FLEXRAY:HEADER:CRC "XXXXXXXXXXXX" indicating the CRC portion of the binary header string is don't care.</p>

TRIGger:A:BUS:B<x>:FLEXray:HEADER:CYCLEcount

Sets or returns the cycle count portion of the binary header string to be used for FLEXRAY trigger.

Group	Trigger
Syntax	TRIGger:A:BUS:B<x>:FLEXray:HEADER:CYCLEcount <QString> TRIGger:A:BUS:B<x>:FLEXray:HEADER:CYCLEcount?
Arguments	<QString> is a quoted string that is the cycle count portion of the binary header string.
Examples	<p>TRIGGER:A:BUS:B1:FLEXRAY:HEADER:CYCLECOUNT "110010" sets the cycle count to 110010.</p> <p>TRIGGER:A:BUS:B1:FLEXRAY:HEADER:CYCLECOUNT? might return TRIGGER:A:BUS:B1:FLEXRAY:HEADER:CYCLECOUNT "XXXXXX" indicating the cycle count is don't care.</p>

TRIGger:A:BUS:B<x>:FLEXray:HEADER:FRAMEID

Sets or returns the frame id portion of the binary header string to be used for FLEXRAY trigger.

Group	Trigger
Syntax	TRIGger:A:BUS:B<x>:FLEXray:HEADER:FRAMEID <QString> TRIGger:A:BUS:B<x>:FLEXray:HEADER:FRAMEID?
Arguments	<QString> is a quoted string that is the frame id portion of the binary header string.
Examples	<p>TRIGGER:A:BUS:B1:FLEXRAY:HEADER:FRAMEID "11001100101" sets the frame id portion of the binary header string to 11001100101.</p> <p>TRIGGER:A:BUS:B1:FLEXRAY:HEADER:FRAMEID? might return TRIGGER:A:BUS:B1:FLEXRAY:HEADER:FRAMEID "XXXXXXXXXXXX" indicating the frame id portion of the binary header string are don't cares.</p>

TRIGger:A:BUS:B<x>:FLEXray:HEADER:INDBits

Sets or returns the indicator bits portion of the binary header string to be used for FLEXRAY trigger.

Group	Trigger
Syntax	TRIGger:A:BUS:B<x>:FLEXray:HEADER:INDBits <QString> TRIGger:A:BUS:B<x>:FLEXray:HEADER:INDBits?
Arguments	<QString> is a quoted string that is the indicator bits portion of the binary header string.
Examples	<p>TRIGGER:A:BUS:B1:FLEXRAY:HEADER:INDBITS "11001 sets the indicator bits portion of the header string to 11001.</p> <p>TRIGGER:A:BUS:B1:FLEXRAY:HEADER:INDBITS? might return TRIGGER:A:BUS:B1:FLEXRAY:HEADER:INDBITS "XXXXX" indicating that the indicator bits portion of the header string are don't cares.</p>

TRIGger:A:BUS:B<x>:FLEXray:HEADER:PAYLength

Sets or returns the payload length portion of the binary header string to be used for FLEXRAY trigger.

Group	Trigger
Syntax	TRIGger:A:BUS:B<x>:FLEXray:HEADER:PAYLength <QString> TRIGger:A:BUS:B<x>:FLEXray:HEADER:PAYLength?
Arguments	<QString> is the length of the payload portion of the Binary header string.
Examples	<p>TRIGGER:A:BUS:B1:FLEXRAY:HEADER:PAYLENGTH "1100101" sets the FLEXRAY header paylength to 1100101.</p> <p>TRIGGER:A:BUS:B1:FLEXRAY:HEADER:PAYLENGTH? might return TRIGGER:A:BUS:B1:FLEXRAY:HEADER:PAYLENGTH "XXXXXXX" indicating the FLEXRAY header paylength is don't care.</p>

TRIGger:A:BUS:B<x>:I2C:ADDReSS:MODe

Sets or returns the I²C address mode to 7 or 10-bit. Applies to bus <x>, where x is the bus number.

Conditions This command requires a DPO4EMBD application module.

Group Trigger

Syntax TRIGger:A:BUS:B<x>:I2C:ADDReSS:MODe {ADDR7|ADDR10}
TRIGger:A:BUS:B<x>:I2C:ADDReSS:MODe?

Arguments ADDR7 specifies the 7-bit I²C address mode.
ADDR10 specifies the 10-bit I²C address mode.

Examples TRIGGER:A:BUS:B1:I2C:ADDRESS:MODE ADDR10 sets the I2C address mode to 10-bit.

TRIGger:A:BUS:B<x>:I2C:ADDReSS:TYPe

Sets or returns the I²C address type. The only supported address type is USER. Applies to bus <x>, where x is the bus number.

Conditions This command requires a DPO4EMBD application module.

Group Trigger

Syntax TRIGger:A:BUS:B<x>:I2C:ADDReSS:TYPe
{GENERALcall|STARTbyte|HSmode|EEPROM|USER}
TRIGger:A:BUS:B<x>:I2C:ADDReSS:TYPe?

Arguments GENERALcall specifies a general call address.
STARTbyte specifies a start byte address.
HSmode specifies a high-speed mode address.
EEPROM specifies an EEPROM address.
USER specifies a user address.

TRIGger:A:BUS:B<x>:I2C:ADDRess:VALue

Sets or returns the binary address string used for the I²C trigger if the trigger condition is ADDRESS or ADDRANDDATA. Applies to bus <x>, where x is the bus number.

Conditions	This command requires a DPO4EMBD application module.
Group	Trigger
Syntax	TRIGger:A:BUS:B<x>:I2C:ADDRess:VALue <QString> TRIGger:A:BUS:B<x>:I2C:ADDRess:VALue?
Arguments	<QString> is up to 7 or 10-bits depending on the address mode that specifies the address. The only allowed characters in the QString are 0, 1, and X.
Examples	TRIGGER:A:BUS:B1:I2C:ADDRESS:VALUE 1011 sets the I ² C address value to XXX1011.

TRIGger:A:BUS:B<x>:I2C:CONDition

Sets or returns the trigger condition for an I²C trigger. Applies to bus <x>, where x is the bus number.

Conditions	This command requires a DPO4EMBD application module.
Group	Trigger
Syntax	TRIGger:A:BUS:B<x>:I2C:CONDition {START STOP REPEATstart ACKMISS ADDRESS DATA ADDRANDDATA} TRIGger:A:BUS:B<x>:I2C:CONDition?
Arguments	<p>START specifies a search based on start condition.</p> <p>STOP specifies a search based on stop condition.</p> <p>REPEATstart specifies a search based on repeat of start condition.</p> <p>ACKMISS specifies a search based on missing acknowledgement condition.</p> <p>ADDRESS specifies a search based on address.</p>

DATA specifies a search based on data.

ADDRANDDATA specifies a search based on address and data.

Examples TRIGGER:A:BUS:B1:I2C:CONDITION START specifies start as the I²C trigger condition.

TRIGger:A:BUS:B<x>:I2C:DATA:DIRection

Sets or returns the I²C trigger type to be valid on a Read, Write, or Either condition. Read or write is indicated by the R/W bit in the I²C protocol. Applies to bus <x>, where x is the bus number.

Conditions This command requires a DPO4EMBD application module.

Group Trigger

Syntax TRIGger:A:BUS:B<x>:I2C:DATA:DIRection {READ|WRITE|NOCARE}
TRIGger:A:BUS:B<x>:I2C:DATA:DIRection?

Arguments READ specifies read as the data direction.
WRITE specifies write as the data direction.
NOCARE specifies either as the data direction.

Examples TRIGGER:A:BUS:B1:I2C:DATA:DIRECTION WRITE specifies write as the I²C data direction.

TRIGger:A:BUS:B<x>:I2C:DATA:SIZe

Sets or returns the length of the data string in bytes to be used for an I²C trigger if the trigger condition is DATA or ADDRANDDATA. Applies to bus <x>, where x is the bus number.

Conditions This command requires a DPO4EMBD application module.

Group Trigger

Syntax `TRIGger:A:BUS:B<x>:I2C:DATA:SIZE <NR1>`
`TRIGger:A:BUS:B<x>:I2C:DATA:SIZE?`

Arguments `<NR1>` is the length of the data string in bytes.

TRIGger:A:BUS:B<x>:I2C:DATA:VALue

Sets or returns the binary data string used for I2C triggering if the trigger condition is DATA or ADDRANDDATA. Applies to bus `<x>`, where `x` is the bus number.

Conditions This command requires a DPO4EMBD application module.

Group Trigger

Syntax `TRIGger:A:BUS:B<x>:I2C:DATA:VALue <QString>`
`TRIGger:A:BUS:B<x>:I2C:DATA:VALue?`

Arguments `<QString>` is the binary data string, where the number of bits is 8 times the number of bytes specified. The only allowed characters in the string are 0, 1, and X.

TRIGger:A:BUS:B<x>:LIN:CONDition

Sets or returns the trigger condition for LIN.

Group Trigger

Syntax `TRIGger:A:BUS:B<x>:LIN:CONDition`
`{SYNCFieLd|IDentifier|DATA|IDANDDATA|WAKEup|SLEEP|ERROR}`
`TRIGger:A:BUS:B<x>:LIN:CONDition?`

Arguments `SYNCFieLd` sets the LIN trigger condition to sync field.
`IDentifier` sets the LIN trigger condition to identifier.
`DATA` sets the LIN trigger condition to data.
`IDANDDATA` sets the LIN trigger condition to id and data.
`WAKEup` sets the LIN trigger condition to wake up.
`SLEEP` sets the LIN trigger condition to sleep.

ERROR sets the LIN trigger condition to error.

Examples `TRIGGER:A:BUS:B1:LIN:CONDITION ERROR` sets the LIN trigger condition to error.

`TRIGGER:A:BUS:B1:LIN:CONDITION?` might return
`TRIGGER:A:BUS:B1:LIN:CONDITION SYNCFIELD` indicating the LIN trigger condition is sync field.

TRIGger:A:BUS:B<x>:LIN:DATA:HIVALue

Sets or returns the binary data string to be used for LIN trigger if trigger condition is ID or IDANDDATA.

Group Trigger

Syntax `TRIGger:A:BUS:B<x>:LIN:DATA:HIVALue <QString>`
`TRIGger:A:BUS:B<x>:LIN:DATA:HIVALue?`

Arguments `<QString>` is a quoted string that is the binary data string used for LIN trigger if the trigger condition is ID or IDANDDATA.

Examples `TRIGGER:A:BUS:B1:LIN:DATA:HIVALUE "11001010"` sets the high value to 11001010.

`TRIGGER:A:BUS:B1:LIN:DATA:HIVALUE?` might return
`TRIGGER:A:BUS:B1:LIN:DATA:HIVALUE "XXXXXXXX"` indicating the high value is don't care.

TRIGger:A:BUS:B<x>:LIN:DATA:QUALifier

Sets or returns the LIN data qualifier. This only applies if the trigger condition is IDANDDATA or DATA.

Group Trigger

Syntax `TRIGger:A:BUS:B<x>:LIN:DATA:QUALifier`
`{LESSThan|MOREThan|EQUAL|UNEQUAL|LESSEQUAL|MOREEQUAL|`
`INrange|OUTrange}`
`TRIGger:A:BUS:B<x>:LIN:DATA:QUALifier?`

Arguments	LESSThan sets the LIN data qualifier to less than.
	MOREThan sets the LIN data qualifier to greater than.
	EQUa1 sets the LIN data qualifier to equal.
	UNEQUa1 sets the LIN data qualifier to not equal.
	LESSEQUa1 sets the LIN data qualifier to less than or equal.
	MOREEQUa1 sets the LIN data qualifier to greater than or equal.
	INrange sets the LIN data qualifier to in range.
	OUTrange sets the LIN data qualifier to out of range.
Examples	TRIGGER:A:BUS:B1:LIN:DATA:QUALIFIER OUTRANGE sets the data qualifier to out of range.
	TRIGGER:A:BUS:B1:LIN:DATA:QUALIFIER? might return
	TRIGGER:A:BUS:B1:LIN:DATA:QUALIFIER EQUAL indicating the data qualifier is set to equal.

TRIGger:A:BUS:B<x>:LIN:DATA:SIZE

Sets or returns the length of the data string in bytes to be used for LIN trigger.

Group	Trigger
Syntax	TRIGger:A:BUS:B<x>:LIN:DATA:SIZE <NR1> TRIGger:A:BUS:B<x>:LIN:DATA:SIZE?
Arguments	<NR1> is the size of the data string in bytes.
Examples	TRIGGER:A:BUS:B1:LIN:DATA:SIZE 8 sets the data size to 8 bytes.
	TRIGGER:A:BUS:B1:LIN:DATA:SIZE? might return
	TRIGGER:A:BUS:B1:LIN:DATA:SIZE 1 indicating the data size is 1 byte.

TRIGger:A:BUS:B<x>:LIN:DATA:VALue

Sets or returns the binary data string to be used for LIN trigger condition if trigger condition is ID or IDANDDATA.

Group	Trigger
--------------	---------

Syntax `TRIGger:A:BUS:B<x>:LIN:DATA:VALUE <QString>`
`TRIGger:A:BUS:B<x>:LIN:DATA:VALUE?`

Arguments `<QString>` is a quoted string that is the LIN trigger data value.

Examples `TRIGGER:A:BUS:B1:LIN:DATA:VALUE "11001101"` sets the data value to 11001101.

`TRIGGER:A:BUS:B1:LIN:DATA:VALUE?` might return
`TRIGGER:A:BUS:B1:LIN:DATA:VALUE "XXXXXXXX"` indicating the data value is don't care.

TRIGger:A:BUS:B<x>:LIN:ERRTYPE

Sets or returns the error type be used for LIN trigger.

Group Trigger

Syntax `TRIGger:A:BUS:B<x>:LIN:ERRTYPE`
`{SYNC|PARity|Checksum|HEADertime|RESPtime|FRAMetime}`
`TRIGger:A:BUS:B<x>:LIN:ERRTYPE?`

Arguments `SYNC` sets the LIN error type to SYNC.
`PARity` sets the LIN error type to parity.
`Checksum` sets the LIN error type to checksum.
`HEADertime` sets the LIN error type to header time.
`RESPtime` sets the LIN error type to response time.
`FRAMetime` sets the LIN error type to frame time.

Examples `TRIGGER:A:BUS:B1:LIN:ERRTYPE CHECKSUM` sets the LIN error type to checksum.

`TRIGGER:A:BUS:B1:LIN:ERRTYPE?` might return
`TRIGGER:A:BUS:B1:LIN:ERRTYPE SYNC` indicating the LIN error type is SYNC.

TRIGger:A:BUS:B<x>:LIN:IDentifier:VALue

Sets or returns the binary address string used for LIN trigger if the trigger condition is ID or IDANDDATA.

Group	Trigger
Syntax	TRIGger:A:BUS:B<x>:LIN:IDentifier:VALue <QString> TRIGger:A:BUS:B<x>:LIN:IDentifier:VALue?
Arguments	<QString> is the binary address string used for LIN trigger if the trigger condition is ID or IDANDDATA.
Examples	TRIGGER:A:BUS:B1:LIN:IDENTIFIER:VALUE "110010" sets the identifier value to 110010. TRIGGER:A:BUS:B1:LIN:IDENTIFIER:VALUE? might return TRIGGER:A:BUS:B1:LIN:IDENTIFIER:VALUE "XXXXXX" indicating the identifier value is XXXXXX.

TRIGger:A:BUS:B<x>:PARallel:VALue

Sets or returns the binary data string to be used for a Parallel trigger. Applies to bus <x>, where x is the bus number.

Group	Trigger
Syntax	TRIGger:A:BUS:B<x>:PARallel:VALue <QString> TRIGger:A:BUS:B<x>:PARallel:VALue?
Arguments	<QString> is the binary data string.

TRIGger:A:BUS:B<x>:RS232C:CONDition

Sets or returns the condition for an RS-232C trigger, where x is the bus number.

Conditions	This command requires a DPO4COMP application module.
Group	Trigger

Syntax TRIGger:A:BUS:B<x>:RS232C:CONDition
{RXSTART|RXDATA|RXENDPacket|TXSTART|TXDATA|TXENDPacket}
TRIGger:A:BUS:B<x>:RS232C:CONDition?

Arguments RXSTART specifies a search based on the RX Start Bit.
RXDATA specifies a search based on RX Data.
RXENDPacket specifies a search based on the RX End of Packet condition.
TXSTART specifies a search base on the TX Start Bit.
TXDATA specifies a search based on TX Data.
TXENDPacket specifies a search based on the TX End of Packet condition.

TRIGger:A:BUS:B<x>:RS232C:RX:DATa:SIZE

Sets or returns the length of the data string in Bytes for an RS-232 Trigger if the trigger condition is RXDATA. Applies to bus <x>, where x is the bus number.

Conditions This command requires a DPO4COMP application module.

Group Trigger

Syntax TRIGger:A:BUS:B<x>:RS232C:RX:DATa:SIZE <NR1>
TRIGger:A:BUS:B<x>:RS232C:RX:DATa:SIZE?

Arguments <NR1> is the length of the data string in bytes.

TRIGger:A:BUS:B<x>:RS232C:RX:DATa:VALue

Sets or returns the binary data string for an RS-232 trigger if the trigger condition involves RX. Applies to bus <x>, where x is the bus number.

Conditions This command requires a DPO4COMP application module.

Group Trigger

Syntax TRIGger:A:BUS:B<x>:RS232C:RX:DATa:VALue
TRIGger:A:BUS:B<x>:RS232C:RX:DATa:VALue?

Arguments <Qstring> is the binary data string to be used for the trigger.

TRIGger:A:BUS:B<x>:RS232C:TX:DATa:SIZE

Sets or returns the length of the data string for an RS-232 trigger if the trigger condition is TXDATA. Applies to bus <x>, where x is the bus number.

Conditions This command requires a DPO4COMP application module.

Group Trigger

Syntax TRIGger:A:BUS:B<x>:RS232C:TX:DATa:SIZE <NR1>
TRIGger:A:BUS:B<x>:RS232C:TX:DATa:SIZE?

Arguments <NR1> is the length of the data string in Bytes.

TRIGger:A:BUS:B<x>:RS232C:TX:DATa:VALue

Sets or returns the binary data string for an RS-232 trigger if the condition involves TX. Applies to bus <x>, where x is the bus number.

Conditions This command requires a DPO4COMP application module.

Group Trigger

Syntax TRIGger:A:BUS:B<x>:RS232C:TX:DATa:VALue
TRIGger:A:BUS:B<x>:RS232C:TX:DATa:VALue?

Arguments <Qstring> is the binary data string to be used for the trigger.

TRIGger:A:BUS:B<x>:SPI:CONDition

Sets or returns the trigger condition for a SPI trigger. Applies to bus <x>, where x is the bus number.

Conditions This command requires a DPO4EMBD application module.

Group	Trigger
Syntax	<pre>TRIGger:A:BUS:B<x>:SPI:CONDition {SS STARTofframe MISO MOSI MISOMOSI} TRIGger:A:BUS:B<x>:SPI:CONDition?</pre>
Related Commands	BUS:B<x>:SPI:IDLETime , BUS:B<x>:SPI:FRAMING
Arguments	<p>SS specifies the Slave Selection condition.</p> <p>STARTofframe is applicable when <code>BUS:B<x>:SPI:FRAMING</code> is set to <code>IDLETime</code>. When the trigger condition is set to <code>STARTofframe</code>, the instrument triggers on the first SPI clock after an idle time when there are no clocks.</p> <p>MISO specifies the Master-In Slave-Out condition.</p> <p>MOSI specifies the Master-Out Slave-In condition.</p> <p>MISOMOSI specifies the Master-In Slave-Out and Master-Out Slave-In conditions.</p>

TRIGger:A:BUS:B<x>:SPI:DATA{:IN|MISO}:VALue

Sets or returns the binary data string to be used for a SPI trigger if the trigger condition is MISO or MISOMOSI. Applies to bus <x>, where x is the bus number.

Conditions	This command requires a DPO4EMBD application module.
Group	Trigger
Syntax	<pre>TRIGger:A:BUS:B<x>:SPI:DATA{:IN MISO}:VALue <QString> TRIGger:A:BUS:B<x>:SPI:DATA{:IN MISO}:VALue?</pre>
Arguments	<QString> is the binary data string, where the number of bits is 8 times the number of bytes specified. The only allowed characters in the string are 0, 1, and X.

TRIGger:A:BUS:B<x>:SPI:DATA{:OUT|MOSI}:VALue

Sets or returns the binary data string to be used for a SPI trigger if the trigger condition is MOSI or MISOMOSI. Applies to bus <x>, where x is the bus number.

Conditions	This command requires a DPO4EMBD application module.
-------------------	--

Group	Trigger
Syntax	<pre>TRIGger:A:BUS:B<x>:SPI:DATa{:OUT :MOSI}:VALue <QString> TRIGger:A:BUS:B<x>:SPI:DATa{:OUT :MOSI}:VALue?</pre>
Arguments	<p><QString> is the binary data string with the number of bits specified by the TRIGger:A:BUS:B<x>:SPI:DATa:SIZE command. The only allowed characters in the QString are 0, 1, and X.</p>

TRIGger:A:BUS:B<x>:SPI:DATa:SIZE

Sets or returns the length of the data string to be used for a SPI trigger if the trigger condition is MISO, MOSI, or MISOMOSI. Applies to bus <x>, where x is the bus number.

Conditions	This command requires a DPO4EMBD application module.
-------------------	--

Group	Trigger
Syntax	<pre>TRIGger:A:BUS:B<x>:SPI:DATa:SIZE <NR1> TRIGger:A:BUS:B<x>:SPI:DATa:SIZE?</pre>
Arguments	<NR1> is the length of the data string in bytes.

TRIGger:A:BUS:B<x>:USB:ADDRess:HIVALue

Sets or returns the binary address string for the upper limit for inside-of-range and outside-of-range qualifiers for the USB trigger. Use the command [TRIGger:A:BUS:B<x>:USB:ADDRess:VALue](#) to set the lower limit.

Conditions	This command requires the DPO4USB application module.
-------------------	---

Group	Trigger
Syntax	<pre>TRIGger:A:BUS:B<x>:USB:ADDRess:HIVALue <QString> TRIGger:A:BUS:B<x>:USB:ADDRess:HIVALue?</pre>

Related Commands	TRIGger:A:BUS:B<x>:USB:CONDition , TRIGger:A:BUS:B<x>:USB:ADDReSS:VALue
Arguments	<QString> within the range 0000000 to 1111111 (00 hex to 7F hex).
Examples	<p>TRIGGER:A:BUS:B1:USB:ADDRESS:HIVALUE "0001000" sets the upper limit to binary 0001000 (08 hex).</p> <p>TRIGGER:A:BUS:B1:USB:ADDRESS:HIVALUE? might return :TRIGGER:A:BUS:B1:USB:ADDRESS:HIVALUE "1111111", which indicates that the upper limit is 1111111 (7F hex).</p>

TRIGger:A:BUS:B<x>:USB:ADDReSS:VALue

Sets or returns the binary address string to be used for USB trigger.

This command also sets or returns the binary address string for the lower limit for inside-of-range and outside-of-range qualifiers for the USB trigger.

Conditions	This command requires the DPO4USB application module.
Group	Trigger
Syntax	<p>TRIGger:A:BUS:B<x>:USB:ADDReSS:VALue <QString></p> <p>TRIGger:A:BUS:B<x>:USB:ADDReSS:VALue?</p>
Related Commands	TRIGger:A:BUS:B<x>:USB:CONDition
Arguments	<QString> within the range 0000000 to 1111111 (00 hex to 7F hex).
Examples	<p>TRIGGER:A:BUS:B1:USB:ADDRESS:VALUE "0001000" sets the binary address to 0001000 (08 hex).</p> <p>TRIGGER:A:BUS:B1:USB:ADDRESS:VALUE? might return :TRIGGER:A:BUS:B1:USB:ADDRESS:VALUE "1000000", which indicates that the binary address is 100000 (40 hex).</p>

TRIGger:A:BUS:B<x>:USB:CONDition

Sets or returns the trigger condition for the USB trigger.

Conditions	This command requires the DPO4USB application module.
Group	Trigger
Syntax	<pre> TRIGger:A:BUS:B<x>:USB:CONDition {SYNC RESET SUSPEND RESUME EOP TOKENPacket DATAPacket HANDSHAKEPacket SPECIALPacket ERROR} TRIGger:A:BUS:B<x>:USB:CONDition? </pre>
Arguments	<p>SYNC indicates triggering on a Sync field of a packet.</p> <p>RESET sets triggering on a reset condition.</p> <p>SUSPEND sets triggering on a suspend condition.</p> <p>RESUME sets triggering on a resume condition.</p> <p>EOP indicates triggering on an end-of-packet signal.</p> <p>TOKENPacket indicates triggering on a token packet.</p> <p>DATAPacket indicates triggering on a data packet</p> <p>HANDSHAKEPacket indicates triggering on a handshake packet.</p> <p>SPECIALPacket indicates triggering on a special status packet.</p> <p>ERROR indicates triggering on an error condition.</p>
Examples	<p>TRIGGER:A:BUS:B1:USB:CONDITION TOKENPACKET sets the trigger condition to be a token packet.</p> <p>TRIGGER:A:BUS:B1:USB:CONDITION? might return :TRIGGER:A:BUS:B1:USB:CONDITION SYNC, which indicates that the trigger condition is a sync field.</p>

TRIGger:A:BUS:B<x>:USB:DATA:HIVALue

Sets or returns the binary data string for the upper limit for inside-of-range and outside-of-range qualifiers for the USB trigger when the trigger condition is DATAPacket. Use the command [TRIGger:A:BUS:B<x>:USB:DATA:VALue](#) to set the lower limit.

Conditions	This command requires the DPO4USB application module.
Group	Trigger

Syntax	TRIGger:A:BUS:B<x>:USB:DATA:HIVALue <QString> TRIGger:A:BUS:B<x>:USB:DATA:HIVALue?
Related Commands	TRIGger:A:BUS:B<x>:USB:CONDition , TRIGger:A:BUS:B<x>:USB:DATA:VALue
Arguments	<QString> within the range 00000000 to 11111111 (00 hex to FF hex).
Examples	<p>TRIGGER:A:BUS:B1:USB:DATA:HIVALUE "00001000" sets the upper limit to binary 00001000 (08 hex).</p> <p>TRIGGER:A:BUS:B1:USB:DATA:HIVALUE? might return :TRIGGER:A:BUS:B1:USB:DATA:HIVALUE "01111111", which indicates that the upper limit is 01111111 (7F hex).</p>

TRIGger:A:BUS:B<x>:USB:DATA:OFFSet

Sets or returns the data offset in bytes to trigger on. The minimum and default values are 0 and the maximum is 1024.

Conditions	This command requires the DPO4USB application module.
Group	Trigger
Syntax	TRIGger:A:BUS:B<x>:USB:DATA:OFFSet <NR1> TRIGger:A:BUS:B<x>:USB:DATA:OFFSet?
Related Commands	TRIGger:A:BUS:B<x>:USB:CONDition
Arguments	<NR1> is number in the range 0 to 1024.
Examples	<p>TRIGGER:A:BUS:B1:USB:DATA:OFFSET 36 sets the data offset to 36.</p> <p>TRIGGER:A:BUS:B1:USB:DATA:OFFSET? might return :TRIGGER:A:BUS:B1:USB:DATA:OFFSET 0, indicating that the data offset is the default value, 0.</p>

TRIGger:A:BUS:B<x>:USB:DATA:SIZE

Sets or returns the number of contiguous data bytes to trigger on. The minimum and default values are 1 and maximum is 16.

Conditions This command requires the DPO4USB application module.

Group Trigger

Syntax TRIGger:A:BUS:B<x>:USB:DATA:SIZE <NR1>
TRIGger:A:BUS:B<x>:USB:DATA:SIZE?

Arguments <NR1> is number in the range 1 to 16.

Examples TRIGGER:A:BUS:B1:USB:DATA:SIZE 4 sets the oscilloscope to trigger on four contiguous data bytes.

TRIGGER:A:BUS:B1:USB:DATA:SIZE? might return
:TRIGGER:A:BUS:B1:USB:DATA:SIZE 6 indicating that the oscilloscope will trigger on 6 contiguous data bytes.

TRIGger:A:BUS:B<x>:USB:DATA:TYPE

Sets or returns the data type for when the trigger condition is set to DATAPacket.

Conditions This command requires the DPO4USB application module.

Group Trigger

Syntax TRIGger:A:BUS:B<x>:USB:DATA:TYPE {ANY|DATA0|DATA1}
TRIGger:A:BUS:B<x>:USB:DATA:TYPE?

Related Commands [TRIGger:A:BUS:B<x>:USB:CONDition](#)

Arguments ANY indicates either a DATA0 or DATA1 data packet type.
DATA0 indicates a DATA0 data packet type.
DATA1 indicates a DATA1 data packet type.

Examples `TRIGGER:A:BUS:B1:USB:DATA:TYPE DATA0` sets the oscilloscope to trigger on a DATA0 data packet type.

`TRIGGER:A:BUS:B1:USB:DATA:TYPE?` might return
`:TRIGGER:A:BUS:B1:USB:DATA:TYPE DATA1`, indicating that the data packet type is set to DATA1.

TRIGger:A:BUS:B<x>:USB:DATA:VALue

Sets or returns the binary data string to be used for the USB trigger when the trigger condition is DATAPacket.

This command also sets or returns the binary data string for the lower limit for inside-of-range and outside-of-range qualifiers for the USB trigger when trigger condition is DATAPacket.

Conditions This command requires the DPO4USB application module.

Group Trigger

Syntax `TRIGger:A:BUS:B<x>:USB:DATA:VALue <QString>`
`TRIGger:A:BUS:B<x>:USB:DATA:VALue?`

Related Commands [TRIGger:A:BUS:B<x>:USB:CONDition](#)

Arguments <QString> within the range 00000000 to 11111111 (00 hex to FF hex).

Examples `TRIGGER:A:BUS:B1:USB:DATA:VALUE "00001000"` sets the binary address to 00001000 (08 hex).

`TRIGGER:A:BUS:B1:USB:DATA:VALUE?` might return
`:TRIGGER:A:BUS:B1:USB:DATA:VALUE "01000000"`, which indicates that the binary address is 01000000 (40 hex).

TRIGger:A:BUS:B<x>:USB:ENDPoint:VALue

Sets or returns the binary endpoint string to be used for the USB trigger.

Conditions This command requires the DPO4USB application module.

Group Trigger

Syntax	<pre>TRIGger:A:BUS:B<x>:USB:ENDPoint:VALue <QString> TRIGger:A:BUS:B<x>:USB:ENDPoint:VALue?</pre>
Related Commands	TRIGger:A:BUS:B<x>:USB:CONDition
Arguments	<QString> within the range 0000 to 1111 (00 hex to 0F hex).
Examples	<p>TRIGGER:A:BUS:B1:USB:ENDPOINT:VALUE "1000" sets the binary address to 1000 (08 hex).</p> <p>TRIGGER:A:BUS:B1:USB:ENDPOINT:VALUE? might return :TRIGGER:A:BUS:B1:USB:ENDPOINT:VALUE "1001", which indicates that the binary address is 1001 (09 hex).</p>

TRIGger:A:BUS:B<x>:USB:ERRORTYPE

Sets or returns the error type used when the trigger condition is set to ERRor.

Conditions	This command requires the DPO4USB application module.
Group	Trigger
Syntax	<pre>TRIGger:A:BUS:B<x>:USB:ERRORTYPE {PID CRC5 CRC16 BITSTUFFing} TRIGger:A:BUS:B<x>:USB:ERRORTYPE?</pre>
Related Commands	TRIGger:A:BUS:B<x>:USB:CONDition
Arguments	<p>PID indicates the error type is set to packet ID.</p> <p>CRC5 indicates the error type is set to 5-bit CRC.</p> <p>CRC16 indicates the error type is set to 16-bit CRC.</p> <p>BITSTUFFing indicates the error type is set to bit stuffing.</p>
Examples	<p>TRIGGER:A:BUS:B1:USB:CONDITION PID sets the error trigger condition to packet ID.</p> <p>TRIGGER:A:BUS:B1:USB:CONDITION? might return :TRIGGER:A:BUS:B1:USB:CONDITION PID, indicating the error trigger condition is packet ID.</p>

TRIGger:A:BUS:B<x>:USB:HANDSHAKEType

Sets or returns the handshake type for the USB trigger.

Conditions This command requires the DPO4USB application module.

Group Trigger

Syntax TRIGger:A:BUS:B<x>:USB:HANDSHAKEType {ANY|NAK|ACK|STALL}
TRIGger:A:BUS:B<x>:USB:HANDSHAKEType?

Related Commands [TRIGger:A:BUS:B<x>:USB:CONDition](#)

Arguments ANY indicates the oscilloscope will trigger on any handshake type.
NAK indicates the oscilloscope will trigger when a device cannot send or receive data.
ACK indicates the oscilloscope will trigger when a packet is successfully received.
STALL indicates the oscilloscope will trigger when a device requires intervention from the host.

Examples TRIGGER:A:BUS:B1:USB:HANDSHAKETYPE ACK sets the handshake type to acknowledgement.
TRIGGER:A:BUS:B1:USB:HANDSHAKETYPE? might return
:TRIGGER:A:BUS:B1:USB:HANDSHAKETYPE STALL, indicating that the handshake type is set to stall.

TRIGger:A:BUS:B<x>:USB:QUALifier

Sets or returns the USB trigger qualifier for address, endpoint and data.

Conditions This command requires the DPO4USB application module.

Group Trigger

Syntax TRIGger:A:BUS:B<x>:USB:QUALifier
{LESSThan|MOREThan|EQua1|UNEQua1|LESSEQua1
|MOREEQua1|INrange|OUTrange}
TRIGger:A:BUS:B<x>:USB:QUALifier?

Related Commands [TRIGger:A:BUS:B<x>:USB:CONDition](#)

Arguments

- LESSThan triggers on an input value that is less than a set value.
- MOREThan triggers on an input value that is greater than a set value.
- EQUa1 triggers on an input value that is equal to a set value.
- UNEQUa1 triggers on an input value that is not equal to a set value.
- LESSEQUa1 triggers on an input value that is less than or equal to a set value.
- MOREEQUa1 triggers on an input value that is more than or equal to a set value.
- INrange triggers on an input value that is within a range set by two values.
- OUTrange triggers on an input value that is outside of a range set by two values.

Examples

TRIGGER:A:BUS:B1:USB:QUALIFIER LESSTHAN sets the oscilloscope to trigger when an address, data, or endpoint value is less than a set value.

TRIGGER:A:BUS:B1:USB:QUALIFIER? might return
:TRIGGER:A:BUS:B1:USB:QUALIFIER EQUAL indicating that the trigger condition is to trigger when an address, data, or endpoint is equal to a set value.

TRIGger:A:BUS:B<x>:USB:SOFFRAMENUMber

Sets or returns the binary data string to be used for start of frame number, when the trigger condition is Token Packet and the token type is Start of Frame.

Conditions This command requires the DPO4USB application module.

Group Trigger

Syntax

```
TRIGger:A:BUS:B<x>:USB:SOFFRAMENUMber <QString>
TRIGger:A:BUS:B<x>:USB:SOFFRAMENUMber?
```

Related Commands [TRIGger:A:BUS:B<x>:USB:CONDition](#)

Arguments <QString> within the range 000 0000 0000 to 111 1111 1111 (000 hex to 7FF hex).

Examples

TRIGGER:A:BUS:B1:USB:SOFFRAMENUMBER "00000001000" sets the start of frame number to 00000001000 (008 hex).

TRIGGER:A:BUS:B1:USB:SOFFRAMENUMBER? might return
:TRIGGER:A:BUS:B1:USB:SOFFRAMENUMBER "00000001001", which
indicates that the start of frame number is 00000001001 (009 hex).

TRIGger:A:BUS:B<x>:USB:SPECIALType

Sets or returns the packet ID (PID) for the special packet.

Conditions This command requires the DPO4USB application module.

Group Trigger

Syntax TRIGger:A:BUS:B<x>:USB:SPECIALType {ANY|PREAmble|RESERVED}
TRIGger:A:BUS:B<x>:USB:SPECIALType?

Related Commands [TRIGger:A:BUS:B<x>:USB:CONDition](#)

Arguments ANY indicates any type of special packet.
PREAmble indicates a preamble special packet.
RESERVED indicates a reserved special packet.

Examples TRIGGER:A:BUS1:USB:SPECIALTYPE PREAMBLE sets the special packet type to preamble.
TRIGGER:A:BUS1:USB:SPECIALTYPE? might return
:TRIGGER:A:BUS1:USB:SPECIALTYPE PREAMBLE, indicating that the special type is set to preamble.

TRIGger:A:BUS:B<x>:USB:TOKENType

Sets or returns the token type for the USB trigger.

Conditions This command requires the DPO4USB application module.

Group Trigger

Syntax TRIGger:A:BUS:B<x>:USB:TOKENType {ANY|SOF|OUT|IN|SETUP}
TRIGger:A:BUS:B<x>:USB:TOKENType?

Related Commands [TRIGger:A:BUS:B<x>:USB:CONDition](#)

Arguments ANY
 indicates any of the token types.
 SOF indicates a SOF (start-of-frame) token type
 OUT indicates an OUT token type.
 IN indicates an IN token type.
 SETUP indicates a SETUP token type.

Examples TRIGGER:A:BUS:B1:USB:TOKENTYPE SETUP sets the token type to SETUP.
 TRIGGER:A:BUS:B1:USB:TOKENTYPE? might return
 :TRIGGER:A:BUS:B1:USB:TOKENTYPE SOF if the token type is SOF.

TRIGger:A:BUS:SOURce

Sets or returns the source for a Serial bus trigger.

Conditions This command requires a DPO4AUTO or DPO4EMBD application module.

Group Trigger

Syntax TRIGger:A:BUS:SOURce {B1|B2|B3|B4}
 TRIGger:A:BUS:SOURce?

Arguments B1 specifies the Bus 1 source.
 B2 specifies the Bus 2 source.
 B3 specifies the Bus 3 source.
 B4 specifies the Bus 4 source.

TRIGger:A:EDGE? (Query Only)

Returns the trigger source, coupling, and slope for the A edge trigger.

Group Trigger

Syntax TRIGger:A:EDGE?

Related Commands [TRIGger:A:PULse?](#), [TRIGger:A:LOGic?](#)

Examples TRIGGER:A:EDGE? might return :TRIGGER:A:EDGE:SOURCE CH1;COUPLING DC; SLOPE RISE indicating the trigger source, coupling, and slope for the A edge trigger.

TRIGger:A:EDGE:COUPLing

Sets or returns the type of coupling for the A edge trigger.

Group Trigger

Syntax TRIGger:A:EDGE:COUPLing {DC|HFRej|LFRej|NOISerej}
TRIGger:A:EDGE:COUPLing?

Related Commands [TRIGger:A:EDGE:SOUrce](#), [TRIGger:A:EDGE:SLOpe](#)

Arguments DC specifies DC trigger coupling, which passes all input signals to the trigger circuitry.

HFRej specifies high-frequency rejection coupling, which attenuates signals above 50 kHz before passing the signals to the trigger circuitry.

LFRej specifies low-frequency rejection coupling, which attenuates signals below 50 kHz before passing the signals to the trigger circuitry.

NOISerej specifies noise-rejection coupling, which provides stable triggering by increasing the trigger hysteresis. Increased hysteresis reduces the trigger sensitivity to noise but may require greater trigger signal amplitude.

Examples TRIGGER:A:EDGE:COUPLING DC sets the A edge trigger coupling to DC.

TRIGGER:A:EDGE:COUPLING? might return :TRIGGER:A:EDGE:COUPLING DC indicating that the A edge trigger coupling is set to DC.

TRIGger:A:EDGE:SLOpe

Sets or returns the slope for the A edge trigger.

Group	Trigger
Syntax	TRIGger:A:EDGE:SLOpe {RISe FALL} TRIGger:A:EDGE:SLOpe?
Related Commands	TRIGger:A:EDGE:SOUrce , TRIGger:A:EDGE:COUPling
Arguments	RISe specifies to trigger on the rising or positive edge of a signal. FALL specifies to trigger on the falling or negative edge of a signal.
Examples	TRIGGER:A:EDGE:SLOPE RISE sets the A edge trigger slope to positive, which triggers on the rising edge of the signal. TRIGGER:A:EDGE:SLOPE? might return :TRIGGER:A:EDGE:SLOPE FALL indicating that the A edge trigger slope is negative.

TRIGger:A:EDGE:SOUrce

Sets or returns the source for the A edge trigger.

Group	Trigger
Syntax	TRIGger:A:EDGE:SOUrce {CH1 CH2 CH3 CH4 D0 D1 D2 D3 D4 D5 D6 D7 D8 D9 D10 D11 D12 D13 D14 D15 EXT LINE AUX} TRIGger:A:EDGE:SOUrce?
Related Commands	TRIGger:A:EDGE:SLOpe , TRIGger:A:EDGE:COUPling
Arguments	CH1–CH4 specifies an analog input channel as the A edge trigger source. D0–D15 specifies a digital channel as the source (MSO models only). EXT specifies an external trigger using the Aux In connector located on the front panel of the oscilloscope. LINE specifies the AC line as the trigger source. AUX specifies the Auxiliary Input as the trigger source (if available on your oscilloscope).

Examples `TRIGGER:A:EDGE:SOURCE CH1` sets channel 1 as the A edge trigger source.
`TRIGGER:A:EDGE:SOURCE?` might return `:TRIGGER:A:EDGE:SOURCE CH1` indicating that channel 1 is the A edge trigger source.

TRIGger:A:HOLDoff? (Query Only)

Returns the A trigger holdoff parameters. These parameters specify the time period during which the trigger circuitry is not looking to generate a trigger event.

Group Trigger

Syntax `TRIGger:A:HOLDoff?`

Related Commands [TRIGger:A:HOLDoff:TIME](#)

Examples `TRIGGER:A:HOLDOFF?` might return `:TRIGGER:A:HOLDOFF:TIME 900.0000E-09;BY DEFAULT` indicating that the A edge trigger holdoff time (by default) is 900 ns.

TRIGger:A:HOLDoff:TIME

Sets or returns the A trigger holdoff time.

Group Trigger

Syntax `TRIGger:A:HOLDoff:TIME <NR3>`
`TRIGger:A:HOLDoff:TIME?`

Arguments `<NR3>` specifies the holdoff time in seconds. The range is from 20 ns through 8.0 s.

Examples `TRIGGER:A:HOLDOFF:TIME ?` might return `:TRIGGER:A:HOLDOFFTIME 1.2000E-06` indicating that the A trigger holdoff time is set to 1.2 μ s.
`TRIGGER:A:HOLDOFF:TIME 10` sets the A trigger holdoff time to 10 s.

TRIGger:A:LEVel

Sets or returns the trigger level for the A trigger.

Group	Trigger
Syntax	<pre>TRIGger:A:LEVel {ECL TTL <NR3>} TRIGger:A:LEVel?</pre>
Arguments	<p>ECL specifies a preset ECL high level of -1.3V.</p> <p>TTL specifies a preset TTL high level of 1.4V.</p> <p><NR3> specifies the trigger level in user units (usually volts).</p>
Examples	<p>TRIGGER:A:LEVEL? might return :TRIGGER:A:LEVel 1.3000E+00 indicating that the A edge trigger is set to 1.3 V.</p> <p>TRIGGER:A:LEVEL TTL sets the A edge trigger to TTL high level, which is 1.4 V.</p>

TRIGger:A:LEVel:AUXIn

Sets or returns the trigger level for the AUXIN port.

Group	Trigger
Syntax	<pre>TRIGger:A:LEVel:AUXIn {<NR3> ECL TTL} TRIGger:A:LEVel:AUXIn?</pre>
Arguments	<p><NR3> specifies the trigger level, in volts.</p> <p>ECL specifies a preset ECL trigger level of -1.3V.</p> <p>TTL specifies a preset TTL trigger level of 1.4V.</p>
Examples	<p>TRIGGER:A:LEVEL:AUXIN ECL sets the auxiliary input trigger level to -1.3 volts.</p> <p>TRIGGER:A:LEVEL:AUXIN? might return TRIGGER:A:LEVEL:AUXIN 0.0E+0 indicating the auxiliary input trigger level is 0.0 volts.</p>

TRIGger:A:LEVel:CH<x>

Sets or returns the trigger level for the specified channel. Each channel can have an independent level.

Group	Trigger
Syntax	<pre>TRIGger:A:LEVel:CH<x> {<NR3> TTL ECL} TRIGger:A:LEVel:CH<x>?</pre>
Arguments	<p><NR3> specifies the trigger level in user units (usually volts).</p> <p>TTL specifies a preset TTL high level of 1.4V.</p> <p>ECL specifies a preset ECL high level of –1.3V.</p>
Examples	<p>TRIGGER:A:LEVEL:CH2? might return :TRIGGER:A:LEVEL:CH2 1.3000E+00 indicating that the A edge trigger is set to 1.3 V for channel 2.</p> <p>TRIGGER:A:LEVEL:CH3 TTL sets the A edge trigger to TTL high level for channel 3.</p>

TRIGger:A:LEVel:D<x>

Sets or returns the trigger level for the specified digital channel <x>, where x is the channel number. Each digital channel can have an independent level.

Group	Trigger
Syntax	<pre>TRIGger:A:LEVel:D<x> {<NR3> ECL TTL} TRIGger:A:LEVel:D<x>?</pre>
Arguments	<p>ECL specifies a preset ECL high level of –1.3V.</p> <p>TTL specifies a preset TTL high level of 1.4V.</p> <p><NR3> specifies the trigger level in volts.</p>

TRIGger:A:LOGIc? (Query Only)

Returns all of the A logic trigger parameters.

Group	Trigger
Syntax	TRIGger:A:LOGIc?

Related Commands [TRIGger:A:LOGic:CLAss](#)

Examples `TRIGGER:A:LOGIC?` might return `:TRIGGER:A:LOGIC:CLASS
SETHOLD;FUNCTION AND;THRESHOLD:CH1 20.0000E-3;CH2 0.0000;
CH3 0.0000;CH4 0.0000;:TRIGGER:A:LOGIC:INPUT:CH1
X;CH2 X;CH3 X;CH4 X;CLOCK:SOURCE NONE;EDGE
RISE;:TRIGGER:A:LOGIC:PATTERN:INPUT:CH1 X;CH2 X;CH3
X;CH4 X;:TRIGGER :A:LOGIC:PATTERN:WHEN TRUE;WHEN:LESSLIMIT
4.0000E-9;LIMIT 4.0000E-9;:TRIGGER:A:LOGIC:PATTERN:DELTATIME
4.0000E-9`

TRIGger:A:LOGic:CLAss

Sets or returns the class of the Logic Trigger. This command is used in conjunction with the [TRIGger:A:TYPE](#) command.

Group Trigger

Syntax `TRIGger:A:LOGic:CLAss {LOGIC|SETHo1d}`
`TRIGger:A:LOGic:CLAss?`

Related Commands [TRIGger:A:TYPE](#), [TRIGger:A:PULse:CLAss](#)

Arguments `LOGIC` sets the oscilloscope to trigger on logical combinations of the channels.

When the [TRIGger:A:LOGic:INPut:CLOCK:SOUrce](#) is `NONE`, `LOGIC` sets the oscilloscope to trigger when the specified logical combinations of channels 1, 2, 3, and 4 are met on four-channel oscilloscopes. On two-channel oscilloscopes, only channel 1 and channel 2 are available.

When the [TRIGger:A:LOGic:INPut:CLOCK:SOUrce](#) is set to one of the channels, `LOGIC` sets the oscilloscope to trigger when the specified logical combinations of the remaining channels is true during a transition on the clock channel.

`SETHo1d` sets the oscilloscope to trigger on setup and hold violations between a data source and a clock source. Use one channel input as the clock signal and a second channel input as the data input. The clocking and data levels are used to determine if a clock or data transition has occurred.

Examples `TRIGGER:A:LOGIC:CLASS?` might return `:TRIGGER:A:LOGIC:CLASS LOGIC`

`TRIGGER:A:LOGIC:CLASS LOGIC` sets the trigger A logic class to `LOGIC`, which causes the oscilloscope to trigger when the specified logical combinations of channels 1, 2, 3, and 4 are met.

TRIGger:A:LOGIc:FUNCTion

Sets or returns the logical combination of the input channels for the A pattern and A state logic triggers.

Group Trigger

Syntax TRIGger:A:LOGIc:FUNCTion {AND|NAND|NOR|OR}
TRIGger:A:LOGIc:FUNCTion?

Related Commands [TRIGger:A:LOGIc:INPut:CH<x>](#)

Arguments AND specifies to trigger if all conditions are true.
NAND specifies to trigger if any of the conditions is false.
NOR specifies to trigger if all conditions are false.
OR specifies to trigger if any of the conditions is true.

Examples TRIGGER:A:LOGIC:FUNCTION? might return :TRIGGER:A:LOGIC:FUNCTION
NAND
which indicates that the oscilloscope will trigger if the AND logic conditions are false.
TRIGGER:A:LOGIC:FUNCTION AND sets the logical combination of channels to be true when all conditions are true.

TRIGger:A:LOGIc:INPut? (Query Only)

Returns the logic input values for all channels. If a clock channel is defined, it returns the clock source and edge.

Group Trigger

Syntax TRIGger:A:LOGIc:INPut?

Examples TRIGGER:A:LOGIC:INPUT? might return :TRIGGER:A:LOGIC:INPUT:CH1
HIGH;CH2 X;CH3 X indicating that a logic high is expected on channel 1 while channel 2 and channel three are “don't care.”

TRIGger:A:LOGic:INPut:CH<x>

Sets or returns the logical input condition for the channel specified by <x>.

Group	Trigger
Syntax	TRIGger:A:LOGic:INPut:CH<x> {HIGH LOW X} TRIGger:A:LOGic:INPut:CH<x>?
Arguments	HIGH specifies the logic high. LOW specifies the logic low. X specifies a "don't care" state.
Examples	TRIGGER:A:LOGIC:INPUT:CH1? might return :TRIGGER:LOGIC:INPUT:CH1 X indicating that the setting for the A logic trigger input to channel 1 does not matter. TRIGGER:A:LOGIC:INPUT:CH2 HIGH sets the A logic trigger input to logic HIGH for channel 2.

TRIGger:A:LOGic:INPut:CLOCK:EDGE

Sets the polarity of the clock channel.

Group	Trigger
Syntax	TRIGger:A:LOGic:INPut:CLOCK:EDGE {FALL RISe} TRIGger:A:LOGic:INPut:CLOCK:EDGE?
Arguments	RISe specifies to trigger on the rising or positive edge of a signal. FALL specifies to trigger on the falling or negative edge of a signal.

TRIGger:A:LOGic:INPut:CLOCK:SOUrce

Sets or returns the channel to use as the clock source. The clock can be selected as NONE. A selection of None implies pattern trigger. Any other selection implies state trigger.

Group	Trigger
--------------	---------

Syntax TRIGger:A:LOGic:INPut:CLOCK:SOUrce {CH1|CH2|CH3|CH4|
D0|D1|D2|D3|D4|D5|D6|D7|D8|D9|D10|D11|D12|D13|D14|D15|NONE}
TRIGger:A:LOGic:INPut:CLOCK:SOUrce?

Arguments CH1–CH4 specifies the analog input channel source.
D0–D15 specifies the digital input channel source.
NONE specifies a Pattern trigger.

TRIGger:A:LOGic:INPut:D<x>

Sets or returns the logic pattern for a trigger on digital channel <x>, where x is the channel number.

Group Trigger

Syntax TRIGger:A:LOGic:INPut:D<x> {HIGH|LOW|X}
TRIGger:A:LOGic:INPut:D<x>?

Arguments High specifies the logic high state.
Low specifies the logic low state.
X specifies a "don't care" state.

TRIGger:A:LOGic:PATtern? (Query Only)

Returns the conditions used for generating an A logic pattern trigger, with respect to the defined input pattern, and identifies the time that the selected pattern may be true and still generate the trigger.

Group Trigger

Syntax TRIGger:A:LOGic:PATtern?

Examples TRIGGER:A:LOGIC:PATTERN? might return
:TRIGGER:A:LOGIC:PATTERN:INPUT:CH1 HIGH;CH2
LOW;CH3 X;CH4 X;:TRIGGER:A:LOGIC:PATTERN:WHEN
LESSTHAN;WHEN:LESSLIMIT 16.0000E-9;LIMIT
16.0000E-9;:TRIGGER:A:LOGIC:PATTERN:DELTATIME 16.0000E-9

TRIGger:A:LOGic:PATtern:DELtetime

Sets or returns the pattern trigger delta time value. The time value is used as part of the pattern trigger condition to determine if the duration of a logic pattern meets the specified time constraints.

Group	Trigger
Syntax	TRIGger:A:LOGic:PATtern:DELtetime <NR3> TRIGger:A:LOGic:PATtern:DELtetime?
Arguments	<NR3> is a floating point value with exponent that sets the pattern trigger time value. This argument has a range of 39.6E-9 (39.6 ns) to 10.0E0 (10 s), in increments of 13.2 ns. Values that are not an increment of 13.2 ns are rounded to the nearest correct value.
Examples	TRIGGER:A:LOGIC:PATTERN:DELTATIME 71.28E-8 sets the pattern trigger delta time value to 712.8 ns.

TRIGger:A:LOGic:PATtern:INPut:D<x>

Sets or returns the A logic trigger input for the specified digital channel <x>, where x is the channel number. This command species the logic value used when the pattern trigger detects the threshold level.

Group	Trigger
Syntax	TRIGger:A:LOGic:PATtern:INPut:D<x> {HIGH LOW X} TRIGger:A:LOGic:PATtern:INPut:D<x>?
Arguments	HIGH specifies a logic high. LOW specifies a logic low. X specifies a “do not care” state.

TRIGger:A:LOGic:PATtern:WHEn

Sets or returns the pattern logic condition on which to trigger the oscilloscope.

Group	Trigger
--------------	---------

Syntax TRIGger:A:LOGIC:PATtern:WHEn
 {TRUE|FALSE|LESSThan|MOREThan|EQUal|UNEQUal}
 TRIGger:A:LOGIC:PATtern:WHEn?

Arguments TRUE triggers the oscilloscope when the pattern becomes true.
 FALSE triggers the oscilloscope when the pattern becomes false.
 LESSTHAN triggers the oscilloscope when the input pattern is true for a time period less than the time period specified in TRIGGER:A:LOGIC:PATTERN:DELTATIME.
 MORETHAN triggers the oscilloscope when the input pattern is true for a time period more (greater) than the time period specified in TRIGGER:A:LOGIC:PATTERN:DELTATIME.
 EQUAL triggers the oscilloscope when the input pattern is true for a time period equal to the time period specified in TRIGGER:A:LOGIC:PATTERN:DELTATIME, within a $\pm 5\%$ tolerance.
 UNEQUAL triggers the oscilloscope when the input pattern is true for a time period greater than or less than (not equal to) the time period specified in TRIGGER:A:LOGIC:PATTERN:DELTATIME, within a $\pm 5\%$ tolerance.

Examples TRIGGER:A:LOGIC:PATTERN:WHEN LESSTHAN sets the oscilloscope to trigger when the pattern is true for a time period less than the pattern trigger delta time setting.

TRIGger:A:LOGIC:PATtern:WHEn:LESSLimit

Sets or returns the maximum time that the selected pattern may be true and still generate an A logic pattern trigger.

Group Trigger

Syntax TRIGger:A:LOGIC:PATtern:WHEn:LESSLimit <NR3>
 TRIGger:A:LOGIC:PATtern:WHEn:LESSLimit?

Arguments <NR3> specifies the maximum amount of time to hold the pattern true.

Examples TRIGGER:A:LOGIC:PATTERN:WHEN:LESSLIMIT 10.0E+00 sets the maximum time that the selected pattern may hold true (and generate an A logic pattern trigger) to 10 s.
 TRIGGER:A:LOGIC:PATTERN:WHEN:LESSLIMIT? might return
 TRIGGER:A:LOGIC:PATTERN:WHEN:LESSLIMIT 8.0000E-9 indicating that

the selected pattern may hold true for up to 8 ns and still generate an A logic pattern trigger.

TRIGger:A:LOGic:PATtern:WHEn:MORELimit

Sets or returns the minimum time that the selected pattern may be true and still generate an A logic pattern trigger.

Group	Trigger
Syntax	<pre>TRIGger:A:LOGic:PATtern:WHEn:MORELimit <NR3> TRIGger:A:LOGic:PATtern:WHEn:MORELimit?</pre>
Arguments	<NR3> specifies the minimum amount of time to hold the pattern true.
Examples	<p>TRIGGER:A:LOGIC:PATTERN:WHEN:MORELIMIT 10.0E+00 sets the minimum time that the selected pattern may hold true (and generate an A logic pattern trigger) to 10 s.</p> <p>TRIGGER:A:LOGIC:PATTERN:WHEN:MORELIMIT? might return TRIGGER:A:LOGIC:PATTERN:WHEN:MORELIMIT 8.0000E-9 indicating that the selected pattern must hold true for at least 8 ns to generate an A logic pattern trigger.</p>

TRIGger:A:LOGic:THReshold:CH<x>

This command sets or queries the trigger A logic threshold voltage for the specified channel x.

Group	Trigger
Syntax	<pre>TRIGger:A:LOGic:THReshold:CH<x> {<NR3> ECL TTL} TRIGger:A:LOGic:THReshold:CH<x>?</pre>
Arguments	<p><NR3> specifies the threshold voltage, in volts.</p> <p>ECL specifies a preset ECL high level of –1.3V.</p> <p>TTL specifies a preset TTL high level of 1.4V.</p>

Examples `TRIGGER:A:LOGIC:THRESHOLD:CH2 3.0E-3` sets the A logic trigger threshold voltage for Channel 2 to 3 mV.

`TRIGGER:A:LOGIC:THRESHOLD:CH3?` might return
`:TRIGGER:A:LOGIC:THRESHOLD:CH3 1.2000E+00`, indicating that the A logic trigger threshold voltage for Channel 3 is 1.2 V.

TRIGger:A:LOGic:THReshold:D<x>

Sets or returns the trigger A logic threshold level for the specified digital channel <x>. This commands affects all trigger types using the digital channel.

Group Trigger

Syntax `TRIGger:A:LOGic:THReshold:D<x> {<NR3>|ECL|TTL}`
`TRIGger:A:LOGic:THReshold:D<x>?`

Related Commands [TRIGger:A:LEVel:D<x>](#)

Arguments <NR3> specifies the threshold level in volts.

ECL specifies a preset ECL high level of –1.3V.

TTL specifies a preset TTL high level of 1.4V.

TRIGger:A:LOWerthreshold:CH<x>

Sets or returns the lower threshold for the channel selected. Each channel can have an independent level. Used in Runt and Slew Rate triggers as the lower threshold. Used for all other trigger types as the single level/threshold.

Group Trigger

Syntax `TRIGger:A:LOWerthreshold:CH<x> {ECL|TTL|<NR3>}`
`TRIGger:A:LOWerthreshold:CH<x>?`

Related Commands [TRIGger:A:LEVel:CH<x>](#)

Arguments ECL specifies a preset ECL high level of –1.3V.

TTL specifies a preset TTL high level of 1.4V.

<NR3> is the clock level, in volts.

Examples `TRIGGER:A:LOWERTHRESHOLD:CH2 50E-3` sets the lower limit threshold for CH2 of the pulse runt trigger to 50 mV.

`TRIGGER:A:LOWERTHRESHOLD:CH2?` might return `:TRIGGER:A:LOWERTHRESHOLD:CH2 1.2000E-01` indicating that the lower limit threshold for CH2 of the pulse runt trigger is set to 120 mV.

TRIGger:A:LOWerthreshold:D<x>

Sets the lower threshold for the digital channel selected. Each channel can have an independent level. Used in runt and slew rate as the lower threshold. Used for all other trigger types as the single level/threshold.

Group Trigger

Syntax `TRIGger:A:LOWerthreshold:D<x> {<NR3>|ECL|TTL}`
`TRIGger:A:LOWerthreshold:D<x>?`

Arguments <NR3> specifies the threshold voltage, in volts.

ECL specifies a preset ECL high level of -1.3V.

TTL specifies a preset TTL high level of 1.4V.

Examples `TRIGGER:A:LOWERTHRESHOLD:D1 0.5` sets the lower threshold to 0.5 volts.

`TRIGGER:A:LOWERTHRESHOLD:D1?` might return
`TRIGGER:A:LOWERTHRESHOLD:D1 -1.3000` indicating the lower threshold is set to -1.3 volts.

TRIGger:A:LOWerthreshold{:EXT|:AUX}

Sets or returns the lower threshold for the Auxiliary Input. Used for the following trigger types: Runt, Slew Rate.

Group Trigger

Syntax `TRIGger:A:LOWerthreshold{:EXT|:AUX} {<NR3>|ECL|TTL}`
`TRIGger:A:LOWerthreshold{:EXT|:AUX}?`

Arguments ECL specifies a preset ECL high level of –1.3V.
TTL specifies a preset TTL high level of 1.4V.
<NR3> specifies the threshold level in volts.

TRIGger:A:MODE

Sets or returns the A trigger mode.

Group Trigger

Syntax TRIGger:A:MODE {AUTO|NORMa1}
TRIGger:A:MODE?

Related Commands [TRIGger:A:LEVel](#)

Arguments AUTO generates a trigger if one is not detected within a specified time period.
NORMa1 waits for a valid trigger event.

Examples TRIGGER:A:MODE NORMAL specifies that a valid trigger event must occur before a trigger is generated.
TRIGGER:A:MODE ? might return :TRIGGER:A:MODE NORMAL indicating that a valid trigger event must occur before a trigger is generated.

TRIGger:A:PULse? (Query Only)

Returns the A pulse trigger parameters.

Group Trigger

Syntax TRIGger:A:PULse?

Related Commands [TRIGger:A:EDGE?](#), [TRIGger:A:LOGIc?](#)

Examples TRIGGER:A:PULSE? might return :TRIGGER:A:PULSE:CLASS TRANSITION

TRIGger:A:PULse:CLAss

Sets or returns the type of pulse on which to trigger.

Group Trigger

Syntax TRIGger:A:PULse:CLAss {RUNt|WIDth|TRANSition}
TRIGger:A:PULse:CLAss?

Related Commands [TRIGger:A:RUNT?](#), [TRIGger:A:PULSEWIDTH?](#), [TRIGger:A{:TRANSition|:RISEFall}?](#), [TRIGger:A:TYPE](#)

Arguments RUNt triggers when a pulse crosses the first preset voltage threshold but does not cross the second preset threshold before recrossing the first.

WIDth triggers when a pulse is found that has the specified polarity and is either inside or outside the specified time limits.

TRANSition triggers when a pulse crosses both thresholds in the same direction as the specified polarity and the transition time between the two threshold crossings is greater or less than the specified time delta.

Examples TRIGGER:A:PULSE:CLASS WIDTH specifies a width pulse for the A trigger.

TRIGGER:A:PULSE:CLASS? might return :TRIGGER:A:PULSE:CLASS WIDTH indicating that a pulse was found that is of the specified polarity and width.

TRIGger:A:PULSEWIDth? (Query Only)

Returns the width parameters for the pulse width trigger.

Group Trigger

Syntax TRIGger:A:PULSEWIDth?

Examples TRIGGER:A:PULSEWIDTH? might return
:TRIGGER:A:PULSEWIDTH:POLARITY POSITIVE;WHEN LESSTHAN;WIDTH
8.0000E-9

TRIGger:A:PULSEWidth:POLarity

Sets or returns the polarity for the width trigger.

Group	Trigger
Syntax	TRIGger:A:PULSEwidth:POLarity {NEGative POSitive} TRIGger:A:PULSEwidth:POLarity?
Arguments	NEGative specifies a negative pulse. POSitive specifies a positive pulse.
Examples	TRIGGER:A:PULSEWIDTH:POLARITY NEGATIVE sets the pulse polarity to negative. TRIGGER:A:PULSEWIDTH:POLARITY? might return :TRIGGER:A:WIDTH:POLARITY POSITIVE indicating a positive pulse.

TRIGger:A:PULSEWidth:SOURce

Sets or returns the source for the pulse-width trigger.

Group	Trigger
Syntax	TRIGger:A:PULSEwidth:SOURce {CH1 CH2 CH3 CH4 LINE EXT} TRIGger:A:PULSEwidth:SOURce?
Arguments	CH1–CH4 specifies an analog input channel as the A edge trigger source. EXT specifies an external trigger using the Aux In connector located on the front panel of the oscilloscope. LINE specifies AC line voltage.
Examples	TRIGGER:A:PULSEWIDTH:SOURCE CH1 sets channel 1 as the pulse width source. TRIGGER:A:PULSEWIDTH:SOURCE? might return :TRIGGER:A:PULSEWIDTH:SOURCE CH1 indicating that channel 1 is the pulse width source.

TRIGger:A:PULSEWidth:WHEn

Sets or returns whether to trigger on a pulse that meets, falls outside, or within the specified range of limits.

Group Trigger

Syntax TRIGger:A:PULSEwidth:WHEn {LESSthan|MOREthan|EQual|UNEQual}
TRIGger:A:PULSEwidth:WHEn?

Related Commands [TRIGger:A:PULSEWidth:WIDth](#)

Arguments LESSthan argument sets the oscilloscope to trigger if a pulse is detected with width less than the time set by the [TRIGger:A:PULSEWidth:WIDth](#) command.

MOREthan argument sets the oscilloscope to trigger if a pulse is detected with width greater than the time set by the [TRIGger:A:PULSEWidth:WIDth](#) command.

EQual argument sets the oscilloscope to trigger if a pulse is detected with width equal to the time period specified in [TRIGger:A:PULSEWidth:WIDth](#) within a $\pm 5\%$ tolerance.

NOTEQual argument sets the oscilloscope to trigger if a pulse is detected with width greater than or less than (but not equal) the time period specified in [TRIGger:A:PULSEWidth:WIDth](#) within a $\pm 5\%$ tolerance.

Examples TRIGGER:A:PULSEWIDTH:WHEN LESS specifies that the duration of the A pulse will fall within defined high and low limits.

TRIGGER:A:PULSEWIDTH:WHEN? might return :TRIGGER:A:PULSEWIDTH:WHEN MORE indicating the conditions for generating a width trigger.

TRIGger:A:PULSEWidth:WIDth

Sets or returns the width setting for the pulse width trigger.

Group Trigger

Syntax TRIGger:A:PULSEwidth:WIDth <NR3>
TRIGger:A:PULSEwidth:WIDth?

Related Commands [TRIGger:A:PULSEWidth:WHEn](#)

Arguments	<NR3> specifies the pulse width in seconds.
Examples	<p>TRIGGER:A:PULSEWIDTH:WIDTH 5.0E-6 sets the pulse width to 5 μs.</p> <p>TRIGGER:A:PULSEWIDTH:WIDTH? might return :TRIGGER:A:PULSEWIDTH:WIDTH 2.0000E-9 indicating that the pulse width is set to 2 ns.</p>

TRIGger:A:RUNT? (Query Only)

Returns the current A runt trigger parameters.

Group	Trigger
Syntax	TRIGger:A:RUNT?
Examples	TRIGGER:A:RUNT? might return :TRIGGER:A:RUNT:SOURCE CH1;POLARITY POSITIVE;WHEN OCCURS;WIDTH 4.0000E-9.

TRIGger:A:RUNT:POLarity

Sets or returns the polarity for the runt trigger.

Group	Trigger
Syntax	<p>TRIGger:A:RUNT:POLarity {EITher NEGative POSitive}</p> <p>TRIGger:A:RUNT:POLarity?</p>
Arguments	<p>POSitive indicates that the rising edge crosses the low threshold and the falling edge recrosses the low threshold without either edge ever crossing the high threshold.</p> <p>NEGative indicates that the falling edge crosses the high threshold and the rising edge recrosses the high threshold without either edge ever crossing the low threshold.</p> <p>EITher triggers on a runt of either polarity.</p>
Examples	TRIGGER:A:RUNT:POLARITY NEGATIVE specifies that the polarity of the A pulse runt trigger is negative.

TRIGGER:A:RUNT:POLARITY? might return :TRIGGER:A:RUNT:POLARITY POSITIVE indicating that the polarity of the A pulse runt trigger is positive.

TRIGger:A:RUNT:SOURce

Sets or returns the source for the A runt trigger.

Group	Trigger
Syntax	TRIGger:A:RUNT:SOURce {CH1 CH2 CH3 CH4} TRIGger:A:RUNT:SOURce?
Arguments	CH1–CH4 specifies the input channel number, depending on the model of the oscilloscope.
Examples	TRIGGER:A:RUNT:SOURCE CH4 sets channel 4 as the source for the A pulse trigger. TRIGGER:A:RUNT:SOURCE? might return :TRIGGER:A:RUNT:SOURCE CH2 indicating that channel 2 is the source for the A pulse trigger.

TRIGger:A:RUNT:WHEN

Sets or returns the type of pulse width the trigger checks for when it detects a runt.

Group	Trigger
Syntax	TRIGger:A:RUNT:WHEN {LESSthan MOREthan EQual UNEQual OCCURS} TRIGger:A:RUNT:WHEN?
Related Commands	TRIGger:A:RUNT:WIDTH
Arguments	OCCURS argument specifies a trigger event if a runt of any detectable width occurs. LESSthan argument sets the oscilloscope to trigger if the a runt pulse is detected with width less than the time set by the TRIGger:A:RUNT:WIDTH command. MOREthan argument sets the oscilloscope to trigger if the a runt pulse is detected with width greater than the time set by the TRIGger:A:RUNT:WIDTH command.

EQUa1 argument sets the oscilloscope to trigger if a runt pulse is detected with width equal to the time period specified in **TRIGger:A:RUNT:WIDth** within a $\pm 5\%$ tolerance.

NOTEQUa1 argument sets the oscilloscope to trigger if a runt pulse is detected with width greater than or less than (but not equal to) the time period specified in **TRIGger:A:RUNT:WIDth** within a $\pm 5\%$ tolerance.

Examples **TRIGGER:A:RUNT:WHEN MORE** sets the runt trigger to occur when the oscilloscope detects a runt in a pulse wider greater than the specified width.

TRIGGER:A:RUNT:WHEN? might return **:TRIGGER:A:PULSE:RUNT:WHEN OCCURS** indicating that a runt trigger will occur if the oscilloscope detects a runt of any detectable width.

TRIGger:A:RUNT:WIDth

Sets or returns the width for a runt trigger.

Group Trigger

Syntax **TRIGger:A:RUNT:WIDth** <NR3>
TRIGger:A:RUNT:WIDth?

Related Commands **TRIGger:A:RUNT:WHEn**

Arguments <NR3> specifies the minimum width, in seconds.

Examples **TRIGGER:A:RUNT:WIDTH 15E-6** sets the minimum width of the pulse runt trigger to 15 μ s.

TRIGGER:A:RUNT:WIDTH? might return **:TRIGGER:A:PULSE:RUNT:WIDTH 2.0000E-09** indicating that the minimum width of a pulse runt trigger is 2 ns.

TRIGger:A:SETHold? (Query Only)

Returns the clock edge polarity, voltage threshold and source input; data voltage threshold and source; and both setup and hold times for setup and hold violation triggering.

Group Trigger

Syntax TRIGger:A:SETHold?

Examples TRIGGER:A:SETHOLD? might return
 :TRIGGER:A:SETHOLD:CLOCK:SOURCE CH1;EDGE RISE;THRESHOLD
 100.0000E-3;;:TRIGGER:A:SETHOLD:DATA:SOURCE CH2;THRESHOLD
 80.0000E-3;;:TRIGGER:A:SETHOLD:HOLDTIME 20.0000E-9;SETTIME
 8.0000E-9

TRIGger:A:SETHold:CLOCK? (Query Only)

Returns the clock edge polarity, voltage threshold, and source input for setup and hold triggering.

Group Trigger

Syntax TRIGger:A:SETHold:CLOCK?

Examples TRIGGER:A:SETHOLD:CLOCK? might return
 :TRIGGER:A:SETHOLD:CLOCK:SOURCE EXT;EDGE FALL;THRESHOLD
 1.4000

TRIGger:A:SETHold:CLOCK:EDGE

Sets or returns the clock edge polarity for setup and hold triggering.

Group Trigger

Syntax TRIGger:A:SETHold:CLOCK:EDGE {FALL|RISe}
 TRIGger:A:SETHold:CLOCK:EDGE?

Arguments FALL specifies polarity as the clock falling edge.
 RISe specifies polarity as the clock rising edge.

Examples TRIGGER:A:SETHOLD:CLOCK:EDGE RISE specifies the polarity as the clock rising edge.
 TRIGGER:A:SETHOLD:CLOCK:EDGE? might return :TRIGGER:A:SETHOLD:
 CLOCK:EDGE RISE indicating that polarity is specified as the clock rising edge.

TRIGger:A:SETHold:CLOCK:SOURce

Sets or returns the clock source for the setup and hold triggering.

Group	Trigger
Syntax	<pre>TRIGger:A:SETHold:CLOCK:SOURce {CH1 CH2 CH3 CH4 D0 D1 D2 D3 D4 D5 D6 D7 D8 D9 D10 D11 D12 D13 D14 D15 AUX EXT} TRIGger:A:SETHold:CLOCK:SOURce?</pre>
Related Commands	TRIGger:A:SETHold:DATA:SOURce
Arguments	<p>CH1–CH4 or D0–D15 specifies the input channel number. D0–D15 is only for MSO models.</p> <p>AUX or EXT specifies an external trigger using the Aux Input connector located on the front panel of the oscilloscope.</p>
Examples	<p>TRIGGER:A:SETHOLD:CLOCK:SOURCE CH1 specifies channel 1 as the clock input for setup and hold input.</p> <p>TRIGGER:A:SETHOLD:CLOCK:SOURCE? might return :TRIGGER:A:SETHOLD:CLOCK:SOURCE CH4 indicating that channel 4 is the clock source for the setup and hold trigger input.</p>

TRIGger:A:SETHold:CLOCK:THReshold

Sets or returns the clock voltage threshold for the setup and hold trigger.

Group	Trigger
Syntax	<pre>TRIGger:A:SETHold:CLOCK:THReshold {<NR3> TTL} TRIGger:A:SETHold:CLOCK:THReshold?</pre>
Arguments	<p>TTL specifies a preset TTL high level of 1.4 V.</p> <p><NR3> is the clock level, in volts.</p>
Examples	<p>TRIGGER:A:SETHOLD:CLOCK:THRESHOLD TTL specifies the preset TTL value of 1.4 V as the clock threshold for the setup and hold trigger.</p>

TRIGGER:A:SETHOLD:CLOCK:THRESHOLD? might return
 :TRIGGER:A:LOGIC:SETHOLD:CLOCK:THRESHOLD 1.2000E+00
 indicating that the clock threshold for the setup and hold trigger is 1.2 V.

TRIGger:A:SETHold:DATa? (Query Only)

Returns the voltage threshold and data source for the setup and hold trigger.

Group Trigger

Syntax TRIGger:A:SETHold:DATa?

Related Commands [TRIGger:A:SETHold:CLOCK?](#)

Examples TRIGGER:A:SETHOLD:DATA? might return
 :TRIGGER:A:SETHOLD:DATA:SOURCE CH2;THRESHOLD 80.0000E-3

TRIGger:A:SETHold:DATa:SOURce

Sets or returns the data source for the setup and hold trigger. You cannot specify the same source for both clock and data.

For DPO models, you can specify only a single data source. Data sources for DPO models may be one of CH1-CH4 or the Auxin port (EXT or AUX).

For MSO models, you can specify any combination of CH1-CH4 and D0-D15 as the data sources.

Group Trigger

Syntax DPO Models:
 TRIGger:A:SETHold:DATa:SOURce <wfm>
 MSO Models:
 TRIGger:A:SETHold:DATa:SOURce <wfm>[,<wfm>] [,<wfm>]
 [,<wfm>] [,<wfm>] [,<wfm>] [,<wfm>] [,<wfm>] [,<wfm>]
 [,<wfm>] [,<wfm>] [,<wfm>] [,<wfm>] [,<wfm>] [,<wfm>]
 [,<wfm>] [,<wfm>] [,<wfm>]
 TRIGger:A:SETHold:DATa:SOURce?

Related Commands [TRIGger:A:SETHold:CLOCK:SOURce](#)

Arguments	<p>DPO Models: <wfm> specifies the source channel number and is one of CH1-CH4, EXT or AUX. You can specify only one waveform on a DPO.</p> <p>MSO Models: <wfm> specifies the source channel numbers. Each <wfm> can be one of CH1-CH4 or D0-D15. Auxin (EXT or AUX) is not valid as a data source.</p>
Examples	<p>TRIGGER:A:SETHOLD:DATA:SOURCE CH1 sets channel 1 as the data source for the setup and hold trigger.</p> <p>TRIGGER:A:SETHOLD:DATA:SOURCE? might return :TRIGGER:A:LOGIC:SETHOLD:DATA:SOURCE CH2 indicating that channel 2 is the current data source for the setup and hold trigger.</p>

TRIGger:A:SETHold:DATa:THReshold

Sets or returns the data voltage threshold for setup and hold trigger.

Group	Trigger
Syntax	<p>TRIGger:A:SETHold:DATa:THReshold {<NR3> TTL}</p> <p>TRIGger:A:SETHold:DATa:THReshold?</p>
Arguments	<p>TTL specifies the preset TTL high level of 1.4 V.</p> <p><NR3> is the setup and hold data level, in V.</p>
Examples	<p>TRIGGER:A:SETHOLD:DATA:THRESHOLD TTL specifies the preset high level of 1.4 V as the current data voltage level for the setup and hold trigger.</p> <p>TRIGGER:A:SETHOLD:DATA:THRESHOLD? might return :TRIGGER:A:SETHOLD:DATA:THRESHOLD 1.2000E+00 indicating that 1.2 V is the current data voltage level for the setup and hold trigger.</p>

TRIGger:A:SETHold:HOLDTime

Sets or returns the hold time for setup and hold violation triggering.

Group	Trigger
--------------	---------

Syntax	<pre>TRIGger:A:SETHold:HOLDTime <NR3> TRIGger:A:SETHold:HOLDTime?</pre>
Arguments	<NR3> specifies the hold time setting in seconds. Positive values for hold time occur after the clock edge. Negative values occur before the clock edge.
Examples	<p>TRIGGER:A:SETHOLD:HOLDTIME 3.0E-3 sets the hold time for the setup and hold trigger to 3 ms.</p> <p>TRIGGER:A:SETHOLD:HOLDTIME? might return :TRIGGER:A:SETHOLD:HOLDTIME 2.0000E-09 indicating that the current hold time for the setup and hold trigger is 2 ns.</p>

TRIGger:A:SETHold:SETTime

Sets or returns the setup time for setup and hold violation triggering.

Group	Trigger
Syntax	<pre>TRIGger:A:SETHold:SETTime <NR3> TRIGger:A:SETHold:SETTime?</pre>
Arguments	<NR3> specifies the setup time for setup and hold violation triggering.
Examples	<p>TRIGGER:A:SETHOLD:SETTIME 3.0E-6 specifies that the current setup time for setup and hold trigger is 3 μs.</p> <p>TRIGGER:A:SETHOLD:SETTIME? might return :TRIGGER:A:LOGIC:SETHOLD:SETTIME 2.0000E-09 indicating that the current setup time for setup and hold trigger is 2 ns.</p>

TRIGger:A:SETHold:THReshold:CH<x>

Sets or queries the threshold for the channel specified by x. Affects all trigger types using the channel.

Group	Trigger
Syntax	<pre>TRIGger:A:SETHold:THReshold:CH<x> {<NR3> ECL TTL} TRIGger:A:SETHold:THReshold:CH<x>?</pre>

Arguments	<p><NR3> specifies the threshold voltage, in volts.</p> <p>ECL specifies a preset ECL high level of –1.3V.</p> <p>TTL specifies a preset TTL high level of 1.4V.</p>
Examples	<p>TRIGGER:A:SETHOLD:THRESHOLD:CH1 1.5 sets the channel 1 threshold to 1.5 volts.</p> <p>TRIGGER:A:SETHOLD:THRESHOLD:CH1? might return TRIGGER:A:SETHOLD:THRESHOLD:CH1 0.0E+0 indicating the channel 1 threshold is set to 0.0 volts.</p>

TRIGger:A:SETHold:THReshold:D<x>

Sets the threshold for the selected digital channel. Affects all trigger types using the digital channel.

Group	Trigger
Syntax	<p>TRIGger:A:SETHold:THReshold:D<x> {<NR3> ECL TTL}</p> <p>TRIGger:A:SETHold:THReshold:D<x>?</p>
Arguments	<p><NR3> specifies the threshold voltage, in volts.</p> <p>ECL specifies a preset ECL high level of –1.3V.</p> <p>TTL specifies a preset TTL high level of 1.4V.</p>
Examples	<p>TRIGGER:A:SETHOLD:THRESHOLD:D1 ECL sets the threshold to ECL levels.</p> <p>TRIGGER:A:SETHOLD:THRESHOLD:D1? might return TRIGGER:A:SETHOLD:THRESHOLD:D1 -1.3000 indicating the threshold is set to -1.3 volts.</p>

TRIGger:A{:TRANSition|:RISEFall}? (Query Only)

Returns transition time trigger parameters.

Group	Trigger
Syntax	TRIGger:A{:TRANSition :RISEFall}?

Related Commands [TRIGger:A:UPPerthreshold:CH<x>](#) , [TRIGger:A:LOWerthreshold:CH<x>](#)

Examples TRIGGER:A::TRANSITION? might return
:TRIGGER:A:TRANSITION:POLARITY POSITIVE;WHEN
SLOWER;DELTATIME 8.0000E-9

TRIGger:A{:TRANSition|:RISEFall}:DELTatime

Sets or returns the delta time used in calculating the transition value for the transition trigger.

Group Trigger

Syntax TRIGger:A{:TRANSition|:RISEFall}:DELTatime <NR3>
TRIGger:A{:TRANSition|:RISEFall}:DELTatime?

Arguments <NR3> specifies the delta time, in seconds.

Examples TRIGGER:A:TRANSITION:DELTATIME 15E-6 sets the delta time of the transition trigger to 15 μ s.

TRIGGER:A:TRANSITION:DELTATIME? might return :TRIGGER:A
:TRANSITION:DELTATIME 2.0000E-09 indicating that the delta time of the transition trigger is set to 2 ns.

TRIGger:A{:TRANSition|:RISEFall}:POLarity

Sets or returns the polarity for the transition trigger.

Group Trigger

Syntax TRIGger:A{:TRANSition|:RISEFall}:POLarity
{EITHer|NEGative|POSitive}
TRIGger:A{:TRANSition|:RISEFall}:POLarity?

Arguments POSitive indicates that a pulse edge must traverse from the lower (most negative) to higher (most positive) level for transition triggering to occur.

NEGative indicates that a pulse edge must traverse from the upper (most positive) to lower (most negative) level for transition triggering to occur.

EITHER indicates either positive or negative polarity.

Examples **TRIGGER:A:TRANSITION:POLARITY NEGATIVE** sets the transition polarity to negative.

TRIGGER:A:TRANSITION:POLARITY? might return **:TRIGGER:A:TRANSITION:POLARITY EITHER** indicating that the polarity can be either positive or negative.

TRIGger:A{:TRANSition|:RISEFall}:SOURce

Sets or returns the source for transition trigger.

Group Trigger

Syntax **TRIGger:A{:TRANSition|:RISEFall}:SOURce {CH1|CH2|CH3|CH4}**
TRIGger:A{:TRANSition|:RISEFall}:SOURce?

Arguments CH1–CH4 specifies one of the input channels.

Examples **TRIGGER:A:TRANSITION:SOURCE CH4** sets channel 4 as the source for the transition trigger.

TRIGGER:A:TRANSITION:SOURCE? might return **:TRIGGER:A:TRANSITION:SOURCE CH2** indicating that channel 2 is the source for the A transition trigger.

TRIGger:A{:TRANSition|:RISEFall}:WHEn

Sets or returns whether to check for a transitioning signal that is faster or slower than the specified delta time.

Group Trigger

Syntax **TRIGger:A{:TRANSition|:RISEFall}:WHEn**
{SLOWER|FASTER|Equal|UNEQual}
TRIGger:A{:TRANSition|:RISEFall}:WHEn?

Arguments **FASTER** sets the trigger to occur when the signal transition time is faster than the time set by **TRIGger:A{:TRANSITION|:RISEFall}:DELTAtime**.

SLOWer sets the trigger to occur when the signal transition time is slower than the time set by **TRIGger:A{TRANSition|RISEFall}:DELTaTime**.

Equal sets the trigger to occur when the signal transition time is equal to the time set by **TRIGger:A{TRANSition|RISEFall}:DELTaTime**.

UNEQual sets the trigger to occur when the signal transition time is not equal to the time set by **TRIGger:A{TRANSition|RISEFall}:DELTaTime**.

Examples

TRIGGER:A:TRANSITION:WHEN SLOWER sets the trigger to occur when the signal transition time is slower than the time set by the **TRIGger:A{TRANSition|RISEFall}:DELTaTime** command.

TRIGGER:A:TRANSITION:WHEN? might return **:TRIGGER:A:TRANSITION:WHEN FASTER**

TRIGger:A:TYPe

Sets or returns the type of A trigger. Once you have set the trigger type, you may also need to identify the associated trigger class. For details on selecting Logic and Pulse trigger classes, see [TRIGger:A:LOGic:CLAss](#) and [TRIGger:A:PULse:CLAss](#) respectively.

Group Trigger

Syntax **TRIGger:A:TYPe {EDGE|LOGic|PULse|BUS|VIDeo}**
TRIGger:A:TYPe?

Related Commands [TRIGger:A:EDGE?](#), [TRIGger:A:LOGic:CLAss](#), [TRIGger:A:PULse:CLAss](#)

Arguments

EDGE is the default trigger. A trigger event occurs when a signal passes through a specified voltage level in a specified direction and is controlled by the [TRIGger:A:EDGE?](#) commands.

LOGic specifies that a trigger occurs when specified conditions are met and is controlled by the [TRIGger:A:LOGic?](#) commands. This trigger type is equivalent to the logic trigger and to the setup and hold trigger found in the user interface.

PULse specifies that a trigger occurs when a specified pulse is found and is controlled by the [TRIGger:A:PULse?](#) commands. This trigger type is equivalent to the pulse width, runt, and rise/fall time triggers found in the user interface.

BUS specifies that a trigger occurs when a communications signal is found. Supports CAN, I²C, SPI, and RS-232 communications signals.

VIDeo specifies that the trigger occurs when a video signal is found.

- Examples** `TRIGGER:A:TYPE EDGE` sets the A trigger type to EDGE.
- `TRIGGER:A:TYPE?` might return `:TRIGGER:A:TYPE PULSE` indicating that the A trigger type is a pulse trigger.

TRIGger:A:UPPerthreshold:CH<x>

Sets the upper threshold for channel <x>, where x is the channel number. Each channel can have an independent level. Used only for runt and slew rate trigger types.

- Group** Trigger
- Syntax** `TRIGger:A:UPPerthreshold:CH<x> {<NR3>|ECL|TTL}`
`TRIGger:A:UPPerthreshold:CH<x>?`
- Arguments** <NR3> is the threshold level in volts.
- ECL specifies a preset ECL high level of -1.3V.
- TTL specifies a preset TTL high level of 1.4V.
- Examples** `TRIGGER:A:UPPERTHRESHOLD:CH2 50E-3` sets the upper limit of the pulse runt trigger to 50 mV for channel 2.
- `TRIGGER:A:UPPERTHRESHOLD:CH2?` might return `:TRIGGER:A:UPPERTHRESHOLD:CH2 1.2000E-01` indicating that the upper limit of the pulse runt trigger is set to 120 mV.

TRIGger:A:VIDeo? (Query Only)

Returns the A trigger video parameters.

- Group** Trigger
- Syntax** `TRIGger:A:VIDeo?`
- Examples** `TRIGGER:A:VIDEO?` might return `:TRIGGER:A:VIDEO:POLARITY POSITIVE;SOURCE CH1;STANDARD NTSC;SYNC ALLLINES;HOLDOFF:FIELD 0.0000;:TRIGGER:A:VIDEO:CUSTOM:FORMAT PROGRESSIVE;SCANRATE15K;:TRIGGER:A:VIDEO:LINE 1;HDTV:FORMAT HD1080I60`

TRIGger:A:VIDeo:CUSTom{:FORMat|:TYPE}

Sets or returns the video trigger format. Use this command only when the video format is set to custom.

Conditions This command requires a DPO4VID application module.

Group Trigger

Syntax TRIGger:A:VIDeo:CUSTom{:FORMat|:TYPE}
{INTERLACed|PROGressive}
TRIGger:A:VIDeo:CUSTom{:FORMat|:TYPE}?

Arguments INTERLACed argument sets the format for interlaced video lines.
PROGressive argument sets the format for progressive video lines.

Examples TRIGGER:A:VIDEO:CUSTOM:FORMAT PROGRESSIVE sets the custom format for the A video trigger to progressive lines.

TRIGGER:A:VIDEO:CUSTOM:FORMAT? might return :TRIGGER:A:VIDEO:CUSTOM:FORMAT INTERLACED indicating that interlaced is selected as the custom format for the A video trigger.

TRIGger:A:VIDeo:CUSTom:LINEPeriod

Sets or queries the line period for the standard under test. Use this command only when the video format is set to custom.

Conditions This command requires a DPO4VID application module.

Group Trigger

Syntax TRIGger:A:VIDeo:CUSTom:LINEPeriod <NR3>
TRIGger:A:VIDeo:CUSTom:LINEPeriod?

Arguments <NR3> is the custom video line period.

Examples TRIGGER:A:VIDEO:CUSTOM:LINEPERIOD 50.5E-6 sets the video line period to 50.5 μ s.

TRIGGER:A:VIDEO:CUSTOM:LINEPERIOD? might return
 TRIGGER:A:VIDEO:CUSTOM:LINEPERIOD 63.5600E-6 indicating
 the video line period is set to 63.56 μ s.

TRIGger:A:VIDeo:CUSTom:SCAN

Sets or returns the horizontal line scan rate of the A video trigger. Use this command only when the video format is set to custom.

Conditions	This command requires a DPO4VID application module.
Group	Trigger
Syntax	TRIGger:A:VIDeo:CUSTom:SCAN {RATE15K RATE20K RATE25K RATE35K RATE50K} TRIGger:A:VIDeo:CUSTom:SCAN?
Arguments	RATE15 sets the range of the video line scan rate to 15 kHz through 20 kHz. This is the standard broadcast rate. RATE20 sets the range of the video line scan rate to 20 kHz through 25 kHz. RATE25 sets the range of the video line scan rate to 25 kHz through 35 kHz RATE35 sets the range of the video line scan rate to 35 kHz through 50 kHz RATE50 sets the range of the video line scan rate to 50 kHz through 65 kHz
Examples	TRIGGER:A:VIDEO:CUSTOM:SCAN RATE15 sets the scan rate of the A trigger custom video to Rate 1, which is 15 kHz to 20 kHz (standard broadcast rate). TRIGGER:A:VIDEO:CUSTOM:SCAN? might return :TRIGGER:A:VIDEO:CUSTOM:SCAN RATE20 indicating that the video line rate for the A trigger custom video is set to Rate20, which is 20 kHz to 25 kHz.

TRIGger:A:VIDeo:CUSTom:SYNCInterval

Sets or queries the sync interval for the standard under test. This is only required for BiLevel Custom. Use this command only when the video format is set to custom.

Conditions	This command requires a DPO4VID application module.
-------------------	---

Group	Trigger
Syntax	<pre>TRIGger:A:VIDeo:CUSTom:SYNCInterval <NR3> TRIGger:A:VIDeo:CUSTom:SYNCInterval?</pre>
Arguments	<NR3> is the sync interval.
Examples	<p>TRIGGER:A:VIDEO:CUSTOM:SYNCINTERVAL 4.0E-6 sets the sync interval is set to 4.0 μs.</p> <p>TRIGGER:A:VIDEO:CUSTOM:SYNCINTERVAL? might return TRIGGER:A:VIDEO:CUSTOM:SYNCINTERVAL 4.7200E-6 indicating the sync interval is set to 4.72 μs.</p>

TRIGger:A:VIDeo:HDtv:FORMat

Sets or returns the HDTV video signal format on which to trigger.

Conditions	This command requires a DPO4VID application module.
Group	Trigger
Syntax	<pre>TRIGger:A:VIDeo:HDtv:FORMat {HD1080P24 HD720P60 HD480P60 HD1080I50 HD1080P25 HD1080I60 HD1080PSF24} TRIGger:A:VIDeo:HDtv:FORMat?</pre>

Arguments Table 2-43: Available HDTV formats

HDTV format	Description
1080i50	1125 Lines (1080 active), 1920 x 1080 pixel, interlaced, 60 fps
1080i60	1125 lines (1080 active), 1920 x 1080 pixel, interlaced, 50 fps
1080p24	1125 lines (1080 active), 1920 x 1080 pixel, progressive, 24 fps
1080p25	1125 lines (1080 active), 1920 x 1080 pixel, progressive, 25 fps
1080sf24	1125 Lines (1080 active), 1920 x 1080 pixel, progressive (sF), 24 fps

Table 2-43: Available HDTV formats (cont.)

HDTV format	Description
720p60	750 lines (720 active), 1280 x 720 pixel, progressive, 60 fps
480p60	525 lines (480 active), 640 or 704 x 480 pixel, progressive, 60 fps

TRIGger:A:VIDeo:HOLDoff:FIELD

Sets or returns the video trigger holdoff in terms of video fields.

Conditions This command requires a DPO4VID application module.

Group Trigger

Syntax TRIGger:A:VIDeo:HOLDoff:FIELD <NR3>
TRIGger:A:VIDeo:HOLDoff:FIELD?

Arguments <NR3> argument is a real number from 0.0 to 8.5 in increments of 0.5. The argument sets the number of fields that the oscilloscope waits before rearming the video trigger.

Examples TRIGGER:A:VIDEO:HOLDOFF:FIELD? might return
:TRIGger:A:VIDeo:HOLDoff:FIELD 5 indicating that the oscilloscope is set to wait 5 video fields before rearming the trigger.

TRIGGER:A:VIDEO:HOLDOFF:FIELD 4.5 sets the oscilloscope to wait 4.5 video fields before rearming the trigger.

TRIGger:A:VIDeo:LINE

Sets or returns the video line number on which the oscilloscope triggers. Use the [TRIGger:A:VIDeo{:SYNC|:FIELD}](#) command to actually trigger the oscilloscope on the line that you specify with this command.

Conditions This command requires a DPO4VID application module.

Group Trigger

Syntax `TRIGger:A:VIDeo:LINE <NR1>`
`TRIGger:A:VIDeo:LINE?`

Related Commands [TRIGger:A:VIDeo{:SYNC|:FIELD}](#)

Arguments <NR1> argument is an integer that sets the video line number on which the oscilloscope triggers. The following table lists the valid choices, depending on the active video standard.

Table 2-44: Video Line Numbering Ranges

Video Standard	Line Number Range
525/NTSC	1–525
625/PAL, SECAM	1–625
SECAM	1–625

Examples `TRIGGER:A:VIDEO:LINE 23` sets the oscilloscope to trigger on the line 23.
`TRIGGER:A:VIDEO:LINE ?` might return `:TRIGger:A:VIDeo:LINE 10` indicating that the oscilloscope is set to trigger on line 10.

TRIGger:A:VIDeo:POLarity

Sets or returns the polarity of the A video trigger.

Conditions This command requires a DPO4VID application module.

Group Trigger

Syntax `TRIGger:A:VIDeo:POLarity {NEGative|POSitive}`
`TRIGger:A:VIDeo:POLarity?`

Arguments `POSitive` argument sets the oscilloscope to trigger on a positive video sync pulse.
`NEGative` argument sets the oscilloscope to trigger on a negative video sync pulse.

Examples `TRIGGER:A:VIDEO:POLARITY NEGATIVE` sets the oscilloscope to trigger on a negative video pulse.

TRIGGER:A:VIDEO:POLARITY? might return :TRIGGER:A:VIDEO:POLARITY POSITIVE indicating that the oscilloscope is set to trigger on a positive video sync pulse.

TRIGGER:A:VIDEO:SOURce

Sets or returns the source for the A video trigger.

Group	Trigger
Syntax	TRIGGER:A:VIDEO:SOURce {CH1 CH2 CH3 CH4 D0 D1 D2 D3 D4 D5 D6 D7 D8 D9 D10 D11 D12 D13 D14 D15} TRIGGER:A:VIDEO:SOURce?
Arguments	CH1–CH4 or D0–D15 specifies the input channel to use as the A video trigger.
Examples	TRIGGER:A:VIDEO:SOURCE CH1 sets the source for A video trigger to Channel 1. TRIGGER:A:VIDEO:SOURCE? might return :TRIGGER:A:VIDEO:SOURCE CH2 indicating that the source for the A video trigger is set to Channel 2.

TRIGGER:A:VIDEO:STANDARD

Sets or returns the standard for the video trigger.

Group	Trigger
Syntax	TRIGGER:A:VIDEO:STANDARD {NTSC PAL SECAM CUSTOM HDTV} TRIGGER:A:VIDEO:STANDARD?
Arguments	NTSC sets the oscilloscope to trigger on video signals that meet the NTSC 525/60/2:1 standard (a line rate of 525 lines per frame and a field rate of 60 Hz). PAL sets the oscilloscope to trigger on video signals that meet the NTSC 625/50/2:1 standard (a line rate of 625 lines per frame and a field rate of 50 Hz). SECAM sets the oscilloscope to trigger on video signals that meet the SECAM standard. CUSTOM sets the oscilloscope to trigger on video horizontal scan rate parameters defined by TRIGGER:A:VIDEO:CUSTOM:SCAN command.

HDtv sets the oscilloscope to trigger on HDTV video signals that meet standards defined by the [TRIGger:A:VIDeo:HDtv:FORMat](#) command.

- Examples** `TRIGGER:A:VIDEO:STANDARD NTSC` sets the oscilloscope to trigger on NTSC-standard video signals.
- `TRIGGER:A:VIDEO:STANDARD?` might return `:TRIGger:A:VIDeo:STANDARD HDTV` indicating that the oscilloscope is set to trigger on an HDTV format.

TRIGger:A:VIDeo{:SYNC|:FIELD}

Sets or returns the video field or line that the trigger detects.

- Group** Trigger
- Syntax** `TRIGger:A:VIDeo{:SYNC|:FIELD}`
 `{ODD|EVEN|ALLfielDs|ALLlines|NUMERic}`
 `TRIGger:A:VIDeo{:SYNC|:FIELD}?`
- Arguments** `ODD` argument sets the oscilloscope to trigger on interlaced video odd fields.
 `EVEN` argument sets the oscilloscope to trigger on interlaced video even fields.
 `ALLfielDs` argument sets the oscilloscope to trigger on all fields.
 `ALLlines` argument sets the oscilloscope to trigger on all video lines.
 `NUMERic` argument sets the oscilloscope to trigger on the video signal line specified by the [TRIGger:A:VIDeo:LINE](#) command.
- Examples** `TRIGGER:A:VIDEO:FIELD EVEN` sets the A video trigger so that it will trigger on even fields.
- `TRIGGER:A:VIDEO:FIELD?` might return `:TRIGGER:A:VIDEO:FIELD ALLFIELDS` indicating that the A video will trigger on all video fields.

TRIGger:B

Sets the B trigger level to 50% of minimum and maximum. The query form of this command returns the B trigger parameters. This command is similar to selecting B Event (Delayed) Trigger Setup from the Trig menu and then viewing the current setups.

- Group** Trigger

Syntax	TRIGger:B SETLeve1 TRIGger:B?
Related Commands	TRIGger:A
Arguments	SETLeve1 sets the B trigger level to 50% of MIN and MAX.
Examples	<p>TRIGGER:B SETLEVEL sets the B trigger level to 50% of MIN and MAX.</p> <p>TRIGGER:B? might return the following B trigger parameters: :TRIGGER:B:STATE 0;TYPE EDGE; LEVEL -220.0000E-3;BY TIME;EDGE:SOURCE CH1;SLOPE RISE;COUPLING DC; :TRIGGER:B:TIME 16.0000E-9;EVENTS:COUNT 2</p>

TRIGger:B:BY

Selects or returns whether the B trigger occurs after a specified number of events or a specified period of time after the A trigger.

Group	Trigger
Syntax	TRIGger:B:BY {EVENTS TIME} TRIGger:B:BY?
Related Commands	TRIGger:B:EVENTS:COUNT , TRIGger:B:TIME , ,
Arguments	<p>EVENTS sets the B trigger to take place following a set number of trigger events after the A trigger occurs. The number of events is specified by TRIGger:B:EVENTS:COUNT.</p> <p>TIME sets the B trigger to occur a set time after the A trigger event. The time period is specified by TRIGger:B:TIME.</p>
Examples	<p>TRIGGER:B:BY TIME sets the B trigger to occur at a set time after the A trigger event.</p> <p>TRIGGER:B:BY? might return :TRIGGER:B:BY EVENTS indicating that the B trigger takes place following a set number of trigger events after the A trigger occurs.</p>

TRIGger:B:EDGE? (Query Only)

Returns the source, slope, and coupling for B trigger.

Group Trigger

Syntax TRIGger:B:EDGE?

Related Commands [TRIGger:B:EDGE:COUPling](#), [TRIGger:B:EDGE:SLOpe](#), [TRIGger:B:EDGE:SOUrce](#)

Examples TRIGGER:B:EDGE? might return :TRIGGER:B:EDGE:SOURCE CH1; SLOPE RISE;COUPLING DC

TRIGger:B:EDGE:COUPling

Sets or returns the type of coupling for the B trigger.

Group Trigger

Syntax TRIGger:B:EDGE:COUPling {DC|HFRej|LFRej|NOISerej}
TRIGger:B:EDGE:COUPling?

Related Commands [TRIGger:B:EDGE?](#)

Arguments DC selects DC trigger coupling.
HFRej selects high-frequency reject coupling.
LFRej selects low-frequency reject coupling.
NOISerej selects DC low sensitivity.

Examples TRIGGER:B:EDGE:COUPLING DC selects DC for the B trigger coupling.
TRIGGER:B:EDGE:COUPLING? might return :TRIGGER:B:EDGE:COUPLING ATRIGGER for the B trigger coupling.

TRIGger:B:EDGE:SLOpe

Sets or returns the slope for the B trigger.

Group	Trigger
Syntax	TRIGger:B:EDGE:SLOPe {RISe FALL} TRIGger:B:EDGE:SLOPe?
Related Commands	TRIGger:B:EDGE?
Arguments	RISe triggers on the rising or positive edge of a signal. FALL triggers on the falling or negative edge of a signal.
Examples	TRIGGER:B:EDGE:SLOPE FALL sets the B edge trigger to occur on the falling slope. TRIGGER:B:EDGE:SLOPE? might return :TRIGGER:B:EDGE:SLOPE RISE indicating that the B edge trigger occurs on the rising slope.

TRIGger:B:EDGE:SOURce

Sets or returns the source for the B trigger.

Group	Trigger
Syntax	TRIGger:B:EDGE:SOURce {CH<x> EXT LINE} TRIGger:B:EDGE:SOURce?
Related Commands	TRIGger:B:EDGE?
Arguments	CH<x> specifies one of the input channels as the B trigger source. EXT specifies an external trigger (using the Aux In connector, located on the front panel of the oscilloscope) as the B trigger source. LINE specifies the power line as the B trigger source.
Examples	TRIGGER:B:EDGE:SOURCE CH4 sets channel 4 as the input source for the B trigger. TRIGGER:B:EDGE:SOURCE? might return :TRIGGER:B:EDGE:SOURCE CH1 indicating that the current input source for the B trigger is channel 1.

TRIGger:B:EVENTS? (Query Only)

Returns the current B trigger events parameter.

Group Trigger

Syntax TRIGger:B:EVENTS?

Related Commands [TRIGger:B:EVENTS:COUNt](#)

Examples TRIGGER:B:EVENTS? might return
:TRIGGER:B:EVENTS:COUNt 2
indicating that 2 events must occur before the B trigger occurs.

TRIGger:B:EVENTS:COUNt

Sets or returns the number of events that must occur before the B trigger (when TRIG:DElay:BY is set to EVENTS).

Group Trigger

Syntax TRIGger:B:EVENTS:COUNt <NR1>
TRIGger:B:EVENTS:COUNt?

Related Commands [TRIGger:B:EVENTS?](#)

Arguments <NR1> is the number of B trigger events, which can range from 1 to 10,000,000.

Examples TRIGGER:B:EVENTS:COUNt 4 specifies that the B trigger will occur four trigger events after the A trigger.

TRIGGER:B:EVENTS:COUNt? might return :TRIGGER:B:EVENTS:COUNt 2
indicating that two events must occur after the A trigger before the B trigger can occur.

TRIGger:B:LEVel

Sets or returns the level for the B trigger.

Group	Trigger
Syntax	TRIGger:B:LEVel {TTL <NR3>} TRIGger:B:LEVel?
Related Commands	TRIGger:A:LEVel, TRIGger:B, TRIGger:B:EDGE:SOUrce
Arguments	TTL specifies a preset TTL high level of 1.4 V. <NR3> is the B trigger level, in volts.
Examples	TRIGGER:B:LEVEL TTL sets the B trigger level to 1.4 V. TRIGGER:B:LEVEL? might return :TRIGGER:B:LEVEL 173.0000E-03 indicating that the B trigger level is currently set at 173 mV.

TRIGger:B:LEVel:CH<x>

Sets or returns the B trigger level for channel <x>, where x is the channel number. Each Channel can have an independent Level.

Group	Trigger
Syntax	TRIGger:B:LEVel:CH<x> {ECL TTL <NR3>} TRIGger:B:LEVel:CH<x>?
Arguments	ECL specifies a preset ECL high level of -1.3V. TTL specifies a preset TTL high level of 1.4V. <NR3> specifies the trigger level in user units (usually volts).
Examples	TRIGGER:B:LEVEL:CH2? might return :TRIGGER:B:LEVEL:CH2 1.3000E+00 indicating that the B edge trigger is set to 1.3 V for channel 2. TRIGGER:B:LEVEL:CH3 TTL sets the B edge trigger to TTL high level for channel 3.

TRIGger:B:LEVel:D<x>

Sets or returns the B trigger level for digital channel <x>, where x is the channel number. Each channel can have an independent level.

Group	Trigger
Syntax	<pre>TRIGger:B:LEVel:D<x> {ECL TTL <NR3>} TRIGger:B:LEVel:D<x>?</pre>
Arguments	<p>ECL specifies a preset ECL high level of –1.3V.</p> <p>TTL specifies a preset TTL high level of 1.4V.</p> <p><NR3> specifies the trigger level in user units (usually volts).</p>

TRIGger:B:LOWerthreshold:CH<x>

Sets or returns the B trigger lower threshold for the channel <x>, where x is the channel number. Each channel can have an independent level. Used in runt and slew rate triggers as the lower threshold. Used for all other trigger types as the single level/threshold.

Group	Trigger
Syntax	<pre>TRIGger:B:LOWerthreshold:CH<x> {ECL TTL <NR3>} TRIGger:B:LOWerthreshold:CH<x>?</pre>
Arguments	<p>ECL specifies a preset ECL high level of –1.3V.</p> <p>TTL specifies a preset TTL high level of 1.4V.</p> <p><NR3> is the threshold level, in volts.</p>

TRIGger:B:LOWerthreshold:D<x>

Sets or queries the lower threshold for the digital channel selected. Each channel can have an independent level. Used in runt and slew rate as the lower threshold. Used for all other trigger types as the single level/threshold.

Group	Trigger
Syntax	<pre>TRIGger:B:LOWerthreshold:D<x> {<NR3> ECL TTL} TRIGger:B:LOWerthreshold:D<x>?</pre>

Arguments	<p><NR3> specifies the threshold in volts.</p> <p>ECL specifies a preset ECL high level of -1.3V.</p> <p>TTL specifies a preset TTL high level of 1.4V.</p>
Examples	<p>TRIGGER:B:LOWERTHRESHOLD:D1? might return</p> <p>TRIGGER:B:LOWERTHRESHOLD:D1 1.4000 indicating the threshold is set to 1.4 volts.</p>

TRIGger:B:STATE

Sets or returns the state of B trigger activity. If the B trigger state is on, the B trigger is part of the triggering sequence. If the B trigger state is off, then only the A trigger causes the trigger event.

Group	Trigger
Syntax	<p>TRIGger:B:STATE {ON OFF <NR1>}</p> <p>TRIGger:B:STATE?</p>
Related Commands	TRIGger:A:MODE
Arguments	<p>ON specifies that the B trigger is active and in causes trigger events conjunction with the A trigger.</p> <p>OFF specifies that only the A trigger causes trigger events.</p> <p><NR1> a 0 turns off the B trigger; any other value activates the B trigger.</p>
Examples	<p>TRIGGER:B:STATE ON sets the B trigger to active, making it capable of causing trigger events.</p> <p>TRIGGER:B:STATE? might return :TRIGGER:B:STATE 0 indicating that the B trigger is inactive and that only the A trigger causes trigger events.</p>

TRIGger:B:TIME

Sets or returns B trigger delay time. The B Trigger time applies only if TRIGger:B:BY is set to TIME.

Group	Trigger
--------------	---------

Syntax TRIGger:B:TIME <NR3>
TRIGger:B:TIME?

Related Commands [TRIGger:B:BY](#), [TRIGger:B:EVENTS:COUNt](#)

Arguments <NR3> is the B trigger delay time in seconds.

Examples TRIGGER:B:TIME 4E-6 sets the B trigger delay time to 4 μ s.
TRIGGER:B:TIME? might return :TRIGGER:B:TIME 16.0000E-9 indicating that the B trigger time is set to 16 ns.

TRIGger:B:TYPE

Sets or returns the type of B trigger. The only supported B trigger type is EDGE.

Group Trigger

Syntax TRIGger:B:TYPE EDGE
TRIGger:B:TYPE?

Related Commands [TRIGger:A:TYPE](#)

Arguments EDGE sets the B trigger type to edge.

Examples TRIGGER:B:TYPE EDGE sets the B trigger type to edge.
TRIGGER:B:TYPE? might return :TRIGGER:B:TYPE EDGE.

TRIGger:B:UPPerthreshold:CH<x>

Sets the upper threshold for the channel selected. Each channel can have an independent level.

Group Trigger

Syntax TRIGger:B:UPPerthreshold:CH<x> {<NR3>|TTL}
TRIGger:B:UPPerthreshold:CH<x>?

Arguments TTL specifies a preset TTL high level of 1.4 V.
 <NR3> is the clock level, in volts.

TRIGger:EXternal? (Query Only)

Returns all external trigger parameters.

Group Trigger

Syntax TRIGger:EXternal?

TRIGger:EXternal:PRObe

Sets or returns the attenuation factor value of the external probe connector.

Group Trigger

Syntax TRIGger:EXternal:PRObe <NR3>
 TRIGger:EXternal:PRObe?

Arguments <NR3> is the attenuation factor of the probe.

Examples TRIGGER:EXTERNAL:PROBE? might return :TRIGGER:EXTERNAL:PROBE
 1.0E1 for a 10X probe.

TRIGger:EXternal:YUNIts? (Query Only)

Returns the external trigger vertical (Y) units value.

Group Trigger

Syntax TRIGger:EXternal:YUNIts?

Examples TRIGGER:EXTERNAL:YUNITS? might return TRIGGER:EXTERNAL:YUNITS
 "V" if the vertical unit is volts.

TRIGger:FREQuency? (Query Only)

Returns the trigger frequency in hertz if available. If the trigger frequency is not currently available, the IEEE Not A Number (NaN = 99.10E+36) value is returned. The maximum precision of the returned frequency is 12 digits.

Group Trigger

Syntax TRIGger:FREQuency?

Examples TRIGGER:FREQUENCY? might return TRIGGER:FREQUENCY 99.10+36 indicating that the trigger frequency is not available.

TRIGger:STATE? (Query Only)

Returns the current state of the triggering system.

Group Trigger

Syntax TRIGger:STATE?

Related Commands [TRIGger:A:MODE](#)

Returns ARMED indicates that the oscilloscope is acquiring pretrigger information.

AUTO indicates that the oscilloscope is in the automatic mode and acquires data even in the absence of a trigger.

READY indicates that all pretrigger information has been acquired and that the oscilloscope is ready to accept a trigger.

SAVE indicates that the oscilloscope is in save mode and is not acquiring data.

TRIGGER indicates that the oscilloscope triggered and is acquiring the post trigger information.

Examples TRIGGER:STATE? might return :TRIGGER:STATE ARMED indicating that the pretrigger data is being acquired.

*TST? (Query Only)

Tests (self-test) the interface and returns a 0.

Group Miscellaneous

Syntax *TST?

Examples *TST? always returns 0.

UNLock (No Query Form)

Unlocks the front panel. The command is equivalent to LOCK NONE.

Group Miscellaneous

Syntax UNLOCK ALL

Related Commands [LOCK](#)

Arguments ALL specifies that all front-panel buttons and knobs are unlocked.

Examples UNLOCK ALL unlocks all front-panel buttons and knobs.

USBDevice:CONFigure

Enables or disables the rear USB port for use with Pictbridge printers.

Group PictBridge

Syntax USBDevice:CONFigure {DISabled|IMAge|USBTmc}
USBDevice:CONFigure?

Arguments DISabled disables the rear USB port.
IMAge enables the rear USB port as an SIC device.
USBTmc enables the rear USB port as a USBTMC device.

Examples USBDEVICE:CONFIGURE IMAGE enables the rear USB port as an SIC device

USBDEVICE:CONFIGURE ? might return USBDEVICE:CONFIGURE USBT indicating a USBTMC device.

USBTMC? (Query Only)

Returns the USBTMC information used by the USB hosts to determine the instrument interfaces.

Group Miscellaneous

Syntax USBTMC?

USBTMC:PRODUCTID:DECimal? (Query Only)

This query to returns the USBTMC product ID. The product ID numbers vary for each instrument family and model.

Group Miscellaneous

Syntax USBTMC:PRODUCTID:DECimal?

Related Commands [USBTMC:PRODUCTID:HEXadecimal?](#), [USBTMC:SERIALnumber?](#), [USBTMC:VENDORID:DECimal?](#), [USBTMC:VENDORID:HEXadecimal?](#)

Examples USBTMC:PRODUCTID:DECIMAL? might return USBTMC:PRODUCTID:DECIMAL 1025, indicating the product ID in decimal is 1025.

USBTMC:PRODUCTID:HEXadecimal? (Query Only)

This query to returns the USBTMC product ID. The product ID numbers vary for each instrument family and model.

Group Miscellaneous

Syntax USBTMC:PRODUCTID:HEXadecimal?

Related Commands [USBTMC:PRODUCTID:DECimal?](#), [USBTMC:SERIALnumber?](#),
[USBTMC:VENDORID:DECimal?](#), [USBTMC:VENDORID:HEXadecimal?](#)

Examples USBTMC:PRODUCTID:HEXADECIMAL? might return
USBTMC:PRODUCTID:HEXADECIMAL 0x0401, indicating the product ID
in hexadecimal is 0x0401.

USBTMC:SERIALnumber? (Query Only)

This query returns the instrument serial number.

Group Miscellaneous

Syntax USBTMC:SERIALnumber?

Related Commands [USBTMC:PRODUCTID:DECimal?](#), [USBTMC:PRODUCTID:HEXadecimal?](#),
[USBTMC:VENDORID:DECimal?](#), [USBTMC:VENDORID:HEXadecimal?](#)

Examples USBTMC:SERIALNUMBER? might return USBTMC:SERIALNUMBER PQ30003,
indicating the product serial number is PQ30003.

USBTMC:VENDORID:DECimal? (Query Only)

This query returns the USBTMC vendor ID. The Vendor ID for Tektronix is
0x699 or 1689 decimal.

Group Miscellaneous

Syntax USBTMC:VENDORID:DECimal?

Related Commands [USBTMC:PRODUCTID:DECimal?](#), [USBTMC:PRODUCTID:HEXadecimal?](#),
[USBTMC:SERIALnumber?](#), [USBTMC:VENDORID:HEXadecimal?](#)

Examples USBTMC:VENDORID:DECIMAL? might return USBTMC:VENDORID:DECIMAL
1689, indicating the vendor ID in decimal is 1689.

USBTMC:VENDORID:HEXadecimal? (Query Only)

This query returns the USBTMC vendor ID. The Vendor ID for Tektronix is 0x699 or 1689 decimal.

Group Miscellaneous

Syntax USBTMC:VENDORID:HEXadecimal?

Related Commands [USBTMC:PRODUCTID:DECimal?](#), [USBTMC:PRODUCTID:HEXadecimal?](#), [USBTMC:SERIALnumber?](#), [USBTMC:VENDORID:DECimal?](#)

Examples USBTMC:VENDORID:HEXADECIMAL? might return
USBTMC:VENDORID:HEXADECIMAL 0x0699, indicating the vendor ID in hexadecimal is 0x0699.

VERBose

Sets or returns the Verbose state that controls the length of keywords on query responses. Keywords can be both headers and arguments.

NOTE. This command does not affect IEEE Std 488.2-1987 Common Commands (those starting with an asterisk). This command does affect the verbose state of both the USBTMC and VXI-11 interfaces. Refer to the Introduction for information.

Group Miscellaneous

Syntax VERBose {OFF|ON|<NR1>}

Related Commands [HEADer](#), [*LRN?](#), [SET?](#)

Arguments OFF sets the Verbose state to false, which returns minimum-length keywords for applicable setting queries.

ON sets the Verbose state to true, which returns full-length keywords for applicable setting queries.

<NR1> a 0 returns minimum-length keywords for applicable setting queries; any other value returns full-length keywords.

Examples `VERBOSE ON` enables the Verbose state.
 `VERBOSE ?` might return `:VERB 0` indicating that the Verbose state is disabled.

***WAI (No Query Form)**

Prevents the oscilloscope from executing further commands or queries until all pending commands that generate an OPC message are complete. This command allows you to synchronize the operation of the oscilloscope with your application program. (See page 3-7, *Synchronization Methods*.)

The `*WAI` command will stop execution until certain oscilloscope operations are complete. (See Table 3-3 on page 3-7.)

Group Status and Error

Syntax `*WAI`

Related Commands [BUSY?](#), [*OPC](#)

Examples `*WAI` prevents the oscilloscope from executing any further commands or queries until all pending commands that generate an OPC message are complete.

WAVFrm? (Query Only)

Returns `WFMOutpre?` and `CURVe?` data for the waveform as specified by the `DATA:SOURce` command. This command is equivalent to sending both `WFMOutpre?` and `CURVe?`, with the additional provision that the response to `WAVFrm?` is guaranteed to provide a synchronized preamble and curve. The source waveform, as specified by `:DATA:SOURCE`, must be active or the query will not return any data and will generate an error indicator.

Group Waveform Transfer

Syntax `WAVFrm?`

Related Commands [CURVe](#), [DATA:SOURce](#), [WFMOutpre?](#)

Examples `WAVFRM?` might return the waveform data as: `:WFMOUTPRE:BYT_NR 1;BIT_NR 8;ENCDG ASCII;BN_FMT RI;BYT_OR MSB;WFID`

```

"Ch1, DC coupling, 100.0mV/div, 4.000us/div,
10000 points, Sample mode";NR_PT 20;PT_FMT Y;XUNIT
"s";XINCR 4.0000E-9;XZERO -20.0000E-6;PT_OFF 0;YUNIT
"V";YMULT 4.0000E-3;YOFF 0.0000;YZERO 0.0000;:CURVE
2,1,4,2,4,3,0,3,3,3,3,3,3,4,3,5,6,6,7,3

```

WFMInpre? (Query Only)

Returns the waveform formatting and scaling specifications to be applied to the next incoming CURVe command data.

Group Waveform Transfer

Syntax WFMInpre?

Related Commands [WFMOutpre?](#)

Examples WFMINPRE? might return the waveform formatting as :WFMINPRE:BIT_NR 8;BN_FMT RI;BYT_NR 1; BYT_OR MSB;ENCDG BIN;NR_PT 500;PT_FMT Y; PT_OFF 0;XINCR 2.0000E-6;XZERO 1.7536E-6; XUNIT "s";YMULT 1.0000E-3;YOFF 0.0000; YZERO 0.0000;YUNIT "V"

WFMInpre:BIT_Nr

Sets or returns the number of bits per binary waveform point for the incoming waveform. Changing the value of [WFMInpre:BIT_Nr](#) also changes the value of [WFMInpre:BYT_Nr](#).

Group Waveform Transfer

Syntax WFMInpre:BIT_Nr <NR1>
WFMInpre:BIT_Nr?

Related Commands [WFMInpre:BYT_Nr](#)

Arguments <NR1> number of bits per data point can be 8 or 16.

Examples WFMINPRE:BIT_NR 16 sets the number of bits per waveform point to 16, for incoming data.

WFMINPRE:BIT_NR? might return :WFMINPRE:BIT_NR 8 indicating that incoming waveform data uses 8 bits per waveform point.

WFMinpre:BN_Fmt

Sets or returns the format of binary data for incoming waveforms.

Group Waveform Transfer

Syntax WFMinpre:BN_Fmt {RI|RP}
WFMinpre:BN_Fmt?

Related Commands [WFMinpre:BN_Fmt](#)

Arguments RI specifies signed integer data point representation.
RP specifies positive integer data point representation.

Examples WFMINPRE:BN_FMT RP specifies positive integer data point representation.
WFMINPRE:BN_FMT? might return :WFMINPRE:BN_FMT RI indicating that the incoming data is currently interpreted as signed integers.

WFMinpre:BYT_Nr

Sets or returns the data width for the incoming waveform. Changing the value of [WFMinpre:BYT_Nr](#) also changes the value of [WFMinpre:BIT_Nr](#).

Group Waveform Transfer

Syntax WFMinpre:BYT_Nr <NR1>
WFMinpre:BYT_Nr?

Related Commands [WFMinpre:BIT_Nr](#)

Arguments <NR1> is the number of bytes per data point and can be 1 or 2.

Examples WFMINPRE:BYT_NR 1 sets the number of bytes per incoming waveform data point to 1, which is the default setting.

WFMINPRE:BYT_Nr? might return :WFMINPRE:BYT_Nr 2 indicating that there are 2 bytes per incoming waveform data point.

WFMinpre:BYT_Or

Sets or returns which byte of binary waveform data is expected first for incoming waveform data when data points require than one byte. This specification only has meaning when [WFMinpre:ENCdg](#) is set to BIN and [WFMinpre:BYT_Nr](#) is 2.

Group Waveform Transfer

Syntax WFMinpre:BYT_Or {LSB|MSB}
WFMinpre:BYT_Or?

Related Commands [WFMinpre:ENCdg](#), [WFMinpre:BYT_Nr](#), [WFMinpre:BYT_Or](#)

Arguments LSB specifies that the least significant byte will be expected first.
MSB specifies that the most significant byte will be expected first.

Examples WFMINPRE:BYT_OR MSB sets the most significant incoming byte of incoming waveform data to be expected first.
WFMINPRE:BYT_OR? might return :WFMINPRE:BYT_OR LSB indicating that the least significant incoming CURVe data byte will be expected first.

WFMinpre:ENCdg

Sets or returns the type of encoding for incoming waveform data.

Group Waveform Transfer

Syntax WFMinpre:ENCdg {ASCIi|BINary}
WFMinpre:ENCdg?

Related Commands [WFMinpre:ENCdg](#)

Arguments	<p>ASCIi specifies that the incoming data is in ASCII format.</p> <p>BINary specifies that the incoming data is in a binary format whose further interpretation requires knowledge of BYT_NR, BIT_NR, BN_FMT, and BYT_OR.</p>
Examples	<p>WFMINPRE:ENCDG ASC sets the format of incoming waveform data to ASCII format.</p> <p>WFMINPRE:ENCDG ? might return :WFMINPRE:ENCDG BIN indicating that the incoming waveform data is in binary format.</p>

WFMinpre:NR_Pt

Sets or returns the number of data points that are in the incoming waveform record.

Group	Waveform Transfer
Syntax	<p>WFMinpre:NR_Pt <NR1></p> <p>WFMinpre:NR_Pt?</p>
Related Commands	CURVe , DATa , DATa:START , DATa:STOP , SAVe:WAVEform , SAVe:WAVEform:FILEFormat , WFMinpre:NR_Pt?
Arguments	<NR1> is the number of data points if WFMinpre:PT_Fmt is set to Y. It is the number of min-max pairs if WFMinpre:PT_Fmt is set to ENV.
Examples	<p>WFMINPRE:NR_PT 10000 specifies that 10000 data points will be expected.</p> <p>WFMINPRE:NR_PT ? might return :WFMINPRE:NR_PT 10000 indicating that there are 10000 data points in the expected incoming waveform record.</p>

WFMinpre:PT_Fmt

Sets or returns the point format of the incoming waveform data. Regardless of the argument used, the scale, offset, and so on are interpreted similarly. When ENV is used, waveform data is interpreted over the min-max pair; when Y is used, it is interpreted over a single point.

Group	Waveform Transfer
--------------	-------------------

Syntax `WFMinpre:PT_Fmt {ENV|Y}`
`WFMinpre:PT_Fmt?`

Related Commands [WFMinpre:PT_Fmt?](#)

Arguments ENV specifies that the waveform is transmitted in envelope mode as maximum and minimum point pairs. Only Y values are explicitly transmitted. Absolute coordinates are given by:

$$X_n = XZero + XINcr (n - PT_Off)$$

$$Y_{nmax} = YZero + YMult (ynmax - YOFf)$$

$$Y_{nmin} = YZero + YMult (ynmin - YOFf)$$

Y specifies a normal waveform where one ASCII or binary data point is transmitted for each point in the waveform record. Only Y values are explicitly transmitted. Absolute coordinates are given by:

$$X_n = XZero + XINcr (n - PT_Off)$$

$$Y_n = YZero + YMult (yn - YOFf)$$

Examples `WFMINPRE:PT_FMT ENV` sets the incoming waveform data point format to enveloped.

`WFMINPRE:PT_FMT?` might return `:WFMINPRE:PT_FMT ENV` indicating that the waveform is transmitted as maximum and minimum point pairs.

WFMinpre:PT_Off

The set form of this command is ignored. The query form always returns a 0. This command is listed for compatibility with other Tektronix oscilloscopes.

Group Waveform Transfer

Syntax `WFMinpre:PT_Off <NR1>`
`WFMinpre:PT_Off?`

Arguments Arguments are ignored.

WFMInpre:XINcr

Sets or returns the horizontal interval between incoming waveform points in units specified by WFMInpre:XUNit.

Group Waveform Transfer

Syntax WFMInpre:XINcr <NR3>
WFMInpre:XINcr?

Related Commands [WFMInpre:XUNit](#), [WFMOutpre:XINcr?](#)

Arguments <NR3> is the horizontal interval representation.

Examples WFMInpre:XINcr 3E-3 sets the interval between incoming waveform points to 3 ms.

WFMInpre:XINcr ? might return :WFMInpre:XINcr 1.0000E-3 indicating that if WFMInpre:XUNit is set to "s", there is a 1 ms interval between incoming waveform points.

WFMInpre:XUNit

Sets or returns the horizontal units of the incoming waveform.

Supported units are:

%, /Hz, A, A/A, A/V, A/W, A/dB, A/s, AA, AW, AdB, As, B, Hz, IRE, S/s, V, V/A, V/V, V/W, V/dB, V/s, VV, VW, VdB, Volts, Vs, W, W/A, W/V, W/W, W/dB, W/s, WA, WV, WW, WdB, Ws, dB, dB/A, dB/V, dB/W, dB/dB, dBA, dBV, dBW, dBdB, day, degrees, div, hr, min, ohms, percent, s

Group Waveform Transfer

Syntax WFMInpre:XUNit <QString>
WFMInpre:XUNit?

Related Commands [WFMOutpre:XUNit?](#)

Arguments <QString> contains a maximum of three alpha characters that represent the horizontal unit of measure for the incoming waveform.

- Examples** `WFMINPRE:XUNIT "HZ"` specifies that the horizontal units for the incoming waveform are hertz.
- `WFMINPRE:XUNIT?` might return `:WFMINPRE:XUNIT "s"` indicating that the horizontal units for the incoming waveform are seconds.

WFMinpre:XZEro

Sets or returns the position value, in XUNits, of the first sample of the incoming waveform.

Group Waveform Transfer

Syntax `WFMinpre:XZErO <NR3>`
`WFMinpre:XZErO?`

Related Commands [WFMinpre:XINcr](#), [WFMinpre:XUNit](#), [WFMOutpre:XZErO?](#)

Arguments `<NR3>` argument is the floating point value of the position, in XUNits, of the first sample in the incoming waveform. If XUNits is “s”, `<NR3>` is the time of the first sample in the incoming waveform.

- Examples** `WFMINPRE:XZERO 5.7E-6`, which indicates the trigger occurred 5.7 μs before the first sample in the waveform.
- `WFMINPRE:XZERO?` might return `:WFMINPRE:XZErO -7.5000E-6` indicating that the trigger occurs 7.5 μs after the first sample in the waveform.

WFMinpre:YMUlt

Sets or returns the vertical scale factor of the incoming waveform, expressed in YUNits per waveform data point level. For one byte waveform data, there are 256 data point levels. For two byte waveform data there are 65,536 data point levels.

YMUlt, YOFf, and YZErO are used to convert waveform record values to YUNit values using the following formula (where dl is the data level; curve_in_dl is a data point in CURVe):

$$\text{value_in_units} = ((\text{curve_in_dl} - \text{YOFf_in_dl}) * \text{YMUlt}) + \text{YZErO_in_units}$$

NOTE. For a given waveform record, YMUlt, YOFf, and YZErO have to be a consistent set, otherwise vertical cursor readouts and vertical measurements may give incorrect results.

Group	Waveform Transfer
Syntax	WFMInpre:YMUl t <NR3> WFMInpre:YMUl t?
Related Commands	DATa:DESTination , WFMInpre:BYT_Nr , WFMInpre:YUNit
Arguments	<NR3> is the vertical scale factor per digitizing level of the incoming waveform points.
Examples	<p>WFMINPRE:YMULT? might return :WFMINPRE:YMULT 40.0000E-3, which (if YUNit is "V") indicates that the vertical scale is 40 mV/digitizing level (1V/div for 8-bit data).</p> <p>WFMINPRE:YMULT 20E-3 specifies that (if WFMInpre:YUNit is "V" and WFMInpre:BYT_Nr is 1), the vertical scale is 20 mV/digitizing level (500 mV/div).</p>

WFMInpre:YOff

Sets or returns the vertical position of the incoming waveform in digitizing levels. Variations in this number are analogous to changing the vertical position of the waveform.

YMUl t, YOff, and YZEro are used to convert waveform record values to YUNit values using the following formula (where dl is the data level; curve_in_dl is a data point in CURVe):

$$\text{value_in_units} = ((\text{curve_in_dl} - \text{YOff_in_dl}) * \text{YMUl t}) + \text{YZEro_in_units}$$

NOTE. For a given waveform record, YMUl t, YOff, and YZEro have to be a consistent set, otherwise vertical cursor readouts and vertical measurements may give incorrect results.

Group	Waveform Transfer
Syntax	WFMInpre:YOff <NR3> WFMInpre:YOff?
Related Commands	WFMInpre:BYT_Nr , WFMInpre:YMUl t , WFMOutpre:YOff?

Arguments	<NR3> is the vertical offset in digitizing levels.
Examples	<p>WFMINPRE:YOFF 50 specifies that the zero reference point for the incoming waveform is 50 digitizing levels (2 divisions, for 8-bit data) above the center of the data range.</p> <p>WFMINPRE:YOFF? might return :WFMINPRE:YOFF 25 indicating the vertical position of the incoming waveform in digitizing levels.</p>

WFMinpre:YUNit

Sets or returns the vertical units of the incoming waveform.

Supported units are: %, /Hz, A, A/A, A/V, A/W, A/dB, A/s, AA, AW, AdB, As, B, Hz, IRE, S/s, V, V/A, V/V, V/W, V/dB, V/s, VV, VW, VdB, Volts, Vs, W, W/A, W/V, W/W, W/dB, W/s, WA, WV, WW, WdB, Ws, dB, dB/A, dB/V, dB/W, dB/dB, dBA, dBV, dBW, dBdB, day, degrees, div, hr, min, ohms, percent, s

Group	Waveform Transfer
Syntax	<p>WFMinpre:YUNit <QString></p> <p>WFMinpre:YUNit?</p>

Related Commands [WFMOutpre:YUNit?](#)

Arguments	<QString> contains a maximum of three alpha characters that represent the vertical unit of measure for the incoming waveform.
Examples	<p>WFMINPRE:YUNIT? might return :WFMINPRE:YUNIT "V" indicating the vertical units for the incoming waveform are volts.</p> <p>WFMINPRE:YUNIT "A" specifies that the vertical units for the incoming waveform are Amperes.</p>

WFMinpre:YZero

Sets or returns the vertical offset of the incoming waveform in units specified by WFMinpre:YUNit. Variations in this number are analogous to changing the vertical offset of the waveform.

YMUlt, YOFF, and YZEro are used to convert waveform record values to YUNit values using the following formula (where dl is the data level; curve_in_dl is a data point in CURVe):

$$\text{value_in_units} = ((\text{curve_in_dl} - \text{YOff_in_dl}) * \text{YMult}) + \text{YZero_in_units}$$

NOTE. For a given waveform record, *YMult*, *YOff*, and *YZero* have to be a consistent set, otherwise vertical cursor readouts and vertical measurements may give incorrect results.

Group	Waveform Transfer
Syntax	WFMInpre:YZero <NR3> WFMInpre:YZero?
Related Commands	WFMInpre:YUNit , WFMOutpre:YZero?
Arguments	<NR3> is the offset in YUNits.
Examples	<p>WFMINPRE:YZERO 1.5E+0 specifies that the zero reference point for the incoming waveform is 1.5 V below the center of the data range (given that WFMInpre:YUNit is set to V).</p> <p>WFMINPRE:YZERO? might return :WFMINPRE:YZero 7.5000E-6 indicating that the zero reference for the incoming waveform is 7.5 μV below the center of the data range (given that WFMInpre:YUNit is set to V).</p>

WFMOutpre? (Query Only)

Returns waveform transmission and formatting parameters for the waveform specified by [DATA:SOURce](#) command. If the waveform specified by the [DATA:SOURce](#) command is not displayed, the oscilloscope returns only the waveform transmission parameters (BYT_Nr, BIT_Nr, ENCDg, BN_Fmt, BYT_Or).

Group	Waveform Transfer
Syntax	WFMOutpre?
Examples	<p>WFMOUTPRE? ? might return the waveform formatting data as:</p> <pre>:WFMOUTPRE:BYT_NR 2;BIT_NR 16;ENCDG ASCII;BN_FMT RI;BYT_OR MSB;WFID "Ch1, DC coupling, 100.0mV/div, 4.000us/div, 10000 points, Sample mode";NR_PT 10000;PT_FMT Y;XUNIT "s";XINCR</pre>

```
4.0000E-9;XZERO - 20.0000E-6;PT_OFF 0;YUNIT "V";YMULT
15.6250E-6;YOFF : "6.4000E+3;YZERO 0.0000
```

WFMOutpre:BIT_Nr

Sets and returns the number of bits per waveform point that outgoing waveforms contain, as specified by the [DATA:SOURce](#) command. Changing the value of [WFMOutpre:BIT_Nr](#) also changes the values of [WFMOutpre:BYT_Or](#) and .

Group Waveform Transfer

Syntax WFMOutpre:BIT_Nr <NR1>
WFMOutpre:BIT_Nr?

Related Commands [DATA:SOURce](#), , [WFMOutpre:BN_Fmt](#)

Arguments <NR1> is the number of bits per data point and can be 8 or 16.

Examples WFMOUTPRE:BIT_NR 16 sets the number of bits per waveform point to 16 for outgoing waveforms.

WFMOUTPRE:BIT_NR? might return :WFMOUTPRE:BIT_NR 8 indicating that outgoing waveforms use 8 bits per waveform point.

WFMOutpre:BN_Fmt

Sets or returns the format of binary data for outgoing waveforms specified by the [DATA:SOURce](#) command. Changing the value of [WFMOutpre:BN_Fmt](#) also changes the value of [DATA:ENCdg](#).

Group Waveform Transfer

Syntax WFMOutpre:BN_Fmt {RI|RP}
WFMOutpre:BN_Fmt?

Related Commands [DATA:ENCdg](#), [DATA:SOURce](#)

Arguments RI specifies signed integer data point representation.
RP specifies positive integer data point representation.

Examples `WFMOUTPRE:BN_FMT RP` specifies that outgoing waveform data will be in positive integer format.

`WFMOUTPRE:BN_FMT?` might return `:WFMOUTPRE:BN_FMT RI` indicating that the outgoing waveform data is currently in signed integer format.

WFMOutpre:BYT_Nr

Sets or returns the data width for the outgoing waveform specified by the [DATA:SOURce](#) command. Changing [WFMOutpre:BYT_Nr](#) also changes [WFMOutpre:BIT_Nr](#) and .

Group Waveform Transfer

Syntax `WFMOutpre:BYT_Nr <NR1>`
`WFMOutpre:BYT_Nr?`

Related Commands [DATA:SOURce](#), , [WFMOutpre:BIT_Nr](#)

Arguments `<NR1>` is the number of bytes per data point and can be 1 or 2.

Examples `WFMOUTPRE:BYT_NR 1` sets the number of bytes per outgoing waveform data point to 1, which is the default setting.

`WFMOUTPRE:BYT_NR?` might return `:WFMOUTPRE:BYT_NR 2` indicating that there are 2 bytes per outgoing waveform data point.

WFMOutpre:BYT_Or

Sets or returns which byte of binary waveform data is transmitted first, during a waveform data transfer, when data points require than one byte. This specification only has meaning when [WFMOutpre:ENCdg](#) is set to BIN and [WFMOutpre:BYT_Nr](#) is 2. Changing [WFMOutpre:BYT_Or](#) also changes [DATA:ENCdg](#) (if [DATA:ENCdg](#) is not ASCII).

Group Waveform Transfer

Syntax `WFMOutpre:BYT_Or {LSB|MSB}`
`WFMOutpre:BYT_Or?`

Related Commands	WFMOutpre:ENCdg , WFMOutpre:BYT_Nr
Arguments	<p>LSB specifies that the least significant byte will be transmitted first.</p> <p>MSB specifies that the most significant byte will be transmitted first.</p>
Examples	<p>WFMOUTPRE:BYT_OR MSB sets the most significant outgoing byte of waveform data to be transmitted first.</p> <p>WFMOUTPRE:BYT_OR? might return :WFMOUTPRE:BYT_OR LSB indicating that the least significant data byte will be transmitted first.</p>

WFMOutpre:ENCdg

Sets and queries the type of encoding for outgoing waveforms.

Group	Waveform Transfer
Syntax	<p>WFMOutpre:ENCdg {ASCIi BINary}</p> <p>WFMOutpre:ENCdg?</p>
Related Commands	DATA:ENCdg , WFMOutpre:BYT_Nr , WFMOutpre:BYT_Or , WFMOutpre:BIT_Nr , WFMOutpre:BN_Fmt
Arguments	<p>ASCIi specifies that the outgoing data is to be in ASCII format. Waveforms will be sent as <NR1> numbers.</p> <p>BINary specifies that outgoing data is to be in a binary format whose further specification is determined by WFMOutpre:BYT_Nr, WFMOutpre:BIT_Nr, WFMOutpre:BN_Fmt and WFMOutpre:BYT_Or.</p>
Examples	<p>WFMOUTPRE:ENCDG? might return :WFMOUTPRE:ENCDG BIN indicating that outgoing waveform data will be sent in binary format.</p> <p>WFMOUTPRE:ENCDG ASC specifies that the outgoing waveform data will be sent in ASCII format.</p>

WFMOutpre:FRACTIONal? (Query Only)

The set form of this command is ignored. The query form always returns a 0, if the waveform specified by DATA:SOURCE is on or displayed. If the waveform

is not displayed, the query form generates an error and returns event code 2244. This command is for compatibility with other Tektronix oscilloscopes.

Group	Waveform Transfer
Syntax	WFMOutpre:FRACTIONal?
Related Commands	DATA:SOURce
Arguments	Arguments are ignored.

WFMOutpre:NR_Pt? (Query Only)

Returns the number of points for the [DATA:SOURce](#) waveform that will be transmitted in response to a [CURVe?](#) query. The query command will time out and an error will be generated if the waveform specified by [DATA:SOURce](#) is not turned on.

Group	Waveform Transfer
Syntax	WFMOutpre:NR_Pt?
Related Commands	CURVe , DATA , DATA:START , DATA:STOP , SAVe:WAVEform , SAVe:WAVEform:FILEFormat , WFMinpre:NR_Pt
Examples	WFMOUTPRE:NR_PT? might return :WFMOUTPRE:NR_PT 10000 indicating that there are 10000 data points to be sent.

WFMOutpre:PT_Fmt? (Query Only)

Returns the point format for the outgoing waveform specified by the [DATA:SOURce](#) command. Returned values are either ENV, which indicates envelope mode format in which the data is returned as a series of min/max pairs, or Y, which indicates normal waveform points. The query command will time out and an error will be generated if the waveform specified by [DATA:SOURce](#) is not turned on.

Group	Waveform Transfer
--------------	-------------------

Syntax `WFMOutpre:PT_Fmt?`

Related Commands [CURVe](#), [DATa:SOUrce](#)

Examples `WFMOUTPRE:PT_FMT?` might return `:WFMOutpre:PT_Fmt ENV` indicating that the waveform data is a series of min-max pairs.

WFMOutpre:PT_Off? (Query Only)

The set form of this command is ignored. The query form always returns a 0, if the waveform specified by `DATa:SOUrce` is on or displayed. If the waveform is not displayed, the query form generates an error and returns event code 2244. This command is for compatibility with other Tektronix oscilloscopes.

Group Waveform Transfer

Syntax `WFMOutpre:PT_Off?`

Related Commands [DATa:SOUrce](#)

Arguments Arguments are ignored.

Examples `WFMOUTPRE:PT_OFF?` might return `WFMOUTPRE:PT_OFF 0` indicating that the waveform specified by `DATa:SOURCE` is on or displayed.

WFMOutpre:PT_ORder? (Query Only)

This query is for compatibility with other Tektronix oscilloscopes and always returns `LINEAR`.

Group Waveform Transfer

Syntax `WFMOutpre:PT_Order?`

Related Commands [DATa:SOUrce](#)

Examples `WFMOUTPRE:PT_ORDER?` returns `:WFMOUTPRE:PT_ORDER LINEAR`.

WFMOutpre:WFId? (Query Only)

Returns a string describing several aspects of the acquisition parameters for the waveform specified by the [DATA:SOURce](#) command. The query command will time out and an error will be generated if the waveform specified by [DATA:SOURce](#) is not turned on.

Group Waveform Transfer

Syntax WFMOutpre:WFId?

Related Commands [DATA:SOURce](#)

Returns <QString> comprises the following comma-separated fields documented in the tables below:

Table 2-45: Waveform Suffixes

Field	Description	Examples
Source	The source identification string as it appears in the front-panel scale factor readouts.	"CH1-4" "Math1" "Ref1-4"
Coupling	A string describing the vertical coupling of the waveform (the Source1 waveform in the case of Dual Waveform Math).	"AC coupling" "DC coupling" "GND coupling"
Vert Scale	A string containing the vertical scale factor of the unzoomed waveform. The numeric portion will always be four digits. The examples cover all known internal units.	"100.0 mV/div" "20.00 dB/div" "45.00 deg/div" "785.4 mrad/div" "500.0 μ Vs/div" "10.00 kV/s/div" "200.0 mV/div" "50.00 unk/div"
Horiz Scale	A string containing the horizontal scale factor of the unzoomed waveform. The numeric portion will always be four digits. The examples cover all known internal units.	"100 ms/div" "10.00 kHz/div"
Record Length	A string containing the number of waveform points available in the entire record. The numeric portion is given as an integer.	"1000 points" "1000000 points"
Acquisition Mode	A string describing the mode used to acquire the waveform.	"Sample mode" "Pk Detect mode" "Envelope mode" "Average mode"

Examples WFMOUTPRE:WFID? might return :WFMOUTPRE:WFID "Ch1, DC coupling,100.0mVolts/div,500.0µs/div, 1000 points, sample mode"

WFMOutpre:XINcr? (Query Only)

Returns the horizontal point spacing in units of WFMOutpre:XUNit for the waveform specified by the [DATA:SOURce](#) command. This value corresponds to the sampling interval. The query command will time out and an error will be generated if the waveform specified by [DATA:SOURce](#) is not turned on.

Group Waveform Transfer

Syntax WFMOutpre:XINcr?

Related Commands [DATA:SOURce](#), [WFMOutpre:XUNit?](#)

Examples WFMOUTPRE:XINCR? might return :WFMOUTPRE:XINCR 10.0000E-6 indicating that the horizontal sampling interval is 10 µs/point.

WFMOutpre:XUNit? (Query Only)

Returns the horizontal units for the waveform specified by the [DATA:SOURce](#) command. The query command will time out and an error will be generated if the waveform specified by [DATA:SOURce](#) is not turned on.

Group Waveform Transfer

Syntax WFMOutpre:XUNit?

Related Commands [DATA:SOURce](#)

Examples WFMOUTPRE:XUNIT? might return :WFMOUTPRE:XUNIT "HZ" indicating that the horizontal units for the waveform are in Hertz.

WFMOutpre:XZZero? (Query Only)

Returns the time coordinate of the first point in the outgoing waveform.

This value is in units of [WFMOutpre:XUNit?](#). The query command will time out and an error will be generated if the waveform specified by [DATA:SOURce](#) is not turned on.

Group Waveform Transfer

Syntax WFMOutpre:XZErO?

Related Commands [DATA:SOURce](#), [WFMOutpre:XUNit?](#)

Examples WFMOUTPRE:XZERO? might return :WFMOUTPRE:XZERO 5.6300E-9 indicating that the trigger occurred 5.63 ns before the first sample in the waveform record.

WFMOutpre:YMUlt? (Query Only)

Returns the vertical scale factor per digitizing level in units specified by WFMOutpre:YUNit for the waveform specified by the [DATA:SOURce](#) command. The query command will time out and an error is generated if the waveform specified by [DATA:SOURce](#) is not turned on.

See the description of [WFMinpre:YMUlt](#) to see how this scale factor is used to convert waveform sample values to volts.

Group Waveform Transfer

Syntax WFMOutpre:YMUlt?

Related Commands [DATA:SOURce](#), [WFMinpre:YMUlt](#)

Examples WFMOUTPRE:YMULT? might return :WFMOUTPRE:YMULT 4.0000E-3 indicating that the vertical scale for the corresponding waveform is 100 mV/div (for 8-bit waveform data).

WFMOutpre:YOff? (Query Only)

Returns the vertical position in digitizing levels for the waveform specified by the [DATA:SOURce](#) command. The query command will time out and an error will be generated if the waveform specified by [DATA:SOURce](#) is not turned on.

See the description of [WFMinpre:YOff](#) to see how this position is used to convert waveform sample values to volts.

Group Waveform Transfer

Syntax WFMOutpre:YOff?

Related Commands [DATA:SOURce](#), [WFMOutpre:BYT_Nr](#)

Examples WFMOUTPRE:YOFF? might return :WFMOUTPRE:YOFF -50.0000E+0 indicating that the position indicator for the waveform was 50 digitizing levels (2 divisions) below center screen (for 8-bit waveform data).

WFMOutpre:YUNit? (Query Only)

Returns the vertical units for the waveform specified by the [DATA:SOURce](#) command. The query command will time out and an error will be generated if the waveform specified by [DATA:SOURce](#) is not turned on.

Group Waveform Transfer

Syntax WFMOutpre:YUNit?

Related Commands [DATA:SOURce](#)

Examples WFMOUTPRE:YUNIT? might return :WFMOUTPRE:YUNIT "dB" indicating that the vertical units for the waveform are measured in decibels.

WFMOutpre:YZero? (Query Only)

Returns the vertical offset in units specified by [WFMOutpre:YUNit?](#) for the waveform specified by the [DATA:SOURce](#) command. The query command will time out and an error will be generated if the waveform specified by [DATA:SOURce](#) is not turned on.

See the description of [WFMinpre:YZero](#) to see how this offset is used to convert waveform sample values to volts.

Group Waveform Transfer

Syntax `WFMOutpre:YZero?`

Related Commands [DATa:SOUrce](#), [WFMOutpre:YUNit?](#)

Examples `WFMOUTPRE:YZERO?` might return `:WFMOUTPRE:YZERO -100.0000E-3` indicating that vertical offset is set to -100 mV.

ZOOM? (Query Only)

Returns the current vertical and horizontal positioning and scaling of the display.

Group Zoom

Syntax `ZOOM?`

Examples `ZOOM?` might return `:ZOOM:MODE 1;GRATICULE:SIZE 80;SPLIT EIGHTYTWENTY;:ZOOM:ZOOM1:STATE 1;SCALE 400. 0000E-12;POSITION 46.8986;FACTOR 50.0000E+3;HORIZONTAL:POSITION 46.8986;SCALE 40 0.0000E-12`

ZOOM:MODE

Turns Zoom mode on or off. The Zoom query returns the current state of Zoom mode. This command is equivalent to pressing the zoom button located on the front panel.

Group Zoom

Syntax `ZOOM:MODE {ON|OFF|<NR1>}`
`ZOOM:MODE`

Arguments `ON` turns on Zoom mode.
`OFF` turns off Zoom mode.
`<NR1> = 0` turns off Zoom mode; any other value turns on Zoom mode.

Examples `ZOOM:MODE OFF` turns off Zoom mode.

`ZOOM:MODE?` might return `:ZOOM:MODE 1` indicating that Zoom mode is currently turned on.

ZOOM:ZOOM<x>? (Query Only)

Returns the current vertical and horizontal positioning and scaling of the display. <x> can only be 1.

Group Zoom

Syntax `ZOOM:ZOOM<x>?`

Examples `ZOOM:ZOOM1?` might return `:ZOOM:ZOOM1:STATE 1;SCALE 400.0000E-12;POSITION 46.8986;FACTOR 50.0000E+3;HORIZONTAL:POSITION 46.8986;SCALE 400.0000E-12.`

ZOOM:ZOOM<x>:FACTor? (Query Only)

Returns the zoom factor of a particular zoom box. <x> can only be 1.

Group Zoom

Syntax `ZOOM:ZOOM<x>:FACTor?`

Returns <NR1> is the zoom factor of a zoom box.

ZOOM:ZOOM<x>:POSition

Sets the horizontal position of the zoom box, in terms of 0 to 100.0% of upper window. <x> can only be 1.

Group Zoom

Syntax `ZOOM:ZOOM<x>:POSition <NR3>`
`ZOOM:ZOOM<x>:POSition?`

Arguments <NR3> is the horizontal position as a percent of the upper window.

ZOOM:ZOOM<x>:SCALE

Sets or returns the horizontal scale of the zoom box. <x> can only be 1.

Group Zoom

Syntax ZOOM:ZOOM<x>:SCALE <NR3>
ZOOM:ZOOM<x>:SCALE?

Arguments <NR3> is the horizontal scale of the zoom box.

ZOOM:ZOOM<x>:STATE

Sets or returns the specified zoom on or off, where x is the integer 1 representing the single zoom window. <x> can only be 1.

Group Zoom

Syntax ZOOM:ZOOM<x>:STATE {ON|OFF|<NR1>}
ZOOM:ZOOM<x>:STATE?

Arguments ON turns Zoom 1 on.
OFF turns Zoom 1 off.
<NR1> = 0 disables the specified zoom; any other value enables the specified zoom.

Examples ZOOM:ZOOM1:STATE ON turns Zoom1 on.
ZOOM:ZOOM1:STATE? might return :ZOOM:ZOOM1:STATE 1 indicating that Zoom1 is on.

Status and Events

The oscilloscope provides a status and event reporting system for the Ethernet, GPIB (with the TEK-USB-488 Adapter), and USB interfaces. This system informs you of certain significant events that occur within the oscilloscope.

The oscilloscope status handling system consists of five 8-bit registers and two queues for each interface. The remaining Status subtopics describe these registers and components. They also explain how the event handling system operates.

Registers

- Overview** The registers in the event handling system fall into two functional groups:
- Status Registers contain information about the status of the oscilloscope. They include the Standard Event Status Register (SESR).
 - Enable Registers determine whether selected types of events are reported to the Status Registers and the Event Queue. They include the Device Event Status Enable Register (DESER), the Event Status Enable Register (ESER), and the Service Request Enable Register (SRER).

Status Registers The Standard Event Status Register (SESR) and the Status Byte Register (SBR) record certain types of events that may occur while the oscilloscope is in use. IEEE Std 488.2-1987 defines these registers.

Each bit in a Status Register records a particular type of event, such as an execution error or message available. When an event of a given type occurs, the oscilloscope sets the bit that represents that type of event to a value of one. (You can disable bits so that they ignore events and remain at zero. See Enable Registers). Reading the status registers tells you what types of events have occurred.

The Standard Event Status Register (SESR). The SESR records eight types of events that can occur within the oscilloscope. Use the *ESR? query to read the SESR register. Reading the register clears the bits of the register so that the register can accumulate information about new events.

NOTE. TekVISA applications use SESR bit 6 to respond to any of several events, including some front panel actions.

7	6	5	4	3	2	1	0
PON	URQ	CME	EXE	DDE	QYE	RQC	OPC

Figure 3-1: The Standard Event Status Register (SESR)

Table 3-1: SESR Bit Functions

Bit	Function	
7 (MSB)	PON	Power On. Shows that the oscilloscope was powered on. On completion, the diagnostic self tests also set this bit.
6	URQ	User Request. Indicates that an application event has occurred. *See note.
5	CME	Command Error. Shows that an error occurred while the oscilloscope was parsing a command or query.
4	EXE	Execution Error. Shows that an error executing a command or query.
3	DDE	Device Error. Shows that a device error occurred.
2	QYE	Query Error. Either an attempt was made to read the Output Queue when no data was present or pending, or that data in the Output Queue was lost.
1	RQC	Request Control. This is not used.
0 (LSB)	OPC	operation Complete. Shows that the operation is complete. This bit is set when all pending operations complete following an *OPC command.

The Status Byte Register (SBR). Records whether output is available in the Output Queue, whether the oscilloscope requests service, and whether the SESR has recorded any events.

Use a Serial Poll or the *STB? query to read the contents of the SBR. The bits in the SBR are set and cleared depending on the contents of the SESR, the Event Status Enable Register (ESER), and the Output Queue. When you use a Serial Poll to obtain the SBR, bit 6 is the RQS bit. When you use the *STB? query to obtain the SBR, bit 6 is the MSS bit. Reading the SBR does not clear the bits.

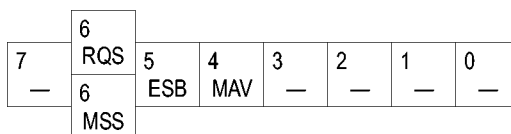


Figure 3-2: The Status Byte Register (SBR)

Table 3-2: SBR Bit Functions

Bit	Function	
7 (MSB)	——	Not used.
6	RQS	Request Service. Obtained from a serial poll. Shows that the oscilloscope requests service from the GPIB controller.
6	MSS	Master Status Summary. Obtained from *STB? query. Summarizes the ESB and MAV bits in the SBR.
5	ESB	Event Status Bit. Shows that status is enabled and present in the SESR.

Table 3-2: SBR Bit Functions (cont.)

Bit	Function
4	MAV Message Available. Shows that output is available in the Output Queue.
3	——— Not used.
2	——— Not used.
1–0	——— Not used.

Enable Registers

DESER, ESER, and SRER allow you to select which events are reported to the Status Registers and the Event Queue. Each Enable Register acts as a filter to a Status Register (the DESER also acts as a filter to the Event Queue) and can prevent information from being recorded in the register or queue.

Each bit in an Enable Register corresponds to a bit in the Status Register it controls. In order for an event to be reported to a bit in the Status Register, the corresponding bit in the Enable Register must be set to one. If the bit in the Enable Register is set to zero, the event is not recorded.

Various commands set the bits in the Enable Registers. The Enable Registers and the commands used to set them are described below.

The Device Event Status Enable Register (DESER). This register controls which types of events are reported to the SESR and the Event Queue. The bits in the DESER correspond to those in the SESR.

Use the DESE command to enable and disable the bits in the DESER. Use the DESE? query to read the DESER.

7	6	5	4	3	2	1	0
PON	URQ	CME	EXE	DDE	QYE	RQC	OPC

Figure 3-3: The Device Event Status Enable Register (DESER)

The Event Status Enable Register (ESER). This register controls which types of events are summarized by the Event Status Bit (ESB) in the SBR. Use the *ESE command to set the bits in the ESER. Use the *ESE? query to read it.

7	6	5	4	3	2	1	0
PON	URQ	CME	EXE	DDE	QYE	RQC	OPC

Figure 3-4: The Event Status Enable Register (ESER)

The Service Request Enable Register (SRER). This register controls which bits in the SBR generate a Service Request and are summarized by the Master Status Summary (MSS) bit.

Use the *SRE command to set the SRER. Use the *SRE? query to read the register. The RQS bit remains set to one until either the Status Byte Register is read with a Serial Poll or the MSS bit changes back to a zero.

7	6	5	4	3	2	1	0
—	—	ESB	MAV	—	—	—	—

Figure 3-5: The Service Request Enable Register (SRER)

*PSC Command

The *PSC command controls the Enable Registers contents at power-on. Sending *PSC 1 sets the Enable Registers at power on as follows:

- DESER 255 (equivalent to a DESe 255 command)
- ESER 0 (equivalent to an *ESE 0 command)
- SRER 0 (equivalent to an *SRE 0 command)

Sending *PSC 0 lets the Enable Registers maintain their values in nonvolatile memory through a power cycle.

NOTE. To enable the PON (Power On) event to generate a Service Request, send *PSC 0, use the DESe and *ESE commands to enable PON in the DESER and ESER, and use the *SRE command to enable bit 5 in the SRER. Subsequent power-on cycles will generate a Service Request.

Queues

The *PSC command controls the Enable Registers contents at power-on. Sending *PSC 1 sets the Enable Registers at power on as follows:

Output Queue

The oscilloscope stores query responses in the Output Queue and empties this queue each time it receives a new command or query message after an <EOM>. The controller must read a query response before it sends the next command (or query) or it will lose responses to earlier queries.



CAUTION. When a controller sends a query, an <EOM>, and a second query, the oscilloscope normally clears the first response and outputs the second while reporting a Query Error (QYE bit in the ESER) to indicate the lost response. A fast controller, however, may receive a part or all of the first response as well. To avoid this situation, the controller should always read the response immediately after sending any terminated query message or send a DCL (Device Clear) before sending the second query.

Event Queue

The Event Queue stores detailed information on up to 33 events. If than 32 events stack up in the Event Queue, the 32nd event is replaced by event code 350, "Queue Overflow."

Read the Event Queue with the EVENT? query (which returns only the event number), with the EVMSG? query (which returns the event number and a text description of the event), or with the ALLEV? query (which returns all the event numbers along with a description of the event). Reading an event removes it from the queue.

Before reading an event from the Event Queue, you must use the *ESR? query to read the summary of the event from the SESR. This makes the events summarized by the *ESR? read available to the EVENT? and EVMSG? queries, and empties the SESR.

Reading the SESR erases any events that were summarized by previous *ESR? reads but not read from the Event Queue. Events that follow an *ESR? read are put in the Event Queue but are not available until *ESR? is used again.

Event Handling Sequence

The figure below shows how to use the status and event handling system. In the explanation that follows, numbers in parentheses refer to numbers in the figure.

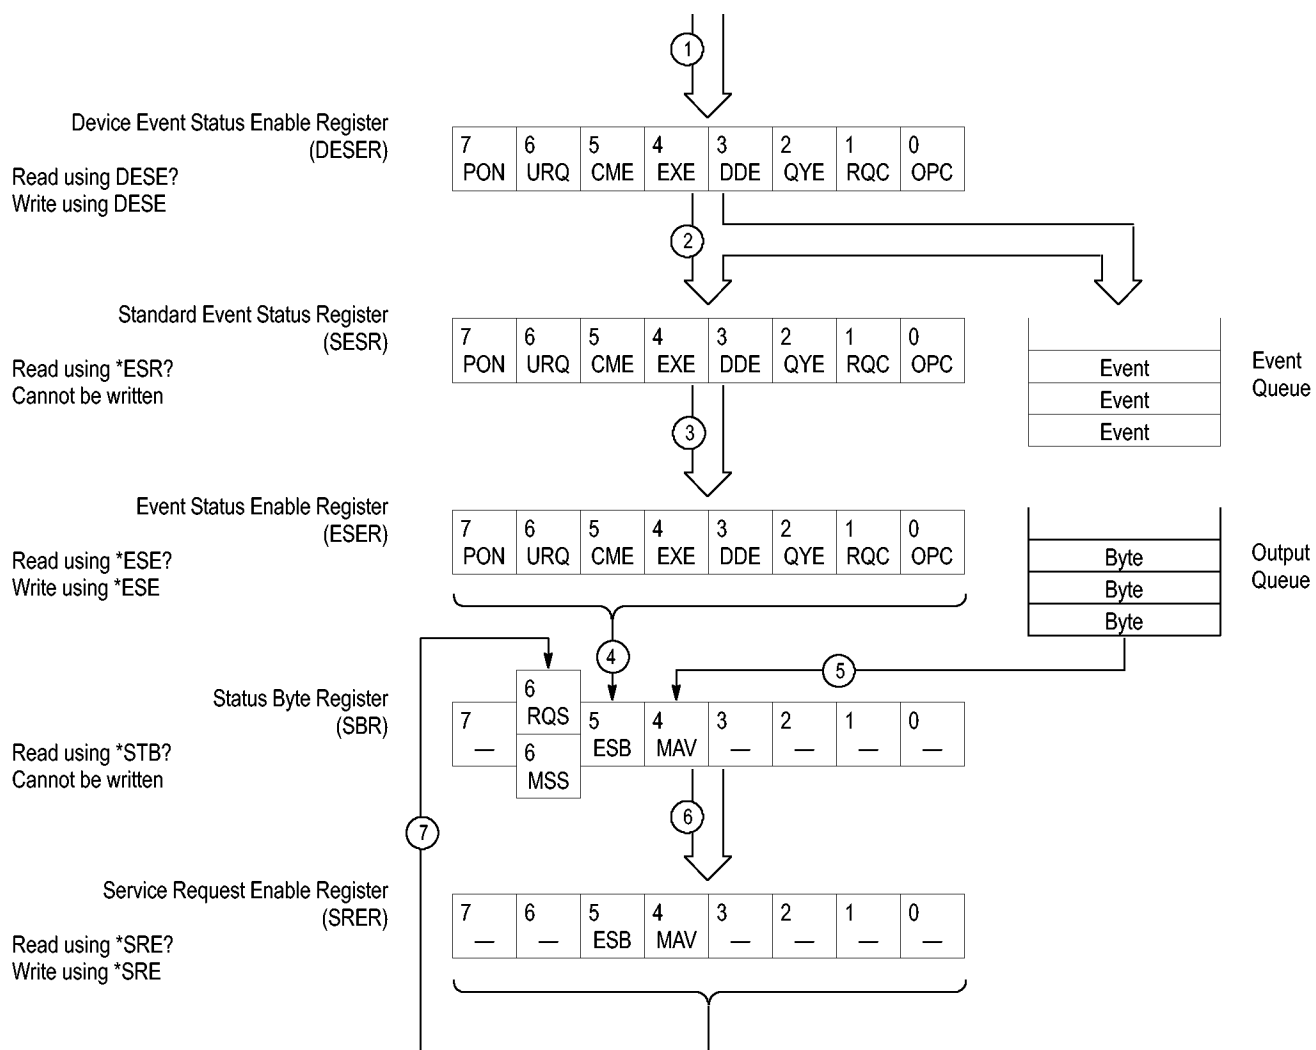


Figure 3-6: Status and Event Handling Process

When an event occurs, a signal is sent to the DESER (1). If that type of event is enabled in the DESER (that is, if the bit for that event type is set to 1), the appropriate bit in the SESR is set to one, and the event is recorded in the Event Queue (2). If the corresponding bit in the ESER is also enabled (3), then the ESB bit in the SBR is set to one (4).

When output is sent to the Output Queue, the MAV bit in the SBR is set to one (5).

When a bit in the SBR is set to one and the corresponding bit in the SRER is enabled (6), the MSS bit in the SBR is set to one and a service request is generated (7).

Synchronization Methods

Overview

Although most commands are completed almost immediately after being received by the oscilloscope, some commands start a process that requires time. For example, once a single sequence acquisition command is executed, depending upon the applied signals and trigger settings, it may take an extended period of time before the acquisition is complete. Rather than remain idle while the operation is in process, the oscilloscope will continue processing other commands. This means that some operations will not be completed in the order that they were sent.

Sometimes the result of an operation depends on the result of an earlier operation. A first operation must complete before the next one is processed. The oscilloscope status and event reporting system is designed to accommodate this process.

The Operation Complete (OPC) bit of the Standard Event Status Register (SESR) can be programmed to indicate when certain oscilloscope operations have completed and, by setting the Event Status Enable Register (ESER) to report OPC in the Event Status Bit (ESB) of the Status Byte Register (SBR) and setting the Service Request Enable Register (SRER) to generate service request upon a positive transition of the ESB, a service request (SRQ) interrupt can be generated when certain operations complete as described in this section.

The following oscilloscope operations can generate an OPC:

Table 3-3: Oscilloscope operations that can generate OPC

Command	Conditions
ACQuire:STATE <non-zero NR1> ON	Only when in single sequence acquisition mode
CALibrate:FACTory START	
CALibrate:FACTory CONTInue	
CALibrate:FACTory PREVious	
CH<x>:PRObe:DEGAUss EXECute	
AUXin:PRObe:DEGAUss EXECute	
DIAG:STATE EXECute	
FACTory	
HARDCopy	
HARDCopy START	
RECALL:SETUp <file as quoted string>	
RECALL:WAVEform <file as quoted string>	
*RST	
SAVe:IMAGe <file as quoted string>	
SAVe:SETUp <file as quoted string>	
SAVe:WAVEform <file as quoted string>	

Table 3-3: Oscilloscope operations that can generate OPC (cont.)

Command	Conditions
SAVe:WAVEform REF1 REF2 REF3 REF4	
TEKSecure	

For example, a typical application might involve acquiring a single-sequence waveform and then taking a measurement on the acquired waveform. You could use the following command sequence to do this:

```
/** Set up conditional acquisition **/  
ACQUIRE:STATE OFF  
SELECT:CH1 ON  
HORIZONTAL:RECORDLENGTH 1000  
ACQUIRE:MODE SAMPLE  
ACQUIRE:STOPAFTER SEQUENCE  
/** Acquire waveform data **/  
ACQUIRE:STATE ON  
/** Set up the measurement parameters **/  
MEASUREMENT:IMMED:TYPE AMPLITUDE  
MEASUREMENT:IMMED:SOURCE CH1  
/** Take amplitude measurement **/  
MEASUREMENT:MEAS1:VALUE?
```

The acquisition of the waveform requires extended processing time. It may not finish before the oscilloscope takes an amplitude measurement (see the following figure). This can result in an incorrect amplitude value.

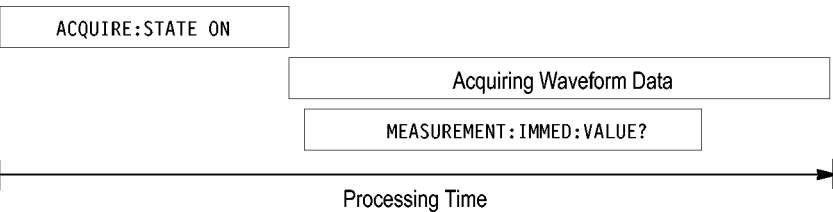


Figure 3-7: Command Processing Without Using Synchronization

To ensure the oscilloscope completes waveform acquisition before taking the measurement on the acquired data, you can synchronize the program.

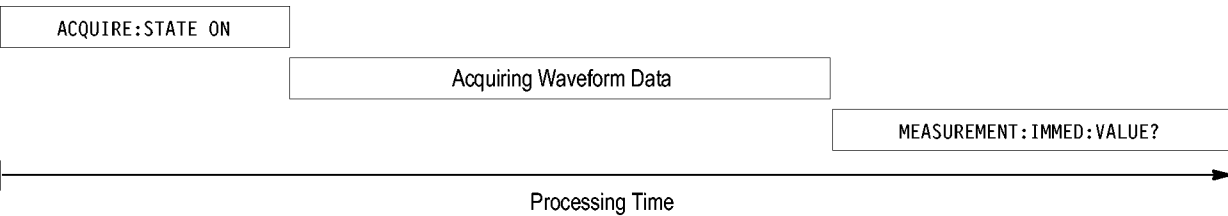


Figure 3-8: Processing Sequence With Synchronization

You can use four commands to synchronize the operation of the oscilloscope with your application program: *WAI, BUSY, *OPC, and *OPC?

Using the *WAI Command

The *WAI command forces completion of previous commands that generate an OPC message. No commands after the *WAI are processed before the OPC message(s) are generated

The same command sequence using the *WAI command for synchronization looks like this:

```
/* Set up conditional acquisition */
ACQUIRE:STATE OFF
SELECT:CH1 ON
HORIZONTAL:RECORDLENGTH 1000
ACQUIRE:MODE SAMPLE
ACQUIRE:STOPAFTER SEQUENCE
/* Acquire waveform data */
ACQUIRE:STATE ON
/* Set up the measurement parameters */
MEASUREMENT:IMMED:TYPE AMPLITUDE
MEASUREMENT:IMMED:SOURCE CH1
/* wait until the acquisition is complete before taking
the measurement*/
*/
*WAI
/* Take amplitude measurement */
MEASUREMENT:IMMED:VALUE?
```

The controller can continue to write commands to the input buffer of the oscilloscope, but the commands will not be processed by the oscilloscope until all in-process OPC operations are complete. If the input buffer becomes full, the controller will be unable to write commands to the buffer. This can cause a time-out.

Using the BUSY Query

The BUSY? query allows you to find out whether the oscilloscope is busy processing a command that has an extended processing time such as single-sequence acquisition.

The same command sequence, using the BUSY? query for synchronization, looks like this:

```
/* Set up conditional acquisition */
ACQUIRE:STATE OFF
SELECT:CH1 ON
HORIZONTAL:RECORDLENGTH 1000
ACQUIRE:MODE SAMPLE
ACQUIRE:STOPAFTER SEQUENCE
/* Acquire waveform data */
```

```
ACQUIRE:STATE ON
/* Set up the measurement parameters */
MEASUREMENT:IMMED:TYPE AMPLITUDE
MEASUREMENT:IMMED:SOURCE CH1
/* wait until the acquisition is complete before taking
the measurement */
while BUSY? keep looping
/* Take amplitude measurement */
MEASUREMENT:IMMED:VALUE?
```

This sequence lets you create your own wait loop rather than using the *WAI command. The BUSY? query helps you avoid time-outs caused by writing too many commands to the input buffer. The controller is still tied up though, and the repeated BUSY? query will result in bus traffic.

Using the *OPC Command

If the corresponding status registers are enabled, the *OPC command sets the OPC bit in the Standard Event Status Register (SESR) when an operation is complete. You achieve synchronization by using this command with either a serial poll or service request handler.

Serial Poll Method: Enable the OPC bit in the Device Event Status Enable Register (DESER) and the Event Status Enable Register (ESER) using the DESE and *ESE commands.

When the operation is complete, the OPC bit in the Standard Event Status Register (SESR) will be enabled and the Event Status Bit (ESB) in the Status Byte Register will be enabled.

The same command sequence using the *OPC command for synchronization with serial polling looks like this:

```
/* Set up conditional acquisition */
ACQUIRE:STATE OFF
SELECT:CH1 ON
HORIZONTAL:RECORDLENGTH 1000
ACQUIRE:MODE SAMPLE
ACQUIRE:STOPAFTER SEQUENCE
/* Enable the status registers */
DESE 1
*ESE 1
*SRE 0
/* Acquire waveform data */
ACQUIRE:STATE ON
/* Set up the measurement parameters */
MEASUREMENT:IMMED:TYPE AMPLITUDE
MEASUREMENT:IMMED:SOURCE CH1
/* wait until the acquisition is complete before taking the
measurement.*/
*OPC
```

```
while serial poll = 0, keep looping
/* Take amplitude measurement */
MEASUREMENT:IMMED:VALUE?
```

This technique requires less bus traffic than did looping on BUSY.

Service Request Method: Enable the OPC bit in the Device Event Status Enable Register (DESER) and the Event Status Enable Register (ESER) using the DESE and *ESE commands.

You can also enable service requests by setting the ESB bit in the Service Request Enable Register (SRER) using the *SRE command. When the operation is complete, the oscilloscope will generate a Service Request.

The same command sequence using the *OPC command for synchronization looks like this

```
/* Set up conditional acquisition */
ACQUIRE:STATE OFF
SELECT:CH1 ON
HORIZONTAL:RECORDLENGTH 1000
ACQUIRE:MODE SAMPLE
ACQUIRE:STOPAFTER SEQUENCE
/* Enable the status registers */
DESE 1
*ESE 1
*SRE 32
/* Acquire waveform data */
ACQUIRE:STATE ON
/* Set up the measurement parameters */
MEASUREMENT:IMMED:TYPE AMPLITUDE
MEASUREMENT:IMMED:SOURCE CH1
/* wait until the acquisition is complete before taking the
measurement*/
*OPC
```

The program can now do different tasks such as talk to other devices. The SRQ, when it comes, interrupts those tasks and returns control to this task.

```
/* Take amplitude measurement */
MEASUREMENT:IMMED:VALUE?
```

Using the *OPC? Query

The *OPC? query places a 1 in the Output Queue once an operation that generates an OPC message is complete. The *OPC? query does not return until all pending OPC operations have completed. Therefore, your time-out must be set to a time at least as long as the longest expected time for the operations to complete.

The same command sequence using the *OPC? query for synchronization looks like this:

```
/* Set up single sequence acquisition */
```

```
ACQUIRE:STATE OFF
SELECT:CH1 ON
HORIZONTAL:RECORDLENGTH 1000
ACQUIRE:MODE SAMPLE
ACQUIRE:STOPAFTER SEQUENCE
/* Acquire waveform data */
ACQUIRE:STATE ON
/* Set up the measurement parameters */
MEASUREMENT:IMMED:TYPE AMPLITUDE
MEASUREMENT:IMMED:SOURCE CH1
/* wait until the acquisition is complete before taking the
measurement*/
*OPC?

Wait for read from Output Queue.
/* Take amplitude measurement */
MEASUREMENT:IMMED:VALUE?
```

This is the simplest approach. It requires no status handling or loops. However, you must set the controller time-out for longer than the acquisition operation.

Messages

The information contained in the topic tabs above covers all the programming interface messages the oscilloscope generates in response to commands and queries.

For most messages, a secondary message from the oscilloscope gives detail about the cause of the error or the meaning of the message. This message is part of the message string and is separated from the main message by a semicolon.

Each message is the result of an event. Each type of event sets a specific bit in the SESR and is controlled by the equivalent bit in the DESER. Thus, each message is associated with a specific SESR bit. In the message tables, the associated SESR bit is specified in the table title, with exceptions noted with the error message text.

No Event

The following table shows the messages when the system has no events or status to report. These have no associated SESR bit.

Table 3-4: No Event Messages

Code	Message
0	No events to report; queue empty
1	No events to report; new events pending *ESR?

Command Error

The following table shows the command error messages generated by improper syntax. Check that the command is properly formed and that it follows the rules in the section on command Syntax.

Table 3-5: Command Error Messages (CME Bit 5)

Code	Message
100	Command error
101	Invalid character
102	Syntax error
103	Invalid separator
104	Data type error
105	GET not allowed
108	Parameter not allowed
109	Missing parameter
110	Command header error
112	Program mnemonic too long
113	Undefined header
120	Numeric data error
121	Invalid character in numeric
123	Exponent too large
124	Too many digits
130	Suffix error
131	Invalid suffix
134	Suffix too long
140	Character data error
141	Invalid character data
144	Character data too long
150	String data error
151	Invalid string data
152	String data too long
160	Block data error
161	Invalid block data
170	Command expression error
171	Invalid expression

Execution Error

The following table lists the execution errors that are detected during execution of a command.

Table 3-6: Execution Error Messages (EXE Bit 4)

Code	Message
200	Execution error
221	Settings conflict
222	Data out of range

Table 3-6: Execution Error Messages (EXE Bit 4) (cont.)

Code	Message
224	Illegal parameter value
241	Hardware missing
250	Mass storage error
251	Missing mass storage
252	Missing media
253	Corrupt media
254	Media full
255	Directory full
256	File name not found
257	File name error
258	Media protected
259	File name too long
270	Hardcopy error
271	Hardcopy device not responding
272	Hardcopy is busy
273	Hardcopy aborted
274	Hardcopy configuration error
280	Program error
282	Insufficient network printer information
283	Network printer not responding
284	Network printer server not responding
286	Program runtime error
287	Print server not found
2200	Measurement error, Measurement system error
2201	Measurement error, Zero period
2202	Measurement error, No period, second waveform
2203	Measurement error, No period, second waveform
2204	Measurement error, Low amplitude, second waveform
2205	Measurement error, Low amplitude, second waveform
2206	Measurement error, Invalid gate
2207	Measurement error, Measurement overflow
2208	Measurement error, No backwards Mid Ref crossing
2209	Measurement error, No second Mid Ref crossing
2210	Measurement error, No Mid Ref crossing, second waveform
2211	Measurement error, No backwards Mid Ref crossing
2212	Measurement error, No negative crossing
2213	Measurement error, No positive crossing

Table 3-6: Execution Error Messages (EXE Bit 4) (cont.)

Code	Message
2214	Measurement error, No crossing, target waveform
2215	Measurement error, No crossing, second waveform
2216	Measurement error, No crossing, target waveform
2217	Measurement error, Constant waveform
2219	Measurement error, No valid edge - No arm sample
2220	Measurement error, No valid edge - No arm cross
2221	Measurement error, No valid edge - No trigger cross
2222	Measurement error, No valid edge - No second cross
2223	Measurement error, Waveform mismatch
2224	Measurement error, WAIT calculating
2225	Measurement error, No waveform to measure
2226	Measurement error, Null Waveform
2227	Measurement error, Positive and Negative Clipping
2228	Measurement error, Positive Clipping
2229	Measurement error, Negative Clipping
2230	Measurement error, High Ref < Low Ref
2231	Measurement error, No statistics available
2233	Requested waveform is temporarily unavailable
2235	Math error, invalid math description
2240	Invalid password
2241	Waveform requested is invalid
2244	Source waveform is not active
2245	Saveref error, selected channel is turned off
2250	Reference error, the reference waveform file is invalid
2253	Reference error, too many points received
2254	Reference error, too few points received
2259	File too big
2270	Alias error
2271	Alias syntax error
2273	Illegal alias label
2276	Alias expansion error
2277	Alias redefinition not allowed
2278	Alias header not found
2285	TekSecure(R) Pass
2286	TekSecure(R) Fail
2500	Setup error, file does not look like a setup file
2501	Setup warning, could not recall all values from external setup

Table 3-6: Execution Error Messages (EXE Bit 4) (cont.)

Code	Message
2620	Mask error, too few points received
2760	Mark limit reached
2761	No mark present
2762	Search copy failed

Device Error The following table lists the device errors that can occur during oscilloscope operation. These errors may indicate that the oscilloscope needs repair.

Table 3-7: Device Error Messages (DDE Bit 3)

Code	Message
310	System error
311	Memory error
312	PUD memory lost
314	Save/recall memory lost

System Event The following table lists the system event messages. These messages are generated whenever certain system conditions occur.

Table 3-8: System Event Messages

Code	Message
400	Query event
401	Power on (PON bit 7 set)
402	Operation complete (OPC bit 0 set)
403	User request (URQ bit 6 set)
404	Power fail (DDE bit 3 set)
405	Request control
410	Query INTERRUPTED (QYE bit 2 set)
420	Query UNTERMINATED (QYE bit 2 set)
430	Query DEADLOCKED (QYE bit 2 set)
440	Query UNTERMINATED after indefinite response (QYE bit 2 set)
468	Knob/Keypad value changed
472	Application variable changed

Execution Warning The following table lists warning messages that do not interrupt the flow of command execution. They also notify you of a possible unexpected results.

Table 3-9: Execution Warning Messages (EXE Bit 4)

Code	Message
528	Parameter out of range
532	Curve data too long, Curve truncated
533	Curve error, Preamble values are inconsistent
540	Measurement warning, Uncertain edge
541	Measurement warning, Low signal amplitude
542	Measurement warning, Unstable histogram
543	Measurement warning, Low resolution
544	Measurement warning, Uncertain edge
545	Measurement warning, Invalid in minmax
546	Measurement warning, Need 3 edges
547	Measurement warning, Clipping positive/negative
548	Measurement warning, Clipping positive
549	Measurement warning, Clipping negative

Table 3-10: Execution Warning Messages (EXE Bit 4)

Code	Message
540	Measurement warning
541	Measurement warning, Low signal amplitude
542	Measurement warning, Unstable histogram
543	Measurement warning, Low resolution
544	Measurement warning, Uncertain edge
545	Measurement warning, Invalid min max
546	Measurement warning, Need 3 edges
547	Measurement warning, Clipping positive/negative
548	Measurement warning, Clipping positive
549	Measurement warning, Clipping negative

Internal Warning

The following table shows internal errors that indicate an internal fault in the oscilloscope.


Table 3-11: Internal Warning Messages

Code	Message
630	Internal warning, 50Ω overload

Appendix A: Character Set

B7 B6 B5 BITS B4 B3 B2 B1	0 0 0		0 0 1		0 1 0		0 1 1		1 0 0		1 0 1		1 1 0		1 1 1	
	CONTROL				NUMBERS SYMBOLS				UPPER CASE				LOWER CASE			
0 0 0 0	0 NUL 0	20 DLE 16	40 SP 32	60 0 48	100 @ 64	120 P 80	140 , 96	160 p 112								
0 0 0 1	1 GTL SOH 1	21 LL0 DC1 17	41 ! 33	61 1 49	101 A 65	121 Q 81	141 a 97	161 q 113								
0 0 1 0	2 STX 2	22 DC2 18	42 " 34	62 2 50	102 B 66	122 R 82	142 b 98	162 r 114								
0 0 1 1	3 ETX 3	23 DC3 19	43 # 35	63 3 51	103 C 67	123 S 83	143 c 99	163 s 115								
0 1 0 0	4 SDC EOT 4	24 DCL DC4 20	44 \$ 36	64 4 52	104 D 68	124 T 84	144 d 100	164 t 116								
0 1 0 1	5 PPC ENQ 5	25 PPU NAK 21	45 % 37	65 5 53	105 E 69	125 U 85	145 e 101	165 u 117								
0 1 1 0	6 ACK 6	26 SYN 22	46 & 38	66 6 54	106 F 70	126 V 86	146 f 102	166 v 118								
0 1 1 1	7 BEL 7	27 ETB 23	47 ' 39	67 7 55	107 G 71	127 W 87	147 g 103	167 w 119								
1 0 0 0	10 GET BS 8	30 SPE CAN 24	50 (40	70 8 56	110 H 72	130 X 88	150 h 104	170 x 120								
1 0 0 1	11 TCT HT 9	31 SPD EM 25	51) 41	71 9 57	111 I 73	131 Y 89	151 i 105	171 y 121								
1 0 1 0	12 LF A 10	32 SUB 1A 26	52 * 42	72 : 58	112 J 74	132 Z 90	152 j 106	172 z 122								
1 0 1 1	13 VT B 11	33 ESC 1B 27	53 + 43	73 ; 59	113 K 75	133 [91	153 k 107	173 { 123								
1 1 0 0	14 FF C 12	34 FS 1C 28	54 , 44	74 < 60	114 L 76	134 \ 92	154 l 108	174 ; 124								
1 1 0 1	15 CR D 13	35 GS 1D 29	55 - 45	75 = 61	115 M 77	135] 93	155 m 109	175 } 125								
1 1 1 0	16 SO E 14	36 RS 1E 30	56 . 46	76 > 62	116 N 78	136 ^ 94	156 n 110	176 ~ 126								
1 1 1 1	17 SI F 15	37 US 1F 31	57 / 47	77 ? 63	117 O 79	137 - 95	157 o 111	177 RUBOUT (DEL) 127								
	ADDRESSED COMMANDS		UNIVERSAL COMMANDS		LISTEN ADDRESSES				TALK ADDRESSES				SECONDARY ADDRESSES OR COMMANDS			

KEY



Tektronix

REF: ANSI STD X3.4-1977
IEEE STD 488.1-1987
ISO STD 646-2973

Appendix B: Reserved Words

This is a list of reserved words for your instrument. Capital letters identify the required minimum spelling.

*CAL	ADVanced	BITOrder	CM10BY15
*CLS	ALias	BITRate	CM13BY18
*DDT	ALL	BITSTUFFing	CM15BY21
*ESE	ALLEv	BIT_Nr	CM18BY24
*ESR	ALLFields	BIT	CM6BY8
*IDN	ALLLines	BLAckmanharris	CM7BY10
*LRN	ALLQString	BM	CM9BY13
*OPC	ALTERNATE	BMP	CMEan
*PSC	ALWAYS	BN_Fmt	COLUMN
*PUD	AMPLitude	BOTH	COMMAND
*RCL	AMPSVIAVOLTS	BOX	CONDCALCmethod
*RST	AND	BOXPcnt	CONDition
*SAV	ANY	BTRIGger	CONDuction
*SRE	APPKey	BURst	CONFigure
*STB	APPpwr	BUS	CONTRol
*TRG	AREa	BUSY	CONTinue
*TST	ASCII	BY	COPY
*WAI	ASSign	BYPass	COUNT
1CHX	ATRIGger	BYT_Nr	COUPling
1NR3	AUDio	BYT_Or	CPU
A	AUTO	Block	CR
A0	AUTOSet	C1	CRC
A1	AUTOZero	C2	CRC16
A2	AUX	C3	CRC5
A3	AUXOut	CALCmethod	CRCHeader
A4	AUXin	CALibrate	CRCTrailer
A5	AVERage	CAN	CREATE
A6	Auto	CANH	CRMS
A7	B	CANL	CROSSHair
A8	B0	CARD	CURRENTSource
A9	B1	CARea	CURRent
ABORt	B2	CATaLog	CURSor
ABOrt	B3	CH1	CURSors
ABSolute	B4	CH2	CURVe
AC	B5	CH3	CUSTom
ACK	B6	CH4	CWD
ACKMISS	B7	CHANnel	CYCLEcount
ACQ	B8	CHECKsum	D
ACQLENGTH	B9	CLASSALIMit	D0
ACQuire	BACKLight	CLASS	D1
ACTIVeprinter	BACKWards	CLEAR	D10
ADD	BANDwidth	CLEARMenu	D11
ADDR10	BASE	CLEARSNapshot	D12
ADDR7	BDIFFBP	CLEAR	D13
ADDRANDDATA	BINary	CLOCK	D14
ADDRess	BITDelay	CLOCK	D15

D2	DYNAMIC	FIRST	HARM5ALternate
D3	Dx	FIVEDivs	HARMSOURce
D4	E	FIXEDFREQvalue	HARMonics
D5	ECL	FIXEDFREQuency	HBars
D6	EDGE	FLAG	HD1080I50
D7	EEPROM	FLEXray	HD1080I60
D8	EITher	FOCUS	HD1080P24
D9	ENable	FOLder	HD1080P25
DATA	ENCdg	FORCEDRange	HD1080PSF24
DATA0	END	FORCe	HD480P60
DATA1	ENDPoint	FORMAT	HD720P60
DATABits	ENERGY	FORwards	HDtv
DATAPacket	ENERGYLoss	FPAnel	HEADER
DATE	ENET	FRACTIONal	HEADER
DATEPrint	ENGLISH	FRAME	HEADertime
DAll	ENV	FRAMEID	HEIGHt
DB	ENvelope	FRAMESync	HERtz
DC	EOF	FRAMEType	HEXadecimal
DDT	EOFTYPE	FRAMETypeid	HFRej
DECimal	EOP	FRAMEType	HIGH
DEFLT	EQUal	FRAMING	HIGHLimit
DEFault	ERROR	FRAMetime	HIRes
DEFine	ERRORTYPE	FREE	HISTogram
DEGAUSS	ERRTYPE	FREEspace	HIVALue
DEGrees	ERRlog	FRENch	HOLDTime
DELEte	ETHERnet	FREQREference	HOLDoff
DELIMiter	EVEN	FREQRef	HORizontal
DELTA	EVENT	FREQuency	HSmode
DELtatime	EVENTS	FULL	HTTPPort
DELaY	EVENTtable	FUNCTion	HYSTeresis
DELaYed	EVMsg	FUNDamental	I2C
DESE	EVQty	GAIN	I2S
DESkew	EXECute	GATEMid	ICRESTfactor
DEStination	EXT	GATESource	ID
DHCPbootp	EXTended	GATEWay	IDANDDATA
DIAG	EXTErnal	GATING	IDFormat
DIFFerential	FACTOR	GATE	IDLETime
DIGital	FACTory	GENeralcall	IDLEtime
DIR	FAIL	GERMan	IDPrint
DIREction	FAILures	GND	IDentifier
DISPlay	FALL	GPIBUSb	IEC
DISabled	FALSe	GRAPh	IECMAX
DISPlay	FALLing	GRATICule	IMAGESize
DISPlaymode	FASTPHOTO	GRID	IMAGe
DMINus	FASTEer	GROUPing	IMAge
DNS	FASTest	HAGAKIPCARD	IMMed
DOMAINname	FFT	HALFgrat	IMPedance
DOTonly	FIELD	HAMming	IN
DPLUS	FIFTy	HANDSHAKEPacket	IN11BY17
DPOModels	FILEFormat	HANDSHAKEType	IN2P5BY3P25
DRAFT	FILESystem	HANning	IN4BY6
DUAL	FILTter	HARDCopy	IN8BY10
DUMp	FINE	HARM3ALternate	INDBits

INDICators	LOW	NAK	PARity
INDividual	LOWCurrent	NAME	PASS
INDEpendent	LOWLimit	NAND	PASSFail
INFInite	LOWVoltage	NDuty	PASSWord
INIT	LOWerthreshold	NEGative	PATtern
INKSaver	LSB	NEWpass	PAYLength
INPUTPower	MAG	NEXT	PAYLoad
INPUt	MAGnivu	NEXt	PDuty
INTENSITY	MAIN	NO	PEAKdetect
INTERLAcED	MARK	NOCARE	PERCent
INTERNAI	MARKSINCOLUMN	NOISerej	PERIOD
INVERTed	MASK	NONE	PERSistence
INVert	MATH	NONE	PERcent
INVerted	MATH1	NOPARity	PHASEangle
INrange	MATHVAR	NOR	PHase
IO	MAX	NORMAL	PHOTO
IPADDRESS	MAXAmps	NOTCOMPUted	PICTBridge
IRMS	MAXBytedelim	NRMAL	PID
ISCLOCKED	MAXSamplerate	NR_HARMONics	PING
ITALian	MAXVolts	NR_PT	PLAIN
JAPANEse	MAXwatts	NTIMES	PLOTTYPE
KOREan	MAXimum	NTSC	PNG
L	MEAN	NULL	POHC
L2	MEAS	NULLFRDynamic	POHCLIMit
L4	MEASurement	NULLFRStatic	POHL
LABEL	MEDium	NUMACq	POINTS
LANGUage	MEG	NUMAVg	POLARCORD
LANDscape	MESSAge	NUMCYCles	POLARity
LARGE	METHod	NUMENTries	POLar
LAYOUT	MID	NUMERIC	PORTRAit
LDIR	MID2	NUMenv	PORTUGuese
LEFT	MIL	NUMHORZ	POSITion
LESSEQual	MIN	NUMVERT	POSITive
LESSLimit	MINimum	NWidth	POWER
LESSThan	MINMax	OBSPERiod	POWERFACTOR
LETTER	MISO	OCCURS	POWERFactor
LEVEL	MISOMOSI	ODD	POWERLEVEL
LF	MIXed	OFF	POWERLoss
LFRej	MIXED2	OFFSet	POWER
LIMITS	MKDir	ON	POWERupstatus
LIMit	MM100BY150	ONCE	PRESS
LIN	MM54BY86	ONFAIL	PREVIEW
LINE	MODE	OPTion	PREViewstate
LINEAr	MODULationanalysis	OR	PREVIOUS
LINEFREquency	MODE	OUT	PREAmble
LINEPeriod	MODEl	OUTrange	PRINTQual
LINEAr	MODulation	OVERLoad	PRINTER
LIST	MOREEqual	OWNer	PRODDELta
LJ	MORELimit	PACKET	PRODUCT
LOCK	MOREthan	PAL	PRODUCTID
LOG	MOREthan	PAPERSize	PROGRESSive
LOGIC	MOSI	PAPERType	PROPDELay
LOOP	MSB	PARAllel	PRObe

PT_Fmt	RI	SETTime	Standard
PT_Order	RIBinary	SETUP	SUBNETMask
PT_Off	RIGHT	SETUp	SUSPEND
PULSEWIDth	RIPPlE	SHOW	SWITCHingloss
PULSEwidth	RISEFall	SIGMA1	SWLoss
PULSe	RISe	SIGMA2	SYNC
PULse	RISing	SIGMA3	SYNCField
PWIdth	RJ	SIGNEDDECima1	SYNCFrame
QTY	RMDir	SIGna1	SYNCInterval
QUALifier	RMS	SIMPlifiedchinese	TABLE
QUALity	ROLL100MM	SINGleended	TDM
RADIUS	ROLL127MM	SIZE	TEKSecure
RATDELta	ROLL210MM	SLEEP	TEMPerature
RATE10K	ROLL89MM	SLEWRate	TERMination
RATE15K	ROM	SLOWer	TEST
RATE1M	RP	SLOpe	TESTnumber
RATE20K	RPBinary	SMAl1	THDELta
RATE25K	RS232	SNAPShot	THDF
RATE33K	RS232C	SNAP	THDR
RATE35K	RUN	SOA	THETA
RATE37K	RUNSTop	SOF	THREShold
RATE50K	RUNT	SOFFRAMENUMber	TIFF
RATE62K	RUNT	SOURCE	TIME
RATE800K	RUSSian	SOURCE2	TOFF
RATIO	RWINClude	SPANish	TOKENPacket
RDELta	RX	SPC	TOKENType
RDSon	RXDATA	SPECIALPacket	TON
REACTpwr	RXENDPacket	SPECIALType	TOTAL
READ	RXSTart	SPECTra1	TOTALuptime
READFile	SAMPLERate	SPI	TRACK
READOUT	SAMPLEpoint	SPREADSheet	TRADitionalchinese
RECA11	SAMPlE	SPace	TRANSition
RECDESkew	SAVe	SRibinary	TRIGGER
RECOrdlength	SCAN	SRPbinary	TRIGgertosearch
RECTangular	SCAlE	SS	TRUEpwr
REF	SCLK	STALL	TRUE
REF1	SCREEN	STANDard	TTL
REF2	SCREEn	STANDard	TURN
REF3	SDATA	START	TURNON
REF4	SEARCH	STARTOffframe	TWEnty
REFLeve1	SEARCHtotrigger	STARTUp	TWOfifty
REM	SECAM	STARTUpnosync	TX
REMOte	SECOnds	START	TXDATA
REName	SELEct	STARTbyte	TXENDPacket
REPEATstart	SELEcted	STATE	TXRX
RESERVED	SEQuence	STATIstics	TXSTART
RESET	SERIALnumber	STATUS	TYPE
RESOLution	SERnumber	STATic	Than
RESPTime	SET	STDdev	UNDO
RESUME	SETALLtorec	STOP	UNEQual
RESULt	SETHold	STOPAfter	UNITs
RESistance	SETLeve1	STOPOnviol	UNLock
RESULts	SETTODEFaults	STYle	UPPerthreshold

USB	VERTAUToset	WFMOutpre	XY
USBDevice	VERTDEFault	WHEn	XZErO
USBTMC	VERTical	WIDth	Y
USBTmc	VIDeo	WINDow	YDELta
USE	VOLTAGESource	WORD	YES
USER	VOLTage	WORDSel	YMAX
V1X	VOLts	WRITE	YMIN
V2X	VRMS	WRITEFile	YMUlt
VALue	WAKEup	X	YOff
VBArs	WAVEFORMS	XDELta	YT
VCEsat	WAVEform	XFF	YUNIts
VCRESTfactor	WAVFrm	XINcr	YUNit
VDELTA	WEighting	XMAX	YUNits
VENDORID	WFid	XMIN	YZErO
VERBoSe	WFMInpre	XUNit	ZOOM

Appendix C: Factory Defaults

Default Setup

The following table lists the default values for each command.

NOTE. Find the most up-to-date default values for your instrument and software by performing a TekSecure command, saving the instrument setup and looking at the instrument or setup file.

Table C-1: Default values

Command	Default value
ACQ:MAG	0
ACQ:MOD	SAM
ACQ:NUMAV	16
ACQ:NUME	INFI
ACQ:STATE	1
ACQ:STOPA	RUNST
ALI	0
AUX:PRO:FORCEDR	0.0E+0
AUX:PRO:GAIN	1.0000
BUS:B1:CAN:BITR	500000
BUS:B1:CAN:PRO	CANH
BUS:B1:CAN:SAMPLE	50
BUS:B1:CAN:SOU	CH1
BUS:B1:DIS:FORM	HEX
BUS:B1:DIS:TYP	BUS
BUS:B1:I2C:ADDR:RWINC	0
BUS:B1:I2C:CLOC:SOU	CH1
BUS:B1:I2C:DAT:SOU	CH2
BUS:B1:LAB	"Parallel"
BUS:B1:LIN:BITR	19200
BUS:B1:LIN:IDFOR	NOPAR
BUS:B1:LIN:POL	NORM
BUS:B1:LIN:SAMPLE	50
BUS:B1:LIN:SOU	CH1
BUS:B1:LIN:STAND	V2X
BUS:B1:PAR:BIT0:SOU	D0
BUS:B1:PAR:BIT10:SOU	D10

Table C-1: Default values (cont.)

Command	Default value
BUS:B1:PAR:BIT11:SOU	D11
BUS:B1:PAR:BIT12:SOU	D12
BUS:B1:PAR:BIT13:SOU	D13
BUS:B1:PAR:BIT14:SOU	D14
BUS:B1:PAR:BIT15:SOU	D15
BUS:B1:PAR:BIT16:SOU	CH1
BUS:B1:PAR:BIT17:SOU	CH2
BUS:B1:PAR:BIT18:SOU	CH3
BUS:B1:PAR:BIT19:SOU	CH4
BUS:B1:PAR:BIT1:SOU	D1
BUS:B1:PAR:BIT2:SOU	D2
BUS:B1:PAR:BIT3:SOU	D3
BUS:B1:PAR:BIT4:SOU	D4
BUS:B1:PAR:BIT5:SOU	D5
BUS:B1:PAR:BIT6:SOU	D6
BUS:B1:PAR:BIT7:SOU	D7
BUS:B1:PAR:BIT8:SOU	D8
BUS:B1:PAR:BIT9:SOU	D9
BUS:B1:PAR:CLOC:EDGE	RIS
BUS:B1:PAR:CLOC:ISCLOCK	NO
BUS:B1:PAR:CLOC:SOU	CH1
BUS:B1:PAR:WID	16
BUS:B1:POS	0.0E+0
BUS:B1:RS232C:BITR	9600
BUS:B1:RS232C:DATAB	8
BUS:B1:RS232C:DELIM	LF
BUS:B1:RS232C:DIS	FRA
BUS:B1:RS232C:PAR	NON
BUS:B1:RS232C:POL	NORM
BUS:B1:RS232C:RX:SOU	OFF
BUS:B1:RS232C:TX:SOU	CH1
BUS:B1:SPI:BITO	MSB
BUS:B1:SPI:CLOC:POL	RIS
BUS:B1:SPI:CLOC:SOU	CH1
BUS:B1:SPI:DAT:IN:POL	HIGH
BUS:B1:SPI:DAT:IN:SOU	OFF
BUS:B1:SPI:DAT:OUT:POL	HIGH

Table C-1: Default values (cont.)

Command	Default value
BUS:B1:SPI:DAT:OUT:SOU	CH3
BUS:B1:SPI:DAT:SIZ	8
BUS:B1:SPI:FRAMING	SS
BUS:B1:SPI:IDLET	5.0000E-6
BUS:B1:SPI:SEL:POL	LOW
BUS:B1:SPI:SEL:SOU	CH2
BUS:B1:STATE	0
BUS:B1:TYP	PAR
BUS:B1:USB:BITR	FULL
BUS:B1:USB:PRO	DIFF
BUS:B1:USB:SOU:DIFF	CH1
BUS:B1:USB:SOU:DMIN	CH2
BUS:B1:USB:SOU:DPLU	CH1
BUS:B2:CAN:BITR	500000
BUS:B2:CAN:PRO	CANH
BUS:B2:CAN:SAMPLE	50
BUS:B2:CAN:SOU	CH1
BUS:B2:DIS:FORM	HEX
BUS:B2:DIS:TYP	BUS
BUS:B2:I2C:ADDR:RWINC	0
BUS:B2:I2C:CLOC:SOU	CH1
BUS:B2:I2C:DAT:SOU	CH2
BUS:B2:LAB	"Parallel"
BUS:B2:LIN:BITR	19200
BUS:B2:LIN:IDFOR	NOPAR
BUS:B2:LIN:POL	NORM
BUS:B2:LIN:SAMPLE	50
BUS:B2:LIN:SOU	CH1
BUS:B2:LIN:STAND	V2X
BUS:B2:PAR:BIT0:SOU	D0
BUS:B2:PAR:BIT10:SOU	D10
BUS:B2:PAR:BIT11:SOU	D11
BUS:B2:PAR:BIT12:SOU	D12
BUS:B2:PAR:BIT13:SOU	D13
BUS:B2:PAR:BIT14:SOU	D14
BUS:B2:PAR:BIT15:SOU	D15
BUS:B2:PAR:BIT16:SOU	CH1

Table C-1: Default values (cont.)

Command	Default value
BUS:B2:PAR:BIT17:SOU	CH2
BUS:B2:PAR:BIT18:SOU	CH3
BUS:B2:PAR:BIT19:SOU	CH4
BUS:B2:PAR:BIT1:SOU	D1
BUS:B2:PAR:BIT2:SOU	D2
BUS:B2:PAR:BIT3:SOU	D3
BUS:B2:PAR:BIT4:SOU	D4
BUS:B2:PAR:BIT5:SOU	D5
BUS:B2:PAR:BIT6:SOU	D6
BUS:B2:PAR:BIT7:SOU	D7
BUS:B2:PAR:BIT8:SOU	D8
BUS:B2:PAR:BIT9:SOU	D9
BUS:B2:PAR:CLOC:EDGE	RIS
BUS:B2:PAR:CLOC:ISCLOCK	NO
BUS:B2:PAR:CLOC:SOU	CH1
BUS:B2:PAR:WID	16
BUS:B2:POS	0.0E+0
BUS:B2:RS232C:BITR	9600
BUS:B2:RS232C:DATAB	8
BUS:B2:RS232C:DELIM	LF
BUS:B2:RS232C:DIS	FRA
BUS:B2:RS232C:PAR	NON
BUS:B2:RS232C:POL	NORM
BUS:B2:RS232C:RX:SOU	OFF
BUS:B2:RS232C:TX:SOU	CH1
BUS:B2:SPI:BITO	MSB
BUS:B2:SPI:CLOC:POL	RIS
BUS:B2:SPI:CLOC:SOU	CH1
BUS:B2:SPI:DAT:IN:POL	HIGH
BUS:B2:SPI:DAT:IN:SOU	OFF
BUS:B2:SPI:DAT:OUT:POL	HIGH
BUS:B2:SPI:DAT:OUT:SOU	CH3
BUS:B2:SPI:DAT:SIZ	8
BUS:B2:SPI:FRAMING	SS
BUS:B2:SPI:IDLET	5.0000E-6
BUS:B2:SPI:SEL:POL	LOW
BUS:B2:SPI:SEL:SOU	CH2

Table C-1: Default values (cont.)

Command	Default value
BUS:B2:STATE	0
BUS:B2:TYP	PAR
BUS:B2:USB:BITR	FULL
BUS:B2:USB:PRO	DIFF
BUS:B2:USB:SOU:DIFF	CH1
BUS:B2:USB:SOU:DMIN	CH2
BUS:B2:USB:SOU:DPLU	CH1
BUS:B3:CAN:BITR	500000
BUS:B3:CAN:PRO	CANH
BUS:B3:CAN:SAMPLE	50
BUS:B3:CAN:SOU	CH1
BUS:B3:DIS:FORM	HEX
BUS:B3:DIS:TYP	BUS
BUS:B3:I2C:ADDR:RWINC	0
BUS:B3:I2C:CLOC:SOU	CH1
BUS:B3:I2C:DAT:SOU	CH2
BUS:B3:LAB	"Parallel"
BUS:B3:LIN:BITR	19200
BUS:B3:LIN:IDFOR	NOPAR
BUS:B3:LIN:POL	NORM
BUS:B3:LIN:SAMPLE	50
BUS:B3:LIN:SOU	CH1
BUS:B3:LIN:STAND	V2X
BUS:B3:PAR:BIT0:SOU	D0
BUS:B3:PAR:BIT10:SOU	D10
BUS:B3:PAR:BIT11:SOU	D11
BUS:B3:PAR:BIT12:SOU	D12
BUS:B3:PAR:BIT13:SOU	D13
BUS:B3:PAR:BIT14:SOU	D14
BUS:B3:PAR:BIT15:SOU	D15
BUS:B3:PAR:BIT16:SOU	CH1
BUS:B3:PAR:BIT17:SOU	CH2
BUS:B3:PAR:BIT18:SOU	CH3
BUS:B3:PAR:BIT19:SOU	CH4
BUS:B3:PAR:BIT1:SOU	D1
BUS:B3:PAR:BIT2:SOU	D2
BUS:B3:PAR:BIT3:SOU	D3

Table C-1: Default values (cont.)

Command	Default value
BUS:B3:PAR:BIT4:SOU	D4
BUS:B3:PAR:BIT5:SOU	D5
BUS:B3:PAR:BIT6:SOU	D6
BUS:B3:PAR:BIT7:SOU	D7
BUS:B3:PAR:BIT8:SOU	D8
BUS:B3:PAR:BIT9:SOU	D9
BUS:B3:PAR:CLOC:EDGE	RIS
BUS:B3:PAR:CLOC:ISCLOCK	NO
BUS:B3:PAR:CLOC:SOU	CH1
BUS:B3:PAR:WID	16
BUS:B3:POS	0.0E+0
BUS:B3:RS232C:BITR	9600
BUS:B3:RS232C:DATAB	8
BUS:B3:RS232C:DELIM	LF
BUS:B3:RS232C:DIS	FRA
BUS:B3:RS232C:PAR	NON
BUS:B3:RS232C:POL	NORM
BUS:B3:RS232C:RX:SOU	OFF
BUS:B3:RS232C:TX:SOU	CH1
BUS:B3:SPI:BITO	MSB
BUS:B3:SPI:CLOC:POL	RIS
BUS:B3:SPI:CLOC:SOU	CH1
BUS:B3:SPI:DAT:IN:POL	HIGH
BUS:B3:SPI:DAT:IN:SOU	OFF
BUS:B3:SPI:DAT:OUT:POL	HIGH
BUS:B3:SPI:DAT:OUT:SOU	CH3
BUS:B3:SPI:DAT:SIZ	8
BUS:B3:SPI:FRAMING	SS
BUS:B3:SPI:IDLET	5.0000E-6
BUS:B3:SPI:SEL:POL	LOW
BUS:B3:SPI:SEL:SOU	CH2
BUS:B3:STATE	0
BUS:B3:TYP	PAR
BUS:B3:USB:BITR	FULL
BUS:B3:USB:PRO	DIFF
BUS:B3:USB:SOU:DIFF	CH1
BUS:B3:USB:SOU:DMIN	CH2

Table C-1: Default values (cont.)

Command	Default value
BUS:B3:USB:SOU:DPLU	CH1
BUS:B4:CAN:BITR	500000
BUS:B4:CAN:PRO	CANH
BUS:B4:CAN:SAMPLE	50
BUS:B4:CAN:SOU	CH1
BUS:B4:DIS:FORM	HEX
BUS:B4:DIS:TYP	BUS
BUS:B4:I2C:ADDR:RWINC	0
BUS:B4:I2C:CLOC:SOU	CH1
BUS:B4:I2C:DAT:SOU	CH2
BUS:B4:LAB	"Parallel"
BUS:B4:LIN:BITR	19200
BUS:B4:LIN:IDFOR	NOPAR
BUS:B4:LIN:POL	NORM
BUS:B4:LIN:SAMPLE	50
BUS:B4:LIN:SOU	CH1
BUS:B4:LIN:STAND	V2X
BUS:B4:PAR:BIT0:SOU	D0
BUS:B4:PAR:BIT10:SOU	D10
BUS:B4:PAR:BIT11:SOU	D11
BUS:B4:PAR:BIT12:SOU	D12
BUS:B4:PAR:BIT13:SOU	D13
BUS:B4:PAR:BIT14:SOU	D14
BUS:B4:PAR:BIT15:SOU	D15
BUS:B4:PAR:BIT16:SOU	CH1
BUS:B4:PAR:BIT17:SOU	CH2
BUS:B4:PAR:BIT18:SOU	CH3
BUS:B4:PAR:BIT19:SOU	CH4
BUS:B4:PAR:BIT1:SOU	D1
BUS:B4:PAR:BIT2:SOU	D2
BUS:B4:PAR:BIT3:SOU	D3
BUS:B4:PAR:BIT4:SOU	D4
BUS:B4:PAR:BIT5:SOU	D5
BUS:B4:PAR:BIT6:SOU	D6
BUS:B4:PAR:BIT7:SOU	D7
BUS:B4:PAR:BIT8:SOU	D8
BUS:B4:PAR:BIT9:SOU	D9

Table C-1: Default values (cont.)

Command	Default value
BUS:B4:PAR:CLOC:EDGE	RIS
BUS:B4:PAR:CLOC:ISCLOCK	NO
BUS:B4:PAR:CLOC:SOU	CH1
BUS:B4:PAR:WID	16
BUS:B4:POS	0.0E+0
BUS:B4:RS232C:BITR	9600
BUS:B4:RS232C:DATAB	8
BUS:B4:RS232C:DELIM	LF
BUS:B4:RS232C:DIS	FRA
BUS:B4:RS232C:PAR	NON
BUS:B4:RS232C:POL	NORM
BUS:B4:RS232C:RX:SOU	OFF
BUS:B4:RS232C:TX:SOU	CH1
BUS:B4:SPI:BITO	MSB
BUS:B4:SPI:CLOC:POL	RIS
BUS:B4:SPI:CLOC:SOU	CH1
BUS:B4:SPI:DAT:IN:POL	HIGH
BUS:B4:SPI:DAT:IN:SOU	OFF
BUS:B4:SPI:DAT:OUT:POL	HIGH
BUS:B4:SPI:DAT:OUT:SOU	CH3
BUS:B4:SPI:DAT:SIZ	8
BUS:B4:SPI:FRAMING	SS
BUS:B4:SPI:IDLET	5.0000E-6
BUS:B4:SPI:SEL:POL	LOW
BUS:B4:SPI:SEL:SOU	CH2
BUS:B4:STATE	0
BUS:B4:TYP	PAR
BUS:B4:USB:BITR	FULL
BUS:B4:USB:PRO	DIFF
BUS:B4:USB:SOU:DIFF	CH1
BUS:B4:USB:SOU:DMIN	CH2
BUS:B4:USB:SOU:DPLU	CH1
BUS:LOW:CH1	0.0E+0
BUS:LOW:CH2	0.0E+0
BUS:LOW:CH3	0.0E+0
BUS:LOW:CH4	0.0E+0
BUS:UPP:CH1	800.0000E-3

Table C-1: Default values (cont.)

Command	Default value
BUS:UPP:CH2	800.0000E-3
BUS:UPP:CH3	800.0000E-3
BUS:UPP:CH4	800.0000E-3
CH1:AMPSVIAVOLT:ENA	0
CH1:AMPSVIAVOLT:FAC	10.0000
CH1:BAN	500.0000E+6
CH1:COUP	DC
CH1:DESK	0.0E+0
CH1:INV	0
CH1:LAB	""
CH1:OFFS	0.0E+0
CH1:POS	0.0E+0
CH1:PRO:FORCEDR	0.0E+0
CH1:PRO:GAIN	1.0000
CH1:PRO:MOD	"Other"
CH1:PRO:PROPDEL	0.0E+0
CH1:SCA	100.0000E-3
CH1:TER	1.0000E+6
CH1:YUN	"V"
CH2:AMPSVIAVOLT:ENA	0
CH2:AMPSVIAVOLT:FAC	10.0000
CH2:BAN	500.0000E+6
CH2:COUP	DC
CH2:DESK	0.0E+0
CH2:INV	0
CH2:LAB	""
CH2:OFFS	0.0E+0
CH2:POS	0.0E+0
CH2:PRO:FORCEDR	0.0E+0
CH2:PRO:GAIN	1.0000
CH2:PRO:MOD	"Other"
CH2:PRO:PROPDEL	0.0E+0
CH2:SCA	100.0000E-3
CH2:TER	1.0000E+6
CH2:YUN	"V"
CH3:AMPSVIAVOLT:ENA	0
CH3:AMPSVIAVOLT:FAC	10.0000

Table C-1: Default values (cont.)

Command	Default value
CH3:BAN	500.0000E+6
CH3:COUP	DC
CH3:DESK	0.0E+0
CH3:INV	0
CH3:LAB	""
CH3:OFFS	0.0E+0
CH3:POS	0.0E+0
CH3:PRO:FORCEDR	0.0E+0
CH3:PRO:GAIN	1.0000
CH3:PRO:MOD	"Other"
CH3:PRO:PROPDEL	0.0E+0
CH3:SCA	100.0000E-3
CH3:TER	1.0000E+6
CH3:YUN	"V"
CH4:AMPSVIAVOLT:ENA	0
CH4:AMPSVIAVOLT:FAC	10.0000
CH4:BAN	500.0000E+6
CH4:COUP	DC
CH4:DESK	0.0E+0
CH4:INV	0
CH4:LAB	""
CH4:OFFS	0.0E+0
CH4:POS	0.0E+0
CH4:PRO:FORCEDR	0.0E+0
CH4:PRO:GAIN	1.0000
CH4:PRO:MOD	"Other"
CH4:PRO:PROPDEL	0.0E+0
CH4:SCA	100.0000E-3
CH4:TER	1.0000E+6
CH4:YUN	"V"
CURS:FUNC	OFF
CURS:HBA:POSITION1	0.0E+0
CURS:HBA:POSITION2	0.0E+0
CURS:HBA:UNI	BAS
CURS:MOD	IND
CURS:VBA:POSITION1	0.0E+0
CURS:VBA:POSITION2	0.0E+0

Table C-1: Default values (cont.)

Command	Default value
CURS:VBA:UNI	SEC
CURS:XY:READOUT	RECT
CURS:XY:RECT:X:POSITION1	0.0E+0
CURS:XY:RECT:X:POSITION2	0.0E+0
CURS:XY:RECT:Y:POSITION1	0.0E+0
CURS:XY:RECT:Y:POSITION2	0.0E+0
D0:LAB	""
D0:POS	60.0000E-3
D0:THRE	1.4000
D10:LAB	""
D10:POS	60.0000E-3
D10:THRE	1.4000
D11:LAB	""
D11:POS	60.0000E-3
D11:THRE	1.4000
D12:LAB	""
D12:POS	60.0000E-3
D12:THRE	1.4000
D13:LAB	""
D13:POS	60.0000E-3
D13:THRE	1.4000
D14:LAB	""
D14:POS	60.0000E-3
D14:THRE	1.4000
D15:LAB	""
D15:POS	60.0000E-3
D15:THRE	1.4000
D1:LAB	""
D1:POS	60.0000E-3
D1:THRE	1.4000
D2:LAB	""
D2:POS	60.0000E-3
D2:THRE	1.4000
D3:LAB	""
D3:POS	60.0000E-3
D3:THRE	1.4000
D4:LAB	""

Table C-1: Default values (cont.)

Command	Default value
D4:POS	60.0000E-3
D4:THRE	1.4000
D5:LAB	""
D5:POS	60.0000E-3
D5:THRE	1.4000
D6:LAB	""
D6:POS	60.0000E-3
D6:THRE	1.4000
D7:LAB	""
D7:POS	60.0000E-3
D7:THRE	1.4000
D8:LAB	""
D8:POS	60.0000E-3
D8:THRE	1.4000
D9:LAB	""
D9:POS	60.0000E-3
D9:THRE	1.4000
DAT:DEST	REF1
DAT:ENC	RIB
DAT:SOU	CH1
DAT:STAR	1
DAT:STOP	10000
DES:DISP	1
DIS:CLOC	1
DIS:DIG:HEI	MED
DIS:FORM	YT
DIS:GRA	FUL
DIS:INTENSIT:BACKL	HIGH
DIS:INTENSIT:GRA	75
DIS:INTENSIT:WAVE	35
DIS:PERS	0.0E+0
DIS:STY:DOT	0
DIS:TRIGF	0
HARDC:INKS	1
HARDC:LAY	LAN
HARDC:PREVIEW	0
HEAD	0

Table C-1: Default values (cont.)

Command	Default value
HIS:BOXP	20.0000,20.0000,80.0000,80.0000
HIS:DIS	LINEA
HIS:MOD	OFF
HIS:SOU	CH1
HOR:DEL:MOD	1
HOR:DEL:TIM	0.0E+0
HOR:POS	50.0000
HOR:RECO	10000
HOR:SCA	4.0000E-6
LOC	NON
MATH:DEF	"CH1+CH2"
MATH:HOR:POS	50.0000
MATH:HOR:SCA	4.0000E-6
MATH:HOR:UNI	"s"
MATH:LAB	""
MATH:SPECT:MAG	DB
MATH:SPECT:WIN	HAN
MATH:TYP	DUAL
MATH:VERT:POS	0.0E+0
MATH:VERT:SCA	100.0000E-3
MATH:VERT:UNI	"v"
MATHVAR:VAR1	0.0E+0
MATHVAR:VAR2	0.0E+0
MEASU:GAT	SCRE
MEASU:IMM:DEL:DIR	FORW
MEASU:IMM:DEL:EDGE1	RIS
MEASU:IMM:DEL:EDGE2	RIS
MEASU:IMM:SOU1	CH1
MEASU:IMM:SOU2	CH2
MEASU:IMM:TYP	PERI
MEASU:INDIC:STATE	OFF
MEASU:MEAS1:DEL:DIR	FORW
MEASU:MEAS1:DEL:EDGE1	RIS
MEASU:MEAS1:DEL:EDGE2	RIS
MEASU:MEAS1:SOU1	CH1
MEASU:MEAS1:SOU2	CH2
MEASU:MEAS1:STATE	0

Table C-1: Default values (cont.)

Command	Default value
MEASU:MEAS1:TYP	PERI
MEASU:MEAS2:DEL:DIR	FORW
MEASU:MEAS2:DEL:EDGE1	RIS
MEASU:MEAS2:DEL:EDGE2	RIS
MEASU:MEAS2:SOU1	CH1
MEASU:MEAS2:SOU2	CH2
MEASU:MEAS2:STATE	0
MEASU:MEAS2:TYP	PERI
MEASU:MEAS3:DEL:DIR	FORW
MEASU:MEAS3:DEL:EDGE1	RIS
MEASU:MEAS3:DEL:EDGE2	RIS
MEASU:MEAS3:SOU1	CH1
MEASU:MEAS3:SOU2	CH2
MEASU:MEAS3:STATE	0
MEASU:MEAS3:TYP	PERI
MEASU:MEAS4:DEL:DIR	FORW
MEASU:MEAS4:DEL:EDGE1	RIS
MEASU:MEAS4:DEL:EDGE2	RIS
MEASU:MEAS4:SOU1	CH1
MEASU:MEAS4:SOU2	CH2
MEASU:MEAS4:STATE	0
MEASU:MEAS4:TYP	PERI
MEASU:MEAS5:DEL:DIR	FORW
MEASU:MEAS5:DEL:EDGE1	RIS
MEASU:MEAS5:DEL:EDGE2	RIS
MEASU:MEAS5:SOU1	CH1
MEASU:MEAS5:SOU2	CH2
MEASU:MEAS5:STATE	0
MEASU:MEAS5:TYP	PERI
MEASU:MEAS6:DEL:DIR	FORW
MEASU:MEAS6:DEL:EDGE1	RIS
MEASU:MEAS6:DEL:EDGE2	RIS
MEASU:MEAS6:SOU1	CH1
MEASU:MEAS6:SOU2	CH2
MEASU:MEAS6:STATE	0
MEASU:MEAS6:TYP	PERI
MEASU:MEAS7:DEL:DIR	FORW

Table C-1: Default values (cont.)

Command	Default value
MEASU:MEAS7:DEL:EDGE1	RIS
MEASU:MEAS7:DEL:EDGE2	RIS
MEASU:MEAS7:SOU1	CH1
MEASU:MEAS7:SOU2	CH2
MEASU:MEAS7:STATE	0
MEASU:MEAS7:TYP	PERI
MEASU:MEAS8:DEL:DIR	FORW
MEASU:MEAS8:DEL:EDGE1	RIS
MEASU:MEAS8:DEL:EDGE2	RIS
MEASU:MEAS8:SOU1	CH1
MEASU:MEAS8:SOU2	CH2
MEASU:MEAS8:STATE	0
MEASU:MEAS8:TYP	PERI
MEASU:METH	A
MEASU:REFL:ABS:HIGH	0.0E+0
MEASU:REFL:ABS:LOW	0.0E+0
MEASU:REFL:ABS:MID1	0.0E+0
MEASU:REFL:ABS:MID2	0.0E+0
MEASU:REFL:METH	PERC
MEASU:REFL:PERC:HIGH	90.0000
MEASU:REFL:PERC:LOW	10.0000
MEASU:REFL:PERC:MID1	50.0000
MEASU:REFL:PERC:MID2	50.0000
MEASU:STATI:MODE	ALL
MEASU:STATI:WEI	32
MESS:BOX	271,82,271,98
MESS:SHOW	""
MESS:STATE	0
PICTB:DATEP	DEFLT
PICTB:IDP	OFF
PICTB:IMAGES	DEFLT
PICTB:PAPERS	DEFLT
PICTB:PAPERT	DEFLT
PICTB:PRINTQ	DEFLT
REF1:HOR:DEL:TIM	0.0E+0
REF1:HOR:SCA	4.0000E-6
REF1:VERT:POS	0.0E+0

Table C-1: Default values (cont.)

Command	Default value
REF1:VERT:SCA	100.0000E-3
REF2:HOR:DEL:TIM	0.0E+0
REF2:HOR:SCA	4.0000E-6
REF2:VERT:POS	0.0E+0
REF2:VERT:SCA	100.0000E-3
REF3:HOR:DEL:TIM	0.0E+0
REF3:HOR:SCA	4.0000E-6
REF3:VERT:POS	0.0E+0
REF3:VERT:SCA	100.0000E-3
REF4:HOR:DEL:TIM	0.0E+0
REF4:HOR:SCA	4.0000E-6
REF4:VERT:POS	0.0E+0
REF4:VERT:SCA	100.0000E-3
SAV:ASSI:TYP	IMAG
SAV:IMAG:FILEF	PNG
SAV:IMAG:INKS	1
SAV:IMAG:LAY	LAN
SAV:WAVE:FILEF	SPREADS
SAV:WAVE:GATI	NON
SEARCH:SEARCH1:STATE	0
SEARCH:SEARCH1:TRIG:A:BUS:B1:CAN:COND	SOF
SEARCH:SEARCH1:TRIG:A:BUS:B1:CAN:DAT:DIR	NOCARE
SEARCH:SEARCH1:TRIG:A:BUS:B1:CAN:DAT:QUAL	EQU
SEARCH:SEARCH1:TRIG:A:BUS:B1:CAN:DAT:SIZ	1
SEARCH:SEARCH1:TRIG:A:BUS:B1:CAN:DAT:VAL	"XXXXXXXX"
SEARCH:SEARCH1:TRIG:A:BUS:B1:CAN:FRAME	DATA
SEARCH:SEARCH1:TRIG:A:BUS:B1:CAN:ID:MOD	ST
SEARCH:SEARCH1:TRIG:A:BUS:B1:CAN:ID:VAL	"XXXXXXXXXXXX"
SEARCH:SEARCH1:TRIG:A:BUS:B1:I2C:ADDR:MOD	ADDR7
SEARCH:SEARCH1:TRIG:A:BUS:B1:I2C:ADDR:TYP	USER
SEARCH:SEARCH1:TRIG:A:BUS:B1:I2C:ADDR:VAL	"XXXXXXX"
SEARCH:SEARCH1:TRIG:A:BUS:B1:I2C:COND	STAR
SEARCH:SEARCH1:TRIG:A:BUS:B1:I2C:DAT:DIR	NOCARE
SEARCH:SEARCH1:TRIG:A:BUS:B1:I2C:DAT:SIZ	1
SEARCH:SEARCH1:TRIG:A:BUS:B1:I2C:DAT:VAL	"XXXXXXXX"
SEARCH:SEARCH1:TRIG:A:BUS:B1:LIN:COND	SYNCF
SEARCH:SEARCH1:TRIG:A:BUS:B1:LIN:DAT:HIVAL	"XXXXXXXX"

Table C-1: Default values (cont.)

Command	Default value
SEARCH:SEARCH1:TRIG:A:BUS:B1:LIN:DAT:QUAL	EQU
SEARCH:SEARCH1:TRIG:A:BUS:B1:LIN:DAT:SIZ	1
SEARCH:SEARCH1:TRIG:A:BUS:B1:LIN:DAT:VAL	"XXXXXXXX"
SEARCH:SEARCH1:TRIG:A:BUS:B1:LIN:ERRTYPE	SYNC
SEARCH:SEARCH1:TRIG:A:BUS:B1:LIN:ID:VAL	"XXXXXX"
SEARCH:SEARCH1:TRIG:A:BUS:B1:PAR:VAL	"XXXXXXXXXXXXXXXXXX"
SEARCH:SEARCH1:TRIG:A:BUS:B1:RS232C:COND	TXSTA
SEARCH:SEARCH1:TRIG:A:BUS:B1:RS232C:RX:DAT:SIZ	1
SEARCH:SEARCH1:TRIG:A:BUS:B1:RS232C:RX:DAT:VAL	"XXXXXXXX"
SEARCH:SEARCH1:TRIG:A:BUS:B1:RS232C:TX:DAT:SIZ	1
SEARCH:SEARCH1:TRIG:A:BUS:B1:RS232C:TX:DAT:VAL	"XXXXXXXX"
SEARCH:SEARCH1:TRIG:A:BUS:B1:SPI:COND	SS
SEARCH:SEARCH1:TRIG:A:BUS:B1:SPI:DAT:MISO:VAL	"XXXXXXXX"
SEARCH:SEARCH1:TRIG:A:BUS:B1:SPI:DAT:MOSI:VAL	"XXXXXXXX"
SEARCH:SEARCH1:TRIG:A:BUS:B1:SPI:DAT:SIZ	1
SEARCH:SEARCH1:TRIG:A:BUS:B1:USB:ADDR:HIVAL	"XXXXXXXX"
SEARCH:SEARCH1:TRIG:A:BUS:B1:USB:ADDR:VAL	"XXXXXXXX"
SEARCH:SEARCH1:TRIG:A:BUS:B1:USB:COND	SYNC
SEARCH:SEARCH1:TRIG:A:BUS:B1:USB:DAT:HIVAL	"XXXXXXXX"
SEARCH:SEARCH1:TRIG:A:BUS:B1:USB:DAT:OFFS	-1
SEARCH:SEARCH1:TRIG:A:BUS:B1:USB:DAT:SIZ	1
SEARCH:SEARCH1:TRIG:A:BUS:B1:USB:DAT:TYP	ANY
SEARCH:SEARCH1:TRIG:A:BUS:B1:USB:DAT:VAL	"XXXXXXXX"
SEARCH:SEARCH1:TRIG:A:BUS:B1:USB:ENDP:VAL	"XXXX"
SEARCH:SEARCH1:TRIG:A:BUS:B1:USB:ERRTYPE	PID
SEARCH:SEARCH1:TRIG:A:BUS:B1:USB:HANDSHAKET	ANY
SEARCH:SEARCH1:TRIG:A:BUS:B1:USB:QUAL	EQU
SEARCH:SEARCH1:TRIG:A:BUS:B1:USB:SOFFRAMENUM	"XXXXXXXXXXXX"
SEARCH:SEARCH1:TRIG:A:BUS:B1:USB:SPECIALT	ANY
SEARCH:SEARCH1:TRIG:A:BUS:B1:USB:TOKENT	ANY
SEARCH:SEARCH1:TRIG:A:BUS:B2:CAN:COND	SOF
SEARCH:SEARCH1:TRIG:A:BUS:B2:CAN:DAT:DIR	NOCARE
SEARCH:SEARCH1:TRIG:A:BUS:B2:CAN:DAT:QUAL	EQU
SEARCH:SEARCH1:TRIG:A:BUS:B2:CAN:DAT:SIZ	1
SEARCH:SEARCH1:TRIG:A:BUS:B2:CAN:DAT:VAL	"XXXXXXXX"
SEARCH:SEARCH1:TRIG:A:BUS:B2:CAN:FRAME	DATA
SEARCH:SEARCH1:TRIG:A:BUS:B2:CAN:ID:MOD	ST

Table C-1: Default values (cont.)

Command	Default value
SEARCH:SEARCH1:TRIG:A:BUS:B2:CAN:ID:VAL	"XXXXXXXXXXXX"
SEARCH:SEARCH1:TRIG:A:BUS:B2:I2C:ADDR:MOD	ADDR7
SEARCH:SEARCH1:TRIG:A:BUS:B2:I2C:ADDR:TYP	USER
SEARCH:SEARCH1:TRIG:A:BUS:B2:I2C:ADDR:VAL	"XXXXXXX"
SEARCH:SEARCH1:TRIG:A:BUS:B2:I2C:COND	STAR
SEARCH:SEARCH1:TRIG:A:BUS:B2:I2C:DAT:DIR	NOCARE
SEARCH:SEARCH1:TRIG:A:BUS:B2:I2C:DAT:SIZ	1
SEARCH:SEARCH1:TRIG:A:BUS:B2:I2C:DAT:VAL	"XXXXXXXX"
SEARCH:SEARCH1:TRIG:A:BUS:B2:LIN:COND	SYNCF
SEARCH:SEARCH1:TRIG:A:BUS:B2:LIN:DAT:HIVAL	"XXXXXXXX"
SEARCH:SEARCH1:TRIG:A:BUS:B2:LIN:DAT:QUAL	EQU
SEARCH:SEARCH1:TRIG:A:BUS:B2:LIN:DAT:SIZ	1
SEARCH:SEARCH1:TRIG:A:BUS:B2:LIN:DAT:VAL	"XXXXXXXX"
SEARCH:SEARCH1:TRIG:A:BUS:B2:LIN:ERRTYPE	SYNC
SEARCH:SEARCH1:TRIG:A:BUS:B2:LIN:ID:VAL	"XXXXXX"
SEARCH:SEARCH1:TRIG:A:BUS:B2:PAR:VAL	"XXXXXXXXXXXXXXXXXXXX"
SEARCH:SEARCH1:TRIG:A:BUS:B2:RS232C:COND	TXSTA
SEARCH:SEARCH1:TRIG:A:BUS:B2:RS232C:RX:DAT:SIZ	1
SEARCH:SEARCH1:TRIG:A:BUS:B2:RS232C:RX:DAT:VAL	"XXXXXXXX"
SEARCH:SEARCH1:TRIG:A:BUS:B2:RS232C:TX:DAT:SIZ	1
SEARCH:SEARCH1:TRIG:A:BUS:B2:RS232C:TX:DAT:VAL	"XXXXXXXX"
SEARCH:SEARCH1:TRIG:A:BUS:B2:SPI:COND	SS
SEARCH:SEARCH1:TRIG:A:BUS:B2:SPI:DAT:MISO:VAL	"XXXXXXXX"
SEARCH:SEARCH1:TRIG:A:BUS:B2:SPI:DAT:MOSI:VAL	"XXXXXXXX"
SEARCH:SEARCH1:TRIG:A:BUS:B2:SPI:DAT:SIZ	1
SEARCH:SEARCH1:TRIG:A:BUS:B2:USB:ADDR:HIVAL	"XXXXXXX"
SEARCH:SEARCH1:TRIG:A:BUS:B2:USB:ADDR:VAL	"XXXXXXX"
SEARCH:SEARCH1:TRIG:A:BUS:B2:USB:COND	SYNC
SEARCH:SEARCH1:TRIG:A:BUS:B2:USB:DAT:HIVAL	"XXXXXXXX"
SEARCH:SEARCH1:TRIG:A:BUS:B2:USB:DAT:OFFS	-1
SEARCH:SEARCH1:TRIG:A:BUS:B2:USB:DAT:SIZ	1
SEARCH:SEARCH1:TRIG:A:BUS:B2:USB:DAT:TYP	ANY
SEARCH:SEARCH1:TRIG:A:BUS:B2:USB:DAT:VAL	"XXXXXXXX"
SEARCH:SEARCH1:TRIG:A:BUS:B2:USB:ENDP:VAL	"XXXX"
SEARCH:SEARCH1:TRIG:A:BUS:B2:USB:ERRTYPE	PID
SEARCH:SEARCH1:TRIG:A:BUS:B2:USB:HANDSHAKET	ANY
SEARCH:SEARCH1:TRIG:A:BUS:B2:USB:QUAL	EQU

Table C-1: Default values (cont.)

Command	Default value
SEARCH:SEARCH1:TRIG:A:BUS:B2:USB:SOFFRAMENUM	"XXXXXXXXXX"
SEARCH:SEARCH1:TRIG:A:BUS:B2:USB:SPECIALT	ANY
SEARCH:SEARCH1:TRIG:A:BUS:B2:USB:TOKENT	ANY
SEARCH:SEARCH1:TRIG:A:BUS:B3:CAN:COND	SOF
SEARCH:SEARCH1:TRIG:A:BUS:B3:CAN:DAT:DIR	NOCARE
SEARCH:SEARCH1:TRIG:A:BUS:B3:CAN:DAT:QUAL	EQU
SEARCH:SEARCH1:TRIG:A:BUS:B3:CAN:DAT:SIZ	1
SEARCH:SEARCH1:TRIG:A:BUS:B3:CAN:DAT:VAL	"XXXXXXXX"
SEARCH:SEARCH1:TRIG:A:BUS:B3:CAN:FRAME	DATA
SEARCH:SEARCH1:TRIG:A:BUS:B3:CAN:ID:MOD	ST
SEARCH:SEARCH1:TRIG:A:BUS:B3:CAN:ID:VAL	"XXXXXXXXXX"
SEARCH:SEARCH1:TRIG:A:BUS:B3:I2C:ADDR:MOD	ADDR7
SEARCH:SEARCH1:TRIG:A:BUS:B3:I2C:ADDR:TYP	USER
SEARCH:SEARCH1:TRIG:A:BUS:B3:I2C:ADDR:VAL	"XXXXXXXX"
SEARCH:SEARCH1:TRIG:A:BUS:B3:I2C:COND	STAR
SEARCH:SEARCH1:TRIG:A:BUS:B3:I2C:DAT:DIR	NOCARE
SEARCH:SEARCH1:TRIG:A:BUS:B3:I2C:DAT:SIZ	1
SEARCH:SEARCH1:TRIG:A:BUS:B3:I2C:DAT:VAL	"XXXXXXXX"
SEARCH:SEARCH1:TRIG:A:BUS:B3:LIN:COND	SYNCF
SEARCH:SEARCH1:TRIG:A:BUS:B3:LIN:DAT:HIVAL	"XXXXXXXX"
SEARCH:SEARCH1:TRIG:A:BUS:B3:LIN:DAT:QUAL	EQU
SEARCH:SEARCH1:TRIG:A:BUS:B3:LIN:DAT:SIZ	1
SEARCH:SEARCH1:TRIG:A:BUS:B3:LIN:DAT:VAL	"XXXXXXXX"
SEARCH:SEARCH1:TRIG:A:BUS:B3:LIN:ERRTYPE	SYNC
SEARCH:SEARCH1:TRIG:A:BUS:B3:LIN:ID:VAL	"XXXXXX"
SEARCH:SEARCH1:TRIG:A:BUS:B3:PAR:VAL	"XXXXXXXXXXXXXXXXXX"
SEARCH:SEARCH1:TRIG:A:BUS:B3:RS232C:COND	TXSTA
SEARCH:SEARCH1:TRIG:A:BUS:B3:RS232C:RX:DAT:SIZ	1
SEARCH:SEARCH1:TRIG:A:BUS:B3:RS232C:RX:DAT:VAL	"XXXXXXXX"
SEARCH:SEARCH1:TRIG:A:BUS:B3:RS232C:TX:DAT:SIZ	1
SEARCH:SEARCH1:TRIG:A:BUS:B3:RS232C:TX:DAT:VAL	"XXXXXXXX"
SEARCH:SEARCH1:TRIG:A:BUS:B3:SPI:COND	SS
SEARCH:SEARCH1:TRIG:A:BUS:B3:SPI:DAT:MISO:VAL	"XXXXXXXX"
SEARCH:SEARCH1:TRIG:A:BUS:B3:SPI:DAT:MOSI:VAL	"XXXXXXXX"
SEARCH:SEARCH1:TRIG:A:BUS:B3:SPI:DAT:SIZ	1
SEARCH:SEARCH1:TRIG:A:BUS:B3:USB:ADDR:HIVAL	"XXXXXXXX"
SEARCH:SEARCH1:TRIG:A:BUS:B3:USB:ADDR:VAL	"XXXXXXXX"

Table C-1: Default values (cont.)

Command	Default value
SEARCH:SEARCH1:TRIG:A:BUS:B3:USB:COND	SYNC
SEARCH:SEARCH1:TRIG:A:BUS:B3:USB:DAT:HIVAL	"XXXXXXXX"
SEARCH:SEARCH1:TRIG:A:BUS:B3:USB:DAT:OFFS	-1
SEARCH:SEARCH1:TRIG:A:BUS:B3:USB:DAT:SIZ	1
SEARCH:SEARCH1:TRIG:A:BUS:B3:USB:DAT:TYP	ANY
SEARCH:SEARCH1:TRIG:A:BUS:B3:USB:DAT:VAL	"XXXXXXXX"
SEARCH:SEARCH1:TRIG:A:BUS:B3:USB:ENDP:VAL	"XXXX"
SEARCH:SEARCH1:TRIG:A:BUS:B3:USB:ERRTYPE	PID
SEARCH:SEARCH1:TRIG:A:BUS:B3:USB:HANDSHAKET	ANY
SEARCH:SEARCH1:TRIG:A:BUS:B3:USB:QUAL	EQU
SEARCH:SEARCH1:TRIG:A:BUS:B3:USB:SOFFRAMENUM	"XXXXXXXXXXXX"
SEARCH:SEARCH1:TRIG:A:BUS:B3:USB:SPECIALT	ANY
SEARCH:SEARCH1:TRIG:A:BUS:B3:USB:TOKENT	ANY
SEARCH:SEARCH1:TRIG:A:BUS:B4:CAN:COND	SOF
SEARCH:SEARCH1:TRIG:A:BUS:B4:CAN:DAT:DIR	NOCARE
SEARCH:SEARCH1:TRIG:A:BUS:B4:CAN:DAT:QUAL	EQU
SEARCH:SEARCH1:TRIG:A:BUS:B4:CAN:DAT:SIZ	1
SEARCH:SEARCH1:TRIG:A:BUS:B4:CAN:DAT:VAL	"XXXXXXXX"
SEARCH:SEARCH1:TRIG:A:BUS:B4:CAN:FRAME	DATA
SEARCH:SEARCH1:TRIG:A:BUS:B4:CAN:ID:MOD	ST
SEARCH:SEARCH1:TRIG:A:BUS:B4:CAN:ID:VAL	"XXXXXXXXXXXX"
SEARCH:SEARCH1:TRIG:A:BUS:B4:I2C:ADDR:MOD	ADDR7
SEARCH:SEARCH1:TRIG:A:BUS:B4:I2C:ADDR:TYP	USER
SEARCH:SEARCH1:TRIG:A:BUS:B4:I2C:ADDR:VAL	"XXXXXX"
SEARCH:SEARCH1:TRIG:A:BUS:B4:I2C:COND	STAR
SEARCH:SEARCH1:TRIG:A:BUS:B4:I2C:DAT:DIR	NOCARE
SEARCH:SEARCH1:TRIG:A:BUS:B4:I2C:DAT:SIZ	1
SEARCH:SEARCH1:TRIG:A:BUS:B4:I2C:DAT:VAL	"XXXXXXXX"
SEARCH:SEARCH1:TRIG:A:BUS:B4:LIN:COND	SYNCF
SEARCH:SEARCH1:TRIG:A:BUS:B4:LIN:DAT:HIVAL	"XXXXXXXX"
SEARCH:SEARCH1:TRIG:A:BUS:B4:LIN:DAT:QUAL	EQU
SEARCH:SEARCH1:TRIG:A:BUS:B4:LIN:DAT:SIZ	1
SEARCH:SEARCH1:TRIG:A:BUS:B4:LIN:DAT:VAL	"XXXXXXXX"
SEARCH:SEARCH1:TRIG:A:BUS:B4:LIN:ERRTYPE	SYNC
SEARCH:SEARCH1:TRIG:A:BUS:B4:LIN:ID:VAL	"XXXXXX"
SEARCH:SEARCH1:TRIG:A:BUS:B4:PAR:VAL	"XXXXXXXXXXXXXXXXXX"
SEARCH:SEARCH1:TRIG:A:BUS:B4:RS232C:COND	TXSTA

Table C-1: Default values (cont.)

Command	Default value
SEARCH:SEARCH1:TRIG:A:BUS:B4:RS232C:RX:DAT:SIZE	1
SEARCH:SEARCH1:TRIG:A:BUS:B4:RS232C:RX:DAT:VAL	"XXXXXXXX"
SEARCH:SEARCH1:TRIG:A:BUS:B4:RS232C:TX:DAT:SIZE	1
SEARCH:SEARCH1:TRIG:A:BUS:B4:RS232C:TX:DAT:VAL	"XXXXXXXX"
SEARCH:SEARCH1:TRIG:A:BUS:B4:SPI:COND	SS
SEARCH:SEARCH1:TRIG:A:BUS:B4:SPI:DAT:MISO:VAL	"XXXXXXXX"
SEARCH:SEARCH1:TRIG:A:BUS:B4:SPI:DAT:MOSI:VAL	"XXXXXXXX"
SEARCH:SEARCH1:TRIG:A:BUS:B4:SPI:DAT:SIZE	1
SEARCH:SEARCH1:TRIG:A:BUS:B4:USB:ADDR:HIVAL	"XXXXXXXX"
SEARCH:SEARCH1:TRIG:A:BUS:B4:USB:ADDR:VAL	"XXXXXXXX"
SEARCH:SEARCH1:TRIG:A:BUS:B4:USB:COND	SYNC
SEARCH:SEARCH1:TRIG:A:BUS:B4:USB:DAT:HIVAL	"XXXXXXXX"
SEARCH:SEARCH1:TRIG:A:BUS:B4:USB:DAT:OFFS	-1
SEARCH:SEARCH1:TRIG:A:BUS:B4:USB:DAT:SIZE	1
SEARCH:SEARCH1:TRIG:A:BUS:B4:USB:DAT:TYP	ANY
SEARCH:SEARCH1:TRIG:A:BUS:B4:USB:DAT:VAL	"XXXXXXXX"
SEARCH:SEARCH1:TRIG:A:BUS:B4:USB:ENDP:VAL	"XXXX"
SEARCH:SEARCH1:TRIG:A:BUS:B4:USB:ERRTYPE	PID
SEARCH:SEARCH1:TRIG:A:BUS:B4:USB:HANDSHAKET	ANY
SEARCH:SEARCH1:TRIG:A:BUS:B4:USB:QUAL	EQU
SEARCH:SEARCH1:TRIG:A:BUS:B4:USB:SOFFRAMENUM	"XXXXXXXXXXXX"
SEARCH:SEARCH1:TRIG:A:BUS:B4:USB:SPECIALT	ANY
SEARCH:SEARCH1:TRIG:A:BUS:B4:USB:TOKENT	ANY
SEARCH:SEARCH1:TRIG:A:BUS:SOU	B1
SEARCH:SEARCH1:TRIG:A:EDGE:SLO	RIS
SEARCH:SEARCH1:TRIG:A:EDGE:SOU	CH1
SEARCH:SEARCH1:TRIG:A:LEV	0.0E+0
SEARCH:SEARCH1:TRIG:A:LEV:CH1	0.0E+0
SEARCH:SEARCH1:TRIG:A:LEV:CH2	0.0E+0
SEARCH:SEARCH1:TRIG:A:LEV:CH3	0.0E+0
SEARCH:SEARCH1:TRIG:A:LEV:CH4	0.0E+0
SEARCH:SEARCH1:TRIG:A:LEV:MATH	0.0E+0
SEARCH:SEARCH1:TRIG:A:LEV:REF1	0.0E+0
SEARCH:SEARCH1:TRIG:A:LEV:REF2	0.0E+0
SEARCH:SEARCH1:TRIG:A:LEV:REF3	0.0E+0
SEARCH:SEARCH1:TRIG:A:LEV:REF4	0.0E+0
SEARCH:SEARCH1:TRIG:A:LOGI:FUNC	AND

Table C-1: Default values (cont.)

Command	Default value
SEARCH:SEARCH1:TRIG:A:LOGI:INP:CH1	X
SEARCH:SEARCH1:TRIG:A:LOGI:INP:CH2	X
SEARCH:SEARCH1:TRIG:A:LOGI:INP:CH3	X
SEARCH:SEARCH1:TRIG:A:LOGI:INP:CH4	X
SEARCH:SEARCH1:TRIG:A:LOGI:INP:CLOC:EDGE	RIS
SEARCH:SEARCH1:TRIG:A:LOGI:INP:CLOC:SOU	NON
SEARCH:SEARCH1:TRIG:A:LOGI:INP:D0	X
SEARCH:SEARCH1:TRIG:A:LOGI:INP:D1	X
SEARCH:SEARCH1:TRIG:A:LOGI:INP:D10	X
SEARCH:SEARCH1:TRIG:A:LOGI:INP:D11	X
SEARCH:SEARCH1:TRIG:A:LOGI:INP:D12	X
SEARCH:SEARCH1:TRIG:A:LOGI:INP:D13	X
SEARCH:SEARCH1:TRIG:A:LOGI:INP:D14	X
SEARCH:SEARCH1:TRIG:A:LOGI:INP:D15	X
SEARCH:SEARCH1:TRIG:A:LOGI:INP:D2	X
SEARCH:SEARCH1:TRIG:A:LOGI:INP:D3	X
SEARCH:SEARCH1:TRIG:A:LOGI:INP:D4	X
SEARCH:SEARCH1:TRIG:A:LOGI:INP:D5	X
SEARCH:SEARCH1:TRIG:A:LOGI:INP:D6	X
SEARCH:SEARCH1:TRIG:A:LOGI:INP:D7	X
SEARCH:SEARCH1:TRIG:A:LOGI:INP:D8	X
SEARCH:SEARCH1:TRIG:A:LOGI:INP:D9	X
SEARCH:SEARCH1:TRIG:A:LOGI:INP:MATH	X
SEARCH:SEARCH1:TRIG:A:LOGI:INP:REF1	X
SEARCH:SEARCH1:TRIG:A:LOGI:INP:REF2	X
SEARCH:SEARCH1:TRIG:A:LOGI:INP:REF3	X
SEARCH:SEARCH1:TRIG:A:LOGI:INP:REF4	X
SEARCH:SEARCH1:TRIG:A:LOGI:PAT:INP:CH1	X
SEARCH:SEARCH1:TRIG:A:LOGI:PAT:INP:CH2	X
SEARCH:SEARCH1:TRIG:A:LOGI:PAT:INP:CH3	X
SEARCH:SEARCH1:TRIG:A:LOGI:PAT:INP:CH4	X
SEARCH:SEARCH1:TRIG:A:LOGI:PAT:INP:D0	X
SEARCH:SEARCH1:TRIG:A:LOGI:PAT:INP:D1	X
SEARCH:SEARCH1:TRIG:A:LOGI:PAT:INP:D10	X
SEARCH:SEARCH1:TRIG:A:LOGI:PAT:INP:D11	X
SEARCH:SEARCH1:TRIG:A:LOGI:PAT:INP:D12	X
SEARCH:SEARCH1:TRIG:A:LOGI:PAT:INP:D13	X

Table C-1: Default values (cont.)

Command	Default value
SEARCH:SEARCH1:TRIG:A:LOGI:PAT:INP:D14	X
SEARCH:SEARCH1:TRIG:A:LOGI:PAT:INP:D15	X
SEARCH:SEARCH1:TRIG:A:LOGI:PAT:INP:D2	X
SEARCH:SEARCH1:TRIG:A:LOGI:PAT:INP:D3	X
SEARCH:SEARCH1:TRIG:A:LOGI:PAT:INP:D4	X
SEARCH:SEARCH1:TRIG:A:LOGI:PAT:INP:D5	X
SEARCH:SEARCH1:TRIG:A:LOGI:PAT:INP:D6	X
SEARCH:SEARCH1:TRIG:A:LOGI:PAT:INP:D7	X
SEARCH:SEARCH1:TRIG:A:LOGI:PAT:INP:D8	X
SEARCH:SEARCH1:TRIG:A:LOGI:PAT:INP:D9	X
SEARCH:SEARCH1:TRIG:A:LOGI:PAT:INP:MATH	X
SEARCH:SEARCH1:TRIG:A:LOGI:PAT:INP:REF1	X
SEARCH:SEARCH1:TRIG:A:LOGI:PAT:INP:REF2	X
SEARCH:SEARCH1:TRIG:A:LOGI:PAT:INP:REF3	X
SEARCH:SEARCH1:TRIG:A:LOGI:PAT:INP:REF4	X
SEARCH:SEARCH1:TRIG:A:LOGI:PAT:WHE	TRU
SEARCH:SEARCH1:TRIG:A:LOGI:PAT:WHE:LESSL	8.0000E-9
SEARCH:SEARCH1:TRIG:A:LOGI:PAT:WHE:MOREL	8.0000E-9
SEARCH:SEARCH1:TRIG:A:LOGI:THR:CH1	0.0E+0
SEARCH:SEARCH1:TRIG:A:LOGI:THR:CH2	0.0E+0
SEARCH:SEARCH1:TRIG:A:LOGI:THR:CH3	0.0E+0
SEARCH:SEARCH1:TRIG:A:LOGI:THR:CH4	0.0E+0
SEARCH:SEARCH1:TRIG:A:LOGI:THR:MATH	0.0E+0
SEARCH:SEARCH1:TRIG:A:LOGI:THR:REF1	0.0E+0
SEARCH:SEARCH1:TRIG:A:LOGI:THR:REF2	0.0E+0
SEARCH:SEARCH1:TRIG:A:LOGI:THR:REF3	0.0E+0
SEARCH:SEARCH1:TRIG:A:LOGI:THR:REF4	0.0E+0
SEARCH:SEARCH1:TRIG:A:LOW:CH1	0.0E+0
SEARCH:SEARCH1:TRIG:A:LOW:CH2	0.0E+0
SEARCH:SEARCH1:TRIG:A:LOW:CH3	0.0E+0
SEARCH:SEARCH1:TRIG:A:LOW:CH4	0.0E+0
SEARCH:SEARCH1:TRIG:A:LOW:MATH	0.0E+0
SEARCH:SEARCH1:TRIG:A:LOW:REF1	0.0E+0
SEARCH:SEARCH1:TRIG:A:LOW:REF2	0.0E+0
SEARCH:SEARCH1:TRIG:A:LOW:REF3	0.0E+0
SEARCH:SEARCH1:TRIG:A:LOW:REF4	0.0E+0
SEARCH:SEARCH1:TRIG:A:PULSEW:POL	POS

Table C-1: Default values (cont.)

Command	Default value
SEARCH:SEARCH1:TRIG:A:PULSEW:WHE	LESS
SEARCH:SEARCH1:TRIG:A:PULSEW:WID	8.0000E-9
SEARCH:SEARCH1:TRIG:A:RUNT:POL	POS
SEARCH:SEARCH1:TRIG:A:RUNT:WHE	OCCURS
SEARCH:SEARCH1:TRIG:A:RUNT:WID	8.0000E-9
SEARCH:SEARCH1:TRIG:A:SETH:CLOC:EDGE	RIS
SEARCH:SEARCH1:TRIG:A:SETH:CLOC:SOU	CH1
SEARCH:SEARCH1:TRIG:A:SETH:CLOC:THR	0.0E+0
SEARCH:SEARCH1:TRIG:A:SETH:DAT:SOU	NONE
SEARCH:SEARCH1:TRIG:A:SETH:DAT:THR	9.9100E+37
SEARCH:SEARCH1:TRIG:A:SETH:HOLDT	8.0000E-9
SEARCH:SEARCH1:TRIG:A:SETH:SETT	8.0000E-9
SEARCH:SEARCH1:TRIG:A:SETH:THR:CH1	0.0E+0
SEARCH:SEARCH1:TRIG:A:SETH:THR:CH2	0.0E+0
SEARCH:SEARCH1:TRIG:A:SETH:THR:CH3	0.0E+0
SEARCH:SEARCH1:TRIG:A:SETH:THR:CH4	0.0E+0
SEARCH:SEARCH1:TRIG:A:SETH:THR:MATH	0.0E+0
SEARCH:SEARCH1:TRIG:A:SETH:THR:REF1	0.0E+0
SEARCH:SEARCH1:TRIG:A:SETH:THR:REF2	0.0E+0
SEARCH:SEARCH1:TRIG:A:SETH:THR:REF3	0.0E+0
SEARCH:SEARCH1:TRIG:A:SETH:THR:REF4	0.0E+0
SEARCH:SEARCH1:TRIG:A:TRAN:DELT	8.0000E-9
SEARCH:SEARCH1:TRIG:A:TRAN:POL	POS
SEARCH:SEARCH1:TRIG:A:TRAN:WHE	SLOW
SEARCH:SEARCH1:TRIG:A:TYP	EDG
SEARCH:SEARCH1:TRIG:A:UPP:CH1	800.0000E-3
SEARCH:SEARCH1:TRIG:A:UPP:CH2	800.0000E-3
SEARCH:SEARCH1:TRIG:A:UPP:CH3	800.0000E-3
SEARCH:SEARCH1:TRIG:A:UPP:CH4	800.0000E-3
SEARCH:SEARCH1:TRIG:A:UPP:MATH	800.0000E-3
SEARCH:SEARCH1:TRIG:A:UPP:REF1	800.0000E-3
SEARCH:SEARCH1:TRIG:A:UPP:REF2	800.0000E-3
SEARCH:SEARCH1:TRIG:A:UPP:REF3	800.0000E-3
SEARCH:SEARCH1:TRIG:A:UPP:REF4	800.0000E-3
SEL:BUS1	0
SEL:BUS2	0
SEL:BUS3	0

Table C-1: Default values (cont.)

Command	Default value
SEL:BUS4	0
SEL:CH1	1
SEL:CH2	0
SEL:CH3	0
SEL:CH4	0
SEL:CONTRO	CH1
SEL:D0	0
SEL:D1	0
SEL:D10	0
SEL:D11	0
SEL:D12	0
SEL:D13	0
SEL:D14	0
SEL:D15	0
SEL:D2	0
SEL:D3	0
SEL:D4	0
SEL:D5	0
SEL:D6	0
SEL:D7	0
SEL:D8	0
SEL:D9	0
SEL:MATH	0
SEL:REF1	0
SEL:REF2	0
SEL:REF3	0
SEL:REF4	0
SELECT:DALL	0
TRIG:A:BUS:B1:CAN:COND	SOF
TRIG:A:BUS:B1:CAN:DAT:DIR	NOCARE
TRIG:A:BUS:B1:CAN:DAT:QUAL	EQU
TRIG:A:BUS:B1:CAN:DAT:SIZ	1
TRIG:A:BUS:B1:CAN:DAT:STAR	0.0E+0
TRIG:A:BUS:B1:CAN:DAT:VAL	"XXXXXXXX"
TRIG:A:BUS:B1:CAN:FRAME	DATA
TRIG:A:BUS:B1:CAN:ID:MOD	ST
TRIG:A:BUS:B1:CAN:ID:VAL	"XXXXXXXXXXXX"

Table C-1: Default values (cont.)

Command	Default value
TRIG:A:BUS:B1:I2C:ADDR:MOD	ADDR7
TRIG:A:BUS:B1:I2C:ADDR:TYP	USER
TRIG:A:BUS:B1:I2C:ADDR:VAL	"XXXXXXX"
TRIG:A:BUS:B1:I2C:COND	STAR
TRIG:A:BUS:B1:I2C:DAT:DIR	NOCARE
TRIG:A:BUS:B1:I2C:DAT:SIZ	1
TRIG:A:BUS:B1:I2C:DAT:STAR	0.0E+0
TRIG:A:BUS:B1:I2C:DAT:VAL	"XXXXXXXX"
TRIG:A:BUS:B1:LIN:COND	SYNCF
TRIG:A:BUS:B1:LIN:DAT:HIVAL	"XXXXXXXX"
TRIG:A:BUS:B1:LIN:DAT:QUAL	EQU
TRIG:A:BUS:B1:LIN:DAT:SIZ	1
TRIG:A:BUS:B1:LIN:DAT:VAL	"XXXXXXXX"
TRIG:A:BUS:B1:LIN:ERRTYPE	SYNC
TRIG:A:BUS:B1:LIN:ID:VAL	"XXXXXX"
TRIG:A:BUS:B1:PAR:VAL	"XXXXXXXXXXXXXXXXXX"
TRIG:A:BUS:B1:RS232C:COND	TXSTA
TRIG:A:BUS:B1:RS232C:RX:DAT:SIZ	1
TRIG:A:BUS:B1:RS232C:RX:DAT:VAL	"XXXXXXXX"
TRIG:A:BUS:B1:RS232C:TX:DAT:SIZ	1
TRIG:A:BUS:B1:RS232C:TX:DAT:VAL	"XXXXXXXX"
TRIG:A:BUS:B1:SPI:COND	SS
TRIG:A:BUS:B1:SPI:DAT:IN:VAL	"XXXXXXXX"
TRIG:A:BUS:B1:SPI:DAT:OUT:VAL	"XXXXXXXX"
TRIG:A:BUS:B1:SPI:DAT:SIZ	1
TRIG:A:BUS:B1:SPI:DAT:STAR	0.0E+0
TRIG:A:BUS:B1:USB:ADDR:HIVAL	"XXXXXXX"
TRIG:A:BUS:B1:USB:ADDR:VAL	"XXXXXXX"
TRIG:A:BUS:B1:USB:COND	SYNC
TRIG:A:BUS:B1:USB:DAT:HIVAL	"XXXXXXXX"
TRIG:A:BUS:B1:USB:DAT:OFFS	-1
TRIG:A:BUS:B1:USB:DAT:SIZ	1
TRIG:A:BUS:B1:USB:DAT:TYP	ANY
TRIG:A:BUS:B1:USB:DAT:VAL	"XXXXXXXX"
TRIG:A:BUS:B1:USB:ENDP:VAL	"XXXX"
TRIG:A:BUS:B1:USB:ERRTYPE	PID
TRIG:A:BUS:B1:USB:HANDSHAKET	ANY

Table C-1: Default values (cont.)

Command	Default value
TRIG:A:BUS:B1:USB:QUAL	EQU
TRIG:A:BUS:B1:USB:SOFFRAMENUM	"XXXXXXXXXX"
TRIG:A:BUS:B1:USB:SPECIALT	ANY
TRIG:A:BUS:B1:USB:TOKENT	ANY
TRIG:A:BUS:B2:CAN:COND	SOF
TRIG:A:BUS:B2:CAN:DAT:DIR	NOCARE
TRIG:A:BUS:B2:CAN:DAT:QUAL	EQU
TRIG:A:BUS:B2:CAN:DAT:SIZ	1
TRIG:A:BUS:B2:CAN:DAT:STAR	0.0E+0
TRIG:A:BUS:B2:CAN:DAT:VAL	"XXXXXXXX"
TRIG:A:BUS:B2:CAN:FRAME	DATA
TRIG:A:BUS:B2:CAN:ID:MOD	ST
TRIG:A:BUS:B2:CAN:ID:VAL	"XXXXXXXXXX"
TRIG:A:BUS:B2:I2C:ADDR:MOD	ADDR7
TRIG:A:BUS:B2:I2C:ADDR:TYP	USER
TRIG:A:BUS:B2:I2C:ADDR:VAL	"XXXXXX"
TRIG:A:BUS:B2:I2C:COND	STAR
TRIG:A:BUS:B2:I2C:DAT:DIR	NOCARE
TRIG:A:BUS:B2:I2C:DAT:SIZ	1
TRIG:A:BUS:B2:I2C:DAT:STAR	0.0E+0
TRIG:A:BUS:B2:I2C:DAT:VAL	"XXXXXXXX"
TRIG:A:BUS:B2:LIN:COND	SYNCF
TRIG:A:BUS:B2:LIN:DAT:HIVAL	"XXXXXXXX"
TRIG:A:BUS:B2:LIN:DAT:QUAL	EQU
TRIG:A:BUS:B2:LIN:DAT:SIZ	1
TRIG:A:BUS:B2:LIN:DAT:VAL	"XXXXXXXX"
TRIG:A:BUS:B2:LIN:ERRTYPE	SYNC
TRIG:A:BUS:B2:LIN:ID:VAL	"XXXXXX"
TRIG:A:BUS:B2:PAR:VAL	"XXXXXXXXXXXXXXXXXX"
TRIG:A:BUS:B2:RS232C:COND	TXSTA
TRIG:A:BUS:B2:RS232C:RX:DAT:SIZ	1
TRIG:A:BUS:B2:RS232C:RX:DAT:VAL	"XXXXXXXX"
TRIG:A:BUS:B2:RS232C:TX:DAT:SIZ	1
TRIG:A:BUS:B2:RS232C:TX:DAT:VAL	"XXXXXXXX"
TRIG:A:BUS:B2:SPI:COND	SS
TRIG:A:BUS:B2:SPI:DAT:IN:VAL	"XXXXXXXX"
TRIG:A:BUS:B2:SPI:DAT:OUT:VAL	"XXXXXXXX"

Table C-1: Default values (cont.)

Command	Default value
TRIG:A:BUS:B2:SPI:DAT:SIZ	1
TRIG:A:BUS:B2:SPI:DAT:STAR	0.0E+0
TRIG:A:BUS:B2:USB:ADDR:HIVAL	"XXXXXXX"
TRIG:A:BUS:B2:USB:ADDR:VAL	"XXXXXXX"
TRIG:A:BUS:B2:USB:COND	SYNC
TRIG:A:BUS:B2:USB:DAT:HIVAL	"XXXXXXXX"
TRIG:A:BUS:B2:USB:DAT:OFFS	-1
TRIG:A:BUS:B2:USB:DAT:SIZ	1
TRIG:A:BUS:B2:USB:DAT:TYP	ANY
TRIG:A:BUS:B2:USB:DAT:VAL	"XXXXXXXX"
TRIG:A:BUS:B2:USB:ENDP:VAL	"XXXX"
TRIG:A:BUS:B2:USB:ERRTYPE	PID
TRIG:A:BUS:B2:USB:HANDSHAKET	ANY
TRIG:A:BUS:B2:USB:QUAL	EQU
TRIG:A:BUS:B2:USB:SOFFRAMENUM	"XXXXXXXXXXXX"
TRIG:A:BUS:B2:USB:SPECIALT	ANY
TRIG:A:BUS:B2:USB:TOKENT	ANY
TRIG:A:BUS:B3:CAN:COND	SOF
TRIG:A:BUS:B3:CAN:DAT:DIR	NOCARE
TRIG:A:BUS:B3:CAN:DAT:QUAL	EQU
TRIG:A:BUS:B3:CAN:DAT:SIZ	1
TRIG:A:BUS:B3:CAN:DAT:STAR	0.0E+0
TRIG:A:BUS:B3:CAN:DAT:VAL	"XXXXXXXX"
TRIG:A:BUS:B3:CAN:FRAME	DATA
TRIG:A:BUS:B3:CAN:ID:MOD	ST
TRIG:A:BUS:B3:CAN:ID:VAL	"XXXXXXXXXXXX"
TRIG:A:BUS:B3:I2C:ADDR:MOD	ADDR7
TRIG:A:BUS:B3:I2C:ADDR:TYP	USER
TRIG:A:BUS:B3:I2C:ADDR:VAL	"XXXXXXX"
TRIG:A:BUS:B3:I2C:COND	STAR
TRIG:A:BUS:B3:I2C:DAT:DIR	NOCARE
TRIG:A:BUS:B3:I2C:DAT:SIZ	1
TRIG:A:BUS:B3:I2C:DAT:STAR	0.0E+0
TRIG:A:BUS:B3:I2C:DAT:VAL	"XXXXXXXX"
TRIG:A:BUS:B3:LIN:COND	SYNCF
TRIG:A:BUS:B3:LIN:DAT:HIVAL	"XXXXXXXX"
TRIG:A:BUS:B3:LIN:DAT:QUAL	EQU

Table C-1: Default values (cont.)

Command	Default value
TRIG:A:BUS:B3:LIN:DAT:SIZ	1
TRIG:A:BUS:B3:LIN:DAT:VAL	"XXXXXXXX"
TRIG:A:BUS:B3:LIN:ERRTYPE	SYNC
TRIG:A:BUS:B3:LIN:ID:VAL	"XXXXXX"
TRIG:A:BUS:B3:PAR:VAL	"XXXXXXXXXXXXXXXXXX"
TRIG:A:BUS:B3:RS232C:COND	TXSTA
TRIG:A:BUS:B3:RS232C:RX:DAT:SIZ	1
TRIG:A:BUS:B3:RS232C:RX:DAT:VAL	"XXXXXXXX"
TRIG:A:BUS:B3:RS232C:TX:DAT:SIZ	1
TRIG:A:BUS:B3:RS232C:TX:DAT:VAL	"XXXXXXXX"
TRIG:A:BUS:B3:SPI:COND	SS
TRIG:A:BUS:B3:SPI:DAT:IN:VAL	"XXXXXXXX"
TRIG:A:BUS:B3:SPI:DAT:OUT:VAL	"XXXXXXXX"
TRIG:A:BUS:B3:SPI:DAT:SIZ	1
TRIG:A:BUS:B3:SPI:DAT:STAR	0.0E+0
TRIG:A:BUS:B3:USB:ADDR:HIVAL	"XXXXXX"
TRIG:A:BUS:B3:USB:ADDR:VAL	"XXXXXX"
TRIG:A:BUS:B3:USB:COND	SYNC
TRIG:A:BUS:B3:USB:DAT:HIVAL	"XXXXXXXX"
TRIG:A:BUS:B3:USB:DAT:OFFS	-1
TRIG:A:BUS:B3:USB:DAT:SIZ	1
TRIG:A:BUS:B3:USB:DAT:TYP	ANY
TRIG:A:BUS:B3:USB:DAT:VAL	"XXXXXXXX"
TRIG:A:BUS:B3:USB:ENDP:VAL	"XXXX"
TRIG:A:BUS:B3:USB:ERRTYPE	PID
TRIG:A:BUS:B3:USB:HANDSHAKET	ANY
TRIG:A:BUS:B3:USB:QUAL	EQU
TRIG:A:BUS:B3:USB:SOFFRAMENUM	"XXXXXXXXXXXX"
TRIG:A:BUS:B3:USB:SPECIALT	ANY
TRIG:A:BUS:B3:USB:TOKENT	ANY
TRIG:A:BUS:B4:CAN:COND	SOF
TRIG:A:BUS:B4:CAN:DAT:DIR	NOCARE
TRIG:A:BUS:B4:CAN:DAT:QUAL	EQU
TRIG:A:BUS:B4:CAN:DAT:SIZ	1
TRIG:A:BUS:B4:CAN:DAT:STAR	0.0E+0
TRIG:A:BUS:B4:CAN:DAT:VAL	"XXXXXXXX"
TRIG:A:BUS:B4:CAN:FRAME	DATA

Table C-1: Default values (cont.)

Command	Default value
TRIG:A:BUS:B4:CAN:ID:MOD	ST
TRIG:A:BUS:B4:CAN:ID:VAL	"XXXXXXXXXX"
TRIG:A:BUS:B4:I2C:ADDR:MOD	ADDR7
TRIG:A:BUS:B4:I2C:ADDR:TYP	USER
TRIG:A:BUS:B4:I2C:ADDR:VAL	"XXXXXXX"
TRIG:A:BUS:B4:I2C:COND	STAR
TRIG:A:BUS:B4:I2C:DAT:DIR	NOCARE
TRIG:A:BUS:B4:I2C:DAT:SIZ	1
TRIG:A:BUS:B4:I2C:DAT:STAR	0.0E+0
TRIG:A:BUS:B4:I2C:DAT:VAL	"XXXXXXXX"
TRIG:A:BUS:B4:LIN:COND	SYNCF
TRIG:A:BUS:B4:LIN:DAT:HIVAL	"XXXXXXXX"
TRIG:A:BUS:B4:LIN:DAT:QUAL	EQU
TRIG:A:BUS:B4:LIN:DAT:SIZ	1
TRIG:A:BUS:B4:LIN:DAT:VAL	"XXXXXXXX"
TRIG:A:BUS:B4:LIN:ERRTYPE	SYNC
TRIG:A:BUS:B4:LIN:ID:VAL	"XXXXXX"
TRIG:A:BUS:B4:PAR:VAL	"XXXXXXXXXXXXXXXXXX"
TRIG:A:BUS:B4:RS232C:COND	TXSTA
TRIG:A:BUS:B4:RS232C:RX:DAT:SIZ	1
TRIG:A:BUS:B4:RS232C:RX:DAT:VAL	"XXXXXXXX"
TRIG:A:BUS:B4:RS232C:TX:DAT:SIZ	1
TRIG:A:BUS:B4:RS232C:TX:DAT:VAL	"XXXXXXXX"
TRIG:A:BUS:B4:SPI:COND	SS
TRIG:A:BUS:B4:SPI:DAT:IN:VAL	"XXXXXXXX"
TRIG:A:BUS:B4:SPI:DAT:OUT:VAL	"XXXXXXXX"
TRIG:A:BUS:B4:SPI:DAT:SIZ	1
TRIG:A:BUS:B4:SPI:DAT:STAR	0.0E+0
TRIG:A:BUS:B4:USB:ADDR:HIVAL	"XXXXXXX"
TRIG:A:BUS:B4:USB:ADDR:VAL	"XXXXXXX"
TRIG:A:BUS:B4:USB:COND	SYNC
TRIG:A:BUS:B4:USB:DAT:HIVAL	"XXXXXXXX"
TRIG:A:BUS:B4:USB:DAT:OFFS	-1
TRIG:A:BUS:B4:USB:DAT:SIZ	1
TRIG:A:BUS:B4:USB:DAT:TYP	ANY
TRIG:A:BUS:B4:USB:DAT:VAL	"XXXXXXXX"
TRIG:A:BUS:B4:USB:ENDP:VAL	"XXXX"

Table C-1: Default values (cont.)

Command	Default value
TRIG:A:BUS:B4:USB:ERRTYPE	PID
TRIG:A:BUS:B4:USB:HANDSHAKET	ANY
TRIG:A:BUS:B4:USB:QUAL	EQU
TRIG:A:BUS:B4:USB:SOFFRAMENUM	"XXXXXXXXXXXX"
TRIG:A:BUS:B4:USB:SPECIALT	ANY
TRIG:A:BUS:B4:USB:TOKENT	ANY
TRIG:A:BUS:SOU	B1
TRIG:A:EDGE:COUP	DC
TRIG:A:EDGE:SLO	RIS
TRIG:A:EDGE:SOU	CH1
TRIG:A:HOLD:TIM	20.0000E-9
TRIG:A:LEV	0.0E+0
TRIG:A:LEV:AUX	0.0E+0
TRIG:A:LEV:CH1	0.0E+0
TRIG:A:LEV:CH2	0.0E+0
TRIG:A:LEV:CH3	0.0E+0
TRIG:A:LEV:CH4	0.0E+0
TRIG:A:LEV:D0	1.4000
TRIG:A:LEV:D1	1.4000
TRIG:A:LEV:D10	1.4000
TRIG:A:LEV:D11	1.4000
TRIG:A:LEV:D12	1.4000
TRIG:A:LEV:D13	1.4000
TRIG:A:LEV:D14	1.4000
TRIG:A:LEV:D15	1.4000
TRIG:A:LEV:D2	1.4000
TRIG:A:LEV:D3	1.4000
TRIG:A:LEV:D4	1.4000
TRIG:A:LEV:D5	1.4000
TRIG:A:LEV:D6	1.4000
TRIG:A:LEV:D7	1.4000
TRIG:A:LEV:D8	1.4000
TRIG:A:LEV:D9	1.4000
TRIG:A:LOGI:CLA	LOGIC
TRIG:A:LOGI:FUNC	AND
TRIG:A:LOGI:INP:CH1	X
TRIG:A:LOGI:INP:CH2	X

Table C-1: Default values (cont.)

Command	Default value
TRIG:A:LOGI:INP:CH3	X
TRIG:A:LOGI:INP:CH4	X
TRIG:A:LOGI:INP:CLOC:EDGE	RIS
TRIG:A:LOGI:INP:CLOC:SOU	NON
TRIG:A:LOGI:INP:D0	X
TRIG:A:LOGI:INP:D1	X
TRIG:A:LOGI:INP:D10	X
TRIG:A:LOGI:INP:D11	X
TRIG:A:LOGI:INP:D12	X
TRIG:A:LOGI:INP:D13	X
TRIG:A:LOGI:INP:D14	X
TRIG:A:LOGI:INP:D15	X
TRIG:A:LOGI:INP:D2	X
TRIG:A:LOGI:INP:D3	X
TRIG:A:LOGI:INP:D4	X
TRIG:A:LOGI:INP:D5	X
TRIG:A:LOGI:INP:D6	X
TRIG:A:LOGI:INP:D7	X
TRIG:A:LOGI:INP:D8	X
TRIG:A:LOGI:INP:D9	X
TRIG:A:LOGI:PAT:DELT	8.0000E-9
TRIG:A:LOGI:PAT:WHE	TRU
TRIG:A:LOGI:PAT:WHE:LESSL	8.0000E-9
TRIG:A:LOGI:PAT:WHE:MOREL	8.0000E-9
TRIG:A:LOGI:THR:CH1	0.0E+0
TRIG:A:LOGI:THR:CH2	0.0E+0
TRIG:A:LOGI:THR:CH3	0.0E+0
TRIG:A:LOGI:THR:CH4	0.0E+0
TRIG:A:LOGI:THR:D0	1.4000
TRIG:A:LOGI:THR:D1	1.4000
TRIG:A:LOGI:THR:D10	1.4000
TRIG:A:LOGI:THR:D11	1.4000
TRIG:A:LOGI:THR:D12	1.4000
TRIG:A:LOGI:THR:D13	1.4000
TRIG:A:LOGI:THR:D14	1.4000
TRIG:A:LOGI:THR:D15	1.4000
TRIG:A:LOGI:THR:D2	1.4000

Table C-1: Default values (cont.)

Command	Default value
TRIG:A:LOGI:THR:D3	1.4000
TRIG:A:LOGI:THR:D4	1.4000
TRIG:A:LOGI:THR:D5	1.4000
TRIG:A:LOGI:THR:D6	1.4000
TRIG:A:LOGI:THR:D7	1.4000
TRIG:A:LOGI:THR:D8	1.4000
TRIG:A:LOGI:THR:D9	1.4000
TRIG:A:LOW:CH1	0.0E+0
TRIG:A:LOW:CH2	0.0E+0
TRIG:A:LOW:CH3	0.0E+0
TRIG:A:LOW:CH4	0.0E+0
TRIG:A:LOW:D0	1.4000
TRIG:A:LOW:D1	1.4000
TRIG:A:LOW:D10	1.4000
TRIG:A:LOW:D11	1.4000
TRIG:A:LOW:D12	1.4000
TRIG:A:LOW:D13	1.4000
TRIG:A:LOW:D14	1.4000
TRIG:A:LOW:D15	1.4000
TRIG:A:LOW:D2	1.4000
TRIG:A:LOW:D3	1.4000
TRIG:A:LOW:D4	1.4000
TRIG:A:LOW:D5	1.4000
TRIG:A:LOW:D6	1.4000
TRIG:A:LOW:D7	1.4000
TRIG:A:LOW:D8	1.4000
TRIG:A:LOW:D9	1.4000
TRIG:A:LOW:EXT	0.0E+0
TRIG:A:MOD	AUTO
TRIG:A:PUL:CLA	WID
TRIG:A:PULSEW:POL	POS
TRIG:A:PULSEW:WHE	LESS
TRIG:A:PULSEW:WID	8.0000E-9
TRIG:A:RUNT:POL	POS
TRIG:A:RUNT:WHE	OCCURS
TRIG:A:RUNT:WID	8.0000E-9
TRIG:A:SETH:CLOC:EDGE	RIS

Table C-1: Default values (cont.)

Command	Default value
TRIG:A:SETH:CLOC:SOU	CH1
TRIG:A:SETH:CLOC:THR	0.0E+0
TRIG:A:SETH:DAT:SOU	NONE
TRIG:A:SETH:DAT:THR	9.9100E+37
TRIG:A:SETH:HOLDT	8.0000E-9
TRIG:A:SETH:SETT	8.0000E-9
TRIG:A:SETH:THR:CH1	0.0E+0
TRIG:A:SETH:THR:CH2	0.0E+0
TRIG:A:SETH:THR:CH3	0.0E+0
TRIG:A:SETH:THR:CH4	0.0E+0
TRIG:A:SETH:THR:D0	1.4000
TRIG:A:SETH:THR:D1	1.4000
TRIG:A:SETH:THR:D10	1.4000
TRIG:A:SETH:THR:D11	1.4000
TRIG:A:SETH:THR:D12	1.4000
TRIG:A:SETH:THR:D13	1.4000
TRIG:A:SETH:THR:D14	1.4000
TRIG:A:SETH:THR:D15	1.4000
TRIG:A:SETH:THR:D2	1.4000
TRIG:A:SETH:THR:D3	1.4000
TRIG:A:SETH:THR:D4	1.4000
TRIG:A:SETH:THR:D5	1.4000
TRIG:A:SETH:THR:D6	1.4000
TRIG:A:SETH:THR:D7	1.4000
TRIG:A:SETH:THR:D8	1.4000
TRIG:A:SETH:THR:D9	1.4000
TRIG:A:TRAN:DELT	8.0000E-9
TRIG:A:TRAN:POL	POS
TRIG:A:TRAN:WHE	SLOW
TRIG:A:TYP	EDG
TRIG:A:UPP:CH1	800.0000E-3
TRIG:A:UPP:CH2	800.0000E-3
TRIG:A:UPP:CH3	800.0000E-3
TRIG:A:UPP:CH4	800.0000E-3
TRIG:A:VID:HOLD:FIELD	0.0E+0
TRIG:A:VID:LINE	1
TRIG:A:VID:POL	POS

Table C-1: Default values (cont.)

Command	Default value
TRIG:A:VID:STAN	NTS
TRIG:A:VID:SYNC	ALLL
TRIG:B:BY	TIM
TRIG:B:EDGE:COUP	DC
TRIG:B:EDGE:SLO	RIS
TRIG:B:EDGE:SOU	CH1
TRIG:B:EVENTS:COUN	1
TRIG:B:LEV	0.0E+0
TRIG:B:LEV:CH1	0.0E+0
TRIG:B:LEV:CH2	0.0E+0
TRIG:B:LEV:CH3	0.0E+0
TRIG:B:LEV:CH4	0.0E+0
TRIG:B:LEV:D0	1.4000
TRIG:B:LEV:D1	1.4000
TRIG:B:LEV:D10	1.4000
TRIG:B:LEV:D11	1.4000
TRIG:B:LEV:D12	1.4000
TRIG:B:LEV:D13	1.4000
TRIG:B:LEV:D14	1.4000
TRIG:B:LEV:D15	1.4000
TRIG:B:LEV:D2	1.4000
TRIG:B:LEV:D3	1.4000
TRIG:B:LEV:D4	1.4000
TRIG:B:LEV:D5	1.4000
TRIG:B:LEV:D6	1.4000
TRIG:B:LEV:D7	1.4000
TRIG:B:LEV:D8	1.4000
TRIG:B:LEV:D9	1.4000
TRIG:B:LOW:CH1	0.0E+0
TRIG:B:LOW:CH2	0.0E+0
TRIG:B:LOW:CH3	0.0E+0
TRIG:B:LOW:CH4	0.0E+0
TRIG:B:LOW:D0	1.4000
TRIG:B:LOW:D1	1.4000
TRIG:B:LOW:D10	1.4000
TRIG:B:LOW:D11	1.4000
TRIG:B:LOW:D12	1.4000

Table C-1: Default values (cont.)

Command	Default value
TRIG:B:LOW:D13	1.4000
TRIG:B:LOW:D14	1.4000
TRIG:B:LOW:D15	1.4000
TRIG:B:LOW:D2	1.4000
TRIG:B:LOW:D3	1.4000
TRIG:B:LOW:D4	1.4000
TRIG:B:LOW:D5	1.4000
TRIG:B:LOW:D6	1.4000
TRIG:B:LOW:D7	1.4000
TRIG:B:LOW:D8	1.4000
TRIG:B:LOW:D9	1.4000
TRIG:B:STATE	0
TRIG:B:TIM	8.0000E-9
TRIG:B:TYP	EDG
TRIG:B:UPP:CH1	800.0000E-3
TRIG:B:UPP:CH2	800.0000E-3
TRIG:B:UPP:CH3	800.0000E-3
TRIG:B:UPP:CH4	800.0000E-3
TRIG:EXT:PRO	1.0000
VERB	0
ZOO:MOD	0
ZOO:ZOOM1:HOR:POS	50.0000
ZOO:ZOOM1:HOR:SCA	4.0000E-6
ZOO:ZOOM1:POS	50.0000
ZOO:ZOOM1:SCA	4.0000E-6
ZOO:ZOOM1:STATE	0

Appendix D: Programming Example

The following series of commands and queries illustrate many of the most common commands and techniques. In this example, data sent from the controller computer to the oscilloscope is prefaced with the > symbol. Replies from the oscilloscope have no preface.

> rem "Check for any messages, and clear them from the queue."

> *esr?

128

> allev?

:ALLEV 401,"Power on; "

> rem "Set the scope to the default state."

> factory

> rem "Set the scope parameters that differ from the defaults."

> chl:scale 2.0

> hor:m:scale 100e-6

> trig:a:level 2.4

> rem "Start a single sequence acquisition."

> acquire:stopafter sequence

> acquire:state on

> rem "Wait for the acquisition to complete."

> rem "Note: your controller program time-out must be set long enough to handle the wait."

> *opc?

1

> rem "Use the oscilloscope built-in measurements to measure the waveform you acquired."

> measu:immed:type mean

> measu:immed:value?

:MEASUREMENT:IMMED:VALUE 1.2767

```
> rem "Be sure to use the *esr? query to check for measurement errors."
> measu:immed:type freq
> measu:immed:value
:MEASUREMENT:IMMED:VALUE 9.9100E+37
> *esr?
16
> allev?
:ALLEV 2202,"Measurement error, No period found "

> rem "Query out the waveform points, for later analysis on your controller
computer."
> data:encdg ascii
> curve?
:CURVE 7,6,5,5,5,6,6,8 [...]

> rem "Query out the parameters used for calculating the times and voltages of
the waveform points."
> wfmpre?
:WFMPRE:BYT_NR 1;BIT_NR 8;ENCDG ASCII;BN_FMT RI;BYT_OR
MSB;NR_PT 10000; [...]
```

Index

A

ACQuire?, 2-71
ACQuire:MAGnivu, 2-71
ACQuire:MAXSamplerate?, 2-72
ACQuire:MODE, 2-72
ACQuire:NUMACq?, 2-73
ACQuire:NUMAVg, 2-73
ACQuire:STATE, 2-74
ACQuire:STOPAfter, 2-75
Acquisition Command Group, 2-11
Alias Command Group, 2-12
ALias, 2-75
ALias[:STATE], 2-78
ALias:CATalog?, 2-76
ALias:DEFine, 2-76
ALias:DELEte, 2-77
ALias:DELEte[:NAME], 2-78
ALias:DELEte:ALL, 2-78
ALLEv?, 2-79
AUTOSet, 2-79
AUTOSet:ENable, 2-80
AUXin?, 2-80
AUXin:PRObe, 2-80
AUXin:PRObe:AUTOZero, 2-81
AUXin:PRObe:COMMAND, 2-81
AUXin:PRObe:DEGAUss, 2-82
AUXin:PRObe:DEGAUss:STATE?, 2-82
AUXin:PRObe:FORCEDRange, 2-82
AUXin:PRObe:GAIN, 2-83
AUXin:PRObe:ID:SERnumber?, 2-83
AUXin:PRObe:ID:TYPE?, 2-83
AUXin:PRObe:RESistance?, 2-83
AUXin:PRObe:SIGNAL, 2-84
AUXin:PRObe:UNIts?, 2-84

B

BUS?, 2-85
BUS:B<x>:AUDio:BITDelay, 2-85
BUS:B<x>:AUDio:BITOrder, 2-85
BUS:B<x>:AUDio:CHANnel:SIZE, 2-86
BUS:B<x>:AUDio:CLOCK:POLarity, 2-86
BUS:B<x>:AUDio:CLOCK:SOUrce, 2-87
BUS:B<x>:AUDio:DATA:POLarity, 2-88

BUS:B<x>:AUDio:DATA:SIZE, 2-88
BUS:B<x>:AUDio:DATA:SOUrce, 2-89
BUS:B<x>:AUDio:DISplay:FORMat, 2-89
BUS:B<x>:AUDio:FRAME:SIZE, 2-90
BUS:B<x>:AUDio:FRAMESync:POLarity, 2-90
BUS:B<x>:AUDio:FRAMESync:SOUrce, 2-91
BUS:B<x>:AUDio:TYPE, 2-91
BUS:B<x>:AUDio:WORDSel:POLarity, 2-92
BUS:B<x>:AUDio:WORDSel:SOUrce, 2-92
BUS:B<x>:CAN:BITRate, 2-93
BUS:B<x>:CAN:PRObe, 2-94
BUS:B<x>:CAN:SAMPLEpoint, 2-94
BUS:B<x>:CAN:SOUrce, 2-94
BUS:B<x>:DISplay:FORMat, 2-95
BUS:B<x>:DISplay:TYPE, 2-96
BUS:B<x>:FLEXray:BITRate, 2-96
BUS:B<x>:FLEXray:CHannel, 2-97
BUS:B<x>:FLEXray:SIGNAL, 2-97
BUS:B<x>:FLEXray:SOUrce, 2-98
BUS:B<x>:I2C{:CLOCK|:SCLK}:SOUrce, 2-99
BUS:B<x>:I2C{:DATA|:SDATA}:SOUrce, 2-99
BUS:B<x>:I2C:ADDRESS:RWINClude, 2-98
BUS:B<x>:LABel, 2-99
BUS:B<x>:LIN:BITRate, 2-100
BUS:B<x>:LIN:IDFORmat, 2-100
BUS:B<x>:LIN:POLARity, 2-101
BUS:B<x>:LIN:SAMPLEpoint, 2-101
BUS:B<x>:LIN:SOUrce, 2-102
BUS:B<x>:LIN:STANDard, 2-102
BUS:B<x>:PARallel:BIT<x>:SOUrce, 2-103
BUS:B<x>:PARallel:CLOCK:EDGE, 2-103
BUS:B<x>:PARallel:CLOCK:ISCLOCKed, 2-103
BUS:B<x>:PARallel:CLOCK:SOUrce, 2-104
BUS:B<x>:PARallel:WIDTH, 2-104
BUS:B<x>:POSition, 2-104
BUS:B<x>:RS232C:BITRate, 2-105
BUS:B<x>:RS232C:DATABits, 2-105
BUS:B<x>:RS232C:DELIMiter, 2-106
BUS:B<x>:RS232C:DISplaymode, 2-106
BUS:B<x>:RS232C:PARity, 2-106
BUS:B<x>:RS232C:POLarity, 2-107
BUS:B<x>:RS232C:RX:SOUrce, 2-107
BUS:B<x>:RS232C:TX:SOUrce, 2-108
BUS:B<x>:SPI{:CLOCK|:SCLK}:POLARity, 2-109

BUS:B<x>:SPI{CLOCK|SCLK}:SOURCE, 2-109
 BUS:B<x>:SPI{SELECT|SS}:POLARITY, 2-112
 BUS:B<x>:SPI{SELECT|SS}:SOURCE, 2-112
 BUS:B<x>:SPI:BITOrder, 2-108
 BUS:B<x>:SPI:DATA{IN|MISO}:POLARITY, 2-109
 BUS:B<x>:SPI:DATA{IN|MISO}:SOURCE, 2-110
 BUS:B<x>:SPI:DATA{OUT|MOSI}:
 POLARITY, 2-110
 BUS:B<x>:SPI:DATA{OUT|MOSI}:SOURCE, 2-110
 BUS:B<x>:SPI:DATA:SIZE, 2-111
 BUS:B<x>:SPI:FRAMING, 2-111
 BUS:B<x>:SPI:IDLETime, 2-112
 BUS:B<x>:STATE, 2-113
 BUS:B<x>:TYPE, 2-113
 BUS:B<x>:USB:BITRate, 2-114
 BUS:B<x>:USB:PROBE, 2-114
 BUS:B<x>:USB:SOURCE:DIFFERENTIAL, 2-115
 BUS:B<x>:USB:SOURCE:DMINUS, 2-115
 BUS:B<x>:USB:SOURCE:DPLUS, 2-116
 BUS:LOWerthreshold:CH<x>, 2-116
 BUS:THReshold:CH<x>, 2-117
 BUS:THReshold:D<x>, 2-117
 BUS:UPPerthreshold:CH<x>, 2-118
 BUSY?, 2-118

C

*CAL?, 2-119
 CALibrate:FACTory:STATus?, 2-119
 CALibrate:INTERNAL, 2-120
 CALibrate:INTERNAL:START, 2-120
 CALibrate:INTERNAL:STATus?, 2-120
 CALibrate:RESults?, 2-121
 CALibrate:RESults:FACTory?, 2-121
 CALibrate:RESults:SPC?, 2-122
 Calibration and Diagnostic Command Group, 2-17
 CH<x>?, 2-122
 CH<x>:AMPSVIAVOLTS:ENABLE, 2-122
 CH<x>:AMPSVIAVOLTS:FACTOR, 2-123
 CH<x>:BANdwidth, 2-123
 CH<x>:COUpling, 2-124
 CH<x>:DESKew, 2-124
 CH<x>:INVert, 2-125
 CH<x>:LABel, 2-125
 CH<x>:OFFSet, 2-126
 CH<x>:POSition, 2-127
 CH<x>:PRObe?, 2-128
 CH<x>:PRObe:AUTOZero, 2-128
 CH<x>:PRObe:COMMAND, 2-128
 CH<x>:PRObe:DEGAUss, 2-129
 CH<x>:PRObe:DEGAUss:STATE?, 2-129
 CH<x>:PRObe:FORCEDRange, 2-129
 CH<x>:PRObe:GAIN, 2-130
 CH<x>:PRObe:ID?, 2-130
 CH<x>:PRObe:ID:SERnumber?, 2-131
 CH<x>:PRObe:ID:TYPE?, 2-131
 CH<x>:PRObe:MODEl, 2-132
 CH<x>:PRObe:PROPDELay, 2-132
 CH<x>:PRObe:RECDESkew?, 2-132
 CH<x>:PRObe:RESistance?, 2-133
 CH<x>:PRObe:SIGNAL, 2-133
 CH<x>:PRObe:UNIts?, 2-133
 CH<x>:SCALE, 2-134
 CH<x>:TERmination, 2-135
 CH<x>:YUNits, 2-135
 CLEARMenu, 2-136
 *CLS, 2-136
 Command Groups, 2-11
 Cursor Command Group, 2-17
 CURSor?, 2-136
 CURSor:DDT?, 2-137
 CURSor:FUNCTion, 2-137
 CURSor:HBArs?, 2-138
 CURSor:HBArs:DELTA?, 2-138
 CURSor:HBArs:POSITION<x>, 2-138
 CURSor:HBArs:UNIts, 2-139
 CURSor:HBArs:USE, 2-139
 CURSor:MODE, 2-140
 CURSor:VBArS?, 2-140
 CURSor:VBArS:ALTERNATE<x>?, 2-141
 CURSor:VBArS:DELTA?, 2-141
 CURSor:VBArS:HPOS<x>?, 2-142
 CURSor:VBArS:POSITION<x>, 2-142
 CURSor:VBArS:UNIts, 2-143
 CURSor:VBArS:USE, 2-143
 CURSor:VBArS:VDELTA?, 2-144
 CURSor:XY:POLar:RADIUS:DELTA?, 2-144
 CURSor:XY:POLar:RADIUS:POSITION<x>?, 2-145
 CURSor:XY:POLar:RADIUS:UNIts?, 2-145
 CURSor:XY:POLar:THETA:DELTA?, 2-145
 CURSor:XY:POLar:THETA:POSITION<x>?, 2-145
 CURSor:XY:POLar:THETA:UNIts?, 2-146
 CURSor:XY:PRODUCT:DELTA?, 2-146
 CURSor:XY:PRODUCT:POSITION<x>?, 2-146
 CURSor:XY:PRODUCT:UNIts?, 2-146

CURSor:XY:RATIO:DELta?, 2-147
 CURSor:XY:RATIO:POSITION<x>?, 2-147
 CURSor:XY:RATIO:UNIts?, 2-147
 CURSor:XY:READOUT, 2-147
 CURSor:XY:RECTangular:X:DELta?, 2-148
 CURSor:XY:RECTangular:X:POSITION<x>, 2-148
 CURSor:XY:RECTangular:X:UNIts?, 2-148
 CURSor:XY:RECTangular:Y:DELta?, 2-148
 CURSor:XY:RECTangular:Y:POSITION<x>, 2-149
 CURSor:XY:RECTangular:Y:UNIts?, 2-149
 CURVe, 2-149

D

D<x>, 2-167
 D<x>:LABel, 2-167
 D<x>:POSition, 2-168
 D<x>:THREshold, 2-168
 DATa, 2-151
 DATa:DESTination, 2-151
 DATa:ENCdg, 2-152
 DATa:SOUrce, 2-153
 DATa:STARt, 2-154
 DATa:STOP, 2-155
 DATE, 2-156
 *DDT, 2-156
 DESE, 2-157
 DESkew, 2-158
 DESkew:DISPlay, 2-158
 DIAg:LOOP:OPTion, 2-158
 DIAg:LOOP:OPTion:NTIMes, 2-159
 DIAg:LOOP:STOP, 2-159
 DIAg:RESUlt:FLAg?, 2-160
 DIAg:RESUlt:LOG?, 2-160
 DIAg:SELEct, 2-161
 DIAg:SELEct:<function>, 2-161
 DIAg:STATE, 2-162
 Display Command Group, 2-19
 DISplay?, 2-162
 DISplay:CLOCk, 2-162
 DISplay:DIGital:HEIght, 2-163
 DISplay:FORMat, 2-163
 DISplay:GRAticule, 2-164
 DISplay:INTENSITy?, 2-164
 DISplay:INTENSITy:BACKLight, 2-165
 DISplay:INTENSITy:GRAticule, 2-165
 DISplay:INTENSITy:WAVEform, 2-165

DISplay:PERSistence, 2-166
 DISplay:STYle:DOTsonly, 2-167

E

*ESE, 2-169
 *ESR?, 2-169
 Ethernet Command Group, 2-20
 ETHERnet:DHCPbootp, 2-170
 ETHERnet:DNS:IPADdress, 2-170
 ETHERnet:DOMAINname, 2-171
 ETHERnet:ENET:ADDress?, 2-171
 ETHERnet:GATEWay:IPADdress, 2-171
 ETHERnet:HTTTPort, 2-172
 ETHERnet:IPADdress, 2-172
 ETHERnet:NAME, 2-173
 ETHERnet:PASSWord, 2-173
 ETHERnet:PING, 2-173
 ETHERnet:PING:STATUS?, 2-174
 ETHERnet:SUBNETMask, 2-174
 EVENT?, 2-174
 EVMsg?, 2-175
 EVQty?, 2-175

F

FACTory, 2-176
 File System Command Group, 2-21
 FILESystem?, 2-177
 FILESystem:CWD, 2-177
 FILESystem:DELEte, 2-178
 FILESystem:DIR?, 2-179
 FILESystem:FORMat, 2-179
 FILESystem:FREESpace?, 2-180
 FILESystem:LDIR?, 2-180
 FILESystem:MKDir, 2-181
 FILESystem:READFile, 2-181
 FILESystem:REName, 2-182
 FILESystem:RMDir, 2-182
 FILESystem:WRITEFile, 2-183
 FPAneL:PRESS, 2-183
 FPAneL:TURN, 2-185

G

GPIBUsb:ADDress?, 2-186
 GPIBUsb.ID?, 2-186

H

Hard copy Command Group, 2-22
HARDCopy, 2-186
HARDCopy:ACTIVEprinter, 2-187
HARDCopy:INKSaver, 2-187
HARDCopy:LAYout, 2-188
HARDCopy:PREVIEW, 2-188
HARDCopy:PRINTer:ADD, 2-189
HARDCopy:PRINTer:DELEte, 2-189
HARDCopy:PRINTer:LIST?, 2-189
HARDCopy:PRINTer:REName, 2-189
HEADer, 2-190
Histogram Command Group, 2-24
HISTogram?, 2-191
HISTogram:BOX, 2-191
HISTogram:BOXPcnt, 2-192
HISTogram:COUNt, 2-193
HISTogram:DATA?, 2-193
HISTogram:DISPlay, 2-194
HISTogram:END?, 2-195
HISTogram:MODE, 2-195
HISTogram:SOUrce, 2-196
HISTogram:STARt?, 2-197
Horizontal Command Group, 2-24
HORizontal?, 2-197
HORizontal:DELAy:MODE, 2-198
HORizontal:DELAy:TIME, 2-198
HORizontal:DIGital:RECOrdlength:
 MAGnivu?, 2-199
HORizontal:DIGital:RECOrdlength:MAIN?, 2-199
HORizontal:DIGital:SAMPLERate:MAGnivu?, 2-199
HORizontal:DIGital:SAMPLERate:MAIN?, 2-199
HORizontal:POSition, 2-200
HORizontal:PREViewstate?, 2-200
HORizontal:RECOrdlength, 2-200
HORizontal:SAMPLERate, 2-201
HORizontal:SCAle, 2-201

I

ID?, 2-202
*IDN?, 2-202

L

LANGUage, 2-202
LOCK, 2-203
*LRN?, 2-203

M

Mark Command Group, 2-25
MARK, 2-205
MARK:CREATE, 2-205
MARK:DELEte, 2-205
MARK:FREE?, 2-206
MARK:SELEcted:END?, 2-206
MARK:SELEcted:FOCUS?, 2-206
MARK:SELEcted:MARKSINCOLumn?, 2-207
MARK:SELEcted:OWNeR?, 2-207
MARK:SELEcted:SOURCE?, 2-207
MARK:SELEcted:STARt?, 2-207
MARK:SELEcted:STAtE?, 2-208
MARK:SELEcted:ZOOm:POSition?, 2-208
MARK:TOTal?, 2-208
Math Command Group, 2-26
MATH[1]?, 2-209
MATH[1]:DEFine, 2-209
MATH[1]:HORizontal:POSition, 2-211
MATH[1]:HORizontal:SCAle, 2-211
MATH[1]:HORizontal:UNIts, 2-211
MATH[1]:SPECTral:MAG, 2-212
MATH[1]:SPECTral:WINDow, 2-212
MATH[1]:TYPE, 2-213
MATH[1]:VERTical:POSition, 2-213
MATH[1]:VERTical:SCAle, 2-214
MATH[1]:VERTical:UNIts, 2-214
{MATH|MATH1}:LABel, 2-208
MATHVAR?, 2-215
MATHVAR:VAR<x>, 2-215
Measurement Command Group, 2-27
MEASUrement?, 2-216
MEASUrement:CLEARSNapshot, 2-217
MEASUrement:GATing, 2-217
MEASUrement:IMMed?, 2-217
MEASUrement:IMMed:DELAy?, 2-218
MEASUrement:IMMed:DELAy:DIRection, 2-218
MEASUrement:IMMed:DELAy:EDGE<x>, 2-219
MEASUrement:IMMed:SOUrce<x>, 2-219
MEASUrement:IMMed:TYPE, 2-220
MEASUrement:IMMed:UNIts?, 2-223
MEASUrement:IMMed:VALue?, 2-225
MEASUrement:INDICators?, 2-226
MEASUrement:INDICators:HORZ<x>?, 2-226
MEASUrement:INDICators:NUMHORZ?, 2-226
MEASUrement:INDICators:NUMVERT?, 2-227
MEASUrement:INDICators:STAtE, 2-227

MEASUrement:INDICators:VERT<x>?, 2-228
 MEASUrement:MEAS<x>?, 2-228
 MEASUrement:MEAS<x>:COUNT?, 2-228
 MEASUrement:MEAS<x>:DELay?, 2-229
 MEASUrement:MEAS<x>:DELay:DIRection, 2-229
 MEASUrement:MEAS<x>:DELay:EDGE<x>, 2-230
 MEASUrement:MEAS<x>:MAXimum?, 2-230
 MEASUrement:MEAS<x>:MEAN?, 2-231
 MEASUrement:MEAS<x>:MINimum?, 2-231
 MEASUrement:MEAS<x>:SOUrce<x>, 2-231
 MEASUrement:MEAS<x>:STATE, 2-232
 MEASUrement:MEAS<x>:STDdev?, 2-233
 MEASUrement:MEAS<x>:TYPE, 2-233
 MEASUrement:MEAS<x>:UNIts?, 2-236
 MEASUrement:MEAS<x>:VALue?, 2-238
 MEASUrement:METHod, 2-239
 MEASUrement:REFLevel?, 2-239
 MEASUrement:REFLevel:ABSolute:HIGH, 2-240
 MEASUrement:REFLevel:ABSolute:LOW, 2-240
 MEASUrement:REFLevel:ABSolute:MID, 2-241
 MEASUrement:REFLevel:ABSolute:MID<x>, 2-242
 MEASUrement:REFLevel:ABSolute:MID2, 2-242
 MEASUrement:REFLevel:METHod, 2-243
 MEASUrement:REFLevel:PERCent:HIGH, 2-243
 MEASUrement:REFLevel:PERCent:LOW, 2-244
 MEASUrement:REFLevel:PERCent:MID, 2-245
 MEASUrement:REFLevel:PERCent:MID<x>, 2-246
 MEASUrement:REFLevel:PERCent:MID2, 2-245
 MEASUrement:SNAPShot, 2-246
 MEASUrement:STATIstics, 2-247
 MEASUrement:STATIstics:MODE, 2-247
 MEASUrement:STATIstics:WEIghting, 2-248
 MESSage, 2-248
 MESSage:BOX, 2-248
 MESSage:CLEAR, 2-249
 MESSage:SHOW, 2-250
 MESSage:STATE, 2-252
 Miscellaneous Command Group, 2-30

N

NEWpass, 2-253

O

*OPC, 2-253

P

PASSWord, 2-254
 PICTBridge:DATEPrint, 2-254
 PICTBridge:DEFault, 2-255
 PICTBridge:IDPrint, 2-255
 PICTBridge:IMAGESize, 2-256
 PICTBridge:PAPERSize, 2-257
 PICTBridge:PAPERType, 2-258
 PICTBridge:PRINTQual, 2-259
 POWER:CURRENTSource, 2-259
 POWER:DISPlay, 2-260
 POWER:GATESource, 2-260
 POWER:GATing, 2-261
 POWER:HARMonics:DISPlay:SElect, 2-261
 POWER:HARMonics:DISPlay:TYPE, 2-262
 POWER:HARMonics:FREQRef, 2-262
 POWER:HARMonics:FREQRef:
 FIXEDFREQValue, 2-263
 POWER:HARMonics:IEC:CLAss, 2-263
 POWER:HARMonics:IEC:FILter, 2-264
 POWER:HARMonics:IEC:FUNDamental, 2-265
 POWER:HARMonics:IEC:GROUPing, 2-265
 POWER:HARMonics:IEC:INPUTPOWER, 2-266
 POWER:HARMonics:IEC:LINEFREQuency, 2-266
 POWER:HARMonics:IEC:OBSPERiod, 2-267
 POWER:HARMonics:IEC:POWERFACtor, 2-267
 POWER:HARMonics:MIL:FUNDamental:
 CALCmethod, 2-268
 POWER:HARMonics:MIL:FUNDamental:USER:
 CURRent, 2-268
 POWER:HARMonics:MIL:LINEFREQuency, 2-269
 POWER:HARMonics:MIL:POWERLEVel, 2-269
 POWER:HARMonics:NR_HARMonics, 2-270
 POWER:HARMonics:RESults:HAR<1-400>:
 FREQuency?, 2-270
 POWER:HARMonics:RESults:HAR<1-400>:
 IECMAX?, 2-271
 POWER:HARMonics:RESults:HAR<1-400>:
 LIMit?, 2-271
 POWER:HARMonics:RESults:HAR<1-400>:
 PHASe?, 2-272
 POWER:HARMonics:RESults:HAR<1-400>:RMS:
 ABSolute?, 2-272
 POWER:HARMonics:RESults:HAR<1-400>:RMS:
 PERCent?, 2-273
 POWER:HARMonics:RESults:HAR<1-400>:TEST:
 IEC:CLASSALIMit?, 2-273

- POWer:HARMonics:RESults:HAR<1-400>:TEST:
IEC:NORMAL?, 2-274
- POWer:HARMonics:RESults:HAR<1-400>:TEST:
IEC:POHCLIMit?, 2-274
- POWer:HARMonics:RESults:HAR<1-400>:TEST:
MIL:NORMAL?, 2-274
- POWer:HARMonics:RESults:IEC:
FUNDamental?, 2-275
- POWer:HARMonics:RESults:IEC:
HARM3ALTernate?, 2-275
- POWer:HARMonics:RESults:IEC:
HARM5ALTernate?, 2-276
- POWer:HARMonics:RESults:IEC:POHC?, 2-276
- POWer:HARMonics:RESults:IEC:POHL?, 2-277
- POWer:HARMonics:RESults:IEC:POWer?, 2-277
- POWer:HARMonics:RESults:IEC:
POWERFactor?, 2-277
- POWer:HARMonics:RESults:PASSFail?, 2-278
- POWer:HARMonics:RESults:RMS?, 2-278
- POWer:HARMonics:RESults:SAVe, 2-278
- POWer:HARMonics:RESults:THDF?, 2-279
- POWer:HARMonics:RESults:THDR?, 2-279
- POWer:HARMonics:SOURce, 2-279
- POWer:HARMonics:STANDard, 2-280
- POWer:INDICators, 2-280
- POWer:MODulation:SOURce, 2-281
- POWer:MODulation:TYPE, 2-282
- POWer:QUALity:APPpwr?, 2-283
- POWer:QUALity:DISplay:APPpwr, 2-283
- POWer:QUALity:DISplay:FREQuency, 2-283
- POWer:QUALity:DISplay:ICRESTfactor, 2-284
- POWer:QUALity:DISplay:IRMS, 2-284
- POWer:QUALity:DISplay:PHASEangle, 2-285
- POWer:QUALity:DISplay:POWERFACTOR, 2-285
- POWer:QUALity:DISplay:REACTpwr, 2-286
- POWer:QUALity:DISplay:TRUEpwr, 2-286
- POWer:QUALity:DISplay:VCRESTfactor, 2-287
- POWer:QUALity:DISplay:VRMS, 2-288
- POWer:QUALity:FREQReference, 2-288
- POWer:QUALity:FREQuency?, 2-289
- POWer:QUALity:ICRESTfactor?, 2-289
- POWer:QUALity:IRMS?, 2-289
- POWer:QUALity:PHASEangle?, 2-290
- POWer:QUALity:POWERFACTOR?, 2-290
- POWer:QUALity:REACTpwr?, 2-290
- POWer:QUALity:TRUEpwr?, 2-291
- POWer:QUALity:VRMS?, 2-291
- POWer:REFLevel:ABSolute, 2-292
- POWer:REFLevel:ABSolute:HIGH, 2-292
- POWer:REFLevel:ABSolute:LOW, 2-292
- POWer:REFLevel:ABSolute:MID<1-3>, 2-293
- POWer:REFLevel:HYSTeresis, 2-293
- POWer:REFLevel:METHod, 2-294
- POWer:REFLevel:PERCent, 2-294
- POWer:REFLevel:PERCent:HIGH, 2-295
- POWer:REFLevel:PERCent:LOW, 2-295
- POWer:REFLevel:PERCent:MID<1-3>, 2-296
- POWer:RIPple, 2-296
- POWer:RIPple:RESults:AMPLitude?, 2-297
- POWer:RIPple:RESults:MAX?, 2-297
- POWer:RIPple:RESults:MEAN?, 2-297
- POWer:RIPple:RESults:MIN?, 2-298
- POWer:RIPple:RESults:STDdev?, 2-298
- POWer:RIPple:SOURce, 2-299
- POWer:SOA:LINear:XMAX, 2-299
- POWer:SOA:LINear:XMIN, 2-300
- POWer:SOA:LINear:YMAX, 2-300
- POWer:SOA:LINear:YMIN, 2-300
- POWer:SOA:LOG:XMAX, 2-301
- POWer:SOA:LOG:XMIN, 2-301
- POWer:SOA:LOG:YMAX, 2-302
- POWer:SOA:LOG:YMIN, 2-302
- POWer:SOA:MASK:DEFine, 2-303
- POWer:SOA:MASK:MAXAmps, 2-303
- POWer:SOA:MASK:MAXVolts, 2-304
- POWer:SOA:MASK:MAXWatts, 2-304
- POWer:SOA:MASK:NR_PT?, 2-305
- POWer:SOA:MASK:STATe, 2-305
- POWer:SOA:MASK:STOPOnviol, 2-306
- POWer:SOA:PLOTTPe, 2-306
- POWer:SOA:RESult:FAILures:QTY?, 2-307
- POWer:SOA:RESult:NUMACq?, 2-307
- POWer:SOA:RESult:STATe?, 2-308
- POWer:STATIstics, 2-308
- POWer:STATIstics:MODE, 2-308
- POWer:STATIstics:WEIGHTing, 2-309
- POWer:SWLoss:CONDCALCmethod, 2-309
- POWer:SWLoss:CONduction:ENERGY:
MAX?, 2-310
- POWer:SWLoss:CONduction:ENERGY:
MEAN?, 2-310
- POWer:SWLoss:CONduction:ENERGY:
MIN?, 2-311
- POWer:SWLoss:CONduction:POWER:MAX?, 2-311

POWER:SWLoss:CONduction:POWER:
 MEAN?, 2-311
 POWER:SWLoss:CONduction:POWER:MIN?, 2-312
 POWER:SWLoss:DISplay, 2-312
 POWER:SWLoss:GAte:POLarity, 2-313
 POWER:SWLoss:GAte:TURNON, 2-313
 POWER:SWLoss:NUMCYCles?, 2-314
 POWER:SWLoss:RDson, 2-314
 POWER:SWLoss:REFLevel:ABSolute:
 GATEMid, 2-315
 POWER:SWLoss:REFLevel:ABSolute:
 LOWCurrent, 2-315
 POWER:SWLoss:REFLevel:ABSolute:
 LOWVoltage, 2-316
 POWER:SWLoss:REFLevel:PERCent:
 GATEMid, 2-316
 POWER:SWLoss:REFLevel:PERCent:
 LOWCurrent, 2-317
 POWER:SWLoss:REFLevel:PERCent:
 LOWVoltage, 2-317
 POWER:SWLoss:TOFF:ENERGY:MAX?, 2-318
 POWER:SWLoss:TOFF:ENERGY:MEAN?, 2-318
 POWER:SWLoss:TOFF:ENERGY:MIN?, 2-319
 POWER:SWLoss:TOFF:POWER:MAX?, 2-319
 POWER:SWLoss:TOFF:POWER:MEAN?, 2-319
 POWER:SWLoss:TOFF:POWER:MIN?, 2-320
 POWER:SWLoss:TON:ENERGY:MAX?, 2-320
 POWER:SWLoss:TON:ENERGY:MEAN?, 2-321
 POWER:SWLoss:TON:ENERGY:MIN?, 2-321
 POWER:SWLoss:TON:POWER:MAX?, 2-321
 POWER:SWLoss:TON:POWER:MEAN?, 2-322
 POWER:SWLoss:TON:POWER:MIN?, 2-322
 POWER:SWLoss:TOTal:ENERGY:MAX?, 2-322
 POWER:SWLoss:TOTal:ENERGY:MEAN?, 2-323
 POWER:SWLoss:TOTal:ENERGY:MIN?, 2-323
 POWER:SWLoss:TOTal:POWER:MAX?, 2-324
 POWER:SWLoss:TOTal:POWER:MEAN?, 2-324
 POWER:SWLoss:TOTal:POWER:MIN?, 2-324
 POWER:SWLoss:VCEsat, 2-325
 POWER:TYPe, 2-325
 POWER:VOLTAGESource, 2-326
 *PSC, 2-327
 *PUD, 2-327

R

*RCL, 2-328
 RECall:SETUp, 2-328

RECall:WAVEform, 2-329
 REF<x>?, 2-330
 REF<x>:DATE?, 2-330
 REF<x>:HORizontal:DELay:TIME, 2-330
 REF<x>:HORizontal:SCALE, 2-331
 REF<x>:LABel, 2-331
 REF<x>:TIME?, 2-331
 REF<x>:VERTical:POSition, 2-332
 REF<x>:VERTical:SCALE, 2-332
 REM, 2-333
 *RST, 2-334

S

*SAV, 2-334
 Save and Recall Command Group, 2-40
 SAVe:ASSIgn:TYPe, 2-335
 SAVe:EVENTtable:BUS<x>, 2-335
 SAVe:IMAGe, 2-336
 SAVe:IMAGe:FILEFormat, 2-336
 SAVe:IMAGe:INKSaver, 2-337
 SAVe:IMAGe:LAYout, 2-337
 SAVe:SETUp, 2-337
 SAVe:WAVEform, 2-338
 SAVe:WAVEform:FILEFormat, 2-339
 SAVe:WAVEform:GATIng, 2-340
 Search Commands Group, 2-41
 SEARCH?, 2-340
 SEARCH:SEARCH<x>:COpy, 2-342
 SEARCH:SEARCH<x>:STATE, 2-342
 SEARCH:SEARCH<x>:TOTAL?, 2-342
 SEARCH:SEARCH<x>:TRIGger:A{:TRANsition|:
 RISEFall}:DELtatime, 2-401
 SEARCH:SEARCH<x>:TRIGger:A{:TRANsition|:
 RISEFall}:POLarity, 2-401
 SEARCH:SEARCH<x>:TRIGger:A{:TRANsition|:
 RISEFall}:SOUrce, 2-401
 SEARCH:SEARCH<x>:TRIGger:A{:TRANsition|:
 RISEFall}:WHEn, 2-402
 SEARCH:SEARCH<x>:TRIGger:A:BUS?, 2-343
 SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:
 AUDio:CONDition, 2-343
 SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:
 AUDio:DATA:HIVALue, 2-344
 SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:
 AUDio:DATA:OFFSet, 2-344
 SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:
 AUDio:DATA:QUALifier, 2-344

SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:
 AUDio:DATa:VALue, 2-345
SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:
 AUDio:DATa:WORD, 2-345
SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:
 CAN{:IDentifier|:ADDRess}:MODE, 2-349
SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:
 CAN{:IDentifier|:ADDRess}:VALue, 2-350
SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:
 CAN:CONDition, 2-346
SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:
 CAN:DATa:DIRection, 2-346
SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:
 CAN:DATa:QUALifier, 2-347
SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:
 CAN:DATa:SIZE, 2-348
SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:
 CAN:DATa:VALue, 2-348
SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:
 CAN:FRAMetype, 2-349
SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:
 FLEXray:CONDition, 2-350
SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:
 FLEXray:CYCLEcount:HIVALue, 2-351
SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:
 FLEXray:CYCLEcount:QUALifier, 2-351
SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:
 FLEXray:CYCLEcount:VALue, 2-352
SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:
 FLEXray:DATa:HIVALue, 2-353
SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:
 FLEXray:DATa:OFFSet, 2-353
SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:
 FLEXray:DATa:QUALifier, 2-354
SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:
 FLEXray:DATa:SIZE, 2-354
SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:
 FLEXray:DATa:VALue, 2-355
SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:
 FLEXray:EOFTYPE, 2-355
SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:
 FLEXray:ERRTYPE, 2-356
SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:
 FLEXray:FRAMEID:HIVALue, 2-356
SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:
 FLEXray:FRAMEID:QUALifier, 2-357

SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:
 FLEXray:FRAMEID:VALue, 2-358
SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:
 FLEXray:FRAMetype, 2-358
SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:
 FLEXray:HEADER:CRC, 2-359
SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:
 FLEXray:HEADER:CYCLEcount, 2-359
SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:
 FLEXray:HEADER:FRAMEID, 2-360
SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:
 FLEXray:HEADER:INDBits, 2-360
SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:
 FLEXray:HEADER:PAYLength, 2-361
SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:I2C:
 ADDRess:MODE, 2-361
SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:I2C:
 ADDRess:TYPE, 2-362
SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:I2C:
 ADDRess:VALue, 2-362
SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:I2C:
 CONDition, 2-363
SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:I2C:
 DATa:DIRection, 2-363
SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:I2C:
 DATa:SIZE, 2-364
SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:I2C:
 DATa:VALue, 2-364
SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:LIN:
 CONDition, 2-365
SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:LIN:
 DATa:HIVALue, 2-365
SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:LIN:
 DATa:QUALifier, 2-366
SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:LIN:
 DATa:SIZE, 2-366
SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:LIN:
 DATa:VALue, 2-367
SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:LIN:
 ERRTYPE, 2-367
SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:LIN:
 IDentifier:VALue, 2-368
SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:
 PARallel:VALue, 2-368
SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:
 RS232C:CONDition, 2-369

- SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:
RS232C:RX:DATa:SIZE, 2-369
- SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:
RS232C:RX:DATa:VALue, 2-370
- SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:
RS232C:TX:DATa:SIZE, 2-370
- SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:
RS232C:TX:DATa:VALue, 2-370
- SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:SPI:
CONDition, 2-371
- SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:SPI:
DATa{:MISO|:IN}:VALue, 2-371
- SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:SPI:
DATa{:MOSI|:OUT}:VALue, 2-372
- SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:SPI:
DATa:SIZE, 2-372
- SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:
USB:ADDRess:HIVALue, 2-373
- SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:
USB:ADDRess:VALue, 2-373
- SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:
USB:CONDition, 2-374
- SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:
USB:DATa:HIVALue, 2-375
- SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:
USB:DATa:OFFSet, 2-375
- SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:
USB:DATa:SIZE, 2-376
- SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:
USB:DATa:TYPe, 2-376
- SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:
USB:DATa:VALue, 2-377
- SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:
USB:ENDPoint:VALue, 2-378
- SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:
USB:ERRORTYPe, 2-378
- SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:
USB:HANDSHAKEType, 2-379
- SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:
USB:QUALifier, 2-380
- SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:
USB:SOFFRAMENUMber, 2-381
- SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:
USB:SPECIALType, 2-381
- SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:
USB:TOKENType, 2-382
- SEARCH:SEARCH<x>:TRIGger:A:BUS:
SOUrce, 2-382
- SEARCH:SEARCH<x>:TRIGger:A:EDGE:
SLOPe, 2-383
- SEARCH:SEARCH<x>:TRIGger:A:EDGE:
SOUrce, 2-383
- SEARCH:SEARCH<x>:TRIGger:A:LEVel, 2-384
- SEARCH:SEARCH<x>:TRIGger:A:LEVel:
CH<x>, 2-384
- SEARCH:SEARCH<x>:TRIGger:A:LEVel:
MATH, 2-384
- SEARCH:SEARCH<x>:TRIGger:A:LEVel:
REF<x>, 2-385
- SEARCH:SEARCH<x>:TRIGger:A:LOGIc:
FUNction, 2-385
- SEARCH:SEARCH<x>:TRIGger:A:LOGIc:INPut:
CH<x>, 2-385
- SEARCH:SEARCH<x>:TRIGger:A:LOGIc:INPut:
CLOCK:EDGE, 2-386
- SEARCH:SEARCH<x>:TRIGger:A:LOGIc:INPut:
CLOCK:SOUrce, 2-386
- SEARCH:SEARCH<x>:TRIGger:A:LOGIc:INPut:
D<x>, 2-387
- SEARCH:SEARCH<x>:TRIGger:A:LOGIc:INPut:
MATH, 2-387
- SEARCH:SEARCH<x>:TRIGger:A:LOGIc:INPut:
REF<x>, 2-387
- SEARCH:SEARCH<x>:TRIGger:A:LOGIc:PATtern:
INPut:CH<x>, 2-388
- SEARCH:SEARCH<x>:TRIGger:A:LOGIc:PATtern:
INPut:D<x>, 2-388
- SEARCH:SEARCH<x>:TRIGger:A:LOGIc:PATtern:
INPut:MATH, 2-389
- SEARCH:SEARCH<x>:TRIGger:A:LOGIc:PATtern:
INPut:REF<x>, 2-389
- SEARCH:SEARCH<x>:TRIGger:A:LOGIc:PATtern:
WHEn, 2-390
- SEARCH:SEARCH<x>:TRIGger:A:LOGIc:PATtern:
WHEn:LESSLimit, 2-390
- SEARCH:SEARCH<x>:TRIGger:A:LOGIc:PATtern:
WHEn:MORELimit, 2-391
- SEARCH:SEARCH<x>:TRIGger:A:LOGIc:
THReshold:CH<x>, 2-391
- SEARCH:SEARCH<x>:TRIGger:A:LOGIc:
THReshold:MATH, 2-391
- SEARCH:SEARCH<x>:TRIGger:A:LOGIc:
THReshold:REF<x>, 2-392

SEARCH:SEARCH<x>:TRIGger:A:
 LOWerthreshold:CH<x>, 2-392
 SEARCH:SEARCH<x>:TRIGger:A:
 LOWerthreshold:MATH, 2-392
 SEARCH:SEARCH<x>:TRIGger:A:
 LOWerthreshold:REF<x>, 2-393
 SEARCH:SEARCH<x>:TRIGger:A:PULSEWidth:
 POLarity, 2-393
 SEARCH:SEARCH<x>:TRIGger:A:PULSEWidth:
 SOUrce, 2-393
 SEARCH:SEARCH<x>:TRIGger:A:PULSEWidth:
 WHEn, 2-394
 SEARCH:SEARCH<x>:TRIGger:A:PULSEWidth:
 WIDth, 2-394
 SEARCH:SEARCH<x>:TRIGger:A:RUNT:
 POLarity, 2-395
 SEARCH:SEARCH<x>:TRIGger:A:RUNT:
 SOUrce, 2-395
 SEARCH:SEARCH<x>:TRIGger:A:RUNT:
 WHEn, 2-395
 SEARCH:SEARCH<x>:TRIGger:A:RUNT:
 WIDth, 2-396
 SEARCH:SEARCH<x>:TRIGger:A:SETHold:
 CLOCK:EDGE, 2-396
 SEARCH:SEARCH<x>:TRIGger:A:SETHold:
 CLOCK:SOUrce, 2-397
 SEARCH:SEARCH<x>:TRIGger:A:SETHold:
 CLOCK:THReshold, 2-397
 SEARCH:SEARCH<x>:TRIGger:A:SETHold:DATA:
 SOUrce, 2-398
 SEARCH:SEARCH<x>:TRIGger:A:SETHold:DATA:
 THReshold, 2-398
 SEARCH:SEARCH<x>:TRIGger:A:SETHold:
 HOLDTime, 2-399
 SEARCH:SEARCH<x>:TRIGger:A:SETHold:
 SETTime, 2-399
 SEARCH:SEARCH<x>:TRIGger:A:SETHold:
 THReshold{:MATH|MATH1}, 2-400
 SEARCH:SEARCH<x>:TRIGger:A:SETHold:
 THReshold:CH<x>, 2-399
 SEARCH:SEARCH<x>:TRIGger:A:SETHold:
 THReshold:REF<x>, 2-400
 SEARCH:SEARCH<x>:TRIGger:A:TYPE, 2-402
 SEARCH:SEARCH<x>:TRIGger:A:UPPerthreshold:
 CH<x>, 2-403
 SEARCH:SEARCH<x>:TRIGger:A:UPPerthreshold:
 MATH, 2-403

SEARCH:SEARCH<x>:TRIGger:A:UPPerthreshold:
 REF<x>, 2-404
 SElect, 2-404
 SElect:BUS<x>, 2-404
 SElect:CH<x>, 2-405
 SElect:CONTROL, 2-405
 SElect:D<x>, 2-406
 SElect:MATH[1], 2-407
 SElect:REF<x>, 2-407
 SET?, 2-408
 SETUP<x>:DATE?, 2-409
 SETUP<x>:LABEL, 2-409
 SETUP<x>:TIME?, 2-410
 *SRE, 2-410
 Status and Error Command Group, 2-48
 *STB?, 2-410

T

TEKSecure, 2-411
 TIME, 2-412
 TOTaluptime?, 2-413
 *TRG, 2-413
 Trigger Command Group, 2-49
 TRIGger, 2-413
 TRIGger:A, 2-414
 TRIGger:A{:TRANSition|RISEFall}?, 2-482
 TRIGger:A{:TRANSition|RISEFall}:
 DELTatime, 2-483
 TRIGger:A{:TRANSition|RISEFall}:POLarity, 2-483
 TRIGger:A{:TRANSition|RISEFall}:SOUrce, 2-484
 TRIGger:A{:TRANSition|RISEFall}:WHEn, 2-484
 TRIGger:A:BUS, 2-415
 TRIGger:A:BUS:B<x>:AUDio:CONDition, 2-415
 TRIGger:A:BUS:B<x>:AUDio:DATA:
 HIVALue, 2-416
 TRIGger:A:BUS:B<x>:AUDio:DATA:OFFSet, 2-416
 TRIGger:A:BUS:B<x>:AUDio:DATA:
 QUALifier, 2-416
 TRIGger:A:BUS:B<x>:AUDio:DATA:VALue, 2-417
 TRIGger:A:BUS:B<x>:AUDio:DATA:WORD, 2-417
 TRIGger:A:BUS:B<x>:CAN{:IDentifier|ADDRESS}:
 MODE, 2-421
 TRIGger:A:BUS:B<x>:CAN{:IDentifier|ADDRESS}:
 VALue, 2-422
 TRIGger:A:BUS:B<x>:CAN:CONDition, 2-418
 TRIGger:A:BUS:B<x>:CAN:DATA:DIRection, 2-419
 TRIGger:A:BUS:B<x>:CAN:DATA:QUALifier, 2-419

- TRIGger:A:BUS:B<x>:CAN:DATA:SIZE, 2-420
 TRIGger:A:BUS:B<x>:CAN:DATA:VALue, 2-420
 TRIGger:A:BUS:B<x>:CAN:FRAMeType, 2-421
 TRIGger:A:BUS:B<x>:FLEXray:CONDition, 2-422
 TRIGger:A:BUS:B<x>:FLEXray:CYCLEcount:
 HIVALue, 2-423
 TRIGger:A:BUS:B<x>:FLEXray:CYCLEcount:
 QUALifier, 2-424
 TRIGger:A:BUS:B<x>:FLEXray:CYCLEcount:
 VALue, 2-424
 TRIGger:A:BUS:B<x>:FLEXray:DATA:
 HIVALue, 2-425
 TRIGger:A:BUS:B<x>:FLEXray:DATA:
 OFFSet, 2-425
 TRIGger:A:BUS:B<x>:FLEXray:DATA:
 QUALifier, 2-426
 TRIGger:A:BUS:B<x>:FLEXray:DATA:SIZE, 2-427
 TRIGger:A:BUS:B<x>:FLEXray:DATA:
 VALue, 2-427
 TRIGger:A:BUS:B<x>:FLEXray:EOFTYPE, 2-428
 TRIGger:A:BUS:B<x>:FLEXray:ERRType, 2-428
 TRIGger:A:BUS:B<x>:FLEXray:FRAMEID:
 HIVALue, 2-429
 TRIGger:A:BUS:B<x>:FLEXray:FRAMEID:
 QUALifier, 2-429
 TRIGger:A:BUS:B<x>:FLEXray:FRAMEID:
 VALue, 2-430
 TRIGger:A:BUS:B<x>:FLEXray:
 FRAMeType, 2-430
 TRIGger:A:BUS:B<x>:FLEXray:HEADER:
 CRC, 2-431
 TRIGger:A:BUS:B<x>:FLEXray:HEADER:
 CYCLEcount, 2-432
 TRIGger:A:BUS:B<x>:FLEXray:HEADER:
 FRAMEID, 2-432
 TRIGger:A:BUS:B<x>:FLEXray:HEADER:
 INDBits, 2-433
 TRIGger:A:BUS:B<x>:FLEXray:HEADER:
 PAYLength, 2-433
 TRIGger:A:BUS:B<x>:I2C:ADDRess:MODE, 2-434
 TRIGger:A:BUS:B<x>:I2C:ADDRess:TYPE, 2-434
 TRIGger:A:BUS:B<x>:I2C:ADDRess:VALue, 2-435
 TRIGger:A:BUS:B<x>:I2C:CONDition, 2-435
 TRIGger:A:BUS:B<x>:I2C:DATA:DIRection, 2-436
 TRIGger:A:BUS:B<x>:I2C:DATA:SIZE, 2-436
 TRIGger:A:BUS:B<x>:I2C:DATA:VALue, 2-437
 TRIGger:A:BUS:B<x>:LIN:CONDition, 2-437
 TRIGger:A:BUS:B<x>:LIN:DATA:HIVALue, 2-438
 TRIGger:A:BUS:B<x>:LIN:DATA:QUALifier, 2-438
 TRIGger:A:BUS:B<x>:LIN:DATA:SIZE, 2-439
 TRIGger:A:BUS:B<x>:LIN:DATA:VALue, 2-439
 TRIGger:A:BUS:B<x>:LIN:ERRType, 2-440
 TRIGger:A:BUS:B<x>:LIN:IDentifier:VALue, 2-441
 TRIGger:A:BUS:B<x>:PARallel:VALue, 2-441
 TRIGger:A:BUS:B<x>:RS232C:CONDition, 2-441
 TRIGger:A:BUS:B<x>:RS232C:RX:DATA:
 SIZE, 2-442
 TRIGger:A:BUS:B<x>:RS232C:RX:DATA:
 VALue, 2-442
 TRIGger:A:BUS:B<x>:RS232C:TX:DATA:
 SIZE, 2-443
 TRIGger:A:BUS:B<x>:RS232C:TX:DATA:
 VALue, 2-443
 TRIGger:A:BUS:B<x>:SPI:CONDition, 2-443
 TRIGger:A:BUS:B<x>:SPI:DATA{:IN|:MISO}:
 VALue, 2-444
 TRIGger:A:BUS:B<x>:SPI:DATA{:OUT|:MOSI}:
 VALue, 2-444
 TRIGger:A:BUS:B<x>:SPI:DATA:SIZE, 2-445
 TRIGger:A:BUS:B<x>:USB:ADDRess:
 HIVALue, 2-445
 TRIGger:A:BUS:B<x>:USB:ADDRess:
 VALue, 2-446
 TRIGger:A:BUS:B<x>:USB:CONDition, 2-446
 TRIGger:A:BUS:B<x>:USB:DATA:HIVALue, 2-447
 TRIGger:A:BUS:B<x>:USB:DATA:OFFSet, 2-448
 TRIGger:A:BUS:B<x>:USB:DATA:SIZE, 2-449
 TRIGger:A:BUS:B<x>:USB:DATA:TYPE, 2-449
 TRIGger:A:BUS:B<x>:USB:DATA:VALue, 2-450
 TRIGger:A:BUS:B<x>:USB:ENDPoint:
 VALue, 2-450
 TRIGger:A:BUS:B<x>:USB:ERRORTYPE, 2-451
 TRIGger:A:BUS:B<x>:USB:
 HANDSHAKEType, 2-452
 TRIGger:A:BUS:B<x>:USB:QUALifier, 2-452
 TRIGger:A:BUS:B<x>:USB:
 SOFFRAMENUMber, 2-453
 TRIGger:A:BUS:B<x>:USB:SPECIALType, 2-454
 TRIGger:A:BUS:B<x>:USB:TOKENType, 2-454
 TRIGger:A:BUS:SOURce, 2-455
 TRIGger:A:EDGE?, 2-455
 TRIGger:A:EDGE:COUpling, 2-456
 TRIGger:A:EDGE:SLOpe, 2-456
 TRIGger:A:EDGE:SOURce, 2-457

- TRIGger:A:HOLDOff?, 2-458
 - TRIGger:A:HOLDOff:TIME, 2-458
 - TRIGger:A:LEVel, 2-458
 - TRIGger:A:LEVel:AUXin, 2-459
 - TRIGger:A:LEVel:CH<x>, 2-459
 - TRIGger:A:LEVel:D<x>, 2-460
 - TRIGger:A:LOGIc?, 2-460
 - TRIGger:A:LOGIc:CLAss, 2-461
 - TRIGger:A:LOGIc:FUNCTion, 2-462
 - TRIGger:A:LOGIc:INPut?, 2-462
 - TRIGger:A:LOGIc:INPut:CH<x>, 2-463
 - TRIGger:A:LOGIc:INPut:CLOCK:EDGE, 2-463
 - TRIGger:A:LOGIc:INPut:CLOCK:SOUrce, 2-463
 - TRIGger:A:LOGIc:INPut:D<x>, 2-464
 - TRIGger:A:LOGIc:PATtern?, 2-464
 - TRIGger:A:LOGIc:PATtern:DELTatime, 2-465
 - TRIGger:A:LOGIc:PATtern:INPut:D<x>, 2-465
 - TRIGger:A:LOGIc:PATtern:WHEn, 2-465
 - TRIGger:A:LOGIc:PATtern:WHEn:
LESSLimit, 2-466
 - TRIGger:A:LOGIc:PATtern:WHEn:
MORELimit, 2-467
 - TRIGger:A:LOGIc:THReshold:CH<x>, 2-467
 - TRIGger:A:LOGIc:THReshold:D<x>, 2-468
 - TRIGger:A:LOWerthreshold{:EXT|:AUX}, 2-469
 - TRIGger:A:LOWerthreshold:CH<x>, 2-468
 - TRIGger:A:LOWerthreshold:D<x>, 2-469
 - TRIGger:A:MODE, 2-470
 - TRIGger:A:PULSe?, 2-470
 - TRIGger:A:PULSe:CLAss, 2-471
 - TRIGger:A:PULSEWidth?, 2-471
 - TRIGger:A:PULSEWidth:POLarity, 2-472
 - TRIGger:A:PULSEWidth:SOUrce, 2-472
 - TRIGger:A:PULSEWidth:WHEn, 2-473
 - TRIGger:A:PULSEWidth:WIDth, 2-473
 - TRIGger:A:RUNT?, 2-474
 - TRIGger:A:RUNT:POLarity, 2-474
 - TRIGger:A:RUNT:SOUrce, 2-475
 - TRIGger:A:RUNT:WHEn, 2-475
 - TRIGger:A:RUNT:WIDth, 2-476
 - TRIGger:A:SETHold?, 2-476
 - TRIGger:A:SETHold:CLOCK?, 2-477
 - TRIGger:A:SETHold:CLOCK:EDGE, 2-477
 - TRIGger:A:SETHold:CLOCK:SOUrce, 2-478
 - TRIGger:A:SETHold:CLOCK:THReshold, 2-478
 - TRIGger:A:SETHold:DATA?, 2-479
 - TRIGger:A:SETHold:DATA:SOUrce, 2-479
 - TRIGger:A:SETHold:DATA:THReshold, 2-480
 - TRIGger:A:SETHold:HOLDTime, 2-480
 - TRIGger:A:SETHold:SETTime, 2-481
 - TRIGger:A:SETHold:THReshold:CH<x>, 2-481
 - TRIGger:A:SETHold:THReshold:D<x>, 2-482
 - TRIGger:A:TYPE, 2-485
 - TRIGger:A:UPPerthreshold:CH<x>, 2-486
 - TRIGger:A:VIDeo?, 2-486
 - TRIGger:A:VIDeo{:SYNC|:FIELD}, 2-493
 - TRIGger:A:VIDeo:CUSTom{:FORMat|:
TYPE}, 2-487
 - TRIGger:A:VIDeo:CUSTom:LINEPeriod, 2-487
 - TRIGger:A:VIDeo:CUSTom:SCAN, 2-488
 - TRIGger:A:VIDeo:CUSTom:SYNCInterval, 2-488
 - TRIGger:A:VIDeo:HDtv:FORMat, 2-489
 - TRIGger:A:VIDeo:HOLDOff:FIELD, 2-490
 - TRIGger:A:VIDeo:LINE, 2-490
 - TRIGger:A:VIDeo:POLarity, 2-491
 - TRIGger:A:VIDeo:SOUrce, 2-492
 - TRIGger:A:VIDeo:STANdard, 2-492
 - TRIGger:B, 2-493
 - TRIGger:B:BY, 2-494
 - TRIGger:B:EDGE?, 2-495
 - TRIGger:B:EDGE:COUPling, 2-495
 - TRIGger:B:EDGE:SLOpe, 2-495
 - TRIGger:B:EDGE:SOUrce, 2-496
 - TRIGger:B:EVENTS?, 2-497
 - TRIGger:B:EVENTS:COUNt, 2-497
 - TRIGger:B:LEVel, 2-497
 - TRIGger:B:LEVel:CH<x>, 2-498
 - TRIGger:B:LEVel:D<x>, 2-498
 - TRIGger:B:LOWerthreshold:CH<x>, 2-499
 - TRIGger:B:LOWerthreshold:D<x>, 2-499
 - TRIGger:B:STATE, 2-500
 - TRIGger:B:TIME, 2-500
 - TRIGger:B:TYPE, 2-501
 - TRIGger:B:UPPerthreshold:CH<x>, 2-501
 - TRIGger:EXTErnal?, 2-502
 - TRIGger:EXTErnal:PRObe, 2-502
 - TRIGger:EXTErnal:YUNIts?, 2-502
 - TRIGger:FREQuency?, 2-503
 - TRIGger:STATE?, 2-503
 - *TST?, 2-504
- U**
- UNLock, 2-504
 - USBDevice:CONFigure, 2-504

USBTMC?, 2-505
 USBTMC:PRODUCTID:DECimal?, 2-505
 USBTMC:PRODUCTID:HEXadecimal?, 2-505
 USBTMC:SERIALnumber?, 2-506
 USBTMC:VENDORID:DECimal?, 2-506
 USBTMC:VENDORID:HEXadecimal?, 2-507

V

VERBose, 2-507
 Vertical Command Group, 2-60

W

*WAI, 2-508
 Waveform Transfer Command Group, 2-63
 WAVFrm?, 2-508
 WFMInpre?, 2-509
 WFMInpre:BIT_Nr, 2-509
 WFMInpre:BN_Fmt, 2-510
 WFMInpre:BYT_Nr, 2-510
 WFMInpre:BYT_Or, 2-511
 WFMInpre:ENCdg, 2-511
 WFMInpre:NR_Pt, 2-512
 WFMInpre:PT_Fmt, 2-512
 WFMInpre:PT_Off, 2-513
 WFMInpre:XINcr, 2-514
 WFMInpre:XUNit, 2-514
 WFMInpre:XZEro, 2-515
 WFMInpre:YMUlt, 2-515
 WFMInpre:YOFF, 2-516
 WFMInpre:YUNit, 2-517

WFMInpre:YZero, 2-517
 WFMOutpre?, 2-518
 WFMOutpre:BIT_Nr, 2-519
 WFMOutpre:BN_Fmt, 2-519
 WFMOutpre:BYT_Nr, 2-520
 WFMOutpre:BYT_Or, 2-520
 WFMOutpre:ENCdg, 2-521
 WFMOutpre:FRACTIONal?, 2-521
 WFMOutpre:NR_Pt?, 2-522
 WFMOutpre:PT_Fmt?, 2-522
 WFMOutpre:PT_Off?, 2-523
 WFMOutpre:PT_ORDER?, 2-523
 WFMOutpre:WFIId?, 2-524
 WFMOutpre:XINcr?, 2-525
 WFMOutpre:XUNit?, 2-525
 WFMOutpre:XZEro?, 2-525
 WFMOutpre:YMUlt?, 2-526
 WFMOutpre:YOFF?, 2-526
 WFMOutpre:YUNit?, 2-527
 WFMOutpre:YZero?, 2-527

Z

Zoom Command Group, 2-68
 ZOOM?, 2-528
 ZOOM:MODE, 2-528
 ZOOM:ZOOM<x>?, 2-529
 ZOOM:ZOOM<x>:FACtor?, 2-529
 ZOOM:ZOOM<x>:POSition, 2-529
 ZOOM:ZOOM<x>:SCAle, 2-530
 ZOOM:ZOOM<x>:STATE, 2-530