
# **Tektronix**<sup>®</sup>

## Time Domain Reflectometry (TDR) Analysis

## 4/5/6 Series B MSO Options 4-TDR, 5-TDR, and 6-TDR Datasheet

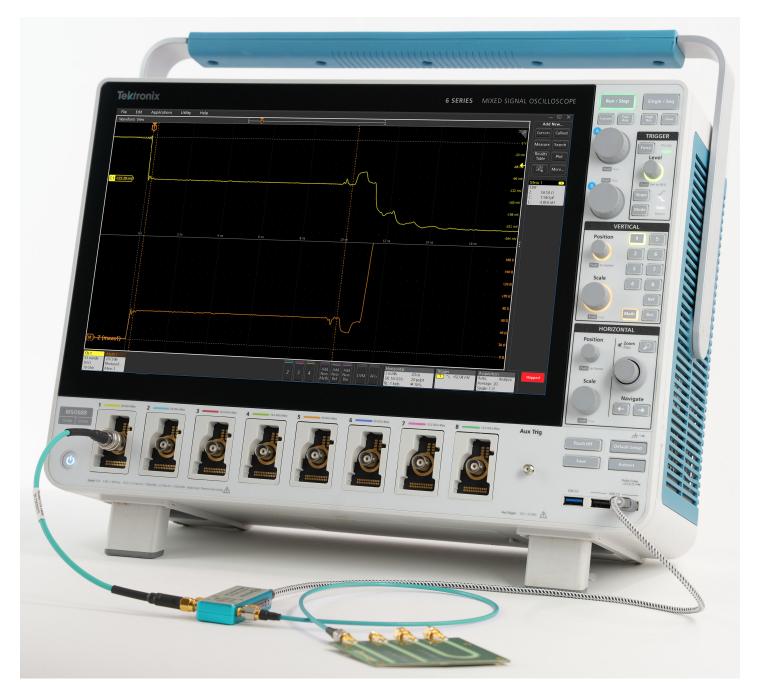

The Tektronix Time Domain Reflectometry (Opt. TDR) measurement solution offers a wide range of features to debug and characterize the impedance of power integrity circuits, PCBs, high-speed applications, cables, and interconnects. TDR is usually applied using specialized sampling equipment in the time domain or VNA's looking at frequency domain data. Sampling oscilloscopes continue to be a cost-effective solution but are not as ubiquitous as real-time oscilloscopes. Tektronix offers new TDR measurement capability on versatile 4/5/6 Series B MSO real-time oscilloscopes with up to 10 GHz of acquisition bandwidth capabilities and 7.5 GHz of TDR bandwidth capabilities. Engineers can perform TDR measurements with a simple setup including the Tektronix mixed signal oscilloscope, TDR module, and either SMA cables or TDR probe.

#### **Key features**


- Time Domain Reflectometry (Opt. TDR) on real-time 4/5/6 Series B MSOs with up to 10 GHz of acquisition bandwidth capabilities and 7.5 GHz of TDR bandwidth capabilities.
- Automatic impedance profiling using TDR signals in real time.
- Measure either single-ended or differential Z, L, C at the region of interest.
- Save results, data, and reports along with impedance traces. Recall later for offline analysis.
- Automatic one-click Preset function prepares the TDR for measurements and performs calibration for open, short and load impedances together.
- · Automatic math channel setup to show impedance traces.

#### Key application areas for TDR

- Low cost solution for PCB coupon testing
- Verify characteristic impedance of transmission lines like cables and PCB traces
- · Measure trace length, cable length, and signal delays
- · Measure signal path rise/fall time and overshoot/undershoot
- · Support cable and trace loss modelling
- · Verify the integrity of cable crimps and connector launches
- Determine cable/PCB dielectric constants
- Measure frequency bandwidth, rise/fall time, and flatness of lab instruments and probes


#### **TDR setup**

The TDR setup requires a 4/5/6 Series B mixed signal oscilloscope and the J2154A PerfectPulse<sup>®</sup> Differential TDR from Picotest. The J2154A is a differential pulse generator. It supports either single-ended or differential TDR measurements. For performing TDR measurements on a printed circuit board, a probe is required to connect the pulse generator to the DUT. Picotest probes like P2105A browser probe and P2103A differential TDR probe are used for single-ended and differential TDR measurements.

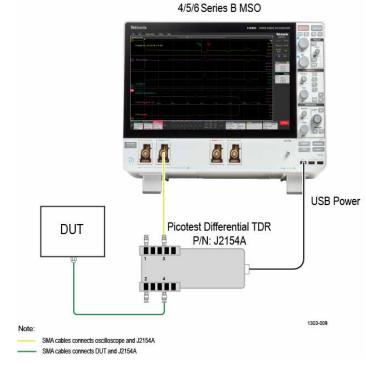

Single-Ended TDR setup.

The connection shows the *Single-Ended TDR setup* to perform singleended TDR measurement. The ports 3 and 4 are used for the oscilloscope and DUT connections.

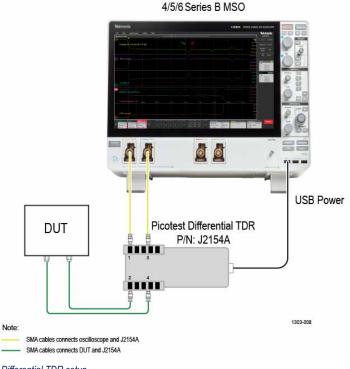

Differential TDR setup.

Differential TDR, shown in *Differential TDR setup*, requires two ports of the pulse generator to be connected to send the differential signal and analyze the differential signal reflected from the DUT, where the differential signal is a subtraction of positive and negative signals. The ports 1 and 3 connect the TDR signal to the oscilloscope and ports 2 and 4 connect the differential TDR signal to the DUT. The matched cables are used for differential TDR connections to minimize the skew.


#### **Measurement and configurations**

The TDR measurement is available after installing Option TDR and it is displayed in the **Standard > Time Measurements** tab, as shown in the figure below.

ADD MEASUREMENTS		?				
Standard Jitter Power	r IMDA DPM WBG	-DPT				
TDR TDR TDR TDR Time Domain Reflectometry determines the average impedance based on reflections of an incident step function imposed on a transmission line. This measurement displays the impedance waveform based on the reflected step function.						
Source						
Ch 1 v		Add				
AMPLITUDE MEASUREM	ENTS	>				
TIME MEASUREMENTS						
Skew	🛃 Delay	T Rise Time				
🔪 Fall Time	😥 Phase	Rising Slew Rate				
Falling Slew Rate	Burst Width	RI Positive Duty Cycle				
Negative Duty Cycle	Time Outside Level	🖅 Setup Time				
Hold Time	Duration N- Periods	<b>F</b> High Time				
Low Time	Time to Min	Time to Max				
TDR						

TDR measurement is added via the Time Measurements section.

Once the measurement is added, the settings are available to configure and run the measurement, as shown in the figure below. You can specify the signal type as single-ended or differential for the TDR measurements. The TDR Preset automatically optimizes oscilloscope settings to acquire the signal properly and then calibrates each line of TDR using the average acquisition mode to reduce the noise on the signal. It also sets the optimal sample rate and horizontal scale to accommodate the incident and first reflection of the voltage.

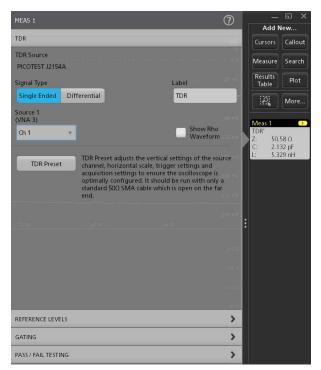

Settings for TDR measurements.


#### TDR calibration (TDR Preset)

Unlike a VNA instrument, the TDR Preset avoids the need for a separate 3-step calibration with open, short, and load impedances. Instead, it uses the TDR pulse waveform generated by the pulse generator along with any standard 50 ohm cable on the far end to find the calibration constants. When the TDR Preset is clicked, the oscilloscope will automatically adjust the horizontal, vertical, and trigger settings for optimal calibration. The algorithm then finds the calibration constants using the TDR pulse and compensates the reflection coefficient and impedance traces directly. There is no need to go through multiple manual calibration steps and oscilloscope settings.

#### Impedance, inductance, and capacitance

The TDR analysis automatically calculates the reflection coefficient (rho) versus time waveform from the reflected signal and plots an impedance (Z) versus time trace. A measurement badge displays the impedance (Z), capacitance (C), and inductance (L) by automatically identifying the region of interest where the impedance has changed. In cases of multiple impedance variations, you can identify the region of interest by positioning the cursors around the region and using cursor gating to limit the measurement to a particular region.

For example, the TDR signal passes through a Picotest PCB demo trace at test point TP4, as shown in figure *PCB trace*. Notice the impedance variations across the entire signal path and observe that the impedance is lower in the middle region due to the wider PCB path. Additionally, observe the initial bumps in the curve that indicate the inductive and capacitive characteristics of the probe tip. The TDR measurement automatically identifies the first capacitance and inductance regions and provides the corresponding values of C and L. Furthermore, you can easily measure capacitance and inductance at any regions of the waveform using cursor gating.

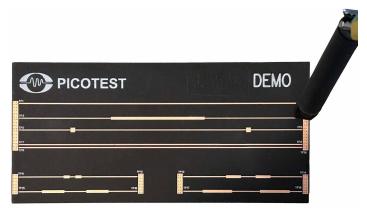

Making a TDR measurement on a PCB trace with impedance variations. Note how the trace widens in the center.



The TDR analysis provides an impedance waveform for the trace in the above figure. The impedance, capacitance and inductance of the waveform across marked regions are displayed in a measurement badge. The lower impedance in the center of the screen corresponds to the wider section of the PCB trace.

#### **TDR bandwidth**

The TDR system bandwidth is the effective bandwidth calculated using rise time of TDR step generator ( $tr_{TDR}$ ), oscilloscope ( $tr_{scope}$ ), and TDR probe ( $tr_{probe}$ ).

$$tr_{sys} = \sqrt{tr_{TDR}^2 + tr_{scope}^2 + tr_{probe}^2}$$

Where,

 $tr_{TDR}$  = the TDR rise time or fall time from10% to 90%

 $tr_{scope}$  = the oscilloscope rise time or fall time from 10% to 90%

 $tr_{probe}$  = the probe rise time or fall time from 10% to 90%

For example, the 6 Series B MSO with bandwidth of 10 GHz (40 ps rise time) combined with the J2154A Picotest pulse generator with bandwidth of 13 GHz (34 ps rise time), and a P2105A TDR probe with bandwidth of 16 GHz (21.88 ps rise time) result in an effective bandwidth of 6.15 GHz (56.9 ps rise time) because the rise times combine as the square root of the sum of the squares.

#### **Report generation and saving waveforms**

After measurement execution the waveform data or session files can be saved to document results or for the further analysis. The measurement results can be exported to report files in .mht or .pdf formats.

A report generated for a single-ended TDR analysis of a printed circuit board is shown below.

Model Number         Scope Serial Number         TekScope Version         Scope Calibration Status           83         Q100096         2.10.2         Pass           eform Histogram Results         Pass         Pass		Configur														
Measure ment         Secure Secure ment         Mean         Max         Pk Pk' Std Dev         Std Dev Populatio Mean         Accum Mean	Scope De			10									0.00			
Mean Man' Max' Pk-Pk' Std Dev Propulatio Accum Ac	MSO58	oel Numbe	H			Number				ion			Calibration	Status		
Measure Seciely         Accum																
Measure Secial         Measure Man*         Max         Pepulatio Accum         Accum <th cols<="" th=""><th>Navefo</th><th>rm Hist</th><th>ogram</th><th>Results</th><th></th><th></th><th></th><th></th><th></th><th></th><th></th><th></th><th></th><th></th><th></th></th>	<th>Navefo</th> <th>rm Hist</th> <th>ogram</th> <th>Results</th> <th></th>	Navefo	rm Hist	ogram	Results											
Surement Results           Measure Steph         Mean         Max         Pk.Pk         Std Dev         Populatio Accum         Accum <th>No Wavef</th> <th>form Histor</th> <th>gram Res</th> <th>ults Availabl</th> <th>le</th> <th></th>	No Wavef	form Histor	gram Res	ults Availabl	le											
Measure ment         Step Stress         Mean         Max         Pk-Pk         Std Dev/ Std Dev/ Pk         Pepulatio Accum         Accum	ie marca	iona manoj	print reco													
Measure ment         Step         Max         Pk-Pk         Std Dev/ rf         Populatio Measure rf         Accum Measure Measure rf         Accum Measure Measure Measure rf         Accum Measure Measure rf         Accum Measure Measure rf         Accum Measure Measure rf         Accum Measure Measure rf         Accum Measure rf         Accum Rf         Accum Rf <t< th=""><th></th><th></th><th></th><th></th><th></th><th></th><th></th><th></th><th></th><th></th><th></th><th></th><th></th><th></th><th></th></t<>																
Measure ment         Step         Max         Pk-Pk         Std Dev/ rf         Populatio Measure rf         Accum Measure Measure rf         Accum Measure Measure Measure rf         Accum Measure Measure rf         Accum Measure Measure rf         Accum Measure Measure rf         Accum Measure Measure rf         Accum Measure rf         Accum Rf         Accum Rf <t< th=""><th></th><th></th><th></th><th></th><th></th><th></th><th></th><th></th><th></th><th></th><th></th><th></th><th></th><th></th><th></th></t<>																
Measure ment         Step Stress         Mean         Max         Pk-Pk         Std Dev/ Std Dev/ Pk         Pepulatio Accum         Accum			Deculte													
ment         StC(P)         Main         min         Max         PX+PX         Still UPV         mi         Main         Max         Pk-PK         Still UPV         mi         Ohms         Oh									Depulatio	Accus	Accum	Accum	Accum	Accum	Access	
Ohms         Ohms <th< th=""><th>lame</th><th></th><th>Src(s)</th><th>Mean'</th><th>Min'</th><th>Max'</th><th>Pk-Pk'</th><th>Std Dev'</th><th></th><th></th><th></th><th></th><th></th><th></th><th></th></th<>	lame		Src(s)	Mean'	Min'	Max'	Pk-Pk'	Std Dev'								
TDR: C         Ref 1         996.81 fF         996.8	vanne					70 663	0.0000	0.0000	1				0.0000		2	
TDR: L Ref 1 2.4920 2.4920 2.4920 0.0000 H 0.0000 H 1 2.4920 2.4920 2.4920 0.0000 H 0.0000 H 2			Ref 1					Ohmen								
NH NH NH NH NH		TDR: Z	1	Ohms	Ohms	Ohms	Ohms		1						2	
		TDR: Z TDR: C	Ref 1	Ohms 996.81 fF	Ohms 996.81 fF	Ohms 996.81 fF	Ohms 0.0000 F	0.0000 F		996.81 fF	996.81 fF	996.81 fF	0.0000 F	0.0000 F		
	Meas 1		Ref 1					Ohms		Ohms	Ohms	Ohms	Ohms	Ohms		
	ews me Dom	TDR: Z TDR: C TDR: L	Ref 1	Ohms 996.81 fF 2.4920	Ohms 996.81 fF 2.4920	Ohms 996.81 fF 2.4920	Ohms 0.0000 F	0.0000 F		996.81 fF 2.4920	996.81 fF 2.4920	996.81 fF 2.4920	0.0000 F	0.0000 F		
	Neas 1	TDR: Z TDR: C TDR: L	Ref 1	Ohms 996.81 fF 2.4920	Ohms 996.81 fF 2.4920	Ohms 996.81 fF 2.4920	Ohms 0.0000 F	0.0000 F		996.81 fF 2.4920	996.81 fF 2.4920	996.81 fF 2.4920	0.0000 F	0.0000 F		
<u> </u>	fiews ime Dom Wavefo	TDR: Z TDR: C TDR: L	Ref 1	Ohms 996.81 fF 2.4920	Ohms 996.81 fF 2.4920	Ohms 996.81 fF 2.4920	Ohms 0.0000 F 0.0000 H	0.0000 F 0.0000 H		996.81 fF 2.4920	996.81 fF 2.4920	996.81 fF 2.4920	0.0000 F	0.0000 F 0.0000 H	2	
near grant and a state	fiews ime Dom Wavefo	TDR: Z TDR: C TDR: L	Ref 1 Ref 1	Ohms 996.81 fF 2.4920 nH	Ohms 996.81 fF 2.4920 nH	Ohms 996.81 fF 2.4920	Ohms 0.0000 F 0.0000 H	0.0000 F 0.0000 H		996.81 fF 2.4920	996.81 fF 2.4920	996.81 fF 2.4920	0.0000 F	0.0000 F 0.0000 H	2	
Voltage for L=2.5nH & C=1.0pF         Mean 1         -734 m	fiews ime Dom Wavefo	TDR: Z TDR: C TDR: L	Ref 1 Ref 1	Ohms 996.81 fF 2.4920 nH	Ohms 996.81 fF 2.4920 nH	Ohms 996.81 fF 2.4920	Ohms 0.0000 F 0.0000 H	0.0000 F 0.0000 H		996.81 fF 2.4920	996.81 fF 2.4920	996.81 fF 2.4920	0.0000 F	0.0000 F 0.0000 H	2 -39.4 m	
Mean 1 Mean 1	Meas 1 Fiews Time Dom Wavefo	TDR: Z TDR: C TDR: L	Ref 1 Ref 1	Ohms 996.81 fF 2.4920 nH	Ohms 996.81 fF 2.4920 nH	Ohms 996.81 fF 2.4920	Ohms 0.0000 F 0.0000 H	0.0000 F 0.0000 H		996.81 fF 2.4920	996.81 fF 2.4920	996.81 fF 2.4920	0.0000 F	0.0000 F 0.0000 H	2 09.4 m -76.8 m 118.2 m	

### **Ordering information**

#### Models and software licenses

Product	Options	Supported instruments	Bandwidth available
New instrument purchase option	6-TDR	6 Series B MSO (MSO64B,	• 1 GHz
Product upgrade option	SUP6-TDR	MSO66B, and MSO68B	• 2.5 GHz
Floating license	SUP6-TDR-FL		• 4 GHz
			• 6 GHz
			• 8 GHz
			• 10 GHz
New instrument purchase option	5-TDR	5 Series B MSO (MSO54B,	• 350 MHz
Product upgrade option	SUP5-TDR	MSO56B, and MSO58B), MSO58LP	• 500 MHz
Floating license	SUP5-TDR-FL	M3036LF	• 1 GHz
			• 2 GHz
New instrument purchase option	4-TDR	4 Series B MSO (MSO44B and	• 200 MHz
Product upgrade option	SUP4-TDR	MSO46B)	• 350 MHz
Floating license	SUP4-TDR-FL		• 500 MHz
			• 1 GHz
			• 1.5 GHz

#### Software bundles

Bundle	Options	Description
6 Series B MSO	6-PRO-POWER-1Y	1 Year License Pro Power Bundle
	6-PRO-POWER-PER	Perpetual License Pro Power Bundle
	6-ULTIMATE-1Y	1 Year License Ultimate Bundle
	6-ULTIMATE-PER	Perpetual License Ultimate Bundle
	6-ULTIMATE-3Y	3 Year License Ultimate Bundle
	6-ULTIMATE-FT	Floating License Ultimate Bundle
5 Series B MSO	5-PRO-POWER-1Y	1 Year License Pro Power Bundle
	5-PRO-POWER-PER	Perpetual License Pro Power Bundle
	5-ULTIMATE-1Y	1 Year License Ultimate Bundle
	5-ULTIMATE-PER	Perpetual License Ultimate Bundle
	5-ULTIMATE-3Y	3 Year License Ultimate Bundle
	5-ULTIMATE-FT	Floating License Ultimate Bundle
Table continued		

Bundle	Options	Description
4 Series B MSO	4-PRO-POWER-1Y	1 Year License Pro Power Bundle
	4-PRO-POWER-PER	Perpetual License Pro Power Bundle
	4-ULTIMATE-1Y	1 Year License Ultimate Bundle
	4-ULTIMATE-PER	Perpetual License Ultimate Bundle
	4-ULTIMATE-3Y	3 Year License Ultimate Bundle
	4-ULTIMATE-FT	Floating License Ultimate Bundle

#### **Recommended accessories**

Model	Description	Quantity
J2154A PerfectPulse® Differential TDR (J2154A)	<ul> <li>PerfectPulse<sup>®</sup> Differential TDR Picotest TDR Demo Trace Board</li> <li>Two (2) 12" BNC-SMA PDN Cables<sup>®</sup> USB-C Cable</li> </ul>	1
P2103A Differential TDR Probe (P2103A)	<ul> <li>Differential TDR Probe with 50 and 100 mil pitch tips</li> <li>Two (2) 0.5m SMA-Mini SMP PDN Cables<sup>®</sup> TDR DiffPair Demo Board</li> </ul>	1
P2105A 1-Port TDR Probe (P2105A-1X)	<ul> <li>1-Port Probe Head</li> <li>One (1) 1m SMA-Mini SMP PDN Cable<sup>®</sup></li> </ul>	1



Tektronix is ISO 14001:2015 and ISO 9001:2015 certified by DEKRA.

ASEAN / Australasia (65) 6356 3900 Belgium 00800 2255 4835\* Central East Europe and the Baltics +41 52 675 3777 Finland +41 52 675 3777 Hong Kong 400 820 5835 Japan 81 (120) 441 046 Middle East, Asia, and North Africa +41 52 675 3777 People's Republic of China 400 820 5835 Republic of Korea +82 2 565 1455 Spain 00800 2255 4835\* Taiwan 886 (2) 2656 6688 Austria 00800 2255 4835\* Brazil +55 (11) 3759 7627 Central Europe & Greece +41 52 675 3777 France 00800 2255 4835\* India 000 800 650 1835 Luxembourg +41 52 675 3777 The Netherlands 00800 2255 4835\* Poland +41 52 675 3777 Russia & CIS +7 (495) 6647564 Sweden 00800 2255 4835\* United Kingdom & Ireland 00800 2255 4835\* Balkans, Israel, South Africa and other ISE Countries +41 52 675 3777 Canada 1 800 833 9200 Denmark +45 80 88 1401 Germany 00800 2255 4835\* Italy 00800 2255 4835\* Mexico, Central/South America & Caribbean 52 (55) 56 04 50 90 Norway 800 16098 Portugal 80 08 12370 South Africa +41 52 675 3777 Switzerland 00800 2255 4835\* USA 1 800 833 9200

\* European toll-free number. If not accessible, call: +41 52 675 3777

For Further Information. Tektronix maintains a comprehensive, constantly expanding collection of application notes, technical briefs and other resources to help engineers working on the cutting edge of technology. Please visit www.tek.com. Copyright © Tektronix, Inc. All rights reserved. Tektronix products are covered by U.S. and foreign patents, issued and pending. Information in this publication supersedes that in all previously published material. Specification and price change privileges reserved. TEKTRONIX and TEK are registered trademarks of Tektronix, Inc. All other trade names referenced are the service marks, trademarks, or registered trademarks of their respective companies.

> 31 Jul 2024 61W-74085-0 tek.com

