




Pulsed I-V Characterization of MOSFETs Using KickStart Software

APPLICATION NOTE

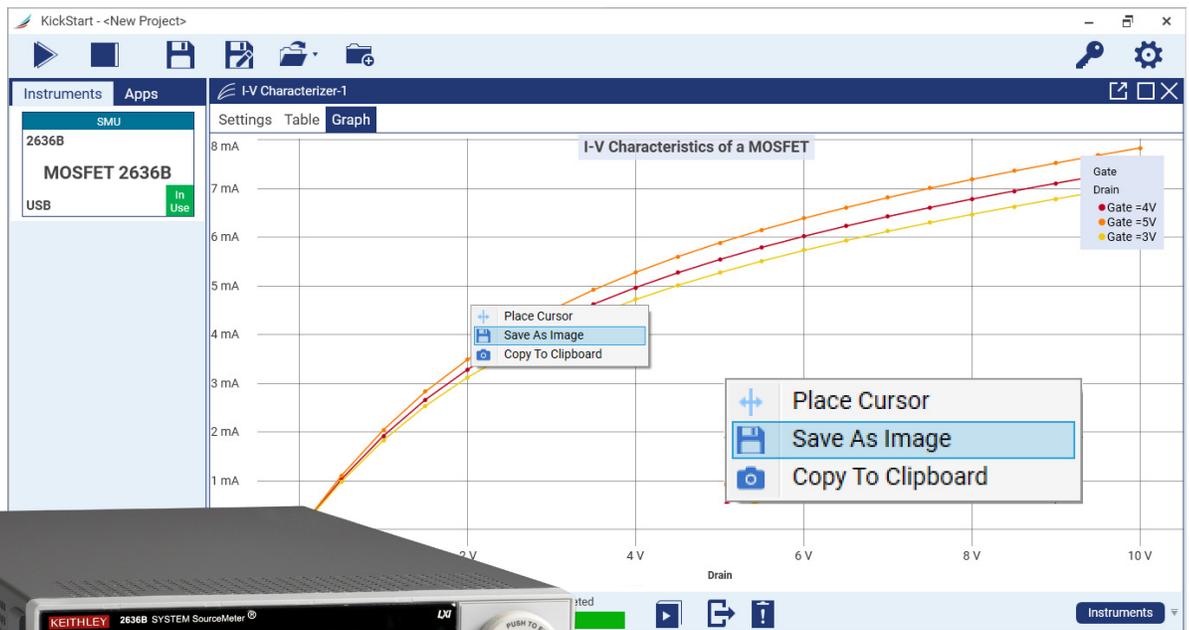

Introduction

Manufacturers of transistor devices tend to start their design prototype evaluations to yield characteristic information, while still working in their research and design labs. While straight DC testing is the norm in most cases, some of these devices are expected to be operated with a pulsed or briefly-on (switched) stimulus to yield a certain behavior or outcome. The test setups may seem simple on the surface but learning and understanding how to use the instrumentation involved in said tests can often require a steep learning curve. Even after learning to physically operate the equipment, generating the code to automate the testing process can also come with its own challenges as well as a time investment. Ideally, there would be some sort of existing software that can intuitively simplify as much of the testing and automation process as possible.

This document will first introduce the reasons why pulse-based testing might be beneficial for a semiconductor device. Further details are supplied that specifically indicate the application of pulsed test for MOSFET transistors. Additionally, specifics are provided to help guide the reader in using the Keithley KickStart Software to establish automated tests for these devices and generate both tabular and graphical representations of their data.

Benefits of Pulse Testing

The most common reason for using pulsed measurements is to reduce joule heating (i.e., device self-heating). When a test signal is applied to a device under test (DUT), the device consumes power and turns it into heat, increasing the device's temperature. The longer that power is applied, the hotter the device becomes, which affects its electrical characteristics. If a DUT's temperature can't be kept constant, it can't be characterized accurately. However, with pulsed testing, power is only applied to the DUT briefly, minimizing self-heating. Duty cycles of one percent or less are recommended to reduce the average power dissipated by the device over time. Pulsed measurements are designed to minimize the power applied to the device so much that its internal temperature rise is nearly zero, so heating will have little or no effect on the measurements.

Because they minimize joule heating, pulsed measurements are widely used in nanotechnology research, where it is necessary to characterize delicate materials and structures like CNT FETs, semiconductor nanowires, graphene-based devices, molecular-based electronics, and MEMs structures. The heat produced with traditional DC measurement techniques could easily alter or destroy them.

To survive high levels of continuous DC power, devices like MOSFETs and IGBTs require packaging with a solid metal backing and even heat-sinking. However, during the early stages of device development, packaging these experimental devices would be much too costly and time consuming, so early testing is performed at the wafer level. Because pulsed testing minimizes the power applied to a device, it allows for complete characterization of these devices on the probe station, reducing the cost of test.

The reduction in joule heating that pulsed testing allows also simplifies the process of characterizing devices at varying temperatures.

Semiconductor devices are typically so small that it is impossible to measure their temperature directly with a probe. With pulsed measurements, however, the self-heating of the device can be made so insignificant that its internal temperature can be assumed to be equal to the surrounding ambient temperature. To characterize the device at a specific temperature, simply change the surrounding ambient temperature with a thermal chamber or temperature-controlled heat sink. Once the device has reached thermal equilibrium at the new ambient temperature, repeat the pulsed measurements to characterize the device at the new temperature.

Pulsed measurements are also useful for extending instruments' operating boundaries. A growing number of power semiconductor devices are capable of operating at 100 A or higher but building an instrument capable of sourcing this much DC current would be prohibitive. However, when delivering pulse mode power, these high-power outputs are only needed for very short intervals, which can be done by storing the required energy from a smaller power supply within capacitors and delivering it all in one short burst. This allows instruments like a high-power source measure unit (SMU) to source high current (or voltage) levels with precision current and voltage measurements.

Measuring I-V Curves of a MOSFET

Semiconductor devices (e.g., transistors) are the foundation of electronic products. Most devices need to be electrically characterized in various settings of the research and development process: research labs, fabs, universities, device manufacturers, etc. Keithley is the industry leader in I-V characterization of transistors. Using SMU instruments for semiconductor characterization is ideal because of their ability to both source and measure, especially low currents. Testing devices that have more than two terminals usually requires more than one SMU.

However, a two-channel SMU can perform most characterizations on a single field effect transistor (FET).

Figure 1 shows two SMUs in use for I-V characterization of a MOSFET.

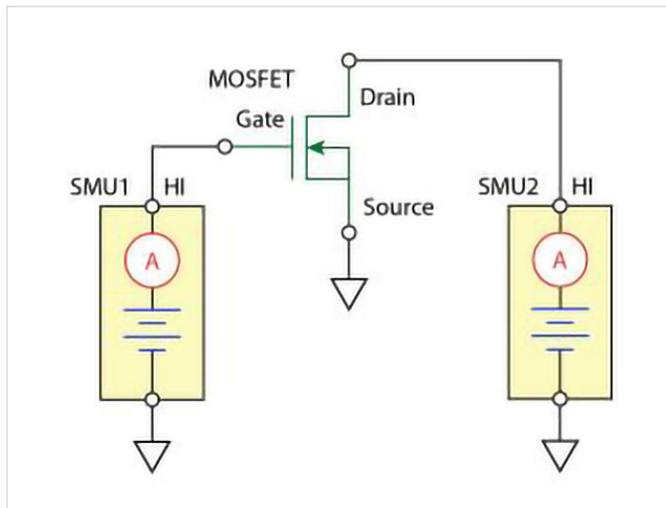


Figure 1: Circuit diagram showing a two-channel SMU in use for I-V characterization of a MOSFET.

Examples of common measurements made in I-V characterization of transistors are as follows:

- Drain Voltage (V_D) - The voltage appearing at the drain terminal of a FET is called the drain voltage.
- Drain Current (I_D) - The current taken from the voltage source by the drain terminal is called the drain current. Drain current can yield a lot of insight on the device's operation and efficiency.

Other common measurements include:

- Gate Voltage (V_G)
- Gate Current (I_G)
- Threshold Voltage (V_{TH})

Figure 2 shows a MOSFET drain family of curves generated by using a dual-channel Keithley SourceMeter® SMU instrument.

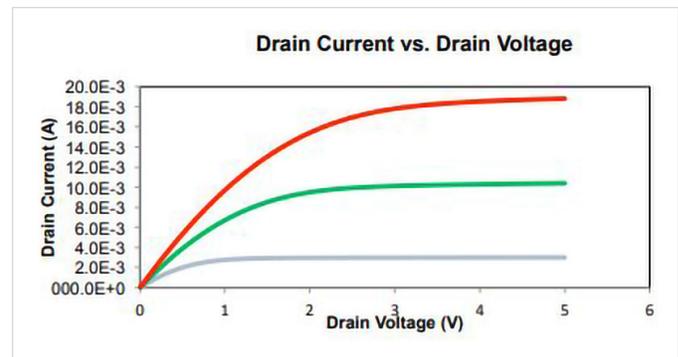


Figure 2: I-V curve of a MOSFET.

Pulsed I-V characterization (as alluded to previously, wherein voltages and currents are applied for a very short time and at a limited duty cycle) is another common way to measure I-V curves and can be accomplished using the KickStart Software. Pulsed I-V measurements can reduce test times and allow for MOSFET characterization without exceeding its safe operating area or causing the device to self-heat and its parameters to shift.

Two pulsed I-V channels are typically used to measure these MOSFET I-V curves with one channel connected to the gate and the other to the drain. The ground of each channel is connected to the MOSFET source pin.

To construct the transistor curves, the gate channel first applies voltage to the gate, then the drain channel sweeps V_{DS} through a range of values, measuring the resulting current at each point. Next, the gate channel applies a different voltage to the gate and the process repeats, constructing the next MOSFET I-V curve in the set.

A SMU can simplify this process with built-in pulsed and DC sweeps, including linear staircase, logarithmic staircase, and custom sweeps (**Figure 3**). All sweep configurations can be programmed for single-event or continuous operation.

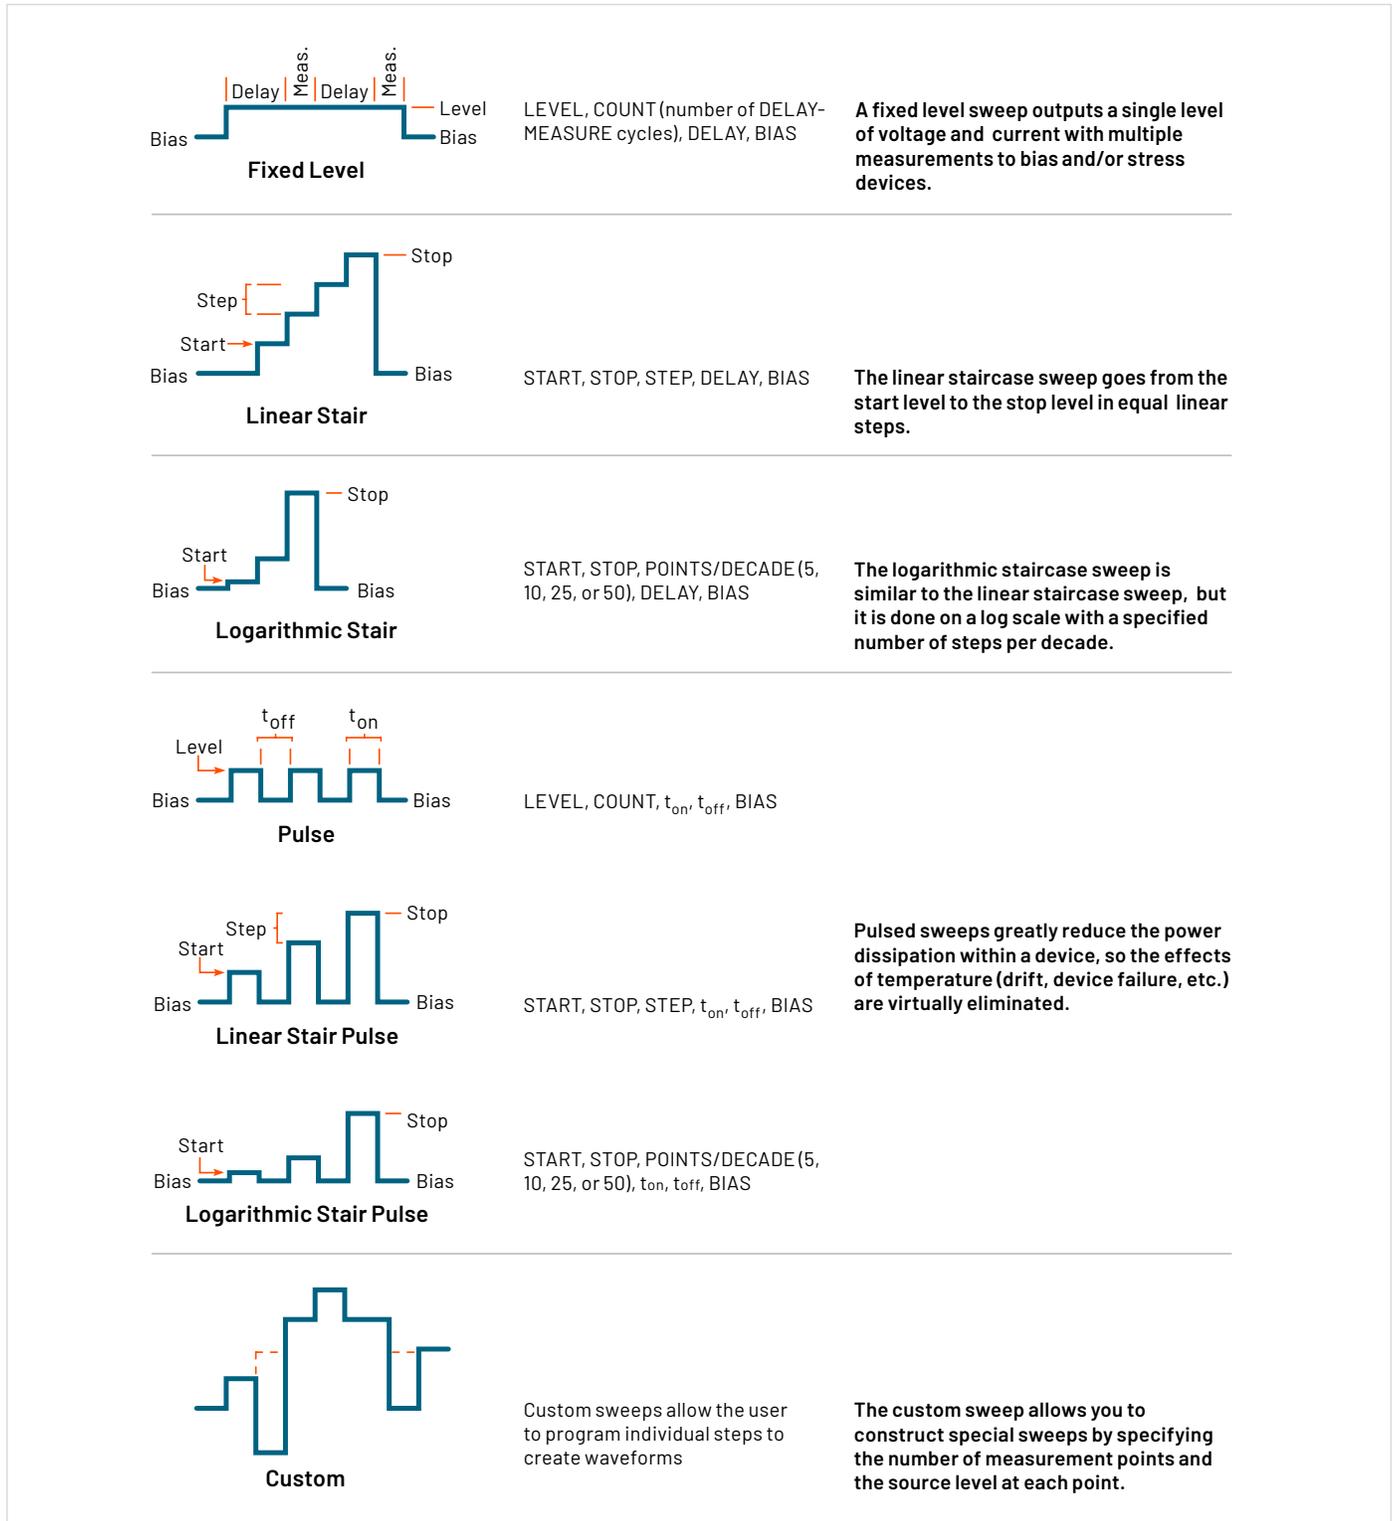


Figure 3: Examples of DC and pulsed sweeps.

Measuring Pulsed I-V Characteristics of FETs in KickStart

This example application demonstrates how to use a Series 2636B SMU instrument to perform pulsed I-V characterization of FETs. The 2636B is a good choice for semiconductor device testing because it can quickly and accurately source and measure both current and voltage.

Determining the I-V parameters of FETs helps you ensure that they function properly in their intended applications, and that they meet specifications. There are many I-V tests that you can perform with the 2636B, including gate leakage, breakdown voltage, threshold voltage, transfer characteristics, and drain current. The number of 2636B instruments required for testing depends on the number of FET terminals that must be biased and measured.

This application shows you how to perform a drain family of curves (V_{ds} - I_d) on a three-terminal MOSFET. The MOSFET is the most commonly used FET because it is the basis for digital integrated circuits.

Equipment and Software Required

- One 2636B SourceMeter SMU Instrument
- Keithley KickStart Startup Software version 2.6.0 or later, installed on your computer; you can download the KickStart software from tek.com/keithley-kickstart.
- Four triaxial cables (Keithley 7078-TRX-10)
- A metal-shielded test fixture or probe station with female triaxial connectors
- A triaxial tee connector (Keithley 237-TRX-T)
- Use one GPIB cable, one USB cable, or one ethernet cable

Set up Remote Connections

This application is configured to run remotely. You can run this application from any of the supported communication interfaces for the instrument (GPIB, USB, or ethernet).

Figure 4 shows the rear-panel connection locations for the remote communication interfaces.

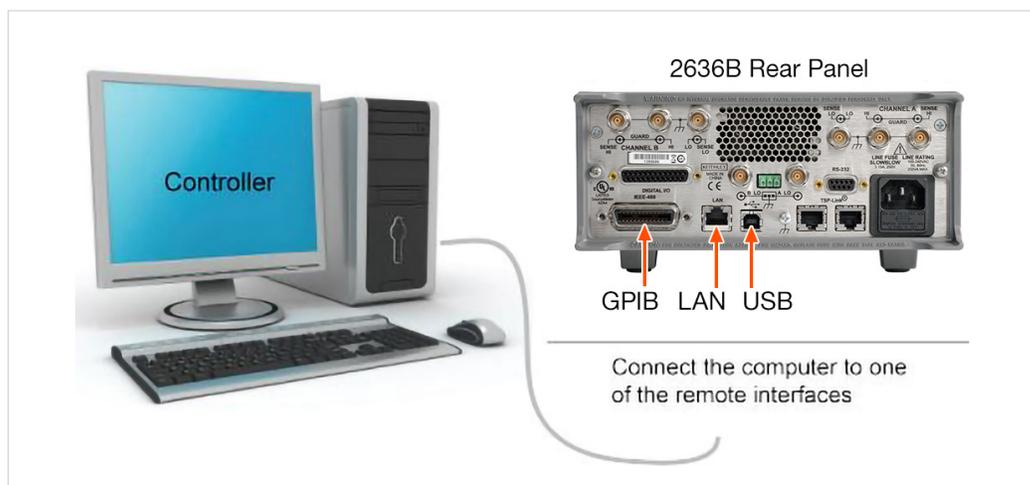


Figure 4: 2636B remote interface connections.

Device Connections

To perform a drain family of curves, configure both instruments to source voltage and measure current.

In this circuit, you connect the Force HI terminal of 2636B SMUB to the gate of the MOSFET and connect the Force HI terminal of 2636B SMUA to the drain.

You connect the source terminal of the MOSFET to the Force LO terminals of both 2636B channels. You need a second 2636B (or a 2635B single channel SMU) if you want to source and measure from all three terminals.

Figure 5 shows an I-V test configuration for a MOSFET using the two 2636B instrument channels.

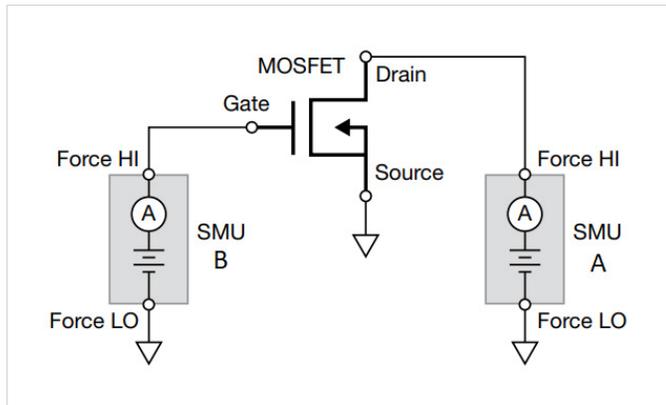


Figure 5: Three-terminal I-V test configuration for a MOSFET.

Figure 6 shows the connections from the rear-panel terminals of the 2636B channels to the MOSFET.

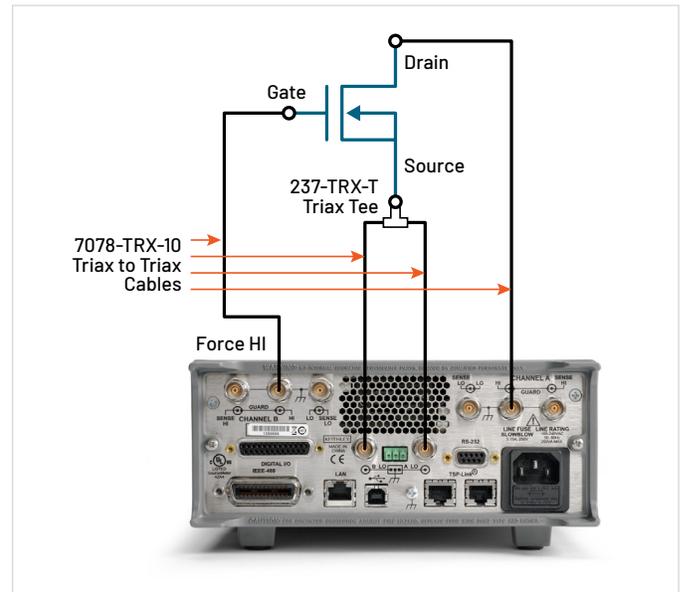


Figure 6: Two 2636B channels configured to test a three-terminal MOSFET.

For this application, connect four triaxial cables (7078-TRX-10) from the 2636B rear-panel female triaxial connectors to the MOSFET device. Mount the MOSFET device in a metal-shielded test fixture with female triaxial connectors. Connect the Force LO terminals of both 2636B channels to the Source terminal of the MOSFET using a triaxial tee connector (237-TRX-T).

Launch KickStart and Set Up the Test

Once the communication cable is connected between the computer and the 2636B, you are ready to launch the KickStart software.

To create the test project:

1. Launch the KickStart software. The startup screen is displayed, as shown in **Figure 7**.

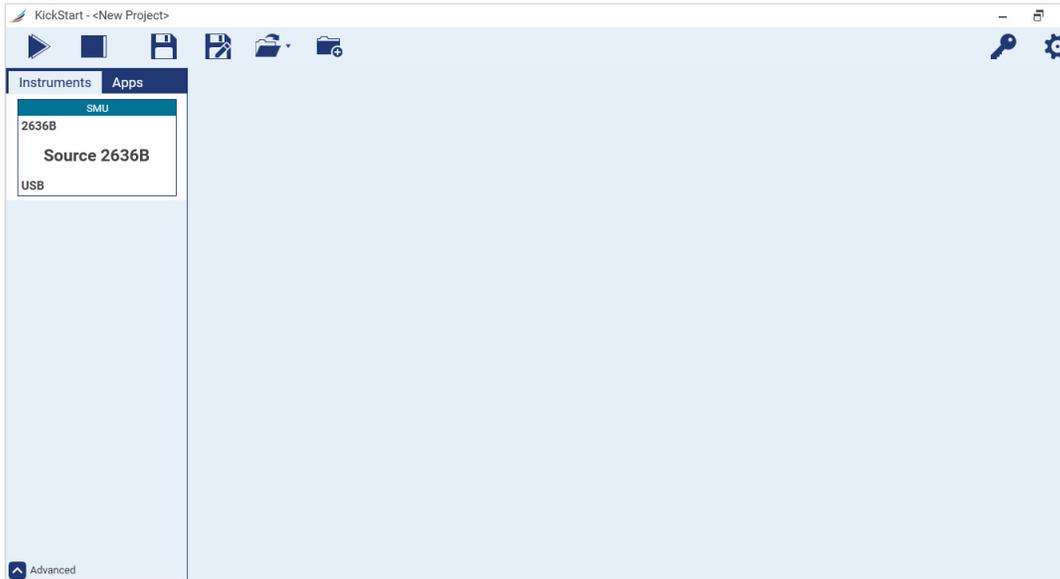


Figure 7: KickStart software startup page.

2. In the instrument instance, click on the centered label to rename to "MOSFET 2636B". Note that this is not a mandatory step but a means to show how you might apply customized names to your instruments in the event that you have several SMUs or other instruments to choose from in the KickStart user interface.

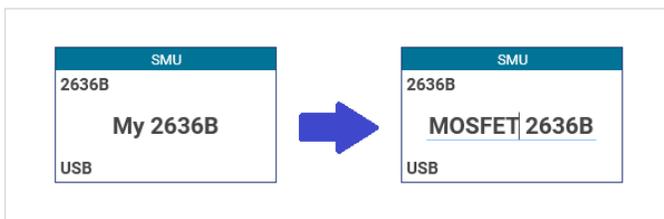


Figure 8: The user can rename instrument instances.

3. Either double-click or drag the MOSFET 2636B instrument into the main app staging area then select **I-V Characterizer**.

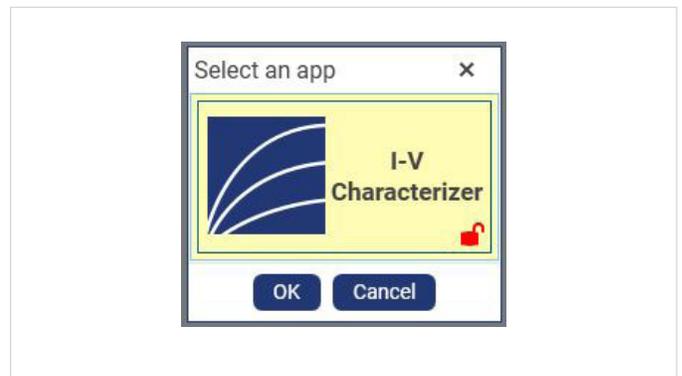


Figure 9: Select the I-V Characterizer App.

4. Navigate to the SMU-1 channel settings tab and modify the channel label to read "Drain".

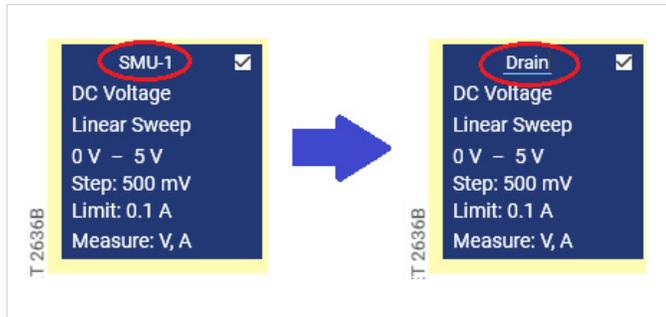


Figure 10: Renaming the SMU channel.

5. Apply the following drain source changes (illustrated in Figure 11):
 - a. Set the Type to **Pulse**.
 - b. Set the Function to **Voltage**.
 - c. Set the Mode to **Sweep**.
 - d. Set the Start level to **0 V**.
 - e. Set the Stop level to **10 V**.

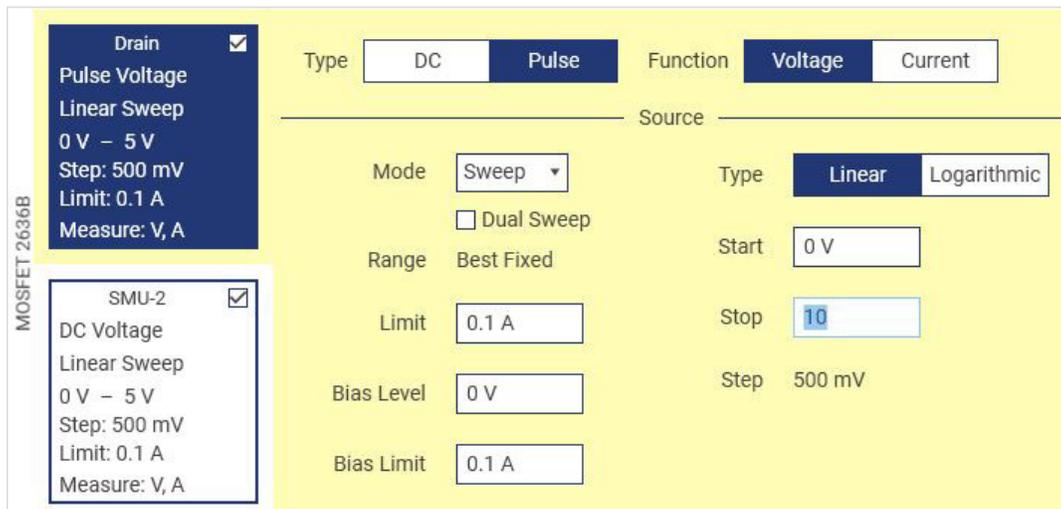


Figure 11: Apply drain source type and output settings.

6. Navigate to the SMU-2 settings tab and modify the channel label to read "Gate".

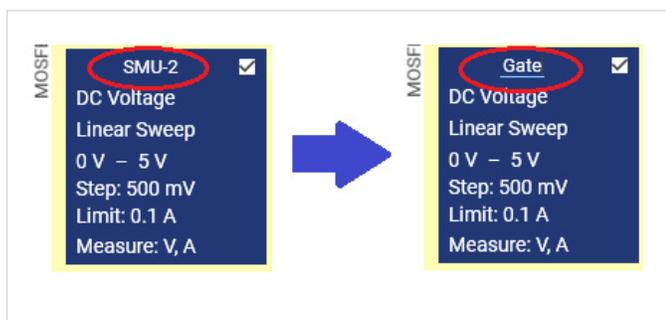


Figure 12: Renaming the SMU channel.

7. Apply the following Gate source changes (illustrated in Figure 13):
 - a. Set the Type to **Pulse**.
 - b. Set the Function to **Voltage**.
 - c. Set the Mode to **Sweep**.
 - d. Set the Start level to **3 V**.
 - e. Set the Stop level to **5 V**.
 - f. Set the Limit to **10 mA**.

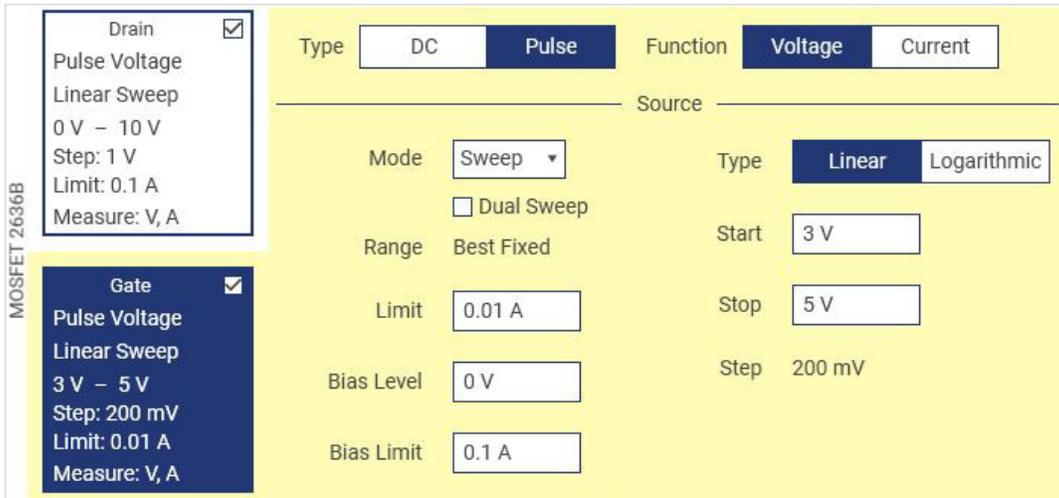


Figure 13: Apply gate source type and output settings.

8. In the Measure settings area, change the Range to **10 mA**.
9. Navigate to the Common Settings pane and apply the following settings:
 - a. Set the Source/Sweep Points to **21**.
 - b. Set the Source to Measure Delay to **5e-4 s**.
 - c. Set the Width to **10 ms**.

- d. Set the Off Time to **100 ms**.
- e. Set the Stepper to **Gate**.
- f. Set the Stepper Points to **3**.

Note, too, how the Waveform Viewer pane updates to show the output of each SMU channel, with the Gate stepper (SMU-2) applying a set level for each of its defined steps and the Drain sweeper (SMU-1) performing a sweep at each of the gate step levels.



Figure 14: Apply the Common Settings.

10. Click on the **Run** button to execute the test.
11. Click on the **Graph** tab at the top of the KickStart user interface.
12. Hover your mouse cursor above the legend and de-select the Current data for the Gate.

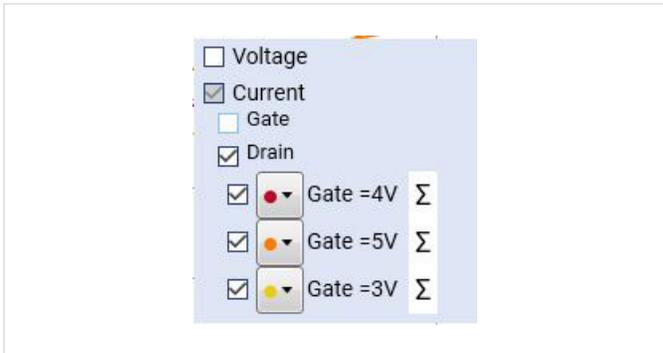


Figure 15: Update the legend settings to plot only Drain current on the y-axis.

13. Hover your mouse cursor in the top center area of the graph to reveal the title entry field and provide a title of your choosing to your graph.

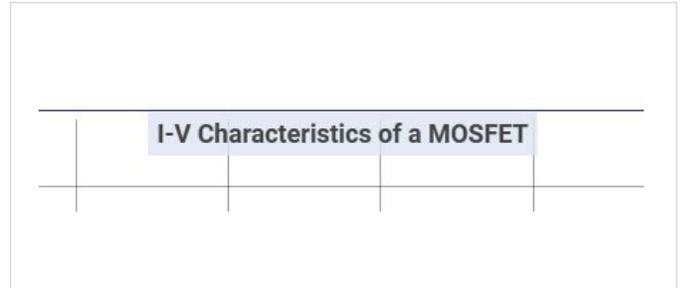


Figure 16: Provide your test data a title.

14. You have immediate visualization of your data but also have the option to save the graph image as a *.png file or copy to the clipboard for immediate pasting into messages or reports.



Figure 17: Pulse width modulated output data presented graphically.

Summary

The primary reason for pulse testing is to reduce device self-heating that happens when the device is activated – especially at its maximum operating potential – for increasing periods of time. Early device designs where proper packaging or heat sinking are not yet in place are the perfect stage at which to employ pulse testing. For IGBTs and power MOSFETs this can help yield early insights into device performance, potentially leading to flaw detection and design modifications.

Whatever your pulse-based testing needs, Keithley source measure units and KickStart software are an ideal pairing to help quickly establish your test setups, collect data, and share tabular and graphical insights with your colleagues. The KickStart examples shared within this document use the Series 2636B SMU that are capable of achieving 10 A, 50 W in its pulse operating region. However, keep in mind that KickStart also supports the 2651A (for higher current up to 50 A) and 2657A (for higher voltages up to 3000 V) SMUs.

Contact Information:

Australia 1 800 709 465
Austria* 00800 2255 4835
Balkans, Israel, South Africa and other ISE Countries +41 52 675 3777
Belgium* 00800 2255 4835
Brazil +55 (11) 3530-8901
Canada 1 800 833 9200
Central East Europe / Baltics +41 52 675 3777
Central Europe / Greece +41 52 675 3777
Denmark +45 80 88 1401
Finland +41 52 675 3777
France* 00800 2255 4835
Germany* 00800 2255 4835
Hong Kong 400 820 5835
India 000 800 650 1835
Indonesia 007 803 601 5249
Italy 00800 2255 4835
Japan 81 (3) 6714 3086
Luxembourg +41 52 675 3777
Malaysia 1 800 22 55835
Mexico, Central/South America and Caribbean 52 (55) 88 69 35 25
Middle East, Asia, and North Africa +41 52 675 3777
The Netherlands* 00800 2255 4835
New Zealand 0800 800 238
Norway 800 16098
People's Republic of China 400 820 5835
Philippines 1 800 1601 0077
Poland +41 52 675 3777
Portugal 80 08 12370
Republic of Korea +82 2 565 1455
Russia / CIS +7 (495) 6647564
Singapore 800 6011 473
South Africa +41 52 675 3777
Spain* 00800 2255 4835
Sweden* 00800 2255 4835
Switzerland* 00800 2255 4835
Taiwan 886 (2) 2656 6688
Thailand 1 800 011 931
United Kingdom / Ireland* 00800 2255 4835
USA 1 800 833 9200
Vietnam 12060128

* European toll-free number. If not accessible, call: +41 52 675 3777

Rev. 02.2022

Find more valuable resources at [TEK.COM](https://www.tek.com)

Copyright © Tektronix. All rights reserved. Tektronix products are covered by U.S. and foreign patents, issued and pending. Information in this publication supersedes that in all previously published material. Specification and price change privileges reserved. TEKTRONIX and TEK are registered trademarks of Tektronix, Inc. All other trade names referenced are the service marks, trademarks or registered trademarks of their respective companies.

060425 1KW-73840-0

