

**Model 175-AV**  
**Autoranging Multimeter**  
Instruction Manual

Contains Operating and Servicing Information

**KEITHLEY**

# WARRANTY

Keithley Instruments, Inc. warrants this product to be free from defects in material and workmanship for a period of 1 year from date of shipment.

Keithley Instruments, Inc. warrants the following items for 90 days from the date of shipment: probes, cables, rechargeable batteries, diskettes, and documentation.

During the warranty period, we will, at our option, either repair or replace any product that proves to be defective.

To exercise this warranty, write or call your local Keithley representative, or contact Keithley headquarters in Cleveland, Ohio. You will be given prompt assistance and return instructions. Send the product, transportation prepaid, to the indicated service facility. Repairs will be made and the product returned, transportation prepaid. Repaired or replaced products are warranted for the balance of the original warranty period, or at least 90 days.

## LIMITATION OF WARRANTY

This warranty does not apply to defects resulting from product modification without Keithley's express written consent, or misuse of any product or part. This warranty also does not apply to fuses, software, non-rechargeable batteries, damage from battery leakage, or problems arising from normal wear or failure to follow instructions.

THIS WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR USE. THE REMEDIES PROVIDED HEREIN ARE BUYER'S SOLE AND EXCLUSIVE REMEDIES.

NEITHER KEITHLEY INSTRUMENTS, INC. NOR ANY OF ITS EMPLOYEES SHALL BE LIABLE FOR ANY DIRECT, INDIRECT, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF THE USE OF ITS INSTRUMENTS AND SOFTWARE EVEN IF KEITHLEY INSTRUMENTS, INC., HAS BEEN ADVISED IN ADVANCE OF THE POSSIBILITY OF SUCH DAMAGES. SUCH EXCLUDED DAMAGES SHALL INCLUDE, BUT ARE NOT LIMITED TO: COSTS OF REMOVAL AND INSTALLATION, LOSSES SUSTAINED AS THE RESULT OF INJURY TO ANY PERSON, OR DAMAGE TO PROPERTY.



Keithley Instruments, Inc. • 28775 Aurora Road • Cleveland, OH 44139 • 440-248-0400 • Fax: 440-248-6168 • <http://www.keithley.com>

BELGIUM:	Keithley Instruments B.V.	Bergensesteenweg 709 • B-1600 Sint-Pieters-Leeuw • 02/363 00 40 • Fax: 02/363 00 64
CHINA:	Keithley Instruments China	Yuan Chen Xin Building, Room 705 • 12 Yumin Road, Dewai, Madian • Beijing 100029 • 8610-62022886 • Fax: 8610-62022892
FRANCE:	Keithley Instruments Sarl	B.P. 60 • 3, allée des Garays • 91122 Palaiseau Cédex • 01 64 53 20 20 • Fax: 01 60 11 77 26
GERMANY:	Keithley Instruments GmbH	Landsberger Strasse 65 • D-82110 Germering • 089/84 93 07-40 • Fax: 089/84 93 07-34
GREAT BRITAIN:	Keithley Instruments Ltd	The Minster • 58 Portman Road • Reading, Berkshire RG30 1EA • 0118-9 57 56 66 • Fax: 0118-9 59 64 69
INDIA:	Keithley Instruments GmbH	Flat 2B, WILOCRISSA • 14, Rest House Crescent • Bangalore 560 001 • 91-80-509-1320/21 • Fax: 91-80-509-1322
ITALY:	Keithley Instruments s.r.l.	Viale S. Gimignano, 38 • 20146 Milano • 02/48 30 30 08 • Fax: 02/48 30 22 74
NETHERLANDS:	Keithley Instruments B.V.	Postbus 559 • 4200 AN Gorinchem • 0183-635333 • Fax: 0183-630821
SWITZERLAND:	Keithley Instruments SA	Kriesbachstrasse 4 • 8600 Dübendorf • 01-821 94 44 • Fax: 01-820 30 81
TAIWAN:	Keithley Instruments Taiwan	1 Fl. 85 Po Ai Street • Hsinchu, Taiwan, R.O.C. • 886-3572-9077 • Fax: 886-3572-903

# Model 175-AV Autoranging Multimeter Instruction Manual

©1989, Keithley Instruments, Inc.  
All rights reserved.  
Cleveland, Ohio, U.S.A.  
Third Printing, October 1999  
Document Number: 175-AV-901-01 Rev. C

# Manual Print History

The print history shown below lists the printing dates of all Revisions and Addenda created for this manual. The Revision Level letter increases alphabetically as the manual undergoes subsequent updates. Addenda, which are released between Revisions, contain important change information that the user should incorporate immediately into the manual. Addenda are numbered sequentially. When a new Revision is created, all Addenda associated with the previous Revision of the manual are incorporated into the new Revision of the manual. Each new Revision includes a revised copy of this print history page.

Revision B (Document Number 175-AV-901-01) .....October 1992  
Revision C (Document Number 175-AV-901-01) .....October 1999

# SAFETY PRECAUTIONS

The following safety precautions should be observed before operating the Model 175-AV.

This instrument is intended for use by qualified personnel who recognize shock hazards and are familiar with the safety precautions required to avoid possible injury. Read over the manual carefully before operating this instrument.

Exercise extreme caution when a shock hazard is present at the instrument's input. The American National Standards Institute (ANSI) states that a shock hazard exists when voltage levels greater than 30V rms or 42.4V peak are present. **A good safety practice is to expect that a hazardous voltage is present in any unknown circuit before measuring.**

Inspect the test leads for possible wear, cracks or breaks before each use. If any defects are found, replace the test leads.

For optimum safety do not touch the test leads or the instrument while power is applied to the circuit under test. Turn the power off and discharge all capacitors before connecting or disconnecting the instrument.

Do not touch any object that could provide a current path to the common side of the circuit under test or power line (earth) ground. Always make measurements with dry hands while standing on a dry, insulated surface, capable of withstanding the voltage being measured.

Exercise extreme safety when testing high energy power circuits (ac line or mains, etc.). Refer to High Energy Circuit Safety Precautions found in paragraph 2.2.

Do not exceed the instrument's maximum allowable input as defined in the specifications and operation section.

Instrumentation and accessories should not be connected to humans.



# Safety Precautions

---

The following safety precautions should be observed before using this product and any associated instrumentation. Although some instruments and accessories would normally be used with non-hazardous voltages, there are situations where hazardous conditions may be present.

This product is intended for use by qualified personnel who recognize shock hazards and are familiar with the safety precautions required to avoid possible injury. Read the operating information carefully before using the product.

The types of product users are:

**Responsible body** is the individual or group responsible for the use and maintenance of equipment, for ensuring that the equipment is operated within its specifications and operating limits, and for ensuring that operators are adequately trained.

**Operators** use the product for its intended function. They must be trained in electrical safety procedures and proper use of the instrument. They must be protected from electric shock and contact with hazardous live circuits.

**Maintenance personnel** perform routine procedures on the product to keep it operating, for example, setting the line voltage or replacing consumable materials. Maintenance procedures are described in the manual. The procedures explicitly state if the operator may perform them. Otherwise, they should be performed only by service personnel.

**Service personnel** are trained to work on live circuits, and perform safe installations and repairs of products. Only properly trained service personnel may perform installation and service procedures.

Exercise extreme caution when a shock hazard is present. Lethal voltage may be present on cable connector jacks or test fixtures. The American National Standards Institute (ANSI) states that a shock hazard exists when voltage levels greater than 30V RMS, 42.4V peak, or 60VDC are present. **A good safety practice is to expect that hazardous voltage is present in any unknown circuit before measuring.**

Users of this product must be protected from electric shock at all times. The responsible body must ensure that users are prevented access and/or insulated from every connection point. In some cases, connections must be exposed to potential human contact. Product users in these circumstances must be trained to protect themselves from the risk of electric shock. If the circuit is capable of operating at or above 1000 volts, **no conductive part of the circuit may be exposed.**

As described in the International Electrotechnical Commission (IEC) Standard IEC 664, digital multimeter measuring circuits (e.g., Keithley Models 175A, 199, 2000, 2001, 2002, and 2010) are Installation Category II. All other instruments' signal terminals are Installation Category I and must not be connected to mains.

Do not connect switching cards directly to unlimited power circuits. They are intended to be used with impedance limited sources. NEVER connect switching cards directly to AC mains. When connecting sources to switching cards, install protective devices to limit fault current and voltage to the card.

Before operating an instrument, make sure the line cord is connected to a properly grounded power receptacle. Inspect the connecting cables, test leads, and jumpers for possible wear, cracks, or breaks before each use.

For maximum safety, do not touch the product, test cables, or any other instruments while power is applied to the circuit under test. ALWAYS remove power from the entire test system and discharge any capacitors before: connecting or disconnecting cables or jumpers, installing or removing switching cards, or making internal changes, such as installing or removing jumpers.

Do not touch any object that could provide a current path to the common side of the circuit under test or power line (earth) ground. Always make measurements with dry hands while standing on a dry, insulated surface capable of withstanding the voltage being measured.

The instrument and accessories must be used in accordance with its specifications and operating instructions or the safety of the equipment may be impaired.

Do not exceed the maximum signal levels of the instruments and accessories, as defined in the specifications and operating information, and as shown on the instrument or test fixture panels, or switching card.

When fuses are used in a product, replace with same type and rating for continued protection against fire hazard.

Chassis connections must only be used as shield connections for measuring circuits, NOT as safety earth ground connections.

If you are using a test fixture, keep the lid closed while power is applied to the device under test. Safe operation requires the use of a lid interlock.

If a  screw is present, connect it to safety earth ground using the wire recommended in the user documentation.

The  symbol on an instrument indicates that the user should refer to the operating instructions located in the manual.

The  symbol on an instrument shows that it can source or measure 1000 volts or more, including the combined effect of normal and common mode voltages. Use standard safety precautions to avoid personal contact with these voltages.

The **WARNING** heading in a manual explains dangers that might result in personal injury or death. Always read the associated information very carefully before performing the indicated procedure.

The **CAUTION** heading in a manual explains hazards that could damage the instrument. Such damage may invalidate the warranty.

Instrumentation and accessories shall not be connected to humans.

Before performing any maintenance, disconnect the line cord and all test cables.

To maintain protection from electric shock and fire, replacement components in mains circuits, including the power transformer, test leads, and input jacks, must be purchased from Keithley Instruments. Standard fuses, with applicable national safety approvals, may be used if the rating and type are the same. Other components that are not safety related may be purchased from other suppliers as long as they are equivalent to the original component. (Note that selected parts should be purchased only through Keithley Instruments to maintain accuracy and functionality of the product.) If you are unsure about the applicability of a replacement component, call a Keithley Instruments office for information.

To clean an instrument, use a damp cloth or mild, water based cleaner. Clean the exterior of the instrument only. Do not apply cleaner directly to the instrument or allow liquids to enter or spill on the instrument. Products that consist of a circuit board with no case or chassis (e.g., data acquisition board for installation into a computer) should never require cleaning if handled according to instructions. If the board becomes contaminated and operation is affected, the board should be returned to the factory for proper cleaning/servicing.

# MODEL 175-AV SPECIFICATIONS

## DC VOLTS

RANGE	RESOLUTION	ACCURACY (1 Year)	
		18°-28°C	±(%rdg + counts)
200 mV	10 μV		0.03 + 3
2 V	100 μV		0.03 + 2
20 V	1 mV		0.03 + 2
200 V	10 mV		0.03 + 2
1000 V	100 mV		0.03 + 2

INPUT RESISTANCE: 11MΩ on 200mV, 2V, and 20V ranges. 10MΩ on 200V and 1000V ranges. (>1000MΩ on the 200mV and 2V ranges with all function buttons in the out position.)

NORMAL MODE REJECTION RATIO: >60dB at 50Hz, 60Hz ±0.15%.

MAXIMUM ALLOWABLE INPUT: 1000V DC or peak AC (<10 sec. per minute on 200mV and 2V ranges; 300V rms continuous).

SETTLING TIME: 1 sec. to within 1 count of final reading on range.

dB MODE (ref: 600Ω): Accuracy: ±(0.02dB + 1 count) (above -78dBm). Resolution: 0.01dB above 5% of range.

## AC VOLTS

(average responding)

RANGE	ACCURACY (1 Year)*				
	20Hz-50Hz	50Hz-10kHz	10kHz-20kHz	20kHz-50kHz	50kHz-100kHz
2V-750V	1 + 20	0.5 + 20	1 + 40	2.5 + 75	5 + 200
200 mV	1 + 20	0.5 + 20	1.5 + 40	8 + 75	—

\*Above 1800 counts.

MAXIMUM ALLOWABLE INPUT: 750V rms, 1000V peak (<10 seconds per minute on 200mV range; 300V rms continuous).

10<sup>7</sup>V•Hz maximum.

3dB BANDWIDTH: 300kHz typical.

INPUT IMPEDANCE: 10MΩ paralleled by <75pF on 20V, 200V, and 1000V ranges. 11MΩ on 200mV and 2V ranges.

Capacitively coupled.

SETTLING TIME: 2 seconds to within 15 counts of final reading on range.

dB MODE (ref: 600Ω):

RANGE	INPUT	ACCURACY (±dBm)			
		20Hz-10kHz	10kHz-20kHz	20kHz-50kHz	50kHz-100kHz
2V-750V	200 mV to 750 V (-12 to +59.8dBm)	0.2	0.26	0.56	1.2
200 mV	20 mV to 200 mV (-32 to -12 dBm)	0.2	0.3	1	—
	2 mV to 20 mV (-52 to -32 dBm)	2	3	—	—
	1 mV to 2 mV (-58 to -52 dBm)	2*	—	—	—

Resolution: 0.01dB above 5% of range. \*Up to 1kHz.

## OHMS

RANGE	RESOLUTION	ACCURACY (1 Year)		MAX. VOLTAGE ACROSS UNKNOWN ON RANGE
		18°-28°C	±(%rdg + counts)	
200 Ω	10 mΩ		0.05 + 2*	0.2 V
2 kΩ	100 mΩ		0.05 + 1	2.0 V
20 kΩ	1 Ω		0.05 + 2	0.2 V
200 kΩ	10 Ω		0.05 + 1	2.0 V
2 MΩ **	100 Ω		0.05 + 2	0.2 V
20 MΩ **	1 kΩ		0.2 + 1	2.0 V
200 MΩ **	100 kΩ		2.0 + 1	2.0 V

\*When properly zeroed. \*\*Appropriate range selected automatically.

MAXIMUM ALLOWABLE INPUT: 450V DC or peak AC.

OPEN-CIRCUIT VOLTAGE: +5V.

DIODE TEST: Display reads junction voltage up to 2V. Test current: 0.7mA nominal.

SETTLING TIME: 2 seconds to within 1 count of final reading on range.

## DC AMPS

RANGE	RESOLUTION	MAXIMUM VOLTAGE BURDEN	ACCURACY (1 Year)	
			18°-28°C	±(%rdg + counts)
200 μA	10 nA	0.25 V		0.15 + 2
2 mA	100 nA	0.25 V		0.15 + 2
20 mA	1 μA	0.25 V		0.15 + 2
200 mA	10 μA	0.25 V		0.2 + 2
2000 mA	100 μA	0.5 V		0.2 + 2

OVERLOAD PROTECTION: 2A fuse (250V), externally accessible.

SETTLING TIME: 1 second to within 1 count of final reading.

## AC AMPS

(average responding)

RANGE	MAXIMUM VOLTAGE BURDEN	20Hz-50Hz	ACCURACY (1 Year)*	
			18°-28°C ±(%rdg+counts) 50Hz-10kHz	10kHz-30kHz
200µA-20mA	0.25 V	1 + 20	0.8 + 20	2 + 50
200 mA	0.25 V	1 + 20	0.8 + 20	—
2000 mA	0.5 V	1 + 20	0.8 + 20	—

\*Above 1800 counts.

SETTLING TIME: 2 seconds to within 15 counts of final reading.

## IEEE-488 BUS IMPLEMENTATION (Model 1753 Option)

MULTILINE COMMANDS: DCL, SDC, GET, GTL, UNT, UNL, SPE, SPD.

UNILINE COMMANDS: IFC, REN, EOI, SRQ, ATN.

INTERFACE FUNCTIONS: SH1, AH1, T5, TE0, L4, LE0, SR1, RL2, PP0, DC1, DT1, C0, E1.

PROGRAMMABLE PARAMETERS: Range, REL, dB, EOI, Trigger, Calibration, SRQ, Status, Output Format, Terminator.

## GENERAL

DISPLAY: 4-1/2 digit LCD, 0.5 in. height; polarity, function, range, and status indication.

RANGING: Auto or manual on DC volts, AC volts, ohms; manual on AC amps, DC amps.

AUTORANGING TIME: 300msec. per range.

WARMUP: 1 hour to rated accuracy.

RELATIVE: Pushbutton allows zeroing of on range readings. Allows readings to be made with respect to baseline value. Front panel annunciator indicates REL mode.

DATA LOGGER and MIN/MAX: 100 reading storage capacity; records data at one of six selectable rates from 3 readings/second to 1 reading/hour. Also detects and stores maximum and minimum readings continuously in data logger mode.

CONVERSION RATE: 3 readings per second.

OVERRANGE INDICATION: "OL" displayed.

MAXIMUM COMMON MODE VOLTAGE: 500V peak.

COMMON MODE REJECTION RATIO (1kΩ unbalance): >120dB at DC, 50Hz, 60Hz ±0.15%. >60dB in AC volts.

TEMPERATURE COEFFICIENT (0°-18°C & 28°-50°C): ±(0.1 × applicable accuracy specification)/°C except ±(0.07%+2)/°C for 50Hz-10kHz in AC volts.

ENVIRONMENT: Operating: 0° to 50°C; <80% relative humidity up to 35°C; linearly derate 3% RH/°C, 35° to 50°C. Storage: -40°C to +60°C.

POWER: 105-125V or 210-250V (external switch selected), 50-60Hz, 12VA. Optional 6-hour battery pack, Model 1758.

DIMENSIONS, WEIGHT: 89mm high × 235mm wide × 275mm deep (3.5 in. × 9.25 in. × 10.75 in.). Net weight 1.8kg (3 lbs., 14 oz.).

ACCESSORIES SUPPLIED: Model 1751 Safety Test Leads, instruction manuals (2).

### ACCESSORIES AVAILABLE:

Model 1010:	Single Rack Mounting Kit
Model 1017:	Dual Rack Mounting Kit
Model 1301:	Temperature Probe (-55°C to +150°C)
Model 1600A:	High Voltage Probe (40kV)
Model 1651:	50A Current Shunt
Model 1681:	Clip-On Test Lead Set
Model 1682A:	RF Probe (250MHz)
Model 1684:	Hard Shell Carrying Case
Model 1685:	Clamp-On Current Probe (200A)
Model 1751:	Safety Test Leads
Model 1753-AV:	IEEE-488 Interface
Model 1754:	Universal Test Lead Kit
Model 1755:	Calibration Interface
Model 1758:	Rechargeable Battery Pack
Model 7008-3:	IEEE-488 Digital Cable, 0.9m (3 ft.)
Model 7008-6:	IEEE-488 Digital Cable, 1.8m (6 ft.)

# Table of Contents

## SECTION 1 — General Information

1.1	INTRODUCTION .....	1-1
1.2	FEATURES .....	1-1
1.3	WARRANTY INFORMATION .....	1-1
1.4	MANUAL ADDENDA .....	1-1
1.5	SAFETY SYMBOLS AND TERMS .....	1-1
1.6	SPECIFICATIONS .....	1-2
1.7	INSPECTION .....	1-2
1.8	USING THE MODEL 175-AV MANUAL .....	1-2
1.9	GETTING STARTED .....	1-2
1.10	ACCESSORIES .....	1-3

## SECTION 2 — Bench Operation

2.1	INTRODUCTION .....	2-1
2.2	HIGH ENERGY CIRCUIT SAFETY PRECAUTIONS .....	2-1
2.3	PREPARATION FOR USE .....	2-1
2.3.1	Line Power .....	2-1
2.3.2	Battery Pack Power .....	2-2
2.3.3	Battery Charging .....	2-2
2.4	FRONT PANEL FAMILIARIZATION .....	2-2
2.4.1	Display .....	2-3
2.4.2	Front Panel Controls .....	2-3
2.4.3	Input Terminals .....	2-3
2.4.4	AMPS Fuse Replacement .....	2-3
2.5	ERROR MESSAGES .....	2-4
2.6	OPERATING CONDITIONS .....	2-4
2.6.1	Environmental Conditions .....	2-4
2.6.2	Maximum Allowable Inputs .....	2-4
2.7	BASIC BENCH MEASUREMENTS .....	2-4
2.7.1	Power-Up .....	2-5
2.7.2	Relative Mode .....	2-5
2.7.3	Dc Voltage Measurements .....	2-6
2.7.4	Average Ac Voltage Measurements .....	2-6
2.7.5	Resistance Measurements .....	2-7
2.7.6	Current Measurements (dc or average ac) .....	2-7
2.7.7	dB Measurements .....	2-8
2.7.8	dB Measurement Considerations and Applications .....	2-10
2.7.9	MIN/MAX and 100-Point Data Logger Operation .....	2-11
2.7.10	Diode Test .....	2-11
2.8	AVERAGE RESPONDING MEASUREMENTS .....	2-11
2.8.1	Waveform Comparison .....	2-12
2.8.2	Ac Voltage Offset .....	2-14

2.8.3	Extended Frequency Response .....	2-14
-------	-----------------------------------	------

### SECTION 3 — Performance Verification

3.1	INTRODUCTION .....	3-1
3.2	ENVIRONMENTAL CONDITIONS .....	3-1
3.3	INITIAL CONDITIONS .....	3-1
3.4	RECOMMENDED TEST EQUIPMENT .....	3-1
3.5	VERIFICATION PROCEDURE .....	3-1
3.5.1	Dc Voltage Verification .....	3-1
3.5.2	Average Ac Voltage Verification .....	3-2
3.5.3	Resistance Verification .....	3-3
3.5.4	Dc Current Verification .....	3-3
3.5.5	Average Ac Current Verification .....	3-3
3.5.6	Diode Test Current Verification .....	3-3

### SECTION 4 — Principles of Operation

4.1	INTRODUCTION .....	4-1
4.2	OVERALL FUNCTIONAL DESCRIPTION .....	4-1
4.3	ANALOG CIRCUITRY .....	4-2
4.3.1	Multiplexer .....	4-2
4.3.2	Input Buffer Amplifier .....	4-2
4.3.3	-2V Reference Source .....	4-2
4.3.4	A/D Converter .....	4-3
4.3.5	Input Signal Conditioning .....	4-4
4.3.6	Ac Converter .....	4-5
4.4	DIGITAL CIRCUITRY .....	4-5
4.4.1	Microcomputer .....	4-5
4.4.2	Address Decoding .....	4-6
4.4.3	PIA .....	4-6
4.4.4	Display Board .....	4-6
4.5	DIGITAL CALIBRATION .....	4-6
4.6	POWER SUPPLY .....	4-6
4.7	MODEL 1758 BATTERY OPTION .....	4-6

### SECTION 5 — Maintenance

5.1	INTRODUCTION .....	5-1
5.2	LINE VOLTAGE SELECTION .....	5-1
5.3	FUSE REPLACEMENT .....	5-1
5.3.1	AMPS Fuse .....	5-2
5.3.2	Line Fuse .....	5-2
5.4	CALIBRATION .....	5-2
5.4.1	Recommended Calibration Equipment .....	5-3
5.4.2	Environmental Conditions .....	5-3
5.4.3	Warm-Up Period .....	5-3

- 5.4.4 CALIBRATION Switch..... 5-3
- 5.4.5 Dc Voltage Calibration From Front Panel..... 5-3
- 5.4.6 Ac Voltage Calibration From Front Panel..... 5-4
- 5.4.7 Resistance Calibration From Front Panel ..... 5-4
- 5.4.8 Frequency Compensation ..... 5-5
- 5.4.9 Calibration Storage ..... 5-5
- 5.4.10 IEEE-488 Bus Calibration ..... 5-5
- 5.5 SPECIAL HANDLING OF STATIC SENSITIVE DEVICES ..... 5-6
- 5.6 TROUBLESHOOTING..... 5-6
- 5.6.1 Recommended Test Equipment ..... 5-6
- 5.6.2 Self Diagnostic Program..... 5-7
- 5.6.3 Power Supply and Battery Pack (Model 1758) Checks..... 5-11
- 5.6.4 A/D Converter and Display..... 5-11
- 5.6.5 Signal Conditioning ..... 5-11
- 5.7 MODEL 1758 BATTERY PACK INSTALLATION AND REMOVAL ..... 5-13
- 5.8 BATTERY PACK STORAGE..... 5-13

**SECTION 6 — Replaceable Parts**

- 6.1 INTRODUCTION ..... 6-1
- 6.2 PARTS LIST..... 6-1
- 6.3 ORDERING INFORMATION ..... 6-1
- 6.4 FACTORY SERVICE ..... 6-1



# List of Illustrations

## SECTION 2 — Bench Operation

Figure 2-1	Model 175-AV Front Panel .....	2-2
Figure 2-2	dc Voltage Measurements .....	2-6
Figure 2-3	ac Voltage Measurements .....	2-7
Figure 2-4	Resistance Measurements .....	2-7
Figure 2-5	Current Measurements .....	2-8
Figure 2-6	Model 175-AV Typical acV Frequency Response .....	2-15

## SECTION 4 — Principles of Operation

Figure 4-1	Simplified Block Diagram .....	4-1
Figure 4-2	Simplified Schematic of the Multiplexer .....	4-2
Figure 4-3	Simplified Schematic of the Input Buffer Amplifier .....	4-2
Figure 4-4	Simplified Schematic of the A/D Converter .....	4-3
Figure 4-5	Resistance Measurements – Ratiometric Techniques .....	4-4
Figure 4-6	Simplified Schematics of Ohms Circuitry .....	4-5

## SECTION 5 — Maintenance

Figure 5-1	Model 175-AV Rear Panel .....	5-1
Figure 5-2	Segment Identification .....	5-7

## SECTION 6 — Replaceable Parts

Figure 6-1	Model 175-AV/1758 .....	6-3
Figure 6-2	Model 175-AV Final Assembly .....	6-5
Figure 6-3	Front Panel Assembly .....	6-7
Figure 6-4	Connector Assembly .....	6-9
Figure 6-5	Mother Board Component Layout (sheet 1 of 2) .....	6-15
	Mother Board Component Layout (sheet 2 of 2) .....	6-17
Figure 6-6	Mother Board Schematic (sheet 1 of 2) .....	6-19
	Mother Board Schematic (sheet 2 of 2) .....	6-21
Figure 6-7	Display Board Subassembly .....	6-25
Figure 6-8	Display Board Schematic .....	6-27
Figure 6-9	Model 1758 Battery Option .....	6-29
Figure 6-10	Battery Option Component Layout .....	6-33
Figure 6-11	Battery Option Schematic .....	6-35
Figure 6-12	Battery Assembly .....	6-37



# List of Tables

## SECTION 2 — Bench Operation

Table 2-1	Error Messages . . . . .	2-4
Table 2-2	Model 175-AV Maximum Allowable Inputs . . . . .	2-5
Table 2-3	dB Specifications for dc Volts (600 $\Omega$ Ref). . . . .	2-8
Table 2-4	dB Specifications for ac Volts (600 $\Omega$ Ref) . . . . .	2-8
Table 2-5	Levels for Other Reference Impedances . . . . .	2-9
Table 2-6	Average Responding Meter Readings for Various Waveforms . . . . .	2-13

## SECTION 3 — Performance Verification

Table 3-1	Recommended Test Equipment . . . . .	3-2
Table 3-2	Limits for dc Voltage Verification . . . . .	3-2
Table 3-3	Limits for ac Voltage Verification . . . . .	3-2
Table 3-4	Limits for Resistance Verification . . . . .	3-3
Table 3-5	Limits for dc Current Verification . . . . .	3-3

## SECTION 5 — Maintenance

Table 5-1	Fuse Replacements . . . . .	5-2
Table 5-2	Recommended Calibration Equipment . . . . .	5-3
Table 5-3	dc Voltage Calibration . . . . .	5-4
Table 5-4	ac Voltage Calibration . . . . .	5-4
Table 5-5	Resistance Calibration . . . . .	5-5
Table 5-6	Recommended Troubleshooting Equipment . . . . .	5-7
Table 5-7	Sequential Display Test Steps . . . . .	5-8
Table 5-8	Troubleshooting Modes . . . . .	5-9
Table 5-9	Power Supply Checks and Battery Pack (Model 1758) Checks . . . . .	5-11
Table 5-10	A/D Converter Checks . . . . .	5-12
Table 5-11	Display Board Checks . . . . .	5-12

## SECTION 6 — Replaceable Parts

Table 6-1	Mother Board, Parts List . . . . .	6-11
Table 6-2	Display Board, Parts List . . . . .	6-23
Table 6-3	Battery Option Board, Parts List . . . . .	6-31
Table 6-4	Model 175-AV Spare Parts List . . . . .	6-39



# SECTION 1

## General Information

---

### 1.1 INTRODUCTION

The Keithley Model 175-AV is a 4-1/2 digit LCD bench/portable digital multimeter. The Model 175-AV can make the following basic measurements:

1. Dc voltage measurements from 10 $\mu$ V to 1000V.
2. Resistance measurements from 10m $\Omega$  to 200M $\Omega$ .
3. Ac voltage measurements from 10 $\mu$ V to 750V.
4. Dc current measurements from 10nA to 2A.
5. Ac current measurements from 10nA to 2A.

In addition to the above mentioned measurement capabilities, the Model 175-AV can make dc and ac dB voltage measurements.

### 1.2 FEATURES

Some important Model 175-AV features include:

- 4-1/2 digit LCD display
- Fast autoranging
- Bench or portable
- Digital calibration
- 100-point data logger
- 0.03% basic dcV accuracy
- Average responding acV and acA
- dBm/Relative functions
- Min/Max reading hold
- Safety input jacks
- 100kHz specified ac bandwidth

Options include:

- Model 1758 Rechargeable Battery Pack
- Model 1753-AV IEEE-488 Interface

### 1.3 WARRANTY INFORMATION

Warranty information may be found on the inside front cover of this manual. Should it be necessary to exercise the warranty, contact your Keithley representative or the factory to determine the proper course of action. Keithley Instruments maintains service facilities in the United States, United Kingdom, and throughout Europe. Information concerning the application, operation, or service of your instrument may be directed to the applications engineer at any of these locations. Check the inside front cover for addresses.

### 1.4 MANUAL ADDENDA

Information concerning improvements or changes to the instrument that occur after the printing of this manual will be found on an addendum sheet included with the manual. Be sure to review these changes before attempting to operate or service the instrument.

### 1.5 SAFETY SYMBOLS AND TERMS

The following safety symbols and terms are used in this manual or found on the Model 175-AV.

The  symbol on the instrument denotes that the user should refer to the operating instructions in this manual.

The  on the instrument denotes that a hazardous potential may be present on the terminal(s). Standard safety practices should be observed when such dangerous levels are encountered.

The **WARNING** used in this manual explains dangers that could result in personal injury or death.

The **CAUTION** used in this manual explains hazards that could damage the instrument.

## 1.6 SPECIFICATIONS

Detailed Model 175-AV specifications may be found preceding the Table of Contents of this manual.

## 1.7 INSPECTION

The Model 175-AV Autoranging DMM was carefully inspected, both electrically and mechanically, before shipment. After unpacking all items from the shipping carton, check for any obvious signs of physical damage that might have occurred during transit. Report any damage to the shipping agent. Retain and use the original packing materials in case reshipment is necessary. The following items are shipped with every Model 175-AV order:

Model 175-AV Autoranging Multimeter

Model 175-AV Instruction Manuals (2)

Model 1751 Safety Test Leads

Additional accessories as ordered.

If an additional instruction manual is required, order the manual package (Keithley Part Number 175AV-901-00). The manual package includes an instruction manual and any applicable addenda.

## 1.8 USING THE MODEL 175-AV MANUAL

This manual contains information necessary for operating and servicing the Model 175-AV Autoranging Multimeter and the Model 1758 Rechargeable Battery Pack. The information is divided into the following sections:

- Section 1 contains general information about the Model 175-AV and Model 1758, including that necessary to inspect the instrument and get it operating as quickly as possible.
- Section 2 contains detailed operating information on using the front panel controls, making connections, and basic measuring techniques for each of the available measuring functions.
- Section 3 contains performance verification procedures for the instrument. This information will be helpful if you wish to verify that the instrument is operating in compliance with its stated specifications.

- Section 4 contains a description of operating theory. Analog, digital, and power supply operation is included.
- Section 5 contains information for servicing the instrument. This section includes information on line fuse replacement, line voltage selection, calibration and troubleshooting.
- Section 6 contains replaceable parts information.

### NOTE

The Model 1753-AV IEEE-488 interface comes supplied with its own instruction manual.

## 1.9 GETTING STARTED

Perform the following steps in sequence to acquaint yourself quickly and safely with the basic operation of the Model 175-AV.

1. Connect the female end of the power cord to the ac receptacle on the rear panel of the instrument. Connect the other end of the cord to a grounded ac outlet. If the optional battery pack is installed the charge circuitry will be activated. Refer to paragraph 2.3.1 for more complete information.
2. Turn on the Model 175-AV by pressing in the ON/OFF pushbutton. All of the zeros will be displayed briefly.
3. Connect the supplied test leads to the INPUT HI and LO jacks, and short them together.
4. Select ac volts and autoranging by pressing in the AC/DC, V, and AUTO pushbuttons. The AC, mV, and AUTO annunciators will be displayed. Pressing any of the other range pushbuttons will put the Model 175-AV in manual ranging as indicated by the absence of the AUTO annunciator.
5. Select dc volts by releasing (out) the AC/DC pushbutton (V still selected). The AC annunciator will turn off.
6. Select autoranging ohms by pressing in the  $\Omega$  pushbutton (dc still selected) and AUTO pushbutton. The  $\Omega$  annunciator will turn on. Press the AC/DC pushbutton in (ac selected) and note the "Err" message indicating that this is an invalid mode.
7. Select ac or dc current by setting the AC/DC pushbutton accordingly and pressing in the A pushbutton. The annunciator that reflects the selected range will turn on. Note that current will not autorange.
8. Select dB by placing the Model 175-AV in ac or dc volts and pressing the dB pushbutton. The dB annunciator will turn on. Press the dB button again to take the Model 175-AV out of the dB measurement mode.

9. REL (relative) can be used with any measurement function: volts, ohms, amps or dB. For example, place the Model 175-AV in ohms and autorange. The display will read approximately  $00.14\Omega$ , which is the test lead resistance. Press the REL pushbutton. The REL annunciator will turn on and the display will now read  $00.00\Omega$ . The relative level of  $0.14\Omega$  will be subtracted from all subsequent ohm measurements. Press the REL pushbutton a second time to cancel the REL level.
10. To activate the 100-point DATA LOGGER with MIN/MAX, press and hold in the STO/CLR pushbutton. When the reading rate  $R=0$  is displayed, let go of the button. The STO annunciator will turn on. Press the RCL pushbutton and the last data point will be displayed briefly followed by the reading (data). Other data points can be displayed by holding in the RCL button. Turn off the DATA LOGGER by pressing the STO/CLR pushbutton again.
11. When you are comfortable with the controls of the Model 175-AV, go on and make the desired measurements using Section 2, Bench Operation as a guide.

## 1.10 ACCESSORIES

The following accessories are available to enhance Model 175-AV capabilities:

**Model 1010 Single Rack Mounting Kit** — Use to mount one Model 175-AV in a standard  $5-1/4 \times 19$ " rack.

**Model 1017 Dual Rack Mounting Kit** — Use to mount two Model 175-AV's in a standard  $5-1/4 \times 19$ " rack.

**Model 1301 Temperature Probe** — A rugged low cost temperature probe designed to allow precision temperature measurements from  $-55^{\circ}\text{C}$  to  $150^{\circ}\text{C}$ .

Range:  $-55^{\circ}\text{C}$  to  $150^{\circ}\text{C}$

Output:  $1\text{mV}/^{\circ}\text{C}$ ; compatible with any DMM with at least  $10\text{M}\Omega$  input impedance.

Accuracy:  $\pm 2^{\circ}\text{C}$  from  $0^{\circ}$  to  $100^{\circ}\text{C}$ ;  $\pm 3^{\circ}\text{C}$  from  $-55^{\circ}$  to  $0^{\circ}\text{C}$  and  $100^{\circ}$  to  $150^{\circ}\text{C}$

Power: 9V alkaline or C-Zn (NEDA 1604) battery.

**Model 1600A High Voltage Probe** — Extends the DMM to 40kV.

Maximum Input: 40kV dc or peak ac to 300Hz

Input Resistance:  $1000\text{M}\Omega$

Division Ratio: 1000:1

Ratio Accuracy:  $\pm 2.5\%$  from 1kV to 40kV DC,  $\pm 3.5\%$  if 200mV or 2V ranges of Model 175-AV are used;  $-3\text{dB}$  at 300Hz ac.

Operating Temperature:  $0^{\circ}$  to  $50^{\circ}\text{C}$

**Model 1651 50-Ampere Current Shunt** — The external  $0.001\Omega \pm 1\%$ , 4-terminal shunt permits current measurements from 0-50A dc or ac.

**Model 1681 Clip-On Test Lead Set** — Contains two leads, 1.2m (48 inches) long terminated with banana plugs and spring action clip on probes.

**Model 1682A RF Probe** — Permits voltage measurements from 100kHz to 250MHz.

Ac to dc transfer accuracy:  $\pm 1\text{dB}$  from 100kHz to 250MHz at 1V, peak responding, calibrated in rms of a sine wave.

Maximum Allowable Input: 42V ac peak, 200V (dc + ac peak)

**Model 1684 Hard Shell Carrying Case** — Hard vinyl case,  $100\text{mm} \times 300\text{mm} \times 350\text{mm}$  ( $4 \times 13 \times 14$  inches) has a fitted foam insert with room for the Model 175-AV, instruction manual, and small accessories.

**Model 1685 Clamp-On Ac Probe** — Measures ac current by clamping onto a single conductor. Interruption of the circuit under test is unnecessary. The Model 1685 detects current by sensing the changing magnetic field produced by the current flow.

Range: 2, 20 and 200A rms

Accuracy:  $\pm 4\%$  of range at 60Hz;  $\pm 6\%$  of range at 50Hz

Temperature Coefficient:  $\pm 0.05\%/^{\circ}\text{C}$  on 20A and 200A range;  $\pm 0.3\%/^{\circ}\text{C}$  on 2A range

Maximum Allowable Current: 300A rms

Maximum Conductor Voltage: 600V rms

Conversion Ratio: 0.1V/A rms

**Model 1751 Safety Test Leads** — This is the test lead set supplied with each Model 175-AV. Finger guards and shrouded banana plugs help minimize the chance of making contact with live circuitry.

**Model 1753 IEEE-488 Interface** — Field installable programmable option provides isolated data output. Switch selectable talk only or addressable modes. Mounts within and powered by the Model 175-AV.

**SECTION 1**  
**General Information**

---

**Model 1754 Universal Test Lead Kit** — 12 piece test lead kit, with interchangeable plug-in accessories. Kit includes: one set of test leads (1-red, 1-black), two spade lugs, two standard banana plugs, two phone tips (.060 dia.), two hooks and two miniature alligator clips (with boots).

**Model 1755 Calibration Interface** — Permits automated IEEE-488 based verification and calibration of Model 175-AV without installed interface. An IEEE-488 interface must be installed in the 1755.

**Model 1758 Rechargeable Battery Pack** — Provides six hours minimum operation from full charge, recharges within 10 hours and is field installable.

**Model 7008 IEEE-488 Digital Cable** — Useful for connecting the Model 1753 to the IEEE-488 bus. The Model 7008-3 is 0.9m (3ft) in length and has a standard IEEE-488 connector at each end. The Model 7008-6 is 1.8m (6ft) in length.

# SECTION 2

## Bench Operation

---

### 2.1 INTRODUCTION

This section contains the information needed to prepare and operate the Model 175-AV as a bench DMM. Bench operation consists of using the Model 175-AV to perform basic voltage, current, resistance and dB measurements. Also, the operation of the data logger is covered here. The capabilities of the Model 175-AV can be enhanced with the addition of the Model 1753-AV IEEE-488 interface. IEEE operation is covered in the Model 1753 Instruction Manual.

### 2.2 HIGH ENERGY CIRCUIT SAFETY PRECAUTIONS

To optimize safety when measuring voltage in high energy distribution circuits, read and use the directions in the following warning.

#### WARNING

**Dangerous arcs of an explosive nature in a high energy circuit can cause severe personal injury or death. If the meter is connected to a high energy circuit when set to a current range, low resistance range, or any other low impedance range, the circuit is virtually shorted. Dangerous arcing can result when the meter is set to a voltage range if the minimum voltage spacing is reduced.**

When making measurements in high energy circuits use test leads that meet the following requirements:

- Test leads should be fully insulated.
- Only use test leads that can be connected to the circuit (e.g., alligator clips or spade lugs) for hands-off measurement.
- Do not use test leads that decrease voltage spacing. This diminishes arc protection and creates a hazardous condition.

Use the following sequence when testing power circuits:

1. De-energize the circuit using the regular installed connect-disconnect device such as the circuit breaker, main switch, etc.
2. Attach the test leads to the circuit under test. Use appropriate safety rated leads for this application.
3. Set the DMM to the proper function and range.
4. Energize the circuit using the installed connect-disconnect device and make measurements without disconnecting the DMM.
5. De-energize the circuit using the installed connect-disconnect device.
6. Disconnect the test leads from the circuit under test.

#### CAUTION

**The maximum common-mode input voltage (the voltage between input LO and chassis ground) is 500V peak. Exceeding this value may damage the instrument.**

### 2.3 PREPARATION FOR USE

#### 2.3.1 Line Power

Use the following procedure to connect the Model 175-AV to line power and power up the instrument.

1. Check that the instrument is set to correspond to the available line power. Ranges are 105V-125V or 210V-250V 50/60Hz ac. If the line voltage setting of the instrument needs to be changed, set switch as required.

#### NOTE

Although the Model 175-AV is specified at 50 and 60Hz, the instrument may be operated at 400Hz and 440Hz. Add one count to instrument specifications under this condition.

2. Connect the female end of the power cord to the ac receptacle on the rear panel of the instrument. Connect the other end of the cord to a grounded ac outlet.

**WARNING**

The Model 175-AV is equipped with a 3-wire power cord that contains a separate ground wire and is designed to be used with grounded outlets. Failure to use a grounded outlet may result in personal injury or death because of electric shock.

**CAUTION**

Be sure that the power line voltage agrees with the indicated range on the rear panel of the instrument. Failure to observe this precaution may result in instrument damage.

**2.3.2 Battery Pack Power**

The Model 175-AV may also be operated from rechargeable sealed nickel-cadmium batteries contained in the optional Model 1758 Rechargeable Battery Pack. The battery pack will operate the Model 175-AV for up to six hours. The BAT annunciator will turn on when the battery charge is insufficient to maintain accurate readings. Refer to Section 5, paragraph 5.7 for installation and removal procedures.

**2.3.3 Battery Charging**

The Model 1758 Battery Pack in the Model 175-AV can be charged and recharged as follows:

1. Connect the instrument to line power as described in paragraph 2.3.1.

2. With the power switch off, the battery charge circuitry is automatically energized to charge the battery at the maximum rate. When the battery pack is first installed, or if it is completely discharged, allow it to charge for ten hours.

**NOTE**

For maximum battery efficiency, only charge the battery pack after it has become discharged and only charge until it is fully charged (~10 hours). Continuous charging over long periods of time will not damage the batteries but useful life will gradually decrease. This loss is not permanent and may be restored by cycling the battery pack through several complete charge/discharge cycles. The battery pack is capable of 500 to 1000 charge/discharge cycles before replacement is needed. Do not make measurements with the BAT annunciator on as the readings may be erroneous.

3. When the Model 175-AV is in use on line power, the battery charger maintains a trickle charge on the battery pack.

**2.4 FRONT PANEL FAMILIARIZATION**

The following paragraphs and Figure 2-1 provide a brief description of the display, front panel controls, and input terminals.

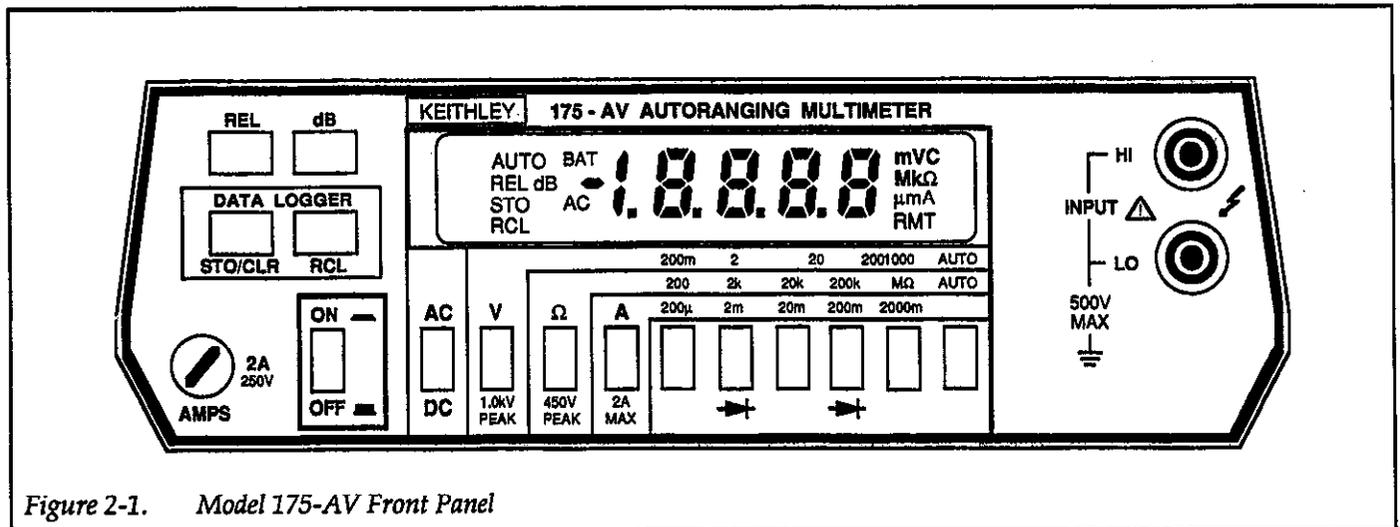


Figure 2-1. Model 175-AV Front Panel

## 2.4.1 Display

The Model 175-AV has a 4-1/2 digit liquid crystal display (LCD). The minus sign is displayed. The plus sign is implied by the absence of the minus sign. The following annunciators are displayed on the LCD.

BAT — Low battery indicator for the Model 1758.

AC—Ac selected (dc implied by absence of AC annunciator).

mV or V — Millivolts or volts selected.

$\Omega$ , k $\Omega$ , or M $\Omega$  — Ohms, kilohms, or megohms selected.

$\mu$ , mA, or A — Microamps, milliamps, or amps selected.

RMT (Remote) — Model 175-AV being controlled over the IEEE-488 bus (Model 1753-AV installed).

C — Model 175-AV in calibration mode.

AUTO — Autorange selected.

REL — Relative selected.

dB — Decibel selected.

STO — Data being stored.

RCL — Data being recalled. RCL flashes when buffer is full during logging cycle.

## 2.4.2 Front Panel Controls

ON/OFF — Pressing in this pushbutton turns the Model 175-AV on. Releasing (out) this pushbutton turns the instrument off.

REL (Relative) — This pushbutton allows readings to be made with respect to any baseline value. Also allows zeroing of on range readings. See paragraph 2.7.2 for more detailed information on REL.

dB — This pushbutton selects the dB function and is used along with the acV or dcV function. Measurements are made in dBm referenced to 600 $\Omega$ . REL can be used to make any voltage level the 0dB reference point for dB measurements.

DATA LOGGER — Has min/max and 100-point reading storage capacity; records data at one of six selectable rates from 3 rdg/sec to 1 rdg/hr. Readings for minimum and maximum are sampled at the rate of 3 per second regardless of the selected rate.

1. STO/CLR — Pressing this button initiates the logging sequence. Pressing the button a second time shuts off the data logger.
2. RCL — Pressing and holding this button in scrolls the data pointer. To read the data at a particular point, simply release the button.

AC/DC — This switch is used along with the volts (V), current (A), and dB functions. Depressing (in) this pushbutton selects ac and releasing (out) this pushbutton selects dc.

V — Depressing this pushbutton selects the volts function.

$\Omega$  — Depressing this pushbutton selects the ohms function. The AC/DC pushbutton must be released (out).

A — Depressing this pushbutton selects the current function.

### Range Push Buttons

1. AUTO — Depressing this pushbutton causes volts and ohms to autorange (no autoranging in current).
2. Manual ranging is accomplished by depressing the appropriate range button.

## 2.4.3 Input Terminals

The input terminals are intended to be used with safety shrouded test leads to help minimize the possibility of contact with live circuits. Safety shrouded test leads are supplied with the Model 175-AV.

INPUT HI and LO (Red and Black) — Use this pair of terminals for all volt, ohm, milliamp, and dB measurements.

## 2.4.4 AMPS Fuse Replacement

The AMPS fuse protects the current ranges from an input greater than 2A. See paragraph 5.3 for fuse replacement procedures.

Table 2-1. Error Messages

Display	Message	Comments
	RAM Error	Model 175-AV locks up. See Section 5 for troubleshooting information.
	Calibration Error (NVRAM Failure)	Model 175-AV locks up, but operation can be restored by pressing any one of the four momentary pushbuttons. If restored, calibration is invalid as indicated by the flashing "C" annunciator. See Section 5 for troubleshooting information.
	Overrange	Overrange input applied to the Model 175-AV. Leading minus sign indicates that input signal has a negative value.
	Invalid Ω Function	"AC" and "Ω" annunciators flash. Correct problem by releasing (out) AC/DC pushbutton.
	Invalid A Range	"A" annunciator flashes. Correct problem by releasing (out) AUTO pushbutton.

## 2.5 ERROR MESSAGES

Table 2-1 lists the error messages associated with basic front panel operation. Note that the instrument has a number of other messages that are discussed in the appropriate sections of this manual.

## 2.6 OPERATING CONDITIONS

### 2.6.1 Environmental Conditions

All measurements should be made at an ambient temperature within the range of 0°C to 50°C, and with a relative humidity of 0% to 80% up to 35°C. For instruments above 35°C derate humidity 3% per °C up to 50°C. If the instrument has been subjected to extremes of temperature, allow sufficient time for internal temperatures to reach environmental conditions. Typically, it takes one hour to stabilize a unit that is 10°C (18°F) out of specified temperature range.

### 2.6.2 Maximum Allowable Inputs

Table 2-2 lists the maximum allowable inputs for the Model 175-AV.

## 2.7 BASIC BENCH MEASUREMENTS

Basic measurement techniques for using the Model 175-AV to measure ac and dc volts, resistance, ac and dc current, and dB are covered in the following paragraphs. Also included is the operation of the MIN/MAX and 100-point data logger.

### WARNING

**Before operating the Model 175-AV, observe the safety precautions found preceding Section 1. When testing high energy power circuits follow the procedure found in paragraph 2.2, High Energy Circuit Safety Precautions. Failure to observe these and other safety precautions found in this manual could result in severe injury or death.**

Table 2-2. Model 175-AV Maximum Allowable Inputs

Function	Ranges	Maximum Allowable Inputs
dc Volts	200mV, 2V	1000Vdc or peak ac for less than 10sec per minute. 300Vrms continuous.
	20-1000V	1000Vdc or peak ac.
ac Volts	200mV	750Vrms, 1000V peak for less than 10sec per minute. 300Vrms continuous. 10 <sup>7</sup> V•Hz maximum.
	2-750V	750Vrms, 1000V peak. 10 <sup>7</sup> V•Hz maximum.
dc and ac Current	200 $\mu$ -2000mA	2A, 250Vdc or rms (fuse protected).
$\Omega$	All	450Vdc or peak ac

The INPUT LO terminal on the Model 175-AV is designed to float above earth ground to avoid ground loop problems.

**WARNING**

Hazardous voltages may be applied to the INPUT LO terminal. The maximum allowable voltage between INPUT LO terminal and chassis ground is 500V. Destruction of insulation, which could present a shock hazard, may occur if the 500V maximum is exceeded.

**CAUTION**

Do not exceed the maximum input limits shown in Table 2-2.

**2.7.1 Power-Up****NOTE**

The software revision level of the Model 175-AV can be displayed upon power-up by running the diagnostic program. See Section 5, Maintenance, for more information.

Turn on the Model 175-AV by pressing in the ON/OFF switch. The following will occur:

1. Reset — All zeros will be briefly displayed before going into the measurement mode.

2. RAM Test — If this test fails the Model 175-AV will lock up with zeros displayed.
3. NVRAM Test — If this test fails the display will show the error message "cErr".

Refer to Table 2-1 for more information pertaining to error messages.

**2.7.2 Relative Mode**

When the relative mode is selected with an on-scale reading on the display the following occurs:

1. The REL annunciator is displayed.
2. The next reading is stored.
3. The stored reading is then algebraically subtracted from all subsequent readings and displayed.

A REL level can be established for any measurement function (Volts, Ohms, Amps, and dB) and is effective only on that function. Changing functions will not affect a REL level already established. However, if another REL level is set (on any function), the previous REL level will be cancelled.

For example, place the 175-AV in the  $\Omega$  function and select the 200 $\Omega$  range. Short the test leads and press the REL button. Note that the REL annunciator is on. Select dcV and note that the REL annunciator is off, indicating that there is not a REL level established for dcV. Switch back to  $\Omega$  and note that the REL level is still there. Again, go to dcV and set a REL level of +1V. The REL annunciator will

go on. Switch back to  $\Omega$  and note that the REL annunciator is off, indicating that the REL level for  $\Omega$  is cancelled.

Once a REL level is established for a measurement function, that stored level will be the same regardless of what range the Model 175-AV is on. For example, if +1V is established as the REL level on the 20Vdc range, +1V will also be the REL level on the 1000Vdc range.

It is important to note that the use of REL reduces the dynamic range of measurements by that level. For instance, assume that the REL level is +1V and the Model 175-AV is manually set to the 2V range. The maximum positive displayed reading, before overranging, would be +0.9999V. This is because the A/D converter would be seeing 1.9999V (maximum) from the input. Thus, the dynamic range of measurement is -1.9999V to +0.9999V (2.9998V) as compared to the normal -1.9999V to +1.9999V (3.9998V). The dynamic range of measurement has been reduced by 1V. The effects on dynamic range can be reduced by selecting a higher range or using autorange.

### 2.7.3 Dc Voltage Measurements

The Model 175-AV can make dc voltage measurements between 10 $\mu$ V and 1000V. The basic procedure is as follows:

1. Connect the test leads to the INPUT HI and LO terminals of the Model 175-AV.
2. Select the dcV function.
3. Select a range consistent with the expected voltage. For automatic range selection, press in the AUTO pushbutton.

#### NOTE

Manual ranging is recommended for routine measurements above 200V.

4. Connect the test leads to the source as shown in Figure 2-2. If the positive source terminal is connected to the INPUT LO terminal of the instrument, the display will show a negative value. If the negative source terminal is connected to the INPUT LO terminal, the display will show a positive value.
5. Observe the display; if the "OL" message is shown, select a higher range until a normal reading is shown. Always use the lowest possible range for the best resolution.
6. Take the reading from the display.

#### NOTE

High input impedance (>1000M $\Omega$  dc volts measurements can be made on the 200mV and 2V ranges by releasing (out) all the function pushbuttons (AC/DC, V,  $\Omega$ , A).

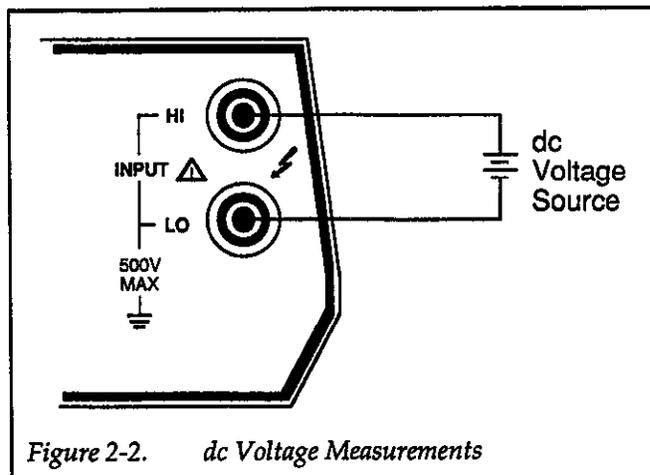


Figure 2-2. dc Voltage Measurements

### 2.7.4 Average Ac Voltage Measurements

The Model 175-AV can make ac voltage measurements between 10 $\mu$ V and 750V. Proceed as follows:

1. Connect the test leads to the INPUT HI and LO terminals of the Model 175-AV.
2. Select the acV function.
3. Select a range consistent with the expected voltage. For automatic range selection, press in the AUTO pushbutton.

#### NOTE

Manual ranging is recommended for routine measurements above 200V.

4. Connect the test leads to the source as shown in Figure 2-3.
5. Observe the display; if the "OL" message is shown, select a higher range until a normal reading is shown. Always use the lowest possible range for the best resolution.
6. Take the reading from the display.

#### NOTE

See paragraph 2.8 for average responding ac considerations.

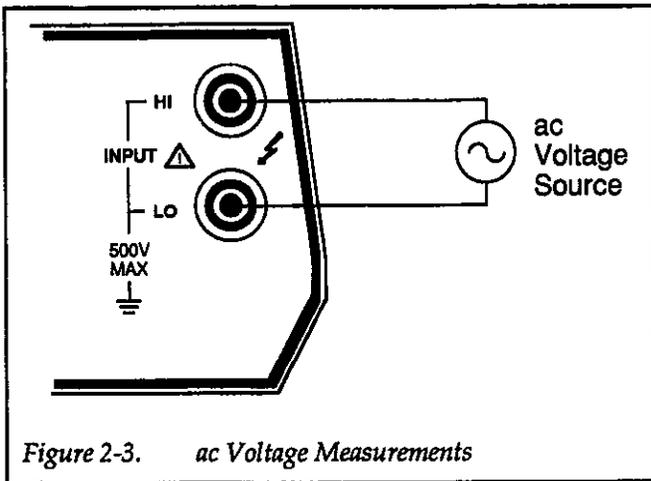


Figure 2-3. ac Voltage Measurements

4. Connect the test leads to the resistance to be measured as shown in Figure 2-4.
5. Observe the display; if the "OL" message reading is shown, select a higher range until a normal reading is shown. Always use the lowest possible range for the best resolution.
6. Take the reading from the display.

**NOTE**

It is helpful to shield resistances greater than  $10^6\Omega$  ( $1M\Omega$ ) if a stable reading is expected. Place the resistance in a shielded enclosure and electrically connect the shield to INPUT LO of the Model 175-AV.

### 2.7.5 Resistance Measurements

The Model 175-AV can make resistance measurements between  $10m\Omega$  and  $200M\Omega$ . The  $2M\Omega$ ,  $20M\Omega$ , and  $200M\Omega$  ranges will autorange when the  $M\Omega$  pushbutton is pressed in. Proceed as follows to make resistance measurements:

1. Connect the test leads to the INPUT HI and LO terminals of the Model 175-AV.
2. Select the  $\Omega$  function.

**NOTE**

The message "Err" and flashing  $\Omega$  and AC annunciators will be displayed if the AC/DC pushbutton is pressed in. This is an invalid mode. To correct, simply release (out) the AC/DC pushbutton.

3. Select a range consistent with the expected resistance. For automatic range selection, use the autorange mode.

**NOTE**

Zeroing may be necessary to compensate for test lead resistance on the  $200\Omega$  and  $2k\Omega$  ranges. Zero the display as follows:

- A. Short the test leads together.
- B. Press the REL pushbutton. The display will zero.
- C. Proceed to step 4.

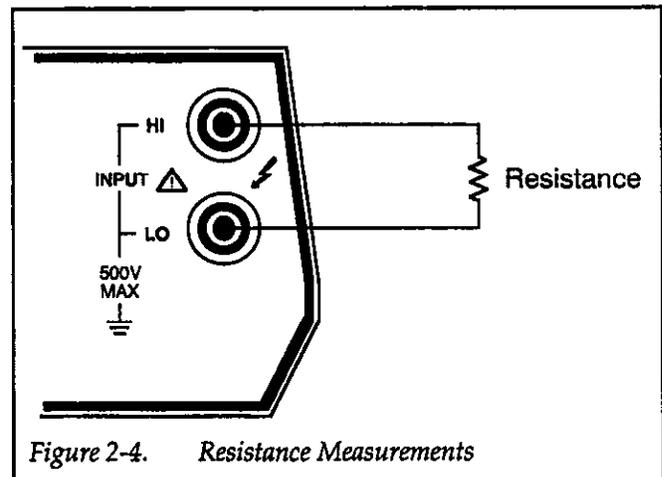


Figure 2-4. Resistance Measurements

### 2.7.6 Current Measurements (dc or average ac)

The Model 175-AV can make dc or ac current measurements between  $10nA$  and  $2A$ .

**NOTE**

For routine measurements above  $2A$  it is recommended that the Model 1651, 50-Ampere current shunt be used.

For current measurements up to  $2000mA$ :

1. Connect the test leads to the INPUT HI and LO terminals of the Model 175-AV.
2. Select the acA or dcA function.
3. Select an appropriate range for the expected current. Current measurements cannot autorange.
4. Connect the test leads to the current source as shown in Figure 2-5. If an overrange indication is displayed,

select a higher range until a normal reading is shown. Use the lowest possible range for the best accuracy.

5. Make the reading from the display.

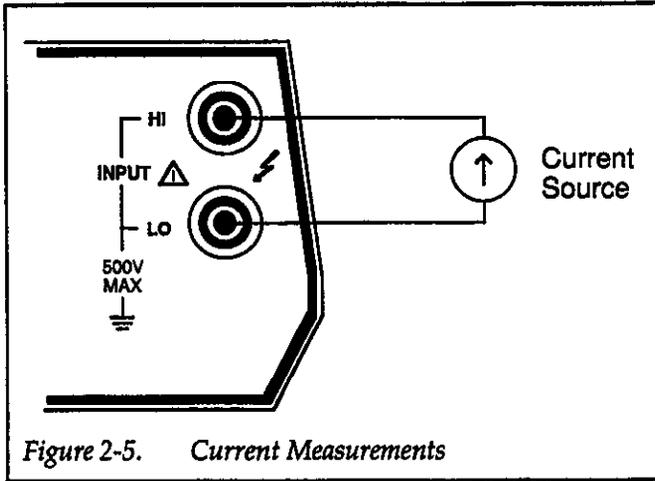


Figure 2-5. Current Measurements

## 2.7.7 dB Measurements

The dB function makes it possible to compress a large range of readings into a much smaller scope. The relationship between dB and voltage can be expressed by the following equation.

$$dB = 20 \log \frac{V_{OUT}}{V_{REF}}$$

Tables 2-3 and 2-4 list the dB specifications for dc volts and ac volts.

Table 2-3. dB Specifications for dc Volts (600Ω Ref).

Linear Counts	Resolution	Accuracy
10 - 99	1 dBm	±1 dBm
100 - 999	0.1 dBm	±0.1 dBm
1000 - 20000	0.01 dBm	±0.02 dBm

Table 2-4. dB Specifications for ac Volts (600Ω Ref)

dB Mode (ref: 600Ω)		Accuracy (± dBm)			
Range	Input	20Hz-10kHz	10kHz-20kHz	20kHz-50kHz	50kHz-100kHz
200mV	1mV to 2mV (-58 to -52dBm)	2*	—	—	—
	2mV to 20mV (-52 to -32dBm)	2	3	—	—
	20mV to 200mV (-32 to -12dBm)	0.2	0.3	1	—
2V-750V	200mV to 750V (-12 to +59.8dBm)	0.2	0.26	0.56	1.2

\*Up to 1kHz

The Model 175-AV can make dBm measurements referenced to the standard 600Ω impedance or to other impedances. The relative feature allows measurements in dB independent of impedance.

The basic procedure for placing the instrument in the dB mode is to first select ac or dc volts and then press the dB button. Note that once dB is selected (dB annunciator on) pressing in the Ω or A function pushbuttons will turn dB off.

### dBm Measurements with 600Ω Reference Impedance

dBm is defined as decibels above or below a 1mW reference. The standard reference impedance of the Model 175-AV is 600Ω. What this means is that the Model 175-AV is designed to read 0dBm when the calculated voltage needed to dissipate 1mW through a 600Ω impedance is applied to the Model 175-AV. That calculated voltage level is 0.7746V as derived from the basic power equation.

$$E = \sqrt{P \cdot R}$$

$$E = \sqrt{10^{-3}W \cdot 600\Omega}$$

$$E = 0.7746V$$

Thus, with a 600Ω reference impedance the Model 175-AV will read 0dBm whenever 0.7746V is applied.

#### NOTE

Do not confuse reference impedance with input impedance. The input impedance of the instrument is still 10MΩ (see specifications) in the dB mode.

To make dBm measurements referenced to 600Ω, proceed as follows:

1. Connect the test leads to the INPUT HI and LO terminals of the Model 175-AV.
2. Select the acV or dcV function.
3. Select autorange for optimum resolution.
4. Press the dB button.
5. Connect the test leads to the voltage source.
6. Make the dBm reading from the display.

### dBm Measurements with Other Reference Impedances

dBm measurements can be made with other reference impedances. The most convenient method for using other reference impedances is to algebraically subtract the calculated dB offset for the desired reference impedance from the reading on the display of the Model 175-AV. Table 2-5 lists common reference impedances and the corresponding offset values. The following equation can be used to calculate the offset for impedances not listed in Table 2-5:

$$\text{Offset (for dBm)} = 10 \log \frac{\text{New ref } Z}{600\Omega}$$

Table 2-5. Levels for Other Reference Impedances

Reference Impedance (Ω)	Equiv. Voltage Level for:		Offset (600Ω Ref)	
	0dBm	0dBW	0dBm	0dBW
8	0.0894	2.828	-18.75	11.25
50	0.2236		-10.79	
75	0.2739		-9.03	
150	0.3873		-6.02	
300	0.5477		-3.01	
600	0.7746		0.00	
1000	1.0000		2.22	

$$V_{\text{equiv. for 0dBm}} = \sqrt{10^{-3}W \cdot Z_{\text{REF}}}$$

$$V_{\text{equiv. for 0dBW}} = \sqrt{Z_{\text{REF}}}$$

$$\text{Offset (for dBm)} = 10 \log \left( \frac{Z_{\text{REF}}}{600\Omega} \right)$$

$$\text{Offset (for dBW)} = 10 \log \left( \frac{Z_{\text{REF}}}{600\Omega \cdot .001} \right)$$

To make dBm measurements referenced to another impedance, proceed as follows:

1. Choose the desired reference impedance.
2. Calculate or look up the offset value in Table 2-5 for the desired reference impedance.
3. Determine dBm at the desired reference impedance as follows:

$$\text{dBm (at ref } Z) = (\text{175-AV reading}) - \text{offset}$$

For example, when making dBm measurements referenced to a 100Ω reference impedance, the offset is calculated as follows:

$$\text{Offset} = 10 \log \frac{100\Omega}{600\Omega} = -7.78\text{dB}$$

This offset value must be subtracted from all subsequent displayed readings on the Model 175-AV.

dBm measurements, referenced to another impedance, can be read directly from the display of the Model 175-AV by using the REL feature, and an accurate voltage source. The basic procedure is as follows:

- Calculate or look up the equivalent voltage level (Table 2-5) for 0dBm at the desired reference impedance.
- Input that voltage level to the Model 175-AV.
- With the Model 175-AV in the dB mode, press the REL button.
- dBm measurements referenced to the desired impedance can now be read directly from the display of the Model 175-AV.

#### **dBW Measurements**

dBW is defined as decibels above or below a one watt reference. The procedure is the same as that found in paragraph 2.7.7 under dBm Measurements with Other Reference Impedances. The only difference is that the reference point is 0dBW (1W) rather than 0dBm (1mW).

#### **dBV Measurements**

dBV is defined as decibels above or below 1V (0dBV point). This is a voltage relationship independent of impedance. The basic procedure is to simply subtract 2.22dB (Table 2-5) from all subsequent displayed readings on the Model 175-AV.

#### **Relative dB Measurements**

Just about any voltage level within the measurement limits of the Model 175-AV can be established as the 0dB point. The basic procedure is to establish that level as the 0dB point by using REL and make the desired dB measurements.

## **2.7.8 dB Measurement Considerations and Applications**

### **Typical Instrument Performance**

Typically, the Model 175-AV will perform better than its published dB specification. The following example will illustrate this point:

1. Using the Model 175-AV in the dB mode (600Ω ref), measure a 1mV rms, 1kHz source (common application in the communications field). Typically, the Model 175-AV will read -57.7dBm.
2. The calculated dBm level for that source is -57.8dBm.
3. The 0.1dBm error is considerably better than the +2dBm specification. The specifications are intended to cover worst measurement conditions.

### **Measuring Circuit Gain/ Loss**

Any point in a circuit can be established as the 0dB point. Measurements in that circuit are then referenced to that point expressed in terms of gain (+dB) or loss (-dB). To set the 0dB point:

1. Place the Model 175-AV in volts, autorange, and dB.
2. Connect the Model 175-AV to the desired location in the circuit.
3. Press the REL button. The display will read 0dB.
4. Gain/loss measurements can now be made referenced to the 0dB point.

### **Measuring Bandwidth**

The Model 175-AV can be used to determine the bandwidth of an amplifier as follows:

1. Connect a signal generator to the input of the amplifier.
2. Set the Model 175-AV to acV and autorange.
3. Connect the DMM and a frequency counter to the load of the amplifier.
4. Adjust the frequency of the signal generator (<300kHz) until a peak ac voltage reading is measured on the Model 175-AV.
5. Press the dB button and then press the REL button. The 0dB point is now established.
6. Increase the frequency input until the Model 175-AV reads -3.00dB. The frequency measured on the frequency counter is the high end limit of the bandwidth.
7. Decrease the frequency input until the dB reading again falls to -3dB. The frequency measured on the

signal generator is the low end limit of the bandwidth.

### Determining Q

The Q of a tuned circuit can be determined as follows:

1. Determine the center frequency and bandwidth as explained in paragraph 2.7.8, Measuring Bandwidth.
2. Calculate Q by using the following formula:

$$Q = \text{Center Frequency} / \text{Bandwidth}$$

### 2.7.9 MIN/MAX and 100-Point Data Logger Operation

The data logger can store up to 100 readings and store the minimum and maximum readings recorded during the period that the data logger is active. The data logger remains active even after 100 points of data are stored, which means the MIN/MAX readings continue to update. The only way to deactivate the data logger is to press the STO/CLR button (STO annunciator off) or cycle power.

The 100 points of data are stored at one of six selectable rates from three per second to one reading per hour. Readings for minimum and maximum are sampled at the rate of three per second regardless of the selected rate. The procedure for operating the data logger is as follows:

1. Connect the desired measurement configuration to the Model 175-AV. Make sure that the controls of the Model 175-AV are set appropriately.
2. Logging data:
  - A. Press and hold the STO/CLR pushbutton. The following reading rates will scroll on the display:

r = 0 (every reading)  
 r = 1 (1 rdg/sec)  
 r = 2 (1rdg/10sec)  
 r = 3 (1 rdg/min)  
 r = 4 (1 rdg/10 min)  
 r = 5 (1 rdg/hr)

#### NOTE

There is no need to select a rate if just minimum/maximum readings are desired. Momentarily press the STO/CLR button to start the logger.

- B. Release the STO/CLR pushbutton when the desired reading rate is displayed. The STO annunciator will turn on and data will be logged at the selected rate.

#### NOTE

The logging cycle can be terminated at any time by pressing the STO/CLR button. This shuts off the data logger. However, data is retained and can be recalled at any time as long as the instrument remains on.

3. Data retrieval — Data can be retrieved at any time, but a flashing RCL annunciator indicates that the maximum number of readings (100) has been stored.
  - A. Press and hold in the RCL pushbutton. The display will scroll through the data points and MIN/MAX (LO/HI). The first data point displayed will be the last stored reading. The next two data points will be the HI and LO readings made during that logging cycle. Notice that the longer the RCL pushbutton is held in the faster the data points will scroll on the display.
  - B. Release the RCL pushbutton at the desired data point and note the reading (data) on the display. The data pointer can be incremented by steps of one by momentarily holding in the RCL pushbutton.
4. Shut off the data logger by pressing the STO/CLR pushbutton. All stored data will be retained until a new store cycle has commenced.

### 2.7.10 Diode Test

The 2k $\Omega$  and 200k $\Omega$  ranges can be used for testing semiconductor junctions as follows:

1. Select  $\Omega$  function.
2. Press 2k and 200k pushbuttons (diode symbols) in simultaneously.
3. Display reads forward V drop of diode at 0.7mA (up to 2V). Red terminal is positive.

## 2.8 AVERAGE RESPONDING MEASUREMENTS

Most DMMs, including the Model 175-AV, actually measure the average value of an input waveform but are calibrated to read its rms equivalent. This poses no problem as long as the waveform being measured is a pure, low-distortion sine wave. For complex, non-sinusoidal

waveforms, however, measurements made with an averaging type meter can be inaccurate.

### 2.8.1 Waveform Comparison

The rms value of a pure sine wave is equal to 0.707 times its peak value. The average value of such a waveform is 0.637 times the peak value. Thus, for an average-responding meter, a correction factor must be designed in. This correction factor (K) can be found by dividing the rms value by the average value as follows:

$$K = \frac{0.707}{0.637} \approx 1.11$$

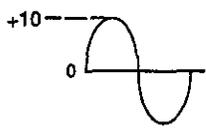



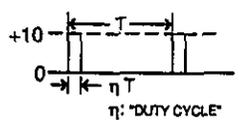
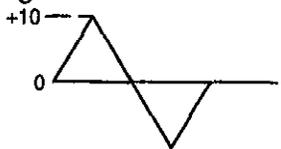
By applying this correction factor to an averaged reading, a typical meter can be designed to give the rms equivalent. This works fine as long as the waveform is a pure sine, but the ratios between the rms and average values of different waveforms can vary considerably.

Table 2-6 shows a comparison of common types of waveforms. For reference, the first waveform is an ordinary sine wave with a peak amplitude of 10V. The average value of the voltage is 6.37V, while its rms value is 7.07V. If we apply the 1.11 correction factor to the average reading, it can be seen that the average reading will equal the rms value, resulting in no error for an average-type meter reading.

The situation changes with the half-wave rectified sine wave. As before, the peak value of the waveform is 10V, but the average value drops to 3.18V. The rms value of this waveform is 5.00V, but an average responding meter will give a reading of 3.53V ( $3.18 \times 1.11$ ), creating an error of 29.4%.

A similar situation exists for the rectified square wave, which has an average value of 5V and an rms value of 5V. The average responding meter gives a reading of 5.55V ( $5 \times 1.11$ ). Other waveform comparisons can be found in Table 2-6.

Table 2-6. Average Responding Meter Readings for Various Waveforms

Waveform	Ac Coupled Peak Value	RMS Value	Average Responding Meter Reading	Averaging Meter Percent Error
Sine 	10V	7.07V	7.07V	0%
Half-Wave Rectified Sine 	10V	5.00V	3.53V	29.4%
Full-Wave Rectified Sine 	10V	7.07V	7.07V	0%
Square 	10V	10.00V	11.10V	11%
Rectified Square Wave 	10V	5.00V	5.55V	11%
Rectangular Pulse  <p><math>\eta</math>: "DUTY CYCLE"</p>	10V	$10V \cdot \sqrt{\eta}$	$11.1V \cdot \eta$	$(1.11 \sqrt{\eta} - 1) \times 100\%$
Triangular Sawtooth 	10V	5.77V	5.55V	3.8%

## 2.8.2 Ac Voltage Offset

Typically the Model 175-AV will display 25 counts or less of offset on ac volts with the input shorted. This offset is caused by amplifier noise and offset of the rms-to-dc converter. This offset will not affect reading accuracy and should not be zeroed out using the REL feature. The following equation expresses how this offset ( $V_{\text{OFFSET}}$ ) is added to the signal input ( $V_{\text{IN}}$ ):

$$\text{Displayed Reading} = \sqrt{(V_{\text{IN}})^2 + (V_{\text{OFFSET}})^2}$$

As long as  $V_{\text{IN}}$  is at least 10 times larger than  $V_{\text{OFFSET}}$ , negligible error will occur.

Example: Range = 2Vac  
Offset = 25 counts  
Input = 200mV rms

$$\begin{aligned} \text{Displayed Reading} &= \sqrt{(0.2)^2 + (.0025)^2} \\ &= \sqrt{0.04 + 0.000063} \\ &= \sqrt{0.040063} \\ &= .2001 \text{ rms} \end{aligned}$$

If REL is used to zero the display, the 25 counts of offset would be subtracted from  $V_{\text{IN}}$ , resulting in an error of 25 counts in the displayed reading.

## 2.8.3 Extended Frequency Response

Figure 2-6 illustrates the extended frequency response of the ac voltage ranges up to 1MHz.

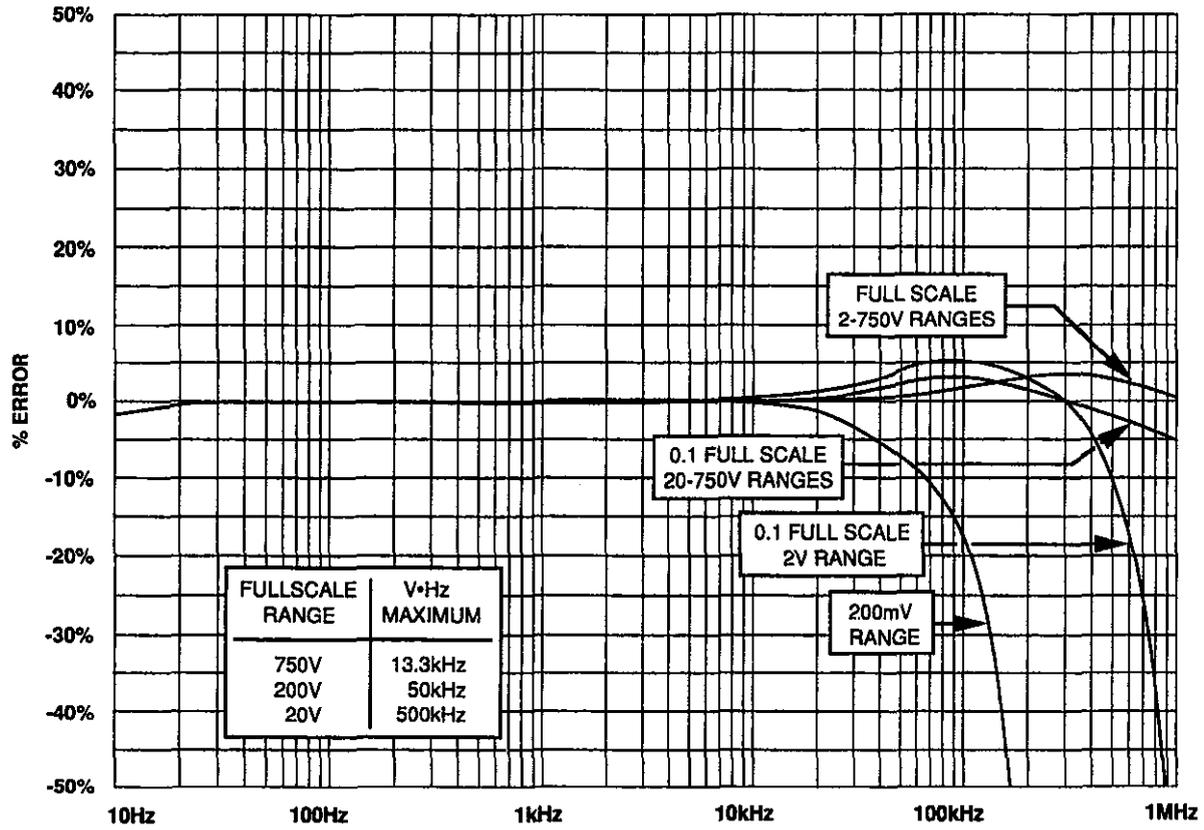


Figure 2-6. Model 175-AV Typical acV Frequency Response



# SECTION 3

## Performance Verification

---

### 3.1 INTRODUCTION

The procedures outlined in this section may be used to verify that the instrument is operating within the limits stated in the specifications at the front of this manual. Performance verification may be done when the instrument is first received to ensure that no damage or misadjustment has occurred during shipment. Verification may also be performed whenever there is a question of instrument accuracy, or following calibration, if desired.

#### NOTE

If the instrument is still under warranty (less than one year from the date of shipment), and its performance falls outside the specified range, contact your Keithley representative or the factory to determine the correct course of action.

### 3.2 ENVIRONMENTAL CONDITIONS

All measurements should be made at 18-28°C (65-82°F) and at less than 80% relative humidity.

### 3.3 INITIAL CONDITIONS

The Model 175-AV must be turned on and allowed to warm up for at least one hour before beginning the verification procedures. The instrument may be operated from either line power or battery pack power, as long as the battery pack has been fully charged as described in paragraph 2.3.3.

If the instrument has been subject to extremes of temperature (outside the range specified in paragraph 3.2), additional time should be allowed for internal temperatures to reach normal operating temperature. Typically, it takes one additional hour to stabilize a unit that is 10°C (18°F) outside the specified temperature range.

### 3.4 RECOMMENDED TEST EQUIPMENT

Table 3-1 lists all test equipment required for verification. Alternate equipment may be used as long as the substitute equipment has specifications at least as good as those listed in the table.

#### NOTE

The verification limits in this section do not include test equipment tolerance.

### 3.5 VERIFICATION PROCEDURE

The following paragraphs contain procedures for verifying the specifications of the instrument for each of its five measuring functions: dc volts, average ac volts, ohms, dc amps, and average ac amps. These procedures are intended for use only by qualified personnel using accurate and reliable test equipment. If the unit is out of specifications and not under warranty, refer to Section 5 for calibration procedures.

#### WARNING

The maximum common-mode voltage (voltage between input low and chassis ground) is 500V peak. Exceeding this value may cause a shock hazard. Some of the procedures in this section may expose the user to dangerous voltages. Use standard safety precautions when such dangerous voltages are encountered.

#### 3.5.1 Dc Voltage Verification

#### CAUTION

Do not exceed 1000V between the INPUT HI and LO terminals or damage to the instrument may occur.

1. Select the dcV function and 200mV range.
2. Connect the calibrator to the instrument.
3. Apply +100.000mVdc to the Model 175-AV. The reading must be within the limits specified in Table 3-2.

Table 3-1. Recommended Test Equipment

Manufacturer	Model	Description	Specifications
Fluke	5101B	dc Voltage Calibrator	200mV, 2V, 20V, 200V, 1000V ranges, $\pm 0.005\%$
		ac Voltage Calibrator	200mV, 2V, 20V, 100V, 50Hz to 10kHz, $\pm 0.05\%$
		Resistance Calibrator	100 $\Omega$ , 1k $\Omega$ , 10k $\Omega$ , 100k $\Omega$ ranges, $\pm 0.005\%$ ; 1M $\Omega$ range $\pm 0.01\%$ ; 10M $\Omega$ range, $\pm 0.05\%$
		dc Current Calibrator	200 $\mu$ A, 2mA, 20mA, 200mA, 2000mA ranges, $\pm 0.025\%$
Fluke	5200A	ac Voltage Calibrator	100mV, 1V, 10V, 100V ranges; 20Hz-50Hz, $\pm 0.1\%$ ; 20kHz-100kHz, $\pm 0.05\%$
Fluke	5205A	Power Amplifier	1000V range; 10Hz-30Hz, $\pm 0.12\%$ ; 50kHz-100kHz, $\pm 0.10\%$

- For each remaining range, apply the required voltage as specified in Table 3-2, and verify that the reading is within specifications.
- Repeat all checks with negative voltage.

### 3.5.2 Average Ac Voltage Verification

**CAUTION**

Do not exceed 750V rms, 1000V peak 10<sup>7</sup>V•Hz, between the INPUT HI and LO terminals or instrument damage may occur.

Table 3-2. Limits for dc Voltage Verification

dcV Range	Applied dc Voltage	Allowable Readings (18° C to 28° C)
200 mV	100.000 mV	99.94 to 100.06
2 V	1.00000 V	0.9995 to 1.0005
20 V	10.0000 V	9.995 to 10.005
200 V	100.000 V	99.95 to 100.05
1000 V	1000.00 V	999.5 to 1000.5

- Select the acV function and 200mV range.
- Connect the calibrator to the DMM.
- Set the calibrator output to 100.000mV ac at a frequency of 20Hz. Verify that the reading is within the limits specified in Table 3-3.
- Repeat the 100mV ac measurement at the other frequencies specified in Table 3-3.
- Check the 2V, 20V, 200V, and 750V ranges by applying the required voltages and frequencies specified in Table 3-3 and verifying that the readings are within the specified limits.

Table 3-3. Limits for ac Voltage Verification

acV Range	Applied ac Voltage	Allowable Readings (18°C to 28°C)					
		20Hz	50Hz	10kHz	20kHz	50kHz	100kHz
200 mV	100.000 mV	98.80 to 101.20	99.30 to 100.70	98.10 to 101.90	91.25 to 108.75	—	—
2 V	1.00000 V	0.9880 to 1.0120	0.9930 to 1.0070	0.9860 to 1.0140	0.9675 to 1.0325	0.9300 to 1.0700	—
20 V	10.0000 V	9.880 to 10.120	9.930 to 10.070	9.860 to 10.140	9.675 to 10.325	9.300 to 10.700	—
200 V	100.000 V	98.80 to 101.20	99.30 to 100.70	98.60 to 101.40	96.75 to 103.25	93.00 to 107.00	—
750 V	750.00 V	740.5 to 759.5	744.2 to 755.8	—	—	—	—

### 3.5.3 Resistance Verification

**CAUTION**

Do not exceed 450Vdc or peak ac between the INPUT HI and LO terminals or instrument damage may occur.

1. Select the  $\Omega$  function (AC/DC pushbutton must be out) and the 200 $\Omega$  range.
2. Connect the test leads to the Model 175-AV and short the other ends together.
3. Press the REL pushbutton to compensate for the test lead resistance.
4. Disconnect the short and connect the test leads to the calibrator.
5. Set the calibrator to 100.000 $\Omega$  and verify that the reading is within the limits specified in Table 3-4.
6. Check the 2k $\Omega$ , 20k $\Omega$ , 200k $\Omega$ , and M $\Omega$  ranges by applying the required resistances specified in Table 3-4 and verifying that the readings are within the specified limits.

**Table 3-4. Limits for Resistance Verification**

$\Omega$ Range	Applied Resistance	Allowable Readings (18°C to 28°C)
200 $\Omega$	100.000 $\Omega$	99.93 to 100.07
2 k $\Omega$	1.00000 k $\Omega$	0.9994 to 1.0006
20 k $\Omega$	10.0000 k $\Omega$	9.993 to 10.007
200 k $\Omega$	100.000 k $\Omega$	99.94 to 100.06
2M $\Omega$	1.00000 M $\Omega$	0.9993 to 1.0007
20M $\Omega$	10.0000 M $\Omega$	9.979 to 10.021

### 3.5.4 Dc Current Verification

**CAUTION**

Do not exceed 2A to the INPUT HI and LO terminals or the AMPS fuse will blow.

1. Select the dcA function and, initially, the 2000mA range.
2. Connect the calibrator to the INPUT HI and LO terminals of the Model 175-AV.

3. Apply 100.000 $\mu$ A and switch the Model 175-AV to the 200 $\mu$ A range. The reading must be within the limits specified in Table 3-5.
4. Check the 2mA through 2000mA ranges by applying the required current specified in Table 3-5 and verifying that the readings are within the specified limits.

**Table 3-5. Limits for dc Current Verification**

dcA Range	Applied dc Current	Allowable Readings (18°C to 28°C)
200 $\mu$ A	100.000 $\mu$ A	99.83 to 100.17
2 mA	1.00000 mA	0.9983 to 1.0017
20 mA	10.0000 mA	9.983 to 10.017
200 mA	100.000 mA	99.78 to 100.22
2000mA	1000.00 mA	997.8 to 1002.2

### 3.5.5 Average Ac Current Verification

Since ac current uses the same circuitry as ac volts and dc current already checked in paragraphs 3.5.2 and 3.5.4, no additional accuracy checks are necessary.

### 3.5.6 Diode Test Current Verification

A 2k $\Omega$  resistor can be used to check the nominal diode test current as follows:

1. Connect the INPUT HI and LO leads to a 2k $\Omega$ , 5% resistor.
2. Select the  $\Omega$  function and autorange. Make a note of the resistance reading ( $R_{DUT}$ ).
3. Simultaneously press the 2k and 200k pushbuttons (diode symbols).
4. The display reads the voltage drop across the resistor. Calculate the diode test current with the formula:

$$I_{TEST} = \frac{V_{DROP}}{R_{DUT}}$$

An allowable reading (18°C to 28°C) for the nominal diode test current is 0.7mA  $\pm$ 0.15mA.





### 4.3 ANALOG CIRCUITRY

The following paragraphs contain a description of the input multiplexer, buffer amplifier,  $-2V$  reference, and A/D converter circuits. These circuits may be found on schematic diagram number 175-AV-106 located at the end of this manual.

#### 4.3.1 Multiplexer

The multiplexer connects one of four signals to the buffer amplifier: signal, zero, ohms reference, or reference. The multiplexer, shown in Figure 4-2, is made up of four JFETs, which are controlled by the microprocessor through U114. The FETs are driven by U109 and part of U106. The drivers convert the digital signals of the microprocessor to signals usable by the FETs.

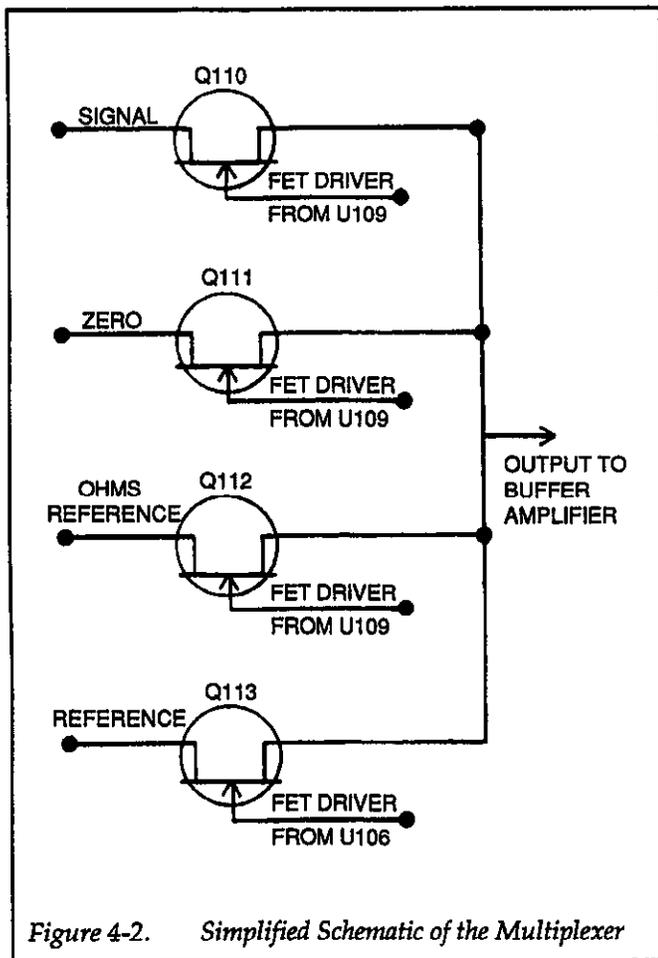


Figure 4-2. Simplified Schematic of the Multiplexer

Ordinarily, FET switching creates transients that could be seen in the final measurement. These effects are minimized in the Model 175-AV through the use of software

generated delays and by shorting the multiplexer bus to signal common before each signal measurement through Q111.

#### 4.3.2 Input Buffer Amplifier

The input buffer amplifier provides the necessary isolation between the input signal and the A/D converter. The amplifier is a non-inverting, low noise, high impedance circuit with  $\times 1$  or  $\times 10$  gain. The amplifier gain is controlled by the microprocessor and is range and function dependent. Figure 4-3 shows the simplified schematic of the input buffer amplifier.

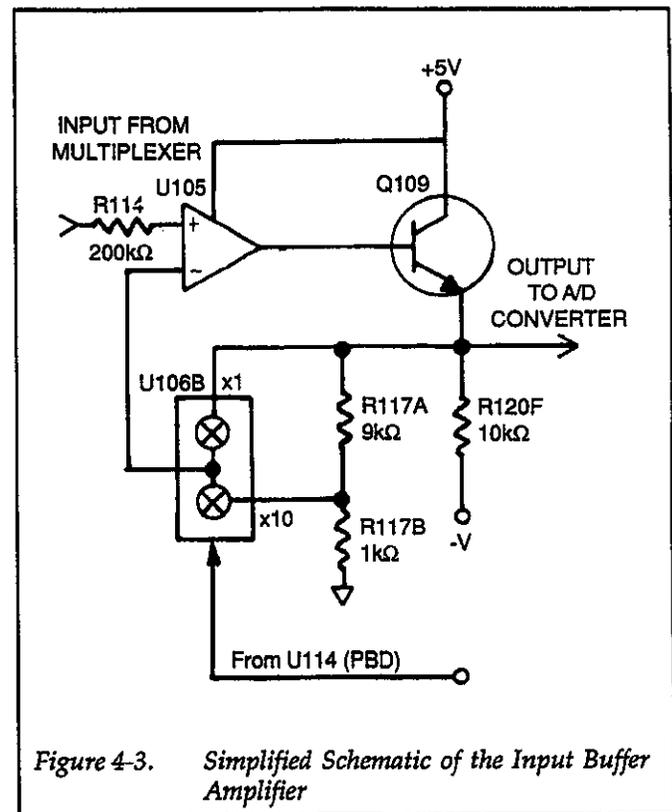


Figure 4-3. Simplified Schematic of the Input Buffer Amplifier

#### 4.3.3 $-2V$ Reference Source

The Model 175-AV voltage and current measurements are based on comparing the unknown signal with an internal  $-2V$  reference voltage. During each measurement cycle the microprocessor samples the unknown and uses it along with a zero measurement and  $-2V$  signal measurement to compute the unknown voltage.

The  $-2V$  reference is made up of a highly stable zener diode (VR101), an op-amp and a resistive voltage divider.

U103 and R120 A, B, C act as a constant current source to minimize the zener voltage variations. R117 C, D is then used to divide down the  $-6.35V$  zener voltage to  $-2V$ .

The output of U103 ( $-7V$ ) is used as a reference voltage for the A/D converter and as a negative supply for various components.

The actual delay period depends on the selected range and function.

Once this occurs, the signal from the buffer amplifier is added to the offset from R120H. This converts the bipolar signal from the buffer ( $\pm 2V$ ) to a unipolar input to the integrator.

### 4.3.4 A/D Converter

The Model 175-AV uses a combination constant frequency charge balance, single slope analog-to-digital converter. A simplified schematic of the A/D used in the Model 175-AV is shown in Figure 4-4 with an associated output waveform.

The charge balance phase begins when the input enable/disable line is set high. This occurs at the end of a software-generated delay period that allows the signal to settle after the appropriate multiplexer FET is turned on.

The integrator ramps up until it just passes the charge balance comparator threshold voltage. When the rising edge of Q3 occurs from U122 or when U119 goes low,  $\bar{Q}$  goes high forcing  $I_{CB}$  into the integrator input. Since  $I_{CB}$  is much greater than the current through R120G and R120H, the integrator output voltage will ramp in the negative direction. The integrator will continue ramping downward until U119B goes low. Each time the output of U121A goes high, it is gated (inside the microprocessor) with the microprocessor's internal clock and these pulses are counted. Once U121A goes low the process repeats itself.

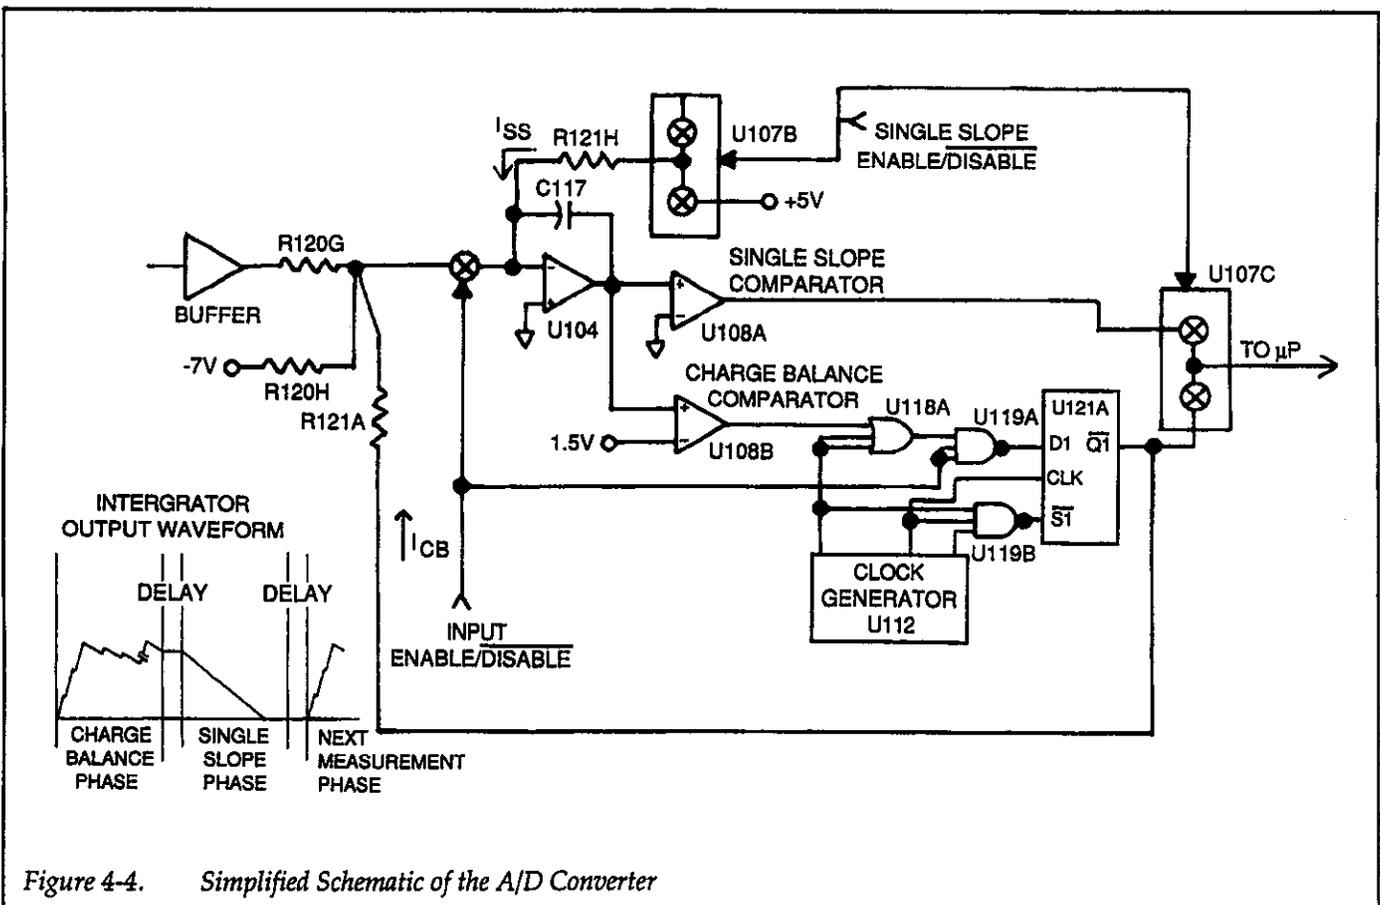


Figure 4-4. Simplified Schematic of the A/D Converter

The charge balance phase continues for 100msec. At the end of the charge balance phase, the output of the integrator is resting at some positive voltage. Since the integrator output is connected to the non-inverting input of U108A, its output will stay high until the integrator ramps negative. During single slope, Q114 is turned off and R121H is connected to +5V. The single slope comparator is then gated with the microprocessor's internal clock and counted. Once the comparator output goes low, the microprocessor stops counting and can compute the reading.

### 4.3.5 Input Signal Conditioning

For dcV and acV, the signal conditioning is performed by R106, its shunt capacitors, K101, K102, K103, and Q106.

The following attenuation is provided:

In the dcV mode:

- +1 is used on the 200mV and 2V ranges
- +10 is used on the 20V range
- +100 is used on the 200V range
- +1000 is used on the 1000V range

In the acV mode:


- +1 is used on the 200mV range
- +10 is used on the 2V range
- +100 is used on the 20V range
- +1000 is used on the 200V and 1000V range

Protection for the ac and dc voltage ranges is provided by R103, R108, Q107, and Q108. R103 and R108 are used exclusively on the lower ranges of acV and dcV to limit current to Q107 and Q108 during overload. During the overload, Q107 and Q108 clamp the maximum voltage on the signal FET line to within 0.7V of the supplies.

Signal conditioning for current is performed by R109 and R110 current shunts. For dc current measurements, the shunt voltage drop (200mV full scale) is applied directly to the input signal FET for conversion. In ac current, the shunt voltage drop is treated as a 200mV ac signal and is switched to the ac converter section. Overload clamping occurs at three diode voltage drops, which is a level high enough to permit high crest factor current waveforms.

In dcV, the properly scaled signal is applied directly to Q110 through R107 and C110. In the acV mode, the scaled analog signal is applied to the ac converter for transformation to a dc signal that is applied to Q110.

Resistance measurements are made using the ratiometric technique (see Figure 4-5). When the resistance function is selected, a series circuit is formed among the ohms source, reference resistor, and the external unknown resistance.

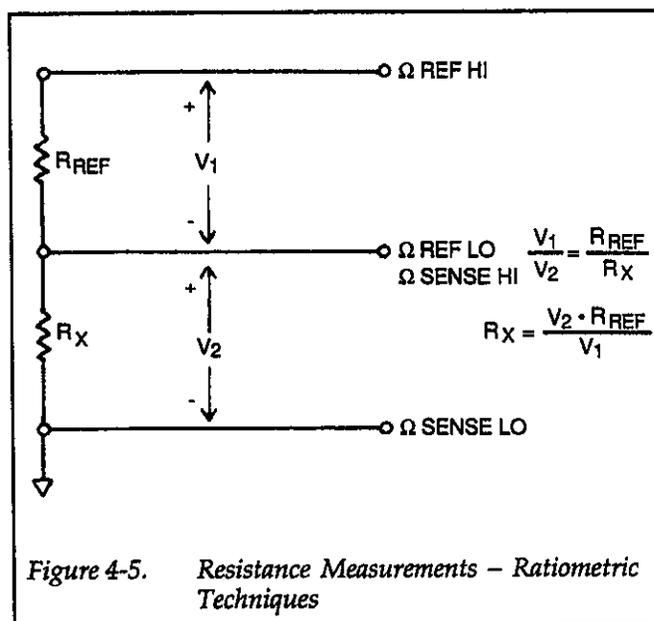

Three reference resistors are used on the ohms ranges: R101, R102, and R106A. R101 is used for the 200Ω and 2kΩ ranges, R102 for the 20kΩ and 200kΩ ranges, and R106A for 2MΩ, 20MΩ, and 200MΩ. Drive for the ohms ranges is ultimately controlled by the microprocessor through U111 and U112.

Switching for the ohms ranges is done using low leakage base to collector diodes of Q102, Q104, and Q105. The appropriate transistor is turned on by driving the base high (+5V). The simplified schematics for the ohms circuitry are shown in Figure 4-6.

By measuring the four inputs to the A/D converter, the unknown resistance can be computed by the microprocessor using the equation:

$$R_X = \frac{\Omega \text{ SENSE HI} - \Omega \text{ SENSE LO}}{\Omega \text{ REF HI} - \Omega \text{ REF LO}}$$

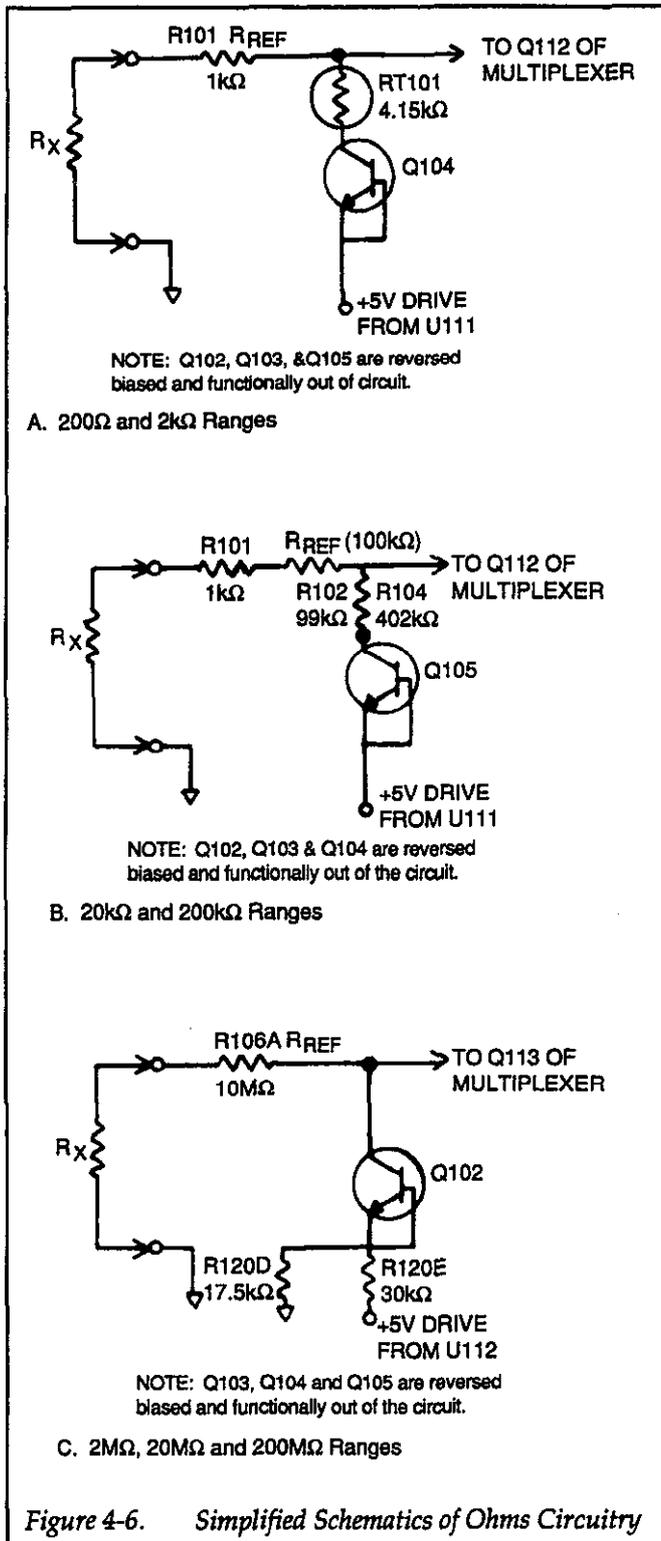


Figure 4-6. Simplified Schematics of Ohms Circuitry

For the 200 $\Omega$ , 20k $\Omega$ , 2M $\Omega$  ranges,  $\Omega$  SENSE HI is actually multiplied by a factor of ten in the buffer circuit.

Protection on the ohms ranges is accomplished by Q103, RT101, Q101, R103, Q107, and Q108. For a voltage applied to the input terminals, Q101 clamps the voltage across R101 to a safe level. RT101 limits current to Q103, which clamps the voltage at Q104 to a safe limit (<12V).

For the 20k $\Omega$  and 200k $\Omega$  ranges, protection is provided by R102, R104, and R105. R106A provides protection for the 2M $\Omega$ , 20M $\Omega$ , and 200M $\Omega$  ranges by limiting current.

### 4.3.6 Ac Converter

All ac voltage inputs pass through U101 for a  $\times 2.5$  voltage amplification. The gain stage is used to permit accurate voltage measurement at higher frequencies and lower input levels.

The output of U101 is applied to the rms-to-dc converter chip (U102), which converts the ac input signal to the corresponding dc level. The dc output is then  $+2.5$  and applied to the signal FET.

## 4.4 DIGITAL CIRCUITRY

Model 175-AV operation is controlled by the internal microcomputer. The following paragraphs briefly describe the operation of the various sections of the microcomputer and associated digital circuitry. A simplified block diagram is included for user reference; for more complete circuit details refer to schematic diagram number 175-AV-106 at the end of this manual.

### 4.4.1 Microcomputer

The microcomputer centers around the 146805E2 CMOS microprocessor. It is an 8-bit microprocessor with direct addressing of up to 8K bytes on a shared address and data bus.

Timing of the microprocessor is accomplished by the use of Y101, a 3.2768MHz crystal. Internally, this frequency is divided down by five to obtain a bus operating frequency of 655.36kHz. This is present on the address strobe of U123 (pin 6) and supplies timing to all other parts of the instrument through the binary divider U122.

The software for the microprocessor is stored in U115 (PROM). Temporary storage is provided by U113. U113

is used to share the calibration constants on power-up and as RAM for the microprocessor's in-house functions. It also stores readings for the data logger. U110 is the NVRAM and stores the calibration constants.

#### **4.4.2 Address Decoding**

U120 latches in the address that is on the bus when the address strobe of U123 goes high and presents it to the PROM (U115) during data strobe.

#### **4.4.3 PIA**

U114 provides for most of the control of the instrument. It controls all ranging hardware, A/D converter, and data output and input for the IEEE-488 option.

#### **4.4.4 Display Board**

The LCD display is driven by a flat pack LCD controller chip (U201), which communicates to the microprocessor through four control lines. During power-up, the microprocessor configures U201 to drive the triplexed display.

To drive the display correctly, four voltages are obtained from R126. The clock required by U201 is obtained from U122.

The display board also houses the special function keys: dB, REL, STO/CLR, and RCL.

### **4.5 DIGITAL CALIBRATION**

The Model 175-AV uses digital calibration to eliminate all potentiometers in the instrument to facilitate calibration. The constants that the Model 175-AV uses are stored in a nonvolatile, electrically alterable, read-only memory (U110), and are read on power-up of the instrument. There is one constant for each range on dcV, acV, and  $\Omega$ .

On the dcA and acA functions, the 200mV dc and 200mV ac constants are used respectively.

### **4.6 POWER SUPPLY**

Fuse F102 is the line fuse, which is internally accessible. S101 is the power on/off switch and S102 selects 115V or 230V operation by placing the transformer primary windings in parallel or series.

T101, the power transformer, has two secondary windings: one for the Model 175-AV and the other for the IEEE-488 option (Model 1753-AV). The bridge rectifier (CR104) functions as a full-wave rectifier for both the plus and minus supplies. R123 limits current to the 12V zener (VR102) and to the batteries (if installed) for charging. The zener acts as a pre-regulator to the +5V regulator.

### **4.7 MODEL 1758 BATTERY OPTION**

The maximum battery charging rate is achieved when the instrument is connected to line power and the on/off switch is off. Full-wave rectified voltage from CR104 is applied to R102 and BT101 to charge the batteries. Q101 acts as a current sink if the charging current rises above 150mA. The batteries are of the quick recharge type and will charge in 8 to 10 hours. With the instrument turned on, the batteries will trickle charge at approximately 40mA.

With the battery pack installed, the negative supply is generated using a CMOS voltage inverter (U101). The output of the inverter is applied to CR101 and C101 for filtering.

Low battery detection is done by the comparator (U102) and the microprocessor. A voltage level of 8.8V across BT101 signals the end of useful battery life. The trip level for the comparator is set by R103 and R104.

# SECTION 5

## Maintenance

### 5.1 INTRODUCTION

This section contains information necessary to maintain, calibrate, and troubleshoot the Model 175-AV. Line voltage selection, fuse replacement, and Model 1758 Battery Pack installation procedures are also included.

#### WARNING

The procedures included in this section are for use only by qualified service personnel. Do not perform these procedures unless qualified to do so. Many of the steps in this section may expose you to potentially lethal voltages that could result in personal injury or death if normal safety precautions are not observed.

### 5.2 LINE VOLTAGE SELECTION

The Model 175-AV may be operated from either 105-125V or 210-250V, 50 or 60Hz power sources. If the line voltage setting of the instrument needs to be changed, set the line voltage switch, located on the rear panel, in the desired position. (See Figure 5-1.)

#### WARNING

Disconnect the power cord and all other equipment from the Model 175-AV.

#### NOTE

Although the Model 175-AV is specified at 50 and 60Hz, the instrument may be operated at 400Hz and 440Hz. Add one count to instrument specifications under this condition.

### 5.3 FUSE REPLACEMENT

The Model 175-AV has two fuses for protection in case of overload. The AMPS fuse protects the current function from excessive current, and the line fuse protects the line power input of the instrument. The fuses may be replaced by using the procedures found in the following paragraphs.

#### WARNING

Disconnect the instrument from the power line and from other equipment before replacing fuses.

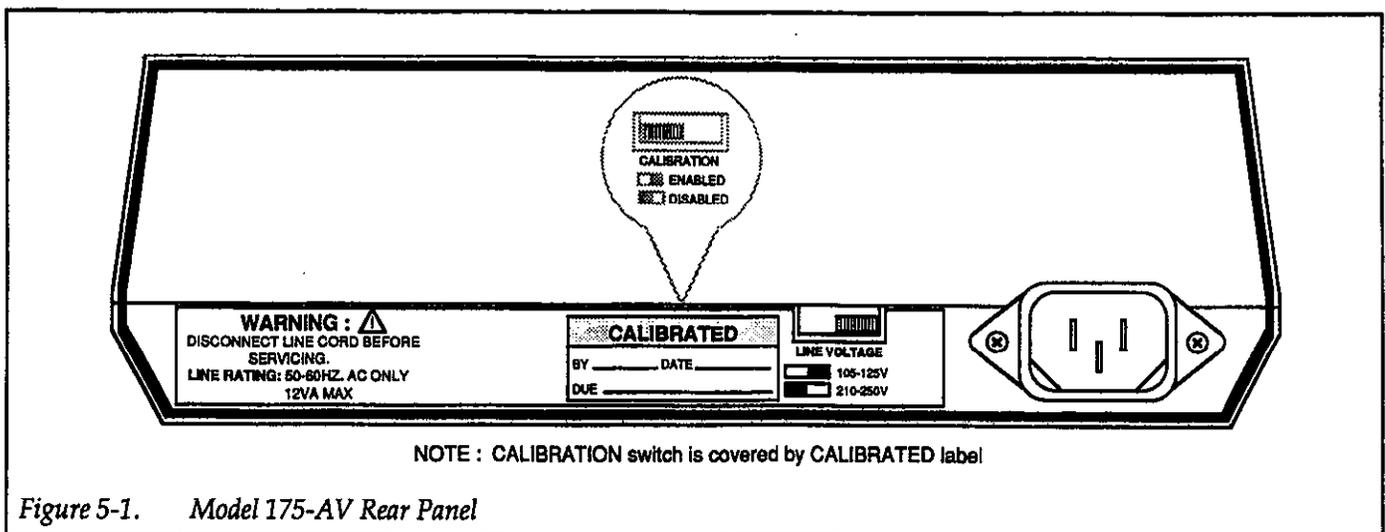


Figure 5-1. Model 175-AV Rear Panel

### 5.3.1 AMPS Fuse

The AMPS fuse protects the current ranges from an input greater than 2A. To replace the AMPS fuse, perform the following steps:

1. Turn off the power and disconnect the line cord and all test leads from the instrument.
2. Place the end of a flat-blade screwdriver into the slot in the fuse holder on the front panel. Press in slightly and rotate the fuse carrier one-quarter turn counter-clockwise. Release pressure and remove the fuse carrier and the fuse.
3. Remove the defective fuse and replace it using Table 5-1 as a guide.

#### CAUTION

Use only the recommended fuse type. If a fuse with a higher current rating is installed, instrument damage may occur.

Table 5-1. Fuse Replacements

Function	Fuse Type	Keithley Part No.
AMPS Fuse	2A, 250V, Normal-Blo, 5mm x 20mm	FU-48
Line Fuse	1/8A, 250V, Slo-Blo 5mm x 20mm	FU-91

4. To replace the fuse carrier with the fuse, reverse the procedure in step 2.

### 5.3.2 Line Fuse

The line fuse is located internally in the Model 175-AV. The top cover must be removed to gain access to the fuse. For exact fuse location, refer to Figure 6-1.

#### Top Cover Removal

1. Turn off the power and disconnect the line cord and all test leads from the instrument.
2. Turn the unit over and remove the four screws from the bottom of the case.

3. Turn the unit over again and separate the top cover from the rest of the unit.

#### Fuse Replacement

1. If the Model 1753-AV IEEE-488 interface is installed, it must be removed to access to the fuse. The IEEE-488 board is secured to the mother board by a support post at the rear and a connector on the left side. To remove, lift the board up until it disengages from the support post and connector.
2. Remove the fuse and replace it with the proper type using Table 5-1 as a guide.

#### CAUTION

Do not use a fuse with a rating higher than specified or instrument damage may occur. If the instrument repeatedly blows fuses, locate and correct the cause of the trouble before replacing the fuse.

3. If the IEEE-488 interface was installed, reinstall by reversing the procedure in step 1.
4. To reinstall the top cover, position the tilt bail properly into the bottom cover and reverse the top cover removal procedure.

## 5.4 CALIBRATION

Calibration should be performed every 12 months, or if the performance verification procedures in Section 3 show that the Model 175-AV is out of specification. If any of the calibration procedures cannot be performed properly, refer to the troubleshooting information in this section. If the problem persists, contact your Keithley representative or the factory for further information.

The entire calibration procedure may be performed without having to make any internal adjustments if frequency compensation has been verified, as explained in paragraph 5.4.8. It is suggested that the 2V, 20V, and 200V ranges at 10kHz be checked (Section 3, Performance Verification) before proceeding.

Calibration can be performed from the front panel or over the IEEE-488 bus. The Model 1755 Calibration Interface can be used for IEEE-488 bus calibration of Model 175-AV units without installed interfaces.

**WARNING**

Some procedures require the use of high voltage. Take care to prevent contact with live circuits, which could cause electrical shock resulting in injury or death.

**NOTE**

Calibration can be stopped at any time and only selected ranges can be calibrated if needed.

hour for the instrument to stabilize before beginning the calibration procedure.

**5.4.4 CALIBRATION Switch**

The Model 175-AV is shipped from the factory with its external CALIBRATION switch in the DISABLED position. In this position, calibration constants are not stored in non-volatile memory, when entered from the front panel or over the IEEE-488 bus. The switch must be moved to the ENABLED position to allow calibration constant storage.

**5.4.1 Recommended Calibration Equipment**

Table 5-2 lists recommended calibration equipment. Alternate equipment may be used as long as equipment accuracy is at least as good as the specifications listed in the table.

The CALIBRATION switch is shown in Figure 5-1 (it is normally covered by the CALIBRATED label). Remove the label and slide the switch to ENABLED. Turn the instrument off, then on, and press in the REL and dB push-buttons simultaneously until the message "CAL" is displayed. Release the buttons. The unit is now in the calibration mode as indicated by the "C" annunciator.

**5.4.2 Environmental Conditions**

Calibration should be performed under laboratory conditions having an ambient temperature of  $23 \pm 3^\circ\text{C}$  and a relative humidity of less than 70%.

**5.4.5 Dc Voltage Calibration From Front Panel**

Connect the calibration source to the INPUT HI and LO terminals of the Model 175-AV.

**5.4.3 Warm-Up Period**

Turn on the instrument power and allow it warm up for at least one hour before beginning the calibration procedure. If the instrument has been subjected to extremes of temperature or humidity, allow at least one additional

1. Ensure that the Model 175-AV is in the calibration mode ("C" annunciator on), as explained in paragraph 5.4.4.
2. Select the 200mV dc range on the Model 175-AV.
3. Set the voltage calibrator to output 0V.
4. Press the REL button (REL on).
5. Set the voltage calibrator output (+190.000mV for the 200mV range, see Table 5-3 for other ranges).
6. Adjust the Model 175-AV displayed reading (190.00mV for the 200mV range, also see Table 5-3)

**Table 5-2. Recommended Calibration Equipment**

Description	Specifications	Manufacturer and Model
dc Voltage Calibrator	200mV, 2V, 20V, 200V, 1100V ranges, $\pm 0.005\%$ accuracy.	Fluke 5101B
ac Voltage Calibrator	200mV, 2V, 20V, 200V, 1100V ranges, $\pm 0.05\%$ accuracy.	Fluke 5101B
Resistance Calibrator	100 $\Omega$ , 1k $\Omega$ , 10k $\Omega$ , 100k $\Omega$ ranges, $\pm 0.005\%$ ; 1M $\Omega$ range, $\pm 0.01\%$ ; 10M $\Omega$ range, $\pm 0.05\%$	Fluke 5101B

with the use of the STO/CLR and RCL buttons. The STO/CLR button increments the displayed reading; the RCL button decrements the displayed reading.

7. Select the next dc voltage range on the Model 175-AV.
8. Repeat steps 3 through 7 for the remaining ranges, calibrator voltages, and readings as listed in Table 5-3.

**Table 5-3. dc Voltage Calibration**

175-AV Range	Calibrator Voltage	175-AV Reading
200 mV	190.000 mV	190.00 mV
2 V	1.90000 V	1.9000 V
20 V	19.00000 V	19.0000 V
200 V	190.0000 V	190.00 V
1000 V	1000.00 V	1000.0 V

#### 5.4.6 Ac Voltage Calibration From Front Panel

With the Model 175-AV still in the calibration mode ("C" annunciator on), select the ac volts function and connect the calibrator to the INPUT HI and LO terminals of the Model 175-AV. Steps 1 through 6 must be performed in the exact sequence listed.

1. Select the 200mV range and set the calibrator to output 190.000mV @ 200Hz.
2. Adjust the Model 175-AV display using the STO/CLR and RCL buttons to read 190.00mV ac.
3. Press the dB button and verify that the dB annunciator is on.

4. Set the calibrator to output 19.0000mV @ 200Hz.
5. Adjust the display to read 19.00mV.
6. Press the REL button and verify that the dB annunciator is off.
7. Repeat only steps 1 and 2 for the remaining ranges using Table 5-4 as a guide.

#### 5.4.7 Resistance Calibration From Front Panel

With the Model 175-AV still in the calibration mode ("C" annunciator on), select the  $\Omega$  function and connect the test leads to the INPUT HI and LO terminals of the Model 175-AV. Table 5-5 summarizes the procedure.

1. With the test leads connected to the Model 175-AV, short the other ends together.
2. Select the 200 $\Omega$  range and press the REL button on the Model 175-AV. The REL annunciator will turn on and the display will zero (test lead compensation).
3. Disconnect the short and connect the test leads to the calibrator.
4. Set the calibrator to output 100 $\Omega$  and adjust the Model 175-AV display, using the STO/CLR and RCL buttons for a reading of 100.00 $\Omega$ .
5. Press the REL button and note that the REL annunciator turns off.
6. Select the 2k $\Omega$  range and again short the test leads together.
7. Press the REL button. The REL annunciator will turn on and the display will zero.
8. Reconnect the test leads, set the calibrator to output 1k $\Omega$ , and adjust the Model 175-AV for a reading of 1.0000k $\Omega$ .
9. Press the REL button to turn off REL.
10. Select the 20k $\Omega$  range and set the calibrator to output 10k $\Omega$ . Adjust the Model 175-AV to read 10.000k $\Omega$ .

**Table 5-4. ac Voltage Calibration**

175-AV Range	Calibrator Voltage	Calibrator Frequency	175-AV Reading
200 mV	190.000 mV	200Hz	190.00 mV
200 mV*	19.00000 mV	200Hz	19.00 mV
2 V	1.90000 V	200Hz	1.9000 V
20 V	19.00000 V	200Hz	19.0000 V
200 V	190.0000 V	200Hz	190.00 V
750 V	750.00 V	200Hz	750.0 V

\*dB annunciator must be on (indicated two-point calibration).

11. Repeat step 8 for the 200k $\Omega$ , 2M $\Omega$  and 20M $\Omega$  ranges using Table 5-5 as a guide.

Table 5-5. Resistance Calibration

175-AV Range	REL*	Calibration Resistance	175-AV Reading
200 $\Omega$	on	100 $\Omega$	100.00 $\Omega$
2 k $\Omega$	on	1 k $\Omega$	1.0000 k $\Omega$
20 k $\Omega$	off	10 k $\Omega$	10.000 k $\Omega$
200 k $\Omega$	off	100 k $\Omega$	100.00 k $\Omega$
2 M $\Omega$	off	1 M $\Omega$	1.0000 M $\Omega$
20 M $\Omega$	off	10 M $\Omega$	10.000 M $\Omega$

\*REL is used to compensate for test lead resistance on the 200 $\Omega$  and 2k $\Omega$  ranges.

### 5.4.8 Frequency Compensation

Check high frequency (10kHz) ac volts accuracy as explained in Section 3, Performance Verification. In the event that frequency compensation must be performed, three internal trimmer capacitors will have to be adjusted. When making adjustments use a flat-bladed, insulated calibration tool.

The trimmer capacitors are accessible through the shield (see Figure 6-1). Once the top cover is removed, as described in paragraph 5.3.2, the shield and PC board must be secured to the bottom cover to prevent movement. This assembly can be secured with two screws and nuts in place of the top cover. Proceed as follows:

1. Set the Model 175-AV for 200Vac and set the calibrator to output 100.000V @ 10kHz.
2. Adjust C101 for a reading of 100.00  $\pm$ 3 counts.
3. Select the 2V range and set the calibrator to output 1.00000V @ 10kHz.
4. Adjust C104 for a reading of 1.0000  $\pm$ 8 counts.
5. Repeat steps 1 and 2.
6. Select the 20V range and set the calibrator to output 10.0000V @ 10kHz.
7. Adjust C107 for a reading of 10.000  $\pm$ 8 counts.

### 5.4.9 Calibration Storage

To store the calibration constants, simultaneously press the REL and dB buttons until the message "Stor" is displayed. If instead the message "out" is displayed, then calibration storage was not enabled and the calibration constants will only be valid until the Model 175-AV is turned off.

To save the calibration constants after "out" appears on the display, slide the CALIBRATION switch to ENABLED. Press REL and dB simultaneously until "CAL" appears on the display. Then simultaneously press REL and dB until "Stor" is displayed. The calibration constants are now stored in non-volatile memory.

Slide the CALIBRATION switch back to the DISABLED position. Replace the CALIBRATED label (Keithley part number MC-561) on the rear panel, completely covering the CALIBRATION switch.

### 5.4.10 IEEE-488 Bus Calibration

The Model 175-AV, with the Model 1753-AV installed, can be calibrated over the IEEE-488 bus with the use of a programmable calibrator and a controller.

The following program can be used to calibrate the Model 175-AV over the IEEE-488 bus. Use the equipment listed below:

- Keithley Model 1753-AV IEEE-488 Interface
- Fluke Model 5100 Series B Calibrator with Model 5100A-05 IEEE-488 Interface.
- Hewlett-Packard Model HP-85 Computer with the following:
  1. Model HP 82937A HP-IB Interface
  2. Model HP 82936A ROM Drawer
  3. I/O ROM (0085-15003)

Detailed operating instructions for the Model 1753-AV bus interface can be found in the Model 1753 Instruction Manual.

#### Programming Example

Use the following procedure, along with the equipment listed previously, to calibrate a Model 175-AV over the IEEE-488 bus.

1. Place the rear panel CALIBRATION switch in the ENABLED position and enter calibration mode as described in paragraph 5.4.4.
2. Configure the Model 175-AV/1753-AV, HP-85, and the Model 5100 Calibrator as a system by connecting the instruments together with IEEE-488 cables.
3. Set the primary address of the Model 175-AV/1753-AV to 24 (11000). Set the Model 5100 Calibrator to 17 (10001).
4. Turn the instruments on and allow a one hour warm-up.
5. Type the program listed at the end of this section into the HP-85.
6. After step 5 is complete, check the program to make sure there are no mistakes. If the program has even a small mistake it will not operate as intended.
7. Connect the output of the Model 5100 Calibrator to INPUT HI and LO terminals of the Model 175-AV.
8. Press the RUN key on the HP-85 to initiate the program.
9. The program will stop at certain pre-determined points to prompt the user to change functions. When the prompt instructions have been completed, press CONT on the HP-85 to resume the program.
10. When the "calibration is now complete" message is displayed, slide the CALIBRATION switch back to the DISABLED position.
11. Replace the CALIBRATED label (Keithley part number MC-561) on the rear panel, completely covering the CALIBRATION switch.

## **5.5 SPECIAL HANDLING OF STATIC SENSITIVE DEVICES**

CMOS devices operate at very high impedance levels for low power consumption. As a result, any static charge that builds up on your person or clothing may be sufficient to destroy these devices, if they are not handled properly.

### **CAUTION**

Since the many CMOS devices installed in the Model 175-AV are not denoted in this manual, all ICs and transistors should be handled as static-sensitive devices.

When handling these devices, use the following precautions to avoid damaging them:

1. Transport such devices only in containers designed to prevent static build-up. Typically, these parts will be received in anti-static containers of plastic or foam. Always leave the devices in question in their original containers until ready for installation.
2. Remove the devices from their protective containers only at a properly grounded work station. Also ground yourself with a suitable wrist strap.
3. Handle the devices only by the body; do not touch the pins or terminals.
4. Any printed circuit board into which the device is to be inserted must also be properly grounded to the bench or table.
5. Use only anti-static type de-soldering tools.
6. Use only soldering irons with properly grounded tips.
7. Once the device is installed on the PC board, it is usually adequately protected, and normal handling can resume.

## **5.6 TROUBLESHOOTING**

The troubleshooting information contained in this section is intended for use by qualified personnel having a basic understanding of analog and digital circuitry. The individual should also be experienced at using typical test equipment as well as ordinary troubleshooting procedures.

The information presented here has been written to assist in isolating a defective circuit or circuit section. Isolation of the specific component is left to the technician. Note that schematic diagrams and component location drawings, which are an essential aid in troubleshooting, are located at the end of Section 6.

### **NOTE**

Avoid touching the PC board or its component parts. Handle the PC board by its edges.

### **5.6.1 Recommended Test Equipment**

Success in troubleshooting instruments like the Model 175-AV depends not only on the skill of the technician, but relies on the use of accurate, reliable test equipment. Table 5-6 lists the equipment recommended for troubleshooting the Model 175-AV. Other equipment,

such as logic analyzers and capacitance meters, could also be helpful, especially in difficult situations.

**Table 5-6. Recommended Troubleshooting Equipment**

Equipment	Use
Five-function DMM with 0.05% basic dc accuracy, 10MΩ input impedance	Power supply and dc voltage checks, analog signal tracing, continuity, static logic levels.
Dual-trace, triggered-sweep oscilloscope, dc to 50MHz bandwidth.	Digital and analog waveform checks.

### 5.6.2 Self Diagnostic Program

To use the self diagnostic program, hold in the dB button and turn on the Model 175-AV. The following will occur:

1. All LCD digits and annunciators will turn on.
2. The software revision level will be displayed (e.g., A1).
3. The sequential display test will run.
4. The Model 175-AV will go into the troubleshooting test mode.

If the dB button is released, the instrument will flag either RAM or NVRAM self test failures, should they occur. If neither RAM nor NVRAM fails, the instrument will default to the troubleshooting test mode.

#### RAM Test

If the RAM test fails, the Model 175-AV will lock up with all zeros displayed. Replacing U113 may correct problem.

#### Non-volatile RAM Test

If the NVRAM test fails, the following message will be displayed:



This message indicates that the instrument is probably not properly calibrated, since calibration constants are stored in the non-volatile RAM. The Model 175-AV will lock up at this point if the test fails, but operation may be restored for troubleshooting by pressing any front panel control button. The flashing "C" annunciator will indicate that the unit failed the NVRAM test.

At this point, try calibrating the instrument with the constants already entered by simultaneously pressing in REL and dB until "CAL" is displayed, and then again until "Stor" is displayed. If the error gets corrected, indicating that the NVRAM is probably good, a full calibration will be needed. If the error persists, try replacing the NVRAM chip (U110). Again, the Model 175-AV must undergo a complete calibration after the problem is corrected.

#### Sequential Display Test

Segments and annunciators are sequentially displayed in eight steps. Use Figure 5-2 for segment identification. The steps are as listed in Table 5-7.

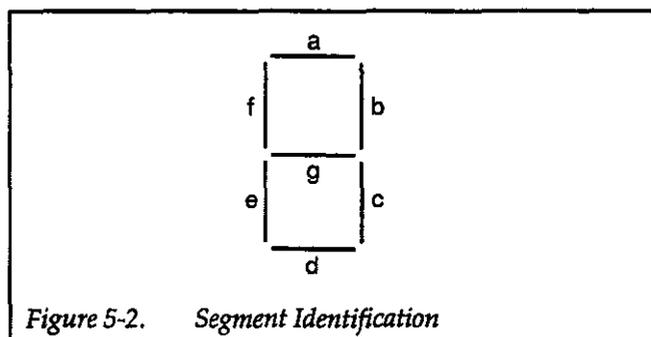


Figure 5-2. Segment Identification

**Table 5-7. Sequential Display Test Steps**

Step	Segment of Digits	Annunciators
1	a	dB, V
2	b	none
3	c	none
4	d	m (mA), RCL, RMT
5	e	minus sign, REL, M, $\Omega$
6	f	AUTO, BAT, m (mV), C
7	g	AC, k
8	none	decimal points, most significant digit, STO, $\mu$ , A

**Troubleshooting Test Modes**

The troubleshooting mode is designed to switch on various switching FETs, transistors, and logic levels to allow signal tracing through the instrument. The first displayed mode will reflect the selected function and range. For example, assume that "0u1" is displayed. The "0" is

the test number, the "u" corresponds to the volts function, and the "1" corresponds to the 200mV range. The test number can be changed by pressing in the dB button. Table 5-8 lists the test modes for all functions and ranges.

To update the test mode, select the new function and range and hold in the dB button until the function symbol changes.

Troubleshooting consists of selecting the desired test mode and using the data found in Table 5-8 to signal trace the circuit.

**Notes:**

1. When a different function or range is selected, the dB button must be pressed and held in to update the display with the corresponding test mode.
2. Do not use AUTO when in ac or dc volts.
3. Use AUTO when checking circuitry on the 20M $\Omega$  and 200M $\Omega$  ranges (Xo6).

Table 5-8. Troubleshooting Modes

Function & Range	Test Mode	AMP Gain (U105*)	Multiplexer FET On	Ohms Range Transistor On	Range Control Logic level on U114			
					PA0	PA1	PA2	PA3
200mVdc	0u1	x10	Q110		1	1	1	1
	1u1	x10	Q111		1	1	1	1
	2u1	x1	Q113		1	1	1	1
	3u1	x1	Q111		1	1	1	1
2Vdc	0u2	x1	Q110		1	1	1	1
	1u2	x1	Q111		1	1	1	1
	2u2	x1	Q113		1	1	1	1
	3u2	x1	Q111		1	1	1	1
20Vdc	0u3	x1	Q110		1	0	1	1
	1u3	x1	Q111		1	0	1	1
	2u3	x1	Q113		1	0	1	1
	3u3	x1	Q111		1	0	1	1
200Vdc	0u4	x1	Q110		1	0	0	1
	1u4	x1	Q111		1	0	0	1
	2u4	x1	Q113		1	0	0	1
	3u4	x1	Q111		1	0	0	1
1000Vdc	0u5	x1	Q110		0	0	1	1
	1u5	x1	Q111		0	0	1	1
	2u5	x1	Q113		0	0	1	1
	3u5	x1	Q111		0	0	1	1
200mVac	0u1	x10	Q110		1	1	1	1
	1u1	x10	Q111		1	1	1	1
	2u1	x1	Q113		1	1	1	1
	3u1	x1	Q111		1	1	1	1
2Vac	0u2	x10	Q110		1	0	1	1
	1u2	x10	Q111		1	0	1	1
	2u2	x1	Q113		1	0	1	1
	3u2	x1	Q111		1	0	1	1
20Vac	0u3	x10	Q110		1	0	0	1
	1u3	x10	Q111		1	0	0	1
	2u3	x1	Q113		1	0	0	1
	3u3	x1	Q111		1	0	0	1
200Vac	0u4	x10	Q110		0	0	1	1
	1u4	x10	Q111		0	0	1	1
	2u4	x1	Q113		0	0	1	1
	3u4	x1	Q111		0	0	1	1
750Vac	0u5	x10	Q110		0	0	1	1
	1u5	x10	Q111		0	0	1	1
	2u5	x1	Q113		0	0	1	1
	3u5	x1	Q111		0	0	1	1
acA & dcA ALL Ranges	0A1-0A6	x10	Q110		0	0	0	1
	1A1-1A6	x10	Q111		0	0	0	1
	2A1-2A6	x1	Q113		0	0	0	1
	3A1-3A6	x1	Q111		0	0	0	1

Troubleshooting Modes (Cont.)

Function & Range	Test Mode	AMP Gain (U105*)	Multiplexer FET On	Ohms Range Transistor On	Range Control Logic level on U114			
					PA0	PA1	PA2	PA3
200 Ω	0o1	x10	Q110	Q104	1	1	1	0
	1o1	x10	Q111	Q104	1	1	1	0
	2o1	x1	Q112	Q104	1	1	1	0
	3o1	x1	Q110	Q104	1	1	1	0
	4o1							
	5o1	x1	Q111	Q104	1	1	1	0
	6o1	x1	Q113	Q104	1	1	1	0
2k Ω	0o2	x1	Q110	Q104	1	1	1	0
	1o2	x1	Q111	Q104	1	1	1	0
	2o2	x1	Q112	Q104	1	1	1	0
	3o2	x1	Q110	Q104	1	1	1	0
	4o2							
	5o2	x1	Q111	Q104	1	1	1	0
	6o2	x1	Q113	Q104	1	1	1	0
20k Ω	0o3	x10	Q110	Q105	0	1	1	1
	1o3	x10	Q111	Q105	0	1	1	1
	2o3	x1	Q112	Q105	0	1	1	1
	3o3	x1	Q110	Q105	0	1	1	1
	4o3							
	5o3	x1	Q111	Q105	0	1	1	1
	6o3	x1	Q113	Q105	0	1	1	1
200k Ω	0o4	x1	Q110	Q105	0	1	1	1
	1o4	x1	Q111	Q105	0	1	1	1
	2o4	x1	Q112	Q105	0	1	1	1
	3o4	x1	Q110	Q105	0	1	1	1
	4o4							
	5o4	x1	Q111	Q105	0	1	1	1
	6o4	x1	Q113	Q105	0	1	1	1
2M Ω (M Ω)	0o5	x10	Q110	Q102	1	1	0	1
	1o5	x10	Q111	Q102	1	1	0	1
	2o5	x1	Q113	Q102	1	1	0	1
	3o5	x1	Q110	Q102	1	1	0	1
	4o5							
	5o5	x1	Q111	Q102	1	1	0	1
	6o5	x1	Q113	Q102	1	1	0	1
20 & 200M Ω (M Ω)	0o6	x1	Q110	Q102	1	1	0	1
	1o6	x1	Q111	Q102	1	1	0	1
	2o6	x1	Q113	Q102	1	1	0	1
	3o6							
	4o6							
	5o6	x1	Q111	Q102	1	1	0	1
	6o6	x1	Q113	Q102	1	1	0	1

\*+4 to 5V (Logic 1) at pin 9 of U106B selects x10 gain, 0V (Logic 0) at pin 9 of U106B selects x1 gain.

### 5.6.3 Power Supply and Battery Pack (Model 1758) Checks

Table 5-9 shows the various checks that can be made to the power supplies within the Models 175-AV and 1758. In addition to the normal voltage checks, it is a good idea to check the various supplies with an oscilloscope to make sure no noise or ringing are present.

### 5.6.4 A/D Converter and Display

Make sure the A/D converter and display are operating properly before attempting to troubleshoot the signal conditioning circuits. Check these circuits using the information in Tables 5-10 and 5-11.

### 5.6.5 Signal Conditioning

These circuits can be checked by using the diagnostic program (troubleshooting modes). See paragraph 5.6.2.

**Table 5-9. Power Supply Checks and Battery Pack (Model 1758) Checks**

Step	Item/Component	Required Condition	Remarks
1	S102 Line Switch	Set to 115 or 230V as required.	S102 externally accessible from rear panel.
2	F102 Line Fuse	Continuity.	
3	Line Cord	Plugged into line receptacle; power on.	
4	U116** Input (Vin)	+12V $\pm$ 10%	+5V regulator input.
5	U116** Output (Vo)	+5V $\pm$ 5%	+5V regulator output.
6	U117 Input (Vin)	-20V to -14V	Negative supply input.
7	U117 Output (Vo)	-10V $\pm$ 10%	Negative supply output.
8	VR101	-6.25V to -6.45V	Reference zener diode.
9	U103 pin 6	-7V $\pm$ 5%	Low noise negative supply.
10*	Q101 base	0.6V while charging (power switch off)	Current sink.
11*		Line cord disconnected, battery pack charged, power switch on.	
12*	U101 pin 8	>8.8V	Voltage inverter.
13*	U102 pin 7	+5V with batteries charged.	Voltage comparator.

\*Checks for the Model 1758

\*\*If U116 is replaced, be sure that the device is properly seated on the mother board so that it will not touch the IEEE board (if installed).

Table 5-10. A/D Converter Checks

Step	Item/Component	Required Condition	Remarks
1		Turn on power; select 2V dc range. Short input.	
2	U123, pin 38	3.2768MHz clock	Crystal (Y101)
3	U122, pin 10	655.36kHz clock	Address strobe
4	U122, pin 6	81.92kHz clock	Synchronous clock for A/D
5	U122, pin 5	40.96kHz clock	Synchronous clock for A/D
6	U122, pin 7	163.84kHz clock	Synchronous clock for A/D
7	U122, pin 12	1.28kHz clock	Integrator timebase and real time interrupt.
8	U119B, pin 6	+5V to $\approx 0V$ pulse train, 3 $\mu$ sec duration every 22 $\mu$ sec	Charge balance synchronization signal.
9	U104, pin 6	Integrator Ramp	
10	U108, pin 6	$\approx 1.5V$	Comparator reference
11	U108B, pin 7	Variable pulse train 0V to +5V.	Comparator output
12	U121A, pin 6	Variable pulse train, 0V to +5V.	Reference current generator
13	U107A, pin 15	Variable pulse train, 0V to +5V.	
14	U107A, pin 10	$\approx 5$ msec positive going pulses.	Control line for charge balance/single slope.
15	U121B, pin 9	100msec positive going pulse.	Control line for integrator

Table 5-11. Display Board Checks

Step	Item/Component	Required Condition	Remarks
1		Turn on power; select the 2Vdc range.	
2	P1006, pin 5	+3.33V	Vlcd1
3	P1006, pin 6	+1.66V	Vlcd2
4	P1006, pin 7	+5V $\pm 5\%$	Power to display
5	P1006, pin 2	81.92kHz	clock.
6	P1006, pin 1	0V to +5V pulses	Data from microprocessor
7	P1006, pin 12	0V to +5V pulses	Data from microprocessor
8	P1006, pin 13	0V to +5V pulses	Data from microprocessor
9	P1006, pin 14	+5V to 0V pulses	Data from microprocessor
10	LCD	Check that LCD is positioned properly.	
11	Connector (P1006)	Check that connector is not reversed. If reversed, display test will run, then display will blank.	
12	Strip Connectors	Check that they are positioned properly.	

## 5.7 MODEL 1758 BATTERY PACK INSTALLATION AND REMOVAL

Refer to Figure 6-1 and perform the appropriate following procedure to install or remove the battery pack.

### WARNING

**Installation and removal of the battery pack should only be performed by qualified personnel. Disconnect the line cord and remove all test leads from the Model 175-AV.**

### CAUTION

**Do not allow the battery leads to short together or damage to the batteries may occur.**

### NOTE

It is not recommended that the battery packs be stored at temperatures above 50°C.

### Battery Pack Installation

1. Remove the top cover as explained in paragraph 5.3.2.
2. Remove the screw that connects the shield to the PC board. Ease the shield out of the unit.
3. Position the battery board as shown in Figure 6-1 and secure it to the shield using two supplied screws. The screws are fed through the shield into the battery board fasteners.
4. Place the battery pack in the bracket and position it on the shield as shown. Feed the two screws through the shield into the bracket and tighten.
5. Carefully place the shield (with battery pack) back into the Model 175-AV so that it seats properly on the two spacers. Replace the screw that connects the shield to the PC board.
6. Connect the ribbon cable from the battery board to the male connector (marked BATT.) on the mother board.

### CAUTION

**Make a close visual inspection to ensure that the connectors are properly mated or damage to the instrument may result.**

7. Connect the red battery lead to the +RED terminal pin on the battery board. Connect the black battery lead to the -BLK terminal pin on the battery board.
8. Reinstall the top cover as explained in paragraph 5.3.2.
9. Charge the battery pack per the instructions in paragraph 2.3.3.

### Battery Pack Removal

1. Remove the top cover as explained in paragraph 5.3.2.
2. Disconnect the battery board ribbon cable from the mother board connector.
3. Disconnect the battery leads from the terminal pins on the battery board.
4. Remove the screw that connects the shield to the PC board. Ease the assembly out of the unit.
5. Remove the two screws holding the bracket to the shield.
6. Remove the battery pack from its bracket.
7. Remove the two screws holding the battery board to the shield.
8. Place the shield back into the Model 175-AV so that it seats properly on the two spacers. Replace the screw that connects the shield to the PC board.
9. Reinstall the top cover as explained in paragraph 5.3.2.

## 5.8 STORAGE

When storing the Model 1758 for longer than 6 months, recharge at least once a year (once every 6 months if possible) to prevent self-discharge from causing a drop in battery performance or electrolyte leakage.

SECTION 5  
Maintenance

PROGRAM	COMMENTS
10 REMOTE 724, 717	
20 CLEAR	
30 DISP " "	
40 DISP "THIS PROGRAM RUNS A FULL CALI BRATION ON THE MODEL 175-AV USING THE FLUKE MODEL 5101B"	
50 DISP " "	
60 DISP "PRESS CONT TO RESUME PROGRAM"	
70 PAUSE	
80 CLEAR	
90 DISP " "	
100 DISP "SELECT THE DCV FUNCTION AND CON NECT THE CALIBRATION SOURCE"	DC VOLTS CALIBRATION
110 DISP " "	
120 DISP " "	
130 DISP "PRESS CONT TO RESUME PROGRAM"	
140 DISP " "	
150 PAUSE	
160 OUTPUT 724; "R1X"	Sets 175-AV to 200mV range.
170 OUTPUT 717; "0V,N"	Outputs 0V to 175-AV.
180 WAIT 1000	
185 OUTPUT 724; "V.1X"	Put 175-AV in CAL mode.
190 OUTPUT 724; "Z1X"	Turns REL on.
200 WAIT 1000	
210 OUTPUT 717; ".19V,N"	Outputs 190mV to 175-AV.
220 WAIT 5000	
230 OUTPUT 724; "V.19X"	Calibrates 200mV range.
240 WAIT 2000	
250 OUTPUT 724; "R2X"	Sets 175-AV to 2V range.
260 OUTPUT 717; "0V,N"	Outputs 0V to 175-AV.
270 WAIT 1000	
280 OUTPUT 724; "Z1X"	Turns REL on.
290 WAIT 1000	
300 OUTPUT 717; "1.9V, N"	Outputs 1.9V to 175-AV.
310 WAIT 5000	
320 OUTPUT 724; "V1.9X"	Calibrates 2V range.
330 WAIT 2000	
340 OUTPUT 724; "R3X"	Sets 175-AV to 20V range.
342 OUTPUT 717; "0V,N"	Outputs 0V to 175-AV.
344 WAIT 1000	
346 OUTPUT 724; "Z1X"	Turns REL on.
348 WAIT 1000	
350 OUTPUT 717; "19V,N"	Outputs 19V to 175-AV.
360 WAIT 5000	
370 OUTPUT 724; "V19X"	Calibrates 20V range.
380 WAIT 2000	
390 OUTPUT 717; "S"	Sets 5101B to standby.
400 OUTPUT 724; "R4X"	Sets 175-AV to 200V range.
410 CLEAR	
420 BEEP 50, 1000	
430 DISP " "	

PROGRAM	COMMENTS
440 DISP "WARNING! THE FOLLOWING STEPS USE HIGH VOLTAGE!"	
450 DISP " "	
460 DISP "PRESS CONT TO RESUME PROGRAM"	
470 DISP " "	
480 PAUSE	
490 DISP " "	
492 OUTPUT 717; "0V,N"	Outputs 0V to 175-AV.
494 WAIT 1000	
496 OUTPUT 724; "Z1X"	Turns REL on.
498 WAIT 1000	
500 OUTPUT 717; "190V,N"	Outputs 190V to 175-AV.
510 WAIT 5000	
520 OUTPUT 724; "V190X"	Calibrates 200V range.
530 WAIT 2000	
540 OUTPUT 724; "R5X"	Sets 175-AV to 1000V range.
542 OUTPUT 717; "0V,N"	Outputs 0V to 175-AV.
544 WAIT 1000	
546 OUTPUT 724; "Z1X"	Turns REL on.
548 WAIT 1000	
550 OUTPUT 717; "1000V,N"	Outputs 1000V to 175-AV.
560 WAIT 5000	
570 OUTPUT 724; "V1000X"	Calibrates 1000V range.
580 WAIT 2000	
590 OUTPUT 717; "S"	Sets 5101B to standby.
600 CLEAR	
610 BEEP 50, 1000	
620 DISP " "	
630 DISP "DC VOLTS CALIBRATION IS NOW COMPLETE"	
640 DISP " "	
650 DISP "SELECT AC VOLTS and ..."	AC VOLTS CALIBRATION
660 WAIT 2000	
670 DISP " "	
680 DISP "PRESS CONT TO RESUME PROGRAM"	
690 PAUSE	
700 OUTPUT 724; "R1X"	Sets 175-AV to 200mV range.
710 OUTPUT 717; ".19V200H,N"	Outputs 190mV at 200Hz to 175-AV.
720 WAIT 5000	
730 OUTPUT 724; "V.19X"	Calibrates high end of 200mV range.
740 WAIT 2000	
750 OUTPUT 724; "D1X"	Turns dB annunciator on.
760 OUTPUT 717; "19E-3V200H,N"	Outputs 19mV at 200Hz to 175-AV.
770 WAIT 5000	
780 OUTPUT 724; "V19E-3X"	Calibrates low end of 200mV range.
790 WAIT 2000	
800 OUTPUT 724; "Z0X"	Turns dB annunciator off.
810 WAIT 5000	
820 OUTPUT 724; "R2X"	Sets 175-AV to 2V range.
830 OUTPUT 717; "1.9V200H,N"	Outputs 1.9V at 200Hz to 175-AV.
840 WAIT 5000	
850 OUTPUT 724; "V1.9X"	Calibrates 2V range.
860 WAIT 2000	

SECTION 5  
Maintenance

PROGRAM	COMMENTS
870 OUTPUT 724; "R3X"	Sets 175-AV to 20V range.
880 OUTPUT 717; "19V200H,N"	Outputs 19V at 200Hz to 175-AV.
890 WAIT 5000	
900 OUTPUT 724; "V19X"	Calibrates 20V range.
910 WAIT 2000	
920 OUTPUT 717; "S"	Sets 5101B to standby.
930 OUTPUT 724; "R4X"	Sets 175-AV to 200V range.
940 CLEAR	
950 BEEP 50, 1000	
960 DISP " "	
970 DISP "WARNING! THE NEXT STEPS USE HIGH VOLTAGE!"	
980 DISP " "	
990 DISP "PRESS CONT TO RESUME PROGRAM"	
1000 PAUSE	
1010 OUTPUT 717; "190V200H,N"	Outputs 190V at 200Hz to 175-AV.
1020 WAIT 5000	
1030 OUTPUT 724; "V190X"	Calibrates 200V range.
1040 WAIT 2000	
1050 OUTPUT 717; "S"	Sets 5101B to standby.
1060 OUTPUT 724; "R5X"	Sets 175-AV to 750V range.
1070 OUTPUT 717; "750V400H,N"	Outputs 750V at 400Hz to 175-AV.
1080 WAIT 5000	
1090 OUTPUT 724; "V750X"	Calibrates 750V range.
1100 WAIT 2000	
1110 OUTPUT 717; "S"	Sets 5101B to standby.
1120 CLEAR	
1130 BEEP 50, 1000	
1140 DISP " "	
1150 DISP "AC VOLTS CALIBRATION IS COMPLETE"	
1160 WAIT 2000	
1170 DISP " "	
1180 DISP "SELECT OHMS and REMEMBER TO RELEASE THE AC BUTTON"	OHMS CALIBRATION
1190 WAIT 2000	
1200 DISP " "	
1210 DISP "PRESS CONT TO RESUME PROGRAM"	
1220 PAUSE	
1230 CLEAR	
1240 OUTPUT 724; "R1X"	Sets 175-AV to 200Ω range.
1250 FOR H=0 TO 1	Sets program for one loop.
1260 GOTO 1270	
1270 OUTPUT 717; "1Z,N"	Outputs 1Ω to 175-AV.
1280 WAIT 5000	
1290 ENTER 724; D	Enter displayed reading (D).
1300 A=D-1	A = Test lead resistance and cal error.
1310 OUTPUT 717; "100Z,N"	Output 100Ω to 175-AV.
1320 WAIT 5000	
1330 B=100	B = 100Ω from 5101B.
1340 F=B+A	F = Cal point plus lead resistance and cal error.
1350 C\$="V"&VAL\$(F)&"X"	C\$ = Command that calibrates 175-AV using F.
1360 OUTPUT 724; C\$	Calibrate 200Ω range.

PROGRAM	COMMENTS
1370 WAIT 2000	
1380 NEXT H	Loops to line 1250 once.
1390 OUTPUT 724; "R2X"	Sets 175-AV to 2k $\Omega$ range.
1400 FOR H=0 TO 1	Sets program for one loop.
1410 GOTO 1420	
1420 OUTPUT 717; "1Z,N"	Outputs 1 $\Omega$ to 175-AV.
1430 WAIT 5000	
1440 ENTER 724; D	Enter displayed reading (B).
1450 A=D-1	A = Test lead resistance and cal error.
1460 OUTPUT 717; "1E3Z,N"	Output 1k $\Omega$ to 175-AV.
1470 WAIT 5000	
1480 B=1000	B = 1000 $\Omega$ from 5101B.
1490 F=B+A	F = Cal points plus lead resistance and cal error.
1500 C\$="V"&VAL\$(F)&"X"	C\$ = Command that calibrates 175-AV using F.
1510 OUTPUT 724; C\$	Calibrates 2k $\Omega$ range.
1520 WAIT 2000	
1530 NEXT H	Loops to line 1400 once.
1540 OUTPUT 724; "R3X"	Sets 175-AV to 20k $\Omega$ range.
1550 OUTPUT 717; "10E3Z,N"	Outputs 10k $\Omega$ to 175-AV.
1560 WAIT 5000	
1570 OUTPUT 724; "V10E3X"	Calibrates 20k $\Omega$ range.
1580 WAIT 2000	
1590 OUTPUT 724; "R4X"	Sets 175-AV to 200k $\Omega$ range.
1600 OUTPUT 717; "100E3Z, N"	Outputs 100k $\Omega$ to 175-AV.
1610 WAIT 5000	
1620 OUTPUT 724; "V100E3X"	Calibrates 200k $\Omega$ range.
1630 WAIT 2000	
1640 OUTPUT 724; "R5X"	Sets 175-AV to M $\Omega$ ranges.
1650 OUTPUT 717; "1E6Z,N"	Outputs 1M $\Omega$ to 175-AV.
1660 WAIT 5000	
1670 OUTPUT 724; "V1E6X"	Calibrates 2M $\Omega$ range.
1680 WAIT 2000	
1690 OUTPUT 717; "10E6Z,N"	Outputs 10M $\Omega$ to 175-AV.
1700 WAIT 5000	
1710 OUTPUT 724; "V10E6X"	Calibrates 20M $\Omega$ range.
1720 WAIT 2000	
1730 BEEP 50, 1000	
1740 DISP "CAL POINTS ARE NOW ENTERED"	
1750 WAIT 1000	
1760 DISP " "	
1770 DISP "DO YOU WISH TO STORE CAL POINTS IN NVRAM?"	
1780 WAIT 1000	
1790 DISP " "	
1800 DISP "IF YES, PRESS Y and END LINE"	
1810 DISP "IF NO, PRESS N and END LINE"	
1820 INPUT A\$	
1830 IF A\$="Y" THEN 1850	
1840 IF A\$="N" THEN 1910	
1850 OUTPUT 724; "LOX"	Stores calibration points in NVRAM.
1860 WAIT 2000	

SECTION 5  
Maintenance

---

PROGRAM	COMMENTS
1870 FOR I=1 TO 25	
1880 BEEP I*RND+1, 50	
1890 NEXT I	
1900 BEEP 40, 3000	
1910 "DISP "*****"	
1920 DISP "THE MODEL 175-AV CALIBRATION IS NOW COMPLETE."	
1930 "DISP "*****"	
1940 END	

# SECTION 6

## Replaceable Parts

---

### 6.1 INTRODUCTION

This section contains replacement parts information, component location drawings, and schematic diagrams for the Model 175-AV.

### 6.2 PARTS LIST

Parts for the assemblies are listed on the following exploded views:

- Figure 6-1. Model 175-AV/1758
- Figure 6-2. Model 175-AV Final Assembly
- Figure 6-3. Front Panel Assembly
- Figure 6-4. Connector Assembly

Parts for the Mother Board and Display Board are listed alphanumerically in order of their circuit designations. Schematic diagrams and component location drawings follow the appropriate replaceable parts list for the particular board:

- Table 6-1. Mother Board Parts List
- Figure 6-5. Mother Board Component Layout (2 sheets)
- Figure 6-6. Mother Board Schematic (2 sheets)
- Table 6-2. Display Board Parts List
- Figure 6-7. Display Board Subassembly
- Figure 6-8. Display Board Schematic

Drawings for the Battery Option contain parts lists; the PC board parts are also listed in a table, as follows:

- Figure 6-9. Model 1758 Battery Option
- Table 6-3. Battery Option Board Parts List
- Figure 6-10. Battery Option Component Layout
- Figure 6-11. Battery Option Schematic
- Figure 6-12. Battery Assembly

Table 6-4 lists a complement of spare parts that can be ordered to maintain up to ten Model 175-AV units for approximately one year.

### 6.3 ORDERING INFORMATION

To place an order, or to obtain information concerning replacement parts, contact your Keithley representative or the factory. See inside front cover for addresses. When ordering, include the following information:

- Instrument model number
- Instrument serial number
- Parts description
- Circuit designation (if applicable)
- Keithley part number

If an additional instruction manual is required, order the manual package (Keithley part number 175-AV-901-00). The manual package contains an instruction manual and any applicable addenda.


### 6.4 FACTORY SERVICE

If the instrument is to be returned to the factory for service, please complete the service form, which follows this section, and return it with the instrument.



8521/AV-921  
ON

LTR.	ECO NO.	REVISION	ENG.	DATE
A	14383	RELEASED	QJG	12-20-90
A1	14619	ADDED NOTE.	QJG	5-22-91

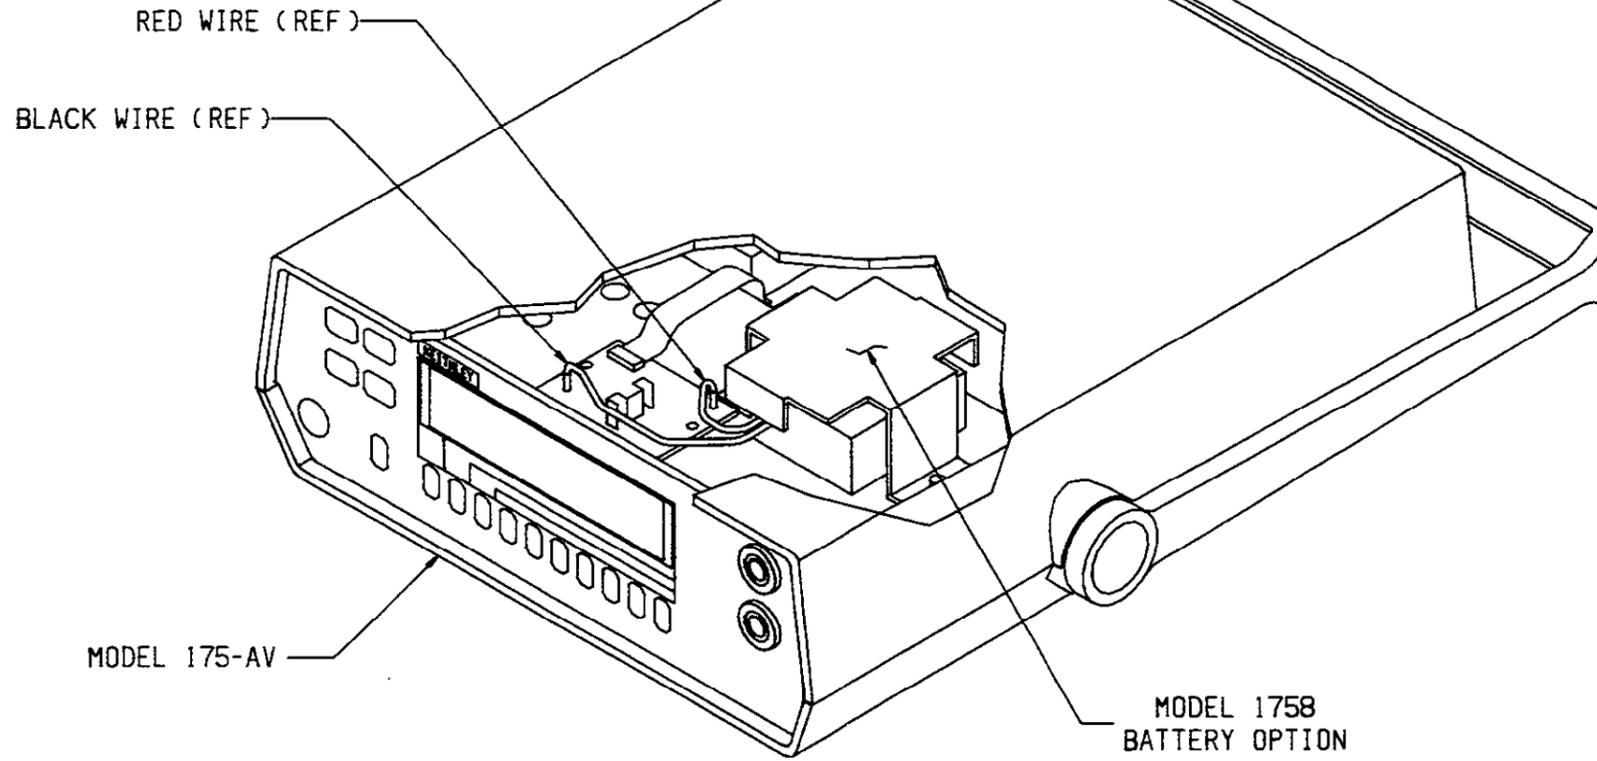

PART NO.	QTY	DESCRIPTION
175-AV	1	MODEL 175-AV. FINAL ASS'Y
1758	1	MODEL 1758. BATTERY OPTION

NOTE: "/1758" SPECIFIES THAT MODEL 1758 RECHARGEABLE BATTERY PACK OPTION IS INTERNALLY INSTALLED.

MODEL	NEXT ASSEMBLY	QTY.


USED ON

DO NOT SCALE THIS DRAWING	DIMENSIONAL TOLERANCES UNLESS OTHERWISE SPECIFIED	DATE 12/20/90	SCALE 2X	TITLE MODEL 175-AV/1758
Keithley Instruments Inc. Cleveland, Ohio 44139	XX = ± .015    ANG. = ± 1°	DRN. AJS	ENG. APPR. DCL	SIZE NO. <b>B</b> 175-AV/1758
	XXX = ± .005    FRAC. = ± 1/64	MATERIAL 2X		
	SURFACE MAX. 63	FINISH 2X		

44-131 58425  
BRUNING

Figure 6-1. Model 175-AV/1758



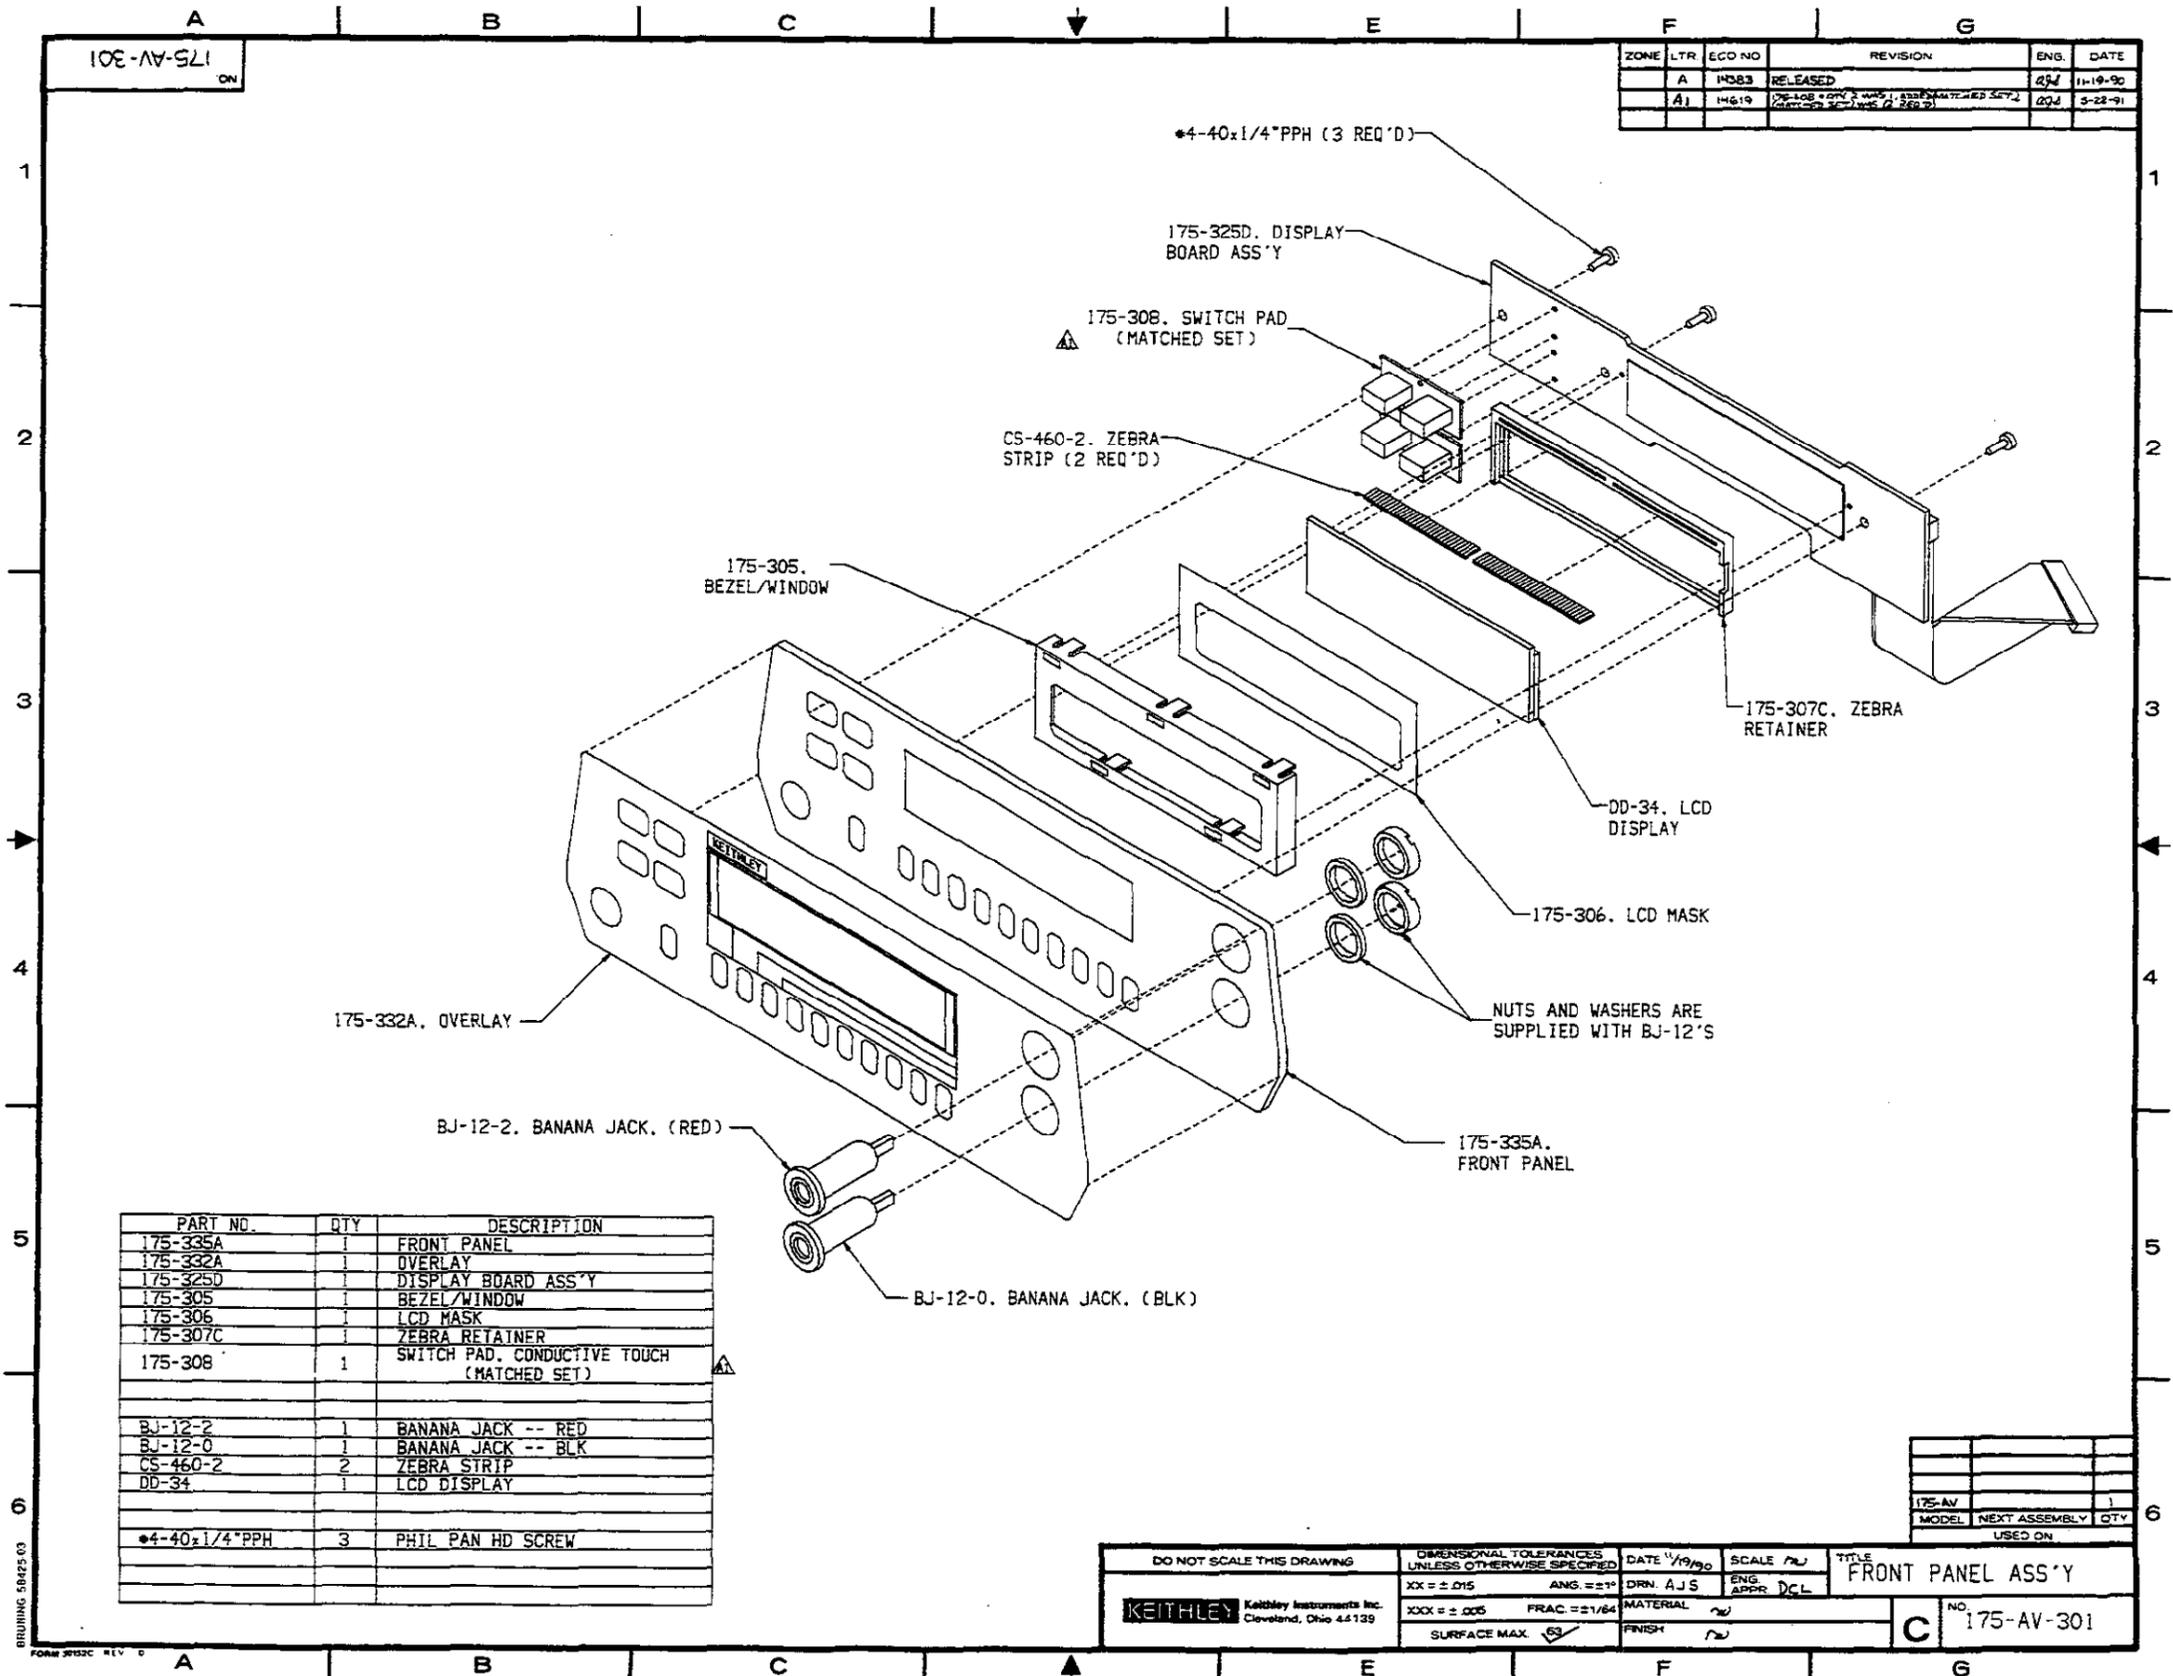

ZONE	LTR	ECO NO	REVISION	ENG.	DATE
A		14683	RELEASED	BJL	11-19-90
A1		14619	REPLACES ECO 14683 AND 14684. ASSEMBLY SET. 2. (ZEBRA STRIP (2 REQ'D))	BJL	5-22-91

PART NO.	QTY	DESCRIPTION
175-335A	1	FRONT PANEL
175-332A	1	OVERLAY
175-325D	1	DISPLAY BOARD ASS'Y
175-305	1	BEZEL/WINDOW
175-306	1	LCD MASK
175-307C	1	ZEBRA RETAINER
175-308	1	SWITCH PAD, CONDUCTIVE TOUCH (MATCHED SET) $\Delta$
BJ-12-2	1	BANANA JACK -- RED
BJ-12-0	1	BANANA JACK -- BLK
CS-460-2	2	ZEBRA STRIP
DD-34	1	LCD DISPLAY
$\bullet$ 4-40x1/4"PPH	3	PHIL PAN HD SCREW

DO NOT SCALE THIS DRAWING	DIMENSIONAL TOLERANCES UNLESS OTHERWISE SPECIFIED	DATE 11/19/90	SCALE $\frac{1}{2}$ "	TITLE FRONT PANEL ASS'Y
XX = $\pm$ .015	ANG. = $\pm$ 1°	DRN. AJS	ENG. APPR. DCL	
XXX = $\pm$ .005	FRAC = 21/64	MATERIAL		
SURFACE MAX. $\phi$		FINISH		
Keithley Instruments Inc. Cleveland, Ohio 44139				MODEL NEXT ASSEMBLY QTY 175-AV 1 USED ON
				NO 175-AV-301

Figure 6-3. Front Panel Assembly

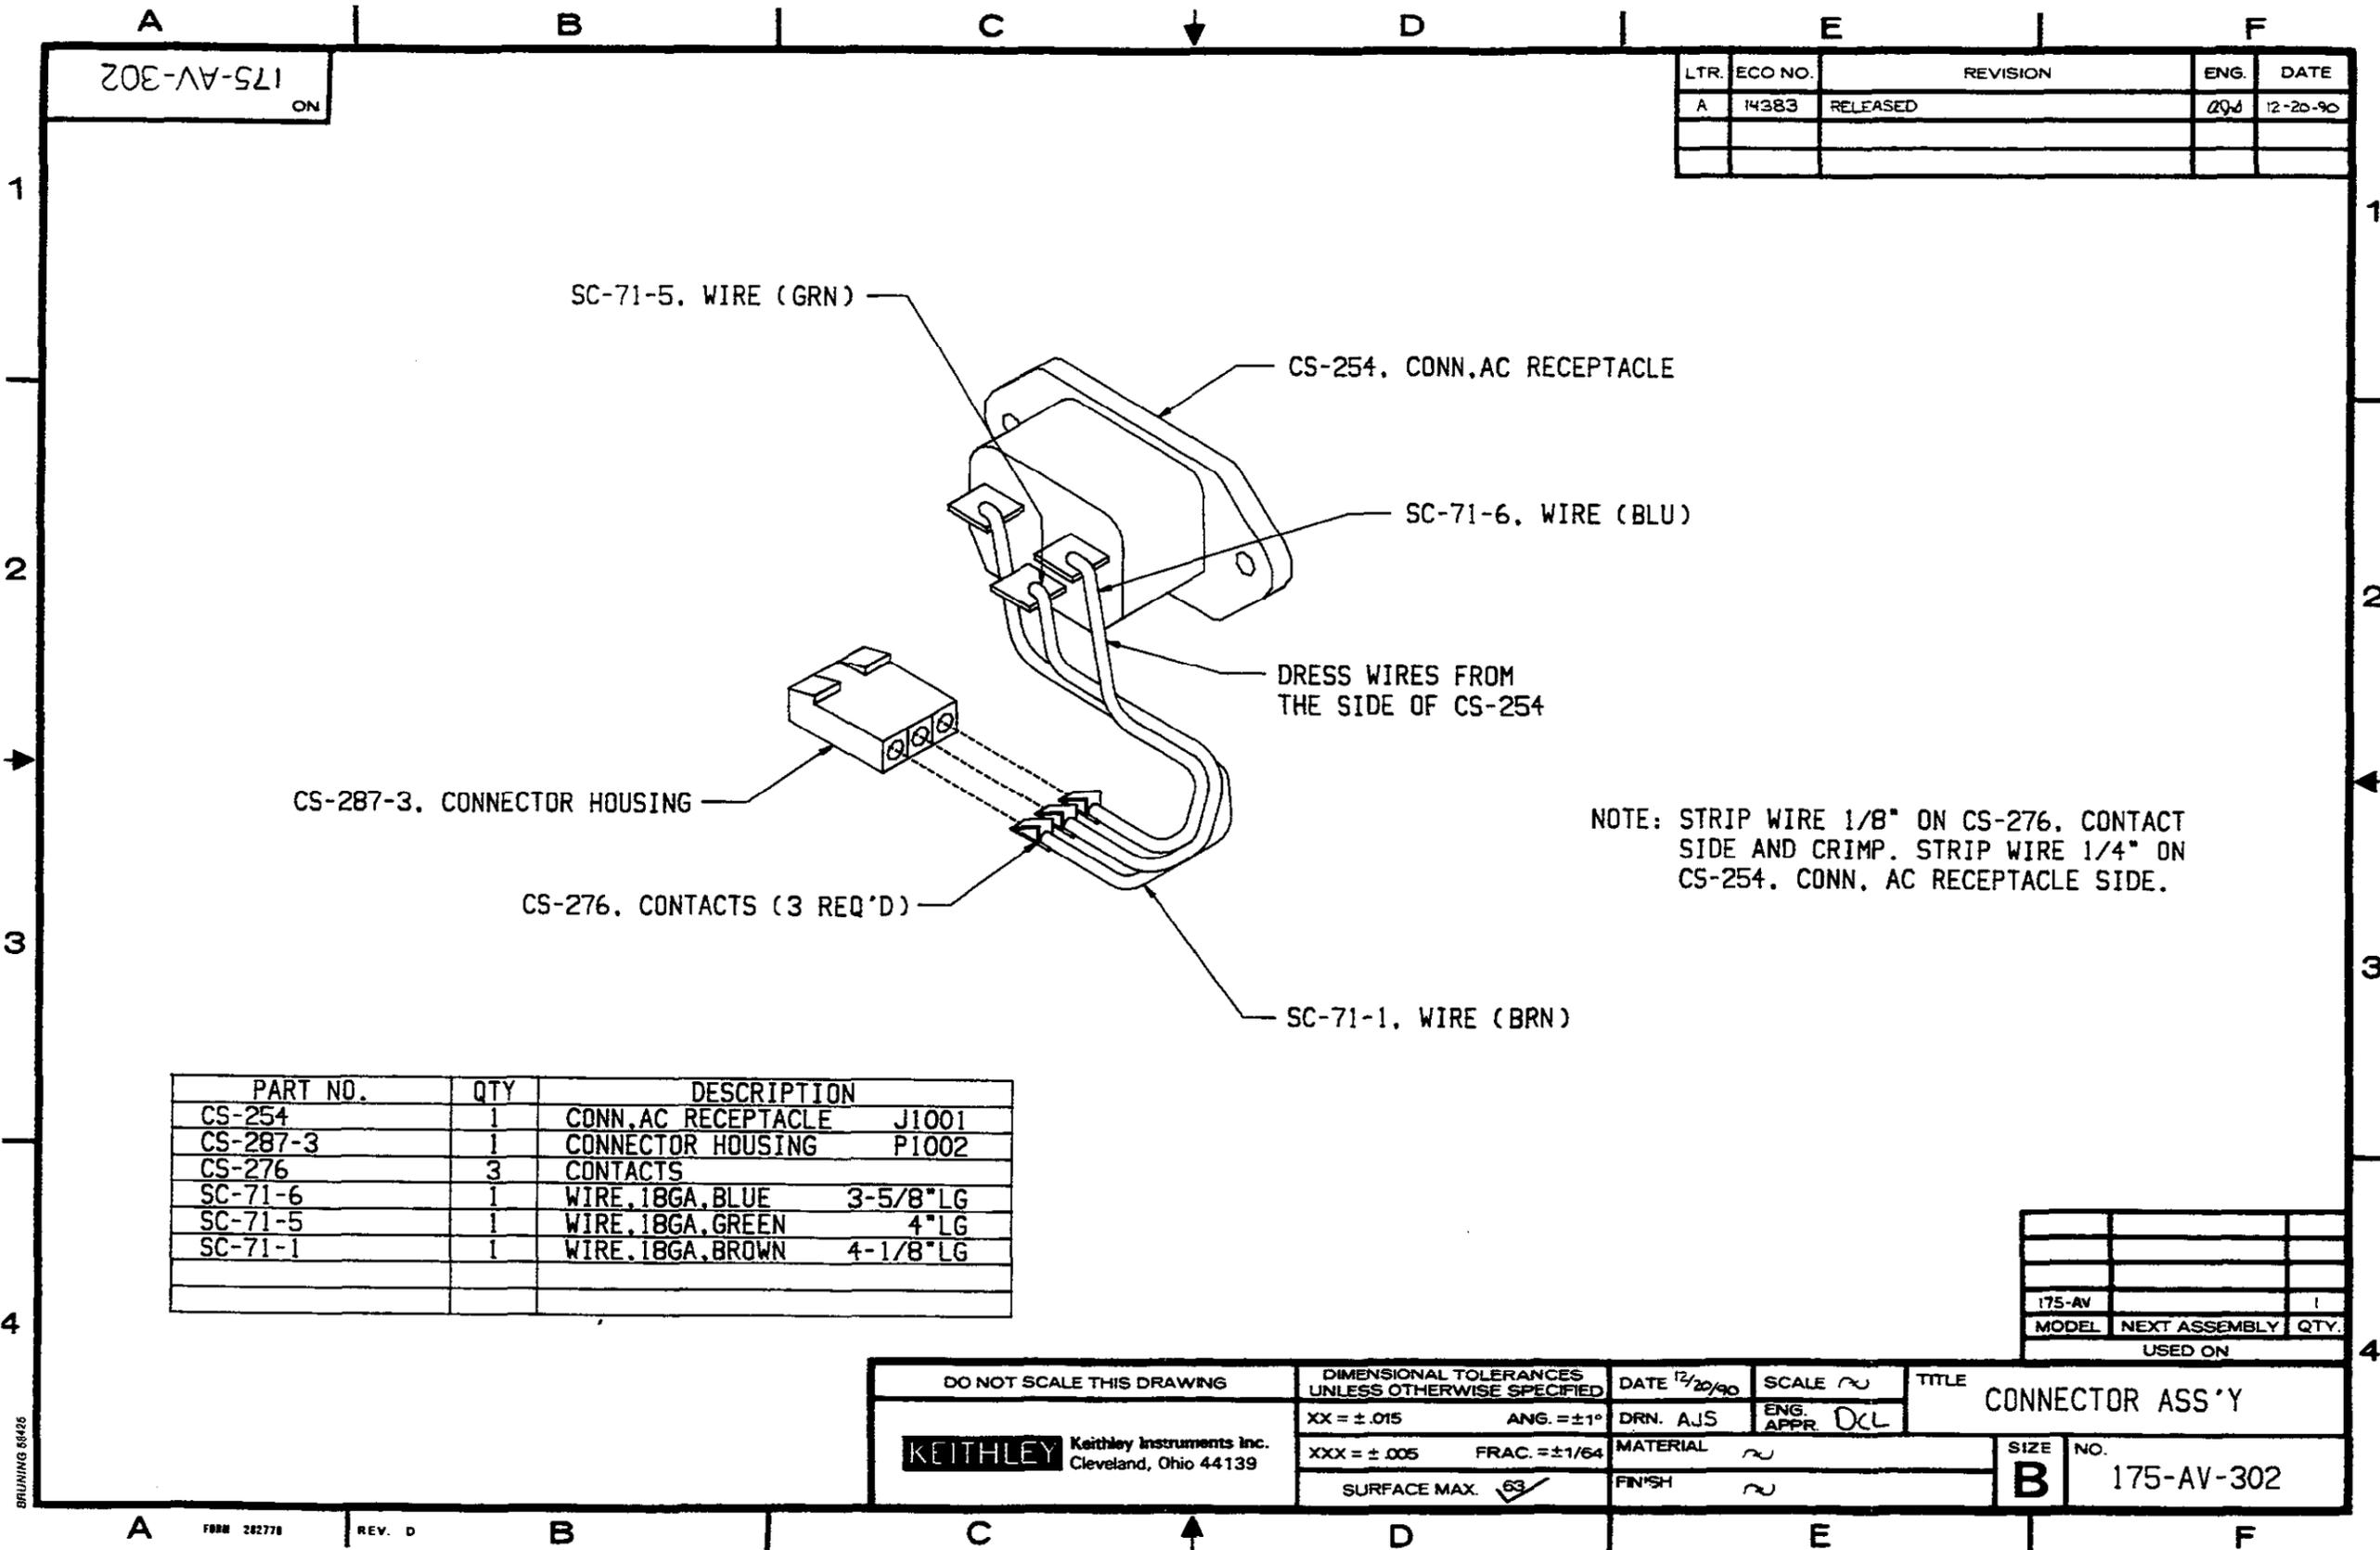


Figure 6-4. Connector Assembly

**Table 6-1. Mother Board, Parts List**

Circuit Design.	Description	Keithley Part No.	Location	
			Sch*	PCB
C101	Capacitor, 1.5pF	C-184	B2-1	C2
C102	Capacitor, 6.2pF, 1000V, Ceramic Disk	C-349-6.2p	B2-1	C2
C103	Capacitor, 10pF, 100V, 5%, Ceramic	C-372-10p	B2-1	C2
C104	Capacitor, Trimmer, 3-10pF, 500V	C-346	B2-1	C2
C105	Capacitor, 8200pF, 50V, 1%, Ceramic	C-347-8200p	C2-1	D2
C106	Capacitor, .02μF, 500V, 2%, Ceramic Disk	C-316-.02	B1-1	C2
C107	Capacitor, Trimmer, 7-70pF, 500V, Ceramic Disk	C-484	C2-1	D2
C108	Capacitor, 710pF, 50V, 2%, Ceramic	C-348-710p	B2-1	D2
C109	Capacitor, .01μF, 630V, 10%, Metalized Polypropylene	C-360-.01	D2-1	C2
C110	Capacitor, .01μF, 100VDC, 10%, Metal Polypropylene	C-306-.01	E3-1	D3
C111	Capacitor, 1μF, 50VDC, 20%, Metalized Polyester	C-350-1	G1-1	C3
C112	Capacitor, 15μF, 20V, 10%, Tantalum	C-204-15	E1-1	C4
C113	Capacitor, 1μF, 50V, Ceramic Film	C-237-1	F1-1	C4
C114	Capacitor, .1μF, 50V, Ceramic Film	C-237-.1	E1-1	C4
C115	Capacitor, 22pF, 630V, 2.5%, Polypropylene	C-405-22p	F1-1	C4
C116	Capacitor, 10μF, 25V, Aluminum Electrolytic	C-314-10	G2-1	C5
C117	Capacitor, .01μF, 100VDC, 10%, Metal Polypropylene	C-306-.01	C1-2	C5
C118	Capacitor, 1500μF, 25V, Aluminum Electrolytic	C-314-1500	F1-2	E2
C119	Capacitor, 4.7μF, 25V, Aluminum Electrolytic	C-314-4.7	G1-2	E2
C120	Capacitor, 4.7μF, 25V, Aluminum Electrolytic	C-314-4.7	G1-2	E2
C121	Capacitor, 220μF, 25V, Aluminum Electrolytic	C-314-220	G2-2	E3
C122	Capacitor, 4.7μF, 25V, Aluminum Electrolytic	C-314-4.7	G1-2	E3
C123	Capacitor, 1μF, 50V, Ceramic Film	C-237-1	H3-2	D4
C124	Capacitor, .1μF, 50V, Ceramic Film	C-237-.1	F3-2	F4
C125	Capacitor, 22pF, 1000V, 10%, Ceramic Disk	C-64-22p	E6-2	F5
C126	Capacitor, 22pF, 1000V, 10%, Ceramic Disk	C-64-22p	E6-2	F5
C127	Capacitor, .1μF, 50V, Ceramic Film	C-237-.1	B5-2	E5
C128	Capacitor, .1μF, 50V, Ceramic Film	C-237-.1	D6-2	E5
C129	Capacitor, .1μF, 50V, Ceramic Film	C-237-.1	F4-2	F4
C130	Capacitor, .1μF, 50V, Ceramic Film	C-237-.1	E6-2	F4
C131	Capacitor, .1μF, 50V, Ceramic Film	C-237-.1	D6-2	F4
C132	Capacitor, 1μF, 50VDC, 20%, Metalized Polyester	C-350-1	G1-1	B3
C133	Capacitor, 1pF, 1000V, Ceramic Disc	C-367-1.0p	E1-1	C4
CR101	Not Used	-	-	-
CR102	Rectifier, REC40100	RF-36	A3-1	B5
CR103	Rectifier, Silicon, 1N5400	RF-34	A4-1	C5
CR104	Bridge Rectifier, VM18	RF-52	F1-2	D3
F101	Fuse, 2A, Fast Blow (Current)	FU-48	A2-1	B1
F102	Fuse, 1/8A, Slow Blow (Line)	FU-91	E1-2	F2
J1001	Connector, AC Receptacle	CS-254	E2-2	-
J1006	Socket, 14 pin, for display	SO-70	G4-2	F5
J1009	Connector, Battery Option	CS-389-4	G2-2	D3
-	Socket, 40 pin, for U114	SO-84-40	-	E4
-	Socket, 40 pin, for U123	SO-84-40	-	F5
-	Socket, 28 pin, for U115	SO-69	-	E5
K101	Relay, High Voltage, 5V	RL-82	C1,5-1	C3
K102	Relay, Reed	RL-59	C2,5-1	C3
K103	Relay, Reed	RL-59	C2,5-1	D2

\*Zone and page number (e.g., B2-1) corresponds to zone B2 of schematic page 1.

Table 6-1. Mother Board, Parts List (Cont.)

Circuit Design.	Description	Keithley Part No.	Location	
			Sch*	PCB
P1002	Connector, Male, Modified	175-316	E1-2	E2
P1008	Connector, IEEE, Modified	175-321	A4-2	F1
Q101	Transistor, NPN, 2N3904	TG-47	D2-1	B2
Q102	Transistor, NPN, 2N5089	TG-62	C3-1	C2
Q103	Transistor, NPN, 5818	TG-138	D3-1	D2
Q104	Transistor, Selection, TG-62	175-601	D3-1	D2
Q105	Transistor, Selection, TG-62	175-601	D3-1	D2
Q106	JFET, P-Channel, J270	TG-166	B2-1	D2
Q107	Transistor, Selection, TG-62	175-601	D1-1	C3
Q108	Transistor, Selection, TG-62	175-601	D1-1	C3
Q109	Transistor, NPN, 2N3904	TG-47	G3-1	D4
Q110	JFET, N-Channel, J210	TG-167	F3-1	D3
Q111	JFET, N-Channel, J210	TG-167	F3-1	D4
Q112	JFET, N-Channel, J210	TG-167	F4-1	D4
Q113	JFET, N-Channel, J210	TG-167	F4-1	D4
Q114	FET, N-Channel	TG-128	B1-2	C5
Q115	Transistor, NPN, 2N5089	TG-62	E1-1	C4
Q116	JFET, N-Channel, J210	TG-167	C2-1	C3
Q117	JFET, N-Channel, J210	TG-167	C2-1	C3
R101	Resistor, 1k $\Omega$ , 1%, 1/8W, Metal Film	R-177-1k	D2-1	B2
R102	Resistor, 99k $\Omega$ , 1%, 1/8W, Metal Film	R-177-99k	D3-1	B2
R103	Resistor, 220k $\Omega$ , 10%, 1W, Composition	R-2-220k	B1-1	C2
R104	Resistor, 402k $\Omega$ , 1%, 1/2W, Deposited Carbon	R-12-402k	D3-1	D2
R105	Resistor, 1M $\Omega$ , 5%, 1/4W, Composition	R-76-1M	E4-1	D2
R106	Thick Film Resistor Network	TF-170	Sev	C2
R107	Resistor, 390k $\Omega$ , 5%, 1/4W, Composition	R-76-390k	E3-1	D3
R108	Resistor, 43k $\Omega$ , 5%, 2W, Composition	R-320-43k	D1-1	C3
R109	Thick Film Resistor Network	TF-168-1	B3-1	C4
R110	Resistor, Divider, 0.0999 $\Omega$ , and 0.999 $\Omega$ , 0.1%, 1W and 2W	R-318	B4-1	C4
R111	Resistor, 10k $\Omega$ , 5%, 1/4W, Composition	R-76-10k	D1-1	C4
R112	Resistor, 2.5k $\Omega$ , 0.1%, 1/8W	R-176-2.5k	E1-1	C4
R113	Resistor, 1.6k $\Omega$ , 0.1%, 1/8W	R-176-1.6k	E1-1	C4
R114	Resistor, 200k $\Omega$ , 5%, 1/4W, Composition	R-76-200k	F3-1	D4
R115	Resistor, 100k $\Omega$ , 0.1%, 1/8W	R-176-100k	F1-1	C4
R116	Resistor, 76.8k $\Omega$ , 0.1%, 1/8W	R-176-76.8k	F1-1	C4
R117	Thick Film Resistor Network	TF-169	Sev	C4
R118	Resistor, 3.3k $\Omega$ , 5%, 1/4W, Composition	R-76-3.3k $\Omega$	F4-1	D4
R119	Not Used	-	-	-
R120	Thick Film Resistor Network	TF-171	Sev	C5
R121	Thick Film Resistor Network	TF-172	Sev-2	C5
R122	Not Used	-	-	-
R123	Resistor, 22 $\Omega$ , 10%, 2W, Composition	R-3-22	F1-2	E3
R124	Resistor, 8.06k $\Omega$ , 1%, 1/8W, Composition	R-88-8.06k	G1-2	E3
R125	Resistor, 1.24k $\Omega$ , 1%, 1/8W, Composition	R-88-1.24k	G2-2	E3
R126	Thick Film Resistor Network	TF-173	Sev	F4
R127	Thick Film, 10M $\Omega$ , 1/4W, Composition	R-76-10M	F6-2	F5
R128	Thick Film, 2.2k $\Omega$ , 5%, 1/4W, Composition	R-76-2.2k	C2-1	D3
R129	Resistor, 200k $\Omega$ , 5%, 1/4W, Composition	R-76-200k	F3-1	D3
R130	Resistor, 200k $\Omega$ , 5%, 1/4W, Composition	R-76-200k	F4-1	D4
R131	Not Used	-	-	-

\*Zone and page number (e.g., B2-1) corresponds to zone B2 of schematic page 1.


Table 6-1. Mother Board, Parts List (Cont.)

Circuit Design.	Description	Keithley Part No.	Location	
			Sch*	PCB
R132	Resistor, 1k $\Omega$ , 5%, 1/4W, Composition	R-76-1k	G6-2	E5
R133	Resistor, 1k $\Omega$ , 5%, 1/4W, Composition	R-76-1k	H5-2	E5
R134	Resistor, 22k $\Omega$ , 5%, 1/4W, Composition	R-76-22k	B4-2	F4
R135	Resistor, 47k $\Omega$ , 5%, 1/4W, Composition	R-76-47k	H5-2	D3
R136	Resistor, 2k $\Omega$ , 5%, 1/4W, Composition	R-76-2k	E5-2	F4
R137	Not Used	-	-	-
R138	Not Used	-	-	-
R139	Resistor, 100M $\Omega$ , 0.5%, 1/4W, Metal Oxide	R-269-100M	E1-1	C4
RT101	Thermistor, 4150 $\Omega$ , 10%, 17.5mA	RT-9-1	D3-1	C2
S101	Switches, Pushbuttons, Modified	175-AV-303	Sev	B2-B4
S102	Line Switch	SW-318	E1-2	F3
S103	Calibration Switch	SW-465	H4-2	F3
Staking	Staked PCB	175-AV-101	-	D1
T101	Transformer, Power (105-125V, 210-250V)	TR-201	F1-2	D2
U101	JFET Op Amp, LF411CN	IC-248	E1-1	C4
U102	RMS to DC Converter, 637JD	IC-352	F1-1	C4
U103	Programmable Op Amp, TLC271	IC-347	F2-1	C5
U104	Op Amp, TL061CP	IC-227	C1-2	C5
U105	IC, Selection, IC-347	175-600	G3-1	D4
U106	Triple 2-Channel Analog Multiplexer, CD4053BC	IC-283	Sev	D4
U107	Triple 2-Channel Analog Multiplexer, CD4053BC	IC-283	Sev	D5
U108	Dual Voltage Comparator, LM393	IC-343	C2-2	D5
U109	Triple 2-Channel Analog Multiplexer, CD4053BC	IC-283	Sev	D3
U110	16 x 16 Bit Serial Nonvolatile Static RAM, X2443P	IC-353	H4-2	D4
U111	Hex Inverter, 74HC04	IC-354	D5-1	D4
U112	Quad 2-Input NAND Gate, 74HC00	IC-351	C4-1	D4
U113	1024 x 4 Bit Static CMOS RAM	LSI-62	A5-2	D5
U114	Peripheral Interface Adapter, 65C21	LSI-61	B3-2	E4
U115	8K x 8 Bit UV Erasable PROM	175-AV-800-**	B5-2	E5
U116	Regulator, +5V, 1A, 7805	IC-93	G1-2	E3
U117	3-Terminal Adjustable Regulator, LM337L	IC-345	G2-2	E3
U118	Triple 3-Input OR Gate, CD4075BE	IC-143	Sev	E3
U119	Triple 3-Input NAND Gate, MM74HC10	IC-341	Sev	E4
U120	Tri-State Octal D Latch, 74HC373	IC-338	D5-2	E5
U121	Dual D Flip-Flop, 74HC74	IC-337	E2-2	F3
U122	12 Stage Binary Counter, 4040B	IC-348	D3-2	F4
U123	CMOS 8-Bit Microprocessor, 146805E2	LSI-60	F3-2	F5
U124	Supply Voltage Supervisor, TL7705AC	IC-602	E5-2	F4
VR101	Diode, Zener, 6.35V, 400mW, 1N4577	DZ-58	F2-1	C5
VR102	Diode, Zener, 12V, 5W, 1N5349	DZ-72-1	G1-2	E3
VR103	Diode, Zener, 5.1V, 400mW, 1N751	DZ-59	G2-1	C5
VR104	Diode, Zener, 12V, 1N963B	DZ-54	H1-2	D3
Y101	Crystal, 3.2768MHz	CR-21	E6-2	F5


\* Zone and page number (e.g., B2-1) corresponds to zone B2 of schematic page 1.

\*\* Order same software as presently installed. For example, if A1 is the displayed software order 175-AV-800-A1.

ZONE	DATE	REVISION
A	11-18-67	INITIAL RELEASE
B	11-18-67	REVISION
C	11-18-67	REVISION
D	11-18-67	REVISION
E	11-18-67	REVISION
F	11-18-67	REVISION
G	11-18-67	REVISION
H	11-18-67	REVISION

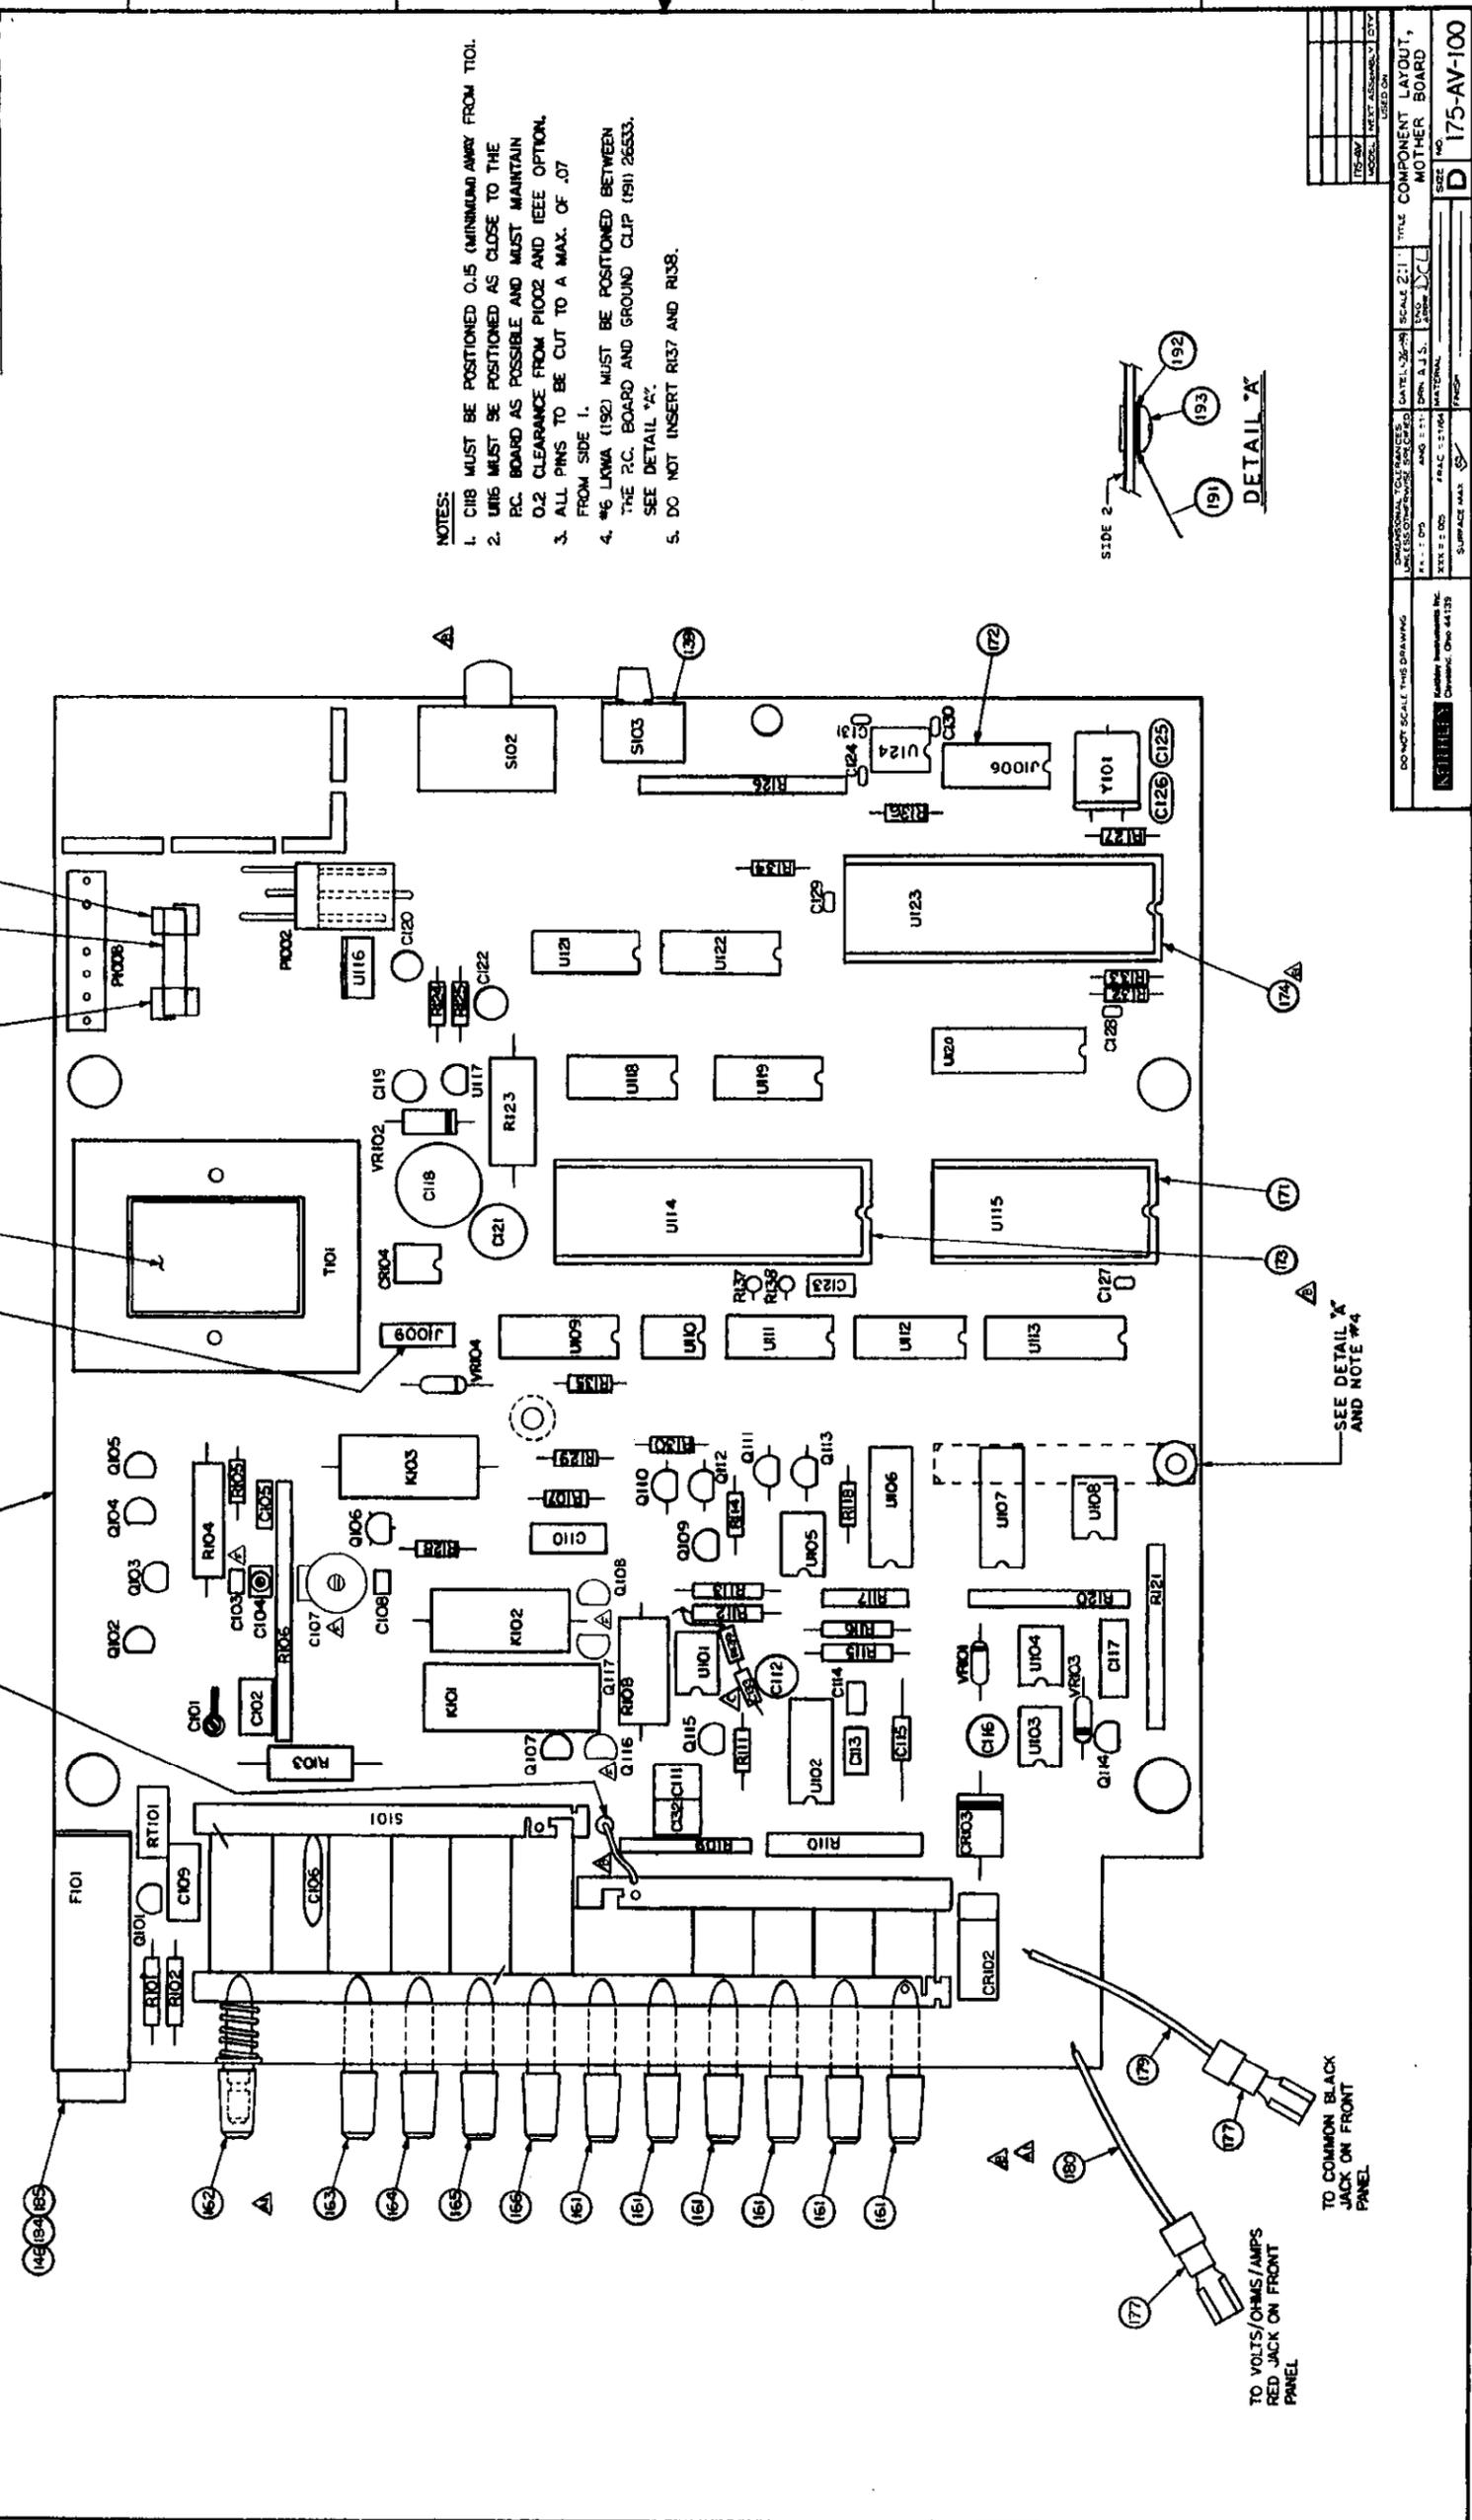

- NOTES:**
1. C118 MUST BE POSITIONED 0.15 (MINIMUM) AWAY FROM T101.
  2. U116 MUST BE POSITIONED AS CLOSE TO THE P.C. BOARD AS POSSIBLE AND MUST MAINTAIN 0.2 CLEARANCE FROM P1002 AND IEEE OPTIONAL. ALL PINS TO BE CUT TO A MAX. OF .07 FROM SIDE 1.
  3. #6 LKWA (192) MUST BE POSITIONED BETWEEN THE P.C. BOARD AND GROUND CLIP (191) 26533. SEE DETAIL "A".
  4. DO NOT INSERT R137 AND R138.

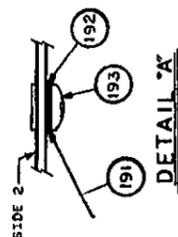

ZONE	DATE	REVISION
A	11-18-67	INITIAL RELEASE
B	11-18-67	REVISION
C	11-18-67	REVISION
D	11-18-67	REVISION
E	11-18-67	REVISION
F	11-18-67	REVISION
G	11-18-67	REVISION
H	11-18-67	REVISION

DO NOT SCALE THIS DRAWING UNLESS OTHERWISE SPECIFIED

SCALE: 2:1

TITLE: COMPONENT LAYOUT, MOTHER BOARD

PROJECT: 175-AV-100

DATE: 11-18-67

DESIGNER: [Name]

CHECKED: [Name]

APPROVED: [Name]

DATE: 11-18-67

SCALE: 2:1

SIZE: 11" x 17"

FORM 285110 REV. A

Figure 6-5. Mother Board Component Layout (sheet 1 of 2)

175-AV-100

ZONE	LTR	ECO NO	REVISION	DATE
A	091026		RELEASED	09-25-71
A1	1374		ADD 175-AV-100 TO PART 175-AV-100	11-8-71
B	1380B		ADD 175-AV-100 TO PART 175-AV-100	12-1-71
C	13817		ADDED C-135-R139	1-27-72
D	14083		REVISIONS TO PART 175-AV-100	1-27-72
E	14539		REV'S C135 FROM C135-1 TO C135-10	2-17-72
E1	14619		ITEM 175-4000 K116, ITEM 175-4000 K117, ITEM 175-4000 K118, ITEM 175-4000 K119, ITEM 175-4000 K120, ITEM 175-4000 K121, ITEM 175-4000 K122, ITEM 175-4000 K123, ITEM 175-4000 K124, ITEM 175-4000 K125, ITEM 175-4000 K126, ITEM 175-4000 K127, ITEM 175-4000 K128, ITEM 175-4000 K129, ITEM 175-4000 K130, ITEM 175-4000 K131, ITEM 175-4000 K132, ITEM 175-4000 K133, ITEM 175-4000 K134, ITEM 175-4000 K135, ITEM 175-4000 K136, ITEM 175-4000 K137, ITEM 175-4000 K138, ITEM 175-4000 K139, ITEM 175-4000 K140, ITEM 175-4000 K141, ITEM 175-4000 K142, ITEM 175-4000 K143, ITEM 175-4000 K144, ITEM 175-4000 K145, ITEM 175-4000 K146, ITEM 175-4000 K147, ITEM 175-4000 K148, ITEM 175-4000 K149, ITEM 175-4000 K150, ITEM 175-4000 K151, ITEM 175-4000 K152, ITEM 175-4000 K153, ITEM 175-4000 K154, ITEM 175-4000 K155, ITEM 175-4000 K156, ITEM 175-4000 K157, ITEM 175-4000 K158, ITEM 175-4000 K159, ITEM 175-4000 K160	3-22-72
F	15148		ADD 175-AV-100 TO PART 175-AV-100	7-14-72

ITEM	PART NO.	SCHEM. DESIG.	ZONE
1	175-AV-101	STAKING	D1
2			
3			
4			
5	C-184	C101	C2
6	C-349-6.2p	C102	C2
7	C-372-10p	C103	C2
8	C-346	C104	C2
9	C-347-8200p	C105	D2
10	C-316-D2	C106	C2
11	C-484	C107	D2
12	C-348-710p	C108	D2
13	C-360-01	C109	C2
14	C-306-01	C110	D3
15	C-350-1	C111	C3
16	C-204-15	C112	C4
17	C-237-1	C113	C4
18	C-237-1	C114	C4
19	C-405-22p	C115	C4
20	C-314-10	C116	C5
21	C-306-01	C117	C5
22	C-314-500	C118	E2
23	C-314-4.7	C119	E2
24	"	C120	E2
25	C-314-220	C121	E3
26	C-314-4.7	C122	E3
27	C-237-1	C123	D4
28	C-237-1	C124	F4
29	C-64-22p	C125	F5
30	"	C126	F5
31	C-237-1	C127	E5
32	"	C128	E5
33	"	C129	F4
34	"	C130	F4
35	"	C131	F4
36	C-350-1	C132	B3
37	R-177-1K	R101	B2
38	R-177-99K	R102	B2
39	R-2-220K	R103	C2
40	R-12-402K	R104	D2

ITEM	PART NO.	SCHEM. DESIG.	ZONE
41	R-76-1M	R105	D2
42	TF-170	R106	C2
43	R-76-390K	R107	D3
44	R-320-43K	R108	C3
45	TF-168-1	R109	C4
46	R-318	R110	C4
47	R-76-10K	R111	C4
48	R-176-2.5K	R112	C4
49	R-176-1.6K	R113	C4
50	R-76-200K	R114	D4
51	R-176-100K	R115	C4
52	R-176-76.8K	R116	C4
53	TF-169	R117	C4
54	R-76-3.3K	R118	D4
55			
56	TF-171	R120	C5
57	TF-172	R121	C5
58			
59	R-3-22	R123	E3
60	R-88-8.06K	R124	E3
61	R-88-1.24K	R125	E3
62	TF-173	R126	F4
63	R-76-10M	R127	F5
64	R-76-2.2K	R128	D3
65	R-76-200K	R129	D3
66	"	R130	D4
67			
68	R-76-1K	R132	E5
69	R-76-1K	R133	E5
70	RT-9-1	RT101	C2
71	R-76-22K	R134	F4
72	R-76-47K	R135	D3
73	R-76-2K	R136	F4
74	R-76-*	R137	E4
75	RF-36	CR102	B5
76	RF-34	CR103	C5
77	RF-52	CR104	D3
78			
79	R-76-*	R138	E4
80	R-268-400M	R139	C4

ITEM	PART NO.	SCHEM. DESIG.	ZONE
81			
82			
83			
84	DZ-58	VR101	C5
85	DZ-72-1	VR102	E3
86	DZ-59	VR103	C5
87	DZ-54	VR104	D3
88			
89			
90	TG-47	Q101	B2
91	TG-62	Q102	C2
92	TG-138	Q103	D2
93	175-601	Q104	D2
94	175-601	Q105	D2
95	TG-166	Q106	D2
96	175-601	Q107	C3
97	175-601	Q108	C3
98	TG-47	Q109	D4
99	TG-167	Q110	D3
100	"	Q111	D4
101	"	Q112	D4
102	"	Q113	D4
103	TG-128	Q114	C5
104	TG-62	Q115	C4
105	TG-167	Q116	C3
106	TG-167	Q117	C3
107			
108			
109			
110	IC-243	U101	C4
111	IC-352	U102	C4
112	IC-347	U103	C5
113	IC-227	U104	C5
114	175-600	U105	D4
115	IC-283	U106	D4
116	"	U107	D5
117	IC-343	U108	D5
118	IC-283	U109	D3
119	IC-353	U110	D4
120	IC-354	U111	D4

ITEM	PART NO.	SCHEM. DESIG.	ZONE
121	IC-351	U112	D4
122	LSI-62	U113	D5
123	LSI-61	U114	E4
124	175-AV-800	U115	E5
125	IC-93	U116	E3
126	IC-345	U117	E3
127	IC-143	U118	E3
128	IC-341	U119	E4
129	IC-338	U120	E5
130	IC-337	U121	F3
131	IC-348	U122	F4
132	LSI-60	U123	F5
133	IC-602	U124	F4
134			
135			
136			
137	175-AV-303	S101	B2-B4
138	SW-318	S102	F3
139	SW-465	S103	F3
140			
141			
142	TR-201	T101	D2
143			
144			
145			
146	FU-48	F101	B1
147	FU-91	F102	F2
148			
149			
150			
151	CR-21	Y101	F5
152			
153			
154			
155	RL-82	K101	C3
156	RL-59	K102	C3
157	"	K103	D2
158			
159			
160			

ITEM	PART NO.	SCHEM. DESIG.	ZONE
161	29465-2	6/U	B3-B4
162	29465-3		B2
163	29465-4		B2
164	29465-5		B3
165	29465-6		B3
166	29465-7		B3
167			
168	175-316	PI002	E2
169	175-321	PI008	F1
170			
171	SO-69	XU115	E5
172	SO-70	J1006	F5
173	SO-84-40	XU114	E4
174	SO-84-40	XU125	F5
175			
176			
177	LU-109	2/U	A6-B6
178			
179	SC-100-0	3-1/2"	B5
180	SC-100-2	"	B5
181			
182			
183	FH-30	2/U	E2, F2
184	FH-21		B1
185	FH-26		B1
186			
187	MC-221		E2
188			
189			
190			
191	26533		D5
192	6 EXT. L'WASHER		D5
193	6-32 x 3/16PPH		D5
194			
195	J-3	1/U	C1
196			
197			
198			
199	CS-389-4	J1009	D3
200	C-367-10p	C133	C4

DO NOT SCALE THIS DRAWING

Dimensional Tolerances: .010" MAX UNLESS OTHERWISE SPECIFIED

DATE: 10-1-71 SCALE: 2:1 TITLE: COMPONENT LAYOUT, MOTHER BOARD

DRW: A. J. S. ENG: ADP


CHK: J. C. O. PRAC: 11/64

SURFACE MAX


SIZE: D

NO: 175-AV-100

DATE: 10-1-71

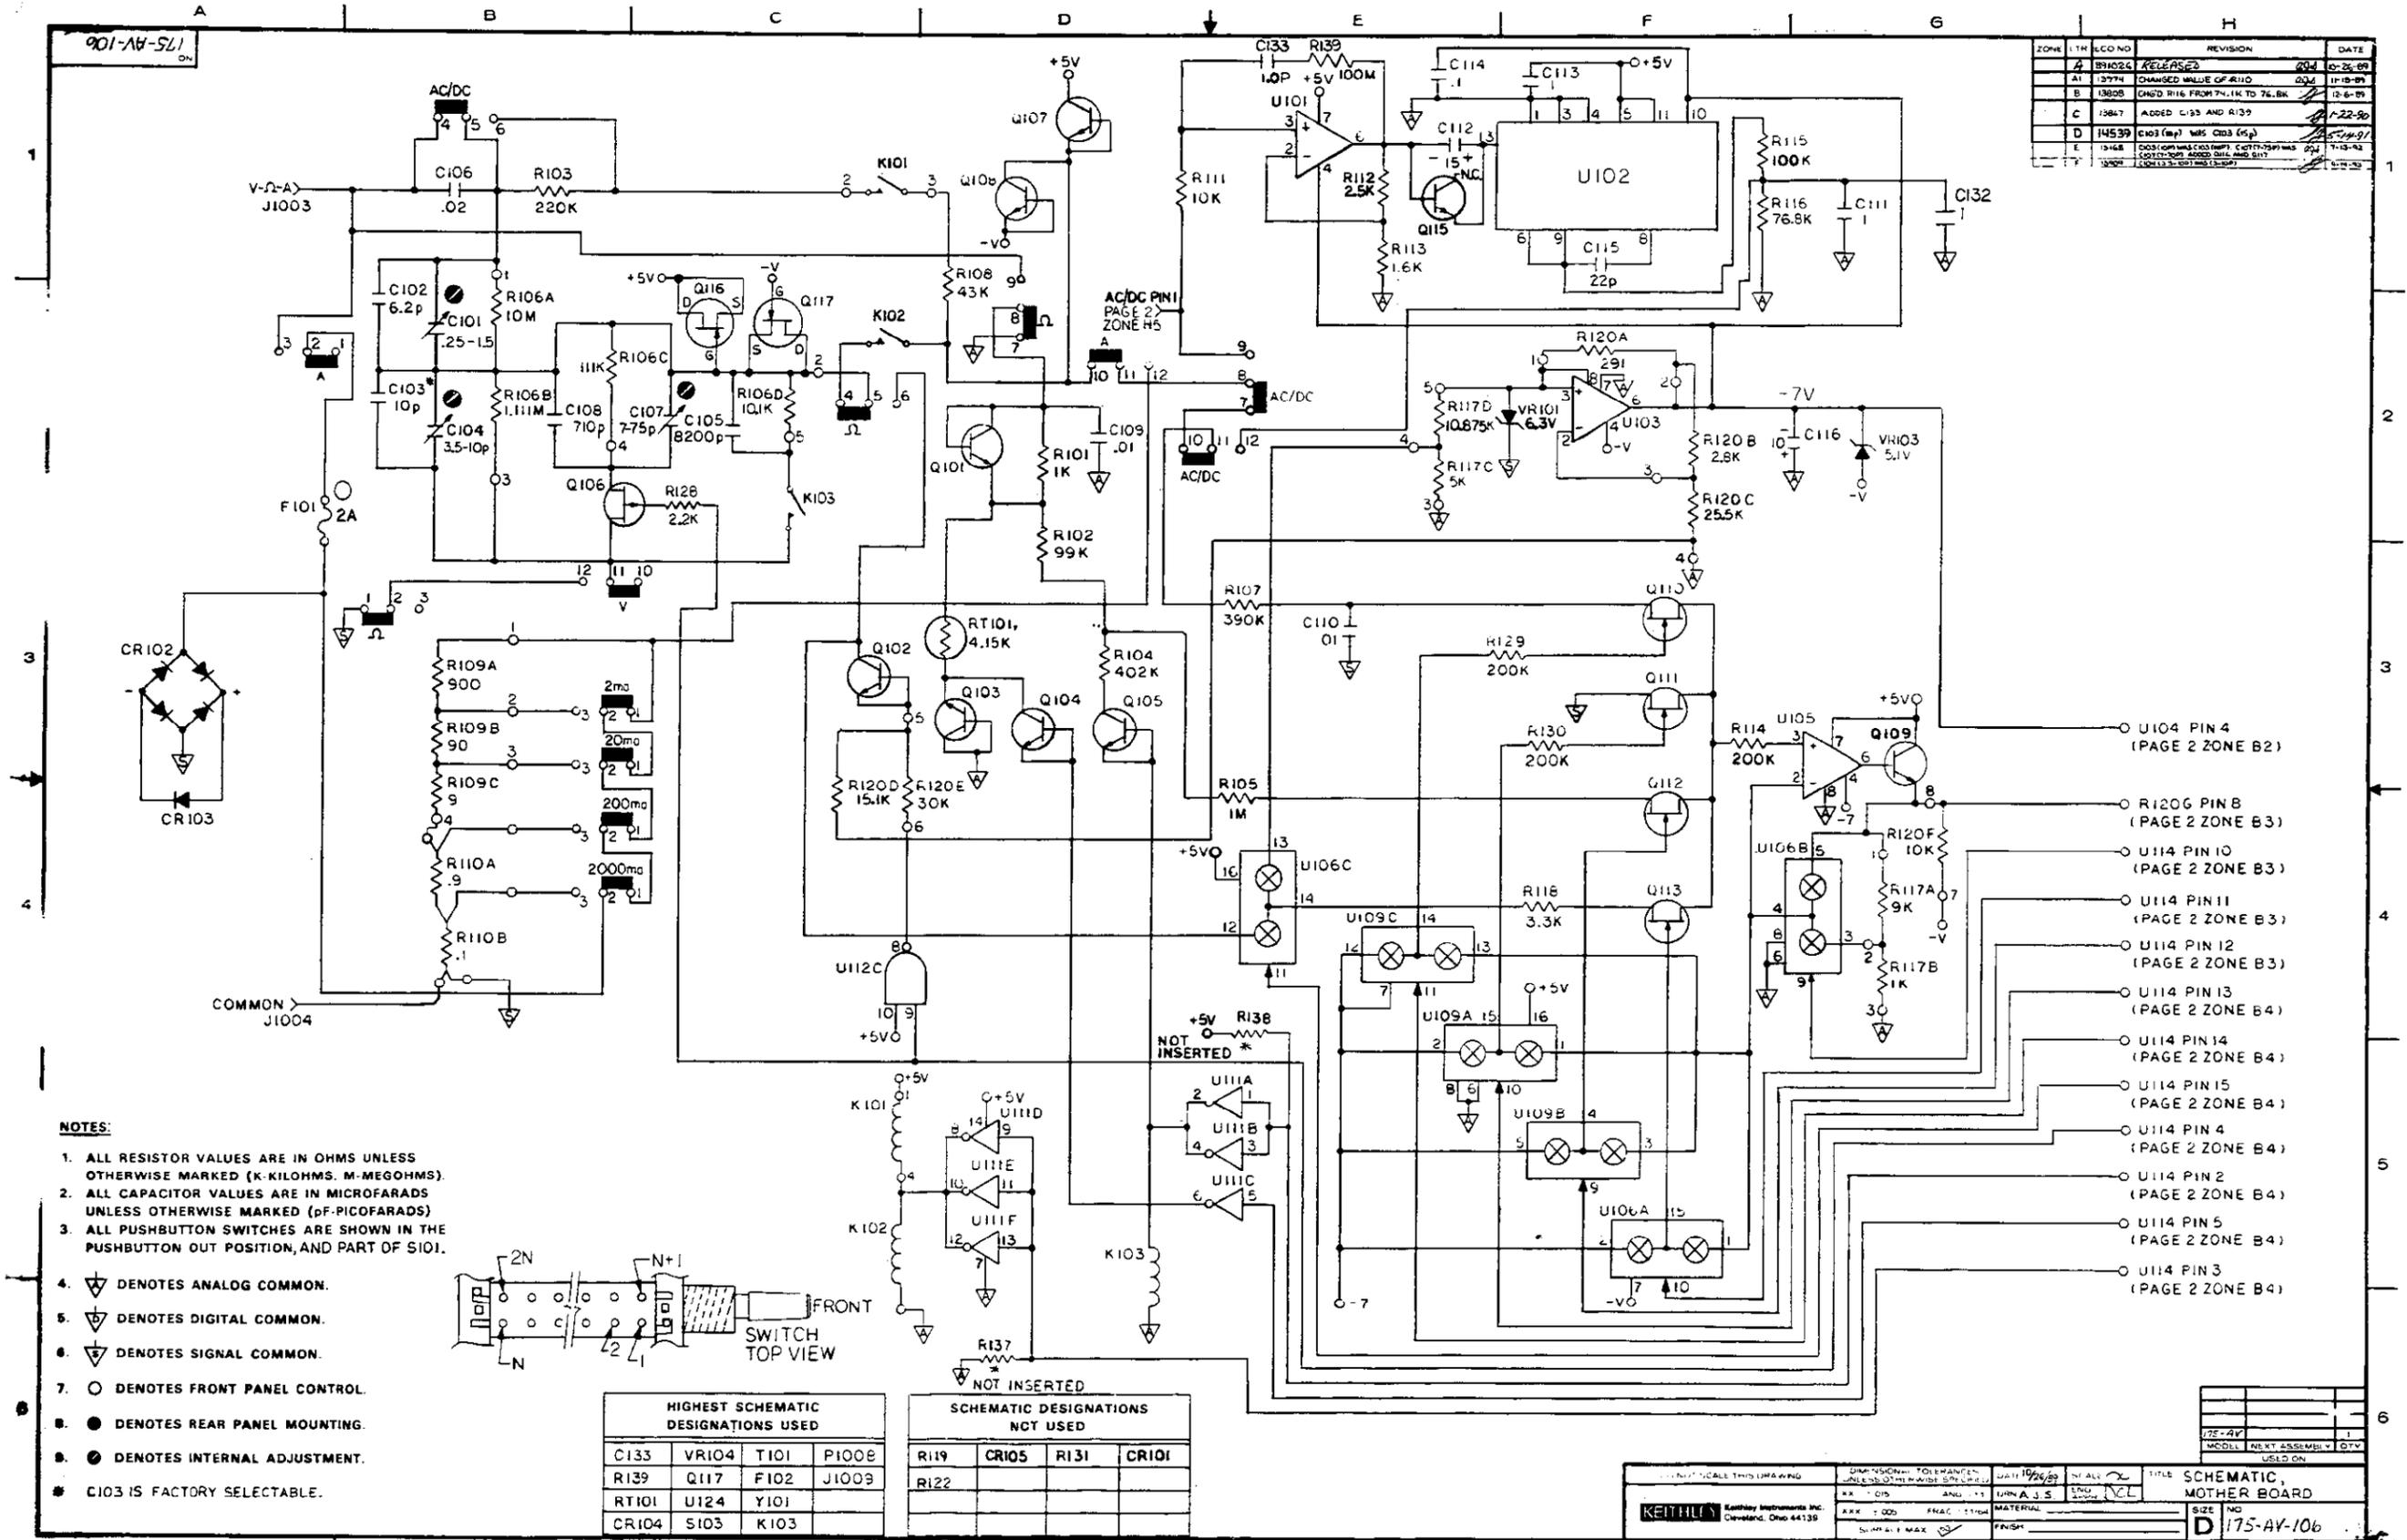

ZONE	TR	ECO NO	REVISION	DATE
A	83024	RELEASED	004	10-23-83
A1	13794	SEE SHEET 1	004	11-18-83
B	13808	SEE SHEET 1		12-6-83
C	13827	SEE SHEET 1		1-22-84
D	14539	SEE SHEET 1		5-21-84
E	15148	SEE SHEET 1		3-10-85
F	15491	SEE SHEET 1		1-14-85

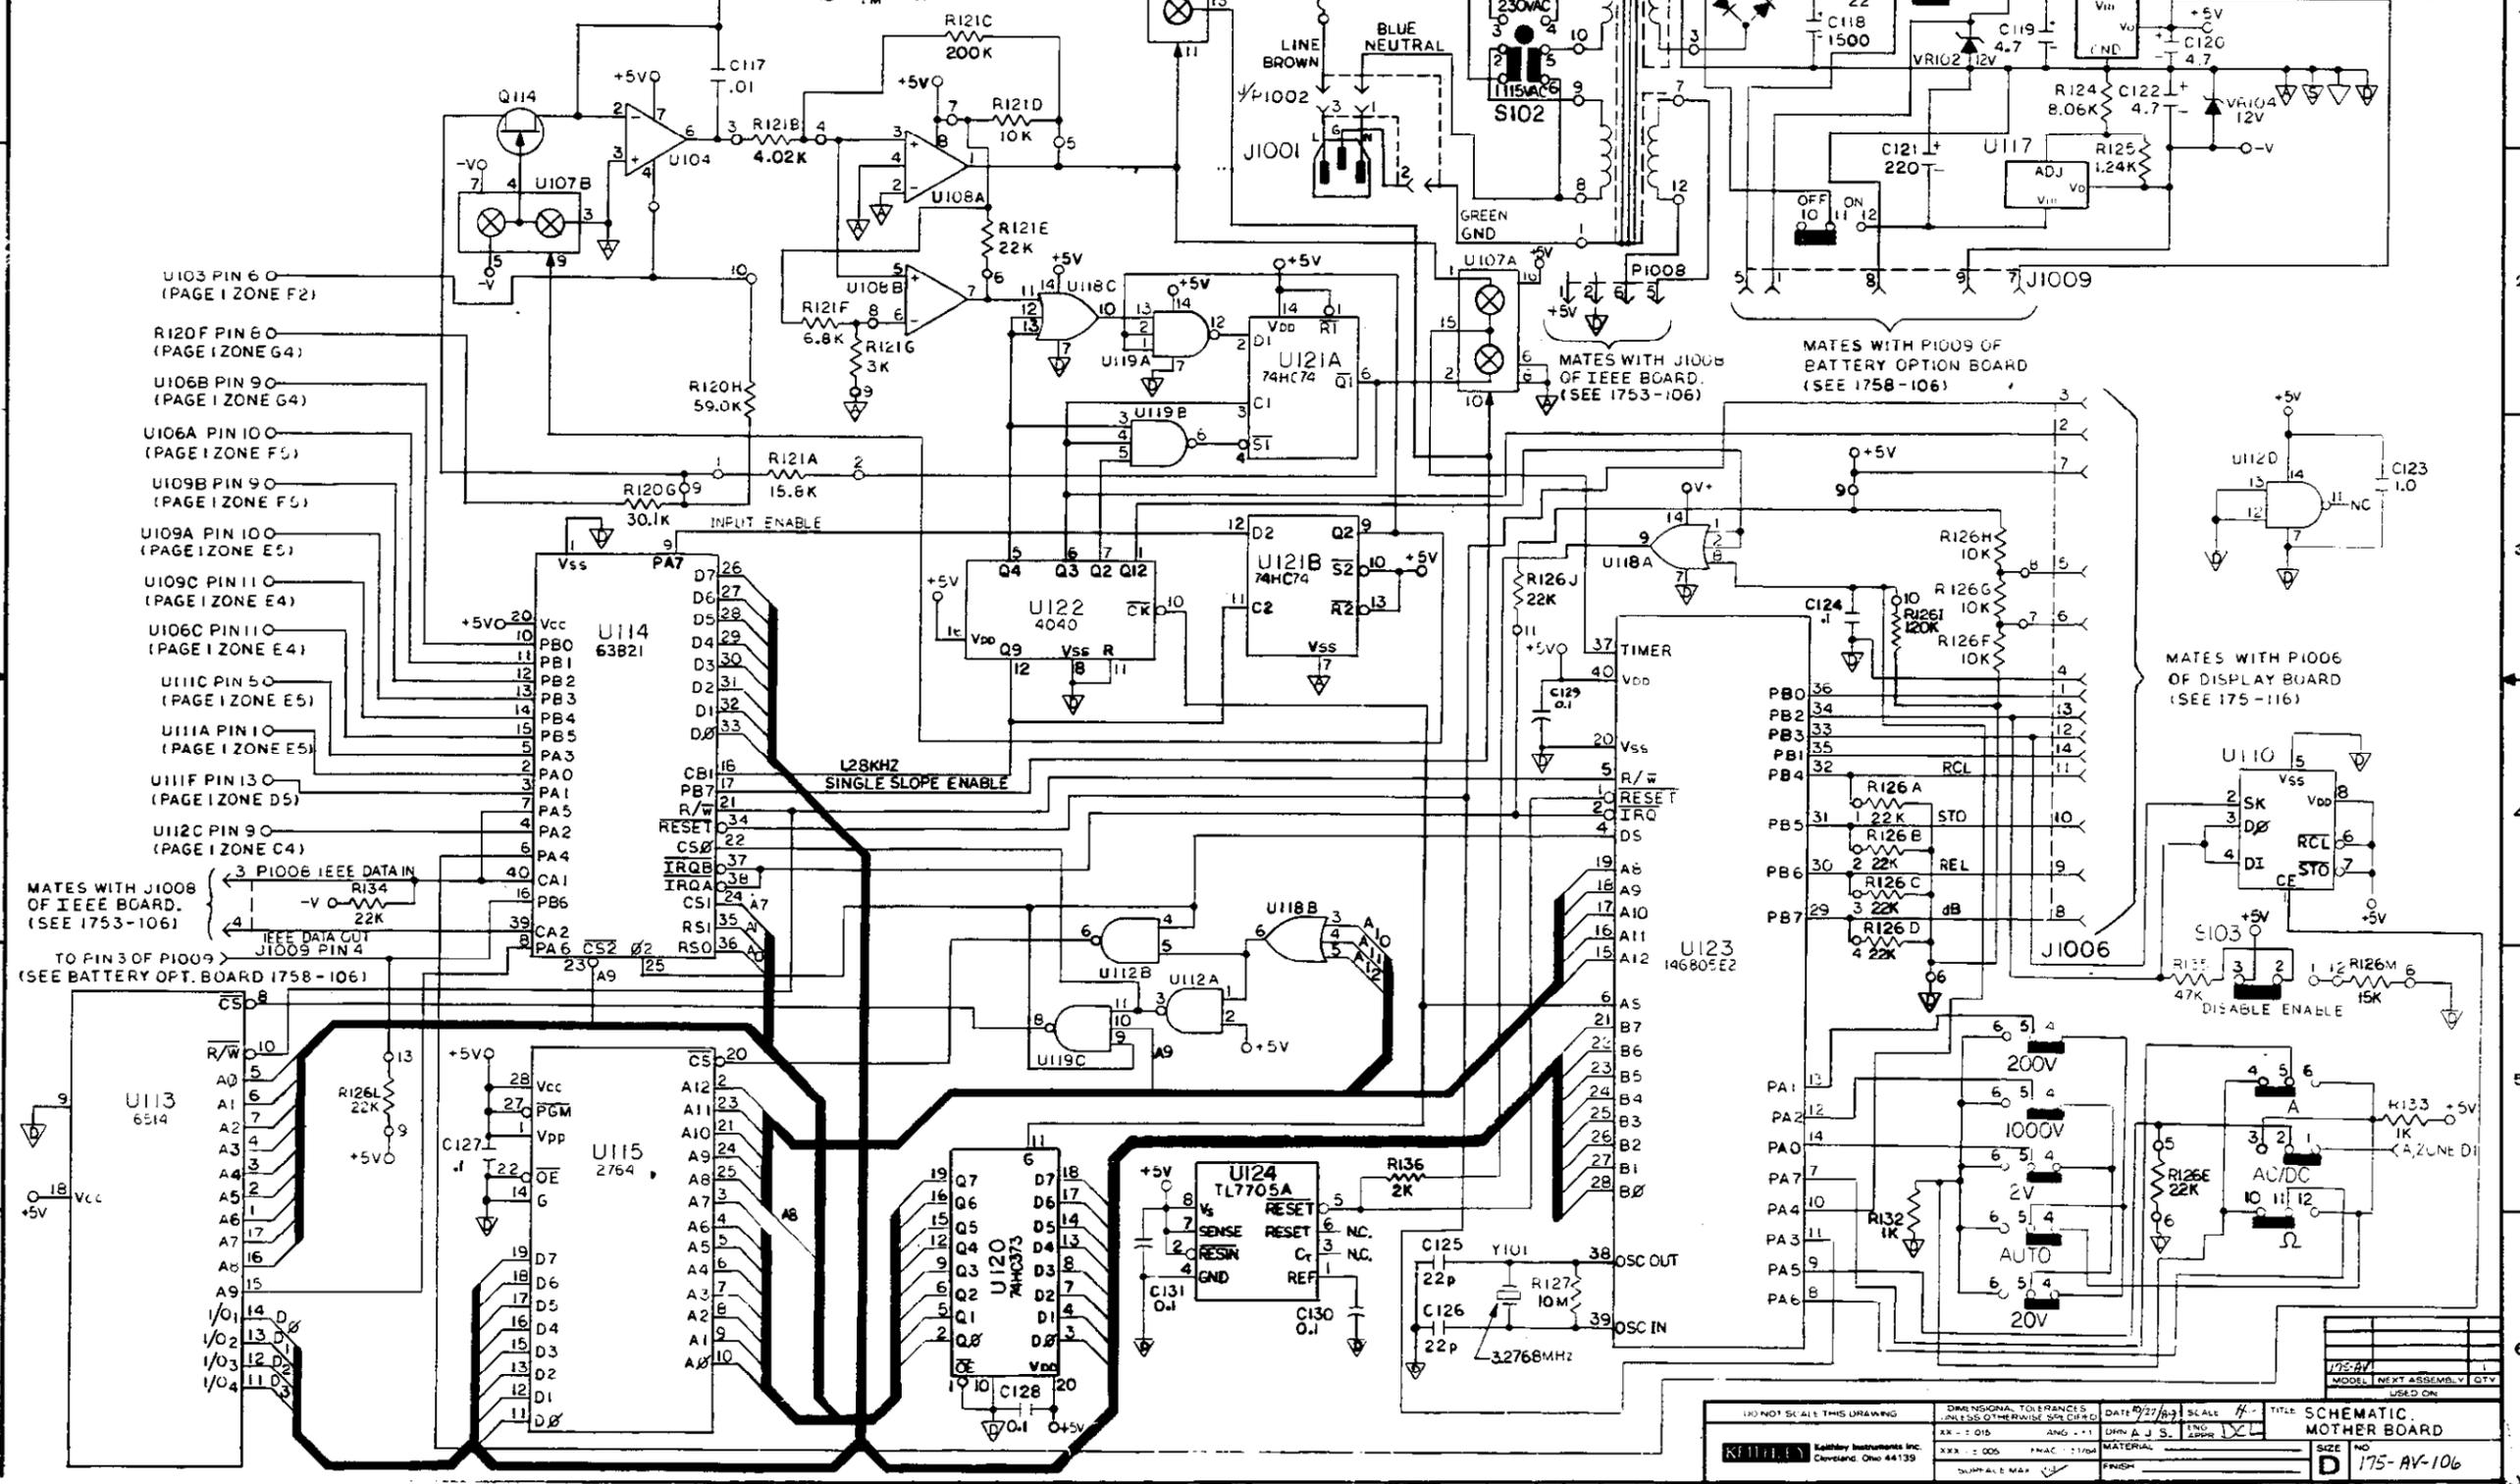

DO NOT SCALE THIS DRAWING	DIMENSIONAL TOLERANCES UNLESS OTHERWISE SPECIFIED	DATE 12/27/83	SCALE 4:1	TITLE SCHEMATIC MOTHER BOARD
REV: 015	ANG: 1:1	DRN: J.S.	ENG: J.S.	SIZE D
XXX: 005	PMAC: 31/84	MATERIAL	FINISH	NO 175-AV-106
SHEET 2 OF 2				


Mother Board Schematic (sheet 2 of 2)

**Table 6-2. Display Board, Parts List**

<b>Circuit Desig.</b>	<b>Description</b>	<b>Keithley Part No.</b>	<b>Location</b>	
			<b>Sch</b>	<b>PCB</b>
P1006	Cable Assembly (14 Conductor)	CA-9-3	C5	B3
U201	LCD Controller/Driver	LSI-59	D4	C3

175-325D

ZONE	LTR	ECO NO.	REVISION	END	DATE
B		5627	RELEASED		11-20-64
C		5690	REVISED ART LINES REUB		11-20-64
D		7745	CHG'D ATTACHED FROM REV CARD. 175-325D		8-2-65
E		14519	ADDED REV LTR TO DWG NO.		8-2-65

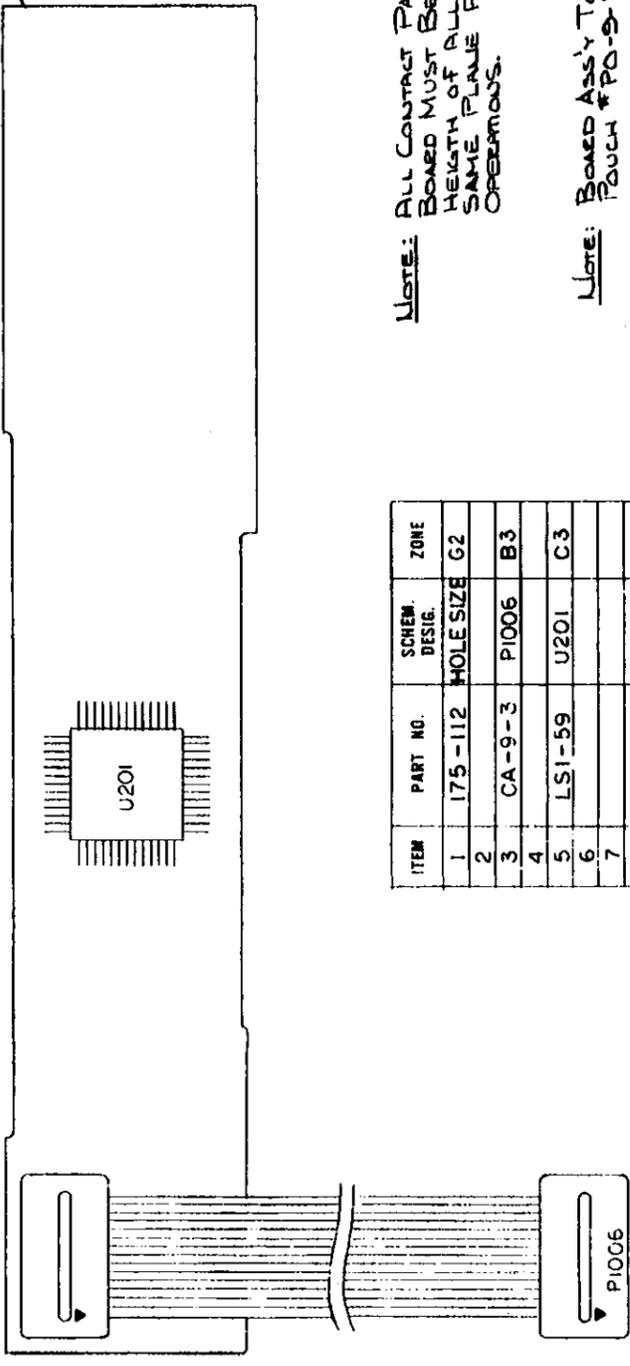

**NOTE:** ALL CONTACT PADS ON SIDE 2 OF THE PCB BORED MUST BE FREE OF ICICLES. THE HEIGHT OF ALL PADS MUST BE ON THE SAME PLANE FOLLOWING ANY SOLDERING OPERATIONS.

**NOTE:** BOARD ASSY TO BE PACKAGED IN TOUCH #PO-9-1 SUPPLIED BY KEITNLEY.

ITEM	PART NO.	SCHEM. DESIG.	ZONE
1	175-112	MOLE SIZE	G2
2			
3	CA-9-3	P1006	B3
4			
5	LS1-59	U201	C3
6			
7			
8			
9			
10			
11			
12			
13			
14			
15			
16			
17			
18			
19			
20			

175	74/10	USED ON
MODEL NEXT ASSEMBLY DTY.		

DO NOT SCALE THIS DRAWING	DIMENSIONAL TOLERANCES UNLESS OTHERWISE SPECIFIED XX ± .015 XXX ± .008	DATE 11-23-63	SCALE 2:1	TITLE SUB-ASSEMBLY, DISPLAY BOARD
NEITHER	ANG ± .1° FRAC ± .104	DRN. V/A	DES. APPROV. [Signature]	
Keitnley Instruments Inc. Cleveland, Ohio 44139	SURFACE MAX. [Symbol]	MATERIAL		
				NO. C 175-325D

Figure 6-7. Display Board Subassembly


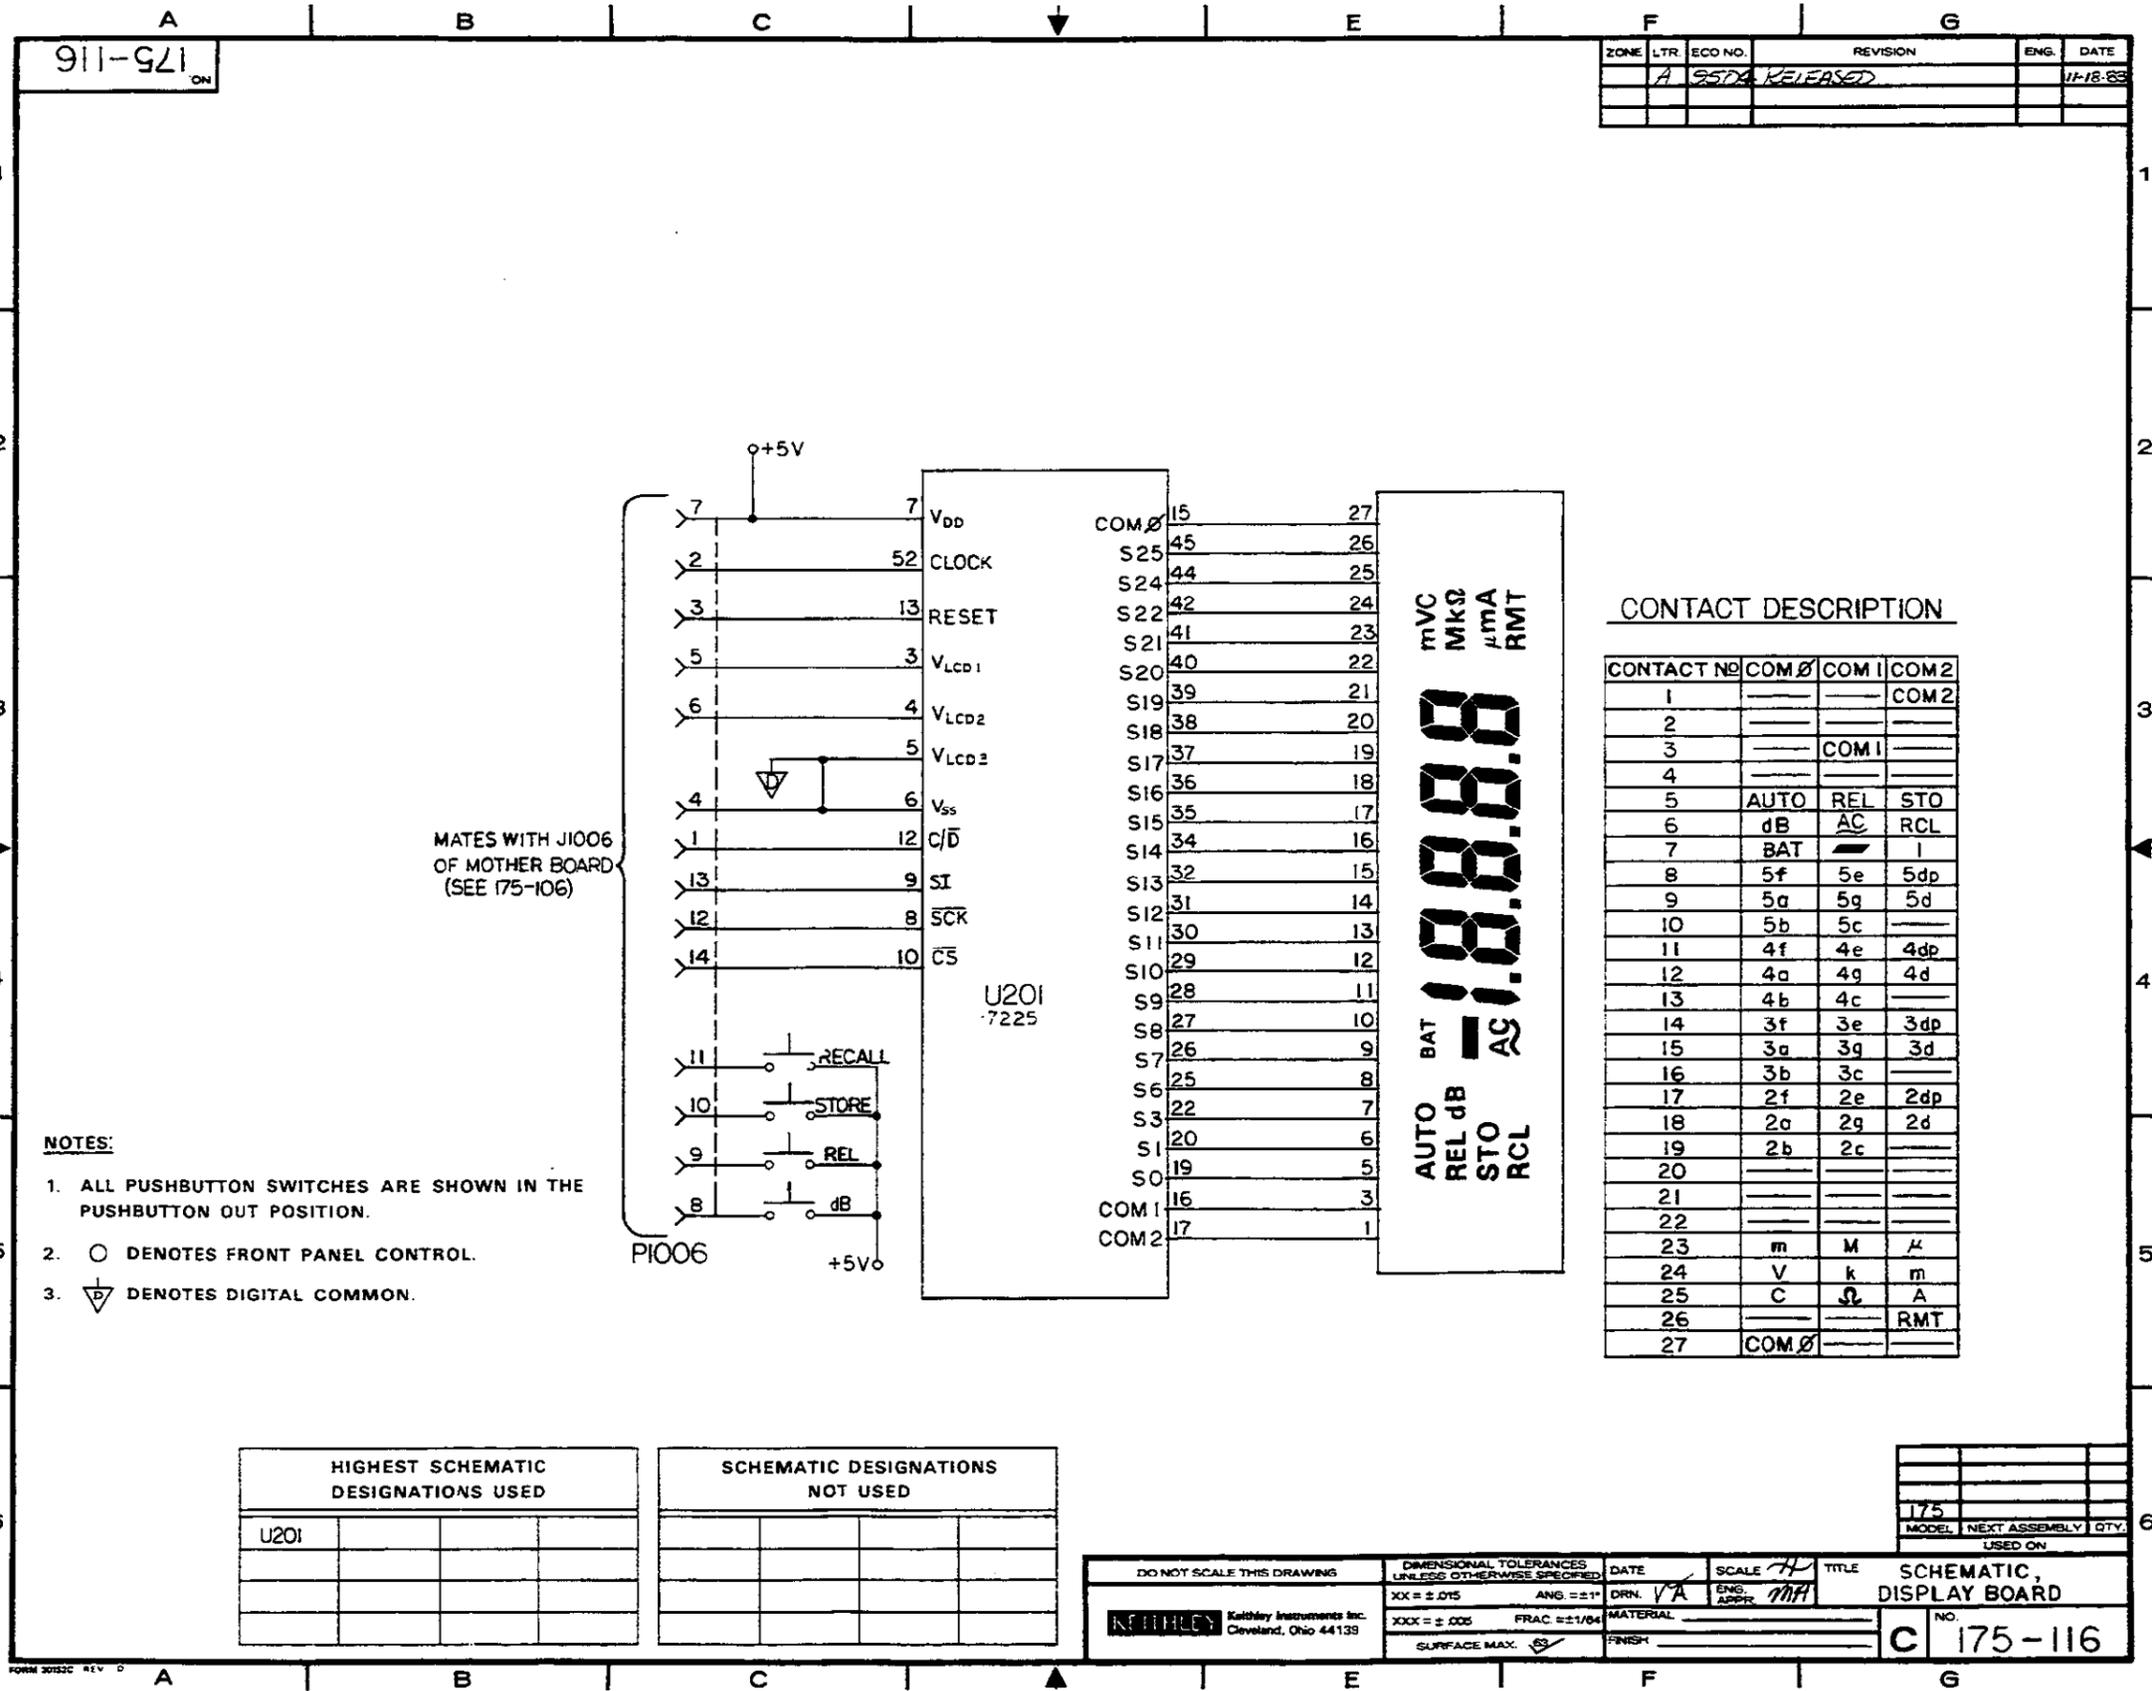


Figure 6-8. Display Board Schematic


1758

ON


LTR	ECO NO	REVISION	ENG	DATE
A	14383	RELEASED	DJD	11-20-90

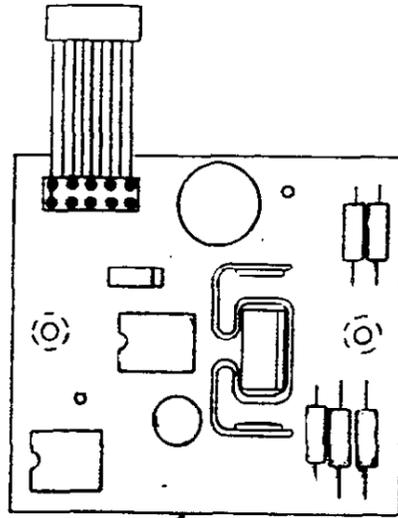

1758-100, BOARD ASS'Y.

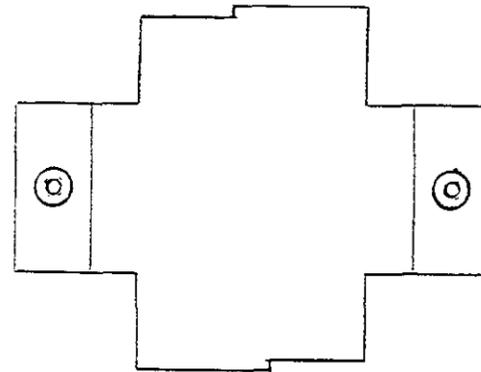

1758-305B, STAKING, BATTERY BRACKET

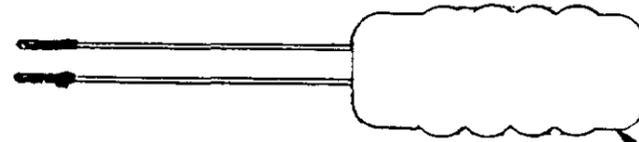

1758-306A, BATTERY ASS'Y.



#4-40x 1/4" PPH (4 REQ'D)

PART NO.	QTY.	DESCRIPTION
1758-100	1	P.C. BOARD ASS'Y.
1758-305B	1	STAKING, BATTERY BRACKET
1758-306A	1	BATTERY ASS'Y.
#4-40x 1/4" PPH	4	PHIL. PAN HD SCREW
PA-173	1	PACKING LIST NOT SHOWN

MODEL	NEXT ASSEMBLY	QTY.

DO NOT SCALE THIS DRAWING		DIMENSIONAL TOLERANCES UNLESS OTHERWISE SPECIFIED		DATE 11/20/90	SCALE <i>rw</i>	TITLE MODEL 1758, BATTERY OPTION	
XX = ± .015		ANG. = ± 1°		DRN. AJS	ENG. APPR. DCL	SIZE	NO.
XXX = ± .005		FRAC. = ± 1/64		MATERIAL <i>rw</i>		B	1758
SURFACE MAX. $\sqrt{63}$				FINISH <i>rw</i>			

44-131 58425  
BRUNING

A FORM 282778

REV D

B

C

D

E

F

Figure 6-9. Model 1758 Battery Option


**Table 6-3. Battery Option Board, Parts List**

Circuit Desig.	Description	Keithley Part No.	Location	
			Sch	PCB
C101	Capacitor, 220 $\mu$ F, 25VDC, Aluminum Electrolytic	C-314-220	D4	D2
C102	Capacitor, 10 $\mu$ F, 25VDC, Aluminum Electrolytic	C-314-10	C4	D3
CR101	Rectifier, Schottky Barrier, 1N5820	RF-53	D4	D3
J1010	Pin	CS-463	C3	D2
J1011	Pin	CS-463	C3	D3
P1009	Cable Assembly, 10 Conductor	CA-27-1	B1	C1
Q101	Transistor, NPN, High Voltage (TIP-49)	TG-137	C2	D3
R101	Resistor, 4.7 $\Omega$ , 10%, 1W, Wirewound	R-334-4.7	C3	D2
R102	Resistor, 4.7 $\Omega$ , 5%, 1/4W, Composition	R-76-4.7	C2	D2
R103	Resistor, 30.1k $\Omega$ , 1%, 1/8W, Metal Film	R-88-30.1k	D3	D3
R104	Resistor, 39.2k $\Omega$ , 1%, 1/8W, Metal Film	R-88-39.2k	E3	D3
R105	Resistor, 1.2M $\Omega$ , 5%, 1/4W, Composition	R-76-1.2M	E3	D3
RT101	Thermistor, PTC, .30 $\Omega$	RT-10	B2	D2
Staking	Staked PCB	1758-101	-	D2
U101	Voltage Converter, SI7661CJ	IC-340	C4	D3
U102	Voltage Comparator, LM393	IC-343	E3	D3
-	Heat Sink (used on Q101)	HS-28	-	D3

001-8921 ON

LTR.	ECO NO.	REVISION	ENG.	DATE
A		PRELIMINARY		
B		PRELIMINARY		
C	9450	RELEASED		9/30/83
D	9572	DET. WAS REV. C. ADDED ITEM 25 STEM 17 WAS R-76	Muh	1-24-84
E	9806	ITEMS 11 & 12 WERE CS-357 DELETED DETAIL "A"	Muh	4-7-84
F	10402	R101 WAS R-1-4.7	2/S	12-27-84
G	10967	ARTWORK WAS REV. D.	SA	2-20-86
H	12058	CHG'D ITEM 3 FROM C-314-250 TO C-314-220	H	4-3-87

ITEM	PART NO.	SCHEM. DESIG.	ZONE
1	1758-101	STAKING	D2
2			
3	L-314-220	L101	D2
4	L-314-10	L102	D3
5			
6	PA-27-1	P1009	D1
7	IC-340	U101	D3
8	IC-343	U102	D3
9			
10			
11	CS-463	J1011	D3
12	CS-463	J1010	D2
13			
14	TG-137	Q101	D3
15			
16			
17	R-334-4.7	R101	D2
18	R-76-4.7	R102	D2
19	R-88-30.1K	R103	D3
20	R-88-39.2K	R104	D3
21	R-76-1.2M	R105	D3
22			
23	RF-53	CR101	D3
24			
25	RT-10	RT101	D2
26			
27			
28	HS-28		D3
29			

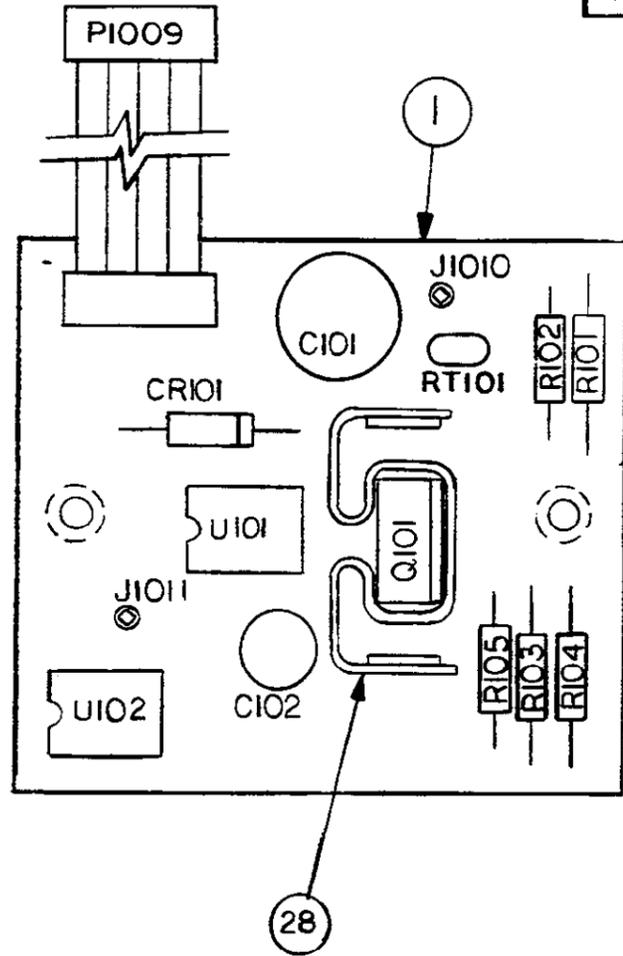

1758		
MODEL	NEXT ASSEMBLY	QTY.
USED ON		

DO NOT SCALE THIS DRAWING	DIMENSIONAL TOLERANCES UNLESS OTHERWISE SPECIFIED	DATE 6-2-83	SCALE 2:1	TITLE COMPONENT LAYOUT BATTERY OPTION
Keithley Instruments Inc. Cleveland, Ohio 44139	XX = ±.015    ANG. = ±1°	DRN. B.S.	ENG. APPR. MA	SIZE NO.
	XXX = ±.005    FRAC. = ±1/64	MATERIAL		B 1758-100
	SURFACE MAX. 63	FINISH		

BRUNING 44-131 58425

Figure 6-10. Battery Option Component Layout


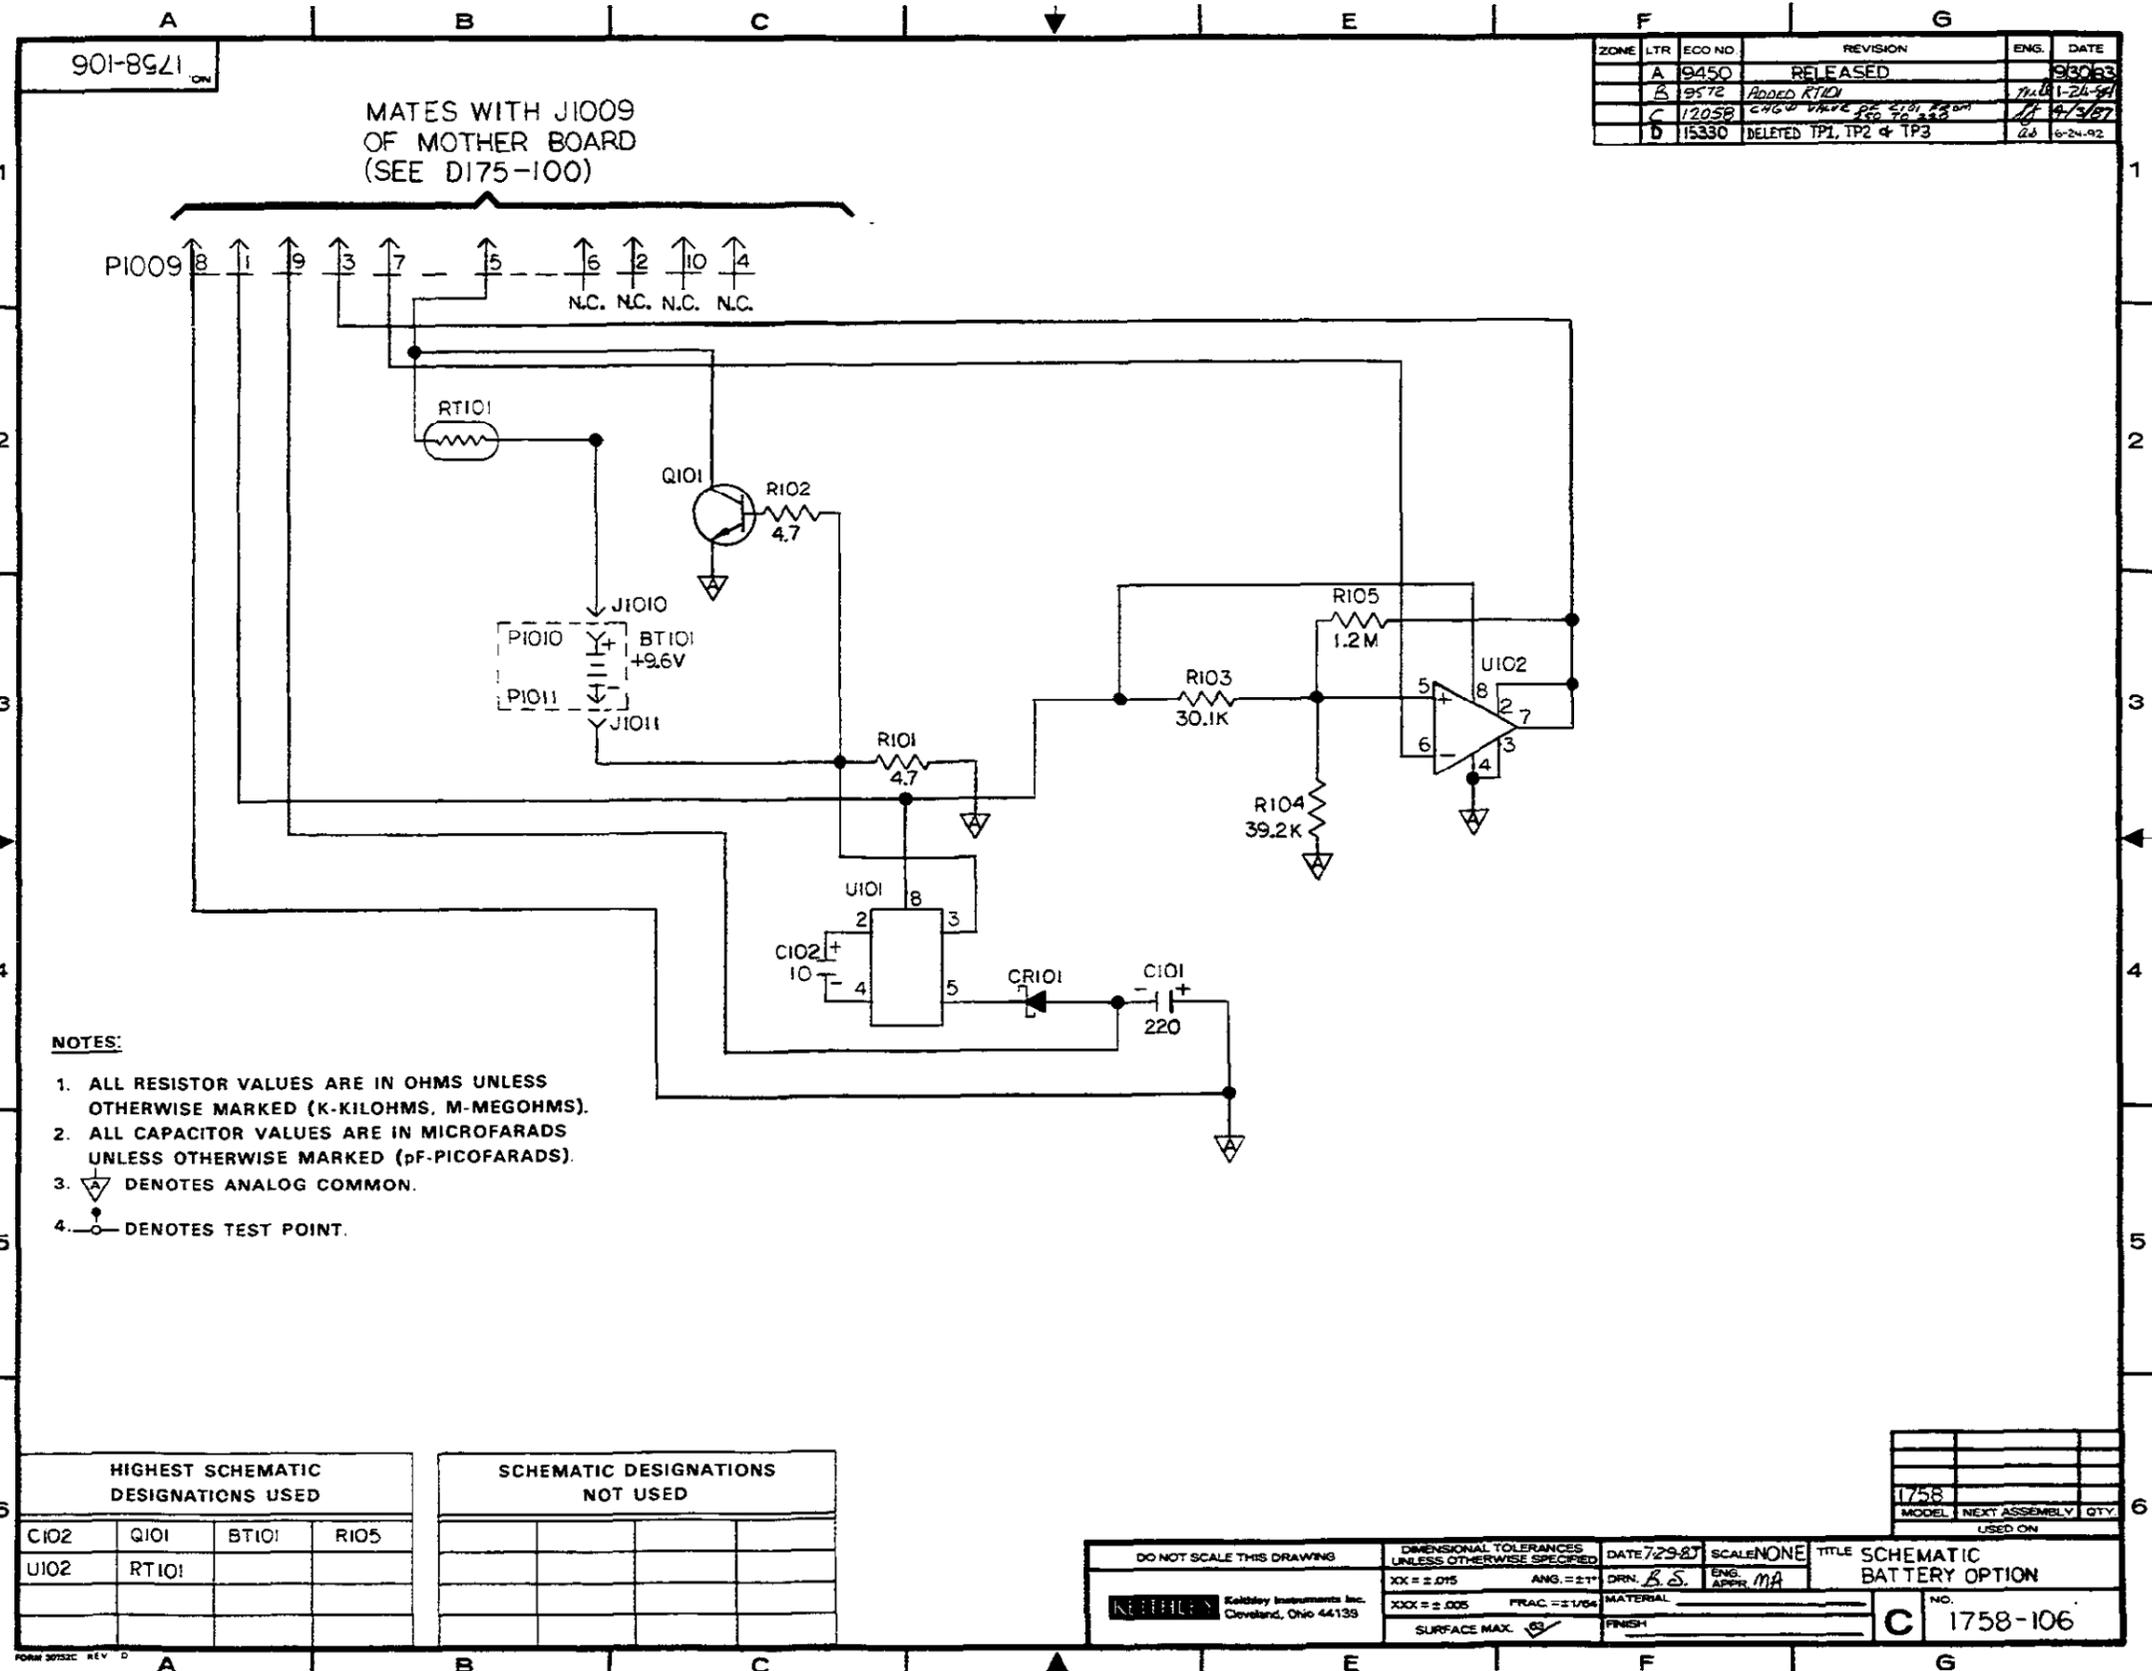


Figure 6-11. Battery Option Schematic

1758-306A

ON

LTR	ECO NO	REVISION	ENG	DATE
A	14383	RELEASED	QJD	12-3-90
A1	14619	ADDED REV LTR TO DWG NO.	QJD	5-22-91

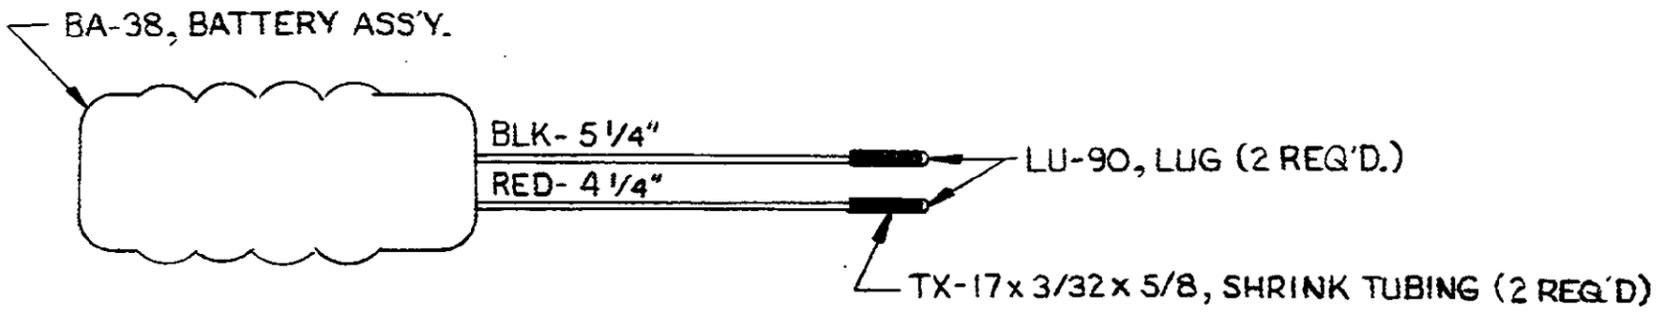

WARNING: BATTERY LEADS MUST NOT TOUCH ONE ANOTHER.

- NOTE:
1. STRIP WIRE 1/8", CRIMP LUG AND ADD SHRINK TUBING TO ONE WIRE AT A TIME.
  2. TUCK RED WIRE UNDER TAPE THAT IS AROUND BATTERY.

PART NO.	QTY.	DESCRIPTION
BA-38	1	BATTERY ASS'Y.
LU-90	2	LUG
TX-17 x 3/32" x 5/8"	2	SHRINK TUBING

1758		1
MODEL	NEXT ASSEMBLY	QTY.
USED ON		

DO NOT SCALE THIS DRAWING Keithley Instruments Inc. Cleveland, Ohio 44139	DIMENSIONAL TOLERANCES UNLESS OTHERWISE SPECIFIED XX = ± .015      ANG. = ± 1° XXX = ± .005      FRAC. = ± 1/64 SURFACE MAX. 63 ✓	DATE 12/3/90 DRN. AJS MATERIAL FINISH	SCALE <i>rw</i> ENG. APPR. <i>DCL</i> NO. <b>A</b>	TITLE <b>BATTERY ASSEMBLY</b> NO. 1758-306A
	BRUNING 40-21 62198		FORM 28778A REV. D	

Figure 6-12. Battery Assembly

**Table 6-4. Model 175-AV Spare Parts List**

<b>Qty</b>	<b>Keithley Part No.</b>	<b>Circuit Desig.</b>
1	BA-38	BT101
4	FU-48	F101
2	FU-91	F102
1	RL-82	K101
4	175-601	Q104, Q105, Q107, Q108
3	TG-166	Q106
6	TG-167	Q110, Q111, Q112, Q113, Q116, Q117
1	TG-128	Q114
1	IC-227	U104
6	175-600	U105
2	IC-343	U108
1	IC-353	U110
1	IC-345	U117
2	LSI-60	U123
1	IC-602	U124
1	DZ-58	VR101
1	DZ-72-1	VR102
1	DZ-59	VR103
10	MC-561	CALIBRATED Label



# Service Form

Model No. \_\_\_\_\_ Serial No. \_\_\_\_\_ Date \_\_\_\_\_

Name and Telephone No. \_\_\_\_\_

Company \_\_\_\_\_

List all control settings, describe problem and check boxes that apply to problem. \_\_\_\_\_

- Intermittent
- IEEE failure
- Front panel operational
- Analog output follows display
- Obvious problem on power-up
- All ranges or functions are bad
- Particular range or function bad; specify \_\_\_\_\_
- Batteries and fuses are OK
- Checked all cables

Display or output (check one)

- Drifts
- Unstable
- Overload
- Unable to zero
- Will not read applied input

- Calibration only
- Data required
- Certificate of calibration required

(attach any additional sheets as necessary)

Show a block diagram of your measurement system including all instruments connected (whether power is turned on or not). Also, describe signal source.

Where is the measurement being performed? (factory, controlled laboratory, out-of-doors, etc.)

What power line voltage is used? \_\_\_\_\_ Ambient temperature? \_\_\_\_\_ °F

Relative humidity? \_\_\_\_\_ Other? \_\_\_\_\_

Any additional information. (If special modifications have been made by the user, please describe.)

Be sure to include your name and phone number on this service form.



# FREE PRODUCT/UPGRADE INFORMATION

To receive future information on product upgrades and enhancements, complete this card and mail, or FAX to 440/248-6168.

MODEL \_\_\_\_\_ SERIAL NO. \_\_\_\_\_ DATE \_\_\_\_\_

NAME \_\_\_\_\_ TITLE \_\_\_\_\_

COMPANY \_\_\_\_\_ MAIL STOP \_\_\_\_\_

ADDRESS \_\_\_\_\_

CITY \_\_\_\_\_ STATE/PROVINCE \_\_\_\_\_ ZIP \_\_\_\_\_ COUNTRY \_\_\_\_\_

PHONE \_\_\_\_\_ FAX \_\_\_\_\_

E-MAIL \_\_\_\_\_

For FREE additional information, check below:

### Application Notes

- General Purpose Measurements
- Component Test Applications

### Reference Publications

- Low Level Handbook
- Switching Handbook

### Catalogs

- Full Line Product Catalog

### Facility (Check One)

- K Aerospace/Defense
- S Automotive/Parts Mfg.
- Q Chemical/Petroleum Processing
- H Components Mfg. (Non-Semi)
- N Computer/Peripherals
- T Consumer Electronics
- I. Digital ICs
- U Discrete Components
- D Displays
- V Distributors/Resellers/Rental
- F Education/University
- B Industrial Controls Mfg.
- R Medical Equip. and Services
- Y Mixed-Signal Components
- Z Other Discrete Manufacturing
- O Optoelectronic Components
- I Process Control Industries
- C Regulatory
- E Research Laboratories
- J Semi. Components - Other
- I Semiconductor Mfg.
- 2 Semi. Pkg. Part Testing
- P Telecommunications Equip.
- G Test/Measurement Equipment Mfg.
- M Utility
- 4 VAR/System Integrator/Consultant
- X Other \_\_\_\_\_

### Job Function (Check One)

- 4 Calibration/Metrology
- 6 Component Test
- C Consulting
- G Corp./General Mgmt.
- 7 Education
- 3 Engineering Design
- 1 Engineering Management
- 5 Mfg. Production Test
- 0 Purchasing
- 8 Quality Assurance/Control
- 2 Research & Development
- S Safety Manager
- 9 Service/Repair
- E System Engineering/Integration
- T Test Technician
- X Other \_\_\_\_\_

### Product Interest(s)

- M Acculex Digital Displays
- G Communications Test
- 7 Current/Voltage Source
- V C-V Measurements
- D Data Acquisition Boards
- R Data Acq. Test & Analysis Software
- 2 Digital Multimeters
- I. Distributed I/O
- 4 Electrometers/Picoammeters
- A Flat Panel Display Test
- F Function Generators
- 3 High Resistance Meters
- F IEEE Interfaces
- I I-V Characterization
- N I.C.Z. Meters
- 5 Nanovoltmeters
- B Network Measurement Modules
- 6 Ohmmeters
- P PC Instruments
- K Portable Products
- 8 Precision Power Supplies
- T Semiconductor Parametric Test
- H Serial Communication Interfaces
- J Signal Conditioning Products
- U Source/Measure Instruments
- S Switching Systems/Scanners
- 0 Temperature Measurements
- W Wafer Level Reliability
- X Other \_\_\_\_\_



CLEVELAND OH 44139-9653

PO BOX 391260

KEITHLEY INSTRUMENTS INC

POSTAGE WILL BE PAID BY ADDRESSEE

**BUSINESS REPLY MAIL**  
FIRST-CLASS MAIL PERMIT NO. 11759 CLEVELAND OH



NO POSTAGE  
NECESSARY  
IF MAILED  
IN THE  
UNITED STATES



1. What other Keithley products do you currently use?
  
2. What effects, devices or phenomena do you measure with this instrument?
  
3. What was the main reason a *Keithley* unit was purchased?
  
4. Do you have any design suggestions concerning this unit?