

RE-INVENTING TEST & MEASUREMENT THROUGH *SPEED* AND *SIMPLICITY*

Model 2657A High Power System SourceMeter® Instrument Quick Start Guide



A GREATER MEASURE OF CONFIDENCE

KEITHLEY
A Tektronix Company

Safety precautions

Observe the following safety precautions before using this product and any associated instrumentation. Although some instruments and accessories would normally be used with nonhazardous voltages, there are situations where hazardous conditions may be present.

This product is intended for use by qualified personnel who recognize shock hazards and are familiar with the safety precautions required to avoid possible injury. Read and follow all installation, operation, and maintenance information carefully before using the product. Refer to the user documentation for complete product specifications.

If the product is used in a manner not specified, the protection provided by the product warranty may be impaired.

The types of product users are:

Responsible body is the individual or group responsible for use and maintenance of equipment, for ensuring that the equipment is operated within its specifications and operating limits, and for ensuring that operators are adequately trained.

Operators use the product for its intended function. They must be trained in electrical safety procedures and proper use of the instrument. They must be protected from electric shock and contact with hazardous live circuits.

Maintenance personnel perform routine procedures on the product to keep it operating properly, for example, setting the line voltage or replacing consumable materials. Maintenance procedures are described in the user documentation. The procedures explicitly state if the operator may perform them. Otherwise, they should be performed only by service personnel.

Service personnel are trained to work on live circuits, perform safe installations, and repair products. Only properly trained service personnel may perform installation and service procedures.

Keithley Instruments products are designed for use with electrical signals that are rated Measurement Category I and Measurement Category II, as described in the International Electrotechnical Commission (IEC) Standard IEC 60664. Most measurement, control, and data I/O signals are Measurement Category I and must not be directly connected to mains voltage or to voltage sources with high transient overvoltages. Measurement Category II connections require protection for high transient overvoltages often associated with local AC mains connections. Assume all measurement, control, and data I/O connections are for connection to Category I sources unless otherwise marked or described in the user documentation. Main supply voltage fluctuations not to exceed $\pm 10\%$ of the nominal voltage.

Exercise extreme caution when a shock hazard is present. Lethal voltage may be present on cable connector jacks or test fixtures. The American National Standards Institute (ANSI) states that a shock hazard exists when voltage levels greater than 30 V RMS, 42.4 V peak, or 60 V DC are present. A good safety practice is to expect that hazardous voltage is present in any unknown circuit before measuring.

Operators of this product must be protected from electric shock at all times. The responsible body must ensure that operators are prevented access and/or insulated from every connection point. In some cases, connections must be exposed to potential human contact. Product operators in these circumstances must be trained to protect themselves from the risk of electric shock. If the circuit is capable of operating at or above 1000 V, no conductive part of the circuit may be exposed.

Do not connect switching cards directly to unlimited power circuits. They are intended to be used with impedance-limited sources. NEVER connect switching cards directly to AC mains. When connecting sources to switching cards, install protective devices to limit fault current and voltage to the card.

Before operating an instrument, ensure that the line cord is connected to a properly-grounded power receptacle. Inspect the connecting cables, test leads, and jumpers for possible wear, cracks, or breaks before each use.

When installing equipment where access to the main power cord is restricted, such as rack mounting, a separate main input power disconnect device must be provided in close proximity to the equipment and within easy reach of the operator.

For maximum safety, do not touch the product, test cables, or any other instruments while power is applied to the circuit under test. ALWAYS remove power from the entire test system and discharge any capacitors before: connecting or disconnecting cables or jumpers, installing or removing switching cards, or making internal changes, such as installing or removing jumpers.

Do not touch any object that could provide a current path to the common side of the circuit under test or power line (earth) ground. Always make measurements with dry hands while standing on a dry, insulated surface capable of withstanding the voltage being measured.

The instrument and accessories must be used in accordance with its specifications and operating instructions, or the safety of the equipment may be impaired.

Do not exceed the maximum signal levels of the instruments and accessories, as defined in the specifications and operating information, and as shown on the instrument or test fixture panels, or switching card.

When fuses are used in a product, replace with the same type and rating for continued protection against fire hazard.

Chassis connections must only be used as shield connections for measuring circuits, NOT as safety earth ground connections.

If you are using a test fixture, keep the lid closed while power is applied to the device under test. Safe operation requires the use of a lid interlock.



If a screw is present, connect it to safety earth ground using the wire recommended in the user documentation.



This symbol on an instrument means caution, risk of danger. The user should refer to the operating instructions located in the user documentation in all cases where the symbol is marked on the instrument.



This symbol on an instrument means caution, risk of electric shock. Use standard safety precautions to avoid personal contact with these voltages.



This symbol on an instrument shows that the surface may be hot. Avoid personal contact to prevent burns.



This symbol indicates a connection terminal to the equipment frame.



If the mercury symbol is on a product, it indicates that mercury is present in the display lamp. Please note that the lamp must be properly disposed of according to federal, state, and local laws.

WARNING This heading in the user documentation explains dangers that might result in personal injury or death. Always read the associated information very carefully before performing the indicated procedure.

CAUTION This heading in the user documentation explains hazards that could damage the instrument. Such damage may invalidate the warranty.

Instrumentation and accessories shall not be connected to humans.

Before performing any maintenance, disconnect the line cord and all test cables.

Safety

Introduction

Unpack

Connect

Test

FAQs
Next steps

To maintain protection from electric shock and fire, replacement components in mains circuits - including the power transformer, test leads, and input jacks - must be purchased from Keithley Instruments. Standard fuses with applicable national safety approvals may be used if the rating and type are the same. Other components that are not safety-related may be purchased from other suppliers as long as they are equivalent to the original component (note that selected parts should be purchased only through Keithley Instruments to maintain accuracy and functionality of the product). If you are unsure about the applicability of a replacement component, call a Keithley Instruments office for information.

To clean an instrument, remove power from the instrument. Use a damp cloth or mild, water-based cleaner. Clean the exterior of the instrument only. Do not apply cleaner directly to the instrument or allow liquids to enter or spill on the instrument. Products that consist of a circuit board with no case or chassis (e.g., a data acquisition board for installation into a computer) should never require cleaning if handled according to instructions. If the board becomes contaminated and operation is affected, the board should be returned to the factory for proper cleaning and servicing.

Power and environmental specifications

For indoor use only.

Power supply	100 V to 240 V AC, 50 Hz to 60 Hz, 350 VA maximum
Altitude	Maximum 2000 m above sea level
Operating	0 °C to 50 °C, 70% relative humidity up to 35 °C. Derate 3% relative humidity/°C, 35 °C to 50 °C
Storage	-25 °C to 65 °C
Pollution degree	1 or 2



CAUTION

Carefully consider and configure the appropriate output-off state, and source and compliance levels before connecting the instrument to a device that can deliver energy. Failure to consider the output-off state, and source and compliance levels may result in damage to the instrument or to the device under test.

Introduction to the Model 2657A High Voltage System SourceMeter® Instrument

The Model 2657A System SourceMeter® Instrument is a high power source-measure unit (SMU) that characterizes and tests high voltage electronics. It helps you improve productivity in applications across R&D, reliability and production testing. It is useful for components and materials characterization where high voltage and precise measurement of voltage and current is required.

The Model 2657A documentation includes:

- **Quick Start Guide:** Shows you how to unpack and set up the instrument to determine that the instrument is functional.
- **User's Manual:** Provides a starting point for creation of applications with a variety of application-based examples.
- **Reference Manual:** Provides comprehensive information about the instrument's features and programming commands.

The User's and Reference manuals are in PDF format on the CD-ROM that is included with the instrument. If you do not have Adobe Reader® to view the files, you can download a free copy of it at <http://get.adobe.com/reader/>.

CD-ROM contents

The CD-ROMs that are included with your instrument contain:

- Product documentation, including PDFs of this Quick Start Guide, the User's Manual, Reference Manual, the product data sheet, product specifications, accessory information, and rack-mount kit instructions
- The Test Script Builder (TSB) Software and Model 2657A TSB add-in, which is a software tool you can use to create, modify, debug, and store Test Script Processor (TSP®) test scripts
- IVI Instrument Driver, driver for National Instruments LabVIEW™, and related release notes
- J2SE™ Runtime Environment
- Keithley I/O layer and release notes

For the latest drivers and additional support information, see <http://www.keithley.com/support>.

Safety

Introduction

Unpack

Connect

Test

FAQs
Next steps

Unpack and inspect the instrument

To unpack and inspect the instrument:

1. Inspect the box for damage.
2. Open the top of the box.



3. Remove the packaging insert.
4. Carefully lift the Model 2657A instrument out of the box.

Model 2657A Instrument



4. Inspect the instrument for any obvious signs of physical damage. Report any damage to the shipping agent immediately.



Safety

Introduction

Unpack

Connect


Test

FAQs
Next steps

In addition to the Model 2657A High Power System SourceMeter® Instrument, you should have received:

- 1 Optional rack-mount kit
- 2 Power line cord
- 3 Green and yellow ground cable (CA-568-120)
- 4 RJ45 LAN crossover cable
- 5 Interlock DB-25 male connector kit hardware
- 6 Model 2657A Quick Start Guide (not shown, this document)
- 7 Model 2657A Product Information and Test Script Builder CD-ROMs (not shown)
- 8 Safety Precautions (not shown)

Refer to the packing list for additional items that might have shipped with your instrument.

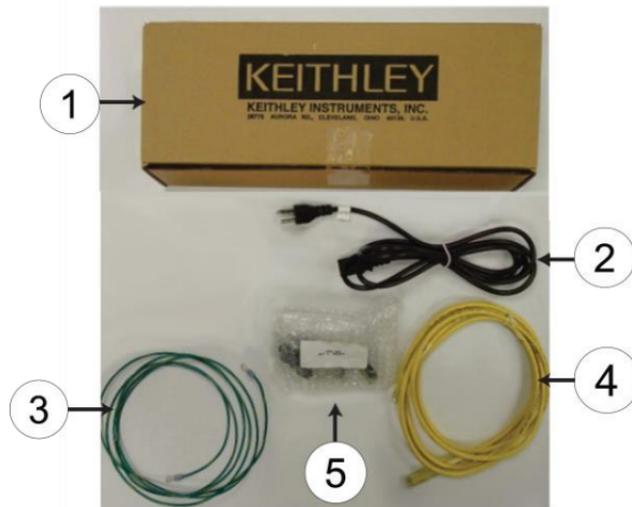

Connect the instrument

Important test system safety information

This product is sold as a stand-alone instrument that may become part of a system that could contain hazardous voltages and energy sources. It is the responsibility of the test system designer, integrator, installer, maintenance personnel, and service personnel to make sure the system is safe during use and is operating properly.

You must also realize that in many test systems a single fault, such as a software error, may output hazardous signal levels even when the system indicates that there is no hazard present.

It is important that you consider the following factors in your system design and use:

- The international safety standard IEC 61010-1 defines voltages as hazardous if they exceed 30 V RMS and 42.4 V peak, or 60 V DC for equipment rated for dry locations. Keithley Instruments products are only rated for dry locations.
- Read and comply with the specifications of all instruments in the system. The overall allowed signal levels may be constrained by the lowest rated instrument in the system. For example, if you are using a 500 V power supply with a 300 V DC rated switch, the maximum allowed voltage in the system is 300 V DC.
- Make sure any test fixture connected to the system protects the operator from contact with hazardous voltages, hot surfaces, and sharp objects. Use shields, barriers, insulation, and safety interlocks to accomplish this.
- Cover the device under test (DUT) to protect the operator from flying debris in the event of a system or DUT failure.
- Double-insulate all electrical connections that an operator can touch. Double insulation ensures the operator is still protected even if one insulation layer fails. Refer to IEC 61010-1 for specific requirements.
- Make sure all connections are behind a locked cabinet door or other barrier. This protects the system operator from accidentally removing a connection by hand and exposing hazardous voltages.

Safety

Introduction

Unpack

Connect

Test

FAQs
Next steps

- Use high-reliability fail-safe interlock switches to disconnect power sources when a test fixture cover is opened.
- Where possible, use automatic handlers so operators are not required to access the DUT or other potentially hazardous areas.
- Provide training to all users of the system so they understand all potential hazards and know how to protect themselves from injury.
- In many systems, during power up, the outputs may be in an unknown state until they are properly initialized. Make sure the design can tolerate this situation without causing operator injury or hardware damage.

NOTE

To keep users safe, always read and follow all safety warnings provided with each of the instruments in your system.

Install the instrument

The Model 2657A can be used on a bench or in a rack. Please see the instructions that came with your rack-mount kit if you are installing the Model 2657A in a rack.

Note that the air intakes for the fan are located on the top cover and side panels of the Model 2657A. The space around these areas should be free from obstruction to ensure proper fan operation.

Connect protective earth (safety ground) to the rear panel of the Model 2657A.



WARNING

The ground wire must be attached to a known protective earth (safety ground) before powering on the instrument. Failure to attach the ground wire to a known protective earth (safety ground) may result in electric shock.

Wiring the interlock


The Model 2657A is a high voltage instrument that can output hazardous live voltages. It is designed to be used with a test fixture or in a system in which operators are not exposed to such hazardous voltages.

The Model 2657A provides an interlock as a method for ensuring operator safety. The output of the Model 2657A can only be turned on when the interlock line is enabled. If you attempt to turn on the output when the interlock is disabled, the instrument will generate error code 802, “Output blocked by interlock.”

The interlock line is enabled when it is pulled high through a switch to $> +4$ V. To drive the interlock pin high, the external supply must supply a minimum of 50 mA. The interlock line is disabled when the signal applied is $< +4$ V. The absolute maximum input is -0.4 V to $+6.0$ V.

The interlock is intended for use through a normally open switch. This switch may be installed on the lid of a test fixture, the enclosure of a semiconductor prober or device handler, or on the doors of a test equipment rack.

The interlock line is pin 24 of the digital input/output connector on the rear panel of the Model 2657A.

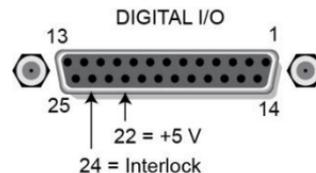

A $+5.0$ V pin is also available on the digital I/O connector (pin 22). To use the interlock, connect the 5 V pin and the interlock pin to the input and output respectively of the switch in your test system.

The following graphic shows how the interlock is intended to be used with a generic test fixture.

NOTE

If you are using the Model 2657A with the Model 8010 High Power Device Test Fixture, the interlock connection may be made using the CA-558-2 cable assembly. Refer to the Model 8010 User's Manual for information on how to connect the Model 2657A to the Model 8010.

Safety



Introduction

Unpack

Connect

Test

FAQs
Next steps

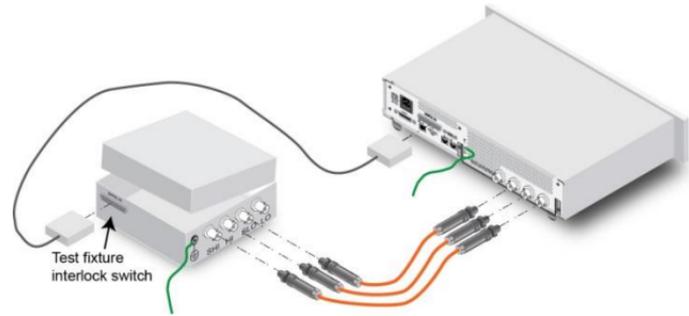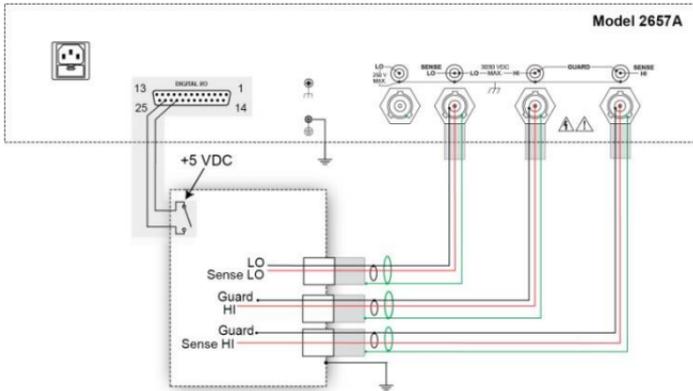

If there are multiple points of operator access in the test system, each point should have a separate relay wired in series with the interlock. Using a series connection ensures operator safety if an attempt is made to access the circuit while hazardous voltages are present.

! WARNING

Connect the enclosure of all metal test fixtures to protective earth (safety ground). Nonconductive test fixtures must be rated to double the maximum voltage in the test circuit. Failure to attach the ground wires to a known protective earth may result in electric shock.

! WARNING

The Model 2657A is provided with an interlock circuit that must be positively activated in order for the high voltage output to be enabled. The interlock helps facilitate safe operation of the equipment in a test system. Bypassing the interlock could expose the operator to hazardous voltages that could result in personal injury or death.

Connect line power

The Model 2657A operates from a line voltage of 100 V to 240 V at a frequency of 50 Hz or 60 Hz. Make sure the operating voltage in your area is compatible.

WARNING

The power cord supplied with the Model 2657A contains a separate ground wire for use with grounded outlets. When proper connections are made, the instrument chassis is connected to power line ground through the ground wire in the power cord. Failure to use a grounded outlet may result in personal injury or death due to electric shock.

CAUTION

Operating the instrument on an incorrect line voltage may cause damage to the instrument, possibly voiding the warranty.

To connect line power:

1. Make sure the front panel power switch is in the off (0) position.
2. Connect the socket of the supplied power cord to the power module on the rear panel.

Connect power line cord



3. Connect the plug of the power cord to a grounded AC outlet.

Safety

Introduction

Unpack

Connect

Test

FAQs
Next steps

Turn on the instrument

Turn on the instrument by pressing the front panel **POWER** switch to the ON (I) position.




Power switch ON position

Power-up sequence

When the instrument is turned on, you should see:

- Five dots
- All segments of the display light
- A brief display showing “KEITHLEY Model 2657A”
- Other startup checks

The entire power-up process takes approximately 30 seconds to complete. When initialization is complete, you will see the default display screen, as shown below.

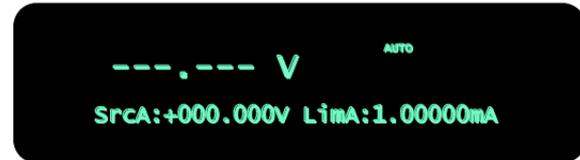

Test the instrument

The following test verifies basic operation of the Model 2657A. In this test, you will use the front-panel controls shown below to source a voltage and measure the voltage output.

NOTE

The following test assumes that the interlock has been correctly wired.

You do not need to connect a device-under-test (DUT) for this test.




Step 1: Set source function, range, and level

1. Press the **SRC**  key. You will see a blinking character in the SrcA value field. Confirm that the value of volts (V) is displayed; if not, press the **SRC**  key again.
2. While that character is still blinking, press the up or down **RANGE**  keys until 200 V is briefly displayed.



The main display screen reappears:

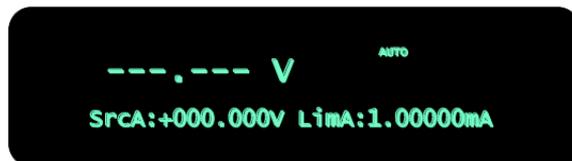

3. Press the **CURSOR**   keys to move the cursor to the 10s digit.

Safety

Introduction

Unpack


Connect

Test

FAQs
Next steps

4. Press the navigation wheel  to enter EDIT mode. The EDIT indicator appears in the upper left corner of the display.
5. Turn the navigation wheel  to set the source value to **100.0000 V**, and then press the navigation wheel  to enter the selection and exit EDIT mode.

Source value set to 100.000 V

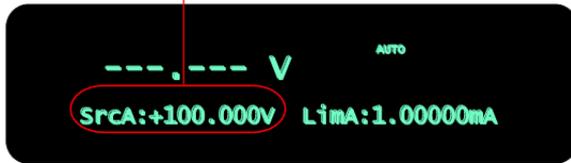


Step 2: Set the compliance limit

1. Press the **LIMIT**  key. You will see a blinking character in the LimA value field.
2. Press the UP range arrow once so that the 10s digit is displayed. It is displayed as 01.0000mA.
3. Use the cursor key to highlight the 1s digit.
4. Press the navigation wheel  to enter EDIT mode.
5. Use the navigation wheel to set the limit to 10 mA.

6. Press the navigation wheel again or press ENTER to enter the selected value and exit EDIT mode.


Compliance limit set to 10.0000 mA

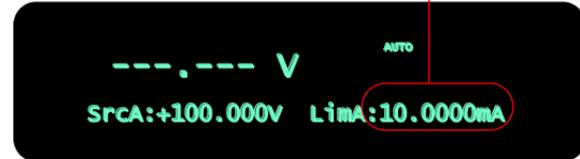

Step 3: Set measurement function and range

1. Press the **MEAS**  key as many times as needed to select the **V** (voltage) measurement function. In the following figure, the measurement function has been set to volts.

Measurement function set to voltage (V)

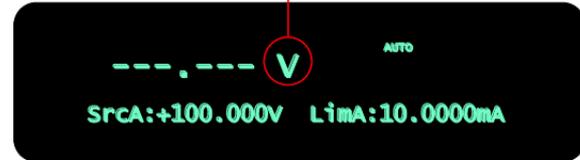

2. Press the **AUTO** key as many times as needed to select the **AUTO** range function. When AUTO is selected, the Model 2657A automatically selects the best range for the measured value. You will briefly see the display shown below, and then the main display screen reappears.



Step 4: Turn output on

Turn the output on by pressing the **OUTPUT ON/OFF**  control. The ON/OFF indicator LED lights and measurements begin.

Step 5: Observe measurements

Observe the measured voltage on the main area of front panel display. The readings should be very close to the 100 V source value.

Step 6: Turn output off

When you finish making measurements, turn the output off by pressing the **OUTPUT ON/OFF**  control. The output indicator LED turns off.

NOTE

These steps confirm basic functionality of your Model 2657A. Please turn instrument power OFF now.

The examples in the Model 2657A User's Manual demonstrate the Model 2657A functionality. We strongly recommend first-time users complete the examples in the manual.

Safety

Introduction

Unpack

Connect

Test

FAQs
Next steps



FAQs

I need a different line frequency or voltage. What should I do?

The Model 2657A requires a line voltage of 100 V AC to 240 V AC ($\pm 10\%$) and a line frequency of either 50 Hz or 60 Hz. Keithley Instruments configures the Model 2657A to the line frequency appropriate to the final shipping destination of the instrument. This line frequency is used for aperture (NPLC) calculations for the integrating analog-to-digital converter (ADC).

You can manually configure the instrument to match the actual line frequency.

To configure the line frequency from the front panel:

1. Press the **MENU** key.
2. Turn the navigation wheel to select **LINE-FREQ**.
3. Press the **ENTER** key.
4. Turn the navigation wheel to select the appropriate frequency.

Safety

Introduction

Unpack

Connect

Test

FAQs
Next steps

5. Press the **ENTER** key.
6. Press the **EXIT (LOCAL)** key to return to the default display screen.

How do I adapt triaxial connections to coaxial connection for high-voltage applications?

Use the optional cable assembly (Keithley Instruments part number SHV-CA-553) that converts a high-voltage triaxial connector to a safe high-voltage (SHV) connector.

What should I do if I get an 802 interlock error?

You will receive error code 802, “Output blocked by interlock,” if:

- You disable the interlock when the Model 2657A output is already on
- You attempt to turn on or enable the Model 2657A output when the interlock is disabled

To recover from this error, properly enable the interlock using a safe test fixture, and then turn on the Model 2657A output. See [“Wiring the interlock”](#) for additional information on the interlock.

Next steps

Model 2657A User's Manual

Refer to the Model 2657A User's Manual. It contains application-based examples that will help familiarize you with the instrument. This manual is on the Product Information CD-ROM that came with your instrument.

Model 2657A Reference Manual

Refer to the Model 2657A Reference Manual for detailed information about all features of the instrument. This manual is on the Product Information CD-ROM that came with your instrument.

Keithley Instruments website

See www.keithley.com for support and additional information about the instrument.

Safety

Introduction

Unpack

Connect

Test

FAQs
Next steps

Specifications are subject to change without notice. All Keithley trademarks and trade names are the property of Keithley Instruments.
All other trademarks and trade names are the property of their respective companies.

KEITHLEY

A Tektronix Company

A Greater Measure of Confidence

KEITHLEY INSTRUMENTS ■ 28775 AURORA RD. ■ CLEVELAND, OH 44139-1891 ■ 440-248-0400 ■ Fax: 440-248-6168 ■ 1-800-935-5595 ■ www.keithley.com

BENELUX

+31-40-267-5506
www.keithley.nl

FRANCE

+33-01-69-86-83-60
www.keithley.fr

ITALY

+39-049-762-3950
www.keithley.it

MALAYSIA

60-4-643-9679
www.keithley.com

SINGAPORE

01-800-8255-2835
www.keithley.com.sg

BRAZIL

55-11-4058-0229
www.keithley.com

GERMANY

+49-89-84-93-07-40
www.keithley.de

JAPAN

81-120-441-046
www.keithley.jp

MEXICO

52-55-5424-7907
www.keithley.com

TAIWAN

886-3-572-9077
www.keithley.com.tw

CHINA

86-10-8447-5556
www.keithley.com.cn

INDIA

080-30792600
www.keithley.in

KOREA

82-2-6917-5000
www.keithley.co.kr

RUSSIA

+7-495-664-7564
www.keithley.ru

UNITED KINGDOM

+44-1344-39-2450
www.keithley.co.uk

For further information on how to purchase or to locate a sales partner please visit www.keithley.com/company/buy

