



# **DPO70000SX**

## **Series Oscilloscopes**

### **Specifications and Performance Verification**

**Warning:** The servicing instructions are for use by qualified personnel only. To avoid personal injury, do not perform any servicing unless you are qualified to do so. Refer to all safety summaries prior to performing service.

**Register now!**  
**Click the following link to protect your product.**  
**[tek.com/register](https://tek.com/register)**



077-1043-06 June 2024

Copyright © 2024, Tektronix. 2024 All rights reserved. Licensed software products are owned by Tektronix or its subsidiaries or suppliers, and are protected by national copyright laws and international treaty provisions. Tektronix products are covered by U.S. and foreign patents, issued and pending. Information in this publication supersedes that in all previously published material. Specifications and price change privileges reserved. All other trade names referenced are the service marks, trademarks, or registered trademarks of their respective companies.

TEKTRONIX and TEK are registered trademarks of Tektronix, Inc.

Tektronix, Inc.  
14150 SW Karl Braun Drive  
P.O. Box 500  
Beaverton, OR 97077  
US

For product information, sales, service, and technical support visit [tek.com](https://tek.com) to find contacts in your area. For warranty information visit [tek.com/warranty](https://tek.com/warranty).

Copyright © 2024, Tektronix. 2024 All rights reserved. Licensed software products are owned by Tektronix or its subsidiaries or suppliers, and are protected by national copyright laws and international treaty provisions. Tektronix products are covered by U.S. and foreign patents, issued and pending. Information in this publication supersedes that in all previously published material. Specifications and price change privileges reserved. All other trade names referenced are the service marks, trademarks, or registered trademarks of their respective companies.

TEKTRONIX and TEK are registered trademarks of Tektronix, Inc.

Tektronix, Inc.  
14150 SW Karl Braun Drive  
P.O. Box 500  
Beaverton, OR 97077  
US

For product information, sales, service, and technical support visit [tek.com](https://tek.com) to find contacts in your area. For warranty information visit [tek.com/warranty](https://tek.com/warranty).

---

Copyright © 2024, Tektronix. 2024 All rights reserved. Licensed software products are owned by Tektronix or its subsidiaries or suppliers, and are protected by national copyright laws and international treaty provisions. Tektronix products are covered by U.S. and foreign patents, issued and pending. Information in this publication supersedes that in all previously published material. Specifications and price change privileges reserved. All other trade names referenced are the service marks, trademarks, or registered trademarks of their respective companies.

TEKTRONIX and TEK are registered trademarks of Tektronix, Inc.

Tektronix, Inc.  
14150 SW Karl Braun Drive  
P.O. Box 500  
Beaverton, OR 97077  
US

For product information, sales, service, and technical support visit [tek.com](https://tek.com) to find contacts in your area. For warranty information visit [tek.com/warranty](https://tek.com/warranty).

# Contents

List of Figures.....	6
List of Tables.....	8
Important safety information.....	9
General safety summary.....	9
To avoid fire or personal injury.....	9
Probes and test leads.....	11
Service safety summary.....	11
Terms in this manual.....	11
Terms on the product.....	12
Symbols on the product.....	12
Specifications.....	13
Vertical system analog channels.....	13
Horizontal and acquisition system.....	24
Trigger specifications.....	27
Serial trigger specifications.....	34
Input-output port specifications.....	34
Data storage specifications.....	36
Power source specification.....	37
Mechanical specifications.....	37
Environmental specifications.....	38
Performance verification.....	40
ReadMeTopic.....	0
Performance verification.....	40
Conventions.....	40
Brief procedures.....	41
Self tests.....	41
Functional tests.....	42
Verify all analog input channels.....	42
Verify the time base.....	44
Verify the A (Main) and B (Delayed) trigger systems.....	45
Verify the file system.....	46
Performance tests.....	47
Prerequisites.....	47
Equipment required.....	48
Test record.....	51
Signal acquisition system checks.....	105
Check DC voltage measurement accuracy, ATI channel.....	106
Check DC voltage measurement accuracy, TekConnect channels.....	108
Check DC gain accuracy, ATI channel.....	115
Check DC gain accuracy, TekConnect channels.....	118
Check offset accuracy, ATI channel.....	141
Check offset accuracy, TekConnect channels.....	143
Check analog bandwidth, ATI channel.....	147
Check channel bandwidth, TekConnect channels.....	150

---

Check Input Resistance, ATI channel.....	154
Check input resistance, TekConnect channels.....	155
Time base system checks.....	156
Check timebase and delay time accuracy and reference.....	156
Check delta time measurement accuracy.....	159
Trigger system checks.....	164
Check time qualified trigger accuracy.....	164
Check sensitivity edge trigger DC coupled.....	167
Output signal checks.....	172
Check fast edge output.....	172
Sine wave generator leveling procedure.....	175
Method 1.....	175
Method 2.....	177
Index.....	179

---

## List of Figures

Figure 1: Toolbar and menu bar .....	41
Figure 2: Universal test hookup for functional tests - Ch 1 shown.....	43
Figure 3: Setup for time base test.....	44
Figure 4: Setup for trigger test.....	45
Figure 5: Setup for the file system test.....	46
Figure 6: DC voltage accuracy test hookup.....	106
Figure 7: Measurement of DC accuracy.....	108
Figure 8: DC voltage accuracy test hookup.....	109
Figure 9: Measurement of DC accuracy.....	114
Figure 10: DC gain accuracy test hookup.....	115
Figure 11: Measurement of DC gain accuracy.....	117
Figure 12: DC gain accuracy test hookup.....	118
Figure 13: Measurement of DC gain accuracy.....	140
Figure 14: Offset accuracy test hookup.....	141
Figure 15: Measurement of offset accuracy.....	142
Figure 16: Offset accuracy test hookup.....	144
Figure 17: Measurement of offset accuracy.....	146
Figure 18: Channel bandwidth test hookup.....	148
Figure 19: Measurement of analog bandwidth.....	150
Figure 20: Channel bandwidth test hookup.....	151
Figure 21: Measurement of analog bandwidth.....	153
Figure 22: Input resistance test hookup.....	154
Figure 23: Input resistance test hookup.....	155
Figure 24: Timebase and delay time initial test hookup.....	157
Figure 25: Timebase and delay time second test hookup.....	158
Figure 26: Timebase and delay time final test hookup.....	159
Figure 27: Delta time accuracy test hookup.....	160
Figure 28: Time qualified trigger test hookup.....	164
Figure 29: Measurement of time accuracy for pulse and glitch triggering.....	165
Figure 30: Sensitivity, edge trigger, DC coupled test hookup.....	168
Figure 31: Measurement of trigger sensitivity - 50 MHz results shown.....	169
Figure 32: Fast edge output initial test hookup.....	173

---

Figure 33: Measurement of fast edge frequency.....	173
Figure 34: Fast edge output second test hookup.....	174
Figure 35: Measurement of fast edge amplitude.....	174
Figure 36: Sine wave generator leveling equipment setup.....	176
Figure 37: Equipment setup for maximum amplitude.....	177

# List of Tables

Table 1: Calculated risetimes for specified instrument bandwidths.....	18
Table 2: Vertical settings.....	43
Table 3: Test information.....	51
Table 4: DC voltage measurement accuracy.....	107
Table 5: DC voltage measurement accuracy.....	110
Table 6: Gain accuracy.....	116
Table 7: Gain accuracy.....	119
Table 8: Offset accuracy.....	142
Table 9: Offset accuracy.....	145
Table 10: Channel bandwidth .....	148
Table 11: Channel bandwidth .....	149
Table 12: Channel bandwidth .....	152
Table 13: Channel bandwidth .....	0
Table 14: Delta time measurement settings.....	161
Table 15: .....	0
Table 16: Trigger settings.....	170

# Important safety information

This manual contains information and warnings that must be followed by the user for safe operation and to keep the product in a safe condition.

To safely perform service on this product, see the *Service safety summary* that follows the *General safety summary*.

## General safety summary

Use the product only as specified. Review the following safety precautions to avoid injury and prevent damage to this product or any products connected to it. Carefully read all instructions. Retain these instructions for future reference.

This product shall be used in accordance with local and national codes.

For correct and safe operation of the product, it is essential that you follow generally accepted safety procedures in addition to the safety precautions specified in this manual.

The product is designed to be used by trained personnel only.

Only qualified personnel who are aware of the hazards involved should remove the cover for repair, maintenance, or adjustment.

Before use, always check the product with a known source to be sure it is operating correctly.

This product is not intended for detection of hazardous voltages.

Use personal protective equipment to prevent shock and arc blast injury where hazardous live conductors are exposed.

While using this product, you may need to access other parts of a larger system. Read the safety sections of the other component manuals for warnings and cautions related to operating the system.

When incorporating this equipment into a system, the safety of that system is the responsibility of the assembler of the system.

## To avoid fire or personal injury

### Use proper power cord

Use only the power cord specified for this product and certified for the country of use. Do not use the provided power cord for other products.

### Ground the product

This product is grounded through the grounding conductor of the power cord. To avoid electric shock, the grounding conductor must be connected to earth ground. Before making connections to the input or output terminals of the product, ensure that the product is properly grounded. Do not disable the power cord grounding connection.

### Power disconnect

The power cord disconnects the product from the power source. See instructions for the location. Do not position the equipment so that it is difficult to operate the power cord; it must remain accessible to the user at all times to allow for quick disconnection if needed.

### Connect and disconnect properly

Do not connect or disconnect probes or test leads while they are connected to a voltage source.

Use only insulated voltage probes, test leads, and adapters supplied with the product, or indicated by Tektronix to be suitable for the product.

### **Observe all terminal ratings**

To avoid fire or shock hazard, observe all rating and markings on the product. Consult the product manual for further ratings information before making connections to the product.

Do not exceed the Measurement Category (CAT) rating and voltage or current rating of the lowest rated individual component of a product, probe, or accessory. Use caution when using 1:1 test leads because the probe tip voltage is directly transmitted to the product.

Do not apply a potential to any terminal, including the common terminal, that exceeds the maximum rating of that terminal.

Do not connect a current probe to any wire that carries voltages above the current probe voltage rating.

### **Do not operate without covers**

Do not operate this product with covers or panels removed, or with the case open. Hazardous voltage exposure is possible.

### **Avoid exposed circuitry**

Do not touch exposed connections and components when power is present.

### **Do not operate with suspected failures**

If you suspect that there is damage to this product, have it inspected by qualified service personnel.

Disable the product if it is damaged. Do not use the product if it is damaged or operates incorrectly. If in doubt about safety of the product, turn it off and disconnect the power cord. Clearly mark the product to prevent its further operation.

Before use, inspect voltage probes, test leads, and accessories for mechanical damage and replace when damaged. Do not use probes or test leads if they are damaged, if there is exposed metal, or if a wear indicator shows.

Examine the exterior of the product before you use it. Look for cracks or missing pieces.

Use only specified replacement parts.

### **Do not operate in wet/damp conditions**

Be aware that condensation may occur if a unit is moved from a cold to a warm environment.

### **Do not operate in an explosive atmosphere**

### **Keep product surfaces clean and dry**

Remove the input signals before you clean the product.

### **Provide proper ventilation**

Refer to the installation instructions in the manual for details on installing the product so it has proper ventilation.

Slots and openings are provided for ventilation and should never be covered or otherwise obstructed. Do not push objects into any of the openings.

### **Provide a safe working environment**

Always place the product in a location convenient for viewing the display and indicators.

Avoid improper or prolonged use of keyboards, pointers, and button pads. Improper or prolonged keyboard or pointer use may result in serious injury.

Be sure your work area meets applicable ergonomic standards. Consult with an ergonomics professional to avoid stress injuries.

Use care when lifting and carrying the product. This product is provided with a handle or handles for lifting and carrying.



**WARNING:** The product is heavy. To reduce the risk of personal injury or damage to the device get help when lifting or carrying the product.

Use only the Tektronix rackmount hardware specified for this product.

## Probes and test leads

Before connecting probes or test leads, connect the power cord from the power connector to a properly grounded power outlet.

Keep fingers behind the protective barrier, protective finger guard, or tactile indicator on the probes. Remove all probes, test leads and accessories that are not in use.

Use only correct Measurement Category (CAT), voltage, temperature, altitude, and amperage rated probes, test leads, and adapters for any measurement.

## Service safety summary

The *Service safety summary* section contains additional information required to safely perform service on the product. Only qualified personnel should perform service procedures. Read this *Service safety summary* and the *General safety summary* before performing any service procedures.

### To avoid electric shock

Do not touch exposed connections.

### Do not service alone

Do not perform internal service or adjustments of this product unless another person capable of rendering first aid and resuscitation is present.

### Disconnect power

To avoid electric shock, switch off the product power and disconnect the power cord from the mains power before removing any covers or panels, or opening the case for servicing.

### Use care when servicing with power on

Dangerous voltages or currents may exist in this product. Disconnect power, remove battery (if applicable), and disconnect test leads before removing protective panels, soldering, or replacing components.

### Verify safety after repair

Always recheck ground continuity and mains dielectric strength after performing a repair.

## Terms in this manual

These terms may appear in this manual:



**WARNING:** Warning statements identify conditions or practices that could result in injury or loss of life.



**CAUTION:** Caution statements identify conditions or practices that could result in damage to this product or other property.

## Terms on the product

These terms may appear on the product:

- DANGER indicates an injury hazard immediately accessible as you read the marking.
- WARNING indicates an injury hazard not immediately accessible as you read the marking.
- CAUTION indicates a hazard to property including the product.

## Symbols on the product



When this symbol is marked on the product, be sure to consult the manual to find out the nature of the potential hazards and any actions which have to be taken to avoid them. (This symbol may also be used to refer the user to ratings in the manual.)

The following symbol(s) may appear on the product.



CAUTION: Refer to  
Manual



Protective Ground  
(Earth) Terminal



Earth Terminal



Chassis Ground



Mains Disconnected  
OFF (Power)



Mains Connected ON  
(Power)



Standby



WARNING: High  
Voltage

# Specifications

This chapter contains specifications for the instrument. All specifications are guaranteed unless noted as "typical." Typical specifications are provided for your convenience but are not guaranteed. Specifications that are marked with the ✓ symbol are checked in Performance Verification.

All specifications apply to all models unless noted otherwise. To meet specifications, the following conditions must first be met:

- The instrument must have been adjusted in an ambient temperature range between 18 °C and 28 °C.
- The instrument must be powered from a source that meets the specifications.
- The instrument must have been operating continuously for twenty minutes within the specified operating temperature range. (60 minutes continuous operation required if the ambient relative humidity is greater than 60%.)
- You must perform the Signal Path Compensation (SPC) operation described in the user manual and the online help. If the operating temperature changes by more than 5 °C, you must perform the SPC operation again.

## Vertical system analog channels

**Number of channels**                    ≥50 GHz models: 2+1,  
    <50 GHz models: Four channels, all identical

### Input connector

**TekConnect channels:**            TekConnect. Power supply compatible with VPI.  
**ATI channel:**                        Male 1.85 mm coax.

### Input coupling

**TekConnect channels:**            Two modes: DC, 50 ohms to a programmable termination voltage; Ground.  
    The termination can be connected to a DC voltage:  
    ≤ 1.2 V<sub>FS</sub> settings: -3.5 V to 3.5 V,  
    > 1.2 V<sub>FS</sub> settings: 0.0 V

**ATI channel:**                        DC, 50 Ω.

### ✓ Input resistance

**≤1.2 V<sub>FS</sub> settings**                    50 Ω ±3% at 18 to 28 °C (64 to 82 °F)  
    50 Ω ±4% over 5 to 45 °C (45 to 113 °F)

**>1.2 V<sub>FS</sub> settings**                    50 Ω ±4.4% over 5 to 45 °C (45 to 113 °F)

**ATI channel**                            50 Ω ±3% from 18 °C to 28 °C  
    50 Ω ±4% from 5 °C to 45 °C

### Maximum input voltage

**TekConnect channels:**            ≤1.2 V<sub>FS</sub> settings:  
    ±1.5 V relative to the termination bias (30 mA maximum)  
    ±5 V absolute maximum input

>1.2 V<sub>FS</sub> settings:

±8 V. Limited by maximum V<sub>term</sub> current and the attenuator power rating at maximum temperature.

**ATI channel:** ±0.75 V<sub>pk</sub>

**Aux channel:** ±5.0 V<sub>pk</sub>

**Input termination voltage (V<sub>Term</sub>) range, TekConnect channels**

≤1.2 V<sub>FS</sub> settings: -3.5 V to +3.5 V

>1.2 V<sub>FS</sub> settings: 0 V

**Input VSWR, typical**

Measured with a TekConnect TCA-292D adaptor and a network analyzer.

≤1.2 V<sub>FS</sub> settings: 0 – 17 GHz: 1.4:1

17 – 20 GHz: 1.6:1

20 – 33 GHz: 2.0:1

>1.2 V<sub>FS</sub> settings: 0 – 17 GHz: 1.4:1

17 – 33 GHz: 2.0:1

**ATI channel:** 0-20GHz: 1.7:1

>20-33 GHz: 2.0:1

> 33-70 GHz: 3.0:1

**Vertical resolution** 8 bits, (11 bits with averaging)

**Number of digitized bits** 8 bits

**Digitizer nonlinearity (typical)** < 1.0 DL (digitization level), differential; < 1 DL integral, independently based

**Sensitivity range**

**TekConnect channels** 62.5 mV<sub>FS</sub> to 6 V<sub>FS</sub>

**ATI channel** 100 mV<sub>FS</sub> to 300 mV<sub>FS</sub>.

✓ **DC gain accuracy** ± 2%

✓ **DC voltage measurement accuracy, Sample, Average, and Hi-Res modes** Net offset = offset - (position × volts/division).

Full scale setting	DC measurement accuracy
62.5 mV <sub>FS</sub> – 6 V <sub>FS</sub> <sup>1</sup>	±(Gain accuracy ×   vertical value - net offset  ) + offset accuracy + 0.4% × FS
<b>Delta voltage reading</b>	
Table continued...	

<sup>1</sup> For ATI channels, the full scale settings range is 100 mV<sub>FS</sub> to 300 mV<sub>FS</sub>.

Full scale setting	DC measurement accuracy
62.5 mV <sub>FS</sub> – 6 V <sub>FS</sub>	$\pm(\text{Gain accuracy} \times  \text{Delta voltage measured}  + 0.008 \times \text{FS})$

**Position range**  $\pm 5$  divisions

#### Offset range

##### TekConnect channels

Full Scale voltage range	Offset range
62.5 mV <sub>FS</sub> – 1.2 V <sub>FS</sub>	$\pm 3.4 \text{ V}$
>1.2 V <sub>FS</sub> – 6 V <sub>FS</sub>	$\pm 6 \text{ V}$

##### ATI channel

Full Scale voltage range	Offset range
100 mV <sub>FS</sub> – 300 mV <sub>FS</sub>	$\pm 300 \text{ mV} - (10 \text{ div} \times \text{Volts/div})$

#### ✔ Offset accuracy

Net offset = offset - (position × volts/division).

Full scale voltage range	Offset accuracy
62.5 mV <sub>FS</sub> to 1.2 V <sub>FS</sub> (TekConnect channels)	$\pm(0.4\%   \text{net offset}  + 0.2\%   \text{net offset} - \text{Vterm setting}  + 2.5 \text{ mV} + 1\% \text{ FS})$
>1.2 V <sub>FS</sub> to 6 V <sub>FS</sub> (TekConnect channels)	$\pm(0.6\%   \text{net offset}  + 13.4 \text{ mV} + 1\% \text{ FS})$
100 mV <sub>FS</sub> to 300 mV <sub>FS</sub> (ATI channel)	$\pm(0.35\%   \text{net offset}  + 2 \text{ mV} + 1\% \text{ FS})$

#### ✔ Analog bandwidth

Bandwidth with a TCA292D adapter on TekConnect channels or directly into ATI channel.

Ambient temperature 18°C to 28°C assumed for all guaranteed bandwidth specifications.

Enhanced bandwidth is guaranteed at the following full scale (FS) stepped gain settings:

TekConnect channels: 62.5 mV, 100 mV, 200 mV, 500 mV, 1 V, 2 V, and 5 V.

ATI channel: All settings from 100 mV through 300 mV.

Instrument	Channel	BW settings	Bandwidth <sup>2</sup>	Sample rate
DPO77002SX	ATI, 1 Ch	70 GHz BWE	>67 GHz 70 GHz typical	200 GS <sup>3</sup>
DPO77002SX DPO73304SX	TekConnect, 2 Ch	No BWE	>33 GHz	All
DPO77002SX DPO73304SX	TekConnect, 2 Ch	33 GHz BWE	>33 GHz	100 GS/s
DPO77002SX DPO73304SX	TekConnect, 2 Ch TekConnect, 4 Ch	23 GHz BWE	>23 GHz	50 GS/s

DPO75902SX	ATI, 1 Ch	59 GHz BWE	>59 GHz	200 GS
DPO75902SX DPO75002SX	ATI, 1 Ch	50 GHz BWE	>50 GHz	200 GS
DPO75902SX	TekConnect	No BWE	>33 GHz	All
DPO75002SX	TekConnect	No BWE	>25 GHz	All
		25 GHz BWE	>25 GHz	100 GS/s
		23 GHz BWE	>23 GHz	50 GS/s
DPO72504SX	TekConnect	25 GHz BWE	>25 GHz	100 GS/s
		23 GHz BWE	>23 GHz	50 GS/s
DPO72304SX	TekConnect	No BWE	>23 GHz	50 GS/s, 100 GS/s
		23 GHz BWE	>23 GHz	50 GS/s, 100 GS/s
DPO72004SX	TekConnect	20 GHz BWE	>20 GHz	50 GS/s, 100 GS/s
DPO71604SX	TekConnect	16 GHz BWE	>16 GHz	50 GS/s, 100 GS/s
DPO71304SX	TekConnect	13 GHz BWE	>13 GHz	50 GS/s, 100 GS/s

**TekConnect channel**

Typical temperature derating			
Frequency	TC, (dB/°C)	5 °C	45 °C
DC - 5 GHz	0.005 dB/°C	0.07	-0.09
10 GHz	0.010 dB/°C	0.13	-0.17
15 GHz	0.025 dB/°C	0.33	-0.43
20 GHz	0.045 dB/°C	0.59	-0.77
23 GHz	0.10 dB/°C	1.30	-1.70

Table continued...

<sup>2</sup> To determine the amount of performance derating above the temperature limit, use the Typical Temperature Variation table.

Typical temperature derating			
Frequency	TC, (dB/°C)	5 °C	45 °C
25 GHz	0.10 dB/°C	1.30	-1.70
30 GHz	0.115 dB/°C	1.50	-1.96
33 GHz	0.160 dB/°C	2.08	-2.72

**ATI channel**

Typical temperature derating			
Frequency	TC, (dB/°C)		
DC - 10 GHz	0.002 dB/°C		
15 GHz	0.005 dB/°C		
20 GHz	0.01 dB/°C		
30 GHz	0.05 dB/°C		
40 GHz	0.07 dB/°C		
50 GHz	0.05 dB/°C		
60 GHz	0.05 dB/°C		
67 GHz	0.05 dB/°C		

**Frequency response tolerance**

**All modes, BWE on, 18 °C to 28 °C (typical)**

To determine the amount of performance derating above the temperature limit, use the Typical Temperature Variation table

**TekConnect channel:**

Step settings TekConnect channels: 77.5 mV<sub>FS</sub>, 151 mV<sub>FS</sub>, 302 mV<sub>FS</sub>, 605 mV<sub>FS</sub>, 1210 mV<sub>FS</sub>, 1620 mV<sub>FS</sub>, 3240 mV<sub>FS</sub>

±0.5 dB from DC to 50% of nominal BW

±1.5 dB from 50% to 80% of nominal BW

All other gain settings:

±1.0 dB from DC to 50% of nominal BW

±2.0 dB from 50% to 80% of nominal BW

**ATI channel:**

All volts/div settings

±0.5 dB from DC to 20 GHz

±0.75 dB from >20 GHz to 30 GHz

±1.25 dB from >30 GHz to 68.5 GHz

±2 dB from >68.5 GHz to 69.5 GHz

+2 / -3 dB at 70 GHz

<sup>3</sup> 200 GS/s is the only sample rate available on the ATI channel.

**TekConnect channel**

Typical temperature derating			
Frequency	TC, (dB/°C)	5 °C	45 °C
DC - 5 GHz	0.005 dB/°C	0.07	-0.09
10 GHz	0.010 dB/°C	0.13	-0.17
15 GHz	0.025 dB/°C	0.33	-0.43
20 GHz	0.045 dB/°C	0.59	-0.77
23 GHz	0.10 dB/°C	1.30	-1.70
25 GHz	0.10 dB/°C	1.30	-1.70
30 GHz	0.115 dB/°C	1.50	-1.96
33 GHz	0.160 dB/°C	2.08	-2.72

**ATI channel**

Typical temperature derating			
Frequency	TC, (dB/°C)		
DC - 5 GHz	0.005 dB/°C		
DC - 10 GHz	0.002 dB/°C		
15 GHz	0.005 dB/°C		
20 GHz	0.01 dB/°C		
30 GHz	0.05 dB/°C		
40 GHz	0.07 dB/°C		
50 GHz	0.05 dB/°C		
60 GHz	0.05 dB/°C		

**Calculated rise time (typical)**

**Table 1: Calculated risetimes for specified instrument bandwidths**

Instrument bandwidth	BWE On		BWE Off	
	10% - 90%	20% - 80%	10% - 90%	20% - 80%
70 GHz	5.6 ps	4.3 ps	n/a	n/a
50 GHz	7.8 ps	6 ps	n/a	n/a
33 GHz	13 ps	9 ps	21 ps	14 ps
25 GHz	16 ps	12 ps	22 ps	15 ps
23 GHz	17 ps	13 ps	24 ps	16 ps
20 GHz	22 ps	15 ps	25 ps	17 ps
16 GHz	26 ps	19 ps	26 ps	18 ps
13 GHz	32 ps	23 ps	28 ps	19 ps

**Step response settling time (typical)**

The time by which the step response enters and stays below the indicated % error. Step transition occurs at the 50% amplitude point of the step leading edge.

## BWE off

Instrument	Gain setting (FS)	Settling Error	
		Amount	Time
DPO73304SX	62.5 mV, 100 mV, 200 mV, 500 mV, 1.0 V, 1.2 V, 1.4 V, 2 V, 4 V	<6%	150 ps – 400 ps
		<5.5%	400 ps – 3 ns
		<3%	3 ns – 1 ms

Instrument	Gain setting (FS)	Settling Error	
		Amount	Time
DPO77002SX TekConnect channels	62.5 mV, 100 mV, 200 mV, 500 mV, 1.0 V, 1.2 V, 1.4 V, 2 V, 4 V	<6%	150 ps – 400 ps
		<5.5%	400 ps – 3 ns
		<3%	3 ns – 1 ms
DPO75902SX TekConnect channels	62.5 mV, 100 mV, 200 mV, 500 mV, 1.0 V, 1.2 V, 1.4 V, 2 V, 4 V	<6%	150 ps – 400 ps
		<5.5%	400 ps – 3 ns
		<3%	3 ns – 1 ms
DPO75002SX TekConnect channels	62.5 mV, 100 mV, 200 mV, 500 mV, 1.0 V, 1.2 V, 1.4 V, 2 V, 4 V	<6%	150 ps – 400 ps
		<5.5%	400 ps – 3 ns
		<3%	3 ns – 1 ms
DPO73304SX	62.5 mV, 100 mV, 200 mV, 500 mV, 1.0 V, 1.2 V, 1.4 V, 2 V, 4 V	<6%	150 ps – 400 ps
		<5.5%	400 ps – 3 ns
		<3%	3 ns – 1 ms
DPO72504SX, DPO72304SX, DPO72004SX, DPO71604SX, DPO71304SX	62.5 mV, 100 mV, 200 mV, 500 mV, 1.0 V, 1.2 V, 1.4 V, 2 V, 4 V	<6%	150 ps – 400 ps
		<5%	400 ps – 3 ns
		<3%	3 ns – 1 ms

## BWE on (fastest BWE setting) (typical)

BWE on (fastest BWE setting) Instrument Gain setting (FS) Settling

Instrument	Gain setting (FS)	Settling Error	
		Amount	Time
DPO77002SX, DPO75902SX, DPO75002SX AT1 channel	100 mV, 200 mV, 300 mV	<3.5%	150 ps – 400 ps
		<2.5%	400 ps – 3 ns
		<1.5%	3 ns – 1 ms

Table continued...

Instrument	Gain setting (FS)	Settling Error	
		Amount	Time
All Models, TekConnect Channels	62.5 mV, 100 mV, 200 mV, 500 mV, 1.0 V, 1.2 V, 1.4 V, 2 V, 4 V	<3.5%	150 ps – 400 ps
		<2.5%	400 ps – 3 ns
		<1.5%	3 ns – 1 ms

Effective number of bits (typical). Average value from DC to full bandwidth of model.

70 GHz ATI Channel	4.6 bits at 250 mV FS, 200 GS/s
59 GHz ATI Channel	4.8 bits at 250 mV FS, 200 GS/s
50 GHz ATI Channel	5.0 bits at 250 mV FS, 200 GS/s
33 GHz TekConnect Channels	5.0 bits at 500 mV FS, 100 GS/s
25 GHz TekConnect Channels	5.2 bits at 500 mV FS, 100 GS/s
23 GHz TekConnect Channels	5.4 bits at 500 mV FS, 100 GS/s
20 GHz TekConnect Channels	5.5 bits at 500 mV FS, 100 GS/s
16 GHz TekConnect Channels	5.8 bits at 500 mV FS, 100 GS/s
13 GHz TekConnect Channels	5.9 bits at 500 mV FS, 100 GS/s

Noise (typical)

Gain setting, full scale, BWE off	DPO77002SX, DPO75902SX, DPO75002SX, DPO73304SX TekConnect channels
62.5 mV	0.88 mV
100 mV	0.96 mV
200 mV	1.53 mV
500 mV	4.19 mV
1 V	8.30 mV
2.0 V	18.84 mV
3.0 V	24.64 mV
4.0 V	37.91 mV
5.0 V	43.36 mV
6.0 V	47.93 mV

Gain setting, full scale, BWE off	DPO72504SX	DPO72304SX	DPO72004SX	DPO71604SX	DPO71304SX
62.5 mV	0.86 mV	0.79 mV	0.81 mV	0.74 mV	0.70 mV
100 mV	0.91 mV	0.86 mV	0.89 mV	0.82 mV	0.79 mV
200 mV	1.49 mV	1.41 mV	1.34 mV	1.30 mV	1.32 mV

Table continued...

Gain setting, full scale, BWE off	DPO72504SX	DPO72304SX	DPO72004SX	DPO71604SX	DPO71304SX
500 mV	3.57 mV	3.14 mV	3.05 mV	3.00 mV	3.05 mV
1 V	6.74 mV	6.10 mV	6.06 mV	5.90 mV	6.08 mV
2.0 V	16.8 mV	14.19 mV	13.69 mV	13.07 mV	13.09 mV
3.0 V	21.82 mV	19.09 mV	18.70 mV	18.37 mV	18.37 mV
4.0 V	31.06 mV	26.01 mV	26.72 mV	25.35 mV	25.55 mV
5.0 V	35.25 mV	31.84 mV	31.58 mV	30.52 mV	30.62 mV
6.0 V	40.33 mV	36.97 mV	36.25 mV	35.91 mV	36.33 mV

Gain setting, full scale, BWE on	DPO77002SX, DPO75902SX, DPO75002SX, DPO73304SX TekConnect channels	
	100 GS/s	50 GS/s
62.5 mV	0.84 mV	0.84 mV
100 mV	0.93 mV	0.93 mV
150 mV	1.31 mV	1.29 mV
200 mV	1.52 mV	1.60 mV
300 mV	2.49 mV	2.52 mV
400 mV	2.92 mV	3.12 mV
500 mV	3.55 mV	3.80 mV
600 mV	4.86 mV	4.86 mV
700 mV	5.25 mV	5.39 mV
800 mV	5.76 mV	6.08 mV
900 mV	6.30 mV	6.66 mV
1 V	6.80 mV	7.30 mV
1.1 V	8.69 mV	9.02 mV
1.2 V	9.12 mV	9.60 mV
2.0 V	15.4 mV	14.53 mV
3.0 V	19.9 mV	19.82 mV
4.0 V	28.83 mV	27.85 mV
5.0 V	34.32 mV	32.80 mV
6.0 V	39.82 mV	38.96 mV

Gain setting, full scale, BWE on	DPO72504SX		DPO72304SX	
	100 GS/s	50 GS/s	100 GS/s	50 GS/s
62.5 mV	0.85 mV	0.82 mV	0.75 mV	0.72 mV

Table continued...

Gain setting, full scale, BWE on	DPO72504SX		DPO72304SX	
	100 GS/s	50 GS/s	100 GS/s	50 GS/s
100 mV	0.91 mV	0.92 mV	0.78 mV	0.82 mV
150 mV			1.08 mV	1.19 mV
200 mV	1.38 mV	1.48 mV	1.14 mV	1.43 mV
300 mV			2.10 mV	2.29 mV
400 mV			2.58 mV	2.29 mV
500 mV	3.15 mV	3.40 mV	2.65 mV	3.38 mV
600 mV			4.14 mV	4.42 mV
700 mV			4.64 mV	4.96 mV
800 mV			5.08 mV	5.52 mV
900 mV			5.63 mV	6.13 mV
1 V	5.90 mV	6.7 mV	5.09 mV	6.54 mV
1.1 V			7.79 mV	8.20 mV
1.2 V			8.28 mV	8.72 mV
2.0 V	13.1 mV	14.74 mV	11.66 mV	14.65 mV
3.0 V	17.69	20.43 mV	15.31 mV	20.51 mV
4.0 V	25.46 mV	28.44 mV	21.61 mV	27.84 mV
5.0 V	29.61 mV	33.85 mV	25.69 mV	34.07 mV
6.0 V	35.04 mV	38.68 mV	29.65 mV	39.18 mV

Gain setting, full scale, BWE on	DPO72004SX		DPO71604SX		DPO71304SX	
	100 GS/s	50 GS/s	100 GS/s	50 GS/s	100 GS/s	50 GS/s
62.5 mV	0.76 mV	0.80 mV	0.78 mV	0.77 mV	0.71 mV	0.69 mV
100 mV	0.82 mV	0.88 mV	0.77 mV	0.81 mV	0.68 mV	0.73 mV
150 mV			0.94 mV	1.01 mV	0.88 mV	0.95 mV
200 mV	1.13 mV	1.38 mV	1.04 mV	1.18 mV	0.99 mV	1.14 mV
300 mV			1.58 mV	1.8 mV	1.57 mV	1.79 mV
400 mV			1.82 mV	2.20 mV	1.82 mV	2.21 mV
500 mV	2.55 mV	3.18 mV	2.17 mV	2.66 mV	2.2 mV	2.69 mV
600 mV			3.02 mV	3.46 mV	3.01 mV	3.43 mV
700 mV			3.28 mV	3.85 mV	3.25 mV	3.80 mV
800 mV			3.61 mV	4.37 mV	3.56 mV	4.29 mV
900 mV			3.96 mV	4.81 mV	3.89 mV	4.69 mV
1 V	5.04 mV	6.33 mV	4.29 mV	5.29 mV	4.2 mV	5.14 mV
1.1 V			5.48 mV	6.94 mV	5.45 mV	6.74 mV

Table continued...

Gain setting, full scale, BWE on	DPO72004SX		DPO71604SX		DPO71304SX	
	100 GS/s	50 GS/s	100 GS/s	50 GS/s	100 GS/s	50 GS/s
1.2 V			5.75 mV	7.50 mV	5.73 mV	7.28 mV
2.0 V	11.19 mV	13.81 mV	9.70 mV	12.23 mV	9.88 mV	11.87 mV
3.0 V	15.12 mV	18.96 mV	12.98 mV	16.55 mV	13.19 mV	16.81 mV
4.0 V	21.3 mV	27.17 mV	19.56 mV	23.17 mV	18.64 mV	21.32 mV
5.0 V	25.0 mV	32.32 mV	22.82 mV	27.79 mV	21.82 mV	26.03 mV
6.0 V	29.53 mV	37.66 mV	26.65 mV	32.42 mV	25.74 mV	31.45 mV

Gain setting, full scale, ATI channel	DPO77002SX, DPO75902SX, DPO75002SX
100 mV	1.19 mV
200 mV	1.76 mV
250 mV	2.10 mV
300 mV	2.49 mV

#### Channel-to-channel crosstalk (channel isolation), typical

Input frequency range (up to the rated bandwidth). Assumes two channels with the same scale and bandwidth settings. The limits apply up to the bandwidth of the particular instrument.

ATI models		
Specified channels	Instrument frequency range	Isolation
ATI channels (isolation between any two [or more] ATI channels in separate units), requires UltraSync	DC to 70 GHz	70 dB
TekConnect channels in an ATI unit (isolation between channels 1 and 3)	DC to 33 GHz	60 dB
TekConnect channels to ATI channel (isolation between channels 1 and 3 to channel 2)	DC to 4 GHz	55 dB
	>4 GHz to 10 GHz	45 dB
	>10 GHz to 20 GHz	35 dB
	>20 GHz to 30 GHz	30 dB
	>30 GHz to 33 GHz	27 dB
ATI channel to TekConnect (non-ATI) channels (isolation between channel 2 and channels 1 or 3)	DC to 3 GHz	55 dB
	>3 GHz to 12 GHz	40 dB
	>12 GHz to 33 GHz	30 dB
	>33 to 70 GHz	60 dB

TekConnect models (non-ATI)		
Specified channels	Instrument frequency range	Isolation
Isolation between channels 1 or 2 and channels 3 or 4	DC to 33 GHz	60 dB
Isolation between channels 1 and 2, or channels 3 and 4	DC to 2 GHz	60 dB
	>2 to 10 GHz	42 dB
	>10 to 20 GHz	35 dB
	>20 to 33 GHz	30 dB

**Measurement category** The measuring terminals on this product are not rated for connection to mains or Measurement Category II, III or IV circuits.

**TekConnect interface** The instrument TekConnect channels support the TekConnect interface.

## Horizontal and acquisition system

**Delay between channels, full bandwidth, equivalent time, BWE off, without deskew (typical)**  $\leq 1$  ps between any two channels at any gain setting at  $25\text{ }^{\circ}\text{C} \pm 5\text{ }^{\circ}\text{C}$ .  
Derate linearly to  $\leq 3$  ps at  $5\text{ }^{\circ}\text{C}$  and  $45\text{ }^{\circ}\text{C}$

**Delay between channels, BWE (typical)**  $\leq 500$  fs between any two channels within the same box at any gain setting at  $25\text{ }^{\circ}\text{C} \pm 5\text{ }^{\circ}\text{C}$  prior to any user adjustment. Manual adjustment available with 10 fs minimum resolution. Derate linearly to  $\leq 1.5$  ps at  $5\text{ }^{\circ}\text{C}$  and  $45\text{ }^{\circ}\text{C}$ .

**Channel skew stability, UltraSync (typical)**  $\leq 250$  fs<sub>RMS</sub> between any two channels between instruments at any gain setting at  $25\text{ }^{\circ}\text{C} \pm 5\text{ }^{\circ}\text{C}$ . Derate linearly to  $\leq 3$  ps at  $5\text{ }^{\circ}\text{C}$  and  $45\text{ }^{\circ}\text{C}$ .

**Real-time sample rate range**

Channels	Sample rate, maximum
	(Standard)
TekConnect channels	Up to 100 GS/s
ATI channels	200 GS/s only

### Equivalent-time sample rate or interpolated waveform rate range

Equivalent-time acquisition can be enabled or disabled. When disabled, waveforms are interpolated at the fastest time base settings.  
Up to 5 TS/s (waveform interval down to 0.2 ps) in E.T. and 0.2 ps resolution in trigger placement.

**Maximum record length, sample mode**

The maximum record length depends on the installed record length options. Maximum record length is less in serial trigger mode, hi-res mode, or when using the FIR filter.

500,000,000 points (all channels), 1 G samples on 1–2 channels at 50 GS/s and 100 GS/s sample rates or greater (interpolated or equivalent time)

**Maximum record length, HiRes mode** Half the record length of sample mode

**Record length limits**

Operation	4 X 50 GS/s Acquisition	2 x 100 GS/s Acquisition	1 x 200 GS/s Acquisition
Display acquired waveform	500 Msamples	1 Gsamples	1 Gsamples
Waveform data CURVE? output any PI	500 Msamples	1 Gsamples	1 Gsamples
Math1 = Ch1 - Ch3	250 Msamples	250 Msamples	250 Msamples
Arbfiltr (Ch1, "filter")			
FFTMag(Ch1)			
Reference Waveforms (Rn)	1 Gsamples	1 Gsamples	1 Gsamples

**Seconds division range** Fastest sweep speed is 10 ps per division

**Internal time-base reference frequency** 10 MHz  
Electronically adjustable over about  $\pm 10$  ppm.

✓ **Time base accuracy**  $\pm 0.8 \times 10^{-6}$  (within 1<sup>st</sup> year),  $\pm 0.3 \times 10^{-6}$  aging/year after first year when operated within 23° C  $\pm 5^\circ$  C after 30 minute warm-up.  
Typical:  $\pm 0.1 \times 10^{-6}$  initial accuracy after adjustment.

**Timing jitter (aperture uncertainty), (typical)** Measured at the maximum sample rate.

**External Reference Low with ~0 dBm input drive at 10 MHz**

TekConnect:

<100 fs rms for record durations less than 10  $\mu$ s

<120 fs rms for record durations less than 100  $\mu$ s

<140 fs rms for record durations less than 10 ms

<300 fs rms for record durations less than 10 s

ATI:

<65 fs rms for record durations less than 10  $\mu$ s

**External Reference Hi with ~0 dBm input drive at 10 MHz**

TekConnect:

<100 fs rms for record durations less than 2  $\mu$ s

<500 fs rms for record durations less than 10 s

ATI:

<65 fs rms for record durations less than 10  $\mu$ s

For external reference in high (tracking) mode, the input reference must be low noise and the edge slew rate must exceed 1.5 V/ns to achieve the typical jitter results.

**Internal Reference**

TekConnect:

<100 fs rms for record durations less than 10 μs

<120 fs rms for record durations less than 100 μs

<140 fs rms for record durations less than 5 ms

ATI:

<65 fs rms for record durations less than 10 μs

For internal reference, specification assumes no signal attached to the external reference input.

**Jitter noise floor (typical)**

Applies to time periods as long as 10.0 ns. Typical jitter noise floor is measured at the maximum, BWE enabled bandwidth:

Calculate the jitter noise floor (JNF) for a given instrument setting using the following formula:

$N_{typ}$  = typical input-referred noise spec (volts rms)

$F_N$  = 1.3 for instrument bandwidth ≤9 GHz; 1.5 for instrument bandwidth ≥10 GHz

SR = slew rate around the measurement

$F_I = (1.7 \times 10^{-2})/\text{sqrt}(2) = 1.2 \times 10^{-2}$

$t_r$  = rise time of the measurement edge

$t_j$  = timebase jitter or aperture uncertainty

$$JNF_{rms} = \sqrt{(N_{typ} \times F_N)^2 \times \left[ \left( \frac{1}{SR} \right)^2 \right] + F_I^2 \times t_r^2 + (t_j)^2}$$

The interpolated sample rate of the waveform must be at least 25 times the bandwidth of the signal being measured.

**Acquisition update rate (typical)**

DPO models

300,000 waveforms per second maximum

**✓ Delta time measurement accuracy**

The formula to calculate the maximum delta-time measurement accuracy (DTAmax) for a given instrument setting and input signal is given below (assumes insignificant signal content above Nyquist and insignificant error due to aliasing, overdrive recovery and overdrive interpolation):

$N_{typ}$  = typical input-referred noise spec (volts rms)

$F_N$  = 1.3 for instrument bandwidth ≤9 GHz; 1.5 for instrument bandwidth ≥ 33GHz, 1.8 for instrument BW > 33GHz (ATI channels)

SR<sub>1</sub> = slew rate around 1st point in measurement (1st edge)

SR<sub>2</sub> = slew rate around 2nd point in measurement (2nd edge)

TBA = timebase accuracy (2 ppm)

$$F_1 = 1.2 \times 10^{-2}$$

$t_{r1}$  = rise time of first edge

$t_{r2}$  = rise time of second edge

$t_j$  = sample jitter/aperture uncertainty (100 fs TekConnect Channels, 65 fs ATI Channel for time durations less than 10  $\mu$ s)

$t_{reading}$  = delta-time measurement (sec)

Peak-peak based on statistical accumulation of 500 waveforms.

$$DTA_{MAXpk-pk} = 10 \times \sqrt{(N_{typ} \times F_N)^2 \times \left[ \left( \frac{1}{SR_1} \right)^2 + \left( \frac{1}{SR_2} \right)^2 \right] + F_i^2 \times [t_{r1}^2 + t_{r2}^2] + (2 \times t_j^2)}$$

RMS variation in measured values.

$$DTA_{MAXrms} = \sqrt{(N_{typ} \times F_N)^2 \times \left[ \left( \frac{1}{SR_1} \right)^2 + \left( \frac{1}{SR_2} \right)^2 \right] + F_i^2 \times [t_{r1}^2 + t_{r2}^2] + (2 \times t_j^2)}$$

Time interval accuracy (two sigma) of single measurement.

$$DTA_{MAXsingle} = (2 \times DTA_{MAXrms}) + (TBA \times t_{reading})$$

The term under the square-root sign is the stability and is due to Time Interval Error (TIE). The errors due to this term occur throughout a single-shot measurement.

## Trigger specifications

Trigger jitter (typical) 10 fs using enhanced trigger placement.

Trigger jitter DC coupled A edge (typical) 10 fs using enhanced trigger placement.

1.3 ps rms for low frequency, fast rise time signal, A edge, holdoff time = 30  $\mu$ s

Trigger sensitivity (typical)

Internal DC coupled

A-Event trigger, B-Event trigger	$\leq 5\%FS$ from DC to 50 MHz $\leq 7.5\%FS$ at 5 GHz $\leq 10\%FS$ at 10 GHz $\leq 15\%FS$ at 15 GHz $\leq 35\%FS$ at 20 GHz $\leq 50\%FS$ at 25 GHz
----------------------------------	---

**Aux input 50 Ω (external trigger)**

Auxiliary input	100 mV <sub>pp</sub> from DC to 1 GHz 175 mV <sub>pp</sub> at 4 GHz 225 mV <sub>pp</sub> at 8 GHz 325 mV <sub>pp</sub> at 10 GHz 800 mV <sub>pp</sub> at 12 GHz
-----------------	---

**Trigger sensitivity TPC (typical)**

The minimum signal levels required for stable triggering of a waveform when the hardware is incapable of doing so (excessive frequency, small input).

Trigger Source	Sensitivity
A Event trigger, Ch1 – Ch4	20%×FS from DC to instrument bandwidth
B Event trigger, Ch1 – Ch4	20%×FS from DC to instrument bandwidth

**Edge trigger sensitivity, non-DC-coupled modes (typical)**

All sources, positive or negative edge, for vertical scale settings ≥10 mV/div and ≤1 V/div

Trigger Coupling	Sensitivity
NOISE REJ	15%FS from DC to 50 MHz 22.5% at 5 GHz 30%FS at 10 GHz 45%FS at 15 GHz 100%FS at 20 GHz
AC	Same as DC-coupled limits for frequencies > 100 Hz, attenuates signals <100 Hz
HF REJ	Same as DC-coupled limits for frequencies < 20 kHz, attenuates signals > 20 kHz
LF REJ	Same as DC-coupled limits for frequencies > 200 kHz, attenuates signals < 200 kHz

Table continued...

Trigger Coupling	Sensitivity
RF	Minimum hysteresis / High sensitivity
	<b>A TRIG TekConnect</b> 2.5% FS from DC to 50 MHz 2.5% FS at 5 GHz 2.5% FS at 10 GHz 5% FS at 15 GHz 7.5% FS at 20 GHz 12.5% FS at 25 GHz
	<b>B TRIG TekConnect</b> 2.5% FS from DC to 50 MHz 2.5% FS at 5 GHz 2.5% FS at 10 GHz 5% FS at 15 GHz 7.5% FS at 20 GHz 20% FS at 25 GHz
	<b>A TRIG ATI</b> 2.5% FS from DC to 50 MHz 2.5% FS at 5 GHz 2.5% FS at 10 GHz 5% FS at 15 GHz 10% FS at 20 GHz 22.5% FS at 25 GHz
	<b>B TRIG ATI</b> 2.5% FS from DC to 50 MHz 2.5% FS at 5 GHz 2.5% FS at 10 GHz 5% FS at 15 GHz 10% FS at 20 GHz 22.5% FS at 25 GHz

### Trigger level or threshold range

Trigger Source	Range
Ch1, 2, 3, or 4	Full scale
Auxiliary input	$\pm 3.65$ V
Line	0 V, Not settable

--	--

--	--

**Trigger position error (typical)**

Edge trigger, DC coupling, for a 5 division peak to peak 1 GHz sine wave signal.

Acquisition mode	Trigger Position Error
Sample, Average	$\pm$ (1 waveform sample interval + 50 ps)
Peak Detect, Envelope	$\pm$ (2 waveform sample intervals + 50 ps)

**Time range for time-qualified triggers**

Setup/Hold Violation	
Setup time	-100 ns to +100 ns
Hold time	-1 ns to +100 ns
Setup + hold time	500 ps minimum
Time qualified pattern	300 ps to 1 s
Timeout	40 ps to 1 s
Time qualified window, outside >t	40 ps to 1 s
All other types	40 ps to 1 s

**✔ Time-qualified trigger timer accuracy**

For glitch, width, time qualified runt, transition, or window and timeout triggering (40 ps to 1.0 ns typical):

Time range	Accuracy
40 ps to $\leq 50$ ns	$\pm$ (3% of setting + 15 ps)
40 ps to $\leq 1$ ns	$\pm$ (3% of setting + 15 ps) (typical)
1 ns to $\leq 50$ ns	$\pm$ (3% of setting + 15 ps)
500 ns to 1 s	$\pm$ (150 ppm x setting + 500 ps)

Setup/hold violation and time qualified pattern (40 ps to 1.0 ns typical):

300 ps to 1.01 $\mu$ s	$\pm(5\%$ of setting + 200 ps)
1.02 $\mu$ s to 1 s	$\pm(TB^4$ accuracy + 20 ns)

**Advanced trigger sensitivity (typical)**

15% x FS from DC to 10 GHz (pattern and state trigger DC to 1 GHz), not violating the minimum timing requirements for each type (for vertical settings from 6.5 mV/div to 600 mV/div at the TekConnect connector)

**Advanced trigger types minimum timing requirements (typical)**

Minimum duration of the pattern includes delay mismatch between channels.

Trigger	Minimum pulse width	Minimum rearm time	Setup time	Hold time
Width	40 ps	50 ps for time < 5 ns, 75 ps above 5 ns.	n/a	n/a
Logic-Qualified Width	40 ps	50 ps for time < 5 ns, 75 ps above 5 ns.	0 ps	100 ps
Glitch	40 ps	50 ps for time < 5 ns, 75 ps above 5 ns.	n/a	n/a
Logic-Qualified Glitch	40 ps	50 ps for time < 5 ns, 75 ps above 5 ns.	15 ps	85 ps
Timeout	n/a	50 ps for time < 5 ns, 75 ps above 5 ns.	n/a	n/a
Logic-Qualified Timeout <sup>5</sup>	n/a	50 ps for time < 5 ns, 75 ps above 5 ns.	10 ps	90 ps

Table continued...

<sup>4</sup> TB Accuracy is the Time Base Accuracy expressed as a percentage of setting

<sup>5</sup> Hold Time for logic qualified Timeout is measured from the expiration of the timer that causes the trigger.

Trigger		Minimum pulse width	Minimum rearm time	Setup time	Hold time
Window <sup>6</sup>	Enters	50 ps Inside window	75 ps rearm outside window	n/a	n/a
		0 ps transition through window			
	Exits	50 ps Outside window	75 ps rearm inside window		
Time-Qualified Window	Inside > t	50 ps Inside window	75 ps rearm outside window	55 ps	145 ps
		0 ps transition through window			
	Outside > t	50 ps Outside window	75 ps rearm inside window		
Logic Qualified Window		50 ps Inside window	75 ps rearm outside window	70 ps	30 ps
		0 ps transition through window			
		50 ps Outside window	75 ps rearm inside window		
Runt		40 ps	50 ps	n/a	n/a
Time Qualified Runt		40 ps	50 ps for time < 5 ns, 75 ps above 5 ns.	n/a	n/a
Logic-Qualified Runt		40 ps	50 ps	15 ps	85 ps
Table continued...					

<sup>6</sup> Window trigger for A trigger implemented with both triple masters basically performing edge trigger with the outputs or'ed together so it could have much better specs for minimum pulse width and rearm time (40ps/40ps) than the Time Qualified Window trigger which uses the actual window trigger circuitry and time qualifiers in the Tek46. However the B trigger also may have to use the window trigger circuitry if triple master not available so we've used the reduced specs for all window trigger modes. If you adjust the trigger levels you can get more performance out of window trigger.

Trigger	Minimum pulse width	Minimum rearm time	Setup time	Hold time
Transition <sup>7</sup>	0 ps. Triggers with equal threshold settings	50 ps for time < 5 ns, 75 ps above 5 ns.	n/a	n/a
Logic-Qualified Transition	0 ps. Triggers with equal threshold settings	50 ps for time < 5 ns, 75 ps above 5 ns.	0 ps	100 ps
Pattern	150 ps	200 ps	N.A.	N.A.
Time qualified pattern	150 ps	300 ps	N.A.	N.A.
State	1.7 GHz <sup>8</sup>	N.A.	25 ps	100 ps

Setup and hold times refer to the amount of time before and after a triggering "event" that the qualifying signal must be true. In some cases (like Glitch) the "event" is the trailing edge of the glitch.

Setup/hold violation	Clock active <sup>9</sup>	Clock inactive
(Hold times ≥ 0)	Hold time setting + 550 ps	500 ps
(Hold times < 0)	Hold time setting + 1.6 ns	500 ps

#### Envelope trigger (typical)

Minimum frequency	Maximum frequency
500 MHz	20 GHz
Minimum Burst Time	Minimum Gap
< 20 ns	< 20 ns

Frequency	Minimum sensitivity
500 MHz - 10 GHz	40% x FS
15 GHz	80% x FS
20 GHz	100% x FS

<sup>7</sup> Rearm time for transition trigger is time below lower threshold and time above upper threshold. Neither rearm time may be violated.

<sup>8</sup> Maximum frequency for clock signal in state trigger type

<sup>9</sup> Clock Active time refers to the minimum time from active to inactive edge. Clock Inactive refers to the minimum time from inactive to active clock edge. Active edge is the edge that does the clocking, inactive edge is the other edge. For example, for positive edge clock, clock active time refers to the positive pulse width and clock inactive refers to the negative pulse width.

<b>B trigger after events minimum timing requirements (typical)</b>	<b>Minimum pulse width</b>	<b>Maximum counting frequency</b>	<b>Minimum time between channels</b>
	40 ps	3.5 GHz	1 ns

**B trigger after events, event counter range** 1 to 2,000,000,000

**B trigger after time, time delay range** 3.2 ns to 3 Ms

**Variable A-Event trigger holdoff range** 250 ns to 12 s + random holdoff

**Lowest frequency for successful set level to 50% (typical)** 50 Hz

**Low speed serial trigger**

**Number of bits** 128 bits

**Baud rate limits (typical)** 10 Mbaud

## Serial trigger specifications

**High speed serial trigger number of bits** 160 bits for 8b/10b and generic NRZ data rates between 600 MBd and 14.1 GBd

**Serial interface triggering standards supported** I<sup>2</sup>C, CAN, SPI, USB, PCIe, LIN, FlexRay, RS232/422/485/UART, MIL-STD-1553, 10/100BASE-T Ethernet

**Serial trigger baud rate limits** 600 MBd to 14.1 GBd

**Serial trigger decoding types** 8b10b, NRZ

## Input-output port specifications

**Auxiliary trigger input characteristics and range** 50 Ω, ±5 V (DC plus peak AC)

**Auxiliary output logic polarity and functionality** Default output is A trigger low true (a negative edge when the A trigger event occurs). You can also program the output to A trigger high true, and B trigger low or high true.

**Auxiliary output logic levels**

<b>V<sub>out</sub> high</b>	<b>V<sub>out</sub> low (true)</b>
≥2.5 V into 1 MΩ load,	≤0.7 V into 1 MΩ load
≥1.0 V into 50 Ω load to ground	≤0.25 V into 50 Ω load to ground

**✓ Fast Edge output step amplitude and offset** 1200 mV differential into a 100 Ω load with a -300 mV common mode.

<b>Fast Edge output step frequency</b>	1 kHz $\pm$ 20%
<b>Fast Edge output step rise time (typical)</b>	30 ps directly into an input channel. To deskew a probe, use a 50 $\Omega$ terminator in series with the deskew fixture to minimize HF aberrations.
<b>Fast Edge output step aberrations (typical)</b>	$\leq \pm 1\%$ after the first 500 ns following the square wave transition. To deskew a probe, use a 50 $\Omega$ terminator in series with the deskew fixture to minimize HF aberrations.
<b>Fast Edge output skew between differential outputs.</b>	<0.8 ps skew between Positive and Negative Fast Edge Outputs.
<b>Jitter of internal Fast Edge trigger (typical)</b>	2 ps rms
<b>External reference input frequency</b>	10 MHz, 100 MHz, 12.5 GHz The instrument scans for either 10 MHz or 100 MHz. 12.5 GHz supported on separate SMA input.
<b>External reference input frequency variation tolerance (typical)</b>	Low (stable) jitter mode: $\pm 15$ ppm High (tracking) mode: $\pm 1\%$ Run SPC whenever the external reference is more than 0.1% (1000 ppm) different from the nominal reference frequency or the reference at which SPC was last run.
<b>External reference input sensitivity (typical)</b>	$\geq 200$ mV <sub>p-p</sub> (-10.0 dBm)
<b>External reference input voltage, maximum</b>	2.8 V <sub>p-p</sub> (+13 dBm)
<b>External reference input impedance (typical)</b>	R <sub>in</sub> = 50 $\Omega$
<b>12.5 GHz Clock In</b>	1.3 V <sub>p-p</sub> (6 dBm)
<b>B, C, D 12.5 GHz Clock Out (UltraSync)</b>	1.3 V <sub>p-p</sub> (6 dBm)
<b>Internal reference output voltage (typical)</b>	
<b>10 MHz Vout pk-pk</b>	> 800 mV peak-peak into 50 $\Omega$ > 1.6 V peak-peak into 1 M $\Omega$ (internally AC coupled).
<b>Input and output ports</b>	
<b>DVI-D Video port</b>	A female Digital Visual Interface (DVI-D) compatible port
<b>VGA port</b>	A female Video Graphics Array (VGA) compatible port
<b>DisplayPort</b>	Two connectors (primary, secondary) provide digital display interfaces
<b>PCIe</b>	PCIe ports to configure multi-instrument systems
<b>Trigger</b>	UltraSync trigger bus
<b>Keyboard and Mouse ports</b>	PS-2 compatible, instrument must be powered down to make connection
<b>LAN ports</b>	Two RJ-45 connectors (LAN1, LAN2), support 10BASE-T, 100BASE-TX, and Gigabit Ethernet
<b>External audio ports</b>	External audio jacks for microphone input and line output

**USB ports** Four front panel USB 2.0 connectors  
 Four rear panel USB 3.0/USB 2.0 connectors  
 One rear panel USB device connector

**USB 3.0 Device Port** 5 GBit/sec Rx and Tx (USB Super Speed native)  
 480 Mbit/sec (High Speed compatible)  
 12 Mbit/sec (Full Speed compatible)

**PCIe Device Port** PCI Express x4 Gen 2  
 5 Gbits/s per lane, 4 lanes Rx, 4 lanes Tx per port  
 20 Gbits/s upstream, 20 Gbits/s downstream per port  
 40 Gbits/s aggregate per port

**UltraSync**

**Input/Output ports** UltraSync Trigger, Data, Clock Input, and Clock Output Ports

**Maximum number of UltraSync connected Instruments** 4 synchronized Instruments  
 3 extensions per master

**Cable length** 1 Meter or 2 Meters

**Number of clock outputs** 3 SMA clock output ports to extensions (ports B,C,D)

**Number of clock inputs** 1 SMA clock input port from master (port A)

**Number of data ports** 3 bidirectional PCIe Express data communication ports (ports B,C,D). Port D is referred to as Port A when the instrument is operating as an extension and Port D when the instrument is operating as the master. iPASS Mini-SAS x4 Connector.

**Data port bandwidth** PCI Express x4 Gen2. 20 Gbits/s upstream, 20 Gbits/s downstream per port. 5 Gbits/s per lane, 4 lanes Rx, 4 lanes Tx per port. 40 Gbits/s aggregate per port.

**Number of trigger connection ports** 3 bidirectional acquisition control and trigger synchronization ports (ports B,C,D). Port D is referred to as Port A when the instrument is operating as an extension and Port D when the instrument is operating as the master.

**Crosstalk (channel isolation)** Channel isolation between any 2 channels in an Ultrasync configuration that do not reside within the same chassis.

Input frequency range (stay within BW of instrument)	Isolation
0-70 GHz	70 dB

**Data storage specifications**

**Nonvolatile memory retention time (typical)** >20 years

**Solid state drive** Waveforms and setups are stored on the solid state drive.

Solid state drive is a  $\geq 900$  GB solid state drive (removable).

## Power source specification

### Power consumption

<980 W, single instrument, maximum  
 $\leq 780$  W, single unit (typical)

**Source voltage and frequency** 100 V to 240 V<sub>RMS</sub>, 50/60 Hz  
 115 V  $\pm 10\%$ , 400 Hz  
 CAT II

## Mechanical specifications

### Weight

**DPO70000SX models** 19 kg (42 lbs) oscilloscope only

### Dimensions

#### DPO70000SX models

157 mm (6.0 in) height
452 mm (17.8 in) width
553 mm (21.8 in) depth

#### DPO70000SX models, Rackmount configuration

177 mm (7.0 in) height
440 mm (19.75 in) width
523 mm (20.6 in) depth (from rack mounting ear to back of instrument)

### Cooling

#### Required clearances

Fan-forced air circulation with no air filter	
Top	0 mm (0 in)
Bottom	6.35 mm (0.25 in) minimum or 0 mm (0 in) when standing on feet, flip stands down
Left side	76 mm (3 in)
Table continued...	

Fan-forced air circulation with no air filter	
Right side	76 mm (3 in)
Rear	0 mm (0 in) on rear feet

**Construction material** Chassis parts are constructed of aluminum alloy, front panel is constructed of plastic laminate, circuit boards are constructed of glass laminate

## Environmental specifications

### Temperature

**Operating** +5 °C to +45 °C

**Nonoperating** -20 °C to +60 °C

### Temperature


**Operating** +5 °C to +45 °C (41 °F to +113 °F), with 11 °C per hour maximum gradient, noncondensing, derated 1 °C per 300 meters (984.25 feet) above 1500 meters (4921.25 feet) altitude

**Nonoperating** -20 °C to +60 °C (-4 °F to +140 °F), with 20 °C/hour maximum gradient

### Humidity

**Operating** 8% to 80% relative humidity at up to +32 °C (+90 °F)

5% to 45% relative humidity above +32 °C (+90 °F) up to +45 °C (+113 °F), noncondensing, and is limited by a maximum wet-bulb temperature of +29.4 °C (+85 °F) (derates relative humidity to 32% at +45 °C (+113 °F))

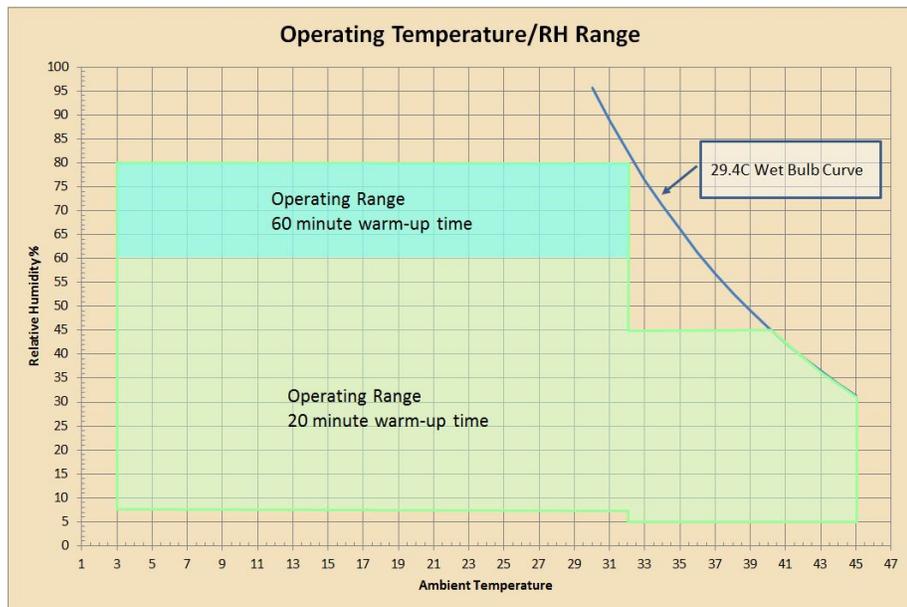

**Nonoperating** 5% to 95% relative humidity at up to +30 °C (+86 °F),

---

5% to 45% relative humidity above +30 °C (+86 °F), up to +60 °C (+140 °F), noncondensing, and is limited by a maximum wet-bulb temperature of +29.4 °C (+85 °F) (derates relative humidity to 11% at +60 °C (+140 °F))

**Altitude**

<b>Operating</b>	Up to 3,000 meters
<b>Nonoperating</b>	Up to 12,000 meters

**Altitude**

<b>Operating</b>	Up to 3,000 meters (9,843 feet), derate maximum operating temperature by 1 °C per 300 meters (984.25 feet) above 1500 meters (4921.25 feet) altitude
<b>Nonoperating</b>	Up to 12,000 meters (39,370 feet)

# Performance verification

## Performance verification

Two types of Performance Verification procedures can be performed on these products: *Brief Procedures* and *Performance Tests*. You may not need to perform all of these procedures, depending on what you want to accomplish.

If you are not familiar with operating this instrument, read the instrument user manual or explore the online help.

- To rapidly confirm that the instrument functions and was adjusted properly, perform only the brief procedures under *Self Tests*.

Advantages. These procedures are quick to do, require no external equipment or signal sources, and perform extensive functional and accuracy testing to provide high confidence that the instrument will perform properly. They can be used as a quick check before making a series of important measurements.

- To further check functionality, first do the *Self Tests* just mentioned; then do the brief procedures under *Functional Tests*.

Advantages. These procedures require minimal additional time to perform, require no additional equipment other than cables and adapters, and these procedures more completely test the internal hardware of the instrument. They can be used to quickly determine if the instrument is suitable for putting into service, such as when it is first received.

- If more extensive confirmation of performance is desired, perform the *Performance Tests* after performing the *Functional* and *Self Tests* mentioned above. [Performance tests](#) on page 47

Advantages. These procedures add direct checking of the warranted specifications that are marked with the ✓ symbol. These procedures require specific test equipment. [Equipment required](#) on page 48

## Conventions

Throughout these procedures the following conventions apply:

- Each test procedure uses the following general format:

- Title of Test
- Equipment Required
- Prerequisites
- Procedure

- Each procedure consists of as many steps, substeps, and subparts as required to do the test. Steps, substeps, and subparts are sequenced as follows:

### 1. First Step

#### a. First Substep

- First Subpart
- Second Subpart

#### b. Second Substep

### 2. Second Step

- In steps and substeps, the lead-in statement in italics instructs you what to do, while the instructions that follow tell you how to do it, as in the example step below:

*Initialize the instrument:* Pull down the File menu, select Recall Default Setup.

**STOP.** The **STOP** notation at the left is accompanied by information you must read to do the procedure properly.

- The term "toolbar" refers to a row of buttons at the top of the display. The term "menu bar" refers to a row of menus at the top of the display. You can switch between toolbar and menu bar operating modes by using the menu at the top right of the toolbar or menu bar. (See [Figure 1](#) on page 41.)
- Item numbers in the equipment required lists refer to the equipment. (See [Equipment required](#) on page 48.)



Figure 1: Toolbar and menu bar

- The procedures assume you have connected a mouse to the instrument so you can click on the screen controls. If you have not connected a mouse, you can use the touch screen to operate the screen controls.

## Brief procedures

The *Self Tests* use internal routines to confirm basic functionality and proper adjustment. No test equipment is required to do these test procedures.

The *Functional Tests* utilize the probe-compensation output at the front panel as a test-signal source for further verifying that the instrument functions properly. A BNC cable and an adaptor or a probe, depending on your instrument model are required to do these test procedures.

## Self tests

This procedure uses internal routines to verify that the instrument functions and was adjusted properly. No test equipment or hookups are required.

Equipment required	Prerequisites
None	Power on the instrument and allow a 20 minute warm-up before doing this procedure.

1. *Verify that internal diagnostics pass:* Do the following substeps to verify passing of internal diagnostics.
  - a. *Display the System diagnostics menu:*  
If the instrument is in toolbar mode, put the instrument into menu bar mode.  
Pull down the **Utilities** menu and select **Instrument Diagnostics**. . . . This displays the diagnostics control window.
  - b. *Run the System Diagnostics:*
    - First disconnect any input signals from all channels.
    - Click the **Run** button in the diagnostics control window.

- c. *Wait:* The internal diagnostics do an exhaustive verification of proper instrument function. This verification may take several minutes. When the verification is finished, the resulting status will appear in the diagnostics control window.
  - d. *Verify that no failures are found and reported on-screen.* All tests should pass.
  - e. *Run the signal-path compensation routine:*  
 Pull down the **Utilities** menu and select **Instrument Calibration**. . . . This displays the instrument calibration control window.  
 If required because the instrument is in service mode, select the **Signal Path** button under Calibration Area.  
 Click the **Run SPC** button to start the routine.
  - f. *Wait:* Signal-path compensation may take five to fifteen minutes to run.
  - g. *Confirm signal-path compensation returns passed status:* Verify that the word **Pass** appears in the instrument calibration control window.
2. *Return to regular service:* Click the **X** (close) button to exit the instrument calibration control window.

## Functional tests

The purpose of these procedures is to confirm that the instrument functions properly. The only equipment required is a BNC or SMA cable and an adapter or the instrument probe. If you need to store settings during these procedures, access the local C: drive and store them in the TekScope > Setups directory.

**STOP.** These procedures verify functions; that is, they verify that the instrument features operate. They do not verify that they operate within limits.

Therefore, when the instructions in the functional tests that follow call for you to verify that a signal appears on-screen "that is about five divisions in amplitude" or "has a period of about six horizontal divisions," etc., do NOT interpret the quantities given as limits. Operation within limits is checked in Performance Tests. (See [Performance tests](#) on page 47.)

**STOP.** DO NOT make changes to the front-panel settings that are not called out in the procedures. Each verification procedure will require you to set the instrument to certain default settings before verifying functions. If you make changes to these settings, other than those called out in the procedure, you may obtain invalid results. In this case, just redo the procedure from step 1.

When you are instructed to press a front-panel or screen button, the button may already be selected (its label will be highlighted). If this is the case, it is not necessary to press the button.

## Verify all analog input channels

Equipment required	Prerequisites
One SMA cable (item <a href="#">19</a> on page 50) One adapter (item <a href="#">18</a> on page 50) One termination (item <a href="#">4</a> on page 48) one attenuator (item <a href="#">3</a> on page 48)	None

1. *Initialize the instrument:* Pull down the **File** menu, select Recall Default Setup.
2. *Hook up the signal source:* Connect the equipment as shown in the following figure to the channel input you want to test (beginning with Ch 1). Terminate the unused Fast Edge output.

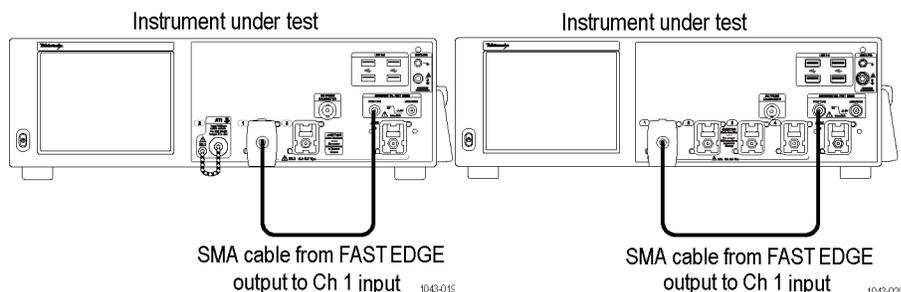


Figure 2: Universal test hookup for functional tests - Ch 1 shown

3. Turn off all channels:

Pull down the **Vertical** menu, select Vertical Setup. Select each Channel tab and verify that the **Display** is off.

4. Select the channel to test: Press the Display button for the channel you are currently testing. The channel display comes on.

5. Set up the instrument:



**Note:** If the AutoSet Undo window appears, click the X.

- Pull down the **Horiz/Acq** menu, select Autoset. This sets the horizontal and vertical scale and vertical offset for a usable display and sets the trigger source to the channel you are testing.
- Pull down the **Vertical** menu, select Vertical Setup. Confirm that the Ch1 Offset is about **-300 mV**.

6. Verify that the channel is operational: Confirm that the following statements are true.

- Verify that the vertical scale readout and the waveform amplitude for the channel under test. (See [Table 2](#) on page 43.)

**Table 2: Vertical settings**

Setting	Without probe	ATI input with attenuator
Scale	100 mV	30 mV
Waveform amplitude	about 4.5 to 6.5 divisions	about 6 divisions

- The vertical **Position** control (for the channel you are testing) moves the signal up and down the screen.
- Increasing the vertical **Scale** (for the channel you are testing) decreases the amplitude of the waveform on-screen, decreasing the scale increases the amplitude, and returning the scale to the original scale setting returns the original amplitude for that scale setting. (See [Table 2](#) on page 43.)

7. Verify that the channel acquires in all acquisition modes: Pull down the **Horiz/Acq** menu to select **Horizontal/Acquisition Setup**. . . . Click the **Acquisition** tab in the control window that displays. Click each of the acquisition modes and confirm that the following statements are true.

- Sample mode displays an actively acquiring waveform on-screen. (Note that there is a small amount of noise present on the square wave).
- Peak Detect mode displays an actively acquiring waveform on-screen with the noise present in Sample mode "peak detected".
- Hi Res mode displays an actively acquiring waveform on-screen with the noise that was present in Sample mode reduced.
- Average mode displays an actively acquiring waveform on-screen with the noise reduced.
- Envelope mode displays an actively acquiring waveform on-screen with the noise displayed.



**Note:** Default setup enables enhanced triggering. Enhanced triggering can cause a slower acquisition rate that can be noticed in waveform database mode. As waveform database mode acquires 100,000 samples, the display intensity will increase, be cleared, and then the process will start over. When enhanced triggering is turned off, and with the specified settings and input signal, the display reaches full intensity right away.

- Waveform Database mode displays an actively acquiring waveform on-screen with the noise displayed.
8. *Test all channels:* Repeat steps 2 on page 42 through 7 on page 43 until all TekConnect input channels are verified.
  9. If your instrument has an ATI input, repeat steps 2 on page 42 through 7 on page 43 with the Fast Edge signal connected to the ATI input channel through an attenuator (you may need to adjust the position).
  10. *Remove the test hookup:* Disconnect the equipment from the instrument.

## Verify the time base

Equipment required	Prerequisites
One SMA cable (item 19 on page 50)	None
One adapter (item 18 on page 50)	
One termination (item 4 on page 48)	

1. *Initialize the instrument:* Pull down the **File** menu, select Recall Default Setup.
2. *Hook up the signal source:* Connect the fast edge output to the Ch 1 input as shown in the following figure. Terminate the unused Fast Edge output.

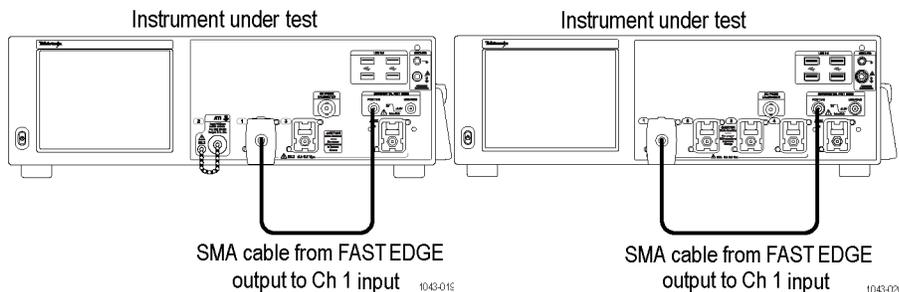


Figure 3: Setup for time base test

3. *Set up the instrument:* Pull down the **Horiz/Acq** menu, select Autoset.
4. Set the **Vertical Scale** to **100 mV/div**.
5. *Set the time base:* Set the horizontal **Scale** to **200  $\mu$ s/div**. The time-base readout is displayed at the bottom of the graticule.
6. *Verify that the time base operates:* Confirm the following statements.
  - One period of the square-wave signal is about five horizontal divisions on-screen for the 200  $\mu$ s/div horizontal scale setting.
  - Decreasing the horizontal **Scale** expands the waveform on-screen (more horizontal divisions per waveform period), increasing the scale contracts it, and returning the horizontal scale to 200  $\mu$ s/div returns the period to about five divisions.
  - Changing the horizontal **Position** positions the signal left and right on-screen.
7. *Verify horizontal delay:*
  - a. *Center a rising edge on screen:*
    - Set the horizontal **Position** so that the rising edge where the waveform is triggered is lined up with the center horizontal graticule.
    - Change the horizontal **Scale** to **20  $\mu$ s/div**. The rising edge of the waveform should remain near the center graticule and the falling edge should be off screen.
  - b. *Turn on and set horizontal delay:*
    - Pull down the **Horiz/Acq** menu to select **Horizontal/Acquisition Setup** . . .

- Click the **Horizontal** tab in the control window that displays.
  - Click the **Delay Mode** button to turn delay on.
  - Double click the **Horiz Delay** control in the control window to display the pop-up keypad. Click the keypad buttons to set the horizontal delay to **1 ms** and then click the **ENTER** key.
- c. *Verify the waveform:* Verify that a rising edge of the waveform is within a few divisions of center screen.
- d. *Adjust the horizontal delay:* Change the horizontal delay setting. Verify that the rising edge shifts horizontally.
- e. *Verify the delay toggle function:*
- Adjust the delay setting to center the rising edge horizontally on the screen.
  - Change the horizontal **Scale** to **40 ns/div**. The rising edge of the waveform should remain near the center graticule.
  - Readjust the delay setting to position the rising edge 2 divisions to the right of the center graticule line.
  - Click the **Delay Mode** button several times to toggle delay off and on and back off again. Verify that the display switches quickly between two different points in time (the rising edge shifts horizontally on the display).
8. *Remove the test hookup:* Disconnect the test hookup from the instrument.

## Verify the A (Main) and B (Delayed) trigger systems

Equipment required	Prerequisites
One SMA cable (item 19 on page 50)	None
One adapter (item 18 on page 50)	
One termination (item 4 on page 48)	

1. *Initialize the instrument:* Pull down the **File** menu, select Recall Default Setup.
2. *Hook up the signal source:* Connect the probe fast edge output to the Ch 1 input as shown in the following figure. Terminate the unused Fast Edge output.

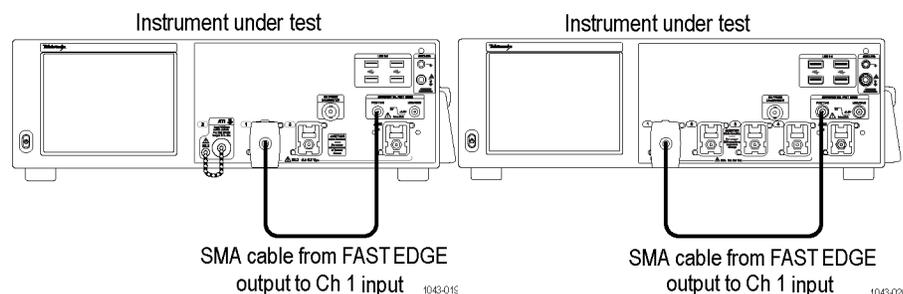


Figure 4: Setup for trigger test

3. *Set up the instrument:* Pull down the **Horiz/Acq** menu, select Autoset.
4. Set the **Vertical Scale** to **120 mV/div**.
5. *Verify that the main trigger system operates:* Confirm that the following statements are true.
  - Pull down the **Trig** menu, select A Event (Main) Trigger Setup.
  - The trigger level readout for the A (main) trigger system changes with the trigger-**Level** control.
  - The trigger-**Level** control can trigger and untrigger the square-wave signal as you level setting. (Leave the signal untriggered).
  - Pushing the **Set to 50%** button sets the trigger level to the 50% amplitude point of the signal and triggers the signal that you just left untriggered. (Leave the signal triggered.)
6. *Verify that the delayed trigger system operates:*

a. *Set up the delayed trigger:*

Pull down the **Trig** menu and select **A – B Trigger Sequence. . .** This displays the A →B Sequence tab of the trigger setup control window.

Click the **Trig After Time** button under A Then B.

Click the **B Trig Level** control in the control window.

Select the Options tab and then set the trigger mode to **Norm**.

b. *Confirm that the following statements are true:*

- The trigger-level readout for the B trigger system changes as you adjust the B trigger level.
- As you adjust the trigger level, the square-wave signal can become triggered and untriggered. (Leave the signal triggered.)

c. *Verify the delayed trigger counter:*

- Double click the **Trigger Delay** control to pop up a numeric keypad for that control.
- Click the keypad to enter a trigger delay time of **1 second** (click 1 and None) and then click **Enter**.
- If you have the optional front panel, verify that the trigger **Ready** indicator on the front panel flashes about once every second as the waveform is updated on-screen.
- If you do not have the optional front panel, verify that the number of acquisitions increases about once every second as the waveform is updated on-screen.

7. *Remove the test hookup:* Disconnect the test hookup from the instrument.

## Verify the file system

Equipment required	Prerequisites
One SMA cable (item 19 on page 50)	None
One adapter (item 18 on page 50)	
One termination (item 4 on page 48)	

1. *Initialize the instrument:* Pull down the **File** menu, select Recall Default Setup.
2. *Hook up the signal source:* Connect the fast edge output to the Ch 1 input as shown in the following figure. Terminate the unused Fast Edge output.

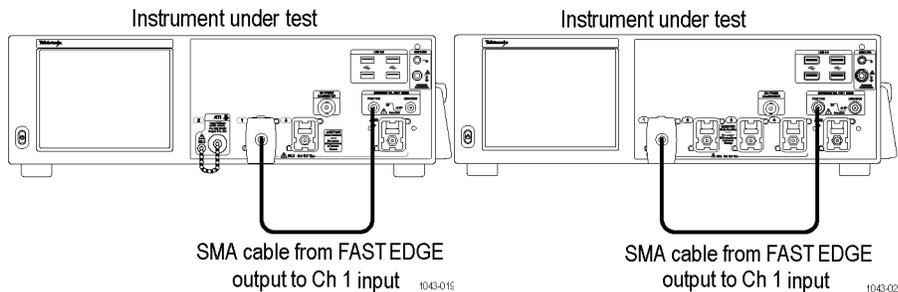


Figure 5: Setup for the file system test

3. *Set up the instrument:* Pull down the **Horiz/Acq** menu, select Autoset.
4. Set the **Vertical Scale** to **120 mV/div**.
5. *Set the time base:* Set the horizontal **Scale** to **1 ms/div**. The time-base readout is displayed at the bottom of the graticule.
6. *Save the settings:*

- a. Pull down the **File** menu to select **Save As. . . >Setup. . .**. This displays the instrument Save As control window.
  - b. Note the default location and file name and then click the **Save** button to save the setup to the default file name and location.
7. *Change the settings again:* Set the horizontal **SCALE** to **200  $\mu$ s/div**.
8. *Verify the file system works:*
- a. Pull down the **File** menu to select **Recall**. This displays the instrument Recall control window.
  - b. Click **Recall What > Setup**.
  - c. Locate and then double click the setup file that you previously stored.
  - d. Verify that the instrument retrieved the saved setup. Do this by noticing the horizontal **SCALE** is again 1 ms and the waveform shows ten cycles just as it did when you saved the setup.
9. *Remove the test hookup:* Disconnect the test hookup from the instrument.

## Performance tests

This section contains a collection of manual procedures for checking that the instrument performs as warranted.

The procedures are arranged in logical groupings: *Signal Acquisition System Checks*, *Time Base System Checks*, *Triggering System Checks*, and *Output Ports Checks*. They check all the characteristics that are designated as checked in *Specifications*. (The characteristics that are checked appear with a ✓ in *Specifications*).

**STOP.** These procedures extend the confidence level provided by the basic procedures. The basic procedures should be done first, then these procedures performed if desired.

### CAUTION:



Using settings not asked for by these procedures could damage the instrument. These procedures operate the instrument near its maximum limits. Using settings similar to, but not the settings called for by the procedures, could damage the input circuitry of the instrument. See the Maximum input voltage specification for the maximum nondestructive input voltage level.

## Prerequisites

The tests in this section comprise an extensive, valid confirmation of performance and functionality when the following requirements are met:

- The cabinet must be installed on the instrument.
- You must have performed and passed the procedures under *Self Tests*, and those under *Functional Tests*. (See [Functional tests](#) on page 42.)
- A signal-path compensation must have been done within the recommended calibration interval and at a temperature within  $\pm 5$  °C ( $\pm 9$  °F) of the present operating temperature. (If at the time you did the prerequisite *Self Tests*, the temperature was within the limits just stated, consider this prerequisite met). A signal-path compensation must have been done at an ambient humidity within 25% of the current ambient humidity and after having been at that humidity for at least 4 hours.
- The instrument must have been last adjusted at an ambient temperature between +18 °C (+64 °F) and +28 °C (+82 °F), and must have been operating for a warm-up period of at least 20 minutes (60 minutes for the DPO70000SX instruments if the humidity is >60%), and, unless otherwise noted in the procedure, the performance tests may be run with the instrument operating at an ambient temperature between +18 °C (+64 °F) and +28 °C (+82 °F). (The warm-up requirement is usually met in the course of meeting the *Self Tests* and *Functional Tests* prerequisites listed above).
- Support sensor, probe, and adapter setups to avoid stress or torque when connected to the device under test (DUT).

## Equipment required

The performance verification procedures use external, traceable signal sources to directly check warranted characteristics. The following table lists the required equipment.

### 1. Attenuator, 10X (two required)

Minimum requirements	Example	Purpose
Ratio: 10X; impedance 50 $\Omega$ ; connectors: female input, male output	BNC $\leq$ 2 GHz Tektronix part number 011-0059-03 SMA $\leq$ 18 GHz Tektronix part number 015-1003-00	Signal attenuation, bandwidth, trigger sensitivity

### 2. Attenuator, 5X

Ratio: 5X; impedance 50 $\Omega$ ; connectors: female input, male output	BNC $\leq$ 2 GHz Tektronix part number 011-0060-02 SMA $\leq$ 18 GHz Tektronix part number 015-1002-01	Signal attenuation, bandwidth, trigger sensitivity
--	---	--

### 3. Attenuator, 10 dB

2.92 mm female to 2.92 mm male, 50 $\Omega$ , 10 dB, 2 Watts	2.92 mm $\leq$ 40 GHz Tektronix part number 011-0221-00	Signal attenuation
--	---	--------------------

### 4. Termination, 50 $\Omega$

Impedance 50 $\Omega$ ; connector: male SMA	Tektronix part number 015-1022-01 (18 GHz)	Signal termination for channel delay test, trigger sensitivity
---	--	--

### 5. Cable, Precision 50 $\Omega$ Coaxial (three required)

50 $\Omega$ , 36 in, male-to-male BNC connectors	Tektronix part number 012-0482-00	Signal interconnection, Trigger out, time qualified trigger, timebase delay time, bandwidth, input resistance, delta time, generator leveling
--	-----------------------------------	---

### 6. Connector, Dual-Banana (two required)

Female BNC-to-dual banana	Tektronix part number 103-0090-00	Various accuracy tests, input resistance
---------------------------	-----------------------------------	--

### 7. Generator, DC Calibration

Variable amplitude to $\pm 7$ V; accuracy to 0.1%	Keithly 2400	Checking DC offset, gain, measurement accuracy, probe compensation out, and maximum input voltage
---	--------------	---

### 8. Timer-counter

10 MHz and 100 MHz, 1 s gate	Tektronix FCA3000 with Option MS	Checking long-term sample rate and delay time accuracy
------------------------------	----------------------------------	--

## 9. Generator, Sine-Wave

TekConnect channels: 50 MHz to at least the instrument bandwidth. Variable amplitude from 60 mV to 2.0 V <sub>p-p</sub> into 50 Ω. Frequency error <2.0%	Anritsu MG3690C RF/Microwave Signal Generator	Checking analog bandwidth, trigger sensitivity, sample-rate, external clock, trigger sensitivity, time qualified trigger, and delay-time accuracy
ATI channel: 100 MHz to at least the instrument bandwidth. Variable amplitude from 60 mV to 2.0 V <sub>p-p</sub> into 50 Ω. Frequency error <2.0%	Anritsu MG3697C RF/Microwave Signal Generator	

## 10. Meter, Level and Power Sensor

TekConnect channels, frequency range: 50 MHz to the instrument bandwidth. Amplitude range: 6 mV <sub>p-p</sub> to 2 V <sub>p-p</sub>	Rohde & Schwarz NRVS and NRV-Z15 (40 GHz)	Checking analog bandwidth and trigger sensitivity
ATI channel, frequency range: 100 MHz to the instrument bandwidth. Amplitude range: 6 mV <sub>p-p</sub> to 2 V <sub>p-p</sub>	Rhode & Schwartz NRP2 and NRP-Z57 (67 GHz)	

## 11. Splitter, Power

Instrument bandwidth ≤3 GHz: Frequency range: DC to 18 GHz. Tracking: <2.0%	Agilent part number 11667A	Checking analog bandwidth and trigger sensitivity
Instrument bandwidth >3 GHz: Frequency range: DC to 40 GHz. Tracking: <2.0%	Anritsu K241C (40 GHz)	

## 12. Cable

2.92 mm male-to-female	Gore PhaseFlex cable EL0CQ0CP0360 (40 GHz)	Checking analog bandwidth
------------------------	--	---------------------------

## 13. Adapter

K male-to-male DC to 40 GHz	Anritsu K220B	Checking analog bandwidth
-----------------------------	---------------	---------------------------

## 14. Adapter (four required)

Male N-to-female BNC	Tektronix part number 103-0045-00	Checking analog bandwidth
----------------------	-----------------------------------	---------------------------

## 15. Adapter (three required)

SMA female-to-female	Tektronix part number 015-1012-00 (18 GHz)	Checking trigger sensitivity
----------------------	--	------------------------------

## 16. Adapter (three required)

SMA male-to-female BNC	Tektronix part number 015-1018-00	Checking the delay between channels, delta time
------------------------	-----------------------------------	---

## 17. Adapter

	BNC to Minigrabber	Tektronix part number 013-0342-xx	Checking fast edge output
<b>18.</b>	Adapter (four required)		
	SMA male-to-BNC female	TCA-BNC or TCA-292mm and, if required, SMA male-to-BNC female adapter (Tektronix part number 015-0554-00 (4 GHz) or 015-1018-00)	Signal interconnection, measurement accuracy, delay time, time qualified trigger, trigger sensitivity, DC gain, offset, bandwidth, input resistance, fast edge out
		TCA-292D	
<b>19.</b>	Cable, Coaxial (three required)		
	50 $\Omega$ , 20 in, male-to-male SMA connectors	Tektronix part number 174-1427-00	Checking delta time measurement accuracy, fast edge out, trigger sensitivity
<b>20.</b>	Adapter		
	SMA "T", male to 2 SMA female	Tektronix part number 015-1016-00 (18 GHz)	Checking delta time measurement accuracy
<b>21.</b>	Adapter		
	SMA female to BNC male	Tektronix part number 015-0572-00 (4 GHz)	Used to test delta time measurement accuracy and trigger sensitivity
<b>22.</b>	Termination		
	Short circuit, SMA connector, female	Tektronix part number 015-1021-00 (18 GHz)	Checking delta time measurement accuracy
<b>23.</b>	Attenuator, 2X		
	Ratio: 2X; impedance 50 $\Omega$ ; connectors: female BNC input, male BNC output	Tektronix part number 011-0069-02 (2 GHz)	Checking delta time measurement accuracy, pulse trigger accuracy, time qualified trigger, trigger sensitivity, and channel isolation
<b>24.</b>	Digital Multimeter		
	Ohms: <60 Ohms	Keithley 2700	Checking input impedance
<b>25.</b>	Adapter		
	BNC "T", male to 2 females	Tektronix part number 103-0030-xx	Checking DC gain and offset accuracy
<b>26.</b>	Attenuator 2X		
	Ratio: 2X; impedance 50 $\Omega$ ; connectors: female input, male output	BNC $\leq$ 2 GHz Tektronix part number 011-0069-xx	Checking output signals
<b>27.</b>	Connector saver		
	Connector saver; ATI; 1.85 mm	Tektronix part number 103-0474-xx	ATI connector protection

**28. Torque wrench**

Torque wrench	Tektronix part number 067-2362-xx	Making connections
---------------	-----------------------------------	--------------------

**29. Backing wrench**

Backing wrench; ATI connector saver	Tektronix part number 103-1942-xx	Making connections
-------------------------------------	-----------------------------------	--------------------

**30. Adapter**

40 GHz, 1.85 mm female to 2.92 mm female	Tektronix part number 103-0483-xx	Making connections
18 GHz, 1.85 mm female to SMA female	Tektronix part number 103-0484-xx	

**31. Cable, coaxial**

1.85 mm male to 1.85 mm female	Gore 0F0CA0CB036.0	Checking bandwidth
--------------------------------	--------------------	--------------------

## Test record

Photocopy the test record tables and use them to record the performance test results for your instrument.

**Table 3: Test information**

Item	Recorded value
Instrument Serial Number	
Technician	
Certificate Number	
Date of Calibration	
Temperature	
RH %	

DC voltage measurement accuracy (averaged), ATI channel				
Instrument performance test	Minimum	Incoming	Outgoing	Maximum
Ch2 10 mV Vert scale setting, 0 Div position setting				
0 V offset, +30 mV input	26.0 mV	_____	_____	34.0 mV
0 V offset, -30 mV input	-34.0 mV	_____	_____	-26.0 mV
-0.2 V offset, -170 mV input	-174.7 mV	_____	_____	-165.3 mV
+0.2 V offset, 170 mV input	+165.3 mV	_____	_____	+174.7 mV
+0.2 V offset, 230 mV input	225.3 V	_____	_____	234.7 mV
-0.2 V offset, -230 mV input	-234.7 mV	_____	_____	-225.3 V
Ch2 20 mV Vert scale setting, 0 Div position setting				
0 V offset, 60 mV input	54.0 mV	_____	_____	66.0 mV
0 V offset, -60 mV input	-66.0 mV	_____	_____	-54.0 mV
-0.1 V offset, -40 mV input	-46.4 mV	_____	_____	-33.7 mV
+0.1 V offset, 40 mV input	+33.7 mV	_____	_____	+46.4 mV
+0.1 V offset, 160 mV input	153.7 mV	_____	_____	166.4 mV
-0.1 V offset, -160 mV input	-166.4 mV	_____	_____	-153.7 mV
Ch2 30 mV Vert scale setting, 0 Div position setting				
0 V offset, 90 mV input	82.0 mV	_____	_____	98.0 mV
0 V offset, -90 mV input	-98.0 mV	_____	_____	-82.0 mV

DC voltage measurement accuracy (averaged), TekConnect channels				
Instrument performance test	Minimum	Incoming	Outgoing	Maximum
Ch1 6.25 mV Vert scale setting, 0 Div position setting				
+3.5 V termination				
+3.4 V offset	3.4012 V	_____	_____	3.4363 V
+2.4 V offset	2.4032 V	_____	_____	2.4343 V
+1.5 V termination				
+2.5 V offset	2.503 V	_____	_____	2.5345 V
+1.5 V offset	1.509 V	_____	_____	1.5285 V
+0.5 V offset	511.0 mV	_____	_____	526.5 mV
0 V termination				
0 V offset, 18.75 mV input	15.0 mV	_____	_____	22.5 mV
0 V offset, -18.75 mV input	-22.5 mV	_____	_____	-15.0 mV
-1 V offset	-991 mV	_____	_____	-971.5 mV
+1 V offset	1.009 V	_____	_____	1.0285 V
-3.5 V termination				
-3.4 V offset	-3.3988 V	_____	_____	-3.3637 V
-2.4 V offset	-2.3968 V	_____	_____	-2.3657 V
-1.5 V termination				
-2.5 V offset	-2.497 V	_____	_____	-2.4655 V
-1.5 V offset	-1.491 V	_____	_____	-1.4715 V
-0.5 V offset	-489 mV	_____	_____	-473.5 mV

Table continued...

DC voltage measurement accuracy (averaged), TekConnect channels				
Instrument performance test	Minimum	Incoming	Outgoing	Maximum
Ch1 10 mV Vert scale setting, 0 Div position setting				
+3.5 V termination				
+3.4 V offset	3.4117 V	_____	_____	3.4483 V
+2.4 V offset	2.4137 V	_____	_____	2.4463 V
+1.5 V termination				
+2.5 V offset	2.5135 V	_____	_____	2.5465 V
+1.5 V offset	1.5195 V	_____	_____	1.5405 V
+0.5 V offset	521.5 mV	_____	_____	538.5 mV
0 V termination				
0 V offset, 30 mV input	25.5 mV	_____	_____	34.5 mV
0 V offset, -30 mV input	-34.5 mV	_____	_____	-25.5 mV
-1 V offset	-980.5 mV	_____	_____	-959.5 mV
+1 V offset	1.0195 V	_____	_____	1.0405 V
-3.5 V termination				
-3.4 V offset	-3.3883 V	_____	_____	-3.3517 V
-2.4 V offset	-2.3863 V	_____	_____	-2.3537 V
-1.5 V termination				
-2.5 V offset	-2.4865 V	_____	_____	-2.4535 V
-1.5 V offset	-1.4805 V	_____	_____	-1.4595 V
-0.5 V offset	-478.5 mV	_____	_____	-461.5 mV

Table continued...

DC voltage measurement accuracy (averaged), TekConnect channels				
Instrument performance test	Minimum	Incoming	Outgoing	Maximum
Ch1 20 mV Vert scale setting, 0 Div position setting				
+3.5 V termination				
+3.4 V offset	3.4397 V	_____	_____	3.4803 V
+2.4 V offset	2.4417 V	_____	_____	2.4783 V
+1.5 V termination				
+2.5 V offset	2.5415 V	_____	_____	2.5785 V
+1.5 V offset	1.5475 V	_____	_____	1.5725 V
+0.5 V offset	549.5 mV	_____	_____	570.5 mV
0 V termination				
0 V offset, 60 mV input	53.5 mV	_____	_____	66.5 mV
0 V offset, -60 mV input	-66.5 mV	_____	_____	-53.5 mV
-1 V offset	-952.5 mV	_____	_____	-927.5 mV
+1 V offset	1.0475 V	_____	_____	1.0725 V
-3.5 V termination				
-3.4 V offset	-3.3603 V	_____	_____	-3.3197 V
-2.4 V offset	-2.3583 V	_____	_____	-2.3217 V
-1.5 V termination				
-2.5 V offset	-2.4585 V	_____	_____	-2.4215 V
-1.5 V offset	-1.4525 V	_____	_____	-1.4275 V
-0.5 V offset	-450.5 mV	_____	_____	-429.5 mV

Table continued...

DC voltage measurement accuracy (averaged), TekConnect channels				
Instrument performance test	Minimum	Incoming	Outgoing	Maximum
Ch1 50 mV Vert scale setting, 0 Div position setting				
+3.5 V termination				
+3.4 V offset	3.5237 V	_____	_____	3.5763 V
+2.4 V offset	2.5257 V	_____	_____	2.5743 V
+1.5 V termination				
+2.5 V offset	2.6255 V	_____	_____	2.6745 V
+1.5 V offset	1.6315 V	_____	_____	1.6685 V
+0.5 V offset	633.5 mV	_____	_____	666.5 mV
0 V termination				
0 V offset, 150 mV input	137.5 mV	_____	_____	162.5 mV
0 V offset, -150 mV input	-162.5 mV	_____	_____	-137.5 mV
-1 V offset	-868.5 mV	_____	_____	-831.5 mV
+1 V offset	1.1315 V	_____	_____	1.1685 V
-3.5 V termination				
-3.4 V offset	-3.2763 V	_____	_____	-3.2237 V
-2.4 V offset	-2.2745 V	_____	_____	-2.2257 V
-1.5 V termination				
-2.5 V offset	-2.3745 V	_____	_____	-2.3255 V
-1.5 V offset	-1.3685 V	_____	_____	-1.3315 V
-0.5 V offset	-366.5 mV	_____	_____	-333.5 mV

Table continued...

DC voltage measurement accuracy (averaged), TekConnect channels				
Instrument performance test	Minimum	Incoming	Outgoing	Maximum
Ch1 100 mV Vert scale setting, 0 Div position setting				
+3.5 V termination				
+3.4 V offset	3.6637 V	_____	_____	3.7363 V
+2.4 V offset	2.6657 V	_____	_____	2.7343 V
+1.5 V termination				
+2.5 V offset	2.7655 V	_____	_____	2.8345 V
+1.5 V offset	1.7715 V	_____	_____	1.8285 V
+0.5 V offset	773.5 mV	_____	_____	826.5 mV
0 V termination				
0 V offset, 300 mV input	277.5 mV	_____	_____	322.5 mV
0 V offset, -300 mV input	-322.5 mV	_____	_____	-277.5 mV
-1 V offset	-728.5 mV	_____	_____	-671.5 mV
+1 V offset	1.2715 V	_____	_____	1.3285 V
-3.5 V termination				
-3.4 V offset	-3.1363 V	_____	_____	-3.0637 V
-2.4 V offset	-2.1343 V	_____	_____	-2.0657 V
-1.5 V termination				
-2.5 V offset	-2.2345 V	_____	_____	-2.1655 V
-1.5 V offset	-1.2285 V	_____	_____	-1.1715 V
-0.5 V offset	-226.5 mV	_____	_____	-173.5 mV

Table continued...

DC voltage measurement accuracy (averaged), TekConnect channels				
Instrument performance test	Minimum	Incoming	Outgoing	Maximum
Ch1 120 mV Vert scale setting, 0 Div position setting				
+3.5 V termination				
+3.4 V offset	3.7197 V	_____	_____	3.8003 V
+2.4 V offset	2.7217 V	_____	_____	2.7983 V
+1.5 V termination				
+2.5 V offset	2.8215 V	_____	_____	2.8985 V
+1.5 V offset	1.8275 V	_____	_____	1.8925 V
+0.5 V offset	829.5 mV	_____	_____	890.5 mV
0 V termination				
0 V offset, 360 mV input	333.5 mV	_____	_____	386.5 mV
0 V offset, -360 mV input	-386.5 mV	_____	_____	-333.5 mV
-1 V offset	-672.5 mV	_____	_____	-607.5 mV
+1 V offset	1.3275 V	_____	_____	1.3925 V
-3.5 V termination				
-3.4 V offset	-3.0803 V	_____	_____	-2.9997 V
-2.4 V offset	-2.0783 V	_____	_____	-2.0017 V
-1.5 V termination				
-2.5 V offset	-2.1785 V	_____	_____	-2.1015 V
-1.5 V offset	-1.1725 V	_____	_____	-1.1075 V
-0.5 V offset	-170.5 mV	_____	_____	-109.5 mV
Ch1 140 mV Vert scale setting, 0 Div position setting				
0 V termination				
-1 V offset	-627.4 mV	_____	_____	-532.6 mV
0 V offset	378.6 mV	_____	_____	461.4 mV
+1 V offset	1.3726 V	_____	_____	1.4674 V
Ch1 200 mV Vert scale setting, 0 Div position setting				
0 V termination				
-1 V offset	-459.4 mV	_____	_____	-340.6 mV
0 V offset	546.6 mV	_____	_____	653.4 mV
+1 V offset	1.5406 V	_____	_____	1.6594 V

Table continued...

DC voltage measurement accuracy (averaged), TekConnect channels				
Instrument performance test	Minimum	Incoming	Outgoing	Maximum
Ch1 400 mV Vert scale setting, 0 Div position setting				
0 V termination				
-1 V offset	100.6 mV	_____	_____	299.4 mV
0 V offset	1.1066 V	_____	_____	1.2934 V
+1 V offset	2.1006 V	_____	_____	2.2994 V
Ch2 6.25 mV Vert scale setting, 0 Div position setting				
+3.5 V termination				
+3.4 V offset	3.4012 V	_____	_____	3.4363 V
+2.4 V offset	2.4032 V	_____	_____	2.4343 V
+1.5 V termination				
+2.5 V offset	2.503 V	_____	_____	2.5345 V
+1.5 V offset	1.509 V	_____	_____	1.5285 V
+0.5 V offset	511.0 mV	_____	_____	526.5 mV
0 V termination				
0 V offset, 18.75 mV input	15.0 mV	_____	_____	22.5 mV
0 V offset, -18.75 mV input	-22.5 mV	_____	_____	-15.0 mV
-1 V offset	-991 mV	_____	_____	-971.5 mV
+1 V offset	1.009 V	_____	_____	1.0285 V
-3.5 V termination				
-3.4 V offset	-3.3988 V	_____	_____	-3.3637 V
-2.4 V offset	-2.3968 V	_____	_____	-2.3657 V
-1.5 V termination				
-2.5 V offset	-2.497 V	_____	_____	-2.4655 V
-1.5 V offset	-1.491 V	_____	_____	-1.4715 V
-0.5 V offset	-489 mV	_____	_____	-473.5 mV
Table continued...				

DC voltage measurement accuracy (averaged), TekConnect channels				
Instrument performance test	Minimum	Incoming	Outgoing	Maximum
Ch2 10 mV Vert scale setting, 0 Div position setting				
+3.5 V termination				
+3.4 V offset	3.4117 V	_____	_____	3.4483 V
+2.4 V offset	2.4137 V	_____	_____	2.4463 V
+1.5 V termination				
+2.5 V offset	2.5135 V	_____	_____	2.5465 V
+1.5 V offset	1.5195 V	_____	_____	1.5405 V
+0.5 V offset	521.5 mV	_____	_____	538.5 mV
0 V termination				
0 V offset, 30 mV input	25.5 mV	_____	_____	34.5 mV
0 V offset, -30 mV input	-34.5 mV	_____	_____	-25.5 mV
-1 V offset	-980.5 mV	_____	_____	-959.5 mV
+1 V offset	1.0195 V	_____	_____	1.0405 V
-3.5 V termination				
-3.4 V offset	-3.3883 V	_____	_____	-3.3517 V
-2.4 V offset	-2.3863 V	_____	_____	-2.3537 V
-1.5 V termination				
-2.5 V offset	-2.4865 V	_____	_____	-2.4535 V
-1.5 V offset	-1.4805 V	_____	_____	-1.4595 V
-0.5 V offset	-478.5 mV	_____	_____	-461.5 mV

Table continued...

DC voltage measurement accuracy (averaged), TekConnect channels				
Instrument performance test	Minimum	Incoming	Outgoing	Maximum
Ch2 20 mV Vert scale setting, 0 Div position setting				
+3.5 V termination				
+3.4 V offset	3.4397 V	_____	_____	3.4803 V
+2.4 V offset	2.4417 V	_____	_____	2.4783 V
+1.5 V termination				
+2.5 V offset	2.5415 V	_____	_____	2.5785 V
+1.5 V offset	1.5475 V	_____	_____	1.5725 V
+0.5 V offset	549.5 mV	_____	_____	570.5 mV
0 V termination				
0 V offset, 60 mV input	53.5 mV	_____	_____	66.5 mV
0 V offset, -60 mV input	-66.5 mV	_____	_____	-53.5 mV
-1 V offset	-952.5 mV	_____	_____	-927.5 mV
+1 V offset	1.0475 V	_____	_____	1.0725 V
-3.5 V termination				
-3.4 V offset	-3.3603 V	_____	_____	-3.3197 V
-2.4 V offset	-2.3583 V	_____	_____	-2.3217 V
-1.5 V termination				
-2.5 V offset	-2.4585 V	_____	_____	-2.4215 V
-1.5 V offset	-1.4525 V	_____	_____	-1.4275 V
-0.5 V offset	-450.5 mV	_____	_____	-429.5 mV

Table continued...

DC voltage measurement accuracy (averaged), TekConnect channels				
Instrument performance test	Minimum	Incoming	Outgoing	Maximum
Ch2 50 mV Vert scale setting, 0 Div position setting				
+3.5 V termination				
+3.4 V offset	3.5237 V	_____	_____	3.5763 V
+2.4 V offset	2.5257 V	_____	_____	2.5743 V
+1.5 V termination				
+2.5 V offset	2.6255 V	_____	_____	2.6745 V
+1.5 V offset	1.6315 V	_____	_____	1.6685 V
+0.5 V offset	633.5 mV	_____	_____	666.5 mV
0 V termination				
0 V offset, 150 mV input	137.5 mV	_____	_____	162.5 mV
0 V offset, -150 mV input	-162.5 mV	_____	_____	-137.5 mV
-1 V offset	-868.5 mV	_____	_____	-831.5 mV
+1 V offset	1.1315 V	_____	_____	1.1685 V
-3.5 V termination				
-3.4 V offset	-3.2763 V	_____	_____	-3.2237 V
-2.4 V offset	-2.2745 V	_____	_____	-2.2257 V
-1.5 V termination				
-2.5 V offset	-2.3745 V	_____	_____	-2.3255 V
-1.5 V offset	-1.3685 V	_____	_____	-1.3315 V
-0.5 V offset	-366.5 mV	_____	_____	-333.5 mV

Table continued...

DC voltage measurement accuracy (averaged), TekConnect channels				
Instrument performance test	Minimum	Incoming	Outgoing	Maximum
Ch2 100 mV Vert scale setting, 0 Div position setting				
+3.5 V termination				
+3.4 V offset	3.6637 V	_____	_____	3.7363 V
+2.4 V offset	2.6657 V	_____	_____	2.7343 V
+1.5 V termination				
+2.5 V offset	2.7655 V	_____	_____	2.8345 V
+1.5 V offset	1.7715 V	_____	_____	1.8285 V
+0.5 V offset	773.5 mV	_____	_____	826.5 mV
0 V termination				
0 V offset, 300 mV input	277.5 mV	_____	_____	322.5 mV
0 V offset, -300 mV input	-322.5 mV	_____	_____	-277.5 mV
-1 V offset	-728.5 mV	_____	_____	-671.5 mV
+1 V offset	1.2715 V	_____	_____	1.3285 V
-3.5 V termination				
-3.4 V offset	-3.1363 V	_____	_____	-3.0637 V
-2.4 V offset	-2.1343 V	_____	_____	-2.0657 V
-1.5 V termination				
-2.5 V offset	-2.2345 V	_____	_____	-2.1655 V
-1.5 V offset	-1.2285 V	_____	_____	-1.1715 V
-0.5 V offset	-226.5 mV	_____	_____	-173.5 mV

Table continued...

DC voltage measurement accuracy (averaged), TekConnect channels				
Instrument performance test	Minimum	Incoming	Outgoing	Maximum
Ch2 120 mV Vert scale setting, 0 Div position setting				
+3.5 V termination				
+3.4 V offset	3.7197 V	_____	_____	3.8003 V
+2.4 V offset	2.7217 V	_____	_____	2.7983 V
+1.5 V termination				
+2.5 V offset	2.8215 V	_____	_____	2.8985 V
+1.5 V offset	1.8275 V	_____	_____	1.8925 V
+0.5 V offset	829.5 mV	_____	_____	890.5 mV
0 V termination				
0 V offset, 360 mV input	333.5 mV	_____	_____	386.5 mV
0 V offset, -360 mV input	-386.5 mV	_____	_____	-333.5 mV
-1 V offset	-672.5 mV	_____	_____	-607.5 mV
+1 V offset	1.3275 V	_____	_____	1.3925 V
-3.5 V termination				
-3.4 V offset	-3.0803 V	_____	_____	-2.9997 V
-2.4 V offset	-2.0783 V	_____	_____	-2.0017 V
-1.5 V termination				
-2.5 V offset	-2.1785 V	_____	_____	-2.1015 V
-1.5 V offset	-1.1725 V	_____	_____	-1.1075 V
-0.5 V offset	-170.5 mV	_____	_____	-109.5 mV
Ch2 140 mV Vert scale setting, 0 Div position setting				
0 V termination				
-1 V offset	-627.4 mV	_____	_____	-532.6 mV
0 V offset	378.6 mV	_____	_____	461.4 mV
+1 V offset	1.3726 V	_____	_____	1.4674 V
Ch2 200 mV Vert scale setting, 0 Div position setting				
0 V termination				
-1 V offset	-459.4 mV	_____	_____	-340.6 mV
0 V offset	546.6 mV	_____	_____	653.4 mV
+1 V offset	1.5406 V	_____	_____	1.6594 V

Table continued...

DC voltage measurement accuracy (averaged), TekConnect channels				
Instrument performance test	Minimum	Incoming	Outgoing	Maximum
Ch2 400 mV Vert scale setting, 0 Div position setting				
0 V termination				
-1 V offset	100.6 mV	_____	_____	299.4 mV
0 V offset	1.1066 V	_____	_____	1.2934 V
+1 V offset	2.1006 V	_____	_____	2.2994 V
Ch3 6.25 mV Vert scale setting, 0 Div position setting				
+3.5 V termination				
+3.4 V offset	3.4012 V	_____	_____	3.4363 V
+2.4 V offset	2.4032 V	_____	_____	2.4343 V
+1.5 V termination				
+2.5 V offset	2.503 V	_____	_____	2.5345 V
+1.5 V offset	1.509 V	_____	_____	1.5285 V
+0.5 V offset	511.0 mV	_____	_____	526.5 mV
0 V termination				
0 V offset, 18.75 mV input	15.0 mV	_____	_____	22.5 mV
0 V offset, -18.75 mV input	-22.5 mV	_____	_____	-15.0 mV
-1 V offset	-991 mV	_____	_____	-971.5 mV
+1 V offset	1.009 V	_____	_____	1.0285 V
-3.5 V termination				
-3.4 V offset	-3.3988 V	_____	_____	-3.3637 V
-2.4 V offset	-2.3968 V	_____	_____	-2.3657 V
-1.5 V termination				
-2.5 V offset	-2.497 V	_____	_____	-2.4655 V
-1.5 V offset	-1.491 V	_____	_____	-1.4715 V
-0.5 V offset	-489 mV	_____	_____	-473.5 mV
Table continued...				

DC voltage measurement accuracy (averaged), TekConnect channels				
Instrument performance test	Minimum	Incoming	Outgoing	Maximum
Ch3 10 mV Vert scale setting, 0 Div position setting				
+3.5 V termination				
+3.4 V offset	3.4117 V	_____	_____	3.4483 V
+2.4 V offset	2.4137 V	_____	_____	2.4463 V
+1.5 V termination				
+2.5 V offset	2.5135 V	_____	_____	2.5465 V
+1.5 V offset	1.5195 V	_____	_____	1.5405 V
+0.5 V offset	521.5 mV	_____	_____	538.5 mV
0 V termination				
0 V offset, 30 mV input	25.5 mV	_____	_____	34.5 mV
0 V offset, -30 mV input	-34.5 mV	_____	_____	-25.5 mV
-1 V offset	-980.5 mV	_____	_____	-959.5 mV
+1 V offset	1.0195 V	_____	_____	1.0405 V
-3.5 V termination				
-3.4 V offset	-3.3883 V	_____	_____	-3.3517 V
-2.4 V offset	-2.3863 V	_____	_____	-2.3537 V
-1.5 V termination				
-2.5 V offset	-2.4865 V	_____	_____	-2.4535 V
-1.5 V offset	-1.4805 V	_____	_____	-1.4595 V
-0.5 V offset	-478.5 mV	_____	_____	-461.5 mV

Table continued...

DC voltage measurement accuracy (averaged), TekConnect channels				
Instrument performance test	Minimum	Incoming	Outgoing	Maximum
Ch3 20 mV Vert scale setting, 0 Div position setting				
+3.5 V termination				
+3.4 V offset	3.4397 V	_____	_____	3.4803 V
+2.4 V offset	2.4417 V	_____	_____	2.4783 V
+1.5 V termination				
+2.5 V offset	2.5415 V	_____	_____	2.5785 V
+1.5 V offset	1.5475 V	_____	_____	1.5725 V
+0.5 V offset	549.5 mV	_____	_____	570.5 mV
0 V termination				
0 V offset, 60 mV input	53.5 mV	_____	_____	66.5 mV
0 V offset, -60 mV input	-66.5 mV	_____	_____	-53.5 mV
-1 V offset	-952.5 mV	_____	_____	-927.5 mV
+1 V offset	1.0475 V	_____	_____	1.0725 V
-3.5 V termination				
-3.4 V offset	-3.3603 V	_____	_____	-3.3197 V
-2.4 V offset	-2.3583 V	_____	_____	-2.3217 V
-1.5 V termination				
-2.5 V offset	-2.4585 V	_____	_____	-2.4215 V
-1.5 V offset	-1.4525 V	_____	_____	-1.4275 V
-0.5 V offset	-450.5 mV	_____	_____	-429.5 mV

Table continued...

DC voltage measurement accuracy (averaged), TekConnect channels				
Instrument performance test	Minimum	Incoming	Outgoing	Maximum
Ch3 50 mV Vert scale setting, 0 Div position setting				
+3.5 V termination				
+3.4 V offset	3.5237 V	_____	_____	3.5763 V
+2.4 V offset	2.5257 V	_____	_____	2.5743 V
+1.5 V termination				
+2.5 V offset	2.6255 V	_____	_____	2.6745 V
+1.5 V offset	1.6315 V	_____	_____	1.6685 V
+0.5 V offset	633.5 mV	_____	_____	666.5 mV
0 V termination				
0 V offset, 150 mV input	137.5 mV	_____	_____	162.5 mV
0 V offset, -150 mV input	-162.5 mV	_____	_____	-137.5 mV
-1 V offset	-868.5 mV	_____	_____	-831.5 mV
+1 V offset	1.1315 V	_____	_____	1.1685 V
-3.5 V termination				
-3.4 V offset	-3.2763 V	_____	_____	-3.2237 V
-2.4 V offset	-2.2745 V	_____	_____	-2.2257 V
-1.5 V termination				
-2.5 V offset	-2.3745 V	_____	_____	-2.3255 V
-1.5 V offset	-1.3685 V	_____	_____	-1.3315 V
-0.5 V offset	-366.5 mV	_____	_____	-333.5 mV

Table continued...

DC voltage measurement accuracy (averaged), TekConnect channels				
Instrument performance test	Minimum	Incoming	Outgoing	Maximum
Ch3 100 mV Vert scale setting, 0 Div position setting				
+3.5 V termination				
+3.4 V offset	3.6637 V	_____	_____	3.7363 V
+2.4 V offset	2.6657 V	_____	_____	2.7343 V
+1.5 V termination				
+2.5 V offset	2.7655 V	_____	_____	2.8345 V
+1.5 V offset	1.7715 V	_____	_____	1.8285 V
+0.5 V offset	773.5 mV	_____	_____	826.5 mV
0 V termination				
0 V offset, 300 mV input	277.5 mV	_____	_____	322.5 mV
0 V offset, -300 mV input	-322.5 mV	_____	_____	-277.5 mV
-1 V offset	-728.5 mV	_____	_____	-671.5 mV
+1 V offset	1.2715 V	_____	_____	1.3285 V
-3.5 V termination				
-3.4 V offset	-3.1363 V	_____	_____	-3.0637 V
-2.4 V offset	-2.1343 V	_____	_____	-2.0657 V
-1.5 V termination				
-2.5 V offset	-2.2345 V	_____	_____	-2.1655 V
-1.5 V offset	-1.2285 V	_____	_____	-1.1715 V
-0.5 V offset	-226.5 mV	_____	_____	-173.5 mV

Table continued...

DC voltage measurement accuracy (averaged), TekConnect channels				
Instrument performance test	Minimum	Incoming	Outgoing	Maximum
Ch3 120 mV Vert scale setting, 0 Div position setting				
+3.5 V termination				
+3.4 V offset	3.7197 V	_____	_____	3.8003 V
+2.4 V offset	2.7217 V	_____	_____	2.7983 V
+1.5 V termination				
+2.5 V offset	2.8215 V	_____	_____	2.8985 V
+1.5 V offset	1.8275 V	_____	_____	1.8925 V
+0.5 V offset	829.5 mV	_____	_____	890.5 mV
0 V termination				
0 V offset, 360 mV input	333.5 mV	_____	_____	386.5 mV
0 V offset, -360 mV input	-386.5 mV	_____	_____	-333.5 mV
-1 V offset	-672.5 mV	_____	_____	-607.5 mV
+1 V offset	1.3275 V	_____	_____	1.3925 V
-3.5 V termination				
-3.4 V offset	-3.0803 V	_____	_____	-2.9997 V
-2.4 V offset	-2.0783 V	_____	_____	-2.0017 V
-1.5 V termination				
-2.5 V offset	-2.1785 V	_____	_____	-2.1015 V
-1.5 V offset	-1.1725 V	_____	_____	-1.1075 V
-0.5 V offset	-170.5 mV	_____	_____	-109.5 mV
Ch3 140 mV Vert scale setting, 0 Div position setting				
0 V termination				
-1 V offset	-627.4 mV	_____	_____	-532.6 mV
0 V offset	378.6 mV	_____	_____	461.4 mV
+1 V offset	1.3726 V	_____	_____	1.4674 V
Ch3 200 mV Vert scale setting, 0 Div position setting				
0 V termination				
-1 V offset	-459.4 mV	_____	_____	-340.6 mV
0 V offset	546.6 mV	_____	_____	653.4 mV
+1 V offset	1.5406 V	_____	_____	1.6594 V

Table continued...

DC voltage measurement accuracy (averaged), TekConnect channels				
Instrument performance test	Minimum	Incoming	Outgoing	Maximum
Ch3 400 mV Vert scale setting, 0 Div position setting				
0 V termination				
-1 V offset	100.6 mV	_____	_____	299.4 mV
0 V offset	1.1066 V	_____	_____	1.2934 V
+1 V offset	2.1006 V	_____	_____	2.2994 V
Ch4 6.25 mV Vert scale setting, 0 Div position setting				
+3.5 V termination				
+3.4 V offset	3.4012 V	_____	_____	3.4363 V
+2.4 V offset	2.4032 V	_____	_____	2.4343 V
+1.5 V termination				
+2.5 V offset	2.503 V	_____	_____	2.5345 V
+1.5 V offset	1.509 V	_____	_____	1.5285 V
+0.5 V offset	511.0 mV	_____	_____	526.5 mV
0 V termination				
0 V offset, 18.75 mV input	15.0 mV	_____	_____	22.5 mV
0 V offset, -18.75 mV input	-22.5 mV	_____	_____	-15.0 mV
-1 V offset	-991 mV	_____	_____	-971.5 mV
+1 V offset	1.009 V	_____	_____	1.0285 V
-3.5 V termination				
-3.4 V offset	-3.3988 V	_____	_____	-3.3637 V
-2.4 V offset	-2.3968 V	_____	_____	-2.3657 V
-1.5 V termination				
-2.5 V offset	-2.497 V	_____	_____	-2.4655 V
-1.5 V offset	-1.491 V	_____	_____	-1.4715 V
-0.5 V offset	-489 mV	_____	_____	-473.5 mV
Table continued...				

DC voltage measurement accuracy (averaged), TekConnect channels				
Instrument performance test	Minimum	Incoming	Outgoing	Maximum
Ch4 10 mV Vert scale setting, 0 Div position setting				
+3.5 V termination				
+3.4 V offset	3.4117 V	_____	_____	3.4483 V
+2.4 V offset	2.4137 V	_____	_____	2.4463 V
+1.5 V termination				
+2.5 V offset	2.5135 V	_____	_____	2.5465 V
+1.5 V offset	1.5195 V	_____	_____	1.5405 V
+0.5 V offset	521.5 mV	_____	_____	538.5 mV
0 V termination				
0 V offset, 30 mV input	25.5 mV	_____	_____	34.5 mV
0 V offset, -30 mV input	-34.5 mV	_____	_____	-25.5 mV
-1 V offset	-980.5 mV	_____	_____	-959.5 mV
+1 V offset	1.0195 V	_____	_____	1.0405 V
-3.5 V termination				
-3.4 V offset	-3.3883 V	_____	_____	-3.3517 V
-2.4 V offset	-2.3863 V	_____	_____	-2.3537 V
-1.5 V termination				
-2.5 V offset	-2.4865 V	_____	_____	-2.4535 V
-1.5 V offset	-1.4805 V	_____	_____	-1.4595 V
-0.5 V offset	-478.5 mV	_____	_____	-461.5 mV

Table continued...

DC voltage measurement accuracy (averaged), TekConnect channels				
Instrument performance test	Minimum	Incoming	Outgoing	Maximum
Ch4 20 mV Vert scale setting, 0 Div position setting				
+3.5 V termination				
+3.4 V offset	3.4397 V	_____	_____	3.4803 V
+2.4 V offset	2.4417 V	_____	_____	2.4783 V
+1.5 V termination				
+2.5 V offset	2.5415 V	_____	_____	2.5785 V
+1.5 V offset	1.5475 V	_____	_____	1.5725 V
+0.5 V offset	549.5 mV	_____	_____	570.5 mV
0 V termination				
0 V offset, 60 mV input	53.5 mV	_____	_____	66.5 mV
0 V offset, -60 mV input	-66.5 mV	_____	_____	-53.5 mV
-1 V offset	-952.5 mV	_____	_____	-927.5 mV
+1 V offset	1.0475 V	_____	_____	1.0725 V
-3.5 V termination				
-3.4 V offset	-3.3603 V	_____	_____	-3.3197 V
-2.4 V offset	-2.3583 V	_____	_____	-2.3217 V
-1.5 V termination				
-2.5 V offset	-2.4585 V	_____	_____	-2.4215 V
-1.5 V offset	-1.4525 V	_____	_____	-1.4275 V
-0.5 V offset	-450.5 mV	_____	_____	-429.5 mV

Table continued...

DC voltage measurement accuracy (averaged), TekConnect channels				
Instrument performance test	Minimum	Incoming	Outgoing	Maximum
Ch4 50 mV Vert scale setting, 0 Div position setting				
+3.5 V termination				
+3.4 V offset	3.5237 V	_____	_____	3.5763 V
+2.4 V offset	2.5257 V	_____	_____	2.5743 V
+1.5 V termination				
+2.5 V offset	2.6255 V	_____	_____	2.6745 V
+1.5 V offset	1.6315 V	_____	_____	1.6685 V
+0.5 V offset	633.5 mV	_____	_____	666.5 mV
0 V termination				
0 V offset, 150 mV input	137.5 mV	_____	_____	162.5 mV
0 V offset, -150 mV input	-162.5 mV	_____	_____	-137.5 mV
-1 V offset	-868.5 mV	_____	_____	-831.5 mV
+1 V offset	1.1315 V	_____	_____	1.1685 V
-3.5 V termination				
-3.4 V offset	-3.2763 V	_____	_____	-3.2237 V
-2.4 V offset	-2.2745 V	_____	_____	-2.2257 V
-1.5 V termination				
-2.5 V offset	-2.3745 V	_____	_____	-2.3255 V
-1.5 V offset	-1.3685 V	_____	_____	-1.3315 V
-0.5 V offset	-366.5 mV	_____	_____	-333.5 mV

Table continued...

DC voltage measurement accuracy (averaged), TekConnect channels				
Instrument performance test	Minimum	Incoming	Outgoing	Maximum
Ch4 100 mV Vert scale setting, 0 Div position setting				
+3.5 V termination				
+3.4 V offset	3.6637 V	_____	_____	3.7363 V
+2.4 V offset	2.6657 V	_____	_____	2.7343 V
+1.5 V termination				
+2.5 V offset	2.7655 V	_____	_____	2.8345 V
+1.5 V offset	1.7715 V	_____	_____	1.8285 V
+0.5 V offset	773.5 mV	_____	_____	826.5 mV
0 V termination				
0 V offset, 300 mV input	277.5 mV	_____	_____	322.5 mV
0 V offset, -300 mV input	-322.5 mV	_____	_____	-277.5 mV
-1 V offset	-728.5 mV	_____	_____	-671.5 mV
+1 V offset	1.2715 V	_____	_____	1.3285 V
-3.5 V termination				
-3.4 V offset	-3.1363 V	_____	_____	-3.0637 V
-2.4 V offset	-2.1343 V	_____	_____	-2.0657 V
-1.5 V termination				
-2.5 V offset	-2.2345 V	_____	_____	-2.1655 V
-1.5 V offset	-1.2285 V	_____	_____	-1.1715 V
-0.5 V offset	-226.5 mV	_____	_____	-173.5 mV

Table continued...

DC voltage measurement accuracy (averaged), TekConnect channels				
Instrument performance test	Minimum	Incoming	Outgoing	Maximum
Ch4 120 mV Vert scale setting, 0 Div position setting				
+3.5 V termination				
+3.4 V offset	3.7197 V	_____	_____	3.8003 V
+2.4 V offset	2.7217 V	_____	_____	2.7983 V
+1.5 V termination				
+2.5 V offset	2.8215 V	_____	_____	2.8985 V
+1.5 V offset	1.8275 V	_____	_____	1.8925 V
+0.5 V offset	829.5 mV	_____	_____	890.5 mV
0 V termination				
0 V offset, 360 mV input	333.5 mV	_____	_____	386.5 mV
0 V offset, -360 mV input	-386.5 mV	_____	_____	-333.5 mV
-1 V offset	-672.5 mV	_____	_____	-607.5 mV
+1 V offset	1.3275 V	_____	_____	1.3925 V
-3.5 V termination				
-3.4 V offset	-3.0803 V	_____	_____	-2.9997 V
-2.4 V offset	-2.0783 V	_____	_____	-2.0017 V
-1.5 V termination				
-2.5 V offset	-2.1785 V	_____	_____	-2.1015 V
-1.5 V offset	-1.1725 V	_____	_____	-1.1075 V
-0.5 V offset	-170.5 mV	_____	_____	-109.5 mV
Ch4 140 mV Vert scale setting, 0 Div position setting				
0 V termination				
-1 V offset	-627.4 mV	_____	_____	-532.6 mV
0 V offset	378.6 mV	_____	_____	461.4 mV
+1 V offset	1.3726 V	_____	_____	1.4674 V
Ch4 200 mV Vert scale setting, 0 Div position setting				
0 V termination				
-1 V offset	-459.4 mV	_____	_____	-340.6 mV
0 V offset	546.6 mV	_____	_____	653.4 mV
+1 V offset	1.5406 V	_____	_____	1.6594 V

Table continued...

DC voltage measurement accuracy (averaged), TekConnect channels				
Instrument performance test	Minimum	Incoming	Outgoing	Maximum
Ch4 400 mV Vert scale setting, 0 Div position setting				
0 V termination				
-1 V offset	100.6 mV	_____	_____	299.4 mV
0 V offset	1.1066 V	_____	_____	1.2934 V
+1 V offset	2.1006 V	_____	_____	2.2994 V

DC gain accuracy (averaged), ATI channel				
Instrument performance test	Minimum	Incoming	Outgoing	Maximum
Ch2 10 mV Vert scale setting,				
0 Div position setting, 0 V offset				
0 Div position setting, +0.2 V offset	+76.44 mV	_____	_____	+79.56 mV
0 Div position setting, -0.2 V offset	+76.44 mV	_____	_____	+79.56 mV
Ch2 20 mV Vert scale setting,				
0 Div position setting, 0 V offset				
0 Div position setting, +0.1 V offset	+152.9 mV	_____	_____	+159.1 mV
0 Div position setting, -0.1 V offset	+152.9 mV	_____	_____	+159.1 mV
Ch2 30 mV Vert scale setting,				
0 Div position setting, 0 V offset				
	+ 176.4 mV	_____	_____	+ 183.6 mV

DC gain accuracy (averaged), TekConnect channels				
Instrument performance test	Minimum	Incoming	Outgoing	Maximum
Ch1 6.25 mV Vert scale setting				
0 V termination				
0 Div position setting, 0 V offset	+48.02 mV	_____	_____	+49.98 mV
0 Div position setting, +1 V offset	+48.02 mV	_____	_____	+49.98 mV
0 Div position setting, -1 V offset	+48.02 mV	_____	_____	+49.98 mV
+3.4 V termination				
0 Div position setting, +3.4 V offset	+48.02 mV	_____	_____	+49.98 mV
0 Div position setting, +2.4 V offset	+48.02 mV	_____	_____	+49.98 mV
-3.4 V termination				
0 Div position setting, -3.4 V offset	+48.02 mV	_____	_____	+49.98 mV
0 Div position setting, -2.4 V offset	+48.02 mV	_____	_____	+49.98 mV
Ch1 10 mV Vert scale setting,				
0 V termination				
0 Div position setting, 0 V offset	+76.44 mV	_____	_____	+79.56 mV
0 Div position setting, +1 V offset	+76.44 mV	_____	_____	+79.56 mV
0 Div position setting, -1 V offset	+76.44 mV	_____	_____	+79.56 mV
+3.4 V termination				
0 Div position setting, +3.4 V offset	+76.44 mV	_____	_____	+79.56 mV
0 Div position setting, +2.4 V offset	+76.44 mV	_____	_____	+79.56 mV
-3.4 V termination				
0 Div position setting, -3.4 V offset	+76.44 mV	_____	_____	+79.56 mV
0 Div position setting, -2.4 V offset	+76.44 mV	_____	_____	+79.56 mV
Table continued...				

DC gain accuracy (averaged), TekConnect channels				
Instrument performance test	Minimum	Incoming	Outgoing	Maximum
Ch1 20 mV Vert scale setting, 0 V termination				
0 Div position setting, 0 V offset	+152.9 mV	_____	_____	+159.1 mV
0 Div position setting, +1 V offset	+152.9 mV	_____	_____	+159.1 mV
0 Div position setting, -1 V offset	+152.9 mV	_____	_____	+159.1 mV
+3.4 V termination				
0 Div position setting, +3.4 V offset	+152.9 mV	_____	_____	+159.1 mV
0 Div position setting, +2.4 V offset	+152.9 mV	_____	_____	+159.1 mV
-3.4 V termination				
0 Div position setting, -3.4 V offset	+152.9 mV	_____	_____	+159.1 mV
0 Div position setting, -2.4 V offset	+152.9 mV	_____	_____	+159.1 mV
Ch1 50 mV Vert scale setting, 0 V termination				
0 Div position setting, 0 V offset	+382.2 mV	_____	_____	+397.8 mV
0 Div position setting, +1 V offset	+382.2 mV	_____	_____	+397.8 mV
0 Div position setting, -1 V offset	+382.2 mV	_____	_____	+397.8 mV
+3.4 V termination				
0 Div position setting, +3.4 V offset	+382.2 mV	_____	_____	+397.8 mV
0 Div position setting, +2.4 V offset	+382.2 mV	_____	_____	+397.8 mV
-3.4 V termination				
0 Div position setting, -3.4 V offset	+382.2 mV	_____	_____	+397.8 mV
0 Div position setting, -2.4 V offset	+382.2 mV	_____	_____	+397.8 mV
Table continued...				

DC gain accuracy (averaged), TekConnect channels				
Instrument performance test	Minimum	Incoming	Outgoing	Maximum
Ch1 100 mV Vert scale setting, 0 V termination				
0 Div position setting, 0 V offset	+764 mV	_____	_____	+796 mV
0 Div position setting, +1 V offset	+764 mV	_____	_____	+796 mV
0 Div position setting, -1 V offset	+764 mV	_____	_____	+796 mV
+3.4 V termination				
0 Div position setting, +3.4 V offset	+764 mV	_____	_____	+796 mV
0 Div position setting, +2.4 V offset	+764 mV	_____	_____	+796 mV
-3.4 V termination				
0 Div position setting, -3.4 V offset	+764 mV	_____	_____	+796 mV
0 Div position setting, -2.4 V offset	+764 mV	_____	_____	+796 mV
Ch1 120 mV Vert scale setting, 0 V termination				
0 Div position setting, 0 V offset	+917.3 mV	_____	_____	+954.7 mV
0 Div position setting, +1 V offset	+917.3 mV	_____	_____	+954.7 mV
0 Div position setting, -1 V offset	+917.3 mV	_____	_____	+954.7 mV
+3.4 V termination				
-5 Div position setting, +3.4 V offset	+917.3 mV	_____	_____	+954.7 mV
-5 Div position setting, +2.4 V offset	+917.3 mV	_____	_____	+954.7 mV
-3.4 V termination				
5 Div position setting, -3.4 V offset	+917.3 mV	_____	_____	+954.7 mV
5 Div position setting, -2.4 V offset	+917.3 mV	_____	_____	+954.7 mV
Ch1 140 mV Vert scale setting, 0 V termination				
0 Div position setting, -1 V offset	+823.2 mV	_____	_____	+856.8 mV
0 Div position setting, 0 V offset	+1.070 V	_____	_____	+1.114 V
0 Div position setting, +1 V offset	+823.2 mV	_____	_____	+856.8 mV

Table continued...

DC gain accuracy (averaged), TekConnect channels				
Instrument performance test	Minimum	Incoming	Outgoing	Maximum
Ch1 200 mV Vert scale setting, 0 V termination				
0 Div position setting, -0.9 V offset	+1.176 V	_____	_____	+1.224 V
0 Div position setting, 0 V offset	+1.529 V	_____	_____	+1.591 V
0 Div position setting, +0.9 V offset	+1.176 V	_____	_____	+1.224 V
Ch1 400 mV Vert scale setting, 0 V termination				
0 Div position setting, -0.3 V offset	+2.352 V	_____	_____	+2.448 V
0 Div position setting, 0 V offset	+2.352 V	_____	_____	+2.448 V
0 Div position setting, +0.3 V offset	+2.352 V	_____	_____	+2.448 V
Ch2 6.25 mV Vert scale setting (non-ATI channel) 0 V termination				
0 Div position setting, 0 V offset	+48.02 mV	_____	_____	+49.98 mV
0 Div position setting, +1 V offset	+48.02 mV	_____	_____	+49.98 mV
0 Div position setting, -1 V offset	+48.02 mV	_____	_____	+49.98 mV
+1.5 V termination				
0 Div position setting, +2.5 V offset	+48.02 mV	_____	_____	+49.98 mV
0 Div position setting, +1.5 V offset	+48.02 mV	_____	_____	+49.98 mV
0 Div position setting, +0.5 V offset	+48.02 mV	_____	_____	+49.98 mV
+3.4 V termination				
0 Div position setting, +3.4 V offset	+48.02 mV	_____	_____	+49.98 mV
0 Div position setting, +2.4 V offset	+48.02 mV	_____	_____	+49.98 mV
-3.4 V termination				
0 Div position setting, -3.4 V offset	+48.02 mV	_____	_____	+49.98 mV
0 Div position setting, -2.4 V offset	+48.02 mV	_____	_____	+49.98 mV

Table continued...

DC gain accuracy (averaged), TekConnect channels				
Instrument performance test	Minimum	Incoming	Outgoing	Maximum
Ch2 10 mV Vert scale setting (non-ATI channel), 0 V termination				
0 Div position setting, 0 V offset	+76.44 mV	_____	_____	+79.56 mV
0 Div position setting, +1 V offset	+76.44 mV	_____	_____	+79.56 mV
0 Div position setting, -1 V offset	+76.44 mV	_____	_____	+79.56 mV
+3.4 V termination				
0 Div position setting, +3.4 V offset	+76.44 mV	_____	_____	+79.56 mV
0 Div position setting, +2.4 V offset	+76.44 mV	_____	_____	+79.56 mV
-3.4 V termination				
0 Div position setting, -3.4 V offset	+76.44 mV	_____	_____	+79.56 mV
0 Div position setting, -2.4 V offset	+76.44 mV	_____	_____	+79.56 mV
Ch2 20 mV Vert scale setting (non-ATI channel), 0 V termination				
0 Div position setting, 0 V offset	+152.9 mV	_____	_____	+159.1 mV
0 Div position setting, +1 V offset	+152.9 mV	_____	_____	+159.1 mV
0 Div position setting, -1 V offset	+152.9 mV	_____	_____	+159.1 mV
+3.4 V termination				
0 Div position setting, +3.4 V offset	+152.9 mV	_____	_____	+159.1 mV
0 Div position setting, +2.4 V offset	+152.9 mV	_____	_____	+159.1 mV
-3.4 V termination				
0 Div position setting, -3.4 V offset	+152.9 mV	_____	_____	+159.1 mV
0 Div position setting, -2.4 V offset	+152.9 mV	_____	_____	+159.1 mV
Table continued...				

DC gain accuracy (averaged), TekConnect channels				
Instrument performance test	Minimum	Incoming	Outgoing	Maximum
Ch2 50 mV Vert scale setting (non-ATI channel),				
0 V termination				
0 Div position setting, 0 V offset	+382.2 mV	_____	_____	+397.8 mV
0 Div position setting, +1 V offset	+382.2 mV	_____	_____	+397.8 mV
0 Div position setting, -1 V offset	+382.2 mV	_____	_____	+397.8 mV
+3.4 V termination				
0 Div position setting, +3.4 V offset	+382.2 mV	_____	_____	+397.8 mV
0 Div position setting, +2.4 V offset	+382.2 mV	_____	_____	+397.8 mV
-3.4 V termination				
0 Div position setting, -3.4 V offset	+382.2 mV	_____	_____	+397.8 mV
0 Div position setting, -2.4 V offset	+382.2 mV	_____	_____	+397.8 mV
Ch2 100 mV Vert scale setting (non-ATI channel),				
0 V termination				
0 Div position setting, 0 V offset	+764 mV	_____	_____	+796 mV
0 Div position setting, +1 V offset	+764 mV	_____	_____	+796 mV
0 Div position setting, -1 V offset	+764 mV	_____	_____	+796 mV
+3.4 V termination				
0 Div position setting, +3.4 V offset	+764 mV	_____	_____	+796 mV
0 Div position setting, +2.4 V offset	+764 mV	_____	_____	+796 mV
-3.4 V termination				
0 Div position setting, -3.4 V offset	+764 mV	_____	_____	+796 mV
0 Div position setting, -2.4 V offset	+764 mV	_____	_____	+796 mV
Table continued...				

DC gain accuracy (averaged), TekConnect channels				
Instrument performance test	Minimum	Incoming	Outgoing	Maximum
Ch2 120 mV Vert scale setting (non-ATI channel), 0 V termination				
0 Div position setting, 0 V offset	+917.3 mV	_____	_____	+954.7 mV
0 Div position setting, +1 V offset	+917.3 mV	_____	_____	+954.7 mV
0 Div position setting, -1 V offset	+917.3 mV	_____	_____	+954.7 mV
+3.4 V termination				
0 Div position setting, +3.4 V offset	+917.3 mV	_____	_____	+954.7 mV
0 Div position setting, +2.4 V offset	+917.3 mV	_____	_____	+954.7 mV
-3.4 V termination				
0 Div position setting, -3.4 V offset	+917.3 mV	_____	_____	+954.7 mV
0 Div position setting, -2.4 V offset	+917.3 mV	_____	_____	+954.7 mV
Ch2 140 mV Vert scale setting (non-ATI channel), 0 V termination				
0 Div position setting, -1 V offset	+823.2 mV	_____	_____	+856.8 mV
0 Div position setting, 0 V offset	+1.070 V	_____	_____	+1.114 V
0 Div position setting, +1 V offset	+823.2 mV	_____	_____	+856.8 mV
Ch2 200 mV Vert scale setting (non-ATI channel), 0 V termination				
0 Div position setting, -0.9 V offset	+1.176 V	_____	_____	+1.224 V
0 Div position setting, 0 V offset	+1.529 V	_____	_____	+1.591 V
0 Div position setting, +0.9 V offset	+1.176 V	_____	_____	+1.224 V
Ch2 400 mV Vert scale setting (non-ATI channel), 0 V termination				
0 Div position setting, -0.3 V offset	+2.352 V	_____	_____	+2.448 V
0 Div position setting, 0 V offset	+2.352 V	_____	_____	+2.448 V
0 Div position setting, +0.3 V offset	+2.352 V	_____	_____	+2.448 V
Table continued...				

DC gain accuracy (averaged), TekConnect channels				
Instrument performance test	Minimum	Incoming	Outgoing	Maximum
Ch3 6.25 mV Vert scale setting				
0 V termination				
0 Div position setting, 0 V offset	+48.02 mV	_____	_____	+49.98 mV
0 Div position setting, +1 V offset	+48.02 mV	_____	_____	+49.98 mV
0 Div position setting, -1 V offset	+48.02 mV	_____	_____	+49.98 mV
+3.4 V termination				
0 Div position setting, +3.4 V offset	+48.02 mV	_____	_____	+49.98 mV
0 Div position setting, +2.4 V offset	+48.02 mV	_____	_____	+49.98 mV
-3.4 V termination				
0 Div position setting, -3.4 V offset	+48.02 mV	_____	_____	+49.98 mV
0 Div position setting, -2.4 V offset	+48.02 mV	_____	_____	+49.98 mV
Ch3 10 mV Vert scale setting,				
0 V termination				
0 Div position setting, 0 V offset	+76.44 mV	_____	_____	+79.56 mV
0 Div position setting, +1 V offset	+76.44 mV	_____	_____	+79.56 mV
0 Div position setting, -1 V offset	+76.44 mV	_____	_____	+79.56 mV
+3.4 V termination				
0 Div position setting, +3.4 V offset	+76.44 mV	_____	_____	+79.56 mV
0 Div position setting, +2.4 V offset	+76.44 mV	_____	_____	+79.56 mV
-3.4 V termination				
0 Div position setting, -3.4 V offset	+76.44 mV	_____	_____	+79.56 mV
0 Div position setting, -2.4 V offset	+76.44 mV	_____	_____	+79.56 mV
Table continued...				

DC gain accuracy (averaged), TekConnect channels				
Instrument performance test	Minimum	Incoming	Outgoing	Maximum
Ch3 20 mV Vert scale setting, 0 V termination				
0 Div position setting, 0 V offset	+152.9 mV	_____	_____	+159.1 mV
0 Div position setting, +1 V offset	+152.9 mV	_____	_____	+159.1 mV
0 Div position setting, -1 V offset	+152.9 mV	_____	_____	+159.1 mV
+3.4 V termination				
0 Div position setting, +3.4 V offset	+152.9 mV	_____	_____	+159.1 mV
0 Div position setting, +2.4 V offset	+152.9 mV	_____	_____	+159.1 mV
-3.4 V termination				
0 Div position setting, -3.4 V offset	+152.9 mV	_____	_____	+159.1 mV
0 Div position setting, -2.4 V offset	+152.9 mV	_____	_____	+159.1 mV
Ch3 50 mV Vert scale setting, 0 V termination				
0 Div position setting, 0 V offset	+382.2 mV	_____	_____	+397.8 mV
0 Div position setting, +1 V offset	+382.2 mV	_____	_____	+397.8 mV
0 Div position setting, -1 V offset	+382.2 mV	_____	_____	+397.8 mV
+3.4 V termination				
0 Div position setting, +3.4 V offset	+382.2 mV	_____	_____	+397.8 mV
0 Div position setting, +2.4 V offset	+382.2 mV	_____	_____	+397.8 mV
-3.4 V termination				
0 Div position setting, -3.4 V offset	+382.2 mV	_____	_____	+397.8 mV
0 Div position setting, -2.4 V offset	+382.2 mV	_____	_____	+397.8 mV
Table continued...				

DC gain accuracy (averaged), TekConnect channels				
Instrument performance test	Minimum	Incoming	Outgoing	Maximum
Ch3 100 mV Vert scale setting, 0 V termination				
0 Div position setting, 0 V offset	+764 mV	_____	_____	+796 mV
0 Div position setting, +1 V offset	+764 mV	_____	_____	+796 mV
0 Div position setting, -1 V offset	+764 mV	_____	_____	+796 mV
+3.4 V termination				
0 Div position setting, +3.4 V offset	+764 mV	_____	_____	+796 mV
0 Div position setting, +2.4 V offset	+764 mV	_____	_____	+796 mV
-3.4 V termination				
0 Div position setting, -3.4 V offset	+764 mV	_____	_____	+796 mV
0 Div position setting, -2.4 V offset	+764 mV	_____	_____	+796 mV
Ch3 120 mV Vert scale setting, 0 V termination				
0 Div position setting, 0 V offset	+917.3 mV	_____	_____	+954.7 mV
0 Div position setting, +1 V offset	+917.3 mV	_____	_____	+954.7 mV
0 Div position setting, -1 V offset	+917.3 mV	_____	_____	+954.7 mV
+3.4 V termination				
0 Div position setting, +3.4 V offset	+917.3 mV	_____	_____	+954.7 mV
0 Div position setting, +2.4 V offset	+917.3 mV	_____	_____	+954.7 mV
-3.4 V termination				
0 Div position setting, -3.4 V offset	+917.3 mV	_____	_____	+954.7 mV
0 Div position setting, -2.4 V offset	+917.3 mV	_____	_____	+954.7 mV
Ch3 140 mV Vert scale setting, 0 V termination				
0 Div position setting, -1 V offset	+823.2 mV	_____	_____	+856.8 mV
0 Div position setting, 0 V offset	+1.070 V	_____	_____	+1.114 V
0 Div position setting, +1 V offset	+823.2 mV	_____	_____	+856.8 mV
Table continued...				

DC gain accuracy (averaged), TekConnect channels				
Instrument performance test	Minimum	Incoming	Outgoing	Maximum
Ch3 200 mV Vert scale setting, 0 V termination				
0 Div position setting, -0.9 V offset	+1.176 V	_____	_____	+1.224 V
0 Div position setting, 0 V offset	+1.529 V	_____	_____	+1.591 V
0 Div position setting, +0.9 V offset	+1.176 V	_____	_____	+1.224 V
Ch3 400 mV Vert scale setting, 0 V termination				
0 Div position setting, -0.3 V offset	+2.352 V	_____	_____	+2.448 V
0 Div position setting, 0 V offset	+2.352 V	_____	_____	+2.448 V
0 Div position setting, +0.3 V offset	+2.352 V	_____	_____	+2.448 V
Ch4 6.25 mV Vert scale setting 0 V termination				
0 Div position setting, 0 V offset	+48.02 mV	_____	_____	+49.98 mV
0 Div position setting, +1 V offset	+48.02 mV	_____	_____	+49.98 mV
0 Div position setting, -1 V offset	+48.02 mV	_____	_____	+49.98 mV
+3.4 V termination				
0 Div position setting, +3.4 V offset	+48.02 mV	_____	_____	+49.98 mV
0 Div position setting, +2.4 V offset	+48.02 mV	_____	_____	+49.98 mV
-3.4 V termination				
0 Div position setting, -3.4 V offset	+48.02 mV	_____	_____	+49.98 mV
0 Div position setting, -2.4 V offset	+48.02 mV	_____	_____	+49.98 mV

Table continued...

DC gain accuracy (averaged), TekConnect channels				
Instrument performance test	Minimum	Incoming	Outgoing	Maximum
Ch4 10 mV Vert scale setting, 0 V termination				
0 Div position setting, 0 V offset	+76.44 mV	_____	_____	+79.56 mV
0 Div position setting, +1 V offset	+76.44 mV	_____	_____	+79.56 mV
0 Div position setting, -1 V offset	+76.44 mV	_____	_____	+79.56 mV
+3.4 V termination				
0 Div position setting, +3.4 V offset	+76.44 mV	_____	_____	+79.56 mV
0 Div position setting, +2.4 V offset	+76.44 mV	_____	_____	+79.56 mV
-3.4 V termination				
0 Div position setting, -3.4 V offset	+76.44 mV	_____	_____	+79.56 mV
0 Div position setting, -2.4 V offset	+76.44 mV	_____	_____	+79.56 mV
Ch4 20 mV Vert scale setting, 0 V termination				
0 Div position setting, 0 V offset	+152.9 mV	_____	_____	+159.1 mV
0 Div position setting, +1 V offset	+152.9 mV	_____	_____	+159.1 mV
0 Div position setting, -1 V offset	+152.9 mV	_____	_____	+159.1 mV
+3.4 V termination				
0 Div position setting, +3.4 V offset	+152.9 mV	_____	_____	+159.1 mV
0 Div position setting, +2.4 V offset	+152.9 mV	_____	_____	+159.1 mV
-3.4 V termination				
0 Div position setting, -3.4 V offset	+152.9 mV	_____	_____	+159.1 mV
0 Div position setting, -2.4 V offset	+152.9 mV	_____	_____	+159.1 mV
Table continued...				

DC gain accuracy (averaged), TekConnect channels				
Instrument performance test	Minimum	Incoming	Outgoing	Maximum
Ch4 50 mV Vert scale setting, 0 V termination				
0 Div position setting, 0 V offset	+382.2 mV	_____	_____	+397.8 mV
0 Div position setting, +1 V offset	+382.2 mV	_____	_____	+397.8 mV
0 Div position setting, -1 V offset	+382.2 mV	_____	_____	+397.8 mV
+3.4 V termination				
0 Div position setting, +3.4 V offset	+382.2 mV	_____	_____	+397.8 mV
0 Div position setting, +2.4 V offset	+382.2 mV	_____	_____	+397.8 mV
-3.4 V termination				
0 Div position setting, -3.4 V offset	+382.2 mV	_____	_____	+397.8 mV
0 Div position setting, -2.4 V offset	+382.2 mV	_____	_____	+397.8 mV
Ch4 100 mV Vert scale setting, 0 V termination				
0 Div position setting, 0 V offset	+764 mV	_____	_____	+796 mV
0 Div position setting, +1 V offset	+764 mV	_____	_____	+796 mV
0 Div position setting, -1 V offset	+764 mV	_____	_____	+796 mV
+3.4 V termination				
0 Div position setting, +3.4 V offset	+764 mV	_____	_____	+796 mV
0 Div position setting, +2.4 V offset	+764 mV	_____	_____	+796 mV
-3.4 V termination				
0 Div position setting, -3.4 V offset	+764 mV	_____	_____	+796 mV
0 Div position setting, -2.4 V offset	+764 mV	_____	_____	+796 mV

Table continued...

DC gain accuracy (averaged), TekConnect channels				
Instrument performance test	Minimum	Incoming	Outgoing	Maximum
Ch4 120 mV Vert scale setting, 0 V termination				
0 Div position setting, 0 V offset	+917.3 mV	_____	_____	+954.7 mV
0 Div position setting, +1 V offset	+917.3 mV	_____	_____	+954.7 mV
0 Div position setting, -1 V offset	+917.3 mV	_____	_____	+954.7 mV
+3.4 V termination				
0 Div position setting, +3.4 V offset	+917.3 mV	_____	_____	+954.7 mV
0 Div position setting, +2.4 V offset	+917.3 mV	_____	_____	+954.7 mV
-3.4 V termination				
0 Div position setting, -3.4 V offset	+917.3 mV	_____	_____	+954.7 mV
0 Div position setting, -2.4 V offset	+917.3 mV	_____	_____	+954.7 mV
Ch4 140 mV Vert scale setting, 0 V termination				
0 Div position setting, -1 V offset	+823.2 mV	_____	_____	+856.8 mV
0 Div position setting, 0 V offset	+1.070 V	_____	_____	+1.114 V
0 Div position setting, +1 V offset	+823.2 mV	_____	_____	+856.8 mV
Ch4 200 mV Vert scale setting, 0 V termination				
0 Div position setting, -0.9 V offset	+1.176 V	_____	_____	+1.224 V
0 Div position setting, 0 V offset	+1.529 V	_____	_____	+1.591 V
0 Div position setting, +0.9 V offset	+1.176 V	_____	_____	+1.224 V
Ch4 400 mV Vert scale setting, 0 V termination				
0 Div position setting, -0.3 V offset	+2.352 V	_____	_____	+2.448 V
0 Div position setting, 0 V offset	+2.352 V	_____	_____	+2.448 V
0 Div position setting, +0.3 V offset	+2.352 V	_____	_____	+2.448 V

Offset accuracy, ATI channel				
Instrument performance test	Minimum	Incoming	Outgoing	Maximum
Ch2 10 mV Vert scale, 0 Div position setting,				
0 V offset	-3.0 mV	_____	_____	+3.0 mV
+0.2 V offset	+0.1963 V	_____	_____	+0.2037 V
-0.2 V offset	-0.2037 V	_____	_____	-0.1963 V
Ch2 20 mV Vert scale, 0 Div position setting,				
0 V offset	-4.0 mV	_____	_____	+4.0 mV
+0.1 V offset	+0.0957 V	_____	_____	+0.1044 V
-0.1 V offset	-0.1044 V	_____	_____	-0.0957 V
Ch2 30 mV Vert scale, 0 Div position setting,				
0 V offset	-5.0 mV	_____	_____	+5.0 mV

Offset accuracy, TekConnect channels				
Instrument performance test	Minimum	Incoming	Outgoing	Maximum
Ch1 6.25 mV Vert scale, 0 Div position setting,				
0 V offset, 0 V termination	-3.125 mV	_____	_____	+3.125 mV
+3.4 V offset, +3.5 V termination	+3.3831 V	_____	_____	+3.4169 V
-3.4 V offset, -3.5 V termination	-3.4169 V	_____	_____	-3.3831 V
Ch1 10 mV Vert scale, 0 Div position setting,				
0 V offset, 0 V termination	-3.5 mV	_____	_____	+3.5 mV
+3.4 V offset, +3.5 V termination	+3.3827 V	_____	_____	+3.4173 V
-3.4 V offset, -3.5 V termination	-3.4173 V	_____	_____	-3.3827 V
Ch1 20 mV Vert scale, 0 Div position setting,				
0 V offset, 0 V termination	-4.5 mV	_____	_____	+4.5 mV
+3.4 V offset, +3.5 V termination	+3.3817 V	_____	_____	+3.4183 V
-3.4 V offset, -3.5 V termination	-3.4183 V	_____	_____	-3.3817 V
Ch1 50 mV Vert scale, 0 Div position setting,				
0 V offset, 0 V termination	-7.5 mV	_____	_____	+7.5 mV
+3.4 V offset, +3.5 V termination	+3.3787 V	_____	_____	+3.4213 V
-3.4 V offset, -3.5 V termination	-3.4213 V	_____	_____	-3.3787 V

Table continued...

Offset accuracy, TekConnect channels				
Instrument performance test	Minimum	Incoming	Outgoing	Maximum
Ch1 100 mV Vert scale, 0 Div position setting,				
0 V offset, 0 V termination	-12.5 mV	_____	_____	+12.5 mV
+3.4 V offset, +3.5 V termination	+3.3737 V	_____	_____	+3.4263 V
-3.4 V offset, -3.5 V termination	-3.4263 V	_____	_____	-3.3737 V
Ch1 120 mV Vert scale, 0 Div position setting,				
0 V offset, 0 V termination	-14.5 mV	_____	_____	+14.5 mV
+3.4 V offset, +3.5 V termination	+3.3717 V	_____	_____	+3.4283 V
-3.4 V offset, -3.5 V termination	-3.4283 V	_____	_____	-3.3717 V
Ch1 140 mV Vert scale, 0 Div position setting,				
-6 V offset, 0 V termination	-6.0634 V	_____	_____	-5.9366 V
0 V offset, 0 V termination	-27.4 mV	_____	_____	+27.4 mV
+6 V offset, 0 V termination	+5.9366 V	_____	_____	+6.0634 V
Ch1 200 mV Vert scale, 0 Div position setting,				
-6 V offset, 0 V termination	-6.0694 V	_____	_____	-5.9306 V
0 V offset, 0 V termination	-33.4 mV	_____	_____	+33.4 mV
+6 V offset, 0 V termination	+5.9306 V	_____	_____	+6.0694 V
Ch1 400 mV Vert scale, 0 Div position setting,				
-6 V offset, 0 V termination	-6.0894 mV	_____	_____	-5.9106 mV
0 V offset, 0 V termination	-53.4 mV	_____	_____	+53.4 mV
+6 V offset, 0 V termination	+5.9106 V	_____	_____	+6.0894 V
Ch2 6.25 mV Vert scale, 0 Div position setting,				
0 V offset, 0 V termination	-3.125 mV	_____	_____	+3.125 mV
+3.4 V offset, +3.5 V termination	+3.3831 V	_____	_____	+3.4169 V
-3.4 V offset, -3.5 V termination	-3.4169 V	_____	_____	-3.3831 V
Ch2 10 mV Vert scale, 0 Div position setting,				
0 V offset, 0 V termination	-3.5 mV	_____	_____	+3.5 mV
+3.4 V offset, +3.5 V termination	+3.3827 V	_____	_____	+3.4173 V
-3.4 V offset, -3.5 V termination	-3.4173 V	_____	_____	-3.3827 V

Table continued...

Offset accuracy, TekConnect channels				
Instrument performance test	Minimum	Incoming	Outgoing	Maximum
Ch2 20 mV Vert scale, 0 Div position setting,				
0 V offset, 0 V termination	-4.5 mV	_____	_____	+4.5 mV
+3.4 V offset, +3.5 V termination	+3.3817 V	_____	_____	+3.4183 V
-3.4 V offset, -3.5 V termination	-3.4183 V	_____	_____	-3.3817 V
Ch2 50 mV Vert scale, 0 Div position setting,				
0 V offset, 0 V termination	-7.5 mV	_____	_____	+7.5 mV
+3.4 V offset, +3.5 V termination	+3.3787 V	_____	_____	+3.4213 V
-3.4 V offset, -3.5 V termination	-3.4213 V	_____	_____	-3.3787 V
Ch2 100 mV Vert scale, 0 Div position setting,				
0 V offset, 0 V termination	-12.5 mV	_____	_____	+12.5 mV
+3.4 V offset, +3.5 V termination	+3.3737 V	_____	_____	+3.4263 V
-3.4 V offset, -3.5 V termination	-3.4263 V	_____	_____	-3.3737 V
Ch2 120 mV Vert scale, 0 Div position setting,				
0 V offset, 0 V termination	-14.5 mV	_____	_____	+14.5 mV
+3.4 V offset, +3.5 V termination	+3.3717 V	_____	_____	+3.4283 V
-3.4 V offset, -3.5 V termination	-3.4283 V	_____	_____	-3.3717 V
Ch2 140 mV Vert scale, 0 Div position setting,				
-6 V offset, 0 V termination	-6.0634 V	_____	_____	-5.9366 V
0 V offset, 0 V termination	-27.4 mV	_____	_____	+27.4 mV
+6 V offset, 0 V termination	+5.9366 V	_____	_____	+6.0634 V
Ch2 200 mV Vert scale, 0 Div position setting,				
-6 V offset, 0 V termination	-6.0694 V	_____	_____	-5.9306 V
0 V offset, 0 V termination	-33.4 mV	_____	_____	+33.4 mV
+6 V offset, 0 V termination	+5.9306 V	_____	_____	+6.0694 V
Ch2 400 mV Vert scale, 0 Div position setting,				
-6 V offset, 0 V termination	-6.0894 mV	_____	_____	-5.9106 mV
0 V offset, 0 V termination	-53.4 mV	_____	_____	+53.4 mV
+6 V offset, 0 V termination	+5.9106 V	_____	_____	+6.0894 V

Table continued...

Offset accuracy, TekConnect channels				
Instrument performance test	Minimum	Incoming	Outgoing	Maximum
Ch3 6.25 mV Vert scale, 0 Div position setting,				
0 V offset, 0 V termination	-3.125 mV	_____	_____	+3.125 mV
+3.4 V offset, +3.5 V termination	+3.3831 V	_____	_____	+3.4169 V
-3.4 V offset, -3.5 V termination	-3.4169 V	_____	_____	-3.3831 V
Ch3 10 mV Vert scale, 0 Div position setting,				
0 V offset, 0 V termination	-3.5 mV	_____	_____	+3.5 mV
+3.4 V offset, +3.5 V termination	+3.3827 V	_____	_____	+3.4173 V
-3.4 V offset, -3.5 V termination	-3.4173 V	_____	_____	-3.3827 V
Ch3 20 mV Vert scale, 0 Div position setting,				
0 V offset, 0 V termination	-4.5 mV	_____	_____	+4.5 mV
+3.4 V offset, +3.5 V termination	+3.3817 V	_____	_____	+3.4183 V
-3.4 V offset, -3.5 V termination	-3.4183 V	_____	_____	-3.3817 V
Ch3 50 mV Vert scale, 0 Div position setting,				
0 V offset, 0 V termination	-7.5 mV	_____	_____	+7.5 mV
+3.4 V offset, +3.5 V termination	+3.3787 V	_____	_____	+3.4213 V
-3.4 V offset, -3.5 V termination	-3.4213 V	_____	_____	-3.3787 V
Ch3 100 mV Vert scale, 0 Div position setting,				
0 V offset, 0 V termination	-12.5 mV	_____	_____	+12.5 mV
+3.4 V offset, +3.5 V termination	+3.3737 V	_____	_____	+3.4263 V
-3.4 V offset, -3.5 V termination	-3.4263 V	_____	_____	-3.3737 V
Ch3 120 mV Vert scale, 0 Div position setting,				
0 V offset, 0 V termination	-14.5 mV	_____	_____	+14.5 mV
+3.4 V offset, +3.5 V termination	+3.3717 V	_____	_____	+3.4283 V
-3.4 V offset, -3.5 V termination	-3.4283 V	_____	_____	-3.3717 V
Ch3 140 mV Vert scale, 0 Div position setting,				
-6 V offset, 0 V termination	-6.0634 V	_____	_____	-5.9366 V
0 V offset, 0 V termination	-27.4 mV	_____	_____	+27.4 mV
+6 V offset, 0 V termination	+5.9366 V	_____	_____	+6.0634 V

Table continued...

Offset accuracy, TekConnect channels				
Instrument performance test	Minimum	Incoming	Outgoing	Maximum
Ch3 200 mV Vert scale, 0 Div position setting,				
-6 V offset, 0 V termination	-6.0694 V	_____	_____	-5.9306 V
0 V offset, 0 V termination	-33.4 mV	_____	_____	+33.4 mV
+6 V offset, 0 V termination	+5.9306 V	_____	_____	+6.0694 V
Ch3 400 mV Vert scale, 0 Div position setting,				
-6 V offset, 0 V termination	-6.0894 mV	_____	_____	-5.9106 mV
0 V offset, 0 V termination	-53.4 mV	_____	_____	+53.4 mV
+6 V offset, 0 V termination	+5.9106 V	_____	_____	+6.0894 V
Ch4 6.25 mV Vert scale, 0 Div position setting,				
0 V offset, 0 V termination	-3.125 mV	_____	_____	+3.125 mV
+3.4 V offset, +3.5 V termination	+3.3831 V	_____	_____	+3.4169 V
-3.4 V offset, -3.5 V termination	-3.4169 V	_____	_____	-3.3831 V
Ch4 10 mV Vert scale, 0 Div position setting,				
0 V offset, 0 V termination	-3.5 mV	_____	_____	+3.5 mV
+3.4 V offset, +3.5 V termination	+3.3827 V	_____	_____	+3.4173 V
-3.4 V offset, -3.5 V termination	-3.4173 V	_____	_____	-3.3827 V
Ch4 20 mV Vert scale, 0 Div position setting,				
0 V offset, 0 V termination	-4.5 mV	_____	_____	+4.5 mV
+3.4 V offset, +3.5 V termination	+3.3817 V	_____	_____	+3.4183 V
-3.4 V offset, -3.5 V termination	-3.4183 V	_____	_____	-3.3817 V
Ch4 50 mV Vert scale, 0 Div position setting,				
0 V offset, 0 V termination	-7.5 mV	_____	_____	+7.5 mV
+3.4 V offset, +3.5 V termination	+3.3787 V	_____	_____	+3.4213 V
-3.4 V offset, -3.5 V termination	-3.4213 V	_____	_____	-3.3787 V
Ch4 100 mV Vert scale, 0 Div position setting,				
0 V offset, 0 V termination	-12.5 mV	_____	_____	+12.5 mV
+3.4 V offset, +3.5 V termination	+3.3737 V	_____	_____	+3.4263 V
-3.4 V offset, -3.5 V termination	-3.4263 V	_____	_____	-3.3737 V

Table continued...

Offset accuracy, TekConnect channels				
Instrument performance test	Minimum	Incoming	Outgoing	Maximum
Ch4 120 mV Vert scale, 0 Div position setting,				
0 V offset, 0 V termination	-14.5 mV	_____	_____	+14.5 mV
+3.4 V offset, +3.5 V termination	+3.3717 V	_____	_____	+3.4283 V
-3.4 V offset, -3.5 V termination	-3.4283 V	_____	_____	-3.3717 V
Ch4 140 mV Vert scale, 0 Div position setting,				
-6 V offset, 0 V termination	-6.0634 V	_____	_____	-5.9366 V
0 V offset, 0 V termination	-27.4 mV	_____	_____	+27.4 mV
+6 V offset, 0 V termination	+5.9366 V	_____	_____	+6.0634 V
Ch4 200 mV Vert scale, 0 Div position setting,				
-6 V offset, 0 V termination	-6.0694 V	_____	_____	-5.9306 V
0 V offset, 0 V termination	-33.4 mV	_____	_____	+33.4 mV
+6 V offset, 0 V termination	+5.9306 V	_____	_____	+6.0694 V
Ch4 400 mV Vert scale, 0 Div position setting,				
-6 V offset, 0 V termination	-6.0894 mV	_____	_____	-5.9106 mV
0 V offset, 0 V termination	-53.4 mV	_____	_____	+53.4 mV
+6 V offset, 0 V termination	+5.9106 V	_____	_____	+6.0894 V

Channel bandwidth, ATI channel				
Instrument performance test	Minimum	Incoming	Outgoing	Maximum
Ch2				
10 mV	24.7 mV	_____	_____	N/A
20 mV	49.5 mV	_____	_____	N/A
30 mV	74.2 mV	_____	_____	N/A

Channel bandwidth, TekConnect channels				
Instrument performance test	Minimum	Incoming	Outgoing	Maximum
Ch1				
6.25 mV	15.5 mV	_____	_____	N/A
10 mV	24.7 mV	_____	_____	N/A
20 mV	50 mV	_____	_____	N/A
50 mV	124 mV	_____	_____	N/A
100 mV	248 mV	_____	_____	N/A
120 mV	297 mV	_____	_____	N/A
140 mV	346 mV	_____	_____	N/A
200 mV	495 mV	_____	_____	N/A
400 mV	990 mV	_____	_____	N/A
Ch2 (non-ATI instruments only)				
6.25 mV	15.5 mV	_____	_____	N/A
10 mV	24.7 mV	_____	_____	N/A
20 mV	50 mV	_____	_____	N/A
50 mV	124 mV	_____	_____	N/A
100 mV	248 mV	_____	_____	N/A
120 mV	297 mV	_____	_____	N/A
140 mV	346 mV	_____	_____	N/A
200 mV	495 mV	_____	_____	N/A
400 mV	990 mV	_____	_____	N/A
Ch3				
6.25 mV	15.5 mV	_____	_____	N/A
10 mV	24.7 mV	_____	_____	N/A
20 mV	50 mV	_____	_____	N/A
50 mV	124 mV	_____	_____	N/A
100 mV	248 mV	_____	_____	N/A
120 mV	297 mV	_____	_____	N/A
140 mV	346 mV	_____	_____	N/A
200 mV	495 mV	_____	_____	N/A
400 mV	990 mV	_____	_____	N/A

Table continued...

Channel bandwidth, TekConnect channels				
Instrument performance test	Minimum	Incoming	Outgoing	Maximum
Ch4				
6.25 mV	15.5 mV	_____	_____	N/A
10 mV	24.7 mV	_____	_____	N/A
20 mV	50 mV	_____	_____	N/A
50 mV	124 mV	_____	_____	N/A
100 mV	248 mV	_____	_____	N/A
120 mV	297 mV	_____	_____	N/A
140 mV	346 mV	_____	_____	N/A
200 mV	495 mV	_____	_____	N/A
400 mV	990 mV	_____	_____	N/A

Input resistance, ATI channel				
Instrument performance test	Minimum	Incoming	Outgoing	Maximum
<b>Input resistance</b>				
Ch2 10 mV/div	48.5 $\Omega$	_____	_____	51.5 $\Omega$
Ch2 20 mV/div	48.5 $\Omega$	_____	_____	51.5 $\Omega$
Ch2 30 mV/div	48.5 $\Omega$	_____	_____	51.5 $\Omega$

Input resistance, TekConnect channels				
Instrument performance test	Minimum	Incoming	Outgoing	Maximum
<b>Input resistance,</b>				
Ch1 6.25 mV/div	48.5 $\Omega$	_____	_____	51.5 $\Omega$
Ch2 6.25 mV/div (non ATI instruments only)	48.5 $\Omega$	_____	_____	51.5 $\Omega$
Ch3 6.25 mV/div	48.5 $\Omega$	_____	_____	51.5 $\Omega$
Ch4 6.25 mV/div	48.5 $\Omega$	_____	_____	51.5 $\Omega$
Ch1 140 mV/div	47.8 $\Omega$	_____	_____	52.2 $\Omega$
Ch2 140 mV/div	47.8 $\Omega$	_____	_____	52.2 $\Omega$
Ch3 140 mV/div	47.8 $\Omega$	_____	_____	52.2 $\Omega$
Ch4 140 mV/div	47.8 $\Omega$	_____	_____	52.2 $\Omega$

Time base system				
Instrument performance test	Minimum	Incoming	Outgoing	Maximum
<b>Time base, delay time, and internal reference accuracy</b>				
10 MHz	Pass/Fail	_____	_____	Pass/Fail
<b>External reference</b>				
10 MHz	Pass/Fail	_____	_____	Pass/Fail

Time base system				
Instrument performance test	Minimum	Incoming	Outgoing	Maximum
<b>Delta time measurement</b>				
DPO77002SX, Ch2, BWE on				
10 mV, rms	N/A	_____	_____	0.560 ps
10 mV, pk-pk	N/A	_____	_____	5.60 ps
30 mV, rms	N/A	_____	_____	0.400 ps
30 mV, pk-pk	N/A	_____	_____	4.00 ps

DPO77002SX, Ch1, BWE on				
6.25 mV, rms	N/A	_____	_____	0.620 ps
6.25 mV, pk-pk	N/A	_____	_____	6.20 ps
50 mV, rms	N/A	_____	_____	0.400 ps
50 mV, pk-pk	N/A	_____	_____	4.00 ps
100 mV, rms	N/A	_____	_____	0.400 ps
100 mV, pk-pk	N/A	_____	_____	4.00 ps

DPO77002SX, Ch3, BWE on				
6.25 mV, rms	N/A	_____	_____	0.620 ps
6.25 mV, pk-pk	N/A	_____	_____	6.20 ps
50 mV, rms	N/A	_____	_____	0.400 ps
50 mV, pk-pk	N/A	_____	_____	4.00 ps
100 mV, rms	N/A	_____	_____	0.400 ps
100 mV, pk-pk	N/A	_____	_____	4.00 ps

DPO75902SX, Ch2, BWE on				
10 mV, rms	N/A	_____	_____	0.560 ps
10 mV, pk-pk	N/A	_____	_____	5.60 ps
30 mV, rms	N/A	_____	_____	0.400 ps
30 mV, pk-pk	N/A	_____	_____	4.00 ps

DPO75902SX, Ch1, BWE on				
6.25 mV, rms	N/A	_____	_____	0.620 ps
6.25 mV, pk-pk	N/A	_____	_____	6.20 ps
50 mV, rms	N/A	_____	_____	0.400 ps
50 mV, pk-pk	N/A	_____	_____	4.00 ps
100 mV, rms	N/A	_____	_____	0.400 ps
100 mV, pk-pk	N/A	_____	_____	4.00 ps

DPO75902SX, Ch3, BWE on				
6.25 mV, rms	N/A	_____	_____	0.620 ps
6.25 mV, pk-pk	N/A	_____	_____	6.20 ps
50 mV, rms	N/A	_____	_____	0.400 ps
50 mV, pk-pk	N/A	_____	_____	4.00 ps
100 mV, rms	N/A	_____	_____	0.400 ps
100 mV, pk-pk	N/A	_____	_____	4.00 ps

DPO75002SX, Ch2, BWE on				
10 mV, rms	N/A	_____	_____	0.560 ps
10 mV, pk-pk	N/A	_____	_____	5.60 ps
30 mV, rms	N/A	_____	_____	0.400 ps
30 mV, pk-pk	N/A	_____	_____	4.00 ps

DPO75002SX, Ch1, BWE on				
Table continued...				

Performance verification

6.25 mV, rms	N/A	_____	_____	0.620 ps
6.25 mV, pk-pk	N/A	_____	_____	6.20 ps
50 mV, rms	N/A	_____	_____	0.400 ps
50 mV, pk-pk	N/A	_____	_____	4.00 ps
100 mV, rms	N/A	_____	_____	0.400 ps
100 mV, pk-pk	N/A	_____	_____	4.00 ps

DPO75002SX, Ch3, BWE on

6.25 mV, rms	N/A	_____	_____	0.620 ps
6.25 mV, pk-pk	N/A	_____	_____	6.20 ps
50 mV, rms	N/A	_____	_____	0.400 ps
50 mV, pk-pk	N/A	_____	_____	4.00 ps
100 mV, rms	N/A	_____	_____	0.400 ps
100 mV, pk-pk	N/A	_____	_____	4.00 ps

DPO73304SX, Ch1, BWE on

6.25 mV, rms	N/A	_____	_____	0.620 ps
6.25 mV, pk-pk	N/A	_____	_____	6.20 ps
50 mV, rms	N/A	_____	_____	0.400 ps
50 mV, pk-pk	N/A	_____	_____	4.00 ps
100 mV, rms	N/A	_____	_____	0.400 ps
100 mV, pk-pk	N/A	_____	_____	4.00 ps

DPO73304SX, Ch2, BWE on

6.25 mV, rms	N/A	_____	_____	0.620 ps
6.25 mV, pk-pk	N/A	_____	_____	6.20 ps
50 mV, rms	N/A	_____	_____	0.400 ps
50 mV, pk-pk	N/A	_____	_____	4.00 ps
100 mV, rms	N/A	_____	_____	0.400 ps
100 mV, pk-pk	N/A	_____	_____	4.00 ps

DPO73304SX, Ch3, BWE on

Table continued...

6.25 mV, rms	N/A	_____	_____	0.620 ps
6.25 mV, pk-pk	N/A	_____	_____	6.20 ps
50 mV, rms	N/A	_____	_____	0.400 ps
50 mV, pk-pk	N/A	_____	_____	4.00 ps
100 mV, rms	N/A	_____	_____	0.400 ps
100 mV, pk-pk	N/A	_____	_____	4.00 ps

## DPO73304SX, Ch4, BWE on

6.25 mV, rms	N/A	_____	_____	0.620 ps
6.25 mV, pk-pk	N/A	_____	_____	6.20 ps
50 mV, rms	N/A	_____	_____	0.400 ps
50 mV, pk-pk	N/A	_____	_____	4.00 ps
100 mV, rms	N/A	_____	_____	0.400 ps
100 mV, pk-pk	N/A	_____	_____	4.00 ps

## DPO72304SX, Ch1, BWE on

10 mV, rms	N/A	_____	_____	0.620 ps
6.25 mV, pk-pk	N/A	_____	_____	6.20 ps
6.25 mV, rms	N/A	_____	_____	0.400 ps
50 mV, pk-pk	N/A	_____	_____	4.00 ps
100 mV, rms	N/A	_____	_____	0.400 ps
100 mV, pk-pk	N/A	_____	_____	4.00 ps

## DPO72304SX, Ch2, BWE on

6.25 mV, rms	N/A	_____	_____	0.620 ps
6.25 mV, pk-pk	N/A	_____	_____	6.20 ps
50 mV, rms	N/A	_____	_____	0.400 ps
50 mV, pk-pk	N/A	_____	_____	4.00 ps
100 mV, rms	N/A	_____	_____	0.400 ps
100 mV, pk-pk	N/A	_____	_____	4.00 ps

## DPO72304SX, Ch3, BWE on

Table continued...

Performance verification

6.25 mV, rms	N/A	_____	_____	0.620 ps
6.25 mV, pk-pk	N/A	_____	_____	6.20 ps
50 mV, rms	N/A	_____	_____	0.400 ps
50 mV, pk-pk	N/A	_____	_____	4.00 ps
100 mV, rms	N/A	_____	_____	0.400 ps
100 mV, pk-pk	N/A	_____	_____	4.00 ps

DPO72304SX, Ch4, BWE on

6.25 mV, rms	N/A	_____	_____	0.620 ps
6.25 mV, pk-pk	N/A	_____	_____	6.20 ps
50 mV, rms	N/A	_____	_____	0.400 ps
50 mV, pk-pk	N/A	_____	_____	4.00 ps
100 mV, rms	N/A	_____	_____	0.400 ps
100 mV, pk-pk	N/A	_____	_____	4.00 ps

Trigger system accuracy				
Instrument performance test	Minimum	Incoming	Outgoing	Maximum
<b>Time accuracy for time qualified triggers</b>				
time range < 1 ms				
Lower Limit	4.835 ns	_____	_____	5.165 ns
Upper Limit	4.835 ns	_____	_____	5.165 ns
time range ≥ 1 μs				
Lower Limit	1.47 μs	_____	_____	2.53 μs
Upper Limit	1.47 μs	_____	_____	2.53 μs
Ch1 trigger sensitivity, 50 MHz	Pass/Fail	_____	_____	Pass/Fail
Ch1 delayed trigger sensitivity, 50 MHz	Pass/Fail	_____	_____	Pass/Fail
AUX trigger input sensitivity, 50 MHz	Pass/Fail	_____	_____	Pass/Fail
Ch1 trigger sensitivity				

Table continued...

Trigger system accuracy				
Instrument performance test	Minimum	Incoming	Outgoing	Maximum
5 GHz	Pass/Fail	_____	_____	Pass/Fail
10 GHz	Pass/Fail	_____	_____	Pass/Fail
15 GHz	Pass/Fail	_____	_____	Pass/Fail
20 GHz	Pass/Fail	_____	_____	Pass/Fail
25 GHz	Pass/Fail	_____	_____	Pass/Fail
Ch1 B trigger sensitivity				
5 GHz	Pass/Fail	_____	_____	Pass/Fail
10 GHz	Pass/Fail	_____	_____	Pass/Fail
15 GHz	Pass/Fail	_____	_____	Pass/Fail
20 GHz	Pass/Fail	_____	_____	Pass/Fail
25 GHz	Pass/Fail	_____	_____	Pass/Fail
Ch1 AUX trigger input				
11 GHz	Pass/Fail	_____	_____	Pass/Fail
Fast Edge output signal Voltage (difference)				
Positive	450 mV	_____	_____	650 mV
Negative	450 mV	_____	_____	650 mV

## Signal acquisition system checks

These procedures check those characteristics that relate to the signal-acquisition system and are listed as checked under *Warranted Characteristics* in *Specifications*. See [Equipment required](#) on page 48 for test equipment specifications.



- From the button bar, select **Measure** and select the **Ampl** tab, **More**, and then select **Mean** to measure the mean of the current channel.
- Press the **X** (Close) button.



**Note:** If any of the voltages supplied by your generator are not calibrated, verify those generator voltages using a digital multimeter, item 24 on page 50.


- c. *Set the vertical scale:* Set the vertical **Scale** to one of the settings listed in the following table that is not yet checked, starting with the first setting listed.

**Table 4: DC voltage measurement accuracy**

Scale setting	Offset setting <sup>10</sup>	Generator setting	Accuracy limits
10 mV	0 V	30 mV	26.0 mV to 34.0 mV
	0 V	-30 mV	-34.0 mV to -26.0 mV
	-0.2 V	-170 mV	-174.7 mV to -165.3 mV
	+0.2 V	+170 mV	+165.3 mV to +174.7 mV
	+0.2 V	0.23 V	225.3 mV to 234.7 mV
	-0.2 V	-0.23 V	-234.7 mV to -225.3 mV
20 mV	0 V	60 mV	54.0 mV to 66.0 mV
	0 V	-60 mV	-66.0 mV to -54.0 mV
	-0.1 V	-40 mV	-46.4 mV to -33.7 mV
	+0.1 V	+40 mV	+33.7 mV to +46.4 mV
	+0.1 V	160 mV	153.7 mV to 166.4 mV
	-0.1 V	-160 mV	-166.4 mV to -153.7 mV
30 mV	0 V	90 mV	82.0 mV to 98.0 mV
	0 V	-90 mV	-98.0 mV to -82.0 mV

- d. *Display the test signal:*
- Display the **Vertical Setup** menu.
  - Use the keypad to set the Offset vertical setting as listed in the table for the current vertical scale setting. The baseline level may move off screen.
  - Set the generator to the level and polarity indicated in the table for the vertical scale and offset settings you have made.
- e. *Measure the test signal:* Press the **X** (close) button. Read the measurement results at the measurement statistics **Mean** measurement readout. See the following figure.

<sup>10</sup> Set as precisely as the instrument's offset resolution permits.

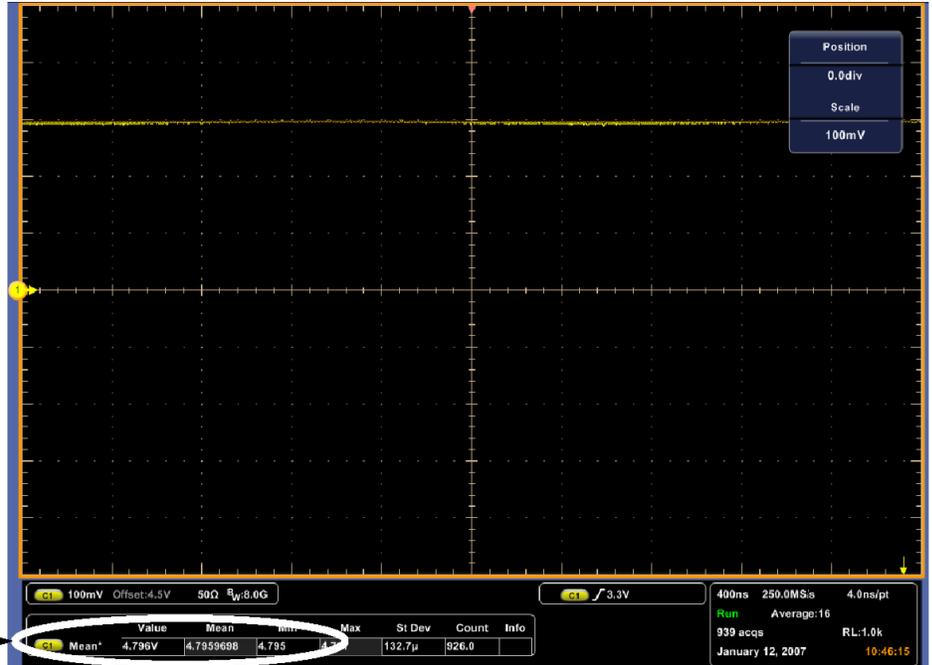

Turn on the mean measurement and read the results here.

Figure 7: Measurement of DC accuracy

f. Check against limits:

- CHECK that the readout for the measurement **Mean** readout on screen is within the limits listed for the current vertical scale and termination/offset/generator settings. Enter the value on test record.
- Repeat substeps 2.c on page 107 through 2.f on page 108 until all vertical scale settings are checked for the channel under test. (See Table 5 on page 110.)

3. Disconnect the hookup:

- Set the generator output to 0 V.
- Disconnect the equipment from the generator output and the input connector of the channel last tested.

## Check DC voltage measurement accuracy, TekConnect channels

Equipment Required	Prerequisites
One DC calibration generator, (Item 7 on page 48) Two Dual-Banana Connectors, (Item 6 on page 48) Two cables, (Item 5 on page 48) One BNC T adapter, (Item 25 on page 50) One SMA male-to-BNC female adapter, (Item 18 on page 50)	The instrument must meet the prerequisites. (See <a href="#">Prerequisites</a> on page 47.)



**WARNING:** The generator is capable of outputting dangerous voltages. Be sure to set the DC calibration generator to off or 0 volts before connecting, disconnecting, and/or moving the test hookup during the performance of this procedure.

1. Install the test hookup and preset the instrument controls:

- a. *Hook up the test-signal source:*
  - Set the output of a DC calibration generator to off or 0 volts.
  - Connect the output of a DC calibration generator. (See [Figure 8](#) on page 109.)
- b. *Initialize the instrument:* Pull down the **File** menu, select Recall Default Setup.
- c. *Modify the default settings:*
  - From the button bar, select **Horiz/Acq** and select the **Acquisition** tab.
  - Set the Horizontal Scale to **1 ms/div**.
  - Set the Record Length to **5000**.
  - Set the Acquisition Mode to **Hi Res**.
  - Set the Trigger Source to **Line**.

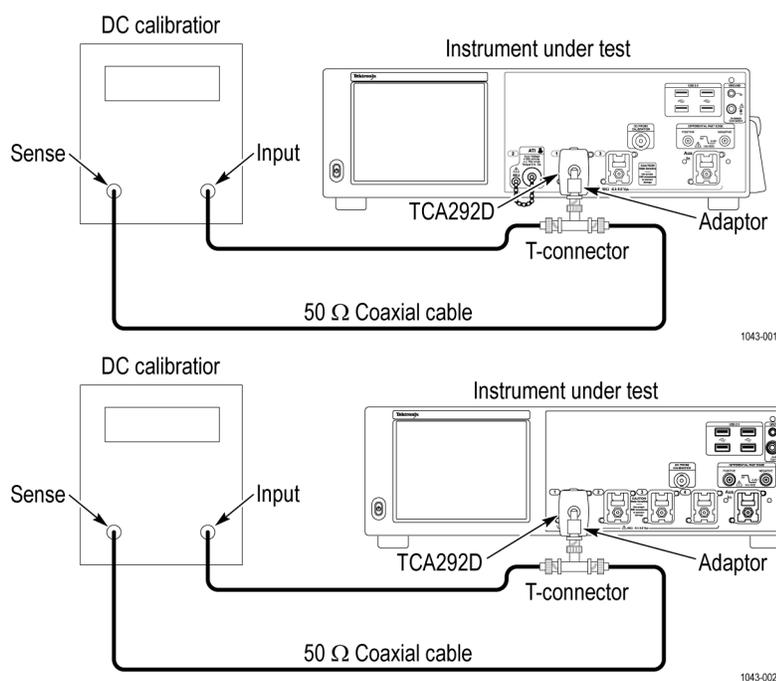


Figure 8: DC voltage accuracy test hookup

2. *Confirm input channels are within limits for DC accuracy at maximum offset, position, and termination voltage:* Do the following substeps - test Ch 1 first, *skipping substep 2.a* on page 109 of this step *since Ch 1 is already selected from step 1* on page 108.
  - a. *Select an unchecked channel:*
    - From the button bar, select **Measure** and then **Clear All** to remove the previous measurement.
    - From the button bar, select **Vertical** and then **Vertical Setup** Click the Display On button of the channel just confirmed to remove the channel from the display.
    - Select the tab that corresponds to the channel you are to confirm. Click the Display Off button.
    - Set the generator output to 0 V.
    - Move the test hookup to the channel you selected.
  - b. *Turn on the measurement Mean for the channel:*
    - From the button bar, select **Measure** and select the **Ampl** tab, **More**, and then select **Mean** to measure the mean of the current channel.
    - Press the **X** (Close) button.



**Note:** If any of the voltages supplied by your generator are not calibrated, verify those generator voltages using a digital multimeter, item 24 on page 50.

- c. *Set the vertical scale:* Set the vertical **Scale** to one of the settings listed in the following table that is not yet checked, starting with the first setting listed.

**Table 5: DC voltage measurement accuracy**

Scale setting	Termination setting	Offset setting <sup>11</sup>	Generator setting	Accuracy limits
6.25 mV	+3.5 V	+3.4 V	3.419 V	3.4012 V to 3.4363 V
	+3.5 V	+2.4 V	2.419 V	2.4032 V to 2.4343 V
	+1.5 V	+2.5 V	2.519 V	2.503 V to 2.5345 V
	+1.5 V	+1.5 V	1.519 V	1.509 V to 1.5285
	+1.5 V	+0.5 V	519 mV	511.0 mV to 526.5mV
	0 V	0 V	18.75 mV	15.0 mV to 22.5 mV
	0 V	0 V	-18.75 mV	-22.5 mV to -15.0 mV
	0 V	-1.0 V	-981 mV	-991 mV to -971.5 mV
	0 V	+1.0 V	1.019 V	1.009 mV to 1.0285 V
	-3.5 V	-3.4 V	-3.381 V	-3.3988 V to -3.3637 V
	-3.5 V	-2.4 V	-2.381 V	-2.3968 V to -2.3657 V
	-1.5 V	-2.5 V	-2.481 V	-2.497 V to -2.4655 V
	-1.5 V	-1.5 V	-1.481 V	-1.491 V to -1.4715 V
	-1.5 V	-0.5 V	-481 mV	-489 mV to -473.5 mV
10 mV	+3.5 V	+3.4 V	3.43 V	3.4117 V to 3.4483 V
	+3.5 V	+2.4 V	2.43 V	2.4137 V to 2.4463 V
	+1.5 V	+2.5 V	2.53 V	2.5135 V to 2.5465 V
	+1.5 V	+1.5 V	1.53 V	1.5195 V to 1.5405 V
	+1.5 V	+0.5 V	530 mV	521.5 mV to 538.5 mV
	0 V	0 V	30 mV	25.5 mV to 34.5 mV
	0 V	0 V	30 mV	25.5 mV to 34.5 mV

Table continued...

<sup>11</sup> Set as precisely as the instrument's offset resolution permits.

Scale setting	Termination setting	Offset setting <sup>11</sup>	Generator setting	Accuracy limits
	0 V	0 V	-30 mV	-34.5 mV to -25.5 mV
	0 V	-1.0 V	-970 mV	-980.5 mV to -959.5 mV
	0 V	+1.0 V	1.03 V	1.0195 V to 1.0405 V
	-3.5 V	-3.4 V	-3.37 V	-3.3883 V to -3.3517 V
	-3.5 V	-2.4 V	-2.37V	-2.3863 V to -2.3537 V
	-1.5 V	-2.5 V	-2.47 V	-2.4865 V to -2.4535 V
	-1.5 V	-1.5 V	-1.47 V	-1.4805 V to -1.4595 V
	-1.5 V	-0.5 V	-470 mV	-478.5 mV to -461.5 mV
20 mV	+3.5 V	+3.4 V	3.46 V	3.4397 V to 3.4803 V
	+3.5 V	+2.4 V	2.46 V	2.4417 V to 2.4783 V
	+1.5 V	+2.5 V	2.56 V	2.5415 V to 2.5785 V
	+1.5 V	+1.5 V	1.56 V	1.5475 V to 1.5725 V
	+1.5 V	+0.5 V	560 mV	549.5 mV to 570.5 mV
	0 V	0 V	60 mV	53.5 mV to 66.5 mV
	0 V	0 V	-60 mV	-66.5 mV to -53.5 mV
	0 V	-1.0 V	-940 mV	-952.5 mV to -927.5 mV
	0 V	+1.0 V	1.06 V	1.0475 V to 1.0725 V
	-3.5 V	-3.4 V	-3.34 V	-3.3603 V to -3.3197 V
	-3.5 V	-2.4 V	-2.34 V	-2.3583 V to -2.3217 V
	-1.5 V	-2.5 V	-2.44 V	-2.4585 V to -2.4215 V
	-1.5 V	-1.5 V	-1.44 V	-1.4525 V to -1.4275 V
	-1.5 V	-0.5 V	-440 mV	-450.5 mV to -429.5 mV
50 mV	+3.5 V	+3.4 V	3.55 V	3.5237 V to 3.5763 V

Table continued...

<sup>11</sup> Set as precisely as the instrument's offset resolution permits.

Scale setting	Termination setting	Offset setting <sup>11</sup>	Generator setting	Accuracy limits
	+3.5 V	+2.4 V	2.55 V	2.5257 V to 2.5743 V
	+1.5 V	+2.5 V	2.65 V	2.6255 V to 2.6745 V
	+1.5 V	+1.5 V	1.65 V	1.6315 V to 1.6685 V
	+1.5 V	+0.5 V	650 mV	633.5 mV to 666.5 mV
	0 V	0 V	150 mV	137.5 mV to 162.5 mV
	0 V	0 V	-150 mV	-162.5 mV to -137.5 mV
	0 V	-1.0 V	-850 mV	-868.5 mV to -831.5 mV
	0 V	+1.0 V	1.15 V	1.1315 V to 1.1685 V
	-3.5 V	-3.4 V	-3.25 V	-3.2763 V to -3.2237 V
	-3.5 V	-2.4 V	-2.25 V	-2.2743 V to -2.2257 V
	-1.5 V	-2.5 V	-2.35 V	-2.3745 V to -2.3255 V
	-1.5 V	-1.5 V	-1.35 V	-1.3685 V to -1.3315 V
	-1.5 V	-0.5 V	-350 mV	-366.5 mV to -333.5 mV
100 mV	+3.5 V	+3.4 V	3.7 V	3.6637 V to 3.7363 V
	+3.5 V	+2.4 V	2.7 V	2.6657 V to 2.7343 V
	+1.5 V	+2.5 V	2.8 V	2.7655 V to 2.8345 V
	+1.5 V	+1.5 V	1.8 V	1.7715 V to 1.8285 V
	+1.5 V	+0.5 V	800 mV	773.5 mV to 826.5 mV
	0 V	0 V	300 mV	277.5 mV to 322.5 mV
	0 V	0 V	-300 mV	-322.5 mV to -277.5 mV
	0 V	-1.0 V	-700 mV	-728.5 mV to -671.5 mV
	0 V	+1.0 V	1.3 V	1.2715 V to 1.3285 V
	-3.5 V	-3.4 V	-3.1 V	-3.1363 V to -3.0637 V

Table continued...

<sup>11</sup> Set as precisely as the instrument's offset resolution permits.

Scale setting	Termination setting	Offset setting <sup>11</sup>	Generator setting	Accuracy limits
	-3.5 V	-2.4 V	-2.1 V	-2.1343 V to -2.0657 V
	-1.5 V	-2.5 V	-2.2 V	-2.2345 V to -2.1655 V
	-1.5 V	-1.5 V	-1.2 V	-1.2285 V to -1.1715 V
	-1.5 V	-0.5 V	-200 mV	-226.5 mV to -173.5 mV
120 mV	+3.5 V	+3.4 V	3.76 V	3.7197 V to 3.8003 V
	+3.5 V	+2.4 V	2.76 V	2.7217 V to 2.7983 V
	+1.5 V	+2.5 V	2.86 V	2.8215 V to 2.8985 V
	+1.5 V	+1.5 V	1.86 V	1.8275 V to 1.8925 V
	+1.5 V	+0.5 V	860 mV	829.5 mV to 890.5 mV
	0 V	0 V	360 mV	333.5 mV to 386.5 mV
	0 V	0 V	-360 mV	-386.5 mV to -333.5 mV
	0 V	-1.0 V	-640 mV	-672.5 mV to -607.5 mV
	0 V	+1.0 V	1.36 V	1.3275 V to 1.3925 V
	-3.5 V	-3.4 V	-3.04 V	-3.0803 V to -2.9997 V
	-3.5 V	-2.4 V	-2.04 V	-2.0783 V to -2.0017 V
	-1.5 V	-2.5 V	-2.14 V	-2.1785 V to -2.1015 V
	-1.5 V	-1.5 V	-1.14 V	-1.1725 V to -1.1075 V
	-1.5 V	-0.5 V	-140 mV	-170.5 mV to -109.5 mV
140 mV	0 V	-1.0 V	-580 mV	-627.4 mV to -532.6 mV
	0 V	0 V	420 mV	378.6 mV to 461.4 mV
	0 V	+1.0 V	1.42 V	1.3726 V to 1.4674 V
200 mV	0 V	-1.0 V	-400 mV	-459.4 mV to -340.6 mV
	0 V	0 V	600 mV	546.6 mV to 653.4 mV

Table continued...

<sup>11</sup> Set as precisely as the instrument's offset resolution permits.

Scale setting	Termination setting	Offset setting <sup>11</sup>	Generator setting	Accuracy limits
	0 V	+1.0 V	1.60 V	1.5406 V to 1.6594 V
400 mV	0 V	-1.0 V	200 mV	100.6 mV to 299.4 mV
	0 V	0 V	1.20 V	1.1066 V to 1.2934 V
	0 V	+1.0 V	2.20 V	2.1006 V to 2.2994 V

d. *Display the test signal:*

- Display the **Vertical Setup** menu.
- Use the keypad to set the Termination Voltage and Offset vertical settings as listed in the table for the current vertical scale setting. The baseline level may move off screen.
- Set the generator to the level and polarity indicated in the table for the vertical scale, termination voltage, and offset settings you have made.

e. *Measure the test signal:* Press the **X** (close) button. Read the measurement results at the measurement statistics **Mean** measurement readout. See the following figure.



Turn on the mean measurement and read the results here.

Figure 9: Measurement of DC accuracy

f. *Check against limits:*

- CHECK that the readout for the measurement **Mean** readout on screen is within the limits listed for the current vertical scale and termination/offset/generator settings. Enter the value on test record.
- Repeat substeps 2.c on page 110 through 2.f on page 114 until all vertical scale settings are checked for the channel under test. (See Table 5 on page 110.)

g. *Test all channels:* Repeat substeps 2.a on page 109 through 2.f on page 114 for all TekConnect channels.

<sup>11</sup> Set as precisely as the instrument's offset resolution permits.

3. *Disconnect the hookup:*
  - a. *Set the generator output to 0 V.*
  - b. *Disconnect the equipment from the generator output and the input connector of the channel last tested.*

## Check DC gain accuracy, ATI channel

Equipment required	Prerequisites
One DC calibration generator, (Item 7 on page 48)	The instrument must meet the prerequisites. (See <a href="#">Prerequisites</a> on page 47.)
Two dual-banana connectors, (Item 6 on page 48)	
Two cables, (Item 5 on page 48)	
One BNC "T", male to 2 females, (Item 25 on page 50)	
One SMA male-to-female BNC adaptor, (Item 16 on page 49)	
On adapter, SMA female-to-female 1.85, (Item 30 on page 51)	



**WARNING:** The generator is capable of outputting dangerous voltages. To avoid injury, be sure to set the DC calibration generator to off or 0 volts before connecting, disconnecting, and/or moving the test hookup during this procedure.



**CAUTION:** The generator is capable of outputting voltages that exceed the maximum input voltage of the instrument. To avoid damaging the instrument, be sure to set the DC calibration generator to off or 0 volts before connecting or disconnecting the test hookup during this procedure.

1. *Install the test hookup and preset the instrument controls:*

- a. *Hook up the test-signal source:*

- Set the output of a DC calibration generator to off or 0 volts. Set the DC impedance of the generator to 50  $\Omega$ .
- Connect the generator to **Ch 2** through an adapter. Refer to the following figure.

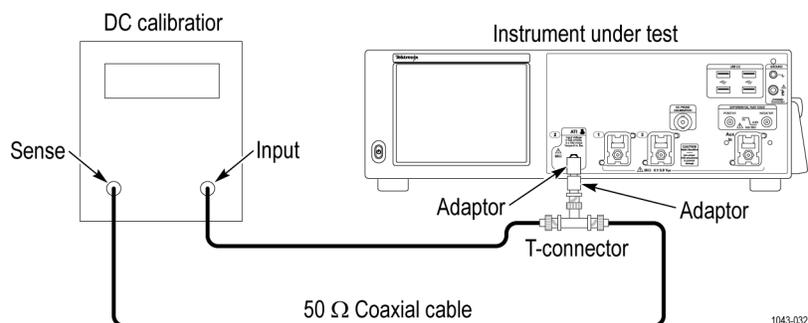


Figure 10: DC gain accuracy test hookup

- b. *Initialize the instrument:* Pull down the **File** menu, select Recall Default Setup.
- c. *Modify the default settings:*

- From the button bar, select **Horiz/Acq** and select the **Acquisition** tab.
- Set the Horizontal Scale to **1 ms/div**.
- Set the Record Length to **5000**.
- Select **Average** and set the number of averages to **16**.
- Set the Trigger Source to **Line**.

2. Confirm input channels are within limits for DC gain accuracy.

- a. Select channel 2:
  - Set the generator output to 0 V.
  - Select channel 2.
- b. Turn on the measurement Mean for the channel:
  - From the tool bar, select **Measure** and select the **Ampl** tab, **More**, and then select **Mean** to measure the mean of the channel.
  - Press the **X** (Close) button.
- c. Set the vertical scale: Set the vertical **Scale** to one of the settings in the following table that is not yet checked, starting with the first setting.

**Table 6: Gain accuracy**

Ch	Scale setting	Position setting (Divs)	Offset setting	Generator setting	Measurement mean	Difference of measurement means	Accuracy limits
Ch2	10 mV	0	0 V	30 mV	_____		+58.8 mV to +61.2 mV
				-30 mV	_____		
				0	+0.2 V		
Ch2	10 mV	0	-0.2 V	-230 mV	_____		+58.8 mV to +61.2 mV
				-170 mV	_____		
				0	+0.1 V		
Ch2	20 mV	0	0 V	60 mV	_____		+117.6 mV to +122.4 mV
				-60 mV	_____		
				0	+0.1 V		
Ch2	20 mV	0	-0.1 V	-160 mV	_____		+117.6 mV to +122.4 mV
				-40 mV	_____		
				0	+0.1 V		
Ch2	30 mV	0	0 V	90 mV	_____		+176.4 mV to +183.6 mV
				-90 mV	_____		

- d. Display the test signal:
  - Display the **Vertical Setup** menu.
  - Use the keypad to set the Position and Offset vertical settings as listed in the table for the current vertical scale setting. The baseline level may move off screen.

- Set the generator so that its Sense value and polarity matches the generator setting in the table for the vertical scale, position, and offset settings you have made. The DC test level should appear at about 3 division on screen. Using the Vertical Position, move the test level to 3 divisions above the center screen.



**Note:** It's important to use the Sense reading of the generator instead of the Output level when adjusting the generator to the specified voltage setting.

e. *Measure the test signal:* Press the **Close** button.

- Read the measurement results at the measurement statistics **Mean** measurement readout. Refer to the following figure.
- Record the Mean in the Measurement Mean column. (See [Table 6](#) on page 116.)

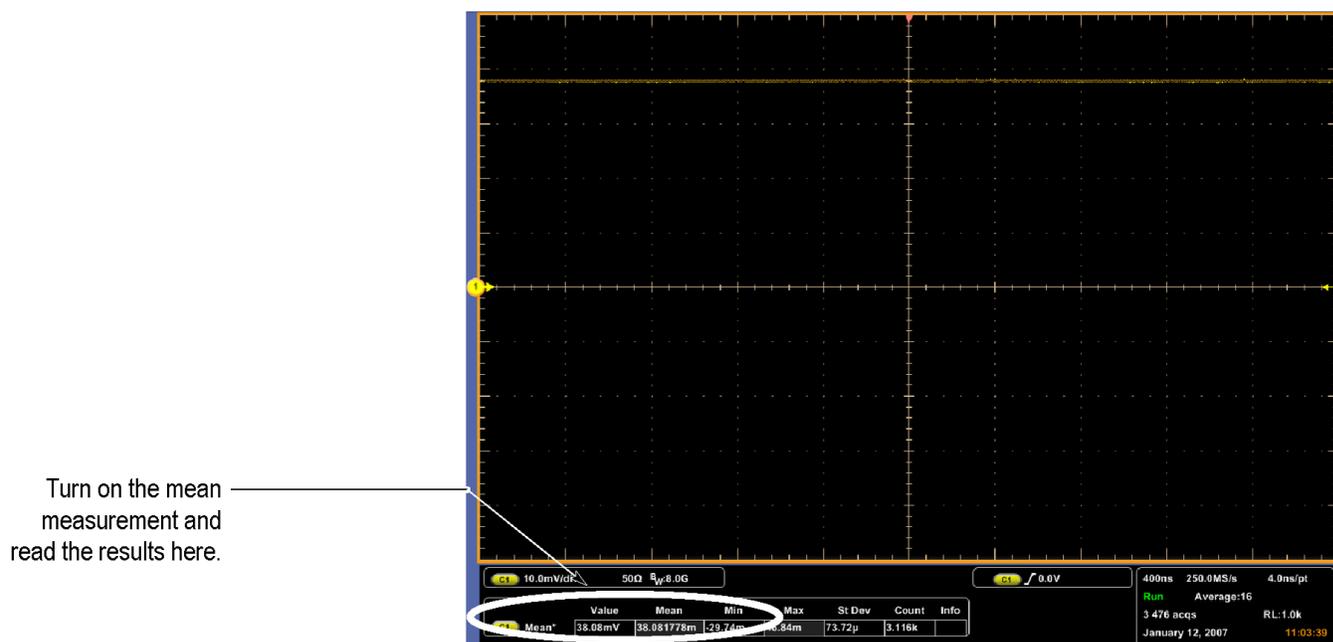


Figure 11: Measurement of DC gain accuracy

f. *Measure second mean:*

- Set the generator to the second level and polarity indicated in the table for the vertical scale, position, and offset settings you have made.
- Repeat substep 2.e on page 117 using the current vertical scale, position, offset, and new generator setting for the second mean.

g. *Check against limits:*

- Subtract the second measurement mean from the first measurement mean for the current vertical scale, termination voltage, position, and offset.
- Record the difference of the two mean measurements in the Difference of Measurement Means column of the table. (See [Table 6](#) on page 116.)
- CHECK that the Difference of Measurement Mean is within the limits listed for the current vertical scale/position/offset/generator settings. Enter measurement mean difference value on test record.

h. Repeat substeps 2.d on page 116 through 2.g on page 117, using the next position, offset and generator settings listed in the table for the current vertical scale.

i. Repeat substeps 2.c on page 116 through 2.h on page 117 until all vertical scale settings, listed in the table are checked. (See [Table 6](#) on page 116.)

3. *Disconnect the hookup:*

a. Set the generator output to 0 V.

- b. Disconnect the generator output from the channel last tested.

## Check DC gain accuracy, TekConnect channels

Equipment required	Prerequisites
One DC calibration generator (Item 7 on page 48)	The instrument must meet the prerequisites. (See <a href="#">Prerequisites</a> on page 47.)
Two, dual-banana connectors, (Item 6 on page 48)	
Two cables, (Item 5 on page 48)	
One SMA male-to-female BNC adaptor (Item 18 on page 50)	
One BNC "T", male to 2 females (Item 25 on page 50)	



**WARNING:** The generator is capable of outputting dangerous voltages. To avoid injury, be sure to set the DC calibration generator to off or 0 volts before connecting, disconnecting, and/or moving the test hookup during this procedure.

1. Install the test hookup and preset the instrument controls:

a. Hook up the test-signal source:

- Set the output of a DC calibration generator to off or 0 volts. Set the DC impedance of the generator to 50  $\Omega$ .
- Connect the generator to **Ch 1** through an adaptor. Refer to the following figure.

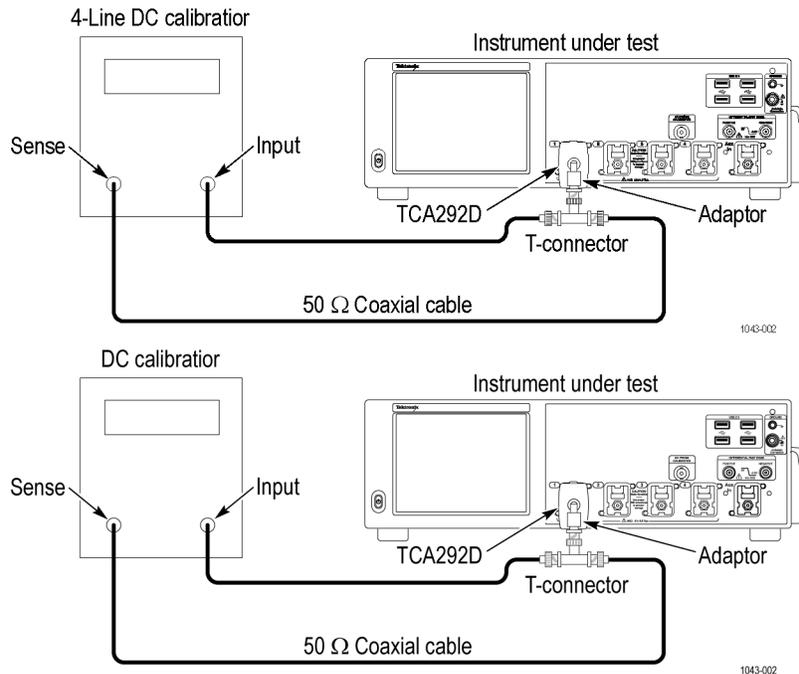


Figure 12: DC gain accuracy test hookup

- b. Initialize the instrument: Pull down the **File** menu, select Recall Default Setup.
- c. Modify the default settings:
  - From the button bar, select **Horiz/Acq** and select the **Acquisition** tab.
  - Set the Horizontal Scale to **1 ms/div**.

- Set the Record Length to **5000**.
  - Set the Acquisition Mode to **Hi Res**.
  - Set the Trigger Source to **Line**.
2. Confirm input channels are within limits for DC gain accuracy. Do the following substeps - test Ch 1 first, skipping substep 2.a on page 119 of this step since Ch 1 is already selected from step 1 on page 118.
- a. Select an unchecked channel:
    - From the tool bar, select **Measure** and then **Clear All** to remove the previous measurement.
    - Press the Display button of the channel just confirmed to remove the channel from the display.
    - Press the Channel tab and the Display button that corresponds to the channel you are to confirm. On instruments with an ATI channel, do not check Channel 2.
    - Set the generator output to 0 V.
    - Move the test hookup to the channel you selected.
  - b. Turn on the measurement Mean for the channel:
    - From the tool bar, select **Measure** and select the **Ampl** tab, **More**, and then select **Mean** to measure the mean of the current channel.
    - Press the **X** (Close) button.
  - c. Set the vertical scale: Set the vertical **Scale** to one of the settings in the following table that is not yet checked, starting with the first setting.

**Table 7: Gain accuracy**

Ch	Scale setting	Termination setting	Position setting (Divs)	Offset setting	Generator setting	Measurement mean	Difference of measurement means	Accuracy limits
Ch1	6.25 mV	0 V	0	0 V	24.5 mV			+48.02 mV to +49.98 mV
					-24.5 mV			
			0	+1 V	1.025 V		+48.02 mV to +49.98 mV	
	3.4 V	-5	-5	3.4 V	3.456 V			+48.02 mV to +49.98 mV
					3.407 V			
			-5	2.4 V	2.456 V		+48.02 mV to +49.98 mV	
				2.407 V				

Table continued...

Ch	Scale setting	Termination setting	Position setting (Divs)	Offset setting	Generator setting	Measurement mean	Difference of measurement means	Accuracy limits
		-3.4 V	5	-3.4 V	-3.407 V	_____		+48.02 mV to +49.98 mV
			5	-2.4 V	-2.407 V	_____		+48.02 mV to +49.98 mV
					-3.456 V			
					-2.456 V			
Ch1	10 mV	0 V	0	0 V	39 mV	_____		+76.44 mV to +79.56 mV
			0	+1 V	1.039 V	_____		+76.44 mV to +79.56 mV
			0	-1 V	-961 mV	_____		+76.44 mV to +79.56 mV
					-1.039 V			
		3.4 V	-5	3.4 V	3.489 V	_____		+76.44 mV to +79.56 mV
			-5	2.4 V	2.489 V	_____		+76.44 mV to +79.56 mV
					3.411 V			
					2.411 V			
		-3.4 V	0	-3.4 V	-3.411 V	_____		+76.44 mV to +79.56 mV
			0	-2.4 V	-2.411 V	_____		+76.44 mV to +79.56 mV
					-3.489 V			
					-2.489 V			

Table continued...

Ch	Scale setting	Termination setting	Position setting (Divs)	Offset setting	Generator setting	Measurement mean	Difference of measurement means	Accuracy limits
Ch1	20 mV	0 V	0	0 V	78 mV			+152.9 mV to +159.1 mV
					-78 mV			
					0	+1 V	1.078 V	
	0	-1 V	-922 mV		-1.078 V		+152.9 mV to +159.1 mV	
	3.4 V	-5	3.4 V	3.578 V			+152.9 mV to +159.1 mV	
				3.422 V				
-3.4 V	5	-3.4 V	-3.422 V			+152.9 mV to +159.1 mV		
			-3.578 V					
-2.4 V	-5	2.4 V	2.578 V			+152.9 mV to +159.1 mV		
			2.422 V					
Ch1	50 mV	0 V	0	0 V	195 mV			+382.2 mV to +397.8 mV
					-195 mV			
					0	+1 V	1.195 V	
	0	-1 V	-805 mV		-1.195 V		+382.2 mV to +397.8 mV	
	805 mV							

Table continued...

Ch	Scale setting	Termination setting	Position setting (Divs)	Offset setting	Generator setting	Measurement mean	Difference of measurement means	Accuracy limits
		3.4 V	-5	3.4 V	3.845 V	_____		+382.2 mV to +397.8 mV
					3.455 V			
			-5	2.4 V	2.845 V	_____		+382.2 mV to +397.8 mV
					2.455 V			
		-3.4 V	5	-3.4 V	-3.455 V	_____		+382.2 mV to +397.8 mV
					-3.845 V			
			5	-2.4 V	-2.455 V	_____		+382.2 mV to +397.8 mV
					-2.845 V			
Ch1	100 mV	0 V	0	0 V	390 mV	_____		+764 mV to +796 mV
					-390 mV			
			0	+1 V	1.39 V	_____		+764 mV to +796 mV
					610 mV			
			0	-1 V	-610 mV	_____		+764 mV to +796 mV
					-1.39 V			
		3.4 V	-5	3.4 V	4.29 V	_____		+764 mV to +796 mV
					3.51 V			
			-5	2.4 V	3.29 V	_____		+764 mV to +796 mV
					2.51 V			
		-3.4 V	5	-3.4 V	-3.51 V	_____		+764 mV to +796 mV
					-4.29 V			
			5	-2.4 V	-2.51 V	_____		+764 mV to +796 mV
					-3.29 V			

Table continued...

Ch	Scale setting	Termination setting	Position setting (Divs)	Offset setting	Generator setting	Measurement mean	Difference of measurement means	Accuracy limits	
Ch1	120 mV	0 V	0	0 V	468 mV	_____		+917.3 mV to +954.7 mV	
									-468 mV
			532 mV						
				0	-1 V	-532 mV	_____		+917.3 mV to +954.7 mV
			-1.468 V						
3.4 V	-5	3.4 V		4.468 V	_____		+917.3 mV to +954.7 mV		
			3.532 V						
								-5	2.4 V
2.532 V									
	-3.4 V	5	-3.4 V	-3.532 V	_____		+917.3 mV to +954.7 mV		
-4.468 V									
								5	-2.4 V
-3.468 V									
	Ch1	140 mV	0 V	0	-1 V	-580 mV	_____		+823.2 mV to +856.8 mV
-1.42 V									
-546 mV									
				0	+1 V	1.42 V	_____		+823.2 mV to +856.8 mV
580 mV									

Table continued...

Ch	Scale setting	Termination setting	Position setting (Divs)	Offset setting	Generator setting	Measurement mean	Difference of measurement means	Accuracy limits
Ch1	200 mV	0 V	0	-0.9 V	-300 mV			+1.176 V to +1.224 V
					-1.50 V			
					0	0 V	780 mV	
			0	+0.9 V	1.50 V			+1.176 V to +1.224 V
					300 mV			
Ch1	400 mV	0 V	0	-0.3 V	900 mV			+2.352 V to +2.448 V
					-1.50 V			
					0	0 V	1.20 V	
			0	+0.3 V	1.50 V			+2.352 V to +2.448 V
					-900 mV			

Ch	Scale setting	Termination setting	Position setting (Divs)	Offset setting	Generator setting	Measurement mean	Difference of measurement means	Accuracy limits
Ch2 (non-ATI)	6.25 mV	0 V	0	0 V	24.5 mV			+48.02 mV to +49.98 mV
					-24.5 mV			
					0	+1 V	1.025 V	
			0	-1 V	-976 mV			+48.02 mV to +49.98 mV
					-1.026 V			

Table continued...

Ch	Scale setting	Termination setting	Position setting (Divs)	Offset setting	Generator setting	Measurement mean	Difference of measurement means	Accuracy limits
		3.4 V	-5	3.4 V	3.456 V			+48.02 mV to +49.98 mV
					3.407 V			
			-5	2.4 V	2.456 V			+48.02 mV to +49.98 mV
					2.407 V			
		-3.4 V	5	-3.4 V	-3.407 V			+48.02 mV to +49.98 mV
					-3.456 V			
			5	-2.4 V	-2.407 V			+48.02 mV to +49.98 mV
					-2.456 V			
Ch2 (non-ATI)	10 mV	0 V	0	0 V	39 mV			+76.44 mV to +79.56 mV
					-39 mV			
			0	+1 V	1.039 V			+76.44 mV to +79.56 mV
					961 mV			
			0	-1 V	-961 mV			+76.44 mV to +79.56 mV
					-1.039 V			
		3.4 V	-5	3.4 V	3.489 V			+76.44 mV to +79.56 mV
					3.411 V			
			-5	2.4 V	2.489 V			+76.44 mV to +79.56 mV
					2.411 V			
		-3.4 V	0	-3.4 V	-3.411 V			+76.44 mV to +79.56 mV
					-3.489 V			
			0	-2.4 V	-2.411 V			+76.44 mV to +79.56 mV
					-2.489 V			

Table continued...

Ch	Scale setting	Termination setting	Position setting (Divs)	Offset setting	Generator setting	Measurement mean	Difference of measurement means	Accuracy limits
Ch2 (non-ATI)	20 mV	0 V	0	0 V	78 mV			+152.9 mV to +159.1 mV
					-78 mV			
					0	+1 V	1.078 V	
				0	-1 V	-922 mV		+152.9 mV to +159.1 mV
						-1.078 V		
Ch2 (non-ATI)	3.4 V	-5	-5	3.4 V	3.578 V			+152.9 mV to +159.1 mV
					3.422 V			
					-5	2.4 V	2.578 V	
						2.422 V		
Ch2 (non-ATI)	-3.4 V	5	5	-3.4 V	-3.422 V			+152.9 mV to +159.1 mV
					-3.578 V			
					5	-2.4 V	-2.422 V	
						-2.578 V		
Ch2 (non-ATI)	50 mV	0 V	0	0 V	195 mV			+382.2 mV to +397.8 mV
					-195 mV			
					0	+1 V	1.195 V	
				0	-1 V	-805 mV		+382.2 mV to +397.8 mV
						-1.195 V		

Table continued...

Ch	Scale setting	Termination setting	Position setting (Divs)	Offset setting	Generator setting	Measurement mean	Difference of measurement means	Accuracy limits
		3.4 V	-5	3.4 V	3.845 V			+382.2 mV to +397.8 mV
					3.455 V			
			-5	2.4 V	2.845 V			+382.2 mV to +397.8 mV
					2.455 V			
		-3.4 V	5	-3.4 V	-3.455 V			+382.2 mV to +397.8 mV
					-3.845 V			
			5	-2.4 V	-2.455 V			+382.2 mV to +397.8 mV
					-2.845 V			
Ch2 (non-ATI)	100 mV	0 V	0	0 V	390 mV			+764 mV to +796 mV
					-390 mV			
			0	+1 V	1.39 V			+764 mV to +796 mV
					610 mV			
			0	-1 V	-610 mV			+764 mV to +796 mV
					-1.39 V			
		3.4 V	-5	3.4 V	4.29 V			+764 mV to +796 mV
					3.51 V			
			-5	2.4 V	3.29 V			+764 mV to +796 mV
					2.51 V			
		-3.4 V	5	-3.4 V	-3.51 V			+764 mV to +796 mV
					-4.29 V			
			5	-2.4 V	-2.51 V			+764 mV to +796 mV
					-3.29 V			

Table continued...

Ch	Scale setting	Termination setting	Position setting (Divs)	Offset setting	Generator setting	Measurement mean	Difference of measurement means	Accuracy limits
Ch2 (non-ATI)	120 mV	0 V	0	0 V	468 mV			+917.3 mV to +954.7 mV
					-468 mV			
			0	+1 V	1.468 V			+917.3 mV to +954.7 mV
	0	-1 V	-532 mV			+917.3 mV to +954.7 mV		
		3.4 V	-5	3.4 V	4.468 V			+917.3 mV to +954.7 mV
					3.532 V			
			-5	2.4 V	3.468 V			+917.3 mV to +954.7 mV
						2.532 V		
Ch2 (non-ATI)	-3.4 V	5	-3.4 V	-3.532 V				+917.3 mV to +954.7 mV
					-4.468 V			
	5	-2.4 V	-2.532 V			+917.3 mV to +954.7 mV		
Ch2 (non-ATI)	140 mV	0 V	0	-1 V	-580 mV			+823.2 mV to +856.8 mV
					-1.42 V			
			0	0 V	546 mV			+1.070 V to +1.114 V
0	+1 V	1.42 V			+823.2 mV to +856.8 mV			
					580 mV			

Table continued...

Ch	Scale setting	Termination setting	Position setting (Divs)	Offset setting	Generator setting	Measurement mean	Difference of measurement means	Accuracy limits
Ch2 (non-ATI)	200 mV	0 V	0	-0.9 V	-300 mV			+1.176 V to +1.224 V
					-1.50 V			
					0	0 V	780 mV	
			0	+0.9 V	1.50 V			+1.176 V to +1.224 V
					300 mV			
Ch2 (non-ATI)	400 mV	0 V	0	-0.3 V	900 mV			+2.352 V to +2.448 V
					-1.50 V			
					0	0 V	1.20 V	
			0	+0.3 V	1.50 V			+2.352 V to +2.448 V
					-900 mV			

Ch	Scale setting	Termination setting	Position setting (Divs)	Offset setting	Generator setting	Measurement mean	Difference of measurement means	Accuracy limits
Ch3	6.25 mV	0 V	0	0 V	24.5 mV			+48.02 mV to +49.98 mV
					-24.5 mV			
					0	+1 V	1.025 V	
			0	-1 V	-976 mV			+48.02 mV to +49.98 mV
					-1.026 V			

Table continued...

Ch	Scale setting	Termination setting	Position setting (Divs)	Offset setting	Generator setting	Measurement mean	Difference of measurement means	Accuracy limits
		3.4 V	-5	3.4 V	3.456 V	_____		+48.02 mV to +49.98 mV
					3.407 V			
			-5	2.4 V	2.456 V	_____		+48.02 mV to +49.98 mV
					2.407 V			
		-3.4 V	5	-3.4 V	-3.407 V	_____		+48.02 mV to +49.98 mV
					-3.456 V			
			5	-2.4 V	-2.407 V	_____		+48.02 mV to +49.98 mV
					-2.456 V			
Ch3	10 mV	0 V	0	0 V	39 mV	_____		+76.44 mV to +79.56 mV
					-39 mV			
			0	+1 V	1.039 V	_____		+76.44 mV to +79.56 mV
					961 mV			
			0	-1 V	-961 mV	_____		+76.44 mV to +79.56 mV
					-1.039 V			
		3.4 V	-5	3.4 V	3.489 V	_____		+76.44 mV to +79.56 mV
					3.411 V			
			-5	2.4 V	2.489 V	_____		+76.44 mV to +79.56 mV
					2.411 V			
		-3.4 V	0	-3.4 V	-3.411 V	_____		+76.44 mV to +79.56 mV
					-3.489 V			
			0	-2.4 V	-2.411 V	_____		+76.44 mV to +79.56 mV
					-2.489 V			

Table continued...

Ch	Scale setting	Termination setting	Position setting (Divs)	Offset setting	Generator setting	Measurement mean	Difference of measurement means	Accuracy limits	
Ch3	20 mV	0 V	0	0 V	78 mV			+152.9 mV to +159.1 mV	
					-78 mV				
					0	+1 V	1.078 V		
	3.4 V	-5	3.4 V	-5	3.4 V	3.578 V			+152.9 mV to +159.1 mV
						3.422 V			
						2.578 V			
-3.4 V	5	-3.4 V	5	-3.4 V	-3.422 V			+152.9 mV to +159.1 mV	
					-3.578 V				
					-2.422 V				+152.9 mV to +159.1 mV
50 mV	0 V	0	0	0 V	195 mV			+382.2 mV to +397.8 mV	
					-195 mV				
					0	+1 V	1.195 V		
-1 V	-1 V	-805 mV	-1 V	-1 V	-805 mV			+382.2 mV to +397.8 mV	
					-1.195 V				

Table continued...

Ch	Scale setting	Termination setting	Position setting (Divs)	Offset setting	Generator setting	Measurement mean	Difference of measurement means	Accuracy limits
		3.4 V	-5	3.4 V	3.845 V	_____		+382.2 mV to +397.8 mV
					3.455 V			
			-5	2.4 V	2.845 V	_____		+382.2 mV to +397.8 mV
					2.455 V			
		-3.4 V	5	-3.4 V	-3.455 V	_____		+382.2 mV to +397.8 mV
					-3.845 V			
			5	-2.4 V	-2.455 V	_____		+382.2 mV to +397.8 mV
					-2.845 V			
Ch3	100 mV	0 V	0	0 V	390 mV	_____		+764 mV to +796 mV
					-390 mV			
			0	+1 V	1.39 V	_____		+764 mV to +796 mV
					610 mV			
			0	-1 V	-610 mV	_____		+764 mV to +796 mV
					-1.39 V			
		3.4 V	-5	3.4 V	4.29 V	_____		+764 mV to +796 mV
					3.51 V			
			-5	2.4 V	3.29 V	_____		+764 mV to +796 mV
					2.51 V			
		-3.4 V	5	-3.4 V	-3.51 V	_____		+764 mV to +796 mV
					-4.29 V			
			5	-2.4 V	-2.51 V	_____		+764 mV to +796 mV
					-3.29 V			

Table continued...

Ch	Scale setting	Termination setting	Position setting (Divs)	Offset setting	Generator setting	Measurement mean	Difference of measurement means	Accuracy limits	
Ch3	120 mV	0 V	0	0 V	468 mV	_____		+917.3 mV to +954.7 mV	
									-468 mV
			532 mV						
				0	-1 V	-532 mV	_____		+917.3 mV to +954.7 mV
			-1.468 V						
3.4 V	-5	3.4 V		4.468 V	_____		+917.3 mV to +954.7 mV		
			3.532 V						
		-5		2.4 V	3.468 V	_____		+917.3 mV to +954.7 mV	
			2.532 V						
-3.4 V	5	-3.4 V		-3.532 V	_____		+917.3 mV to +954.7 mV		
			-4.468 V						
		5		-2.4 V	-2.532 V	_____		+917.3 mV to +954.7 mV	
			-3.468 V						
Ch3	140 mV	0 V		0	-1 V	-580 mV	_____		+823.2 mV to +856.8 mV
			-1.42 V						
			-546 mV						
				0	+1 V	1.42 V	_____		+823.2 mV to +856.8 mV
			580 mV						

Table continued...

Ch	Scale setting	Termination setting	Position setting (Divs)	Offset setting	Generator setting	Measurement mean	Difference of measurement means	Accuracy limits
Ch3	200 mV	0 V	0	-0.9 V	-300 mV			+1.176 V to +1.224 V
					-1.50 V			
					0	0 V	780 mV	
			0	+0.9 V	1.50 V			+1.176 V to +1.224 V
					300 mV			
Ch3	400 mV	0 V	0	-0.3 V	900 mV			+2.352 V to +2.448 V
					-1.50 V			
					0	0 V	1.20 V	
			0	+0.3 V	1.50 V			+2.352 V to +2.448 V
					-900 mV			

Ch	Scale setting	Termination setting	Position setting (Divs)	Offset setting	Generator setting	Measurement mean	Difference of measurement means	Accuracy limits
Ch4	6.25 mV	0 V	0	0 V	24.5 mV			+48.02 mV to +49.98 mV
					-24.5 mV			
					0	+1 V	1.025 V	
			0	-1 V	-976 mV			+48.02 mV to +49.98 mV
					-1.026 V			

Table continued...

Ch	Scale setting	Termination setting	Position setting (Divs)	Offset setting	Generator setting	Measurement mean	Difference of measurement means	Accuracy limits
		3.4 V	-5	3.4 V	3.456 V	3.407 V		+48.02 mV to +49.98 mV
			-5	2.4 V	2.456 V	2.407 V		+48.02 mV to +49.98 mV
		-3.4 V	5	-3.4 V	-3.407 V	-3.456 V		+48.02 mV to +49.98 mV
			5	-2.4 V	-2.407 V	-2.456 V		+48.02 mV to +49.98 mV
Ch4	10 mV	0 V	0	0 V	39 mV	-39 mV		+76.44 mV to +79.56 mV
			0	+1 V	1.039 V	961 mV		+76.44 mV to +79.56 mV
			0	-1 V	-961 mV	-1.039 V		+76.44 mV to +79.56 mV
		3.4 V	-5	3.4 V	3.489 V	3.411 V		+76.44 mV to +79.56 mV
			-5	2.4 V	2.489 V	2.411 V		+76.44 mV to +79.56 mV
		-3.4 V	0	-3.4 V	-3.411 V	-3.489 V		+76.44 mV to +79.56 mV
			0	-2.4 V	-2.411 V	-2.489 V		+76.44 mV to +79.56 mV

Table continued...



Ch	Scale setting	Termination setting	Position setting (Divs)	Offset setting	Generator setting	Measurement mean	Difference of measurement means	Accuracy limits
		3.4 V	-5	3.4 V	3.845 V			+382.2 mV to +397.8 mV
					3.455 V			
			-5	2.4 V	2.845 V			+382.2 mV to +397.8 mV
					2.455 V			
		-3.4 V	5	-3.4 V	-3.455 V			+382.2 mV to +397.8 mV
					-3.845 V			
			5	-2.4 V	-2.455 V			+382.2 mV to +397.8 mV
					-2.845 V			
Ch4	100 mV	0 V	0	0 V	390 mV			+764 mV to +796 mV
					-390 mV			
			0	+1 V	1.39 V			+764 mV to +796 mV
					610 mV			
			0	-1 V	-610 mV			+764 mV to +796 mV
					-1.39 V			
		3.4 V	-5	3.4 V	4.29 V			+764 mV to +796 mV
					3.51 V			
			-5	2.4 V	3.29 V			+764 mV to +796 mV
					2.51 V			
		-3.4 V	5	-3.4 V	-3.51 V			+764 mV to +796 mV
					-4.29 V			
			5	-2.4 V	-2.51 V			+764 mV to +796 mV
					-3.29 V			

Table continued...

Ch	Scale setting	Termination setting	Position setting (Divs)	Offset setting	Generator setting	Measurement mean	Difference of measurement means	Accuracy limits					
Ch4	120 mV	0 V	0	0 V	468 mV			+917.3 mV to +954.7 mV					
					-468 mV								
					0	+1 V	1.468 V			+917.3 mV to +954.7 mV			
			0	-1 V	-532 mV	-1.468 V				+917.3 mV to +954.7 mV			
							3.4 V	-5	3.4 V		4.468 V		+917.3 mV to +954.7 mV
							3.532 V						
-5	2.4 V	3.468 V	2.532 V				+917.3 mV to +954.7 mV						
Ch4	140 mV	0 V	0	-1 V	-580 mV			+823.2 mV to +856.8 mV					
					-1.42 V								
			0	0 V	546 mV			+1.070 V to +1.114 V					
					-546 mV								
0	+1 V	1.42 V			+823.2 mV to +856.8 mV								
		580 mV											

Table continued...

Ch	Scale setting	Termination setting	Position setting (Divs)	Offset setting	Generator setting	Measurement mean	Difference of measurement means	Accuracy limits
Ch4	200 mV	0 V	0	-0.9 V	-300 mV			+1.176 V to +1.224 V
					-1.50 V			
					0	0 V	780 mV	
			0	+0.9 V	1.50 V			+1.176 V to +1.224 V
Ch4	400 mV	0 V	0	-0.3 V	900 mV			+2.352 V to +2.448 V
					-1.50 V			
					0	0 V	1.20 V	
			0	+0.3 V	1.50 V			+2.352 V to +2.448 V
					-900 mV			

d. *Display the test signal:*

- Display the **Vertical Setup** menu.
- Use the keypad to set the Termination Voltage, Position, and Offset vertical settings as listed in the table for the current vertical scale setting. The baseline level may move off screen.
- Set the generator so that its Sense value and polarity matches the generator setting in the table for the vertical scale, position, offset, and termination settings you have made. The DC test level should appear at about 3 division on screen. Using the **Vertical Position**, move the test level to 3 divisions above the center screen.



**Note:** It's important to use the Sense reading of the generator instead of the Output level when adjusting the generator to the specified voltage setting.

e. *Measure the test signal:* Press the **Close** button.

- Read the measurement results at the measurement statistics **Mean** measurement readout. Refer to the following figure.
- Record the Mean in the Measurement Mean column. (See [Table 7](#) on page 119.)

Turn on the mean measurement and read the results here.



Figure 13: Measurement of DC gain accuracy

f. Measure second mean:

- Set the generator to the second level and polarity indicated in the table for the vertical scale, termination voltage, position, and offset settings you have made.
- Repeat substep 2.e on page 139 using the current vertical scale, termination voltage, position, offset, and new generator setting for the second mean.

g. Check against limits:

- Subtract the second measurement mean from the first measurement mean for the current vertical scale, termination voltage, position, and offset.
- Record the difference of the two mean measurements in the Difference of Measurement Means column of the table. (See Table 7 on page 119.)
- CHECK that the Difference of Measurement Mean is within the limits listed for the current vertical scale/termination/position/offset/generator settings. Enter measurement mean difference value on the test record.

h. Repeat substeps 2.d on page 139 through 2.g on page 140, using the next position, offset and generator settings listed in the table for the current vertical scale.

i. Repeat substeps 2.c on page 119 through 2.h on page 140 until all vertical scale settings, listed in the table, are checked for the channel under test. (See Table 7 on page 119.)

j. Test all channels: Repeat substeps 2.a on page 119 through 2.i on page 140 for all TekConnect channels.

3. Disconnect the hookup:

- Set the generator output to 0 V.
- Disconnect the generator output from the channel last tested.

## Check offset accuracy, ATI channel

Equipment Required	Prerequisites
One DC calibration generator, (Item 7 on page 48)	The instrument must meet the prerequisites. (See <a href="#">Prerequisites</a> on page 47.)
Two dual-banana connectors, (Item 6 on page 48)	
Two cables, (Item 5 on page 48)	
One SMA male-to-female BNC adaptor, (Item 16 on page 49)	
One BNC "T" adaptor, (Item 25 on page 50)	



**WARNING:** The generator is capable of outputting dangerous voltages. To avoid injury, be sure to set the DC calibration generator to off or 0 volts before connecting, disconnecting, and/or moving the test hookup during this procedure.

### 1. Install the test hookup and preset the instrument controls:

#### a. Hook up the test-signal source:

- Set the output of a DC calibration generator to off or 0 volts. Set the DC impedance of the generator to 50  $\Omega$ .
- Connect the output of a DC calibration generator to **Ch 2** through an adaptor. Refer to the following figure.

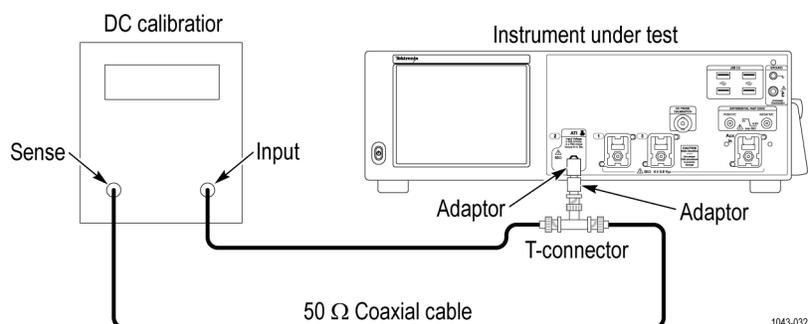


Figure 14: Offset accuracy test hookup

#### b. Initialize the instrument: Pull down the **File** menu, select Recall Default Setup.

#### c. Modify the default settings:

- Set the Horizontal Scale to **1 ms/div**.
- Set the Record Length to **5000**.
- Select **Average** and set the number of averages to **16**.
- Set the Trigger Source to **Line**.

### 2. Confirm input channel is within limits for offset accuracy.

#### a. • Set the generator output to 0 V.

- Select the tab that corresponds to the channel you are to confirm and then its **Display Off** button to display the channel.

#### b. Turn on the measurement Mean for the channel:

- From the tool bar, select **Measure** and select the **Ampl** tab, **More**, and then select **Mean** to measure the mean of the current channel.
- Press the **X** (Close) button.

#### c. Set the vertical scale: Set the vertical **Scale** to one of the settings in the following table that is not yet checked.

**Table 8: Offset accuracy**

Scale setting	Position setting (Divs)	Offset setting <sup>12</sup>	Generator setting	Accuracy limits
10 mV	0	0 V	0 V	-3.0 mV to +3.0 mV
		+0.2 V	+0.2 V	+0.1963 V to +0.2037 V
		-0.2 V	-0.2 V	-0.2037 V to -0.1963 V
20 mV	0	0 V	0 V	-4.0 mV to +4.0 mV
		+0.1 V	+0.1 V	+0.0957 V to +0.1044 V
		-0.1 V	-0.1 V	-0.1044 V to -0.0957 V
30 mV	0	0 V	0 V	-5.0 mV to +5.0 mV

d. *Display the test signal:*

- Display the **Vertical Setup** menu.
- Use the keypad to set the Position, and Offset vertical settings as listed in the table for the current vertical scale setting. The baseline level may move off screen.
- Set the generator so that its Sense value and polarity matches the generator setting in the table for the vertical scale, position, and offset settings you have made.



**Note:** It's important to use the Sense reading of the generator instead of the Output level when adjusting the generator to the specified voltage setting.

e. *Measure the test signal:* Press **Close**. Read the measurement results at the **Mean** measurement readout. Refer to the following figure.

Turn on the measurement called mean and read the results here.



Figure 15: Measurement of offset accuracy

<sup>12</sup> Set as precisely as the instrument's offset resolution permits.

f. *Check against limits:*

- CHECK that the readout for the measurement **Mean** readout on screen is within the limits listed for the current vertical scale and position/offset/generator settings. Enter the value on the test record.
- Repeat substep [2.d](#) on page 142, using the offset and generator settings as is listed in the table.
- CHECK that the **Mean** measurement readout on screen is within the limits listed for the current vertical scale setting and position/offset/generator settings. Enter the value on the test record.
- Repeat substep [2.d](#) on page 142, using the negative-polarity offset and generator settings as is listed in the table.
- CHECK that the **Mean** measurement readout on screen is within the limits listed for the current vertical scale setting and position/offset/generator settings. Enter the value on the test record.
- Repeat substeps [2.c](#) on page 141 through [2.f](#) on page 143 until all vertical scale settings, are checked. (See [Table 8](#) on page 142.)

3. *Disconnect the hookup:*

- Set the generator output to 0 V.
- Disconnect the generator from the channel.

## Check offset accuracy, TekConnect channels

Equipment Required	Prerequisites
One DC calibration generator (Item <a href="#">7</a> on page 48) Two dual-banana connectors, (Item <a href="#">6</a> on page 48) Two cables, (Item <a href="#">5</a> on page 48) One BNC "T" adapter (Item <a href="#">25</a> on page 50) One SMA male-to-female BNC adapter (Item <a href="#">18</a> on page 50)	The instrument must meet the prerequisites. (See <a href="#">Prerequisites</a> on page 47.)



**WARNING:** The generator is capable of outputting dangerous voltages. To avoid injury, be sure to set the DC calibration generator to off or 0 volts before connecting, disconnecting, and/or moving the test hookup during this procedure.

1. *Install the test hookup and preset the instrument controls:*

a. *Hook up the test-signal source:*

- Set the output of a DC calibration generator to off or 0 volts. Set the DC impedance of the generator to 50  $\Omega$ .
- Connect the output of a DC calibration generator to **Ch 1** through an adapter. Refer to the following figure.

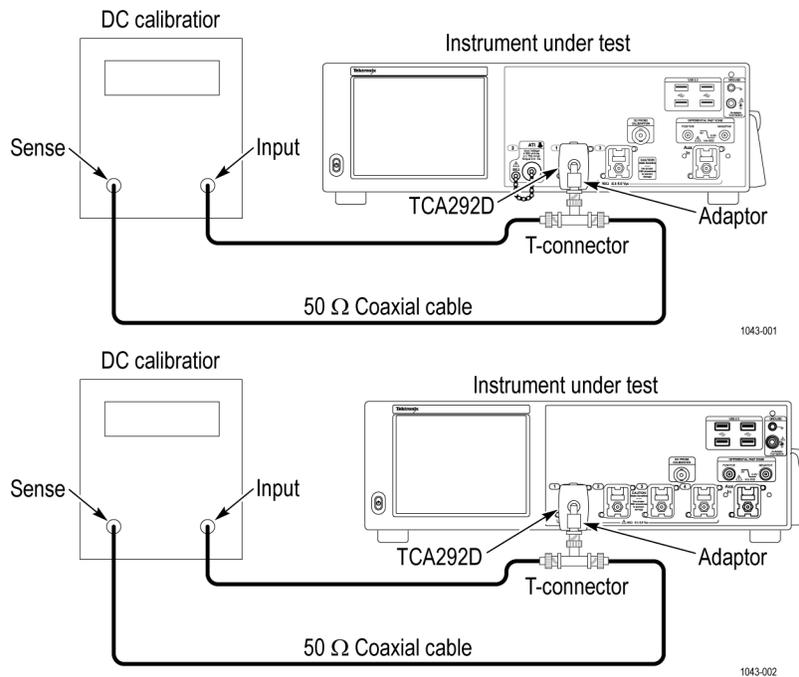


Figure 16: Offset accuracy test hookup

- b. *Initialize the instrument:* Pull down the **File** menu, select Recall Default Setup.
  - c. *Modify the default settings:*
    - Set the Horizontal Scale to **1 ms/div**.
    - Set the Record Length to **5000**.
    - Set the Acquisition Mode to **Hi Res**.
    - Set the Trigger Source to **Line**.
2. *Confirm input channels are within limits for offset accuracy.* Do the following substeps - test Ch 1 first, *skipping substep 2.a* on page 144 *since Ch 1 is already selected from step 1* on page 143.
- a. *Select an unchecked channel:*
    - From the tool bar, select **Measure** and then **Clear All** to remove the previous measurement.
    - From the tool bar, select **Vertical** and then **Display On** button of the channel just confirmed to remove the channel from the display.
    - Select the tab that corresponds to the channel you are to confirm and then its **Display Off** button to display the channel.
    - *Set the generator output to 0 V.*
    - Move the test hookup to the channel you selected.
  - b. *Turn on the measurement Mean for the channel:*
    - From the tool bar, select **Measure** and select the **Ampl** tab, **More**, and then select **Mean** to measure the mean of the current channel.
    - Press the **X** (Close) button.
  - c. *Set the vertical scale:* Set the vertical **Scale** to one of the settings in the following table that is not yet checked.

**Table 9: Offset accuracy**

Scale setting	Position setting (Divs)	Termination setting	Offset setting <sup>13</sup>	Generator setting	Accuracy limits
6.25 mV	0	0 V	0 V	0 V	-3.125 mV to +3.125 mV
		+3.5 V	+3.4 V	+3.4 V	+3.3831 V to +3.4169 V
		-3.5 V	-3.4 V	-3.4 V	-3.4169 V to -3.3831 V
10 mV	0	0 V	0 V	0 V	-3.5 mV to +3.5 mV
		+3.5 V	+3.4 V	+3.4 V	+3.3827 V to +3.4173 V
		-3.5 V	-3.4 V	-3.4 V	-3.4173 V to -3.3827 V
20 mV	0	0 V	0 V	0 V	-4.5 mV to +4.5 mV
		+3.5 V	+3.4 V	+3.4 V	+3.3817 V to +3.4183 V
		-3.5 V	-3.4 V	-3.4 V	-3.4183 V to -3.3817 V
50 mV	0	0 V	0 V	0 V	-7.5 mV to +7.5 mV
		+3.5 V	+3.4 V	+3.4 V	+3.3787 V to +3.4213 V
		-3.5 V	-3.4 V	-3.4 V	-3.4213 V to -3.3787 V
100 mV	0	0 V	0 V	0 V	-12.5 mV to +12.5 mV
		+3.5 V	+3.4 V	+3.4 V	+3.3737 V to +3.4263 V
		-3.5 V	-3.4 V	-3.4 V	-3.4263 V to -3.3737 V
120 mV	0	0 V	0 V	0 V	-14.5 mV to +14.5 mV
		+3.5 V	+3.4 V	+3.4 V	+3.3717 V to +3.4283 V
		-3.5 V	-3.4 V	-3.4 V	-3.4283 V to -3.3717 V
140 mV	0	0 V	-6 V	-6 V	-6.0634 V to +5.9366 V
		0 V	0 V	0 V	-27.4 mV to +27.4 mV
		0 V	+6 V	+6 V	-5.9366 V to +6.0634 V

Table continued...

<sup>13</sup> Set as precisely as the instrument's offset resolution permits.

Scale setting	Position setting (Divs)	Termination setting	Offset setting <sup>13</sup>	Generator setting	Accuracy limits
200 mV	0	0 V	-6 V	-6 V	-6.0694 V to -5.9306 V
		0 V	0 V	0 V	-33.4 V to +33.4 V
		0 V	+6 V	+6 V	+5.9306 V to +6.0694 V
400 mV	0	0 V	-6 V	-6 V	-6.0894 V to -5.9106 V
		0 V	0 V	0 V	-53.4 mV to +53.4 mV
		0 V	+6 V	+6 V	+5.9106 mV to +6.0894 mV

d. Display the test signal:

- Display the **Vertical Setup** menu.
- Use the keypad to set the Termination Voltage, Position, and Offset vertical settings as listed in the table for the current vertical scale setting. The baseline level may move off screen.
- Set the generator so that its Sense value and polarity matches the generator setting in the table for the vertical scale, termination voltage, position, and offset settings you have made.



**Note:** It's important to use the Sense reading of the generator instead of the Output level when adjusting the generator to the specified voltage setting.

e. Measure the test signal: Press **Close**. Read the measurement results at the **Mean** measurement readout. Refer to the following figure.

Turn on the measurement called mean and read the results here.



Figure 17: Measurement of offset accuracy

f. Check against limits:

<sup>13</sup> Set as precisely as the instrument's offset resolution permits.

- CHECK that the readout for the measurement **Mean** readout on screen is within the limits listed for the current vertical scale and position/offset/generator settings. Enter the value on the test record.
  - Repeat substep [2.d](#) on page 146, using the offset and generator settings as is listed in the table.
  - CHECK that the **Mean** measurement readout on screen is within the limits listed for the current vertical scale setting and position/offset/termination/generator settings. Enter the value on the test record.
  - Repeat substep [2.d](#) on page 146, using the negative-polarity offset and generator settings as is listed in the table.
  - CHECK that the **Mean** measurement readout on screen is within the limits listed for the current vertical scale setting and position/offset/termination/generator settings. Enter the value on the test record.
  - Repeat substeps [2.c](#) on page 144 through [2.f](#) on page 146 until all vertical scale settings, are checked for the channel under test. (See [Table 9](#) on page 145.)
- g.** *Test all channels:* Repeat substeps [2.a](#) on page 144 through [2.f](#) on page 146 for all TekConnect channels.
- 3.** *Disconnect the hookup:*
- a. Set the generator output to 0 V.
  - b. Disconnect the generator from the channel last tested.

## Check analog bandwidth, ATI channel

Equipment Required	Prerequisites
One sine wave generator (Item <a href="#">9</a> on page 49)	(See <a href="#">Prerequisites</a> on page 47.)
One level meter and power sensor (Item <a href="#">10</a> on page 49)	
One cable, (Item <a href="#">31</a> on page 51)	

- 1.** *Install the test hookup and preset the instrument controls:*
  - a.** *Initialize the instrument:*
    - Pull down the **File** menu, select Recall Default Setup.
  - b.** *Hook up the test-signal source:* Connect the sine wave output of the sine wave generator to **Ch 2**. Set the output of the generator to a reference frequency of 100 MHz. (See [Figure 18](#) on page 148.)

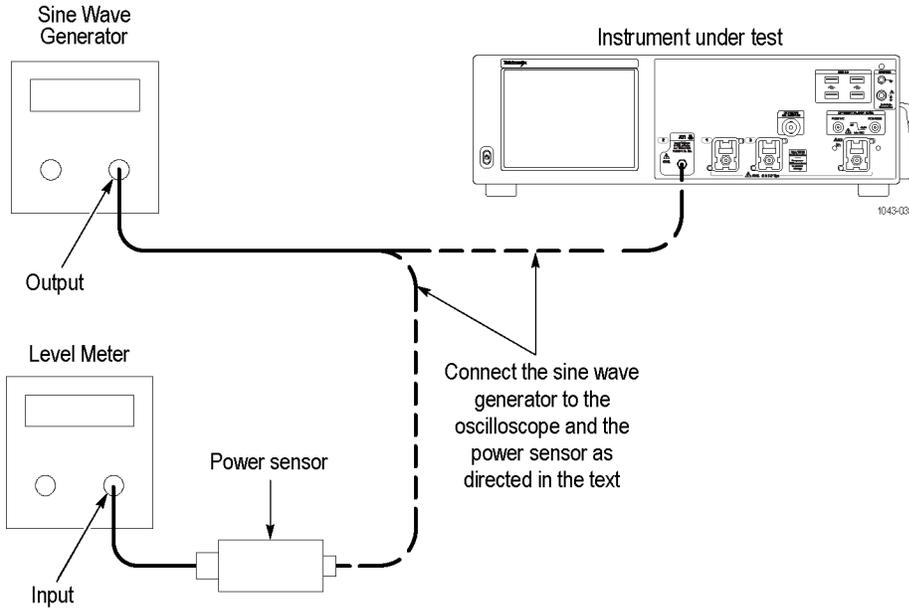


Figure 18: Channel bandwidth test hookup

c. Modify the default settings:

- From the button bar, select **Horiz/Acq** and select the **Horizontal** tab. Set the Sample Rate to **200 GS/s**.
- Set the horizontal **Scale** to **40 ns**.
- Set Mode to **Manual**.
- Set the Record Length to **1000000**.
- Select **Vertical**, select **Vertical Setup**.
- Press Display Off to turn off Chan 1.
- Select the Chan 2 tab.
- Press Display Off to turn on Chan 2.
- Check **Force Constant Sample Rate** (Digital filters ensured).
- From the Bandwidth drop-down list, select the maximum bandwidth for your instrument.

2. Confirm the input channels are within limits for bandwidth:

Table 10: Channel bandwidth

Vertical scale	Reference amplitude (3.5 div)	Horizontal scale	Test frequency	
			DPO77002SX	-3 dB limits
10 mV	35 mV	1 ns	67 GHz	≥24.7 mV
20 mV	70 mV	1 ns	67 GHz	≥49.5 mV
30 mV	105 mV	1 ns	67 GHz	≥74.2 mV

**Table 11: Channel bandwidth**

Vertical scale	Reference amplitude (3.5 div)	Horizontal scale	Test frequency			-3 dB limits
			DPO77002SX	DPO75902SX	DPO75002SX	
10 mV	35 mV	400 ps	67 GHz	59 GHz	49.94445 GHz	≥24.7 mV
20 mV	70 mV	400 ps	67 GHz	59 GHz	49.94445 GHz	≥49.5 mV
30 mV	105 mV	400 ps	67 GHz	59 GHz	49.94445 GHz	≥74.2 mV

- a. *Set the trigger source:* Set the trigger Source to **Line**.
- b. *Set the vertical scale:*  
For the channel you are testing, set the vertical **Scale** to the setting listed in the tables (starting with the lowest setting). See the preceding Channel bandwidth table that applies to your instrument.
- c. *Set the trigger coupling:* From the button bar, select **Trigger** and select Coupling **DC**.
- d. *Display the test signal:* Do the following subparts to first display the reference signal and then the test signal.
  - From the button bar select **Measure**; then select the **Time** tab.
  - Select the **Freq** button to measure the frequency of the current channel.
  - Select the **Ampl** tab. Select the **Amplitude** button.
  - From the Annotation drop-down list, select **None**.
  - Select the **Statistics** button, then select the **Mean** button.
  - Click the **X** (Close) button.
  - Set the generator output so the Ch 2 Amplitude mean readout equals the reference amplitude. See the preceding Channel Bandwidth table that applies to your oscilloscope model. This corresponds to the vertical scale set in substep 2.d on page 149.
  - Remove the cable from the CH 2 input and connect it to the power sensor.
  - Record the reading on the power meter.
  - Set the trigger as follows: Click the **Trigger** button. Click the **Set to 50%** button as necessary to trigger a stable display.
- e. *Measure the test signal:*
  - Set the frequency of the generator, to the test frequency in the tables that corresponds to the vertical scale set in substep 2.d on page 149.
  - Set the horizontal **Scale** to the horizontal scale setting in the tables that corresponds to the vertical scale set in substep 2.d on page 149.
  - Adjust the output of the generator until the reading on the power meter is equal to the reading recorded on the power meter in step 2.f on page 150. If required by your level meter, input the correction factor for the new frequency.
  - Remove the cable from the power sensor and connect it to the Ch 2 input.
  - Read the results at the Ch 2 Amplitude mean readout, which will automatically measure the amplitude of the test signal. (See [Figure 19](#) on page 150.)

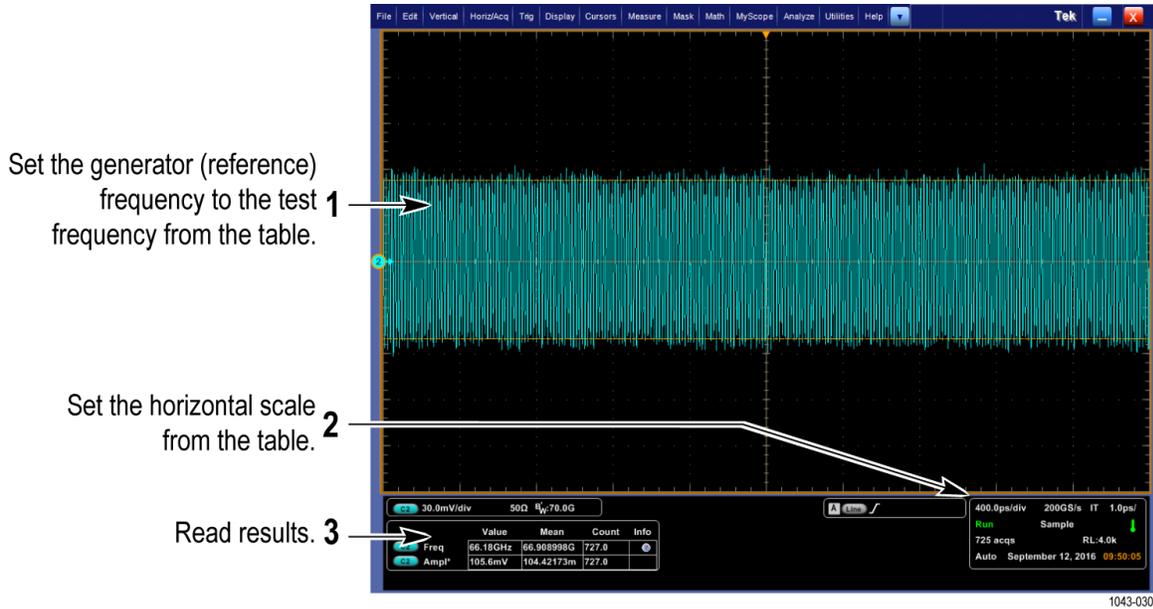


Figure 19: Measurement of analog bandwidth

f. Check against limits:

- CHECK that the measured amplitude is within the limits for the current vertical scale setting in the table.
- Enter the voltage on the test record.
- When finished checking, set the horizontal **Scale** back to the 20 ns.

g. Check remaining vertical scale settings against limits:

- Check the remaining vertical scale settings for the channel under test by repeating substeps 2.a on page 149 through 2.g on page 150 for each of the remaining scale settings for the channel under test.
- When doing substep 2.d on page 149, skip the subparts that turn on the Chx Amplitude mean measurement.

3. Disconnect the hookup: Disconnect the test hook up from the input connector of the channel last tested.

## Check channel bandwidth, TekConnect channels

Equipment Required	Prerequisites
One sine wave generator (Item 9 on page 49)	(See <a href="#">Prerequisites</a> on page 47.)
One level meter and power sensor (Item 10 on page 49)	
One power splitter (Item 11 on page 49)	
50 Ω precision cable 2.92 mm male-to-female (Item 12 on page 49)	
One K male-to-male adapter (Item 13 on page 49)	
SMA male-to-BNC female adapter (Item 18 on page 50)	

1. Install the test hookup and preset the instrument controls:

a. Initialize the instrument:

- Pull down the **File** menu, select **Recall Default Setup**.

b. *Modify the default settings:*

- Select **Vertical**, select **Vertical Setup**.
- From the Bandwidth drop-down list, select the maximum bandwidth for your instrument.
- From the button bar, select **Horiz/Acq** and select the **Horizontal** tab. Select Constant Sample Rate mode. Set the Sample Rate to **250 GS/s** or **200 GS/s**, depending on instrument setup.
- Set the horizontal **Scale** to **40 ns**.
- From the button bar, select **Horiz/Acq** and select the **Acquisition** tab. Set the acquisition mode as follows: Select **Sample**.
- Set the sampling mode as follows: Select the **Interpolate IT** button.
- From the button bar, Select **Measure**. Select Setups **Ref Levs**; then select the **Histogram Mode** button.
- If your instrument has enhanced bandwidth, from the toolbar, select **Vertical** and check **Force Constant Sample Rate** (Digital filters ensured). Select **Apply to All Channels**.

c. *Hook up the test-signal source:* Connect the sine wave output of the sine wave generator to **Ch 1** through a power splitter. Connect the power sensor of the power meter to the power splitter. Set the output of the generator to a reference frequency of 50 MHz. (See [Figure 20](#) on page 151.)

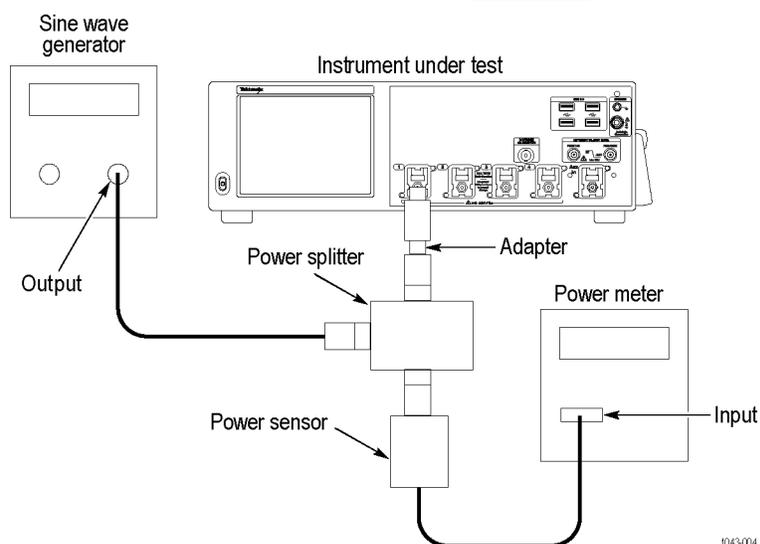
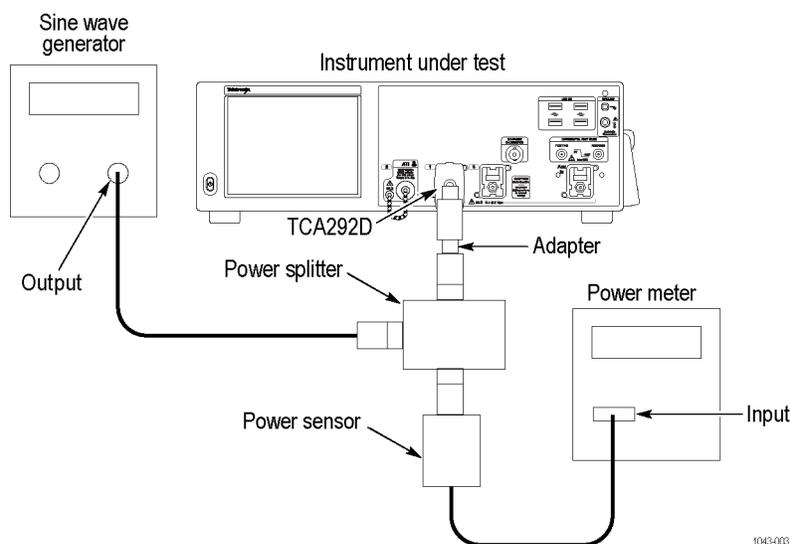


Figure 20: Channel bandwidth test hookup

2. Confirm the input channels are within limits for bandwidth: Do the following substeps - test Ch 1 first, skipping substeps 2.a on page 152 and 2.b on page 152 since Ch 1 is already set up for testing from step 1 on page 150.

a. Select an unchecked channel:

- From the button bar, select **Measure** and then **Clear All** to remove the previous measurement.
- From the button bar select Vertical and then **Vertical Setup**. Click the Display **On** button of the channel just confirmed to remove the channel from the display.
- Select the tab that corresponds to the channel you are to confirm, and then click Display **OFF**.
- Move the test setup to the channel you selected.

**Table 12: Channel bandwidth**

Vertical scale	Reference amplitude (3.5 div)	Horizontal scale	Test frequency		
			DPO77002SX	DPO73304SX	-3 dB limits
6.25 mV	21.9 mV	1 ns	33 GHz	33 GHz	≥15.5 mV
10 mV	35 mV	1 ns	33 GHz	33 GHz	≥24.7 mV
20 mV	70 mV	1 ns	33 GHz	33 GHz	≥50 mV
50 mV	175 mV	1 ns	33 GHz	33 GHz	≥124 mV
100 mV	350 mV	1 ns	33 GHz	33 GHz	≥248 mV
120 mV	420 mV	1 ns	33 GHz	33 GHz	≥297 mV
140 mV	490 mV	1 ns	33 GHz	33 GHz	≥346 mV
200 mV	700 mV <sup>14</sup>	1 ns	33 GHz	33 GHz	≥495 mV
400 mV	1400 mV <sup>15</sup>	1 ns	33 GHz	33 GHz	≥990 mV

b. Set the trigger source: Set the trigger Source to **Line**.

c. Set the vertical scale:

For the channel you are testing, set the vertical **Scale** to the setting listed in the tables (starting with the lowest setting). See the preceding Channel bandwidth table that applies to your instrument.

d. Set the trigger coupling: From the button bar, select **Trigger** and select Coupling **DC**.

e. Display the test signal: Do the following subparts to first display the reference signal and then the test signal.

- From the button bar select **Measure**; then select the **Time** tab.
- Select the **Freq** button to measure the frequency of the current channel.
- Select the **Ampl** tab. Select the **Amplitude** button.
- From the Annotation drop-down list, select **None**.
- Select the **Statistics** button, then select the **Mean** button.

<sup>14</sup> If your generator cannot output the required amplitude, determine its maximum output at the Test frequency, and use this for the reference amplitude. The -3 dB limit can be calculated as:  $0.707 \times \text{reference amplitude}$ .

<sup>15</sup> If your generator cannot output the required amplitude, determine its maximum output at the Test frequency, and use this for the reference amplitude. The -3 dB limit can be calculated as:  $0.707 \times \text{reference amplitude}$ .

- Click the **X** (Close) button.
- Set the generator output so the Chx Amplitude mean readout equals the reference amplitude. See the preceding Channel Bandwidth table that applies to your oscilloscope model. This corresponds to the vertical scale set in substep 2.c on page 152.
- Record the reading on the power meter.
- Set the trigger as follows: Click the **Trigger** button. Click the **Set to 50%** button as necessary to trigger a stable display. At full bandwidth, you may also want to make small, manual adjustments to the trigger level.



**Note:** If you are using Line trigger, the test signal is not shown as a stable display.

f. *Measure the test signal:*

- Set the frequency of the generator to the test frequency in the tables that corresponds to the vertical scale set in substep 2.c on page 152.
- Set the frequency of the generator, as shown on screen, to the test frequency in the tables that corresponds to the vertical scale set in substep 2.c on page 152.
- Set the horizontal **Scale** to the horizontal scale setting in the tables that corresponds to the vertical scale set in substep 2.c on page 152. Click **SET to 50%** as necessary to trigger the signal.
- Adjust the output of the generator until the reading on the power meter is equal to the reading recorded on the power meter in step 2.e on page 152.
- Read the results at the Chx Amplitude mean readout, which will automatically measure the amplitude of the test signal. (See Figure 21 on page 153.)

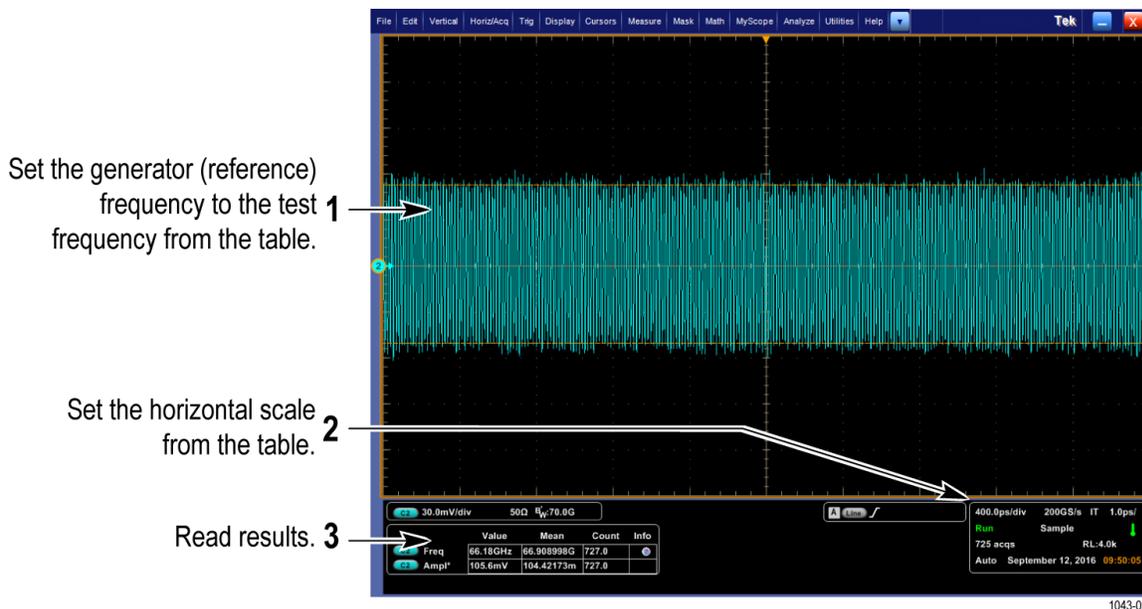


Figure 21: Measurement of analog bandwidth

g. *Check against limits:*

- CHECK that the measured amplitude is within the limits for the current vertical scale setting in the table.
- Enter the voltage on the test record.
- When finished checking, set the horizontal **Scale** back to the 20 ns.

h. *Check remaining vertical scale settings against limits:*

- Check the remaining vertical scale settings for the channel under test by repeating substeps 2.a on page 152 through 2.g on page 153 for each of the remaining scale settings for the channel under test.

- When doing substep [2.e](#) on page 152, skip the subparts that turn on the Chx Amplitude mean measurement until you check a new channel.
  - When selecting a new channel and before doing substep [2.d](#) on page 152, click the **Clear All** button to remove the previous channel measurements.
- i. *Test all channels:* Repeat substeps [2.a](#) on page 152 through [2.h](#) on page 153 for all TekConnect channels.
3. *Disconnect the hookup:* Disconnect the test hook up from the input connector of the channel last tested.

## Check Input Resistance, ATI channel

Equipment Required	Prerequisites
One Digital Multimeter, (Item <a href="#">24</a> on page 50)	(See <a href="#">Prerequisites</a> on page 47.)
One Dual-Banana Connector, (Item <a href="#">6</a> on page 48)	
One precision 50 $\Omega$ coaxial cable, (Item <a href="#">5</a> on page 48)	
One SMA male-to-female BNC adapter, (Item <a href="#">16</a> on page 49)	
One 1.85 mm to SMA female adapter, (Item <a href="#">30</a> on page 51)	
One SMA female-to-female adapter, (Item <a href="#">15</a> on page 49)	
One SMA female short circuit adapter, (Item <a href="#">22</a> on page 50)	

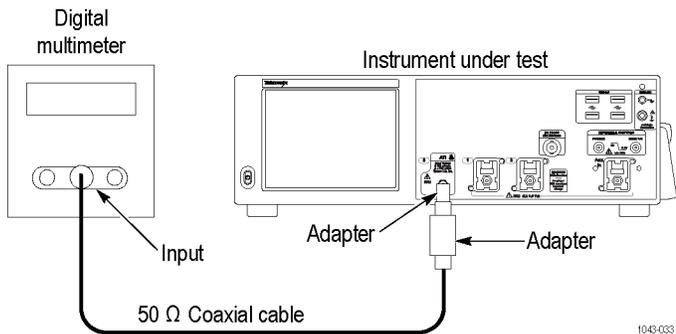


Figure 22: Input resistance test hookup

1. *Install the test hookup and preset the instrument controls:*
  - a. *Initialize the instrument:* Pull down the **File** menu, select Recall Default Setup.
  - b. Short the cable from the multimeter by connecting a shorting adapter and SMA-to-SMA adapter to the BNC-to-SMA adapter.
  - c. Read and record the resistance of the multimeter leads.
  - d. *Hook up the test-signal source:* Connect, through a 50  $\Omega$  precision coaxial cable, the input of the multimeter to **Ch 2** through adapters. (See [Figure 22](#) on page 154.)
  - e. Set the Vertical **Scale** to **10.0 mV** per division
2. *Check input impedance against limits:*
  - a. *Measure the impedance:* Read and record the measured impedance.
  - b. Remove the dual banana connector from the digital multimeter (DMM), turn it 180 degrees and reinsert it in the DMM input.
  - c. *Measure the impedance:* Read and record the measured impedance.

- d. Add the two measurements and divide the result by 2.
  - e. Subtract the resistance of the multimeter leads from the average that you calculated.
  - f. Enter the result on the test record.
  - g. Check - The measurement is within the limits specified in the test record.
3. Set the Vertical **Scale** to **20 mV** per division and repeat step 2 on page 154.
  4. Set the Vertical **Scale** to **30 mV** per division and repeat step 2 on page 154.
  5. *Disconnect the hookup:* Disconnect the equipment from the instrument.

## Check input resistance, TekConnect channels

Equipment Required	Prerequisites
One Digital Multimeter (Item 24 on page 50)	(See <a href="#">Prerequisites</a> on page 47.)
One Dual-Banana Connector, (Item 6 on page 48)	
One precision 50 $\Omega$ coaxial cable (Item 5 on page 48)	
Adapter	
One SMA male-to-female BNC adapter (Item 18 on page 50)	
One SMA female-to-female adapter (Item 15 on page 49)	
One SMA male short circuit adapter (Item 22 on page 50)	

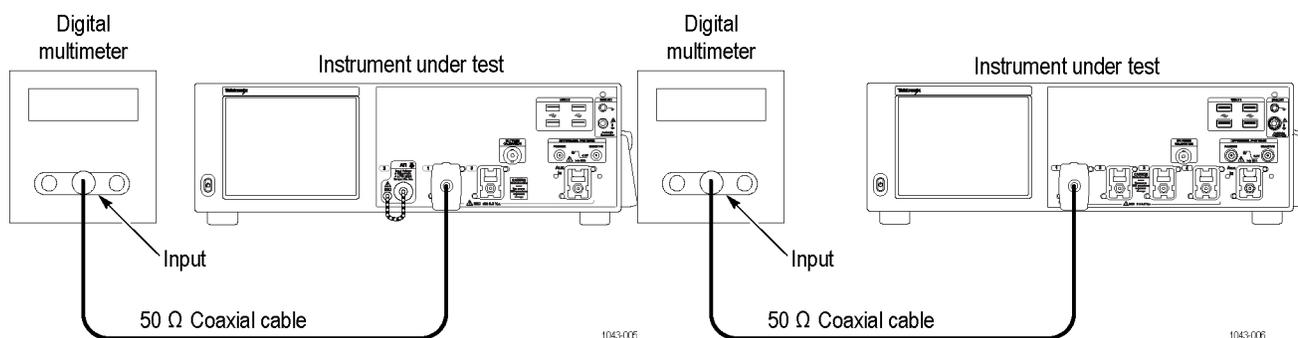


Figure 23: Input resistance test hookup

1. *Install the test hookup and preset the instrument controls:*
  - a. *Initialize the instrument:* Pull down the **File** menu, select Recall Default Setup.
  - b. Short the cable from the multimeter by connecting a shorting adapter and SMA-to-SMA adapter to the BNC-to-SMA adapter.
  - c. Read and record the resistance of the multimeter leads.
  - d. *Hook up the test-signal source:* Connect, through a 50  $\Omega$  precision coaxial cable, the input of the multimeter to **Ch 1** through adapters. (See [Figure 23](#) on page 155.)
  - e. Set the Vertical **Scale** to **6.25 mV** per division
2. *Check input impedance against limits:*
  - a. *Measure the impedance:* Read and record the measured impedance.
  - b. Remove the dual banana connector from the digital multimeter (DMM), turn it 180 degrees and reinsert it in the DMM input.

- c. *Measure the impedance:* Read and record the measured impedance.
  - d. Add the two measurements and divide the result by 2.
  - e. Subtract the resistance of the multimeter leads from the average that you calculated.
  - f. Enter the result on the test record.
  - g. Check - The measurement is within the limits specified in the test record.
3. Set the Vertical **Scale** to **140 mV** per division and repeat step 2 on page 155.
  4. Repeat steps 2 on page 155 through 3 on page 156 for the remaining TekConnect input channels:
    - a. Move the test setup to an unchecked TekConnect channel.
    - b. Set the Vertical **Scale** of the channel to **6.25 mV** per division.
    - c. Repeat steps 2 on page 155 through 3 on page 156.
  5. *Disconnect the hookup:* Disconnect the equipment from the instrument.

## Time base system checks

These procedures check those characteristics that relate to the time base system and are listed as checked under *Warranted Characteristics* in *Specifications*.

### Check timebase and delay time accuracy and reference

Equipment Required	Prerequisites
One timer-counter (Item 8 on page 48)	(See <a href="#">Prerequisites</a> on page 47.)
One 50 Ω, precision coaxial cable (Item 5 on page 48)	
One SMA male-to-female BNC adapter (Item 18 on page 50)	
One sine wave generator (Item 9 on page 49)	

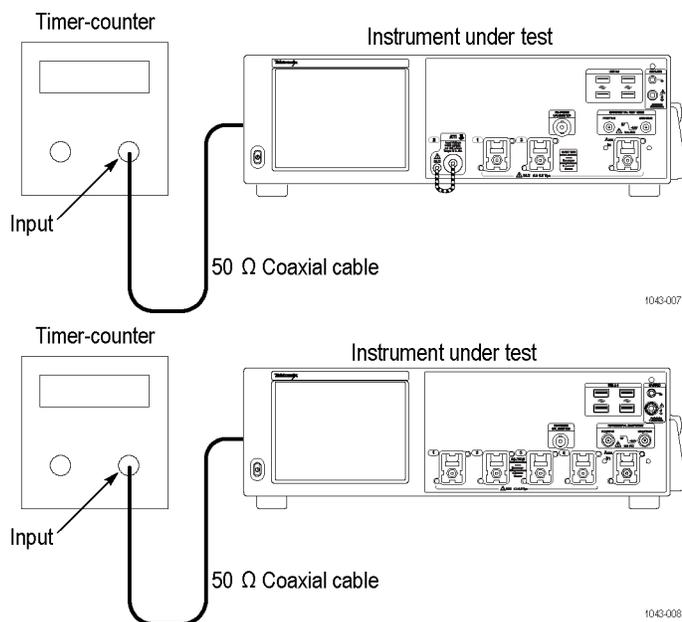


Figure 24: Timebase and delay time initial test hookup

1. Install the test hookup and preset the instrument controls:
  - a. Hook up the test-signal source: Connect the input of the timer-counter to **Ref Clock Out** . (See [Figure 24](#) on page 157.)
    - Set the timer-counter gate to 1 s.
    - Set the timer-counter to count the 10 MHz reference output.
  - b. Initialize the instrument: Pull down the **File** menu, select Recall Default Setup.
2. Confirm the time base is within limits for accuracies:
  - a. Check Time base, delay time accuracies, and reference output frequency:
    - CHECK that the count on the timer-counter is within limits.
    - Enter the count in the table <sup>18</sup>.

Time since initial/last adjustment	Minimum	Measured count	Maximum
0	9999.999 kHz		10000.001 kHz
1 year	9999.991 kHz		10000.009 kHz
2 years	9999.988 kHz		10000.012 kHz
3 years	9999.985 kHz		10000.015 kHz

- Compare the measured count to the value for the time since the last time base adjustment <sup>19</sup>.
  - If the count is within the limits, enter Pass in the test record. If the count is not within limits, enter Fail in the test record.
3. Disconnect the hookup: Disconnect the equipment from the instrument.

<sup>18</sup> The limits in the table are valid for an ambient temperature in the range  $23 \pm 5$  °C.

<sup>19</sup> Use the CALibrate:TBASE:Adjust? query to determine the date and time of the last timebase calibration adjustment.

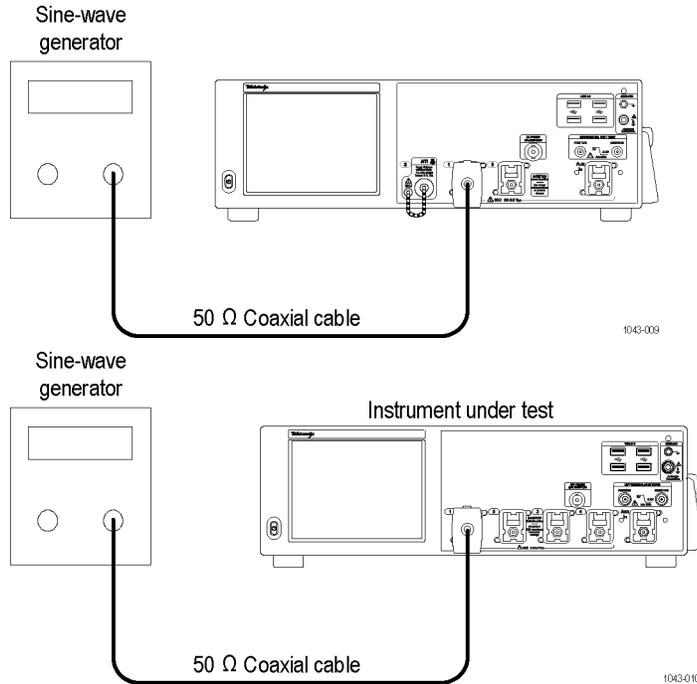


Figure 25: Timebase and delay time second test hookup

4. Install the test hookup and preset the instrument controls:

- a. *Initialize the instrument:* Pull down the **File** menu, select Recall Default Setup.
- b. *Hook up the test-signal source:* Connect the output of the sine wave generator to the **CH1** input. (See [Figure 25](#) on page 158.)
  - From the button bar, select **Measure** and select the **Ampl** tab.
  - Click the **Pk-Pk** button.
  - Click the **X** (Close) button.
  - Set the Vertical **Scale** to 50 mV.
  - Set the generator for a 10.0 MHz sine wave.
  - Set the generator to output a 4 division signal. Adjust the output until the Pk-Pk readout displays 200 mV.
- c. *Set the instrument controls:*
  - Move the cable from the **CH1** input to the rear-panel **Ext Ref In** input (See [Figure 26](#) on page 159.)
  - From menu mode, select **Utilities** and select **External Signals**.
  - Click the **External** button to select the external reference.

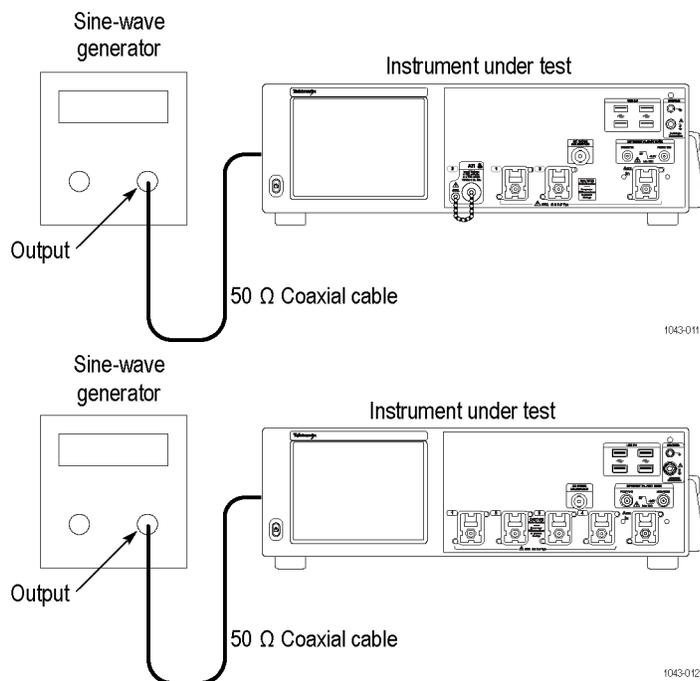


Figure 26: Timebase and delay time final test hookup

5. **Confirm external reference:**
  - a. **Perform a signal path compensation:**
    - Select **Utilities** and then select **Instrument Calibration**.
    - Select **Run SPC (Calibrate)** on some instruments) and wait for the signal path compensation to finish.
  - b. **Check the completion status:** Enter the pass/fail status in the test record. If the Status is Fail, refer the instrument to qualified service personnel.
6. **Disconnect the hookup:**
  - a. Disconnect all test equipment from the instrument.
  - b. **Set the instrument controls:**
    - From menu mode, select **Utilities** and select **External Signals**.
    - Click the **Internal** button to select the internal reference.
  - c. **Perform a signal path compensation:**
    - Select **Utilities** and then select **Instrument Calibration**.
    - Select **Run SPC (Calibrate)** on some instruments) and wait for the signal path compensation to finish.

## Check delta time measurement accuracy

Equipment Required	Prerequisites
One 50 $\Omega$ , precision coaxial cable (Item 5 on page 48)	(See <a href="#">Prerequisites</a> on page 47.)
One sine-wave generator (Item 9 on page 49)	
One adapter (Item 18 on page 50)	

This procedure checks the Delta Time Measurement Accuracy as listed in *Specifications*.

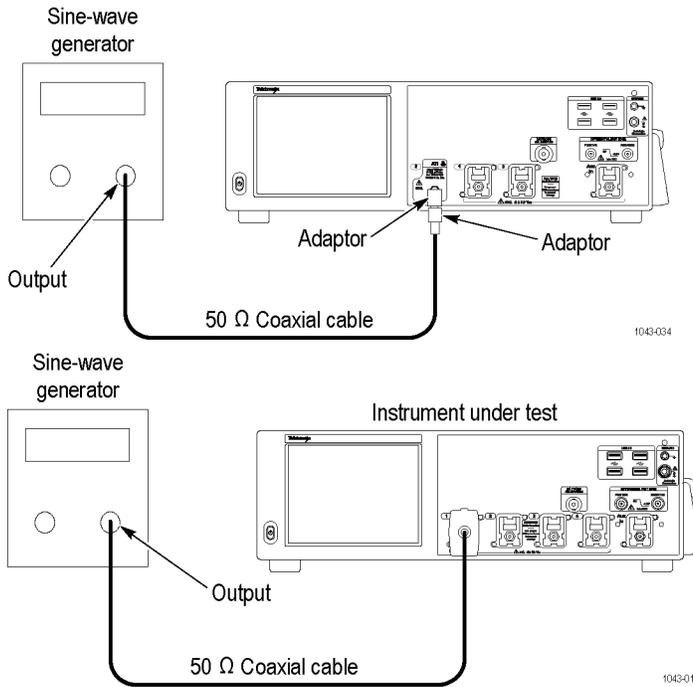


Figure 27: Delta time accuracy test hookup

1. Install the test hookup and preset the instrument controls:

- a. Initialize the instrument: Pull down the **File** menu, select Recall Default Setup.
- b. Hook up the sine-wave generator:
  - When testing an ATI channel: Connect the sine-wave output of the sine-wave generator through a **50 Ω** precision coaxial cable to **Ch 2** through an adaptor and connector saver.
  - When testing a TekConnect channel: Connect the sine-wave output of the sine-wave generator through a **50 Ω** precision coaxial cable to **Ch 1** through an adaptor.
  - Power on the generator.
  - Set the sine-wave generator to output a sine wave of the frequency shown in the table. (See [Table 14](#) on page 161.)
  - Set the generator output for 60 mV. (This amplitude will be adjusted later to get an 8-division pulse on screen.)
  - Set the Vertical Scale to the Volts/Div shown in the table.
  - Set the Trigger Source to the input channel you are using.
- c. Modify the initialized control settings:
  - Readjust the Trigger **Level** so the trigger level is at 50% of the rising edge of the sine wave.
  - From the button bar, select the **Horiz/Acq** button. Select the **Manual** button to turn on Manual Mode.
  - Select the **Acquisition** tab. Press the **IT** button to turn on Interpolate Time Only.
  - From the button bar, select the **Vertical** button.
  - Select **Digital Filters (DSP) Enabled**.
  - Set the vertical scale, generator frequency, record length, and sample rate as indicated in the following table for the instrument under test.

Table 14: Delta time measurement settings

Instrument	Volts/div	Sine wave generator frequency	Record length	Sample rate (IT mode)	Burst width	Delta time rms accuracy limit	Delta time pk-pk accuracy limit
<b>BWE on</b>							
DPO77002SX (TekConnect inputs)	6.25 mV	19.49 GHz	10000	100 GS/s	10 ns	0.620 ps	6.20 ps
	50 mV	19.49 GHz	10000	100 GS/s	10 ns	0.400 ps	4.00 ps
	100 mV	19.49 GHz	10000	100 GS/s	10 ns	0.400 ps	4.00 ps
DPO75902SX (TekConnect inputs)	6.25 mV	19.49 GHz	10000	100 GS/s	10 ns	0.620 ps	6.20 ps
	50 mV	19.49 GHz	10000	100 GS/s	10 ns	0.400 ps	4.00 ps
	100 mV	19.49 GHz	10000	100 GS/s	10 ns	0.400 ps	4.00 ps
DPO75002SX (TekConnect inputs)	6.25 mV	19.49 GHz	10000	100 GS/s	10 ns	0.620 ps	6.20 ps
	50 mV	19.49 GHz	10000	100 GS/s	10 ns	0.400 ps	4.00 ps
	100 mV	19.49 GHz	10000	100 GS/s	10 ns	0.400 ps	4.00 ps
DPO73304SX	6.25 mV	19.5 GHz	10000	100 GS/s	10 ns	0.653 ps	6.53 ps
	50 mV	19.5 GHz	10000	100 GS/s	10 ns	0.427 ps	4.27 ps
	100 mV	19.5 GHz	10000	100 GS/s	10 ns	0.418 ps	4.18 ps
DPO72504SX	6.25 mV	15.5 GHz	10000	100 GS/s	10 ns	0.821 ps	8.21 ps
	50 mV	15.5 GHz	10000	100 GS/s	10 ns	0.495 ps	4.95 ps
	100 mV	15.5 GHz	10000	100 GS/s	10 ns	0.480 ps	4.80 ps
DPO72304SX	6.25 mV	14.3 GHz	10000	100 GS/s	10 ns	0.806 ps	8.06 ps
	50 mV	14.3 GHz	10000	100 GS/s	10 ns	0.495 ps	4.95 ps
	100 mV	14.3 GHz	10000	100 GS/s	10 ns	0.487 ps	4.87 ps
DPO72004SX	6.25 mV	124 GHz	10000	100 GS/s	10 ns	0.924 ps	9.24 ps
	50 mV	14.3 GHz	10000	100 GS/s	10 ns	0.555 ps	5.55 ps
	100 mV	14.3 GHz	10000	100 GS/s	10 ns	0.553 ps	5.53 ps
DPO71604SX	6.25 mV	10.8 GHz	10000	100 GS/s	10 ns	1.09 ps	10.9 ps
	50 mV	10.8 GHz	10000	100 GS/s	10 ns	0.598 ps	5.98 ps
	100 mV	10.8 GHz	10000	100 GS/s	10 ns	0.596 ps	5.96 ps
DPO71304SX	6.25 mV	8.8 GHz	10000	100 GS/s	10 ns	1.24 ps	12.4 ps
	50 mV	8.8 GHz	10000	100 GS/s	10 ns	0.730 ps	7.30 ps
	100 mV	8.8 GHz	10000	100 GS/s	10 ns	0.719 ps	7.19 ps
<b>BWE off</b>							
DPO73304SX	6.25 mV	19.5 GHz	10000	100 GS/s	10 ns	0.678 ps	6.78 ps
	50 mV	19.5 GHz	10000	100 GS/s	10 ns	0.469 ps	4.69 ps
	100 mV	19.5 GHz	10000	100 GS/s	10 ns	0.466 ps	4.66 ps

Table continued...


Instrument	Volts/div	Sine wave generator frequency	Record length	Sample rate (IT mode)	Burst width	Delta time rms accuracy limit	Delta time pk-pk accuracy limit
DPO72504SX	6.25 mV	15.5 GHz	10000	100 GS/s	10 ns	0.829 ps	8.29 ps
	50 mV	15.5 GHz	10000	100 GS/s	10 ns	0.527 ps	5.27 ps
	100 mV	15.5 GHz	10000	100 GS/s	10 ns	0.512 ps	5.12 ps
DPO72304SX	6.25 mV	14.3 GHz	10000	100 GS/s	10 ns	0.840 ps	8.40 ps
	50 mV	14.3 GHz	10000	100 GS/s	10 ns	0.534 ps	5.34 ps
	100 mV	14.3 GHz	10000	100 GS/s	10 ns	0.526 ps	5.26 ps
DPO72004SX	6.25 mV	124 GHz	10000	100 GS/s	10 ns	0.933 ps	9.33 ps
	50 mV	14.3 GHz	10000	100 GS/s	10 ns	0.600 ps	6.00 ps
	100 mV	14.3 GHz	10000	100 GS/s	10 ns	0.598 ps	5.98 ps
DPO71604SX	6.25 mV	10.8 GHz	10000	100 GS/s	10 ns	1.05 ps	10.5 ps
	50 mV	10.8 GHz	10000	100 GS/s	10 ns	0.680 ps	6.80 ps
	100 mV	10.8 GHz	10000	100 GS/s	10 ns	0.674 ps	6.74 ps
DPO71304SX	6.25 mV	8.8 GHz	10000	100 GS/s	10 ns	1.23 ps	12.3 ps
	50 mV	8.8 GHz	10000	100 GS/s	10 ns	0.835 ps	8.35 ps
	100 mV	8.8 GHz	10000	100 GS/s	10 ns	0.833 ps	8.33 ps
<b>ATI</b>							
DPO77002SX	0.1 mV	43.5 GHz	10000	200 GS/s	10 ns	0.315 ps	3.15 ps
DPO77002SX	0.3 mV	43.5 GHz	10000	200 GS/s	10 ns	0.244 ps	2.44 ps
DPO75902SX	0.1 mV	43.5 GHz	10000	200 GS/s	10 ns	0.290 ps	2.90 ps
DPO75902SX	0.3 mV	43.5 GHz	10000	200 GS/s	10 ns	0.233 ps	2.33 ps
DPO75002SX	0.1 mV	43.5 GHz	10000	200 GS/s	10 ns	0.267 ps	2.67 ps
DPO75002SX	0.3 mV	43.5 GHz	10000	200 GS/s	10 ns	0.220 ps	2.20 ps

d. Adjust the generator output as necessary to obtain **8 divisions** of displayed waveform.

e. *Set up for statistics measurements:*

- From the button bar, select **Measure** and then select the **More** tab to show the More Measurements menu.
- Click the **Burst Width** button.
- Select Setups **Gating** and then select **Cursor**.
- Click **Setup**.
- Select Setups **Statistics** and then select **All**. Set the Weight n= to **1000**. Click **Reset** to reset the statistics.
- Click **Setup**.
- Select Setups **Ref Levs** and then select **Absolute**.
- Click **MidRef**. Using the keypad, set the mid reference level to **0 V**. Click the **X** (Close) button.
- Click one of the cursors to assign the multipurpose readouts to the cursors.
- Click the Cursor readout and set the Cursor 1 x position to **-5.0 ns**, and set the Cursor 2 x position to **+5 ns**.
- Pull down the **Vertical** menu, select Zoom Setup.
- Click **Zoom** to toggle Zoom on.
- Set the Horizontal Zoom position to **45%** (100 GS/s) or **40%** (200 GS/s), and set the Zoom factor to **20**.
- Click a cursor to assign the multipurpose readouts to the Cursors.

- Set the Cursor 1 x position near the trough of the waveform so that ref level annotation is consistently indicating the same edge after the trigger point.

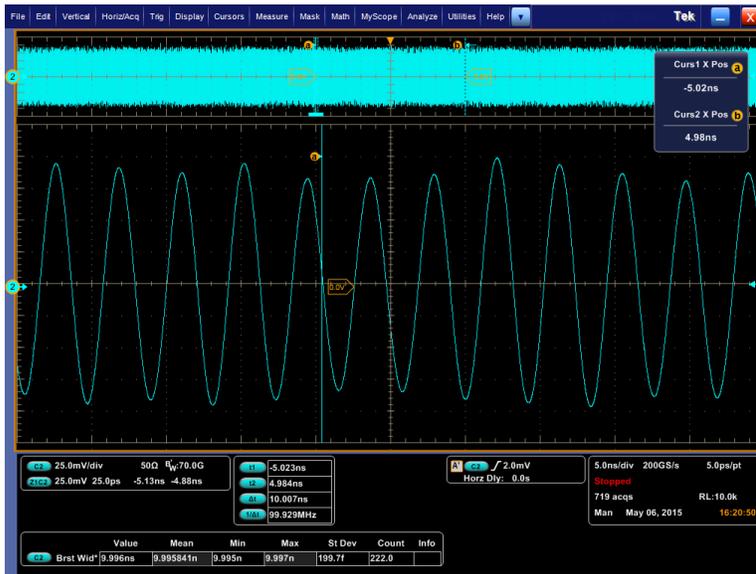

- Set the Zoom position to 55% (100 GS/s) or 60% (200 GS/s).
  - Click a cursor. Set the Cursor 2 x position so that ref level annotation consistently indicates the same falling edge and the cursor  $\Delta t$  is close to 10 ns.
- f. *Read the measurement:*
- Select **Horiz/Acq > Run/Stop**.
  - Select **Edit > Clear Data**. Allow approximately 1000 acquisitions to accumulate, then press **Run/Stop**.
  - Read the Std Dev statistic measurement.
  - Enter the time on the test record.
  - The standard deviation (St Dev) measurement must be less than or equal to the rms Delta-time accuracy limit for your instrument. (See [Table 14](#) on page 161.)
  - Read the Max and Min statistic measurements.
  - Subtract the Max and Min statistic measurements.
  - Enter the time on the test record.
  - The absolute value of the difference of the Max and Min measurements must be less than or equal to the pk-pk Delta-time accuracy limit for your instrument and bandwidth setting. (See [Table 14](#) on page 161.)
  - Press the **Run/Stop** button.
- g. *Repeat for all other Volts/div settings in the table for your instrument:*
- Set the vertical scale, generator frequency, record length, and sample rate as indicated in the table.
  - Repeat step [1.f](#) on page 163.
- h. *Repeat for all channels of your instrument:*
- Connect the sine-wave output of the sine-wave generator through a **50  $\Omega$**  precision coaxial cable to the next unchecked TekConnect channel through an adapter.
  - Set the sine-wave generator to output a sine wave of the frequency shown in the table. (See [Table 14](#) on page 161.)
  - Set the generator output for 60 mV. (This amplitude will be adjusted later to get an 8-division pulse on screen.)
  - Set the Vertical Scale to the Volts/Div shown in the table.
  - Set the Trigger Source to the input channel you are using.

- Repeat substeps 1.c on page 160 through 1.h on page 163 until all channels have been checked.
2. Disconnect all test equipment from the instrument.

## Trigger system checks

These procedures check those characteristics that relate to the trigger system and are listed as checked in *Specifications*.

### Check time qualified trigger accuracy

Equipment Required	Prerequisites
One sine wave generator (Item 9 on page 49)	(See <i>Prerequisites</i> on page 47.)
One 2X attenuator (Item 23 on page 50)	
One 50 $\Omega$ , precision coaxial cable (Item 5 on page 48)	
One SMA male-to-female BNC adapter (Item 18 on page 50)	

1. Install the test hookup and preset the instrument controls:
- Initialize the instrument:* Pull down the **File** menu, select Recall Default Setup.
  - Modify the default setup:*
    - Set the horizontal **Scale** to 2 ns.
  - Hook up the test-signal source:* Connect the output of the sine wave generator to Ch 1 as shown in the following figure.

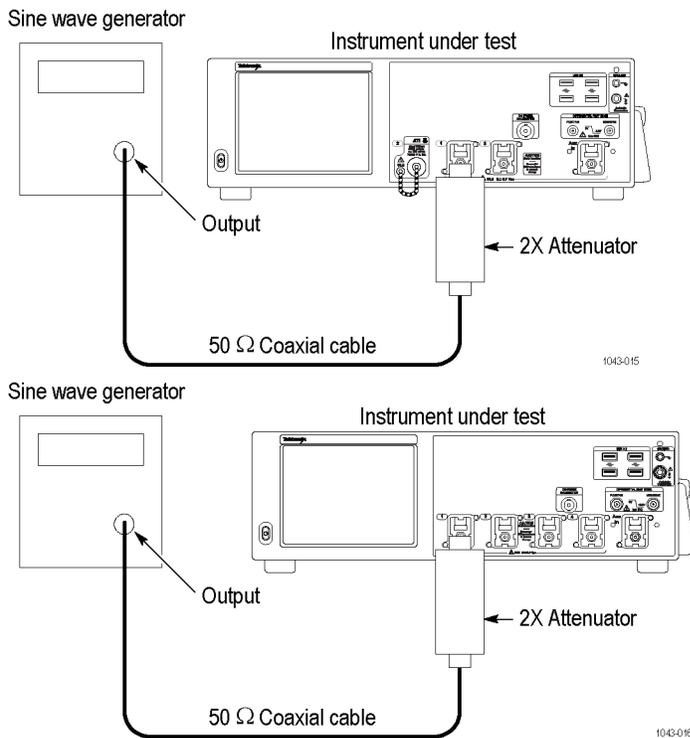


Figure 28: Time qualified trigger test hookup

- d. Set the trigger mode: Select Trig > Mode. Set the Trigger **Mode** to **Normal**.

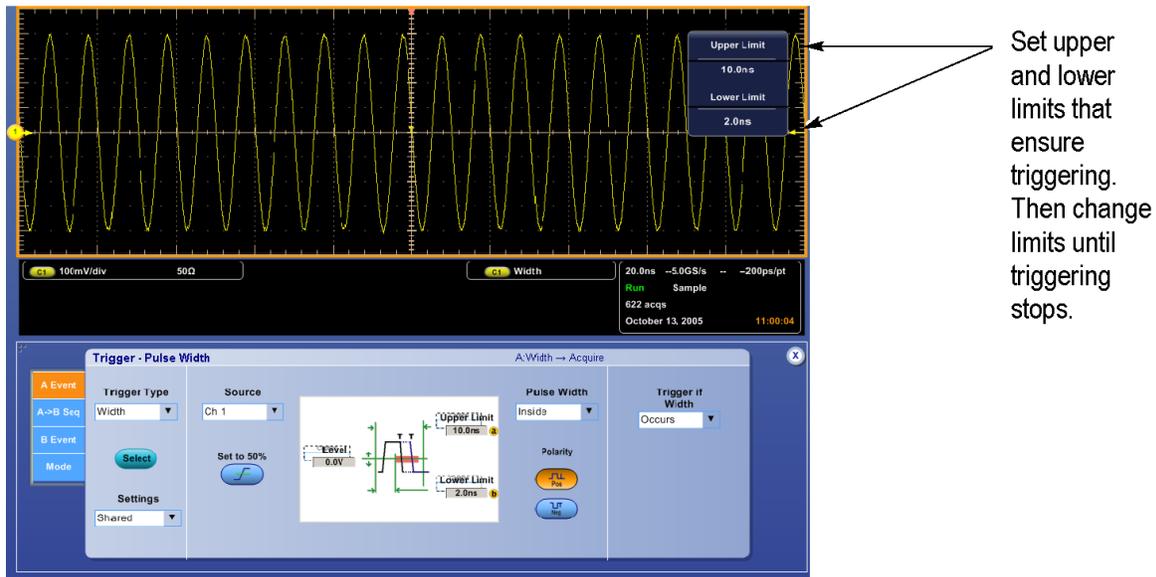


Figure 29: Measurement of time accuracy for pulse and glitch triggering

2. Confirm the trigger system is within time-accuracy limits for time qualified trigger accuracy (time range <1  $\mu$ s):
  - a. Set upper and lower limits that ensure triggering at 100 MHz: (See [Figure 29](#) on page 165.)
    - Select **Trig > A Event (Main) Trigger Setup** and then select the **A Event** tab; then pull down on Trigger Type and select **Width** triggering.
    - Pull down Pulse Width and select **Inside** limits.
    - Click **Upper Limit**. Use the keypad to set the upper limit to 10 ns.
    - Click **Lower Limit**. Use the keypad to set the lower limit to 2 ns.
  - b. Display the test signal:
    - Set the Horizontal **Scale** to 20 ns.
    - Set the output of the sine wave generator for a 100 MHz, five-division sine wave on screen. Set the Vertical **Scale** to 20 mV (the waveform will overdrive the display).
    - Press **SET to 50%**.
  - c. Check against limits: Do the following subparts in the order listed.
    - While doing the following subparts, monitor the display (it will stop acquiring) to determine when triggering is lost.
    - If using the optional front panel, press the multipurpose knobs until Fine is on.
    - Use the multipurpose knob or the keypad to *increase* the **Lower Limit** readout until triggering is lost.
    - CHECK that the **Lower Limit** readout, after the instrument stops triggering, is within the following limits:

Model	Limit
DPO models	4.835 ns to 5.165 ns

- Enter the time on the test record.
- Use the keypad to return the **Lower Limit** to 2 ns and reestablish triggering.
- Click **Upper Limit**; then use the multipurpose knob or keypad to slowly *decrease* the **Upper Limit** readout until triggering stops.
- CHECK that the **Upper Limit** readout, after the instrument loses triggering, is within the following limits:

Model	Limit
DPO models	4.835 ns to 5.165 ns, inclusive

- Enter the time on the test record.
3. *Confirm the trigger system is within time-accuracy limits for pulse-glitch or pulse-width triggering (time range  $\geq 1 \mu\text{s}$ ):*
- a. *Set upper and lower limits that ensure triggering at 250 kHz:*
    - Click **Upper Limit**. Use the keypad to set the upper limit to 4  $\mu\text{s}$ .
    - Click **Lower Limit**. Use the keypad to set the lower limit to 500 ns.
  - b. *Display the test signal:*
    - Set the Horizontal **Scale** to 4  $\mu\text{s}$ .
    - Set the Vertical **Scale** to 100 mV.
    - Set the output of the sine wave generator for a 250 kHz, five-division sine wave on screen. Set the Vertical **Scale** to 20 mV (the waveform will overdrive the display).
    - Press **SET to 50%**.
  - c. *Check against limits:* Do the following subparts in the order listed.
    - If using the optional front panel, press the multipurpose knobs until Fine is on.
    - Use the multipurpose knob or keypad to *increase* the **Lower Limit** readout until triggering is lost.
    - CHECK that the **Lower Limit** readout, after the instrument stops triggering, is within the following limits:

Model	Limit
DPO models	1.47 $\mu\text{s}$ to 2.53 $\mu\text{s}$ , inclusive

- Enter the time on the test record.
- Use the keypad to return the **Lower Limit** to 500 ns and reestablish triggering.
- Click **Upper Limit**; then use the multipurpose knob or keypad to slowly *decrease* the **Upper Limit** readout until triggering stops.
- CHECK that the **Upper Limit** readout, after the instrument loses triggering, is within the following limits:

Model	Limit
DPO models	1.47 $\mu\text{s}$ to 2.53 $\mu\text{s}$ , inclusive

- Enter the time on the test record.
4. *Disconnect the hookup:* Disconnect the equipment from the instrument.

## Check sensitivity edge trigger DC coupled

Equipment required	Prerequisites
One leveled sine wave generator (Item 9 on page 49)	(See <a href="#">Prerequisites</a> on page 47.)
Three precision 50 $\Omega$ coaxial cables (Item 19 on page 50)	
Two SMA female to BNC male adapters (Item 21 on page 50)	
Three SMA female-to-female adapters (Item 15 on page 49)	
One 10X attenuator (Item 1 on page 48)	
One power splitter (Item 11 on page 49)	
Male N-to-BNC adapter (Item 14 on page 49)	
One SMA adapter (Item 18 on page 50)	
One 5X attenuator (Item 2 on page 48)	
One 2X attenuator (Item 23 on page 50)	



**Note:** The sine wave generator output amplitude must be leveled to within 0.35 dB of the reference frequency (10 MHz) through the trigger frequency being tested. Refer to the Sine Wave Generator Leveling Procedure if your sine wave generator does not have automatic output amplitude leveling. (See [Sine wave generator leveling procedure](#) on page 175.)



**Note:** This procedure checks a typical, not warranted, specification.

### 1. Install the test hookup and preset the instrument controls:

- a. *Initialize the instrument:* Pull down the **File** menu, select Recall Default Setup.
- b. *Modify the initialized front-panel control settings:*
  - Set the Horizontal **Scale** to 20 ns.
  - Set the Trigger **Mode** to **Normal**.
  - From the button bar, select **Horiz/Acq** and then select the **Acquisition** tab.
  - Select **Average** and set the number of averages to **16**.
  - Click the **Equivalent ET** button.
- c. *Hook up the test-signal source:*
  - Connect the signal output of the generator to a power splitter. Connect one output of the power splitter to **Ch 1** as shown in the following figure. Connect the other output of the power splitter to the **Aux Input** as in the following figure.

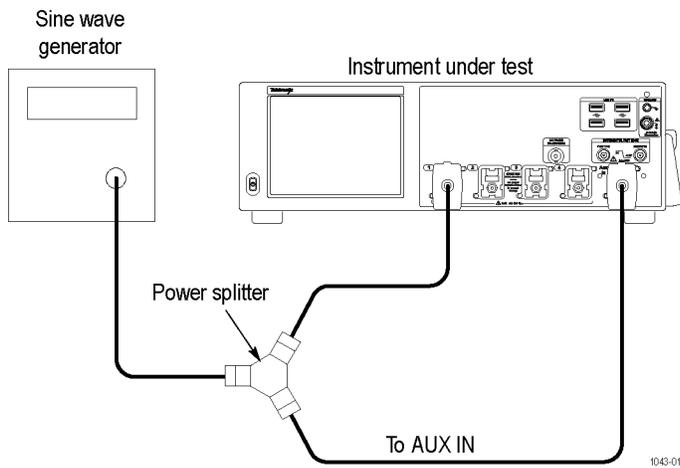
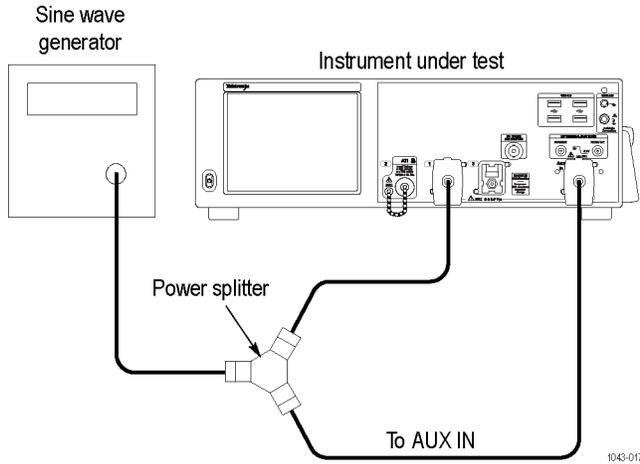


Figure 30: Sensitivity, edge trigger, DC coupled test hookup

2. Confirm the trigger system is within sensitivity limits (50 MHz):

a. Display the test signal:

- Set the generator frequency to 50 MHz.
- From the button bar, select **Measure**.
- Select Setup **Ref Levs**; then click the **Min-Max** button.
- Click the **Setup** button and select the **Ampl** tab; then click the **Amplitude** button.
- Click the X (close) button.
- Select Trig > A Event (Main) Trigger Setup.
- Press **Set to 50%**.
- Set the generator amplitude on screen as follows:

Model	Divisions
DPO models	5 divisions

- Now fine adjust the generator output until the **Ch 1 Amplitude** readout indicates the amplitude is as follows (Readout may fluctuate):

Model	Amplitude
DPO models	500 mV

- Disconnect the 50  $\Omega$  precision coaxial cable at **Ch 1** and reconnect it to **Ch 1** through a 10X attenuator.
- b. Check the A trigger system for stable triggering at limits:
- Read the following definition: A stable trigger is one that is consistent; that is, one that results in a uniform, regular display triggered on the selected slope (positive or negative). This display should *not* have its trigger point switching between opposite slopes, nor should it roll across the screen. At horizontal scale settings of 2 ms/division and faster, if using the optional front panel, **Trig'd** will remain constantly lighted. It will flash for slower settings.
  - Select the positive trigger slope.
  - Adjust the Trigger **Level** so that there is a stable trigger. CHECK that the trigger is stable for the test waveform on the positive slope.
  - Select the negative trigger slope. Adjust the Trigger **Level** so that there is a stable trigger.
  - CHECK that the trigger is stable for the test waveform on the negative slope.
  - Enter pass or fail in the test record.
  - Leave the trigger system triggered on the positive slope of the waveform before continuing to the next step.

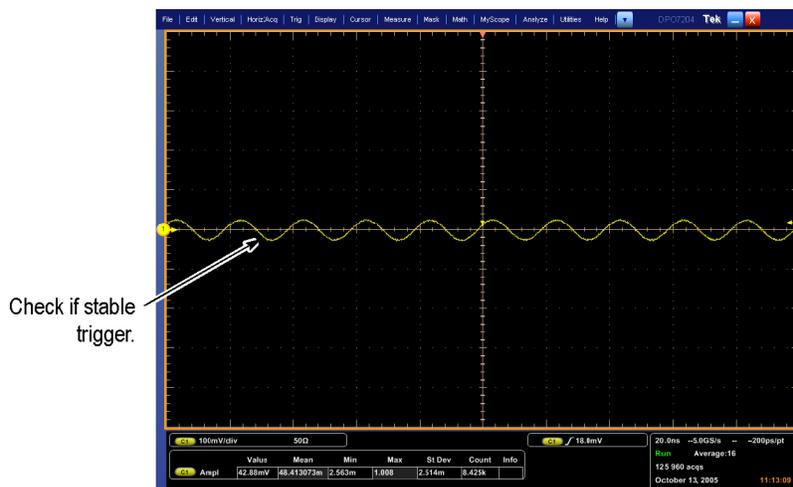


Figure 31: Measurement of trigger sensitivity - 50 MHz results shown

- c. Check B trigger system for stable triggering at limits: Do the following subparts in the order listed.
- From the button bar select **Trig**, select the **A Event** tab, and set the **Source** to Line.
  - Select the **A->B Seq** tab, and click the A then B **Trig After Time** button.
  - Select the **B Event** tab, and click the **Set To 50%** button.
  - CHECK that a stable trigger is obtained for the test waveform for both the positive and negative slopes of the waveform. (See [Figure 31](#) on page 169.)
  - Enter pass or fail in the test record.
  - Leave the Delayed trigger system triggered on the positive slope of the waveform before continuing to the next step. Also, return to the A trigger: select the **A->B Seq** tab and click the A->B Sequence **A Only** button. Then select the **A Event** tab.
  - Select the **A Event** tab, and set the **Source** to CH1.
  - Press the X (Close button).
3. Confirm the AUX Trigger input (at 50 MHz):

- a. *Display the test signal:*
  - Remove the 10X attenuator and reconnect the cable to **Ch 1**.
  - Set the signal amplitude as follows: **2.5 divisions**
  - Now fine adjust the generator output until the **Ch 1 Amplitude** readout indicates the amplitude is as follows (readout may fluctuate): **100 mV**
- b. *Check the AUX trigger source for stable triggering at limits:* Do the following in the order listed.
  - Use the definition for stable trigger from step [2.b](#) on page 169.
  - Set the Trigger **Source** to **Aux** (Ext).
  - Press **Push-Set 50%**.
  - CHECK that a stable trigger is obtained for the test waveform on both the positive and negative slopes. Set the Trigger **Slope** to the negative trigger slope. Adjust the Trigger **Level** to stabilize the trigger if required.
  - Enter pass or fail in the test record.
  - Leave the trigger system triggered on the positive slope of the waveform before proceeding to the next check.
  - Set the Trigger **Source** to **Ch 1**.

4. *Confirm that the A trigger system is within sensitivity limits (full bandwidth):*

- a. *Set the Horizontal Scale:* Set the Horizontal **Scale** to 200 ps.
- b. *Display the test signal:*

- Set the generator frequency to full bandwidth as follows:

Model	Generator frequency
DPO models	25 GHz

- Set the generator amplitude on screen as follows:

Model	Amplitude
DPO models	5 divisions

- Now fine adjust the generator output until the **Ch 1 Amplitude** readout indicates the amplitude is as follows (readout may fluctuate):

Model	Amplitude
DPO models	500 mV

- Check that a stable trigger is obtained.
- c. Repeat step [2](#) on page 168, substeps [2.b](#) on page 169 and [2.c](#) on page 169 for the full bandwidth selected.

**Table 16: Trigger settings**

Generator amplitude	Generator frequency		
	A trigger	B trigger	Horizontal scale
75 mV	5 GHz	5 GHz	200 ns
Table continued...			

Generator amplitude	Generator frequency		
	A trigger	B trigger	Horizontal scale
100 mV	10 GHz	10 GHz	200 ps
150 mV	15 GHz	15 GHz	200 ps
350 mV	20 GHz	20 GHz	100 ps
500 mV	25 GHz	25 GHz	100 ps

d. *Display the test signal:*

- Set the generator frequency to 10 MHz. Set the Horizontal SCALE as indicated in the table. (See [Table 16](#) on page 170.)
- Fine adjust the generator output until the **Ch 1 Amplitude** readout indicates the amplitude listed in the table for a frequency not yet checked. (See [Table 16](#) on page 170.)
- Set the generator frequency to the frequency in the table that corresponds to the amplitude just set. Set the Horizontal **SCALE** as indicated in the table. (See [Table 16](#) on page 170.)
- CHECK that a stable trigger is obtained.
- Read the following definition: A stable trigger is one where the **Trig'd** LED will remain constantly lighted.
- Select the positive trigger slope.
- Adjust the Trigger Level so that there is a stable trigger. CHECK that the trigger is stable.
- Select the negative trigger slope. Adjust the Trigger Level so that there is a stable trigger.
- CHECK that the trigger is stable.
- Enter pass or fail in the test record.
- Leave the trigger system triggered on the positive slope of the waveform before continuing to the next step.
- From the button bar select **Trig**, select the **A Event** tab, and set the **Source** to Line.
- From the button bar select **Trig**, select the **A->B Seq** tab, and click the A then B **Trig After Time** button.
- Select the **B Event** tab, and click the **Set To 50%** button.
- CHECK that a stable trigger is obtained for the test waveform for both the positive and negative slopes of the waveform. Adjust the Trigger Level to stabilize the A trigger. Click **Level** and use the keypad or the multipurpose knob/Fine button to stabilize the B trigger. Click one of the Slope buttons to switch between trigger slopes. (See [Figure 31](#) on page 169.)
- Enter pass or fail in the test record.
- Leave the B trigger system triggered on the positive slope of the waveform before continuing to the next step. Also, return to the A trigger: select the **A->B Seq** tab and click the A->B Sequence **A Only** button. Then select the **A Event** tab.
- From the button bar select **Trig**, select the **A Event** tab, and set the **Source** to CH1.
- Press the X (Close button).

e. Repeat step [4.d](#) on page 171 until each frequency in the table is checked. (See [Table 16](#) on page 170.)

f. *Display the test signal (Aux trigger at bandwidth):*

- Set the Horizontal Scale to 1 ns.
- Reconnect the cable to **Ch 1**.
- Set the generator frequency to full bandwidth as follows:

Model	Generator frequency
DPO models	11 GHz

- Set the generator amplitude on screen as follows:

Model	Amplitude
DPO models	8 divisions

- Now fine adjust the generator output until the **Ch 1 Amplitude** readout indicates the amplitude is as follows (readout may fluctuate):

Model	Amplitude
DPO models	800 mV

- g. Repeat step 3.b on page 170 only, for the full bandwidth selected.



**Note:** You just checked the trigger sensitivity. If desired, you may repeat steps 1 on page 167 through step 4.e on page 171 for the other channels (Ch 2 [TekConnect only], Ch 3, and Ch 4).

5. *Disconnect the hookup:* Disconnect the equipment from Aux In and the channel last tested.

## Output signal checks

The procedure that follows checks those characteristics of the output signals that are listed as checked under *Warranted Characteristics in Specifications*.

### Check fast edge output

Equipment required	Prerequisites
One precision 50 $\Omega$ coaxial cable (Item 19 on page 50)	(See <i>Prerequisites</i> on page 47.) Also, the instrument must have passed <i>Check Timebase and Delay Time Accuracy and Reference</i> . (See <i>Check timebase and delay time accuracy and reference</i> on page 156.)
One SMA termination, (Item 4 on page 48)	
One DC calibration generator (Item 7 on page 48)	
One adapter (Item 18 on page 50)	
Two precision 50 $\Omega$ coaxial cable (Item 5 on page 48)	
One BNC T connector (Item 25 on page 50)	
One adapter (Item 16 on page 49)	

1. *Install the test hookup and preset the instrument controls:*
  - a. *Hook up test-signal:* Refer to the following figure. Terminate the unused Fast Edge signal.

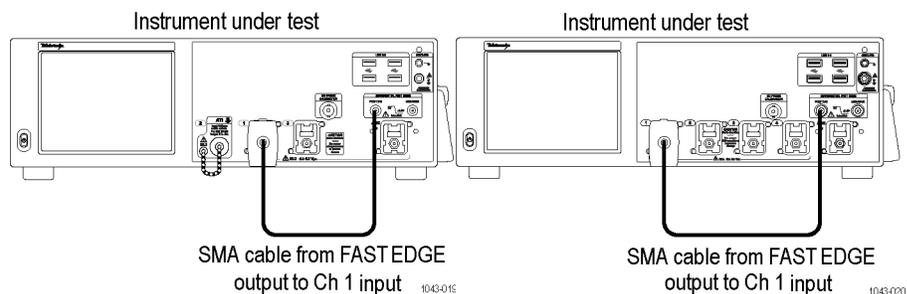


Figure 32: Fast edge output initial test hookup

b. Initialize the instrument: Pull down the **File** menu, select Recall Default Setup.

c. Modify the initialized front-panel control settings:

- Set the **Vertical Scale** to 120 mV/div.
- Set the Horizontal **Scale** to 200  $\mu$ s.
- Select the Trig > A Event (Main) Trigger Setup menu. Press **Set** to 50%.
- Center the display on screen.
- From the button bar, select **Horiz/Acq** and select the **Acquisition** tab.
- Click **Average** and set the number of averages to 128.

2. Confirm the fast edge signal:

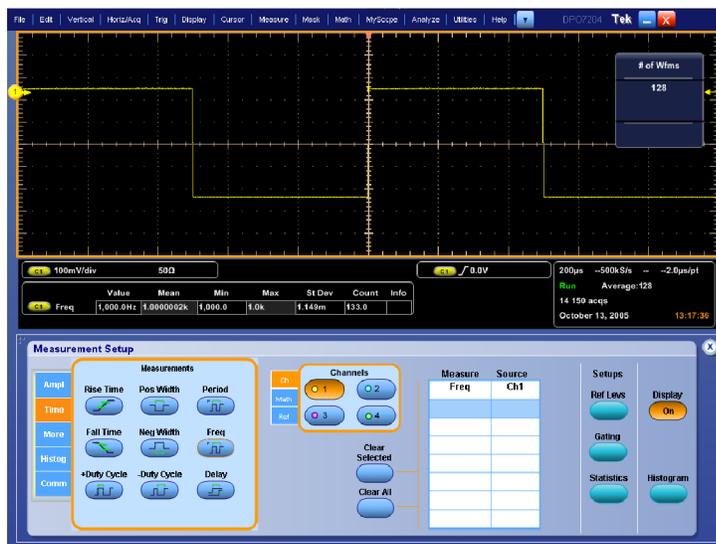


Figure 33: Measurement of fast edge frequency

a. Save the fast edge signal in reference memory:

- From the menu bar, select **File; Save As . . . , Waveform**, and then **Ref 1**.
- Click the **Save** button to save the Fast Edge signal in reference 1.
- Disconnect the signal from **Ch 1** and the Fast Edge connector.
- Select **File; Recall . . . , Waveform**, and then select the file name.
- Click the **Recall** button to recall the probe compensation signal to the display.

b. Hook up the DC standard source:

- Set the output of a DC calibration generator to off or 0 volts.
- Connect the output of a DC calibration generator to **Ch 1**. Refer to the following figure.

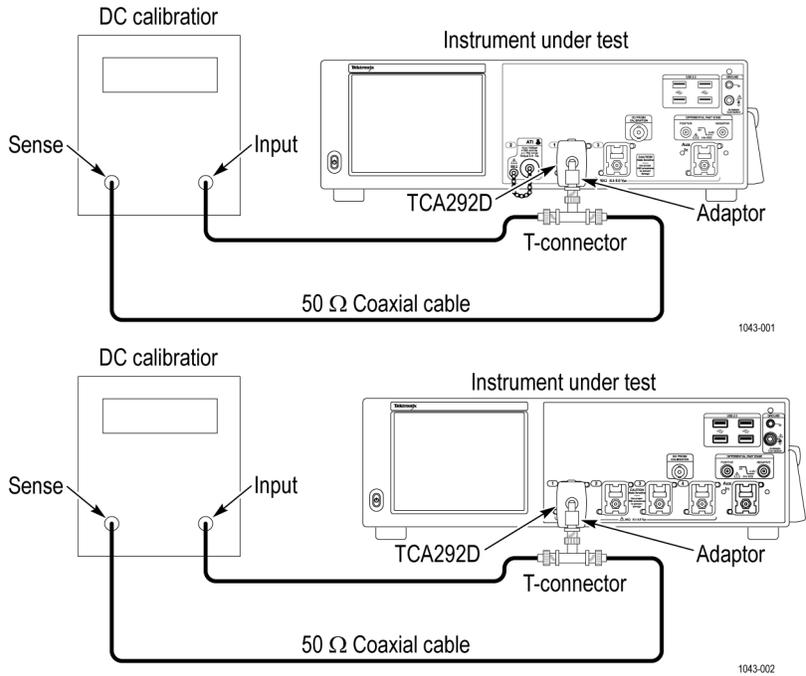


Figure 34: Fast edge output second test hookup

c. Measure amplitude of the fast edge signal:

- From the button bar, select **Horiz/Acq** and select the **Acquisition** tab.
- Click **Average** and set the number of averages to **16** using the keypad or the multipurpose knob.
- Adjust the output of the DC calibration generator until it precisely overlaps the top (upper) level of the stored fast edge signal.
- Record the setting of the DC generator.
- Adjust the output of the DC calibration generator until it precisely overlaps the base (lower) level of the stored fast edge signal.
- Record the setting of the DC generator.

d. Press the **X** (close) button to remove the menus from the display. (See Figure 35 on page 174.)



Figure 35: Measurement of fast edge amplitude

e. Check against limits:

- Subtract the value just obtained (base level) from that obtained previously (top level).

- CHECK that the difference obtained is within limits as follows:

Model	Limits
DPO models	450 mV to 650 mV

- Enter voltage difference on test record.

3. *Disconnect the hookup:* Disconnect the calibrator from the **Ch 1** input.

4. *Check the negative output.* Repeat steps 1 on page 172 through 3 on page 175 using the Differential Fast Edge **NEGATIVE** output.

## Sine wave generator leveling procedure

Some procedures in this manual require a sine wave generator to produce the necessary test signals. If you do not have a leveled sine wave generator, use one of the following methods to level the output amplitude of your sine wave generator.

### Note:



Method 1 is not recommended for ATI channel bandwidth measurement due to high measurement uncertainty, unless the measurements are corrected using complex S-parameter values for the power splitter, power sensor, and instrument under test. In Method 2 cable loss provides isolation that reduces impedance mismatch errors at ATI bandwidth frequencies. However Method 2 requires that the generator and cable have adequate amplitude stability with time and with cable movement.

## Method 1

Equipment required	Prerequisites
Sine wave generator (Item 9 on page 49)	(See <a href="#">Prerequisites</a> on page 47.)
Meter, power and sensor (Item 10 on page 49)	
Power splitter (Item 11 on page 49)	
50 $\Omega$ precision cable 2.92 mm male-to-female (Item 12 on page 49)	
One K male-to-male adapter (Item 13 on page 49)	

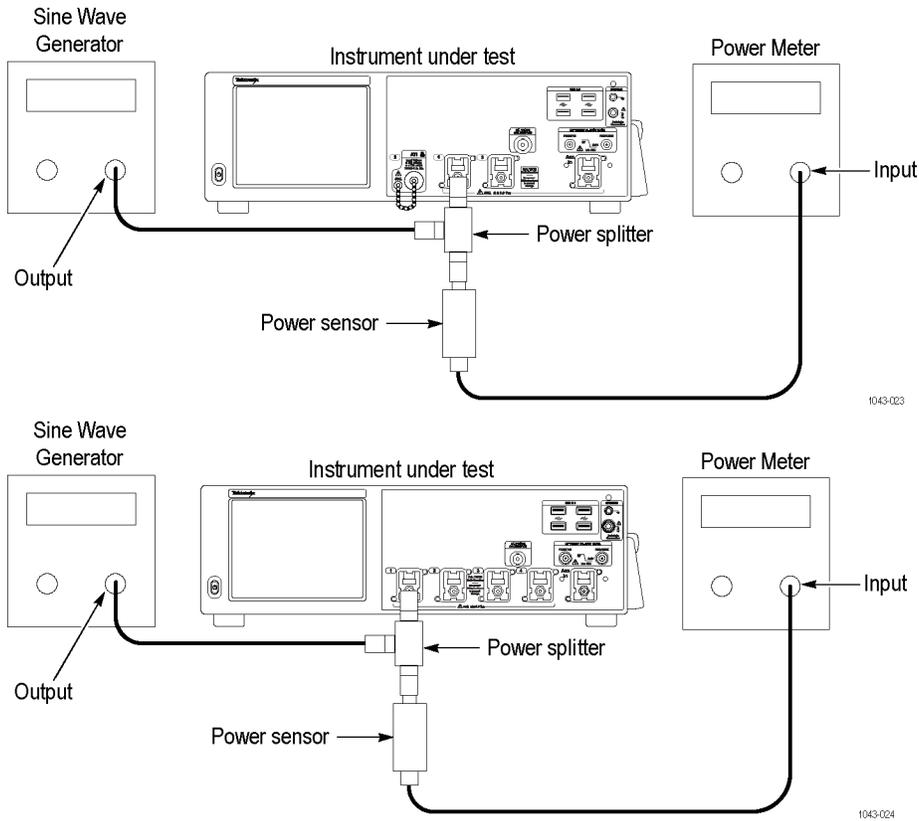



Figure 36: Sine wave generator leveling equipment setup

1. **Install the test hookup:** Connect the equipment as shown in the above figure.
2. **Set the Generator:**
  - Set the sine wave generator to a reference frequency of 10 MHz.
  - Adjust the sine wave generator amplitude to the required number of divisions as measured by the instrument.
3. **Record the reference level:** Note the reading on the level meter.
4. **Set the generator to the new frequency and reference level:**
  - Change the sine wave generator to the desired new frequency.
  - Input the correction factor and/or the new frequency into the level meter.
  - Adjust the sine wave generator amplitude until the level meter again reads the value noted in step 3 on page 176. The signal amplitude is now correctly set for the new frequency.

## Method 2

Equipment required	Prerequisites
Sine wave generator (Item 9 on page 49)	(See <a href="#">Prerequisites</a> on page 47.)
Level meter and power sensor (Item 10 on page 49)	
Two male N to female BNC adapters (Item 14 on page 49)	
Two precision coaxial cables (Item 5 on page 48)	
One or two SMA male-to-female BNC adapters (Item 18 on page 50)	

1. *Install the test hookup:* Connect the equipment as shown in the figure below (start with the sine wave generator connected to the instrument). (See [Figure 37](#) on page 177.)
2. *Set the Generator:*
  - Set the sine wave generator to a reference frequency of 10 MHz.
  - Adjust the sine wave generator amplitude to the required number of divisions as measured by the instrument.

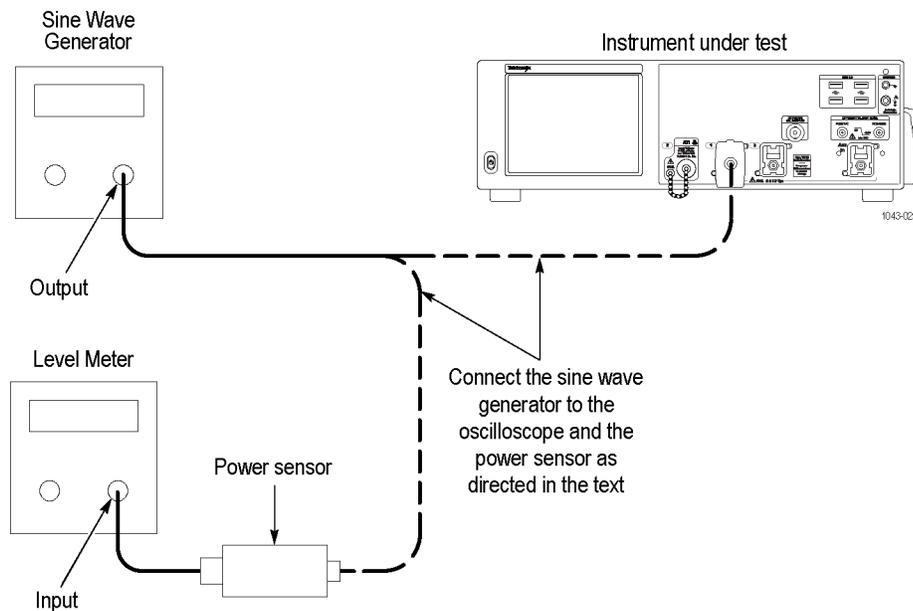

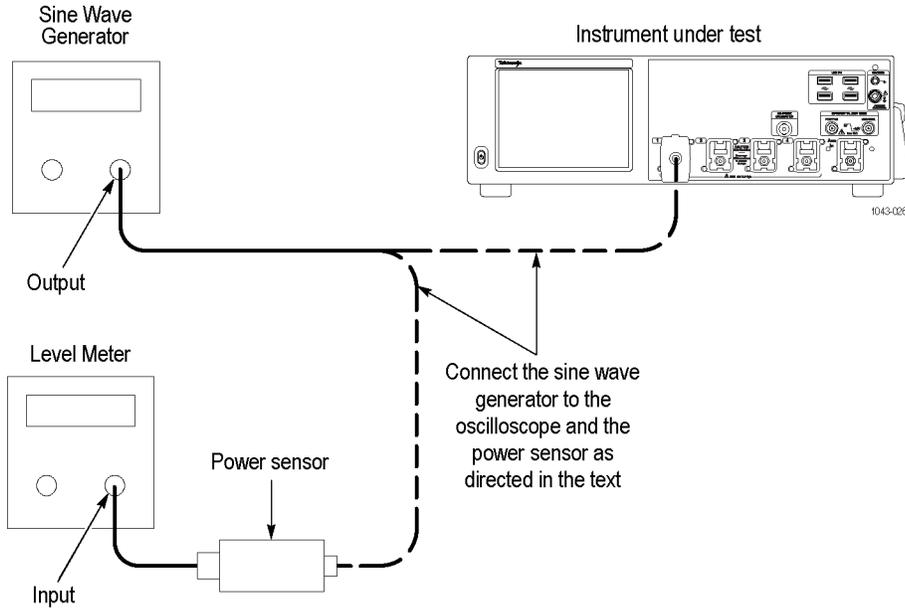


Figure 37: Equipment setup for maximum amplitude

**3. Record the reference level:**

- Disconnect the sine wave generator from the instrument.
- Connect the sine wave generator to the power sensor.
- Note the level meter reading.

**4. Set the generator to the new frequency and reference level:**

- Change the sine wave generator to the desired new frequency.
- Input the correction factor and/or the new frequency into the level meter.
- Adjust the sine wave generator amplitude until the level meter again reads the value noted in step 3 on page 178. The signal amplitude is now correctly set for the new frequency.
- Disconnect the sine wave generator from the power sensor.
- Connect the sine wave generator to the instrument.

# Index

## C

- Check input resistance [154](#)
- Check input resistance  $\geq 4$  GHz models [155](#)
- Conventions
  - performance verification [40](#)

## E

- Equipment List
  - for performance verification [48](#)

## F

- Functional tests [42](#)

## P

- Performance Verification
  - brief procedures [41](#)
  - equipment required [48](#)
  - functional tests [41, 42](#)
  - general instructions [40](#)
  - partial vs. complete [40](#)
  - prerequisites [47](#)
  - purpose and extent of [40](#)
  - self tests [41](#)
  - signal acquisition system [105](#)
  - sine wave generator leveling [175](#)
  - test record [51](#)
  - time base system [156](#)
  - trigger system [164](#)
  - warranted characteristics [47](#)

## S

- Sine wave generator leveling [175](#)
- Specifications
  - data storage [37](#)
  - input and output ports [34](#)
  - mechanical [37](#)
  - power source [37](#)
  - serial triggers [34](#)
  - trigger system [27](#)

## W

- Warranted characteristics [47](#)