



**TekExpress® Ethernet Electrical Testing Application
Printable Application Help**





**TekExpress® Ethernet Electrical Testing Application
Printable Application Help**

Copyright © Tektronix. All rights reserved. Licensed software products are owned by Tektronix or its subsidiaries or suppliers, and are protected by national copyright laws and international treaty provisions. Tektronix products are covered by U.S. and foreign patents, issued and pending. Information in this publication supersedes that in all previously published material. Specifications and price change privileges reserved.

TEKTRONIX and TEK are registered trademarks of Tektronix, Inc.

Contacting Tektronix

Tektronix, Inc.
14150 SW Karl Braun Drive
P.O. Box 500
Beaverton, OR 97077
USA

For product information, sales, service, and technical support:

- In North America, call 1-800-833-9200.
- Worldwide, visit www.tek.com to find contacts in your area.

Table of Contents

Welcome	v
---------------	---

Getting help and support

Conventions	1
Related documentation	2
Technical support	2

Getting started

Minimum system requirements	5
Instruments and accessories required	6
Installing the software	7
Application directories	7
File name extensions	8
View software version	9

Operating basics

Launch the application	11
Application panels overview	12
Global application controls	14
Application controls	14
Options menu overview	16
TekExpress instrument control settings	17
View connected instruments	17
Configure email settings	19
Setup panel	20
Setup panel overview	20
Set DUT parameters	22
Select tests	23
Set acquisition tab parameters	24
Set configuration tab parameters	25
Set preferences tab parameters	48
Status panel	49
Status panel overview	49
Results panel	50
Results panel overview	50

View test-related files	51
Plots panel	52
Plots panel overview	52
Reports panel	54
Reports panel overview	54
Select report options	55
View a report	57
Report contents	57

Running tests

1000BASE-T connection diagram	59
100BASE-T connection diagram	75
10BASE-T connection diagram	78
Prerequisite	82
Compensate the signal path	82
Running tests	83
View test results	83

Saving and recalling test setup

Test setup files overview	85
Save a test setup	85
Open (load) a saved test setup	86
Create a test setup from default settings	86
Create a test setup using an existing one	86

SCPI Commands

About SCPI command	87
Socket configuration for SCPI commands	87
TEKEXP:*IDN?	95
TEKEXP:*OPC?	95
TEKEXP:ACQUIRE_MODE	96
TEKEXP:ACQUIRE_MODE?	96
TEKEXP:EXPORT	97
TEKEXP:INFO?	97
TEKEXP:INSTRUMENT	98
TEKEXP:INSTRUMENT?	98
TEKEXP:LASTERROR?	99
TEKEXP:LIST?	99

TEKEXP:MODE	100
TEKEXP:MODE?	100
TEKEXP:POPOP	101
TEKEXP:POPOP?	101
TEKEXP:REPORT	102
TEKEXP:REPORT?	102
TEKEXP:RESULT?	103
TEKEXP:SELECT	104
TEKEXP:SELECT?	104
TEKEXP:SETUP	105
TEKEXP:STATE	105
TEKEXP:STATE?	106
TEKEXP:VALUE	106
TEKEXP:VALUE?	107
Command parameters	108
Examples	119

References

1000BASE-T	121
1000BASE-T template	121
1000BASE-T peak voltage	122
1000BASE-T droop	122
1000BASE-T jitter (with TX_TCLK)	123
1000BASE-T jitter (without TX_TCLK)	124
1000BASE-T distortion	125
1000BASE-T return loss	126
1000BASE-T CM voltage	126
100BASE-T	126
100BASE-T template	126
100BASE-T differential output voltage	127
100BASE-T signal amplitude symmetry	127
100BASE-T rise and fall time	127
100BASE-T waveform overshoot	128
100BASE-T Jitter	128
100BASE-T return loss	128
100BASE-T duty cycle distortion	129
10BASE-T	129
10BASE-T MAU Ext	129
10BASE-T MAU Int	129

Table of Contents

10BASE-T TP_IDL	130
10BASE-T link pulse	130
10BASE-T differential voltage	130
10BASE-T harmonic	130
10BASE-T return loss	131
10BASE-T jitter	131
10BASE-T CM Voltage	131

Welcome

Welcome to the TekExpress® Ethernet Electrical Testing software application. The application provides more visibility into your Ethernet designs with 1000BASE-T/100BASE-TX/10BASE-T PHY measurements as outlined in IEEE 802.3 Section 40, ANSI X3.263, and IEEE 802.3 Section 14 specific measurements for different Ethernet standards to the already existing rich tool set of generic jitter, timing, and signal quality measurements in Tektronix Oscilloscope.

Key features:

- Solution offers most comprehensive Ethernet PHY test coverage supporting multiple speeds.
- Highly optimized, intuitive user interface flow that sets up the test configuration for easy ethernet electrical validation.
- Compliance and margin testing for accurate analysis and improved interoperability.
- Time-domain and frequency-domain measurements made with single analysis instrument.
- Jitter and timing measurements with and without filters.
- Amplitude and droop testing for transmitter performance.
- User-defined mode enables flexible parameter control for characterization and margin analysis. Detailed test reports with margin and statistical information and analysis.
- Ability to modify limits of test parameters in TekExpress for debug and characterization.
- Ability to easily configure multiple test runs.
- Ability to preview test mode waveform prior to running the tests.
- Additional Peak Distortion Vs Phase Offset and Error Values Vs Symbol Number plots for 1000BASE-T distortion test.
- Plot panel is available to view the plot for Return Loss measurement.

Getting help and support

Conventions

Help uses the following conventions:

- The term "Application" and "Software" refers to the TekExpress Ethernet Electrical Testing Application.
- The term "DUT" is an abbreviation for Device Under Test.
- The term "select" is a generic term that applies to the different methods of choosing a screen item (button, control, list item): using a mouse or using the touch screen.

Icon	Meaning
	This icon identifies important information.
	This icon identifies conditions or practices that could result in loss of data.
	This icon identifies additional information that will help you use the application more efficiently.

Related documentation

The following documentation is available as part of the TekExpress® Ethernet Electrical Testing Application.

Table 1: Product Information

Item	Purpose	Location
Help	Application operation and User Interface help	
PDF of help	Printable version of the compiled help	 <p>PDF file that ships with TekExpress Ethernet solution (TekExpress-Ethernet-Solution-Software-Printable-Help-EN-US.pdf). You can download the PDF version of the manual from the Tektronix website. Part number: 077-1504-02 www.tek.com</p>

Technical support

Tektronix values your feedback on our products. To help us serve you better, please send us your suggestions, ideas, or comments on your application or oscilloscope. Contact Tektronix through mail, telephone, or the Web site, www.tek.com

When you contact Tektronix Technical Support, please include the following information (be as specific as possible):

General Information

- All instrument model numbers
- Hardware options, if any
- Probes used
- Your name, company, mailing address, phone number, and FAX number
- Please indicate if you would like to be contacted by Tektronix about your suggestion or comments.

Application Specific Information

- Software version number
- Description of the problem such that technical support can duplicate the problem
- If possible, save the setup files for all the instruments used and the application.
- If possible, save the TekExpress setup files, log.xml, *.TekX (session files and folders), and status messages text file.
- If possible, save the waveform on which you are performing the measurement as a .wfm file.

Getting started

Minimum system requirements

The following table shows the minimum system requirements to install and run the TekExpress Ethernet solution.

Table 2: System requirements

Component	Description
Oscilloscope	MSO/DPO5000, DPO7000C and MSO/DPO70000C/DX/SX
Firmware	<ul style="list-style-type: none">■ Firmware Version: 10.10.1 or above for Windows 10■ Firmware 10.8.3 only for Windows 7
Software	<ul style="list-style-type: none">■ IronPython 2.7.3 installed■ PyVisa 1.0.0.25 installed■ Microsoft .NET 4.0 Framework■ Microsoft Internet Explorer 7.0 SP1 or greater, or other Web browser for viewing reports■ Adobe Reader software 7.0 or greater for viewing portable document format (PDF) files

Instruments and accessories required

The following table lists the instruments and accessories required for this application.

Table 3: Instruments and accessories required for Ethernet application

Instrument/Accessory	Model number	Quantity
Oscilloscope	MSO/DPO5000, DPO7000C and MSO/DPO70000C/DX/SX	One
Arbitrary Function Generator	AFG3000 AFG31102 AFG31152 AFG31252	One
Arbitrary Waveform Generator	<ul style="list-style-type: none"> ■ AWG520x ■ AWG5000 Series ■ AWG7000 Series 	One
Fixtures	TF-GBE-BTP 1000/100/10BASE-T Basic Test Package (consists of test fixture PCB set and RJ45 interconnect cable).	One
	TF-GBE-JTC 103 meter 1000BASE-T jitter test channel cable	One
	TF-GBE-SIC (Short 4-inch (0, 1-meter) RJ45 interconnect cable)	One
Differential Probes	<ul style="list-style-type: none"> ■ TDP1500 ■ P6247 ■ P6248 ■ TDP3500 	Two


NOTE.

- *TF-GBE-ATP fixture set contains TF-GBE-BTP and TF-GBE-JTC fixtures.*
 - *TF-GBE-BTP fixture set contains TF-GBE-SIC.*
 - *TF-GBE-BTP is required for Jitter-Slave test only.*
 - *TPA-BNC adapter is required for P6247 and P6248 differential probes.*
 - *For 1000BASE-T Slave jitter testing an additional differential probe is required.*
-

Installing the software

Complete the following steps to download and install the latest Ethernet application. See [Minimum system requirements](#) for compatibility.

1. Go to www.tek.com.
2. Click **Downloads**. In the Downloads menu, select DOWNLOAD TYPE as Software and enter *Ethernet* in the MODEL OR KEYWORD field and click **SEARCH**.

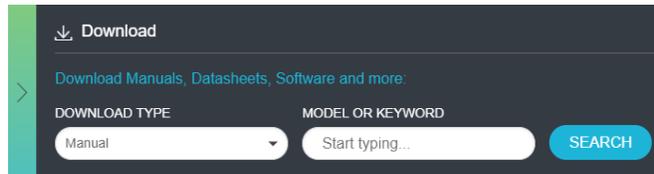


3. Select the latest version of software and follow the instructions to download. Copy the executable file to the oscilloscope.
4. Double-click the executable and follow the on-screen instructions. The software is installed at *C:\Program Files\Tektronix\TekExpress\TekExpress Ethernet*.
5. Select **Applications > TekExpress Ethernet** from the TekScope menu to [Launch the application](#).

Application directories

TekExpress Ethernet application

The TekExpress Ethernet application files are installed at the following location:
C:\Program Files\Tektronix\TekExpress\TekExpress Ethernet

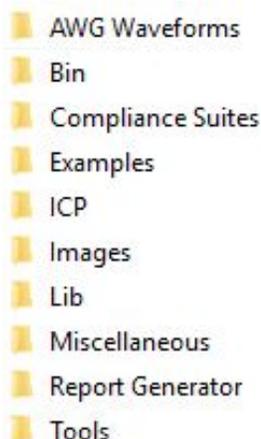

The following table lists the application directory names and their purpose:

Table 4: Application directories and usage

Directory names	Usage
AWG Waveforms	Contains waveform files
Bin	Contains TekExpress Ethernet application libraries
Compliance Suites	Contains compliance-specific files
Examples	Contains examples for SCPI commands
ICP	Contains instrument and TekExpress Ethernet application-specific interface libraries
Images	Contains images of the TekExpress Ethernet application
Lib	Contains utility files specific to the TekExpress Ethernet application
Miscellaneous	Contains log files
Report Generator	Contains style sheets for report generation
Tools	Contains instrument and TekExpress Ethernet application-specific files

See also [View test-related files](#)
[File name extensions](#)

File name extensions

The TekExpress Ethernet application uses the following file name extensions:

File name extension	Description
.TekX	Application session files (the extensions may not be displayed)
.py	Python sequence files
.xml	Test-specific configuration information (encrypted) files Application log files
.csv	Test result reports Plot data
.mht	Test result reports (default) Test reports can also be saved in HTML format
.pdf	Test result reports Application help documents
.xslt	Style sheet used to generate reports

See also [View test-related files](#)
[Application directories](#)

View software version

Use the following instructions to view version information for the application and for the application modules such as the Programmatic Interface and the Programmatic Interface Client.

To view version information for Ethernet, click  button in the TekExpress application and select **About TekExpress**.




NOTE. This example shows a typical Version Details dialog box, and may not reflect the actual values as shown when you open this item in the application.

Operating basics

Launch the application

To launch the TekExpress Ethernet solution, select **Applications > TekExpress Ethernet** from the TekScope menu.

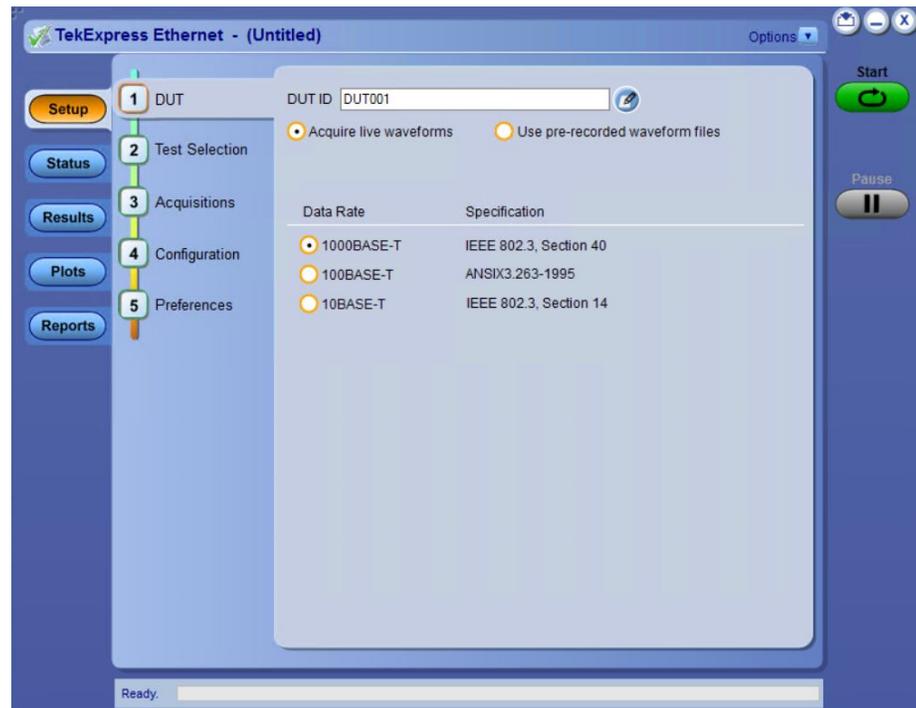

When you launch the application for the first time, the file C:\Users\

If the application is behind the oscilloscope application, click **Applications > TekExpress Ethernet** to bring it to the front. To keep the Ethernet application window on top, select **Keep On Top** from the Ethernet *Options menu*.

NOTE. After installing the application, wait until the instruments gets discovered in the TEKVISA before launching the application.

See also [Application controls](#)
[Application panel overview](#)

Application panels overview

TekExpress Ethernet solution uses panels to group Configuration, Results, and Reports settings. Click any button to open the associated panel. A panel may have one or more tabs that list the selections available in that panel. Controls in a tab can change depending on settings made in the same tab or another tab.

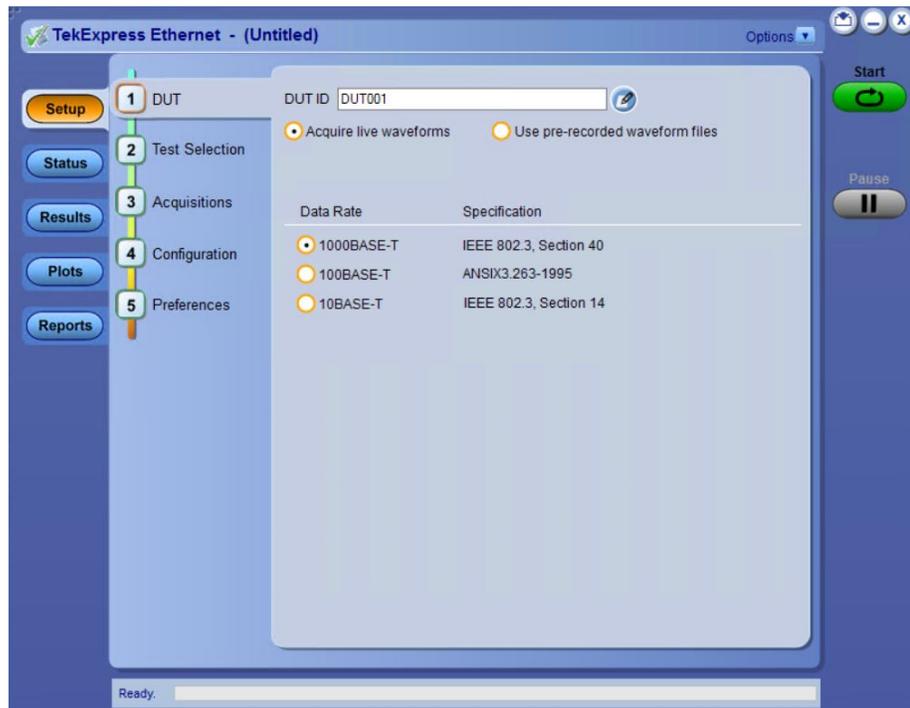


Table 5: Application panels overview

Panel Name	Purpose
Setup panel	<p>The Setup panel shows the test setup controls. Click the Setup button to open this panel.</p> <p>Use this panel to:</p> <ul style="list-style-type: none"> ■ Set DUT tab parameters ■ Select tests ■ Set acquisition tab parameters ■ Set configuration tab parameters ■ Set preferences tab parameters
Status panel	View the progress and analysis status of the selected tests, and view test logs.
Results panel	View the summary of test results and select result viewing preferences.
Plots panel	View the plot for Return Loss measurement. Plot is displayed as a two dimensional plot for additional measurement analysis.
Reports panel	Browse for reports, save reports as specific file types, specify report naming conventions, select report content to include (summary information, detailed information, user comments, setup configuration, application configuration), and select report viewing options.


See also [Application controls](#)

Global application controls

Application controls This section describes the application controls.


Table 6: Application controls description

Item	Description
<p><i>Options menu</i></p> 	<p>To select global application controls.</p>
<p>Test Panel buttons</p> 	<p>Controls that open tabs for configuring test settings and options.</p>
<p>Start / Stop button</p> 	<p>Use the Start button to start the test run of the measurements in the selected order. If prior acquired measurements are not cleared, then new measurements are added to the existing set. The button toggles to the Stop mode while tests are running. Use the Stop button to abort the test.</p>
<p>Pause / Continue button</p> 	<p>Use the Pause button to pause the acquisition. When a test is paused, this button toggles to Continue.</p>

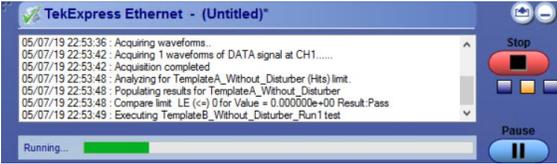Item	Description
<p>Clear button</p> 	<p>Use the Clear button to clear all existing measurement results. Adding or deleting a measurement, or changing a configuration parameter of an existing measurement, also clears measurements. This is to prevent the accumulation of measurement statistics or sets of statistics that are not coherent. This button is available only on Results panel.</p>
<p>Application window move icon</p> 	<p>Place the cursor over the three-dot pattern in the upper left corner of the application window. When the cursor changes to a hand, drag the window to the desired location.</p>
<p>Minimize icon</p> 	<p>Click to minimize the application.</p>
<p>Close icon</p> 	<p>Click to close the application.</p>
<p>Mini view / Normal view</p>  	<p>Toggles the application between mini view and normal view. Mini view displays the run messages with the time stamp, progress bar, Start / Stop button, and Pause / Continue button. The application moves to mini view when you click the Start button.</p> 

See also. [Application panel overview](#)

Options menu overview To access Options menu, click  in the upper-right corner of the application.

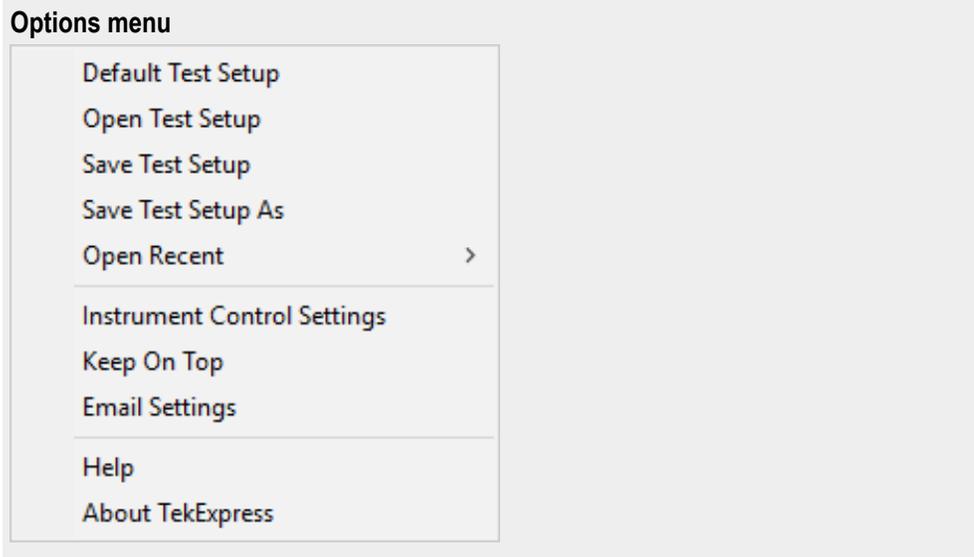


Menu	Function
Default Test Setup	Opens an untitled test setup with defaults selected. Acquire Live Waveforms. Data rate: 1000BASE-T.
Open Test Setup	Opens a saved test setup.
Save Test Setup	Saves the current test setup.
Save Test Setup As	Saves the current test setup with a different file name or file type.
Open Recent	Displays the recently opened test setups to open.
Instrument Control Settings	Detects, lists, and refreshes the connected instruments found on specified connections (LAN, GPIB, USB, and so on).
Keep On Top	Keeps the TekExpress Ethernet application on top of all applications.
Email Settings	Use to configure email options for test run and result notification.
Help	Displays the TekExpress Ethernet help.
About TekExpress	<ul style="list-style-type: none"> ■ Displays application details such as software name, version number, and copyright. ■ Provides a link to the end-user license agreement. ■ Provides a link to the Tektronix Web site.

See also. [Application controls](#)

TekExpress instrument control settings

Use TekExpress Instrument Control Settings dialog box to search the instruments (resources) connected to the application. You can use the Search Criteria to search the connected instruments depending on the connection type. The details of the connected instrument is displayed in the Retrieved Instruments window.

You can access this dialog box from the **Options** menu.

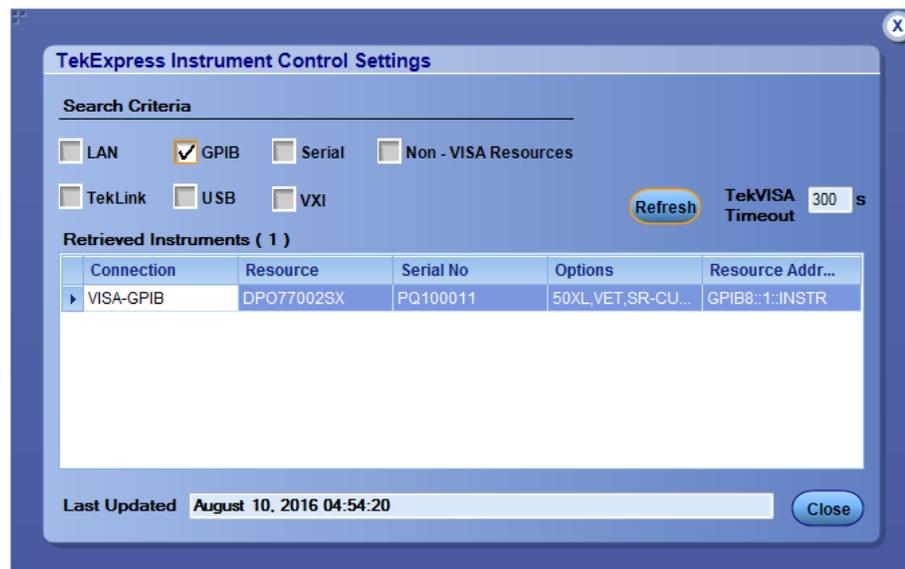

The connected instruments displayed here can be selected for use under Global Settings in the test configuration section.

NOTE. Select GPIB (Default) when using TekExpress Ethernet application.

See also. [Options menu overview](#)

View connected instruments

Use TekExpress Instrument Control Settings dialog box to search the instruments (resources) connected to the application. The application uses TekVISA to discover the connected instruments.


NOTE. The instruments required for the test setup must be connected and it must be recognized by the application before running the test.

To refresh the list of connected instruments:


1. From the Options menu, select **Instrument Control Settings**.
2. In the **Search Criteria** section of the Instrument Control Settings dialog box, select the connection types of the instruments to search.

Instrument search is based on the VISA layer, but different connections determine the resource type, such as LAN, GPIB, and USB. For example, if you choose LAN, the search will include all the instruments supported by TekExpress that are communicating over the LAN.

3. Click **Refresh**. TekExpress searches for connected instruments.

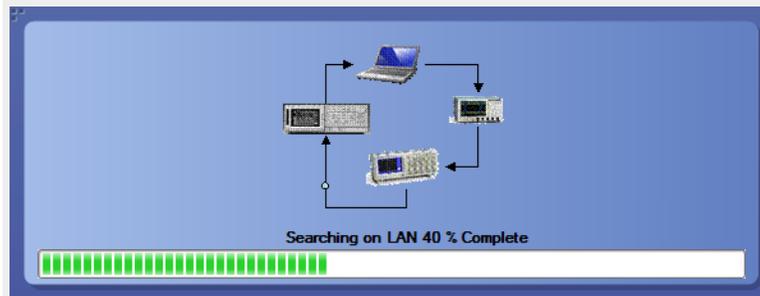

4. After searching, the dialog box lists the instrument-related details based on the search criteria. For example, For the Search Criteria as LAN and GPIB, the application displays all LAN and GPIB instruments connected to the application.

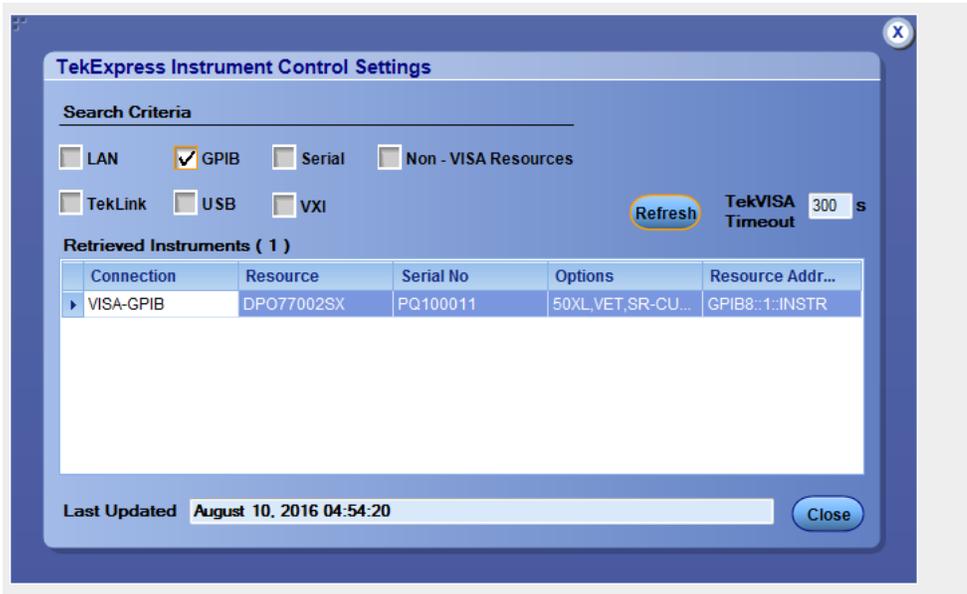

The details of the instruments are displayed in the Retrieved Instruments table. The time and date of instrument refresh is displayed in the Last Updated field.

See also. [1000BASE-T connection setup](#)

[100BASE-T connection setup](#)

[10BASE-T connection setup](#)

Configure email settings

Use the Email Settings utility to get notified by email when a measurement completes, or produces any error condition. Follow the steps to configure email settings:

1. Select **Options > Email Settings** to open the *Email Settings* dialog box.
2. (Required) For Recipient email Address(es), enter one or more recipient email addresses. To include multiple addresses, separate the addresses with commas.
3. (Required) For Sender's Address, enter the email address used by the instrument. This address consists of the instrument name, followed by an underscore, followed by the instrument serial number, then the @ symbol, and the email server ID. For example: user@yourcompany.com.
4. (Required) In the Server Configuration section, type the SMTP Server address of the Mail server configured at the client location, and the SMTP Port number, in the corresponding fields.

If this server requires password authentication, enter a valid login name, password, and host name in the corresponding fields.

NOTE. *If any of the above required fields are left blank, the settings will not be saved and email notifications will not be sent.*

5. In the Email Attachments section, select from the following options:
 - **Reports:** Select to receive the test report with the notification email.
 - **Status Log:** Select to receive the test status log with the notification email. If you select this option, then also select whether you want to receive the full log or just the last 20 lines.
6. In the Email Configuration section:
 - Enter a maximum file size for the email message. Messages with attachments larger than this limit will not be sent. The default is 5 MB.
 - Enter the number in the Number of Attempts to Send field, to limit the number of attempts that the system makes to send a notification. The default is 1. You can also specify a timeout period.
7. Select the **Email Test Results When complete or on error** check box. Use this check box to quickly enable or disable email notifications.
8. To test your email settings, click **Test Email**.
9. To apply your settings, click **Apply**.
10. Click **Close** when finished.

Email Settings

Email Settings

Recipient e-mail Address(es)
Note: Separate Email addresses with a comma

Sender's Address

Email Attachments

Reports

Status Log Last 20 Lines Full Log

Server Configuration

SMTP Server SMTP Port

Login

Password

Host Name

Email Configuration

Max Email Size (MB) Number of Attempts to Send


Timeout (Sec)

Email Test Results When complete or on error

Setup panel


Setup panel overview

The Setup panel contains sequentially ordered tabs that help you guide through the test setup and execution process.

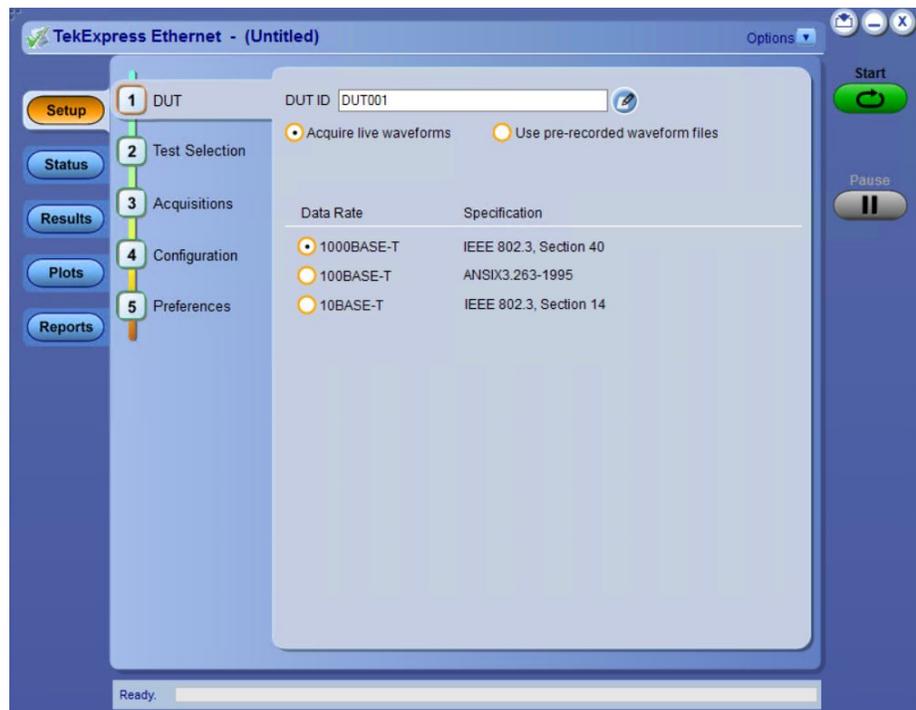

Set DUT parameters

Use the DUT tab to select parameters for the device under test. These settings are global and apply to all tests of current session. The DUT settings also affect the list of available tests in the Test Selection tab.

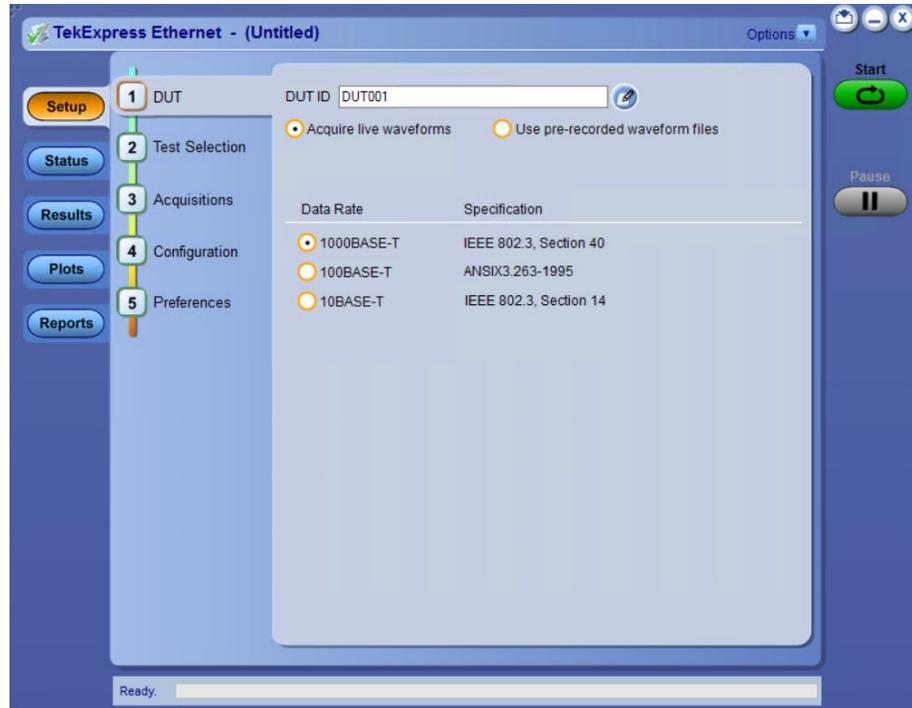

Click **Setup > DUT** to access the DUT parameters:

Table 7: DUT tab settings

Setting	Description
DUT ID	Adds an optional text label for the DUT to reports. The default value is DUT001. The maximum number of characters is 32. You cannot use the following characters in an ID name: (,....., \,/:? "<> *)
 Comments icon (to the right of the DUT ID field)	Opens Comments dialog box to enter text to add to the report. Maximum size is 256 characters. To enable or disable comments appearing on the test report, see Select report options .
Acquire live waveforms	Perform analysis on live waveforms.
Use pre-recorded waveform files	Perform analysis on pre-recorded waveforms.
Data Rate	
1000BASE-T	IEEE 802.3, Section 40
100BASE-T	ANSIX 3.263-1995
10BASE-T	IEEE 802.3, Section 14

See also. [Select tests](#)

Select tests Use the Test Selection tab to select the tests. The test measurements available depends on the standard selected in the DUT tab.

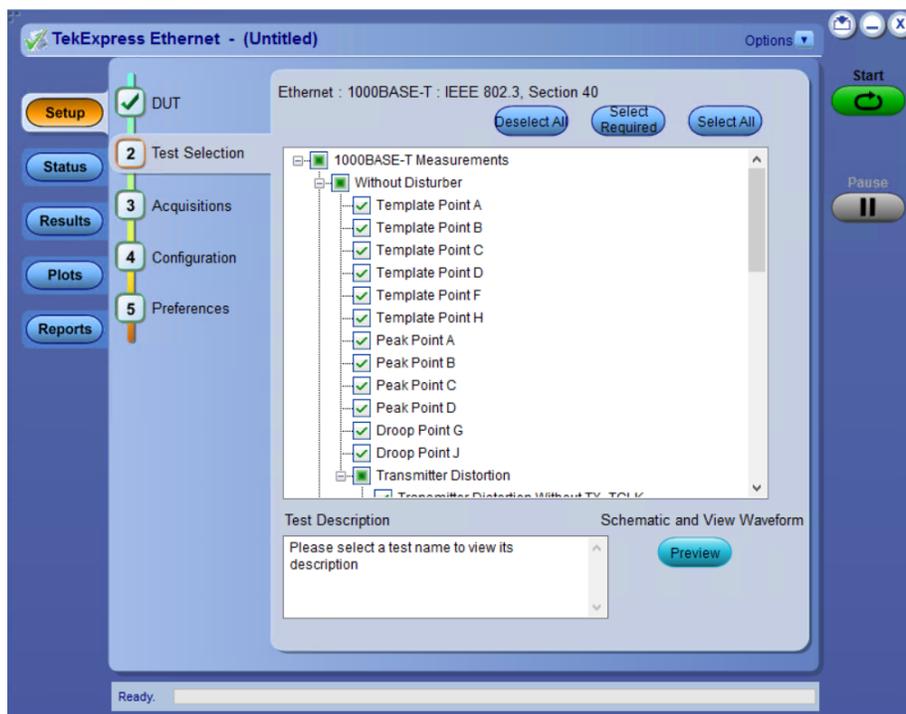


Figure 1: TekExpress Ethernet measurements


Table 8: Test Selection tab settings

Setting	Description
Deselect All	Click to clear all tests.
Select Required	Click to select all the tests required for compliance.
Select All	Click to select all tests. All tests are selected by default.
Tests	Click on a test to select or unselect. Highlight a test to show details in the Test Description pane.
Test Description	Shows brief description of the highlighted test in the Test field.
Preview	Click to preview the schematic and the expected waveform example for the selected test.

See also. [Set acquisition tab parameters](#)

Set acquisition tab parameters

Use Acquisitions tab to view the test acquisition parameters. The contents displayed on this tab depends on the DUT type and the tests selected.

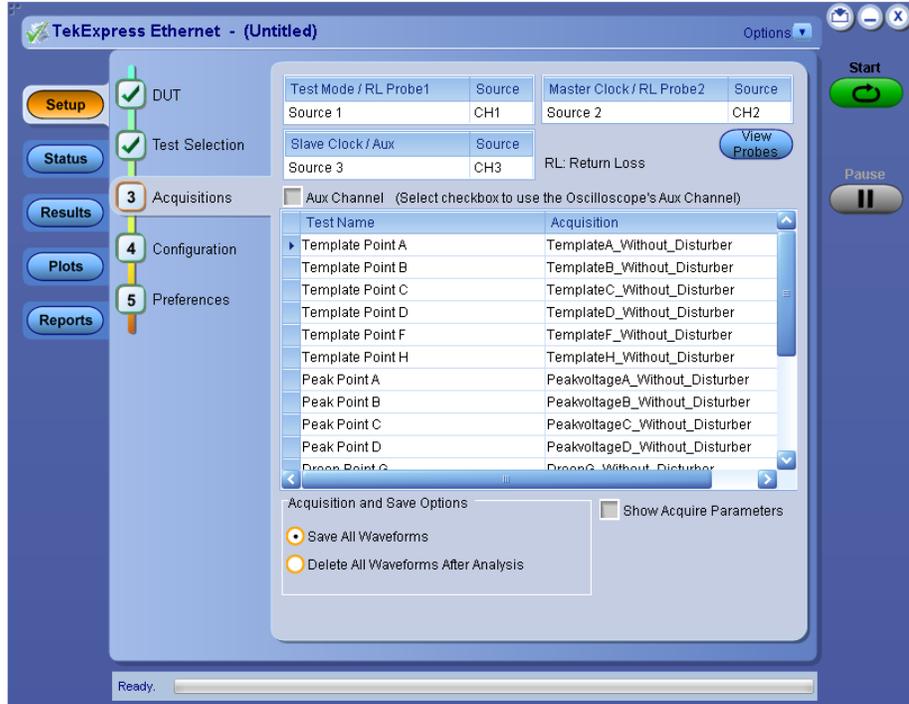

NOTE. TekExpress Ethernet application acquires all waveforms needed by each test group before performing analysis.

Table 9: Acquisitions tab settings

Setting	Description
View Probes	Click to view the detected probe configuration. Use the View Probes dialog box to enable or disable probe signal source access in the application.
Source	Select the signal source for Data, Master Clock and/or Slave Clock for the measurement. Ensure that no two sources have the same channel selected. Same set of channels can be used for Return Loss with a Data as positive input and Master Clock as negative input and Slave Clock for sync input.
Aux	Select to use oscilloscope's Aux channel.
Acquisition and Save Options	<ul style="list-style-type: none"> ■ Save All Waveforms ■ Delete All Waveforms After Analysis
Show Acquire Parameters	Select to view the acquisition parameters.

TekExpress Ethernet saves all acquisition waveforms to files by default. Waveforms are saved in a unique folder for each session (a session is started when you click the Start button). The folder path is X:\Ethernet\Untitled Session \<dutid>\<date>_<time>. Images created for each analysis, CSV files with result values, reports, and other information specific to that particular execution are also saved in this folder.

Saving a session moves the session file contents from the Untitled Session folder to the specified folder name, and changes the session name to the specified name.

Set configuration tab parameters

Use Configuration tab to view and configure the Global Settings and the measurement configurations. The Global Settings and the measurements with configurations available in this tab depends on the Standards selected in the DUT tab.

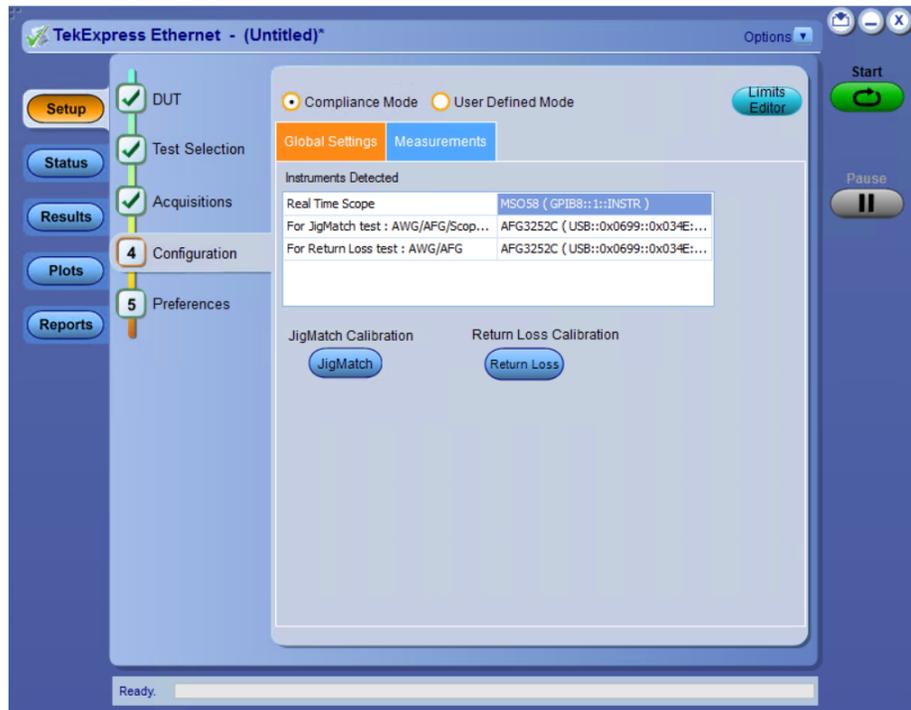


Figure 2: Configuration tab: Global Settings

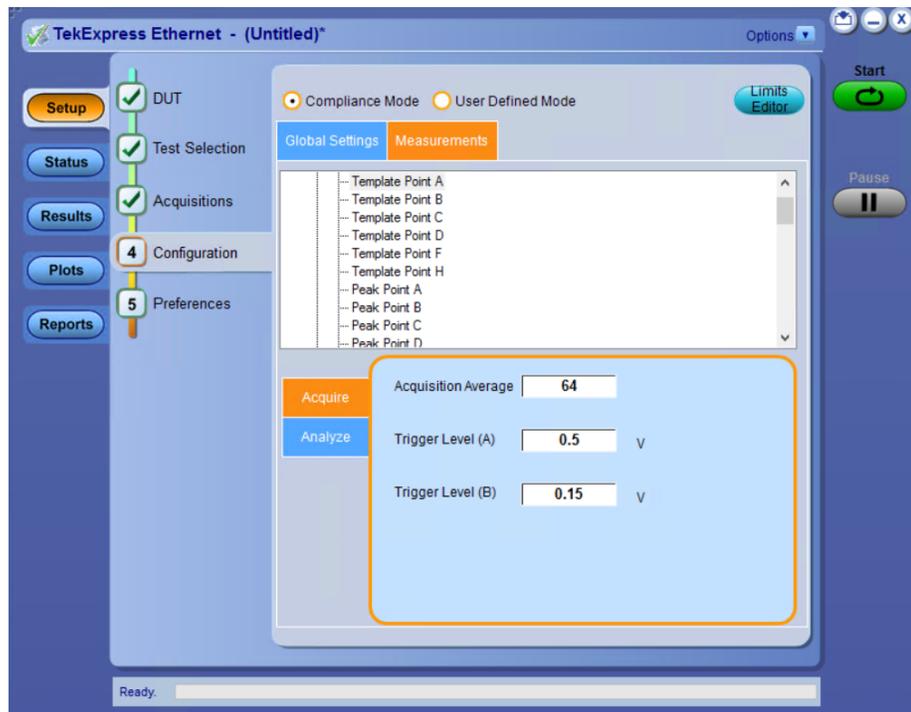


Figure 3: Configuration tab: Measurements Settings

Table 10: Configuration tab settings

Setting	Description
Compliance Mode	Select to run test(s) in compliance mode. By default Compliance Mode is selected.
User Defined Mode	Select to run test(s) in user defined mode.
Global Settings	
Instruments Detected	Displays the instruments connected to this application. Click on the instrument name to open a list of available (detected) instruments. Select Options > Instrument Control Settings and click Refresh to update the instrument list. <i>NOTE. Verify that the GPIB search criteria (default setting) in the Instrument Control Settings is selected when using TekExpress Ethernet application.</i>
JigMatch Calibration	Measures the Amplitude and the Frequency of the disturbing signals. The default values can be set. The application measures and displays the values in the Measured Value fields. You can validate the disturbing signal by comparing the Measured Value with the Expected Value.
Return Loss Calibration	Displays the schematics for Return Loss Calibration. The Transmitter and Receiver Return Loss calibration for OPEN, SHORT, and LOAD terminations can be performed.

Table 11: Measurements configuration for Analyze 1000BASE-T

Measurements	Configuration		Value
Template Point A Template Point B Template Point C Template Point D Template Point F Template Point H Template Point A (D) Template Point B (D) Template Point C (D) Template Point D (D) Template Point F (D) Template Point H (D) Peak Point A Peak Point B Peak Point C Peak Point D Peak Point A (D) Peak Point B (D) Peak Point C (D) Peak Point D (D)	Analyze	External Filter	Include or Exclude
Transmitter Distortion Without TX_TCLK Transmitter Distortion With TX_TCLK Transmitter Distortion Without TX_TCLK (D) Transmitter Distortion With TX_TCLK (D)	Analyze	LP Filter Hi Resolution	Include or Exclude 16 to 64
Master Filtered Without TX_TCLK Master UnFiltered Without TX_TCLK		Clock Edge	RISE, FALL

Measurements	Configuration		Value
Slave Filtered Without TX_TCLK Slave UnFiltered Without TX_TCLK Master Filtered With TX_TCLK Master UnFiltered With TX_TCLK Slave Filtered With TX_TCLK Slave UnFiltered With TX_TCLK		Hysteresis	0% - 10 %
Transmitter Return Loss	Analyze	Smoothing Averages	1 to 10
		Loads (Ohm)	<ul style="list-style-type: none"> ■ 85, 100, 115 ■ 100
CM Voltage		Filter Type	<ul style="list-style-type: none"> ■ None ■ 1 MHZ(High Pass) ■ 100 MHz(Low Pass) ■ (1-100) MHz(Baseband)

Table 12: Measurements configuration for Analyze 100BASE-T

Measurements	Configuration		Value
AOI Template	Analyze	Polarity	<ul style="list-style-type: none"> ■ Both ■ Pos ■ Neg
		Fail Threshold	1 to 5000
Fall Time (Pos) Fall Time (Neg) Rise Time (Pos) Rise Time (Neg) RF Symmetry (Pos) RF Symmetry (Neg) Overshoot (Pos) Overshoot (Neg) Differential Output Voltage (Pos) Differential Output Voltage (Neg) Amplitude Symmetry	Analyze		
Jitter		Measurement Type	<ul style="list-style-type: none"> ■ Tie ■ Histogram
Duty Cycle Distortion			
Receiver Return Loss Transmitter Return Loss		Smoothing Averages Loads(Ohm)	1 to 10 <ul style="list-style-type: none"> ■ 85, 100, 115 ■ 100

Table 13: Measurements configuration for Analyze 10BASE-T

Measurements	Configuration		Value
Link Pulse Load With TPM	Analyze	Mark Selection Fail Threshold	Head, Tail, Both 1
Link Pulse Load Without TPM			
Link Pulse Timing With TPM	Analyze		
Link Pulse Timing Without TPM			
Differential Voltage	Analyze	Peak	<ul style="list-style-type: none"> ■ Min ■ Min Max
TP_IDL Load Without TPM TP_IDL Load With TPM			
		Mark Selection Fail Threshold	Head, Tail, Both 1
Jitter Normal with TPM	Analyze	MAU Type	<ul style="list-style-type: none"> ■ Internal ■ External
Jitter Normal without TPM			
Jitter 8.0 with TPM			
Jitter 8.0 without TPM			
Jitter 8.5 with TPM			
Jitter 8.5 without TPM			
MAU Internal		Fail Threshold	1
MAU External			
MAU Internal (Inverted)			
MAU External (Inverted)			
Transmitter Return Loss Receiver Return Loss	Smoothing Averages	1 to 10	
	Loads (Ohm)	<ul style="list-style-type: none"> ■ 85, 100, 115 ■ 100 	
CM Voltage	Filter Type	<ul style="list-style-type: none"> ■ None ■ 1 MHz (High Pass) ■ 100 MHz (Low Pass) ■ 1-100 MHz (Band pass) 	

Table 14: Measurements configuration for Acquire 1000BASE-T

Measurements	Configuration		Value
Template Point A	Acquire	AcquisitionAverage	16 to 256
Template Point B		TriggerLevel (A)	-5 V to 5 V
Template Point C			
Template Point D			
Template Point F			
Template Point H			
Template Point A (D)			
Template Point B (D)			
Template Point C (D)			

Measurements	Configuration	Value
Template Point D (D) Template Point F (D) Template Point H (D)		TriggerLevel (B) -5 V to 5 V
Transmitter Distortion Without TX_TCLK Transmitter Distortion With TX_TCLK Transmitter Distortion Without TX_TCLK (D) Transmitter Distortion With TX_TCLK (D) Peak Point A Peak Point B Peak Point C Peak Point D Droop Point G Droop Point J Peak Point A (D) Peak Point B (D) Peak Point C (D) Peak Point D (D) Droop Point G (D) Droop Point J (D)	Acquire	Acquisition Average 16 to 256
Master Filtered Without TX_TCLK Master UnFiltered Without TX_TCLK Slave Filtered Without TX_TCLK Slave UnFiltered Without TX_TCLK Master Filtered With TX_TCLK Master UnFiltered With TX_TCLK Slave Filtered With TX_TCLK Slave UnFiltered With TX_TCLK		Measurement Duration 1 ms, 10 ms, 100 ms, 1000 ms
		Number Of Clock Edges 100000, 1000000, 10000000
Transmitter Return Loss		Acquisition Average 100 to 10000
CM Voltage		

Table 15: Measurements configuration for Acquire 100BASE-T

Measurements	Configuration	Value
AOI Template	Acquire	Number of samples 5000 to 2147400000
Fall Time (Pos) Fall Time (Neg) Rise Time (Pos) Rise Time (Neg) RF Symmetry (Pos) RF Symmetry (Neg) Overshoot (Pos) Overshoot (Neg) Differential Output Voltage (Pos) Differential Output Voltage (Neg) Amplitude Symmetry		Acquisition Type Sample, Average
		Number of Waveforms 2 to 10000
Jitter		

Measurements	Configuration	Value
Duty Cycle Distortion		Acquisition Type
Receiver Return Loss Transmitter Return Loss		Acquisition Average
		Sample, Average 100 to 10000

Table 16: Measurements configuration for Acquire for 10BASE-T

Measurement	Configuration		Value
Link Pulse Timing Without TPM Link Pulse Timing With TPM Link Pulse Load Without TPM Link Pulse Load With TPM	Acquire	Number of Acquisitions	2 to 10000
		Number of Waveforms	1 to 10000
Differential Voltage		Acquisition Average	2 to 1000
		Acquisition Delay	1 to 10000 (Micro-seconds)
		Acquisition Type	<ul style="list-style-type: none"> ■ Sample ■ Average
TP_IDL Load With TPM TP_IDL Load Without TPM	Acquire	Number of Acquisitions	2 to 10000
		Number of Waveforms	1 to 10000
Jitter Normal with TPM Jitter Normal without TPM Jitter 8.0 with TPM Jitter 8.0 without TPM Jitter 8.5 with TPM Jitter 8.5 without TPM	Acquire	Number of Acquisitions	2 to 10000
			1000 to 10000
MAU Internal MAU External MAU Internal (Inverted) MAU External (Inverted)			
Harmonic	Acquire	Acquisition Delay	1 to 10000 (Micro-seconds)
		Math Average	2 to 10000
Transmitter Return Loss Receiver Return Loss	Acquire	Acquisition Average	100 to 10000
CM Voltage			

Return Loss Calibration steps. You can configure a DUT (Device Under Test) by adjusting it to conform to a dependable measure before running the Return Loss measurement.

Complete OPEN, SHORT, and LOAD calibrations before running the Return Loss measurement.

To run the Return Loss calibration, follow the steps given below:

1. Use **TC1** in the test fixture.

Make the connections as shown in the following figure.

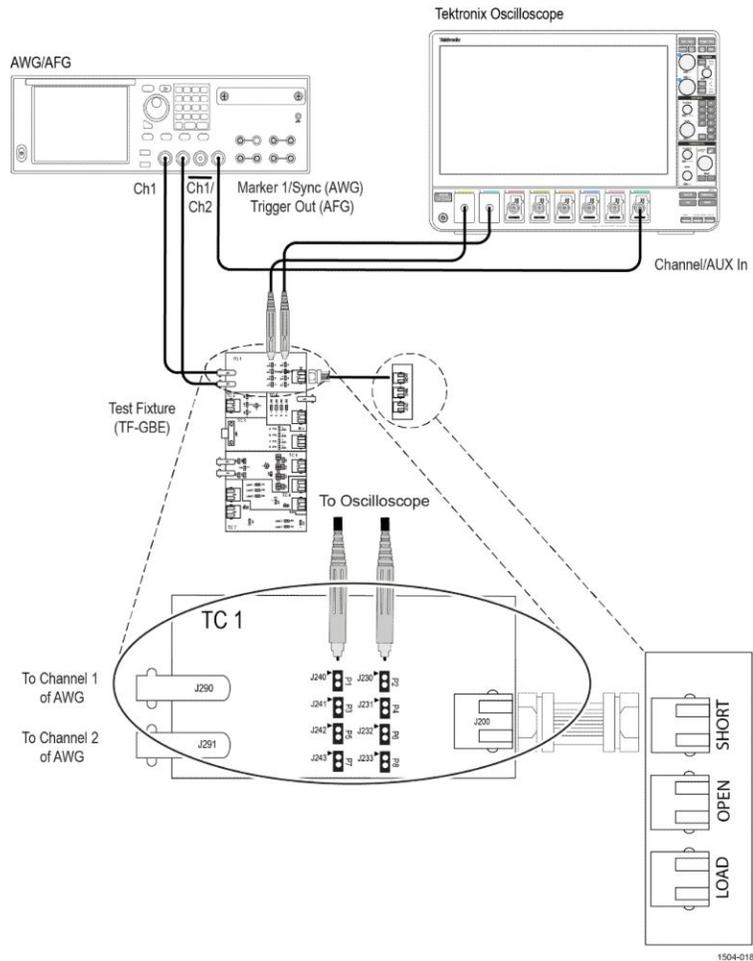


Figure 4: Connection diagram for SHORT Calibration

2. Connect a BNC Cable between channel 1 of AWG/channel 1 of AFG and J290.
3. Connect a BNC Cable between $\overline{\text{Ch1}}$ AWG/channel 2 of AFG and J291.

- Connect Differential Probes from configured channels of the oscilloscope to P1 and P2 for Transmitter Return Loss, P3 and P4 for Receiver Return Loss.

NOTE. Connect the termination *SHORT*, *LOAD*, and *OPEN* to J200 one by one, for calibration.

- In the TekExpress Ethernet application click the **DUT** panel and select the Suite of interest.
- Click the **Acquisitions** panel and select the channels for calibration.
- If Aux is selected as Source3 (Trigger Sync Input), select the checkbox.

NOTE. Aux channel is present only in 6 Series MSO oscilloscopes.

- In the **Options > Instrument Control** settings, refresh to view the connected AWG/AFG.
- In the **Configuration** Panel, select the Signal source model (*For Return Loss test: AWG/AFG*).
- Click **Return Loss**.

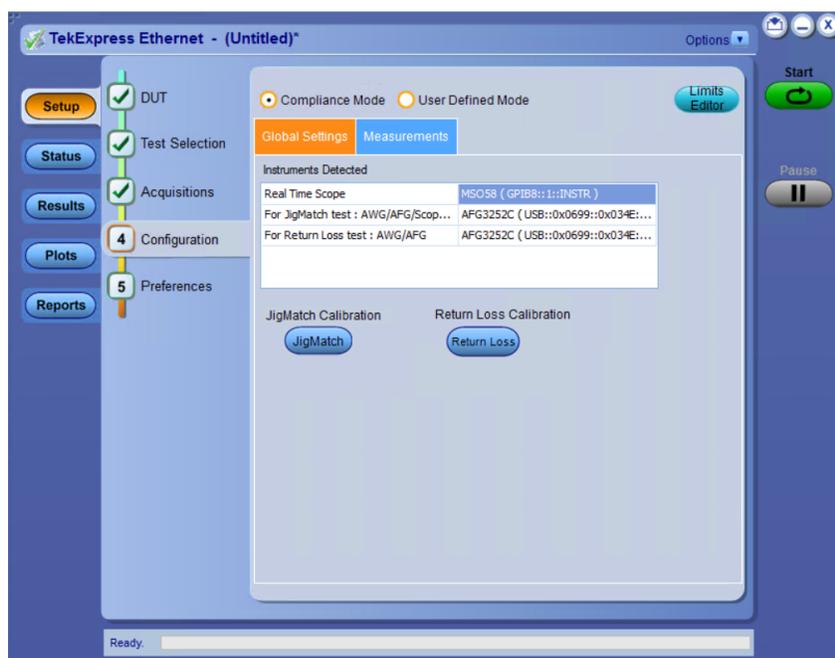


Figure 5: Configuration Panel to select Signal Source and to perform Return Loss Calibration

- In the **Calibration** dialog, select Tx for Transmission or Rx for Receiver Return Loss Calibration.

12. Perform SHORT, OPEN, and LOAD Calibration one by one with connection changes (detailed below) and click **Apply**. This completes the Return Loss Calibration.

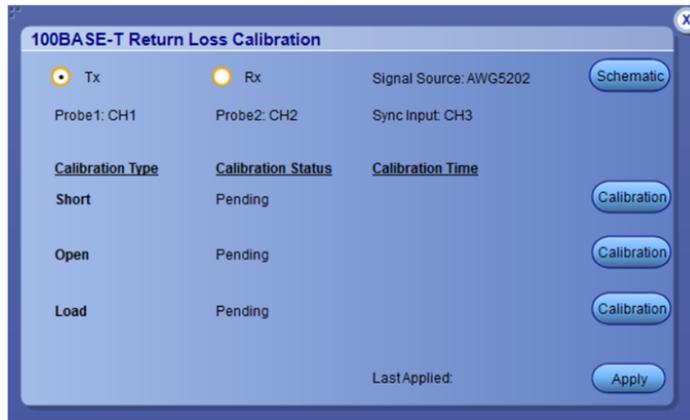


Figure 6: Calibration panel before performing calibration

The corresponding date and time for the latest successful Calibration and Apply are displayed.



Figure 7: Calibration panel after calibration is performed for OPEN, SHORT, and LOAD and then Apply

SHORT calibration:

Perform the above-mentioned steps with SHORT termination connected to J200 as shown below:

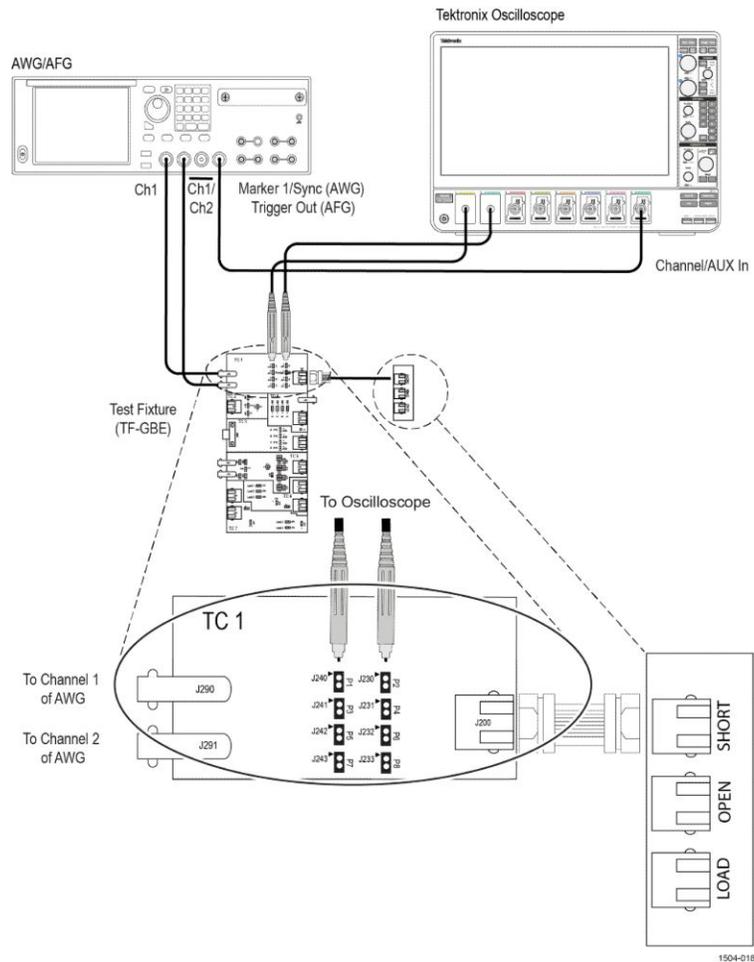


Figure 8: Connection diagram for SHORT Calibration

The following figure displays a typical waveform for Return Loss SHORT Calibration.

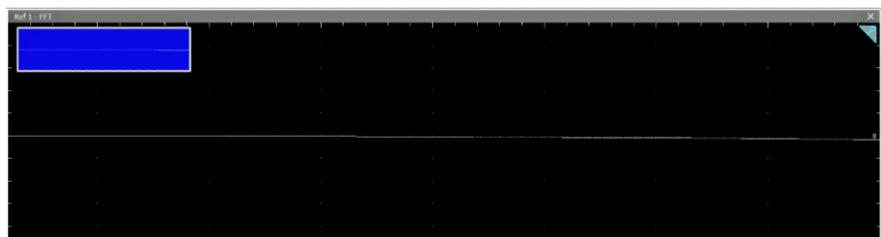


Figure 9: Calibration output for SHORT calibration

OPEN Calibration:

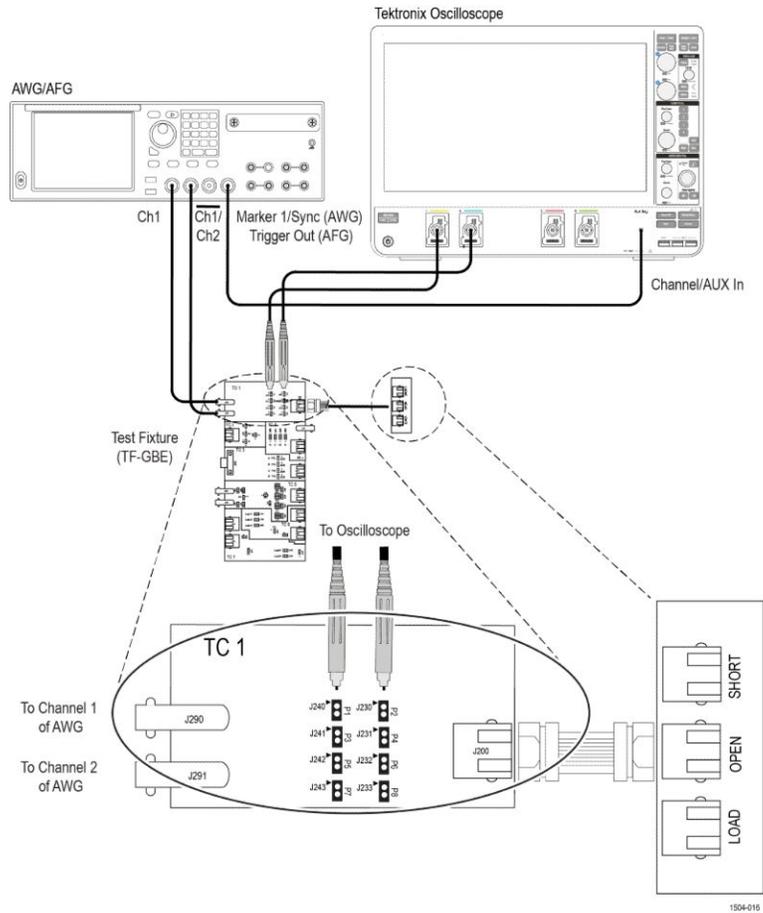


Figure 10: Connection diagram for OPEN Calibration

The following figure shows a typical waveform for Return Loss OPEN Calibration.

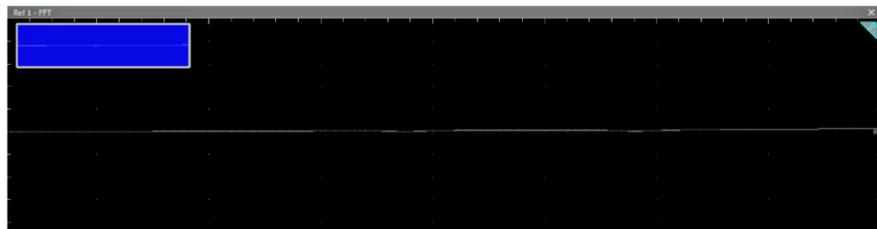


Figure 11: Calibration output for OPEN calibration

LOAD Calibration:

Perform the above mentioned steps with LOAD termination connected to J200 as shown below:

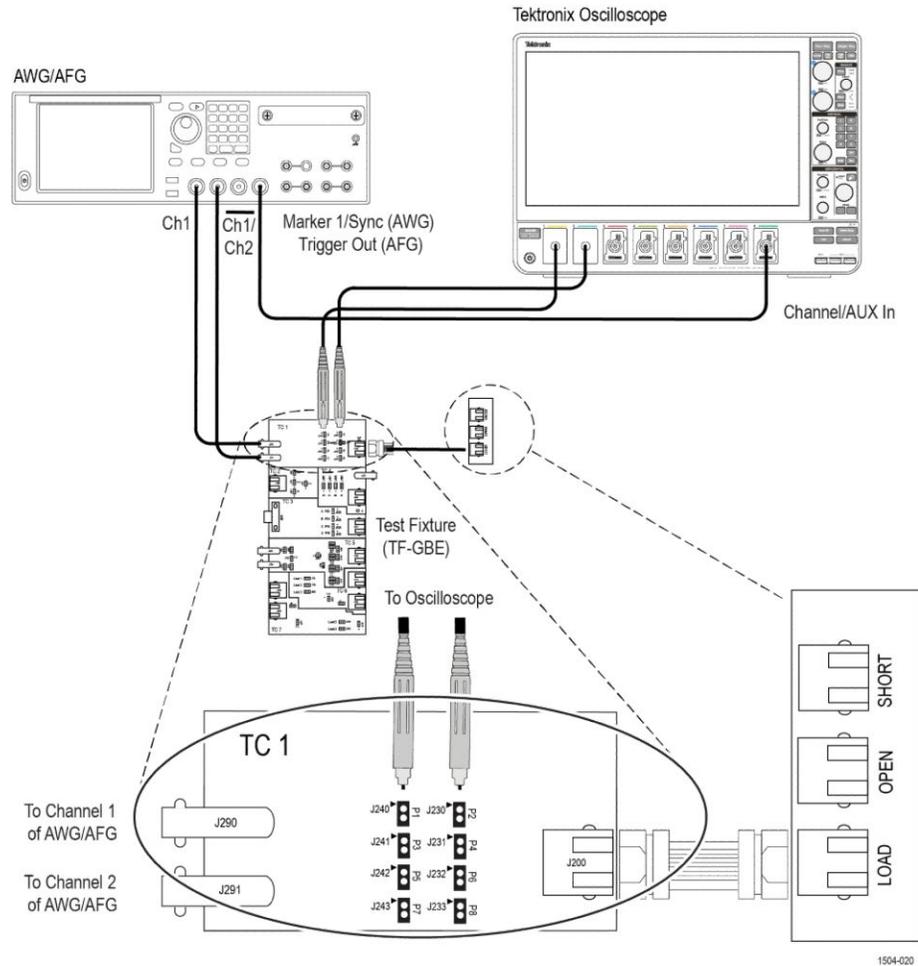


Figure 12: Calibration output for LOAD calibration

The following figure shows a typical waveform for Return Loss LOAD Calibration.

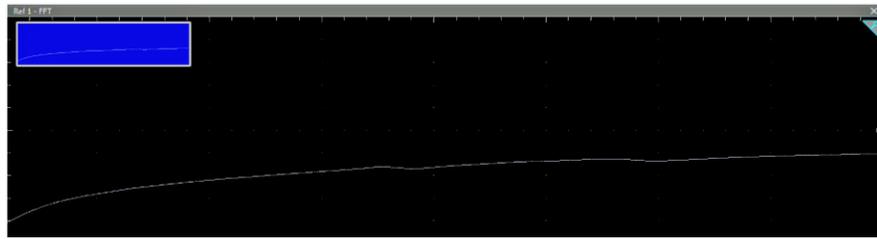


Figure 13: Calibration output for LOAD calibration

After OPEN, SHORT, and LOAD calibration, click **Apply** in Return Loss Calibration window which generates the Return Loss measurements pre-requisite data by using calibration values.

NOTE. Clicking *Apply* will not apply any setting on the oscilloscope nor does any acquisition.

NOTE. If you change any of the following configurations, calibration for Open, Short, and Load must be performed again before running the return loss measurement:

- Channels and Trigger Sync input
 - Signal Source selected
 - Return Loss type (Transmitter or Receiver)
-

Method to set up the Signal Source for *Do not use* configuration:

In Configuration Panel if the Signal source is selected as *For Return Loss test: AWG/AFG* is *Do not use*, then the waveform need to be manually loaded in the Signal Source before running the Calibration or Return Loss measurement.

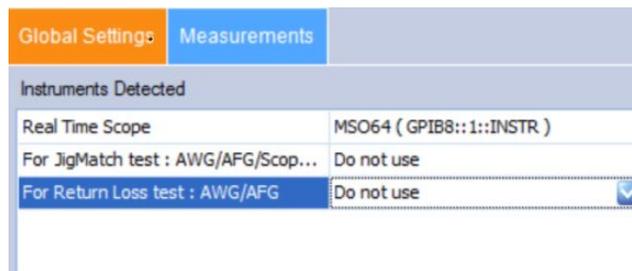


Figure 14: Return Loss Signal Source selection, with Do not use configuration

Method for loading the waveform on the supported AWG:

- Copy the waveform available at Oscilloscope at `C:\Program Files\Tektronix\TekExpress\TekExpress Ethernet\AWG Waveforms\10BaseT Return Loss\AWG Format\RL10_AWG.wfm`, to the AWG using LAN or USB.

Example mentioned above is for 10BaseT, select the folder accordingly for 1000BaseT or 100BaseT. The above path is applicable for all supported AWG models.

- Open the waveform for the corresponding speed and AWG series from **Open File** option, and when prompted, select option **Max & Preserve Offset** settings.
- Set **Amplitude** to 1.5 Vpp. (Maximum supported Amplitude)
- Click **Setup > Clock >** set the **Sample Rate** to 250 MS/s.
- Click **Setup > Channel >** set the **Resolution(bits)** to (15 + 1 Mkr).
- Switch **ON** the channel and click **Play**.

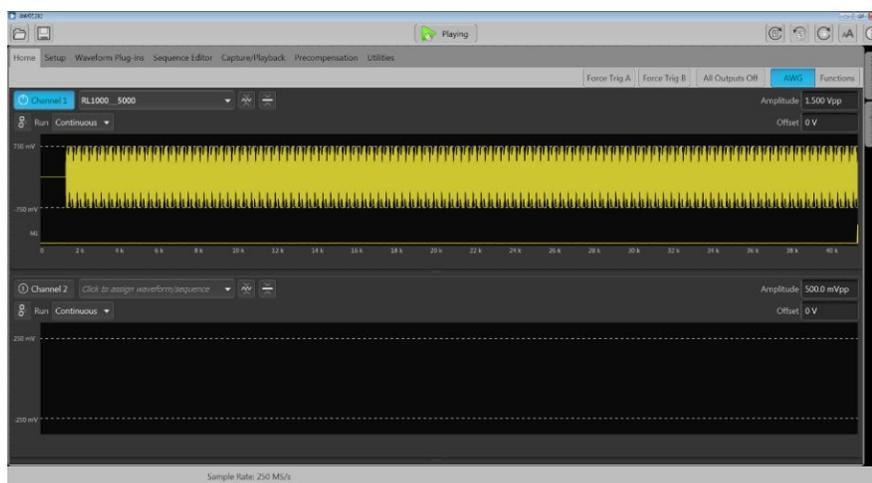


Figure 15: AWG with Return Loss waveform loaded

Method for loading the waveforms on the supported AFG:

For AFG3000 series:

1. Copy the waveform available at Oscilloscope at *C:\Program Files\Tektronix\TekExpress\TekExpress Ethernet\AWG Waveforms\10BaseT Return Loss\AFG Format\RL10_AFG.tfw*, to AFG using USB. Example mentioned above is for 10BaseT, select the folder accordingly for 1000BaseT or 100BaseT. The above path is applicable for all supported AFG 3000 series models.
2. Click **Arb > Arb Waveform** menu > **USB** > select the waveforms (.tfw) on both the channels.
3. Set the **Frequency** to 6.052682549 kHz for 100BaseT and 1000BaseT and 6.097560976 kHz for 10BaseT, for both the channels.
4. Set the **Amplitude** to 2.0 Vpp, for both the channels.
5. Invert the waveforms on channel 2.
6. Switch **ON** both the channels.

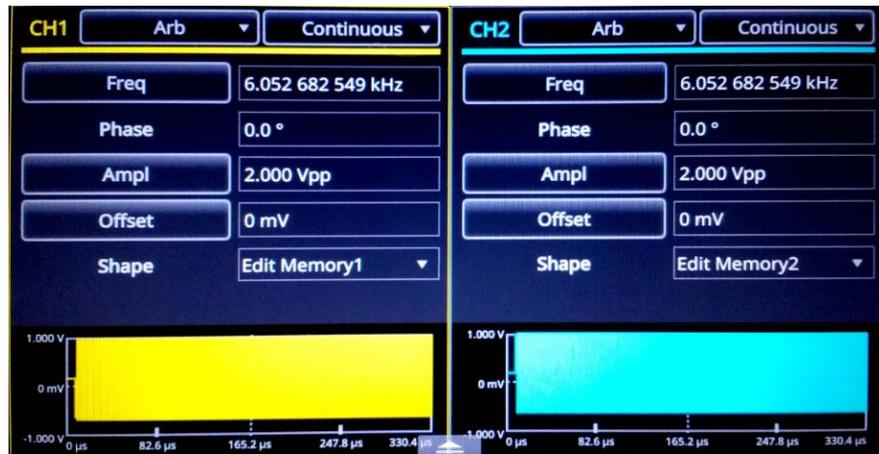


Figure 16: AFG with Return Loss waveforms loaded

For AFG31000 series:

1. Copy the waveform available at Oscilloscope at *C:\Program Files\Tektronix\TekExpress\TekExpress Ethernet\AWG Waveforms\10BaseT Return Loss\AFG Format\RL10_AFG.tfw*, to AFG using USB. Example mentioned above is for 10BaseT, select the folder accordingly for 1000BaseT or 100BaseT. The above path is applicable for all the supported AFG models.
2. Click **Home > ArbBuilder > Open > USB**, select corresponding folder and file (.tfw) and click **OK**.
3. Click **Save As** and save the waveform on the Memory (.tfwx). Click **OK**.
4. Click **Home > Basic >** select **Arb** from drop down menu for the channel 1.
5. From **Shape > File > USB >** select the waveform file for the corresponding speeds from Memory(.tfwx).
6. Repeat steps 4 and 5 for channel 2.
7. Set the **Frequency** to 6.052682549 kHz for 100BaseT and 1000BaseT and 6.097560976 kHz for 10BaseT, for both the channels.
8. Set the **Amplitude** to 2.0 Vpp, for both the channels.
9. Invert the waveforms on channel 2.
10. Switch **ON** both the channels.

JigMatch calibration steps. You can measure the Amplitude and Frequency of the disturbing signal and set the default values. The application measures and displays the values in Measured Value fields. You can validate the disturbing signal by comparing the measured value with the expected value.

To do the JigMatch calibration in the TekExpress application follow the steps below:

1. In the **DUT** panel and select the Suite of interest.
2. In the **Acquisitions** panel and select the channel for measurement.
3. In the **Instrument Control** settings, refresh to view the connected AWG/AFG.
4. From the **Configuration** panel, select the Signal source model in *For JigMatch test: AWG/AFG/Scope AFG*.
5. Click **JigMatch**.

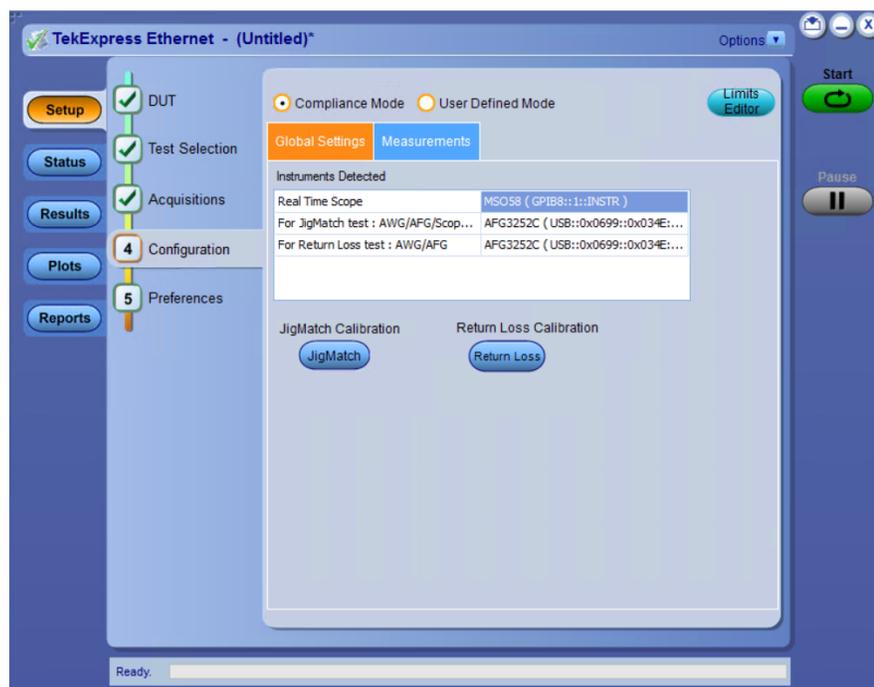


Figure 17: Configuration Panel for selecting Signal Source and to perform JigMatch Calibration


JigMatch calibration includes the following:

- *Disturber Compensation*
- *Test Fixture Compensation Step 1*
- *Test Fixture Compensation Step 2*

To measure the Disturbing Signal using JigMatch, follow the steps given below:

1. Use TC5 of the test fixture.

2. Make the connections as shown in the following figure:

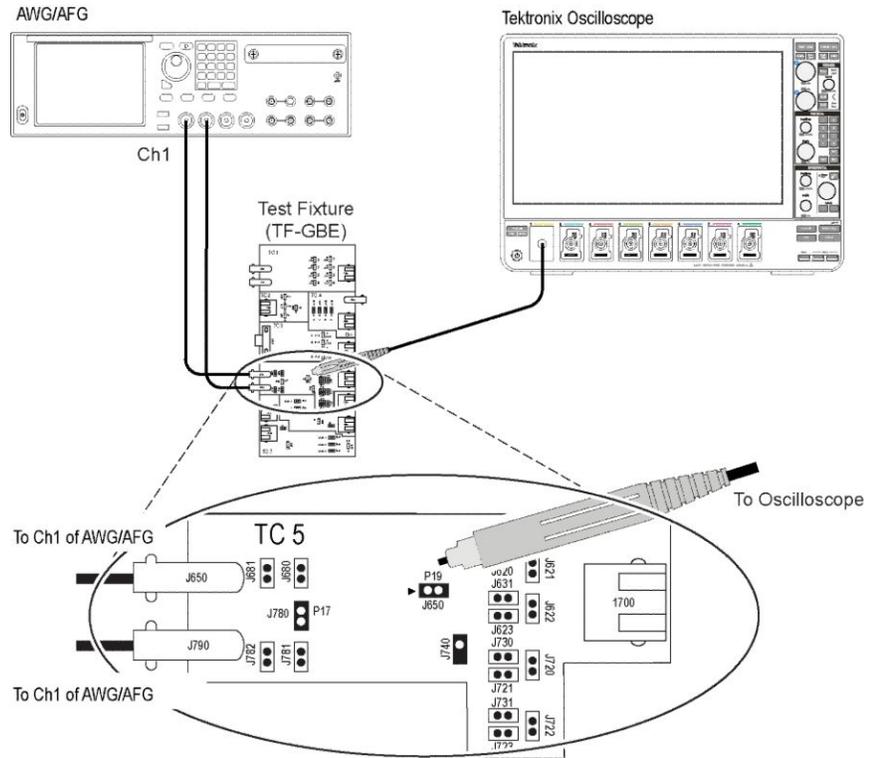

1504-31

Figure 18:

NOTE.

- Do not connect the Ethernet cable to J700 and the test port of the DUT.
- Short the jumpers J621, J630, J620, J623, J721, J723, J680, and J781.

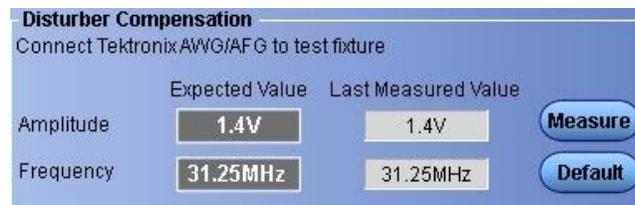



Figure 19: Disturber Compensation in JigMatch

3. In the **Jig Match** dialog box, click **Measure** in the **Disturber Compensation** group box.
4. Compare the **Measured Value** with the **Expected Value**.
5. If the Measured Value is not approximately equal to the Expected Value, modify the amplitude and clock frequency settings of the Arbitrary Waveform Generator/Arbitrary Function Generator. Click **Measure** and compare the values until it is approximately equal.

To compensate the linearities of Test Fixture (TC2) using JigMatch, follow the steps given below:

Test Fixture Compensation, Step 1:

1. Use TC2 of the test fixture.
2. Make the connections as shown in the following figure.

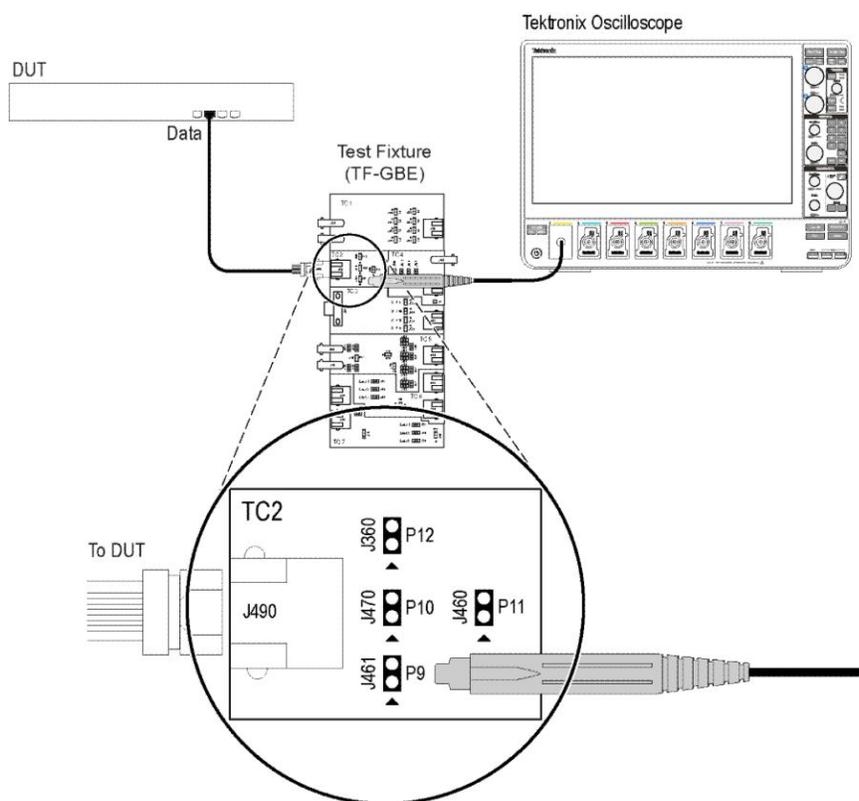

1504-023

Figure 20: Connection diagram to measure linearities of Test Fixture using JigMatch

3. For Template, Droop, and Peak Voltage tests, set the DUT to generate Test Mode 1 signal. For Distortion test, set the DUT to generate Test Mode 4 signal.
4. Connect the Ethernet cable to J490 and the test port of the DUT.
5. In the **JigMatch** dialog box > **Test Fixture Compensation** group box, select **Measure**.

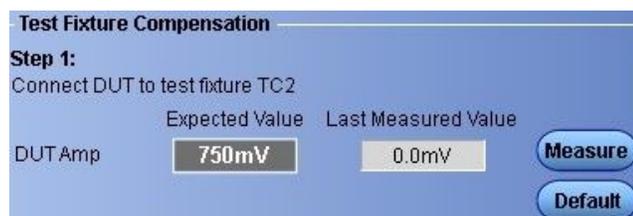


Figure 21: Test Fixture Compensation in JigMatch

To compensate the linearities of Test Fixture (TC5) using JigMatch, follow the steps given below:

Test Fixture Compensation, Step 2:

1. Use TC5 of the test fixture.
2. Make the connections as shown in the following figure.

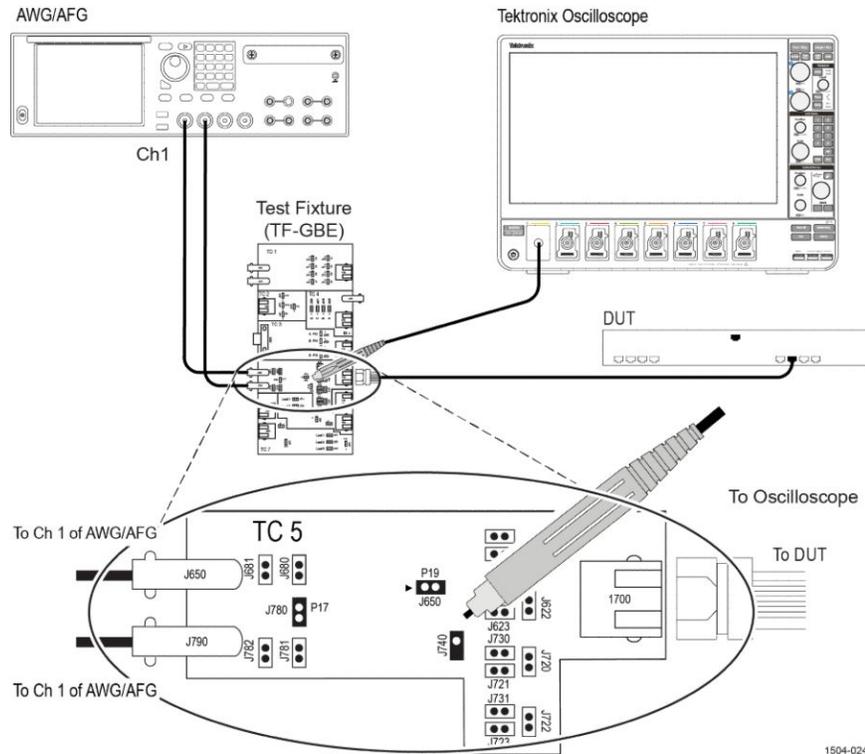


Figure 22: Connection diagram to measure linearities of the Test Fixture using JigMatch

3. For Template, Droop, and Peak Voltage tests, set the DUT to generate Test Mode 1 signal. For Distortion test, set the DUT to generate Test Mode 4 signal.
4. Connect the Ethernet cable to J700 and test port of the DUT.
5. Switch **OFF** the Arbitrary Waveform Generator/Arbitrary Function Generator.

NOTE. Short the jumpers J621, J630, J623, J721, J723, J680, and J781.

6. Connect the differential probe to P18 and configured channel of the oscilloscope.

- In the **Jig Match** dialog box >under step 2 of **Test Fixture Compensation** group box, select **Measure**.



Figure 23: Test Fixture Compensation in JigMatch

Method to set up the Signal Source for *Do not use* configuration:

In Configuration Panel if the Signal source is selected as *For JigMatch test: AWG/AFG/Scope AFG* is *Do not use*, then the waveform need to be manually loaded in the Signal Source before running the JigMatch Calibration.

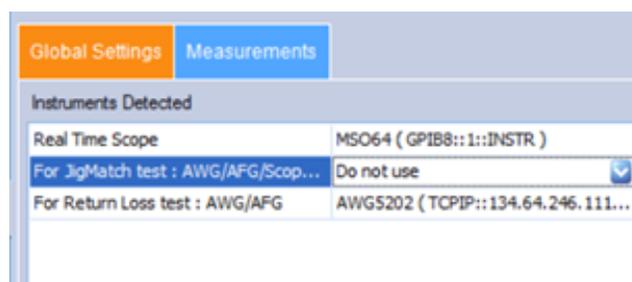


Figure 24: JigMatch Signal Source selection, with Do not use configuration

To load the waveform follow the steps below:

Method to setup the supported AWG For Test Mode 1:

- Copy the waveform available in Oscilloscope located at *C:\Program Files\Tektronix\TekExpress\TekExpress Ethernet\AWG Waveforms\AWG_Automation_Files\Template5K.wfm*, to the AWG using LAN or USB.
The above mentioned path is applicable for all supported AWG models.
- Set **Amplitude** on the AWG to 700 mVpp.
- Switch **ON** the channel and click **Play**.

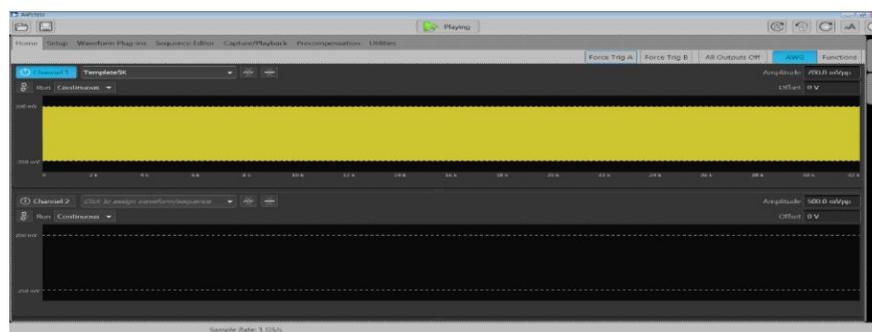


Figure 25: AWG with Test Mode 1 waveform loaded

Method to setup the supported AWG For Test Mode 4:

1. Copy the waveform available in Oscilloscope located at *C:\Program Files\Tektronix\TekExpress\TekExpress Ethernet\AWG Waveforms\AWG_Automation_Files\Distortion5K.wfm*, to the AWG using LAN or USB.

The above mentioned path is applicable for all supported AWG models.

2. Set **Amplitude** on AWG to 1.35 Vpp.
3. Switch **ON** the channel and click **Play**.

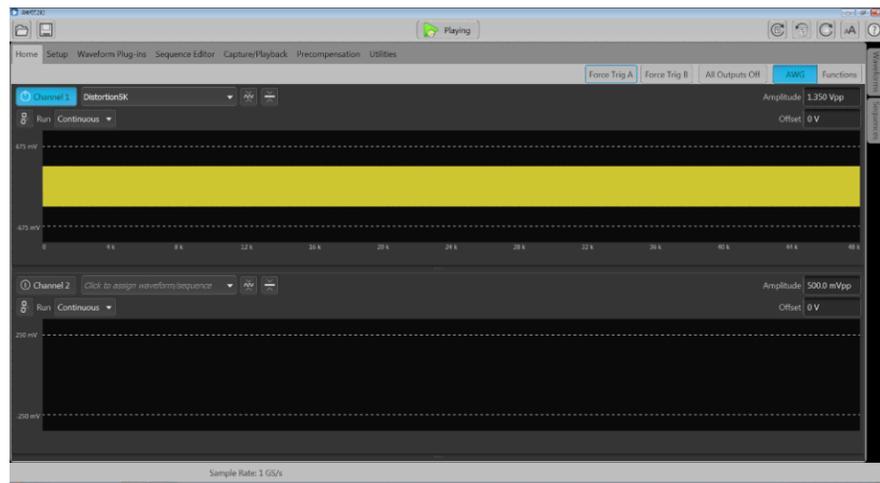


Figure 26: AWG with Test Mode 4 waveform loaded

Method to setup the supported AFG For Test Mode 1:

1. Set signal source on both the channels as **Sine**.
2. Set the **Frequency** on both the channels to 31.25 MHz.
3. Set the **Amplitude** on both the channels to 700 mVpp.
4. Set **Phase** of channel 2 to 180 degrees.
5. Switch **ON** both the channels.

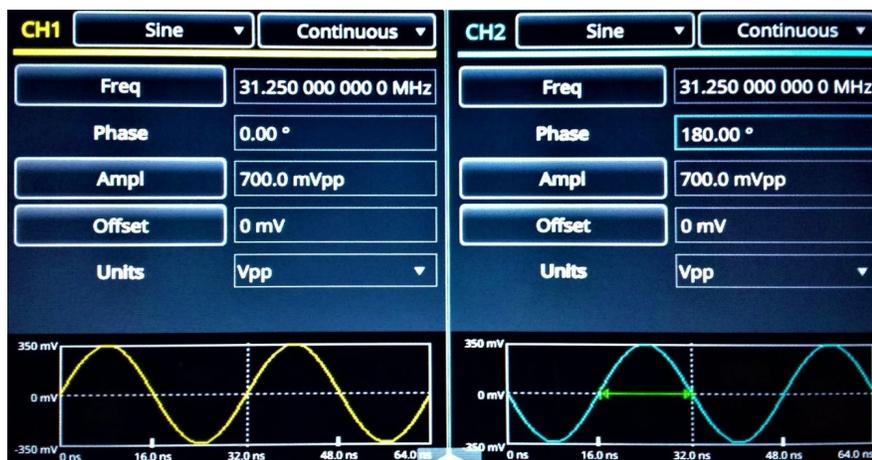


Figure 27: AFG with Test Mode 1 waveform loaded

Method to setup the supported AWG For Test Mode 4:

1. Set signal source on both the channels as **Sine**.
2. Set the **Frequency** on both the channels to 20.833 MHz.
3. Set the **Amplitude** on both the channels to 1.35 mVpp.
4. Set **Phase** of channel 2 to 180 degrees.
5. Switch ON both the channels.

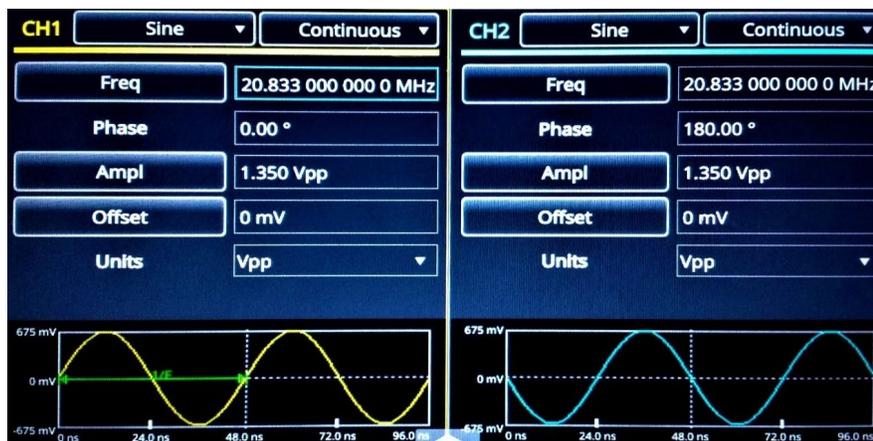


Figure 28: AFG with Test Mode 4 waveform loaded

Set preferences tab parameters

Use Preferences tab to set the application action on completion of a measurement.

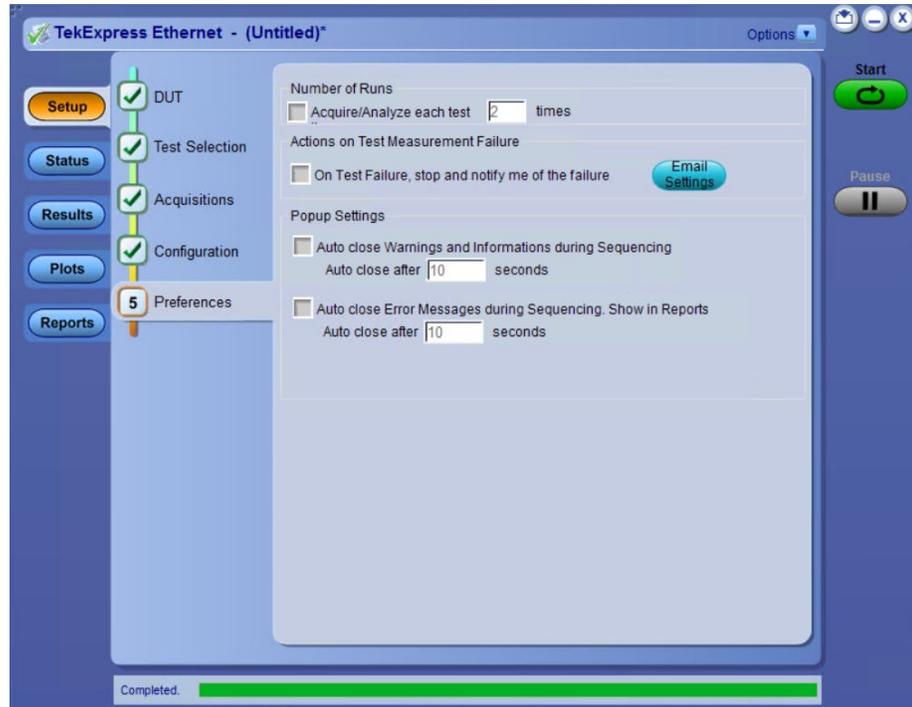


Table 17: Preferences tab settings


Setting	Description
Number of Runs	
Acquire/Analyze each test <no> times (not applicable to Custom Tests)	Select to repeat the test run by setting the number of times. By default, it is selected with 1 run.
Actions on Test Measurement Failure	
On Test Failure, stop and notify me of the failure	Select to stop the test run on Test Failure, and to get notified via email. By default, it is unselected. Click Email Settings to configure.
Popup Settings	
Auto close Warnings and Informations during Sequencing Auto close after <no> Seconds	Select to auto close warnings/informations during sequencing. Set the Auto close time. By default it is unselected.
Auto close Error Messages during Sequencing. Show in Reports Auto close after <no> Seconds	Select to auto close Error Messages during Sequencing. Set the Auto close time. By default it is unselected.

Status panel

Status panel overview

The Status panel accesses the Test Status and Log View tabs, which provide status on test acquisition and analysis (Test Status) and a listing of test tasks performed (Log View tab). The application opens the Test Status tab when you start a test run. You can select the Test Status or the Log View tab to view these items while tests are running.

Test status view

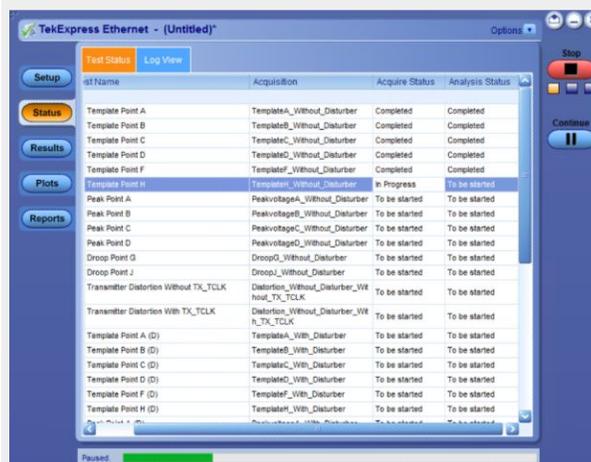

Log view

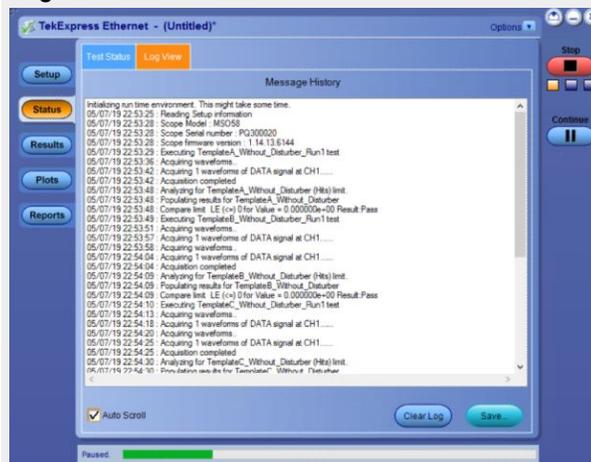


Table 18: Status panel Log View controls


Control	Description
Message History	Lists all executed test operations and timestamp information.
Auto Scroll	Enables automatic scrolling of the log view as information is added to the log during the test.
Clear Log	Clears all messages from the log view.
Save	Saves the log file to a text file. Use the standard Save File window to navigate to and specify the folder and file name to which to save the log text.

See also. [Application panel overview](#)

Results panel

Results panel overview

When a test execution is complete, the application automatically opens the **Results** panel to display a summary of test results.

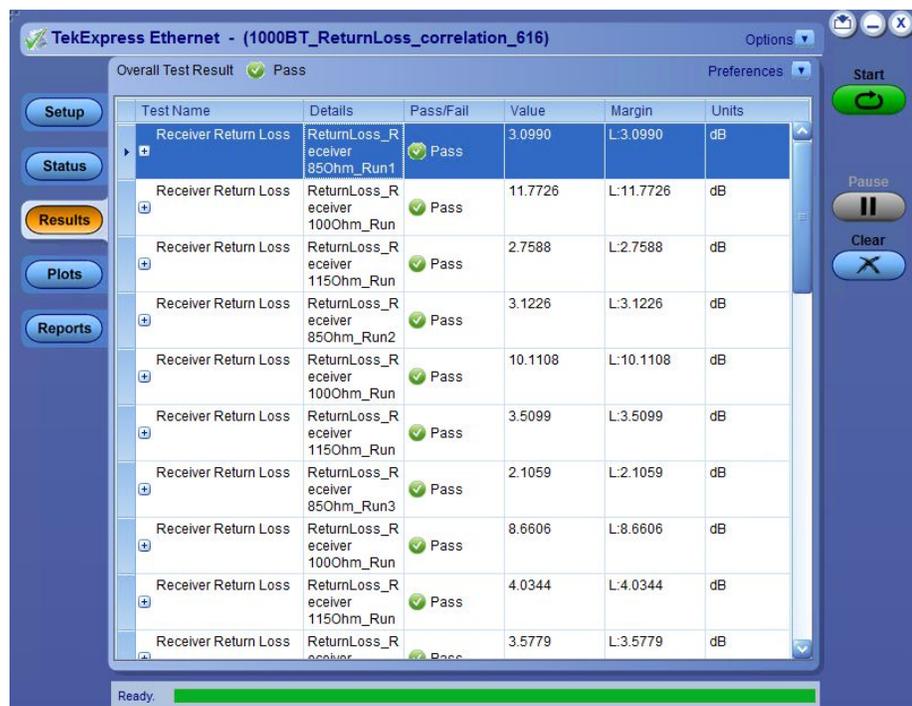

See also. [View a report](#)

[Application panel overview](#)


View test-related files

Files related to tests are stored in My TekExpress\Ethernet\ . Each test setup in this folder has both a test setup *file* and a test setup *folder*, both with the test setup name.

The test setup file is preceded by the TekExpress icon and usually has no visible file name extension.

Inside the test setup folder is another folder named for the DUT ID used in the test sessions. The default is DUT001.

Inside the DUT001 folder are the session folders and files. Each session also has a folder and file pair, both named for the test session using the naming convention (date)_(time). Each session file is stored outside its matching session folder:

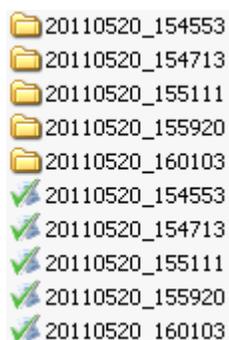

Each session folder contains image files of any plots generated from running the test session. If you selected to save all waveforms or ran tests using prerecorded waveform files, these are included here.

The first time you run a new, unsaved session, the session files are stored in the Untitled Session folder located at ..\My TekExpress\Ethernet\. When you name and save the session, the files are placed in a folder with the name that you specify. A copy of the test files stay in the Untitled Session folder until you run a new test or until you close the Ethernet application.

See also. [File name extensions](#)

Plots panel

Plots panel overview The Plots panel displays the result as a two-dimensional plot for additional measurement analysis. The plots are displayed only for Return Loss measurements.



Toolbar functions in plot windows. The Plot Toolbar window includes the following functions:


Icon	Functions
 Save	Saves the plot.
 Select & Zoom	Expands the selected plot area. Left-click and drag the mouse to mark the region on the plot to zoom.
 Zoom In	Expands part of the plot (Horizontal and Vertical); the data appears in more detail.
 Zoom Out	Contracts part of the plot (Horizontal and Vertical); the data appears in less detail.
 Pan	Moves the plot anywhere within the scale.
 Hide Gridlines	Hides the gridlines.
 Reset	Resets the zoom to 100%.
 Choose Waveform Colors	Sets the plot color. Click and select the color in the Color window and click OK. Click in the plot area to apply the color.

Icon	Functions
 Show/Hide Markers	Displays or hides the markers
 UnDock/Dock	Click to undock/dock the plot window.
Select Test	Select the measurement.

Reports panel

Reports panel overview

Use Reports panel to browse for reports, name and save reports, select test content to include in reports, and select report viewing options.

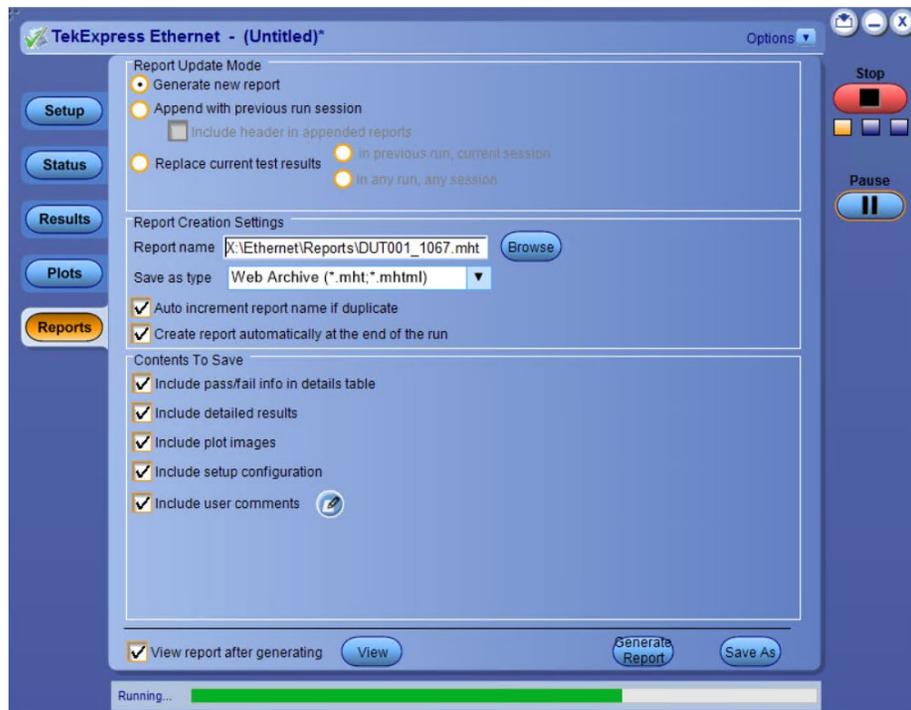

For information on setting up reports, see [Select report options](#). For information on viewing reports, see [View a report](#).

See also. [Application panel overview](#)

Select report options

Click Reports panel and use the Reports panel controls to select which test result information to include in the report, and the naming conventions to use for the report. For example, always give the report a unique name or select to have the same name increment each time you run a particular test.

Select report options before running a test or when creating and saving test setups. Report settings are included in saved test setups.

In the Reports panel, select from the following report options:

Table 19: Report options

Setting	Description
Report Update Mode	
Generate new report	Creates a new report. The report can be in either .mht or .pdf file formats.
Append with previous run session	Appends the latest test results to the end of the current test results report.
Include header in appended reports	Select to include header in the appended reports.
Replace current test in previous run session	Replaces the previous test results with the latest test results. Results from newly added tests are appended to the end of the report.
Report Creation Settings	
Report name	<p>Displays the name and location from which to open an Ethernet report. The default location is at <i>My TekExpress\Ethernet\Untitled Session</i>. The report file in this folder gets overwritten each time you run a test unless you specify a unique name or select to auto increment the report name. Change the report name or location.</p> <p>Do one of the following:</p> <ul style="list-style-type: none"> ■ In the Report Path field, type over the current folder path and name. ■ Double-click in the Report Path field and then make selections from the popup keyboard and click the Enter button. <p>Be sure to include the entire folder path, the file name, and the file extension. For example: C:\Documents and Settings\your user name\My Documents\My TekExpress\Ethernet\DUT001.mht.</p> <p>NOTE. You cannot set the file location using the Browse button.</p> <p>Open an existing report.</p> <p>Click Browse, locate and select the report file and then click View at the bottom of the panel.</p>

Setting	Description
Save as type	Saves a report in the specified file type, selected from the drop-down list. NOTE. If you select a file type different from the default, be sure to change the report file name extension in the Report Name field to match.
Auto increment report name if duplicate	Sets the application to automatically increment the name of the report file if the application finds a file with the same name as the one being generated. For example: DUT001, DUT002, DUT003. This option is enabled by default.
Create report automatically at the end of the run	Creates report at the end of the run.
Contents To Save	
Include pass/fail info in details table	Includes pass/fail info in the details table of the report.
Include detailed results	Includes detailed results in the report.
Include plot images	Includes plot images in the report.
Include setup configuration	Sets the application to include hardware and software information in the summary box at the top of the report. Information includes: the oscilloscope model and serial number, the oscilloscope firmware version, and software versions for applications used in the measurements.
Margin value in percentage	Select to include the margin value in percentage in the report.
Include user comments	Select to include any comments about the test that you or another user added in the DUT tab of the Setup panel. Comments appear in the Comments section, under the summary box at the beginning of each report.
View report after generating	Automatically opens the report in a Web browser when the test completes. This option is selected by default.
View	Click to view the most current report.
Generate Report	Generates a new report based on the current analysis results.
Save As	Specify a name for the report.

View a report The application automatically generates a report when test execution is complete and displays the report in your default Web browser (unless you cleared the **View Report After Generating** check box in the Reports panel before running the test). If you cleared this check box, or to view a different test report, do the following:

1. Click the **Reports** button.
2. Click the **Browse** button and locate and select the report file to view.
3. In the Reports panel, click **View**.

For information on changing the file type, file name, and other report options, see [Select report options](#).

Report contents A report shows detailed results and plots, as set in the Reports panel.

Tektronix®		TekExpress Ethernet				
		1000BASE-T Test Report				
Setup Information						
DUT ID	DUT001	Scope Information	M5054, C012701			
Date/Time	2019-05-03 06:37:23	Scope F/W Version	1.15.48.6297			
Device Type	Ethernet	Return Loss Signal Generator	AWG5202			
TekExpress Ethernet Version	1.0.1.616	Jigmatch Signal Generator	AWG5202			
TekExpress Framework Version	4.10.0.35	DATA Probe Model	TDP3500			
Execution Mode	Live	DATA Probe Serial Number	B012249			
Compliance Mode	True	MCLK Probe Model	TDP3500			
Overall Test Result	Pass	MCLK Probe Serial Number	Q100110			
Overall Execution Time	0:09:08					
DUT COMMENT:	General comment					
Test Name Summary Table						
Receiver Return Loss	Pass					
Receiver Return Loss Margin Table Run1						
Frequency	Spec. Value	850hm	1000hm	1150hm	Result	Comments
1MHz	-16dB	-21.38dB	-48.68dB	-23.53dB	Pass	
10MHz	-16dB	-23.53dB	-28.66dB	-21.23dB	Pass	
20MHz	-16dB	-20.5dB	-30.81dB	-21.59dB	Pass	
30MHz	-16dB	-21.89dB	-32.83dB	-22.78dB	Pass	
40MHz	-16dB	-19.4dB	-30.48dB	-24.37dB	Pass	
50MHz	-14.08dB	-19.77dB	-33.54dB	-25.56dB	Pass	
60MHz	-12.5dB	-20.74dB	-36.89dB	-24.98dB	Pass	

Setup configuration information

The summary box at the beginning of the report lists setup configuration information. This information includes the oscilloscope model and serial number, optical module model and serial number, and software version numbers of all associated applications.

To exclude this information from a report, clear the **Include Setup Configuration** check box in the Reports panel before running the test.

User comments

If you selected to include comments in the test report, any comments you added in the DUT tab are shown at the top of the report.


See also. [Results panel overview](#)

[View test-related files](#)

Running tests


1000BASE-T connection diagram

Click **Setup** > **Test Selection** > **Preview** to view the equipment setup diagram(s).

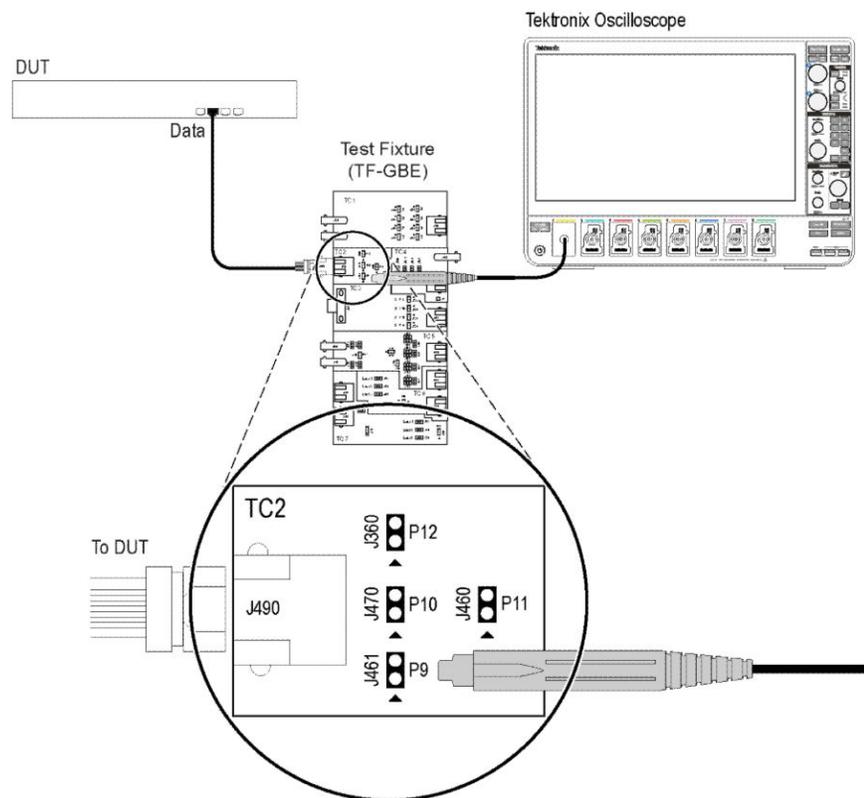

1504-023

Figure 29: 1000BASE-T Template, Peak Volt, and Droop (Without Disturber)

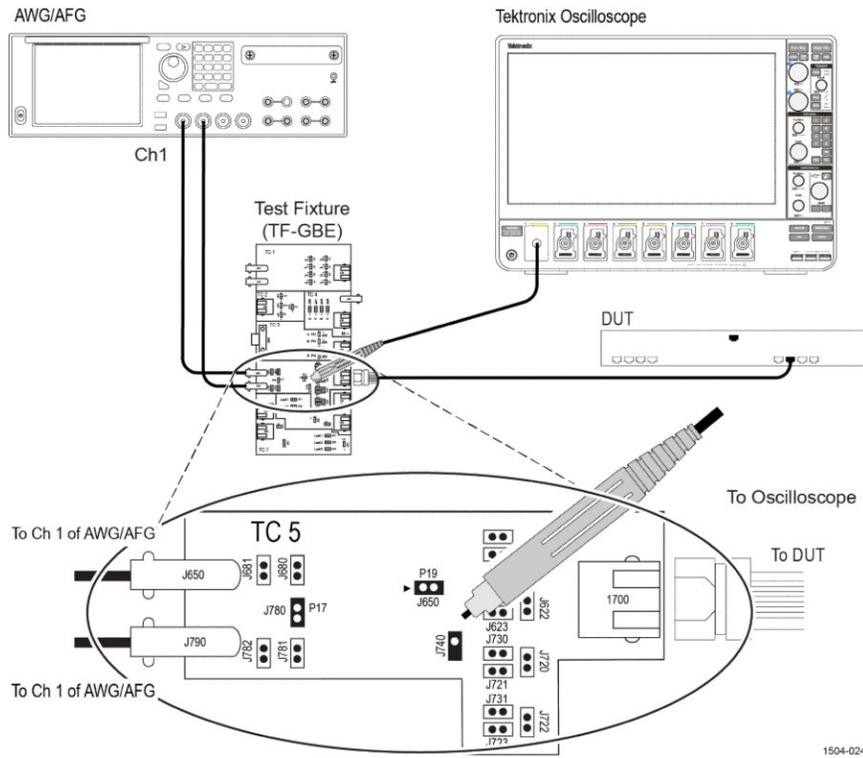

1504-024

Figure 30: 1000BASE-T Template, Peak Volt, and Droop (With Disturber)

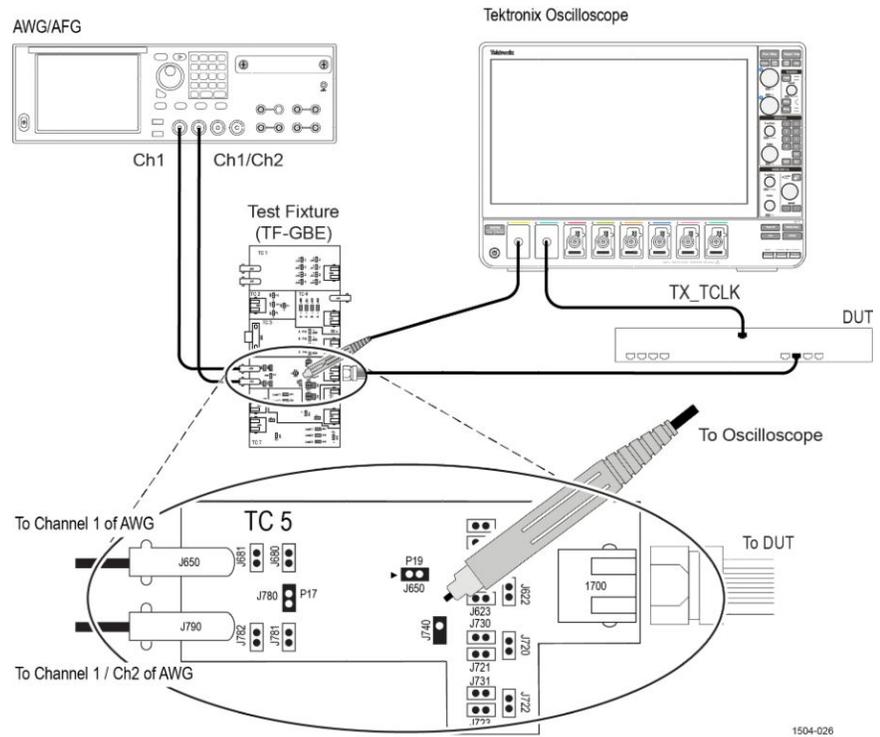


Figure 31: Distortion with Disturber with Clock

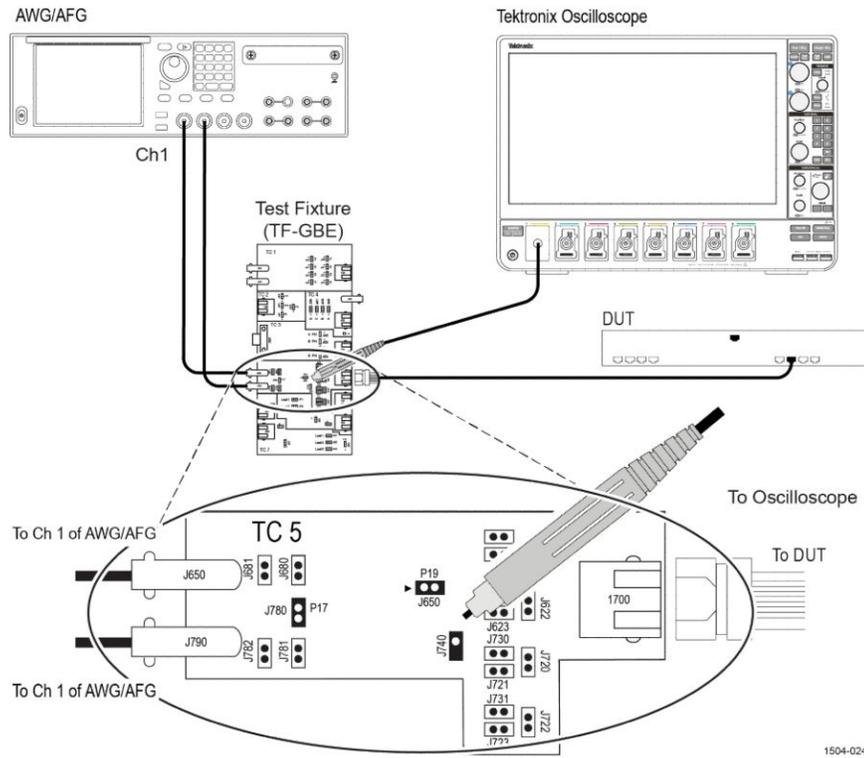


Figure 32: Distortion with Disturber without Clock



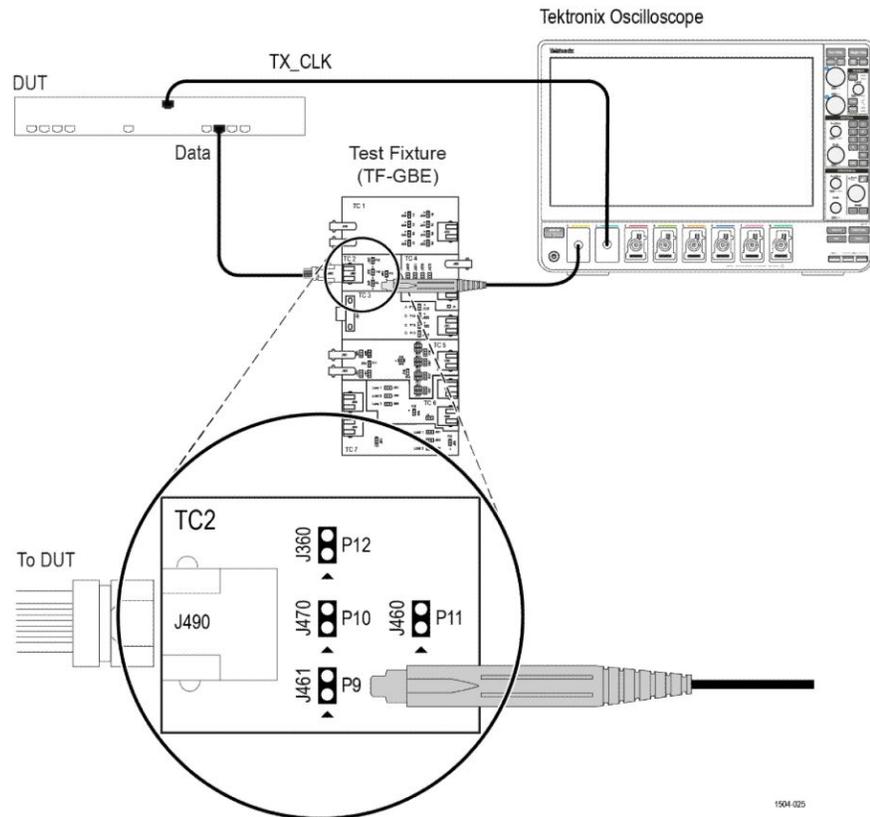


Figure 33: Distortion without Disturber with Clock

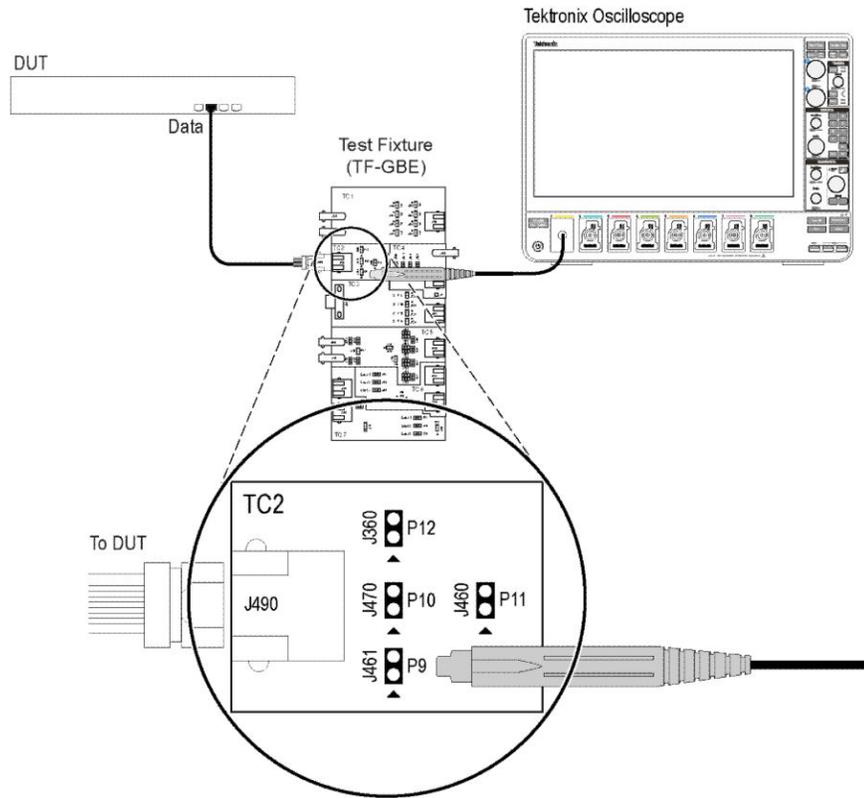

1504-023

Figure 34: Distortion without Disturber without Clock

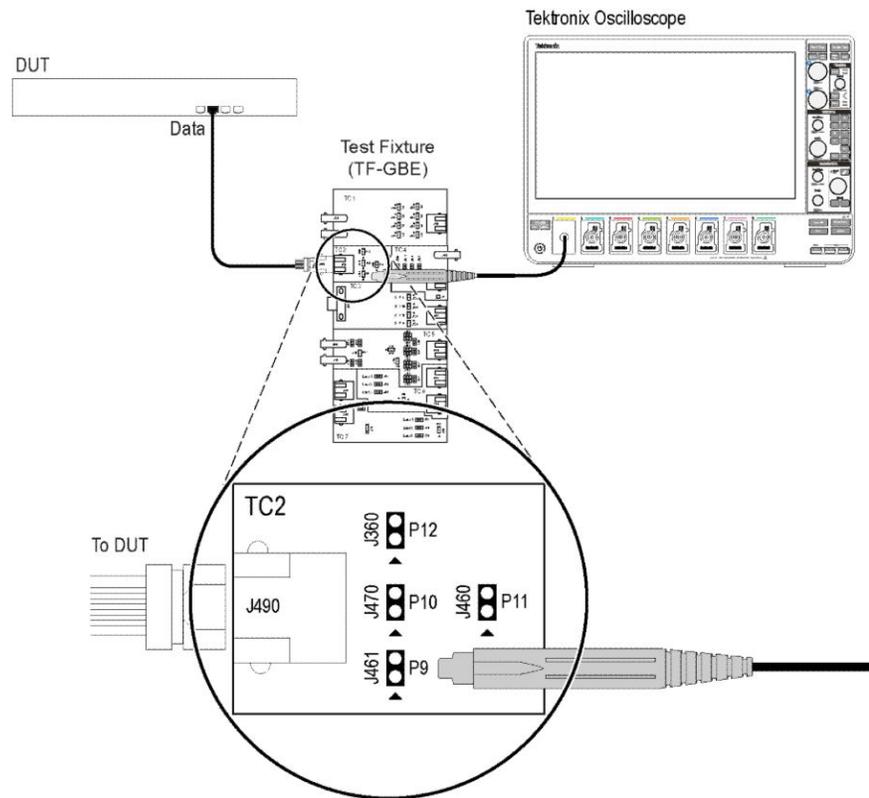

1504-023

Figure 35: Master and Slave Jitter without Clock

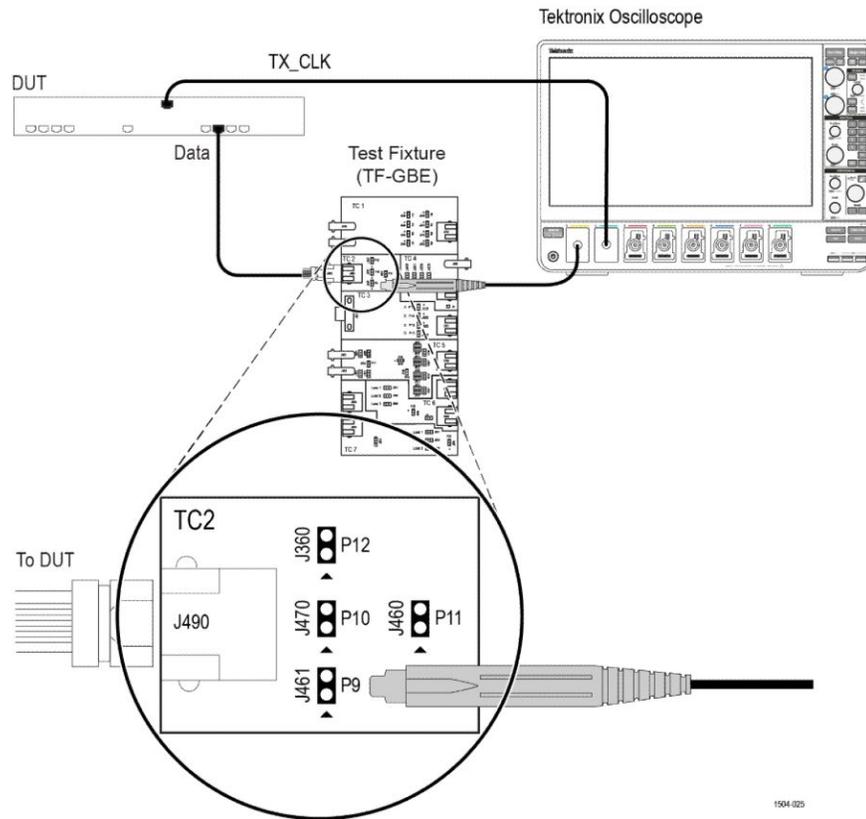


Figure 36: Master Filtered with Clock - Connection 1

1504-025

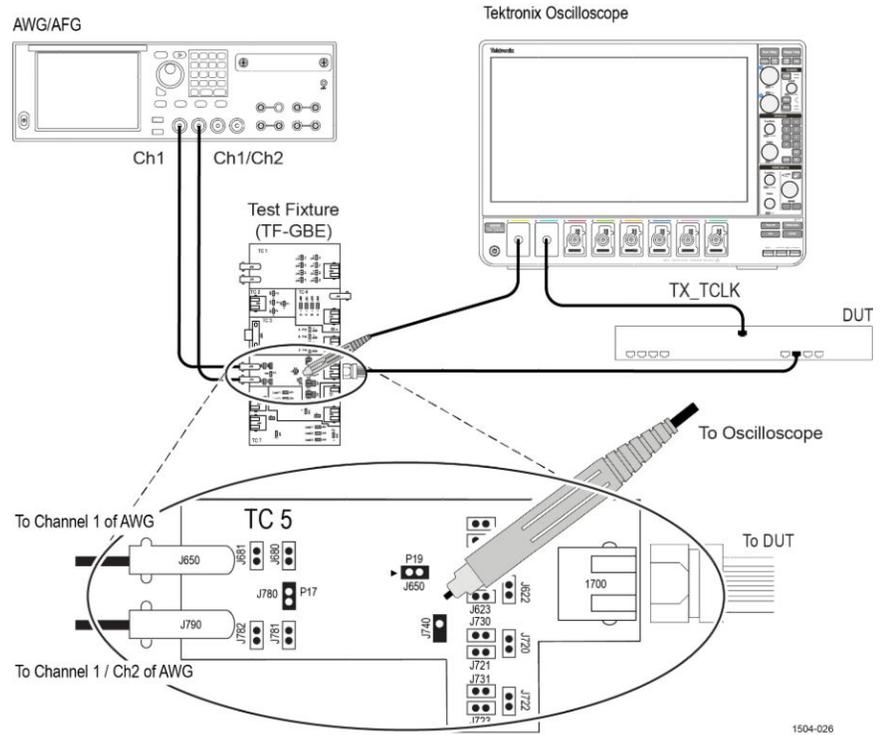


Figure 37: Master Filtered with Clock - Connection 2

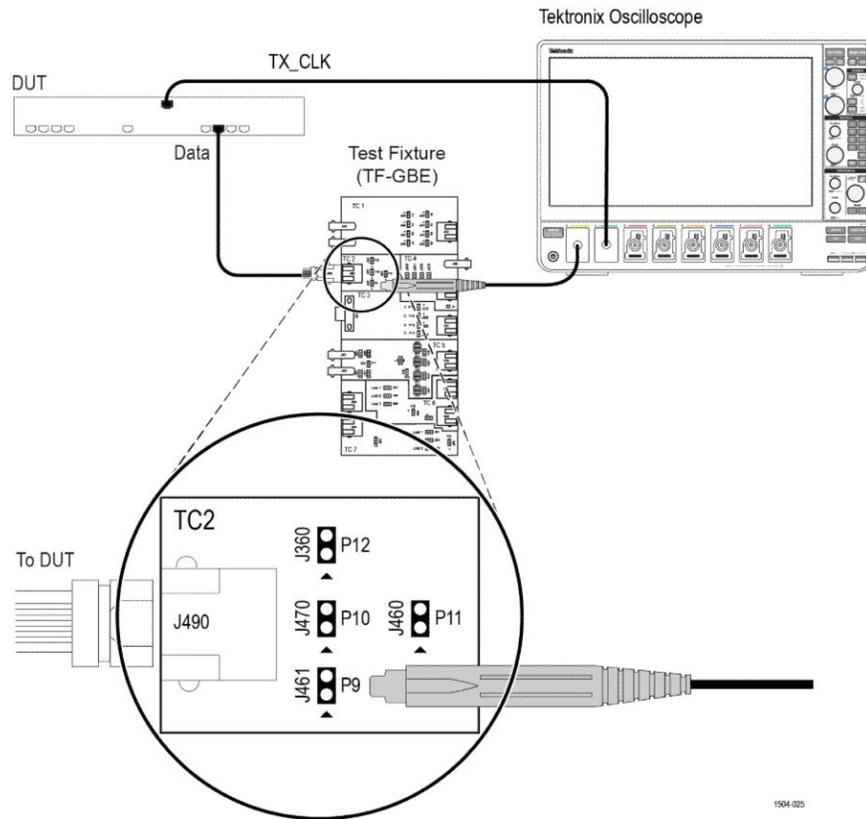


Figure 38: Master Unfiltered with Clock

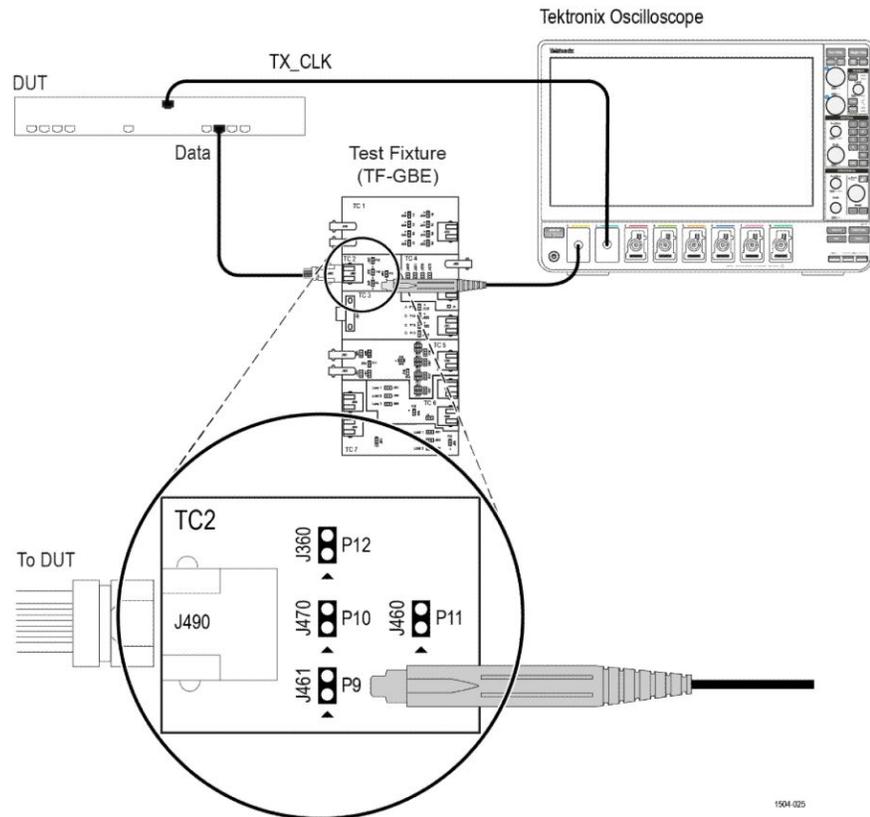


Figure 39: Slave Filtered with Clock - Connection 1

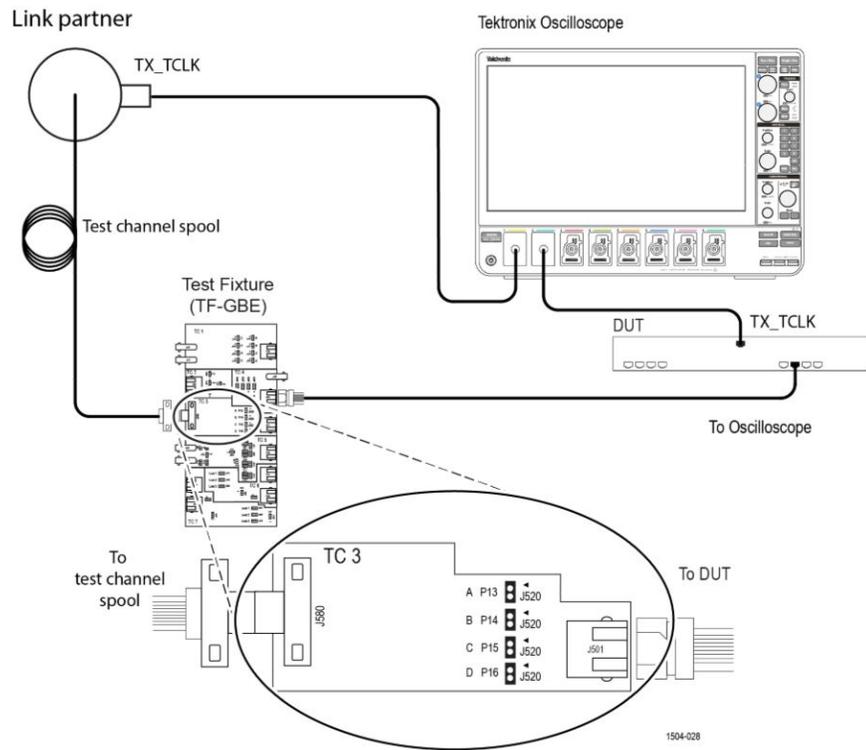


Figure 40: Slave Filtered with Clock - Connection 2

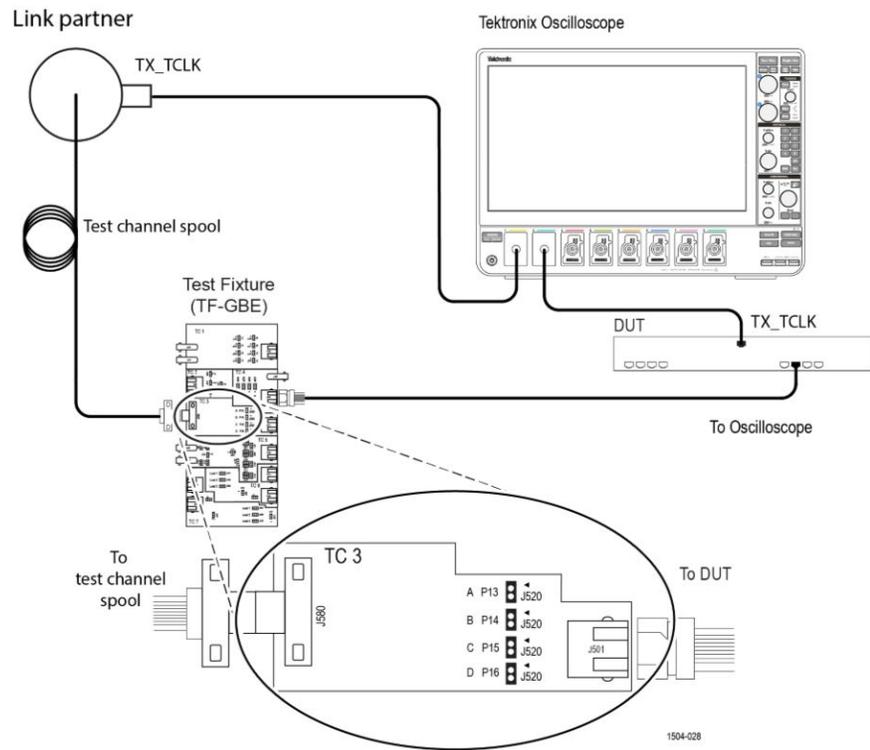


Figure 41: Slave Unfiltered with Clock

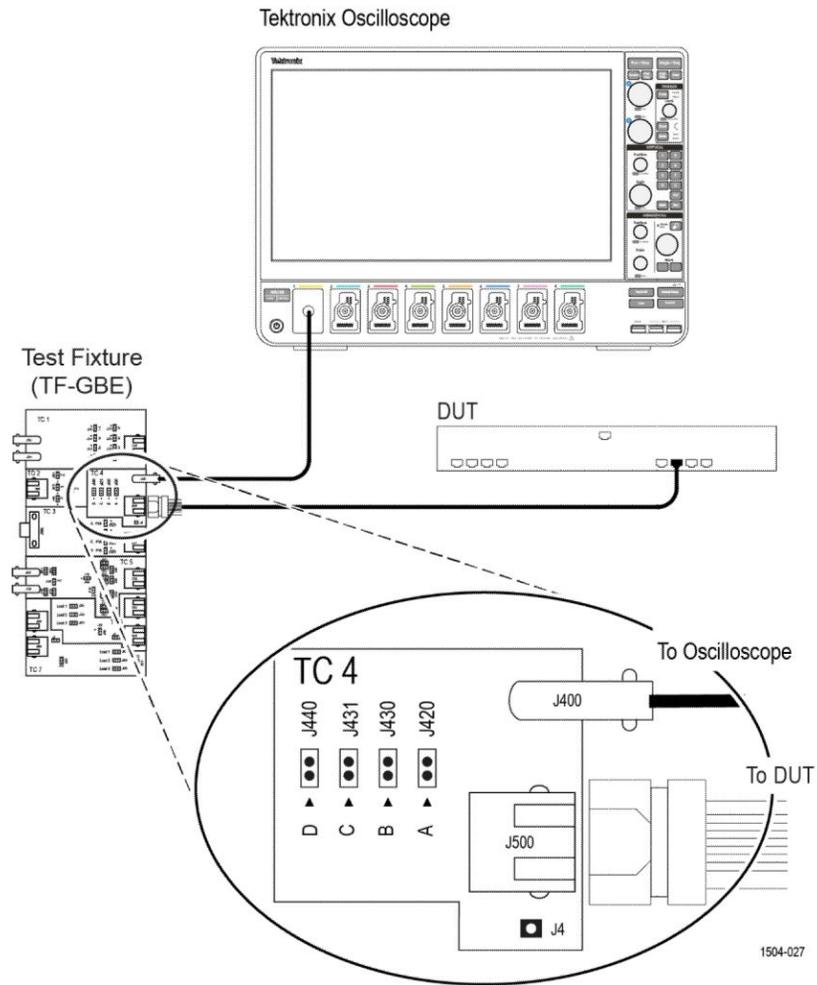


Figure 42: 1000BASE-T CM Voltage

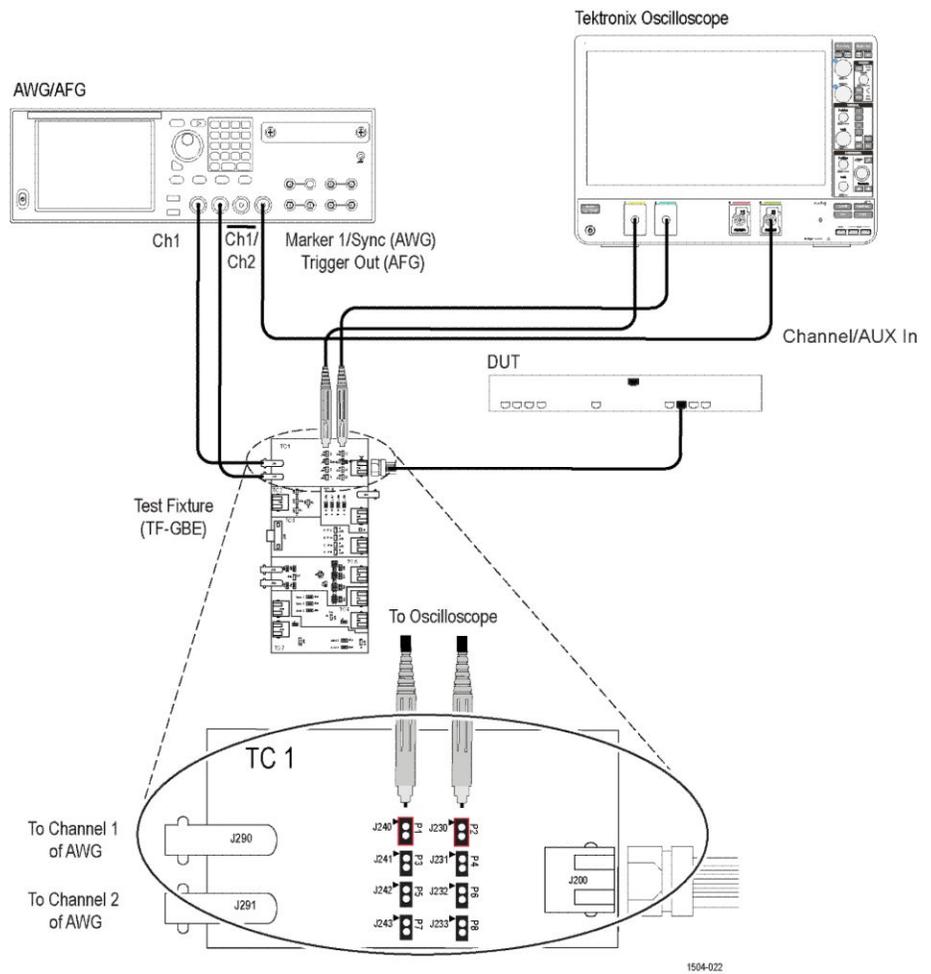


Figure 43: 1000BASE-T Transmitter Return Loss


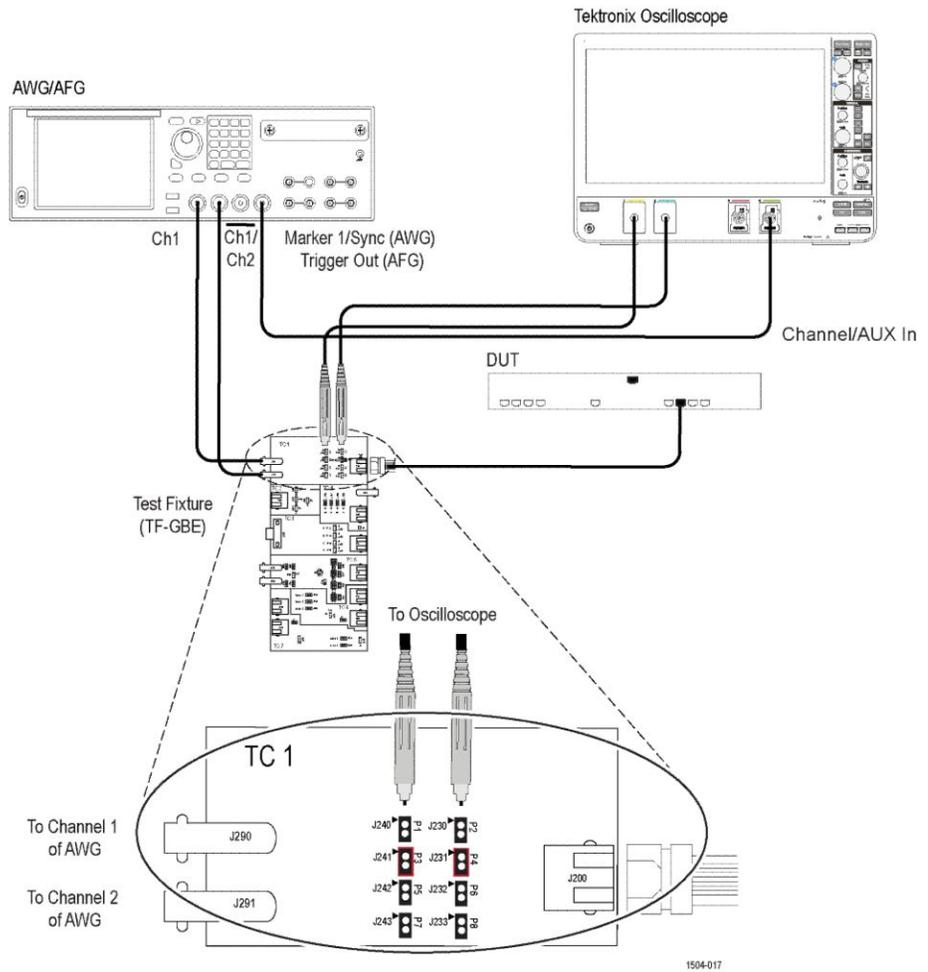


Figure 44: 100BASE-T Receiver Return Loss

100BASE-T connection diagram

Click **Setup** > **Test Selection** > **Preview** to view the equipment setup diagram(s).

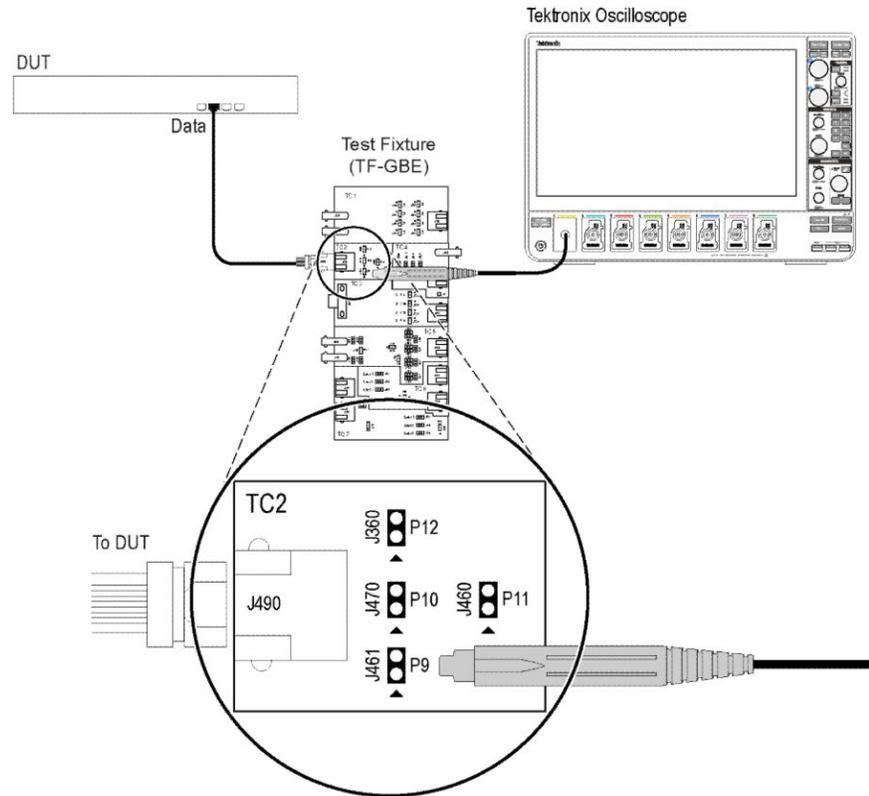

1504-023

Figure 45: 100BASE-T connection diagram for all tests except Return Loss

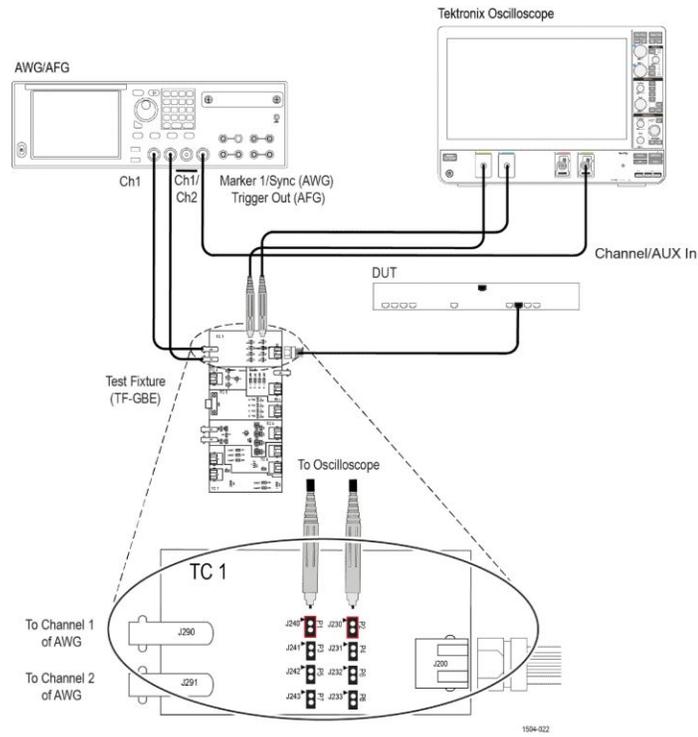


Figure 46: 100BASE-T Transmitter Return Loss


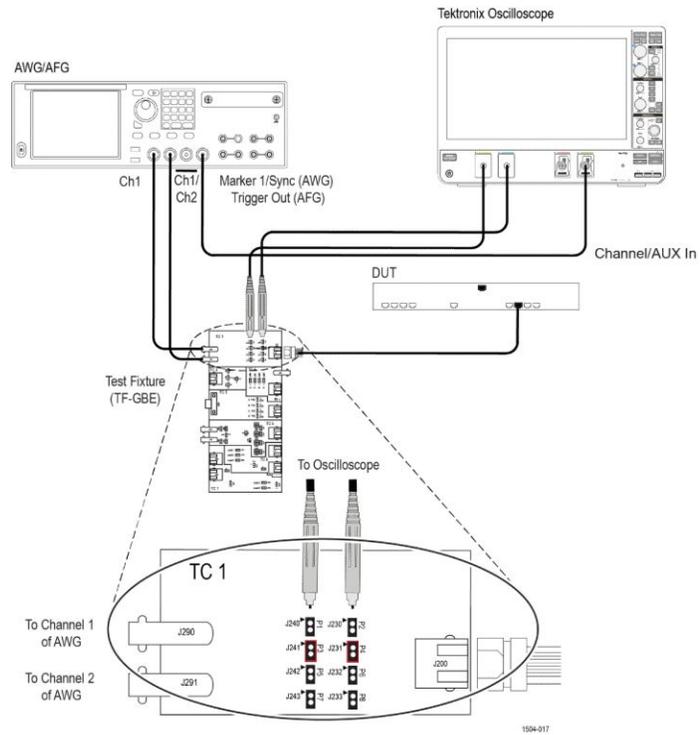


Figure 47: 100BASE-T Receiver Return Loss

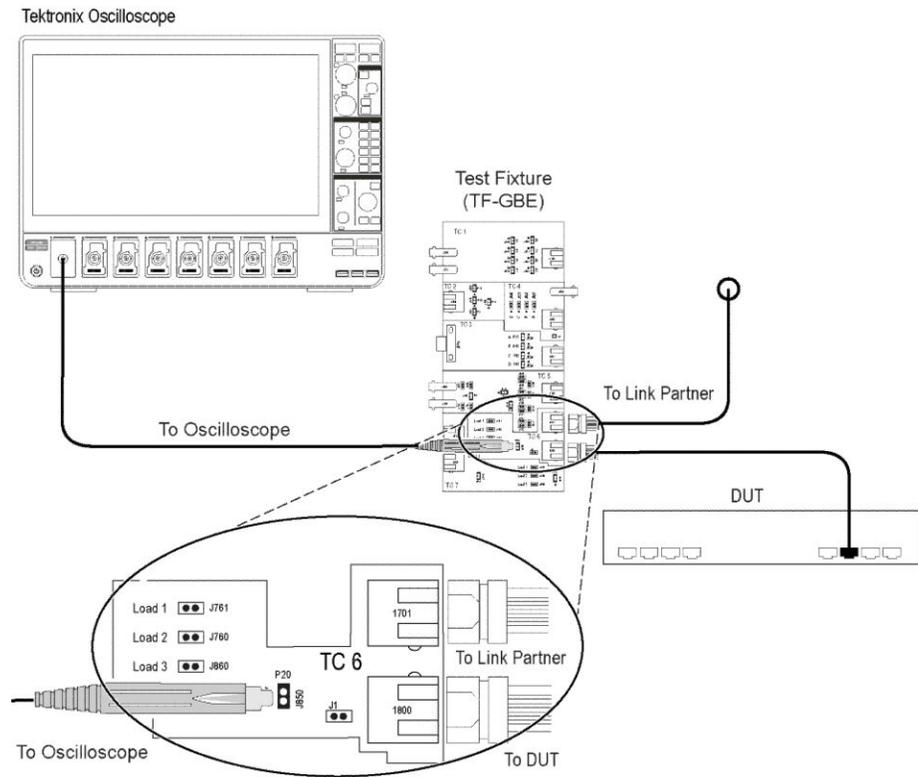

1504-030

Figure 49: 10BASE-T TP_IDL Load Without TPM, Jitter, Link Pulse Load Without TPM, Harmonic, and Link Pulse Timing Without TPM , and Differential Voltage

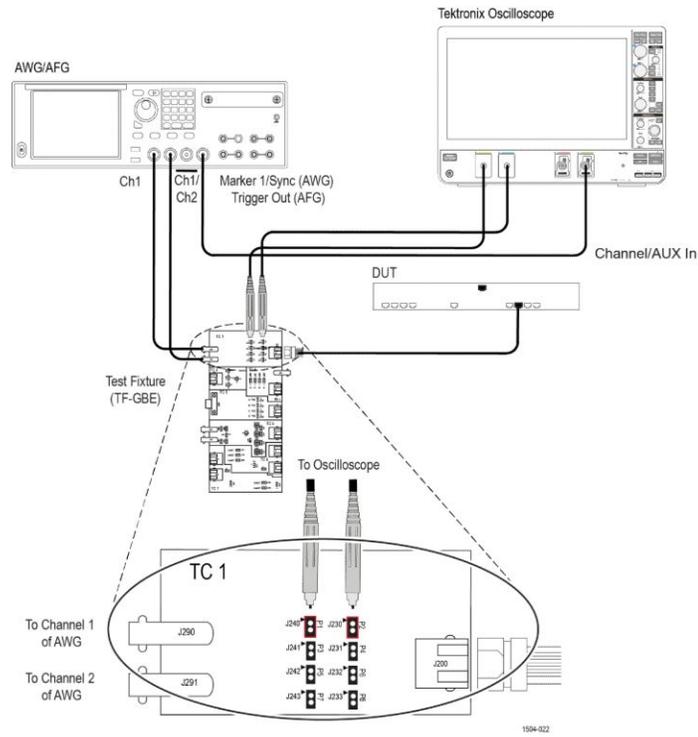


Figure 50: 10BASE-T Transmitter Return Loss

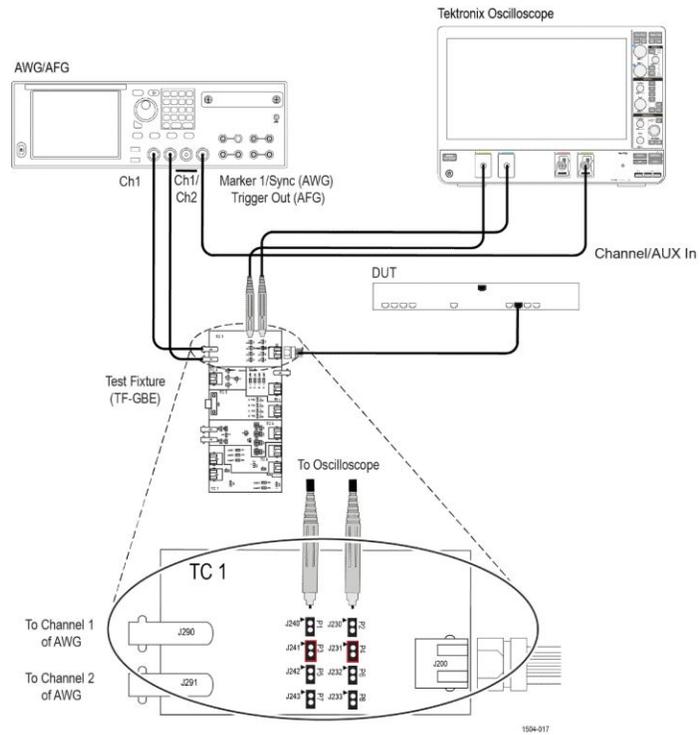


Figure 51: 10BASE-T Receiver Return Loss

Refer *Return Loss Calibration steps* on page 32

Prerequisite

Compensate the signal path

Use the following procedure to compensate the internal signal acquisition path. Perform this procedure if the ambient temperature has changed more than 5 °C (9 °F) since you performed the last signal path compensation. Perform the signal path compensation once a week. Failure to do so may result in the instrument not meeting warranted performance levels.

1. Power on and wait for the instrument to complete its warm up period before continuing with this procedure.
2. Disconnect any probes you have connected to the input channels.
3. Set the instrument to Menu mode.
4. Select Instrument Calibration from the Utilities menu.
5. Note any instructions that appear in the resulting control window.
6. Click Run SPC to begin the procedure. The procedure may take several minutes to complete.
7. Verify that the Status changes to Pass after the procedure is complete. If the Calibration Status field indicates anything other than Compensated, see Signal Path Compensation Status for information on the readout and recommended action.

NOTE. *When making measurements at vertical scale settings less than or equal to 5 mV, you should perform the signal path compensation at least once a week. Failure to do so may result in the instrument not meeting warranted performance levels at those volts/div settings.*

Running tests

Select tests, set acquisition parameters, set configuration parameters, set preferences parameters, and click **Start** to run the tests. While tests are running, you cannot access the Setup or Reports panels. To monitor the test progress, switch between the Status panel and the Results panel.

While the tests are running, other applications may display windows in the background. The TekScope application takes precedence over other applications, but you can switch to other applications by using **Alt + Tab** key combination. To keep the TekExpress Ethernet application on top, select **Keep On Top** from the TekExpress Options menu.

The application displays report when the tests execution is complete.

Prerun checklist

1. Make sure that the instruments are warmed up (approximately 20 minutes) and stabilized.
2. Perform compensation: In the oscilloscope main menu, select **Utilities > Instrument Compensation**. Click **Help** in the compensation window for steps to perform instrument compensation.

View test results

When a test completes, the application switches to the *Results panel*, which shows a summary of test results.

Each test result occupies a row in the Results table. By default, results are displayed in summary format, with the measurement details collapsed. You can change the view in the following ways:

- To view the results grouped by lane, test, or data rate, select the corresponding item from the Preferences menu.
- To expand all tests listed, select **View Results Details** from the Preferences menu.
- To expand and collapse tests, use the plus and minus buttons to the left of the test rows.
- To collapse all expanded tests, select **Preferences > View Results Summary**.
- To enable or disable the wordwrap feature, select **Preferences > Enable Wordwrap**.
- To expand the width of a column, place the cursor over the vertical line that separates the column from the one to the right. When the cursor changes to a double-ended arrow, hold down the mouse button and drag the column to the desired width.

- To sort the test information by column, click the column head. When sorted in ascending order, a small up arrow is displayed. When sorted in descending order, a small down arrow is displayed.
- To clear all test results displayed, click **Clear** ()

See Also [View a report](#)

Saving and recalling test setup

Test setup files overview

Saved test setup information (such as the selected oscilloscope, general parameters, acquisition parameters, measurement limits, waveforms (if applicable), and other configuration settings) are saved under the setup name at **X:\Ethernet**.

Use test setups to:

- Run a new session, acquiring live waveforms, using a saved test configuration.
- Create a new test setup using an existing one.
- View all the information associated with a saved test, including the log file, the history of the test status as it executed, and the results summary.
- Run a saved test using saved waveforms.

See also [Save a test setup](#)
[Open \(load\) a saved test setup](#)

Save a test setup

You can save a test setup before or after running a test. You can create a test setup from [already created test setup](#), or using [default test setup](#). When you select the default test setup, the parameters are set to the application's default value.

Select **Options > Save Test Setup** to save the opened setup.

Select **Options > Save Test Setup As** to save the setup with different name.

Open (load) a saved test setup

To Open (load) a saved test setup, do the following:

1. Select **Options > Open Test Setup**.
2. Select the setup from the list and click **Open**. Setup files are located at **X:\Ethernet**.

See also [About test setups](#)

[Create a test setup using an existing one](#)

[Create a test setup from default settings](#)

Create a test setup from default settings

To create a test setup using default settings, follow the steps:

1. Select **Options > Default Test Setup**. For default test setup, the parameters are set to the application's default value.
2. Click application [Setup](#) and set the parameters.
3. Click application [Reports](#) and set the report options.
4. Optional: Click **Start** to run the test and verify that it runs correctly and captures the specified test information and reports. If it does not, then edit the parameters and repeat this step until the test runs to your satisfaction.
5. Select **Options > Save Test Setup**. Enter the file name and click Save. The application saves the file to X:\Ethernet*<session_name>*.

Create a test setup using an existing one

To create a test setup using an existing one, follow the steps:

1. Select **Options > Open Test Setup**.
2. Select a setup from the list and then click **Open**.
3. Click application [Setup](#) and modify the parameters.
4. Click application [Reports](#) and modify the report options.
5. Select **Options > Save Test Setup As**.
6. Enter test setup name, and click **Save**.

SCPI Commands

About SCPI command


You can use Standard Commands for Programmable Instruments (SCPI) to communicate with the TekExpress application.

Socket configuration for SCPI commands


This section describes the steps for TCP/IP socket configuration and TekVISA configuration to execute the SCPI commands.

TCP/IP socket configuration


1. Click **Start > Control Panel > System and Security > Windows Firewall > Advanced settings**.

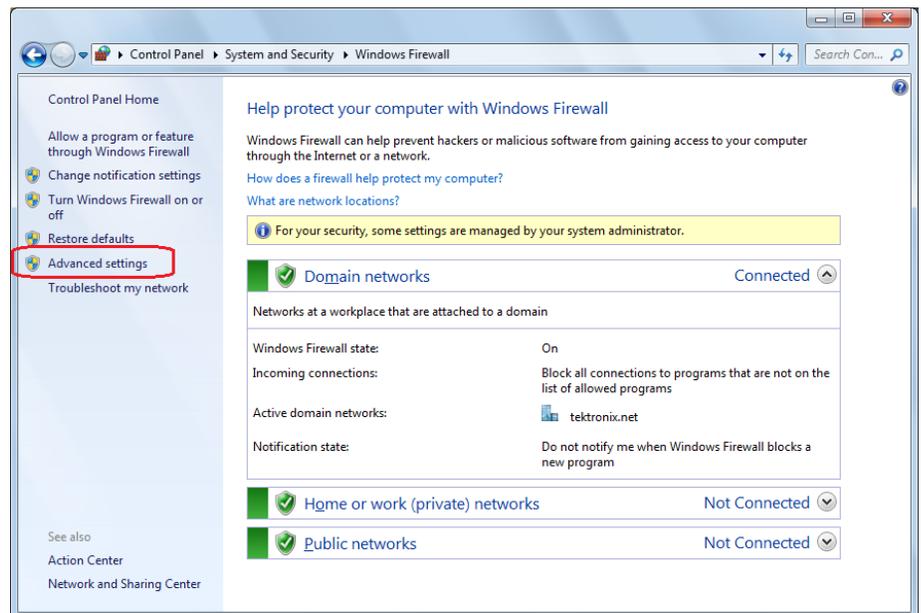


2. In Windows Firewall with Advanced Security menu, select **Windows Firewall with Advanced Security on Local Computer > Inbound Rules** and click **New Rule...**

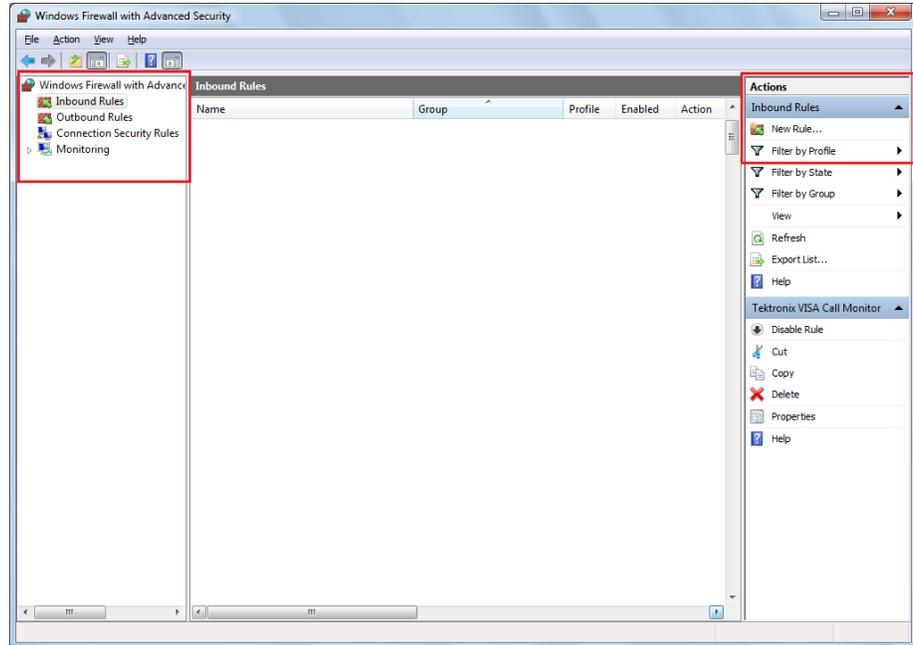


3. In New Inbound Rule Wizard menu
 - a. Select **Port** and click **Next**.

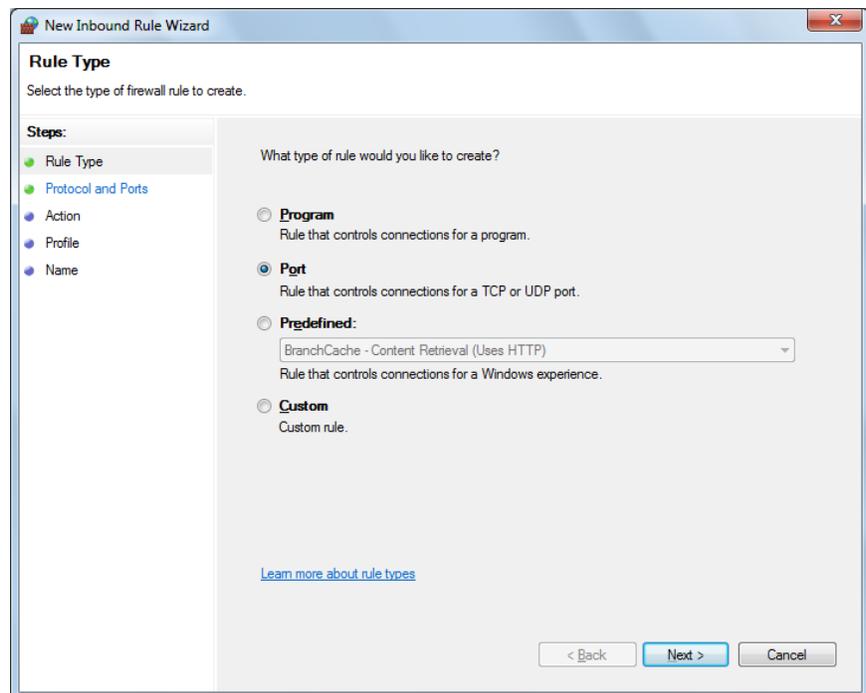


- b. Select **TCP** as rule apply and enter 5000 for **Specific local ports** and click **Next**.

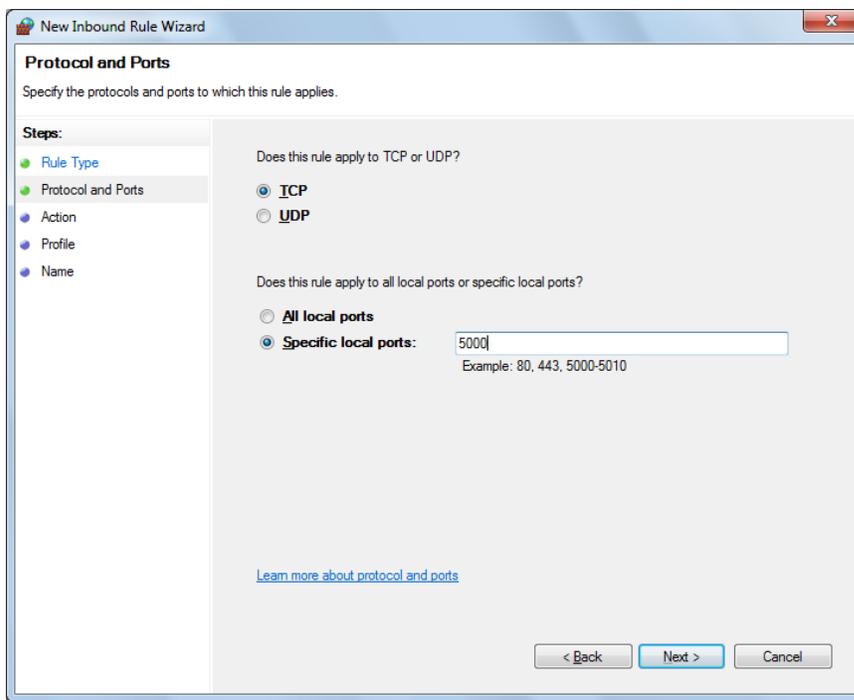


- c. Select **Allow the connection** and click **Next**.

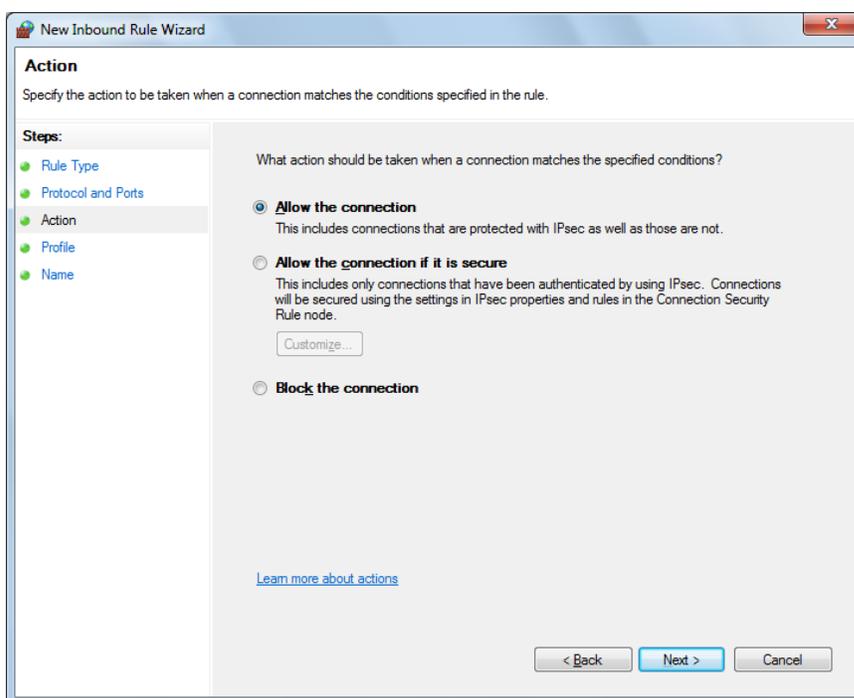


- d. Select **Domain**, **Private**, **Public** and click **Next**.

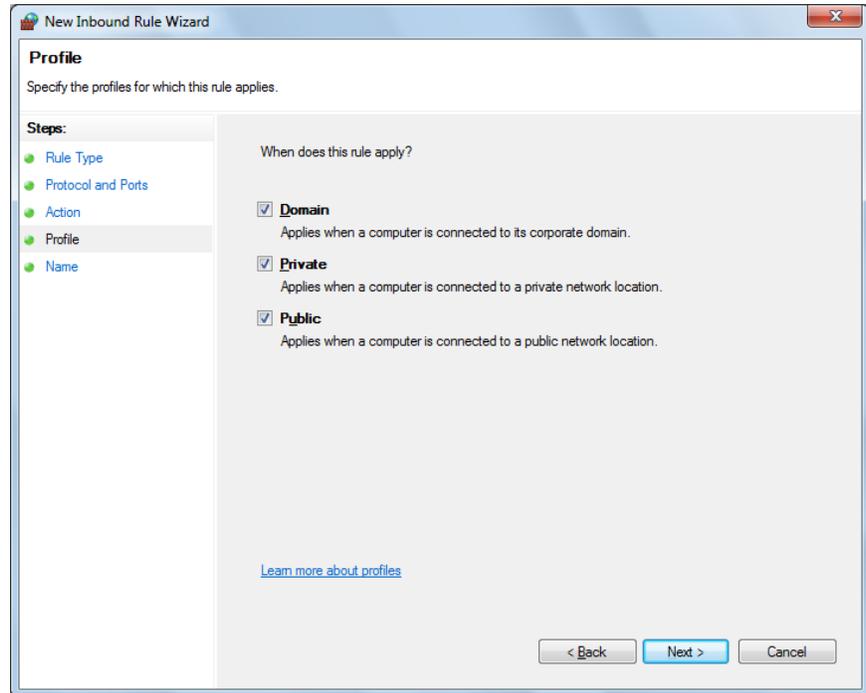


- e. Enter **Name**, Description (optional), and click **Finish**.

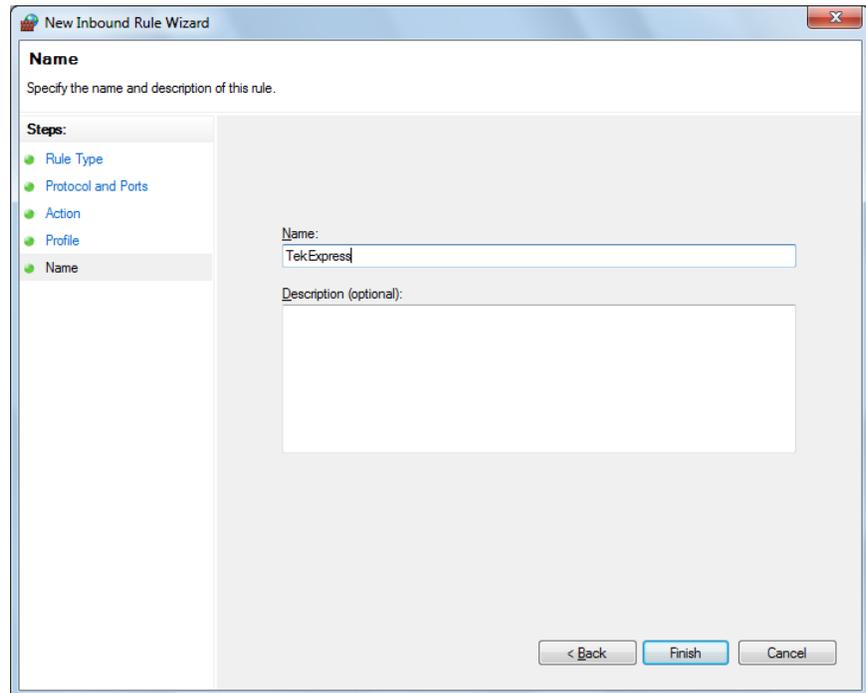

4. Check whether the Rule name is displayed in **Windows Firewall with Advanced Security** menu > **Inbound Rules**.

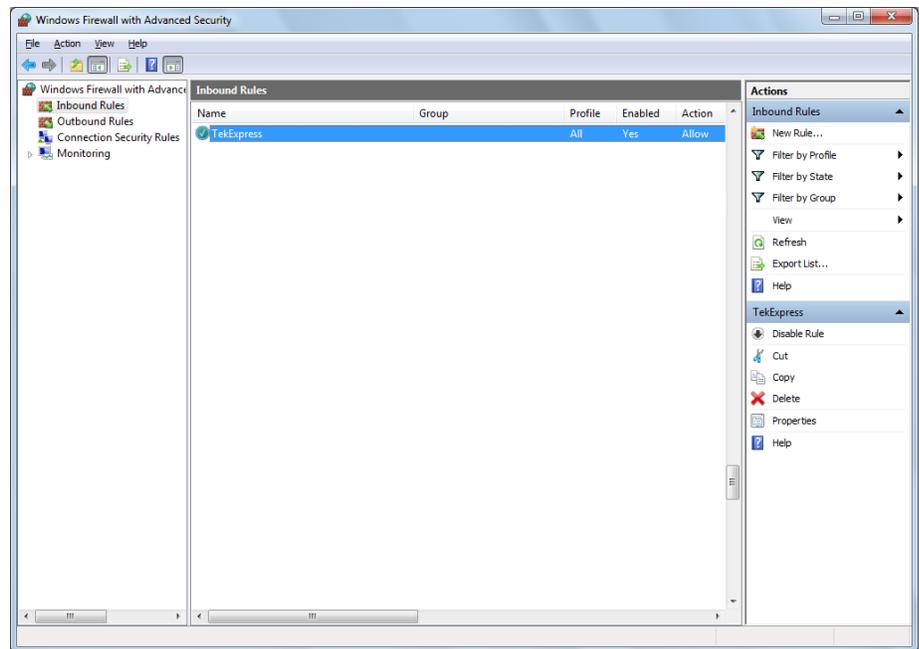


- TekVISA configuration**
1. Click **Start > All Programs > TekVISA > OpenChoice Instrument Manager**.

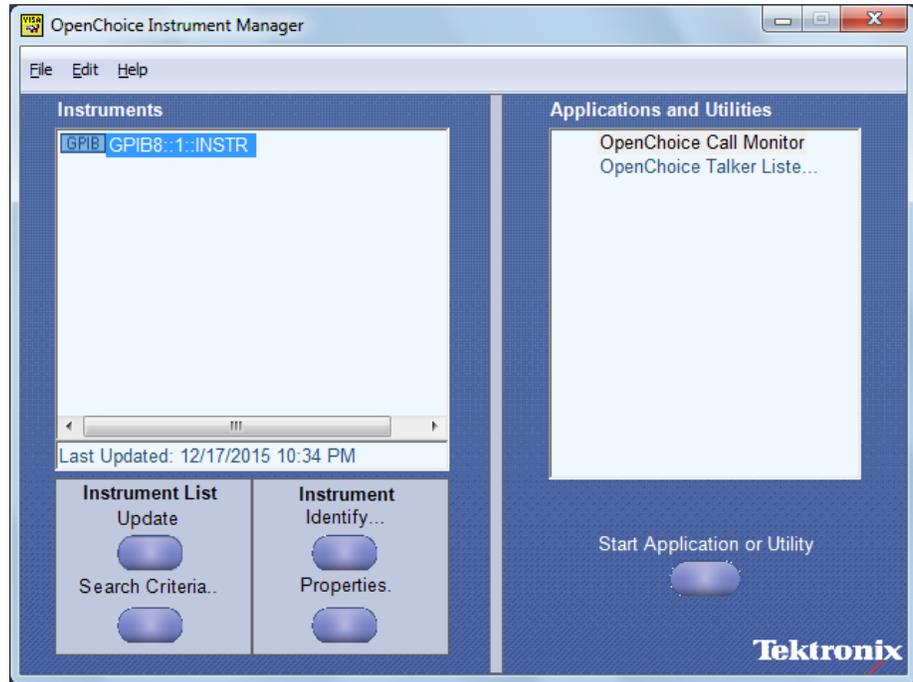


2. Click **Search Criteria**. In Search Criteria menu, click **LAN** to Turn-on. Select **Socket** from the drop-down list, enter the IP address of the

TekExpress device in **Hostname** and type **Port** as 5000. Click  to configure the IP address with Port.


Enter the Hostname as 127.0.0.1 if the TekVISA and TekExpress application are in the same system, else enter the IP address of the TekExpress application system.

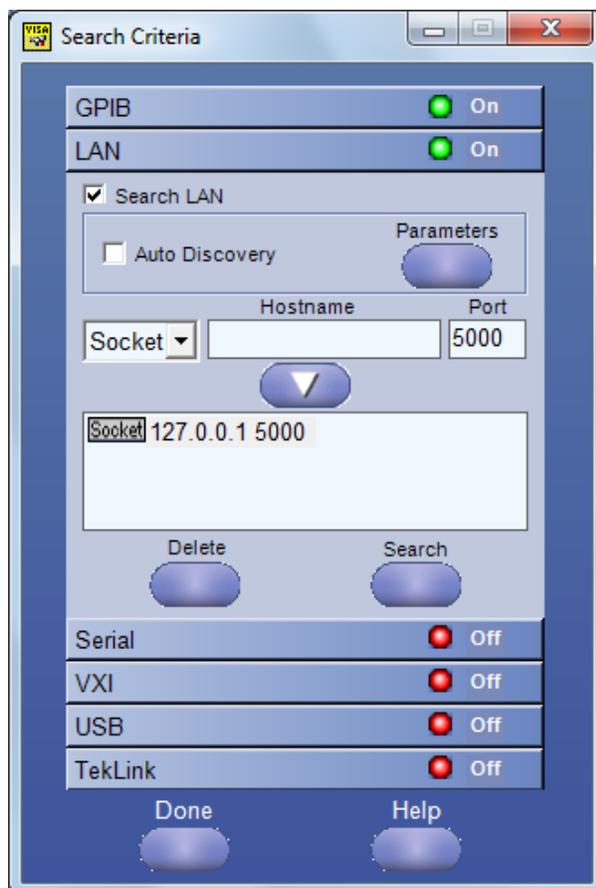

- Click **Search** to setup the TCPIP connection with the host. Check whether the TCPIP host name is displayed in **OpenChoice Instrument Manager > Instruments**.

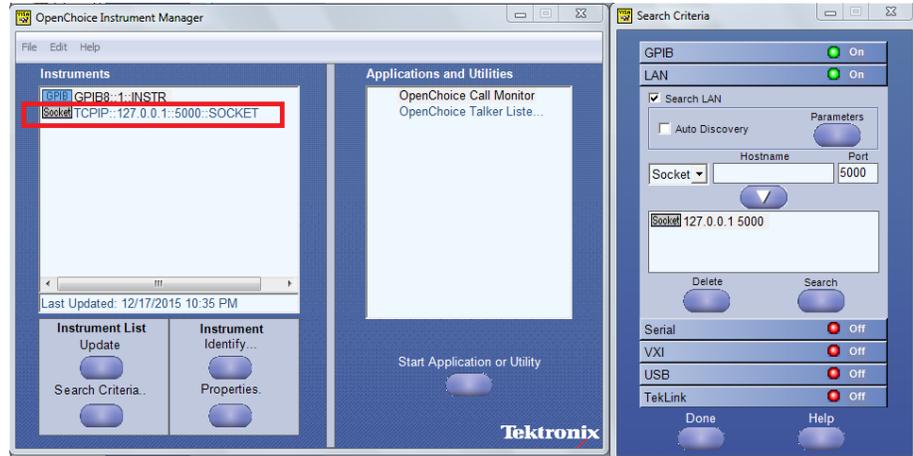

- Double-click **OpenChoice Talker Listener** and enter the Command ***IDN?** in command entry field and click **Query**. Check that the Operation is successful and Talker Listener Readout displays the Command / Data.

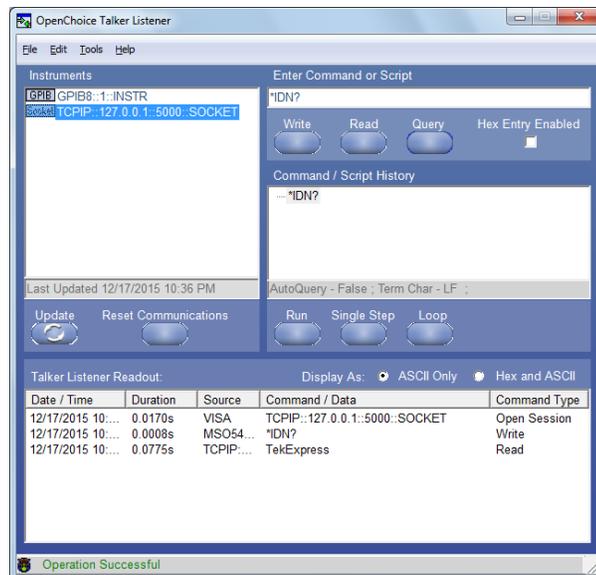

TEKEXP:*IDN?

This command queries the active TekExpress application name running on the oscilloscope.

Syntax TEKEXP:*IDN?\n

Inputs NA

Outputs Returns active TekExpress application name running on the oscilloscope.

TEKEXP:*OPC?

This command queries the execution status of the last executed command.

Syntax TEKEXP:*OPC?\n

Inputs NA

Outputs 0 - last command execution is not complete
 1 - last command execution is complete

TEKEXP:ACQUIRE_MODE

This command sets the acquire mode as live or pre-recorded.

Syntax `TEKEXP:ACQUIRE_MODE {LIVE | PRE-RECORDED}\n`

Inputs `{LIVE | PRE-RECORDED}`

Outputs `NA`

TEKEXP:ACQUIRE_MODE?

This command queries the acquire mode type.

Syntax `TEKEXP:ACQUIRE_MODE?\n`

Inputs `NA`

Outputs `{LIVE | PRE-RECORDED}`

TEKEXP:EXPORT

This command returns all the bytes of data to the specified file.

Syntax	Outputs
TEKEXP:EXPORT REPORT\n	Returns the report file in bytes
TEKEXP:EXPORT WFM,"<FileName>"\n	Returns the specified waveform file in bytes
TEKEXP:EXPORT IMAGE,"<FileName>"\n	Returns the specified image file in bytes

Inputs FileName - Specifies the file name

TEKEXP:INFO?

This command queries the information about the file(s).

Syntax	Outputs
TEKEXP:INFO? REPORT\n	<ReportFileSize>,"<ReportFileName.mht>"
TEKEXP:INFO? WFM \n	<WfmFile1Size>,"<WfmFileName1.wfm>";<WfmFile2Size>,"<WfmFileName2.wfm>";...
TEKEXP:INFO? IMAGE\n	<Image1FileSize>,"<Image1FileName>";<Image2FileSize>,"<Image2FileName>";...

TEKEXP:INSTRUMENT

This command sets the value for the selected instrument type.

Syntax `TEKEXP:INSTRUMENT "<InstrumentType>",<Value>"\n`

Inputs InstrumentType
 Value



TIP. Check Command parameters list section for InstrumentType and Value parameters.

Outputs NA

TEKEXP:INSTRUMENT?

This command queries the instrument selected for the specified instrument type.

Syntax `TEKEXP:INSTRUMENT? "<InstrumentType>"\n`

Inputs InstrumentType



TIP. Check Command parameters list section for InstrumentType parameters.

Outputs Returns the instrument selected for the specified instrument type

TEKEXP:LASTERROR?

This command queries the last error string occurred for the current TCP session. If there are no errors since startup, or since the last call to TEKEXP:LASTERROR?\n, this command returns an empty string.

Syntax TEKEXP:LASTERROR?\n

Inputs NA

Outputs <string>

TEKEXP:LIST?

This command queries the list of available device, suite, test, version or instrument.

Syntax	Outputs
TEKEXP:LIST? DEVICE\n	Returns the list of available device(s) as comma separated values.
TEKEXP:LIST? SUITE\n	Returns the list of available suite(s) as comma separated values.
TEKEXP:LIST? TEST\n	Returns the list of available test(s) as comma separated values.
TEKEXP:LIST? VERSION\n	Returns the list of available version(s) as comma separated values.
TEKEXP:LIST? INSTRUMENT,"<InstrumentType>\n	Returns the list of available instruments' for the given Instrument type as comma separated values.

NOTE. This command returns the list of items within double quotes (""). Iterate the receive procedure until the list ends with double quotes otherwise the next query commands won't work as expected.

Inputs InstrumentType



TIP. Check Command parameters list section for InstrumentType parameters.

TEKEXP:MODE

This command sets the execution mode as compliance or user defined.

Syntax TEKEXP:MODE {COMPLIANCE | USER-DEFINED}\n

Inputs {COMPLIANCE | USER-DEFINED}

Outputs NA

TEKEXP:MODE?

This command queries the execution mode type.

Syntax TEKEXP:MODE?\n

Inputs NA

Outputs {COMPLIANCE | USER-DEFINED}

TEKEXP:POPUP

This command sets the response to the active popup shown in the application.

Syntax TEKEXP:POPUP "<PopupResponse>"\n

Inputs PopupResponse

Outputs NA

TEKEXP:POPUP?

This command queries the active popup information shown in the application.

Syntax TEKEXP:POPUP?\n

Inputs NA

Outputs Returns the active popup information in the application.

TEKEXP:REPORT

This command generates the report for the current session.

Syntax `TEKEXP:REPORT GENERATE\n`

Inputs `GENERATE`

Outputs `NA`

TEKEXP:REPORT?

This command queries the queried header field value in the report.

Syntax `TEKEXP:REPORT? "<HeaderField>"\n`

Inputs `HeaderField` - Specifies to return the measured value for the indicated test.

 **TIP.** Check **Report** for *HeaderField* parameters.

Outputs Returns the queried header field value in the report

TEKEXP:RESULT?

This command queries the result available in report summary/details table.

Syntax	Outputs
TEKEXP:RESULT? "<TestName>"\n	Return Pass/Fail status of the test.
TEKEXP:RESULT? "<TestName>",<ColumnName>"\n	Returns all the row values of the specified column for the test.
TEKEXP:RESULT? "<TestName>",<ColumnName>",<RowNumber>\n	Returns the column value for the specified row number ¹

- Inputs**
- TestName - Specifies the name of the test for which to obtain the test result value.
 - ColumnName - Specifies the column name for the measurement
 - RowNumber - Specifies the row number of the measurement



TIP. Check **Results** panel for TestName, ColumnName, and RowNumber parameters.

¹ Row number starts from zero.

TEKEXP:SELECT

This command selects the device, suite, version, or test.

Syntax `TEKEXP:SELECT <string1>,<string2>,<string4>\n`
`TEKEXP:SELECT TEST,<string3>,<string4>\n`

Inputs `<string1> = {DEVICE | SUITE | VERSION}`
`<string2> = {DeviceName | SuiteName | VersionName}`
`<string3> = {"<TestName>" | ALL | REQUIRED }`
`<string4> = {TRUE | FALSE}`



TIP. Check Command parameters list section for DeviceName, SuiteName, VersionName, and TestName parameters.

Outputs NA

TEKEXP:SELECT?

This command queries the name of the selected device, suite, version, or test.

Syntax `TEKEXP:SELECT? {DEVICE | SUITE | TEST | VERSION}\n`

Inputs `{DEVICE | SUITE | TEST | VERSION}`

Outputs Returns the name of the selected device, suite, version, or test.

TEKEXP:SETUP

This command sets the value of the current setup.

Syntax	Outputs
TEKEXP:SETUP DEFAULT\n	Restore to default Setup
TEKEXP:SETUP OPEN,"<SessionName>"\n	Open the session
TEKEXP:SETUP SAVE\n	Saves the already existing modified session
TEKEXP:SETUP SAVE,"<SessionName>"\n	Save the session

Inputs SessionName - The name of the session

TEKEXP:STATE

This command sets the execution state of the application.

Syntax TEKEXP:STATE {RUN | STOP | PAUSE | RESUME}\n

Inputs {RUN | STOP | PAUSE | RESUME}

Outputs NA

TEKEXP:STATE?

This command queries the current setup state.

Syntax	Outputs
TEKEXP:STATE?	RUNNING PAUSED WAIT ERROR READY
TEKEXP:STATE? SETUP	SAVED NOT_SAVED

TEKEXP:VALUE

This command sets the value of parameters of type General, Acquire, Analyze, or DUTID.

Syntax

```

TEKEXP:VALUE GENERAL,"<ParameterName>","<Value>"\n
TEKEXP:VALUE ACQUIRE,"<TestName>","<AcquireType>","<ParameterName>","<Value>"\n
TEKEXP:VALUE ANALYZE,"<TestName>","<ParameterName>". "<Value>"\n
TEKEXP:VALUE DUTID,"<Value>"\n
TEKEXP:VALUE VERBOSE,{TRUE | FALSE}\n
TEKEXP:VALUE
WFMFILE,<Test_Name>,<Acquire_Type>,<FileName1$FileName2>\n
    
```

Inputs

- ParameterName - Specifies the parameter name
- TestName - Specifies the test name
- AcquireType - Specifies the acquire type
- Value - Specifies the value to set
- FileName1\$FileName2 - Specifies the waveform file name
- TRUE - Pop-ups are enabled
- FALSE - Pop-ups are disabled



TIP. Check Command parameters list section for ParameterName, AcquireType, and Value parameters.

Outputs NA

TEKEXP:VALUE?

This command queries the value of the parameter for type General, Acquire, Analyze, or DUTID.

Syntax	Outputs
TEKEXP:VALUE? GENERAL,"<ParameterName>"\n	Returns the value of Parameter for type GENERAL
TEKEXP:VALUE? ACQUIRE,"<TestName>", "<AcquireType>","<ParameterName>"\n	Returns the value of Parameter for type ACQUIRE
TEKEXP:VALUE? ANALYZE, "<TestName>","<ParameterName>"\n	Returns the value of Parameter for type ANALYZE
TEKEXP:VALUE? DUTID\n	Returns the DUTID value
TEKEXP:VALUE? WFMPFILE,<Test_Name>,<Acquire_Type>\n	Returns the waveform file name
TEKEXP:VALUE? VERBOSE	Returns the verbose mode type

Inputs ParameterName - Specifies the parameter name

TestName - Specifies the test name

AcquireType - Specifies the acquire type

TRUE - Pop-ups are enabled

FALSE - Pop-ups are disabled



TIP. Check Command parameters list section for ParameterName and AcquireType parameters.

Outputs Returns the value of Parameter for type GENERAL | ACQUIRE | ANALYZE | DUTID.

Command parameters

This section provides the parameters list for the SCPI commands.

Table 20: ParameterName and Value for DUT tab

Parameters	Description
DUT ID	Specifies the value parameters For DUTID, valid value is: Comment
Acquiremode	Specifies the acquire mode parameters <ul style="list-style-type: none"> ■ Acquire live waveforms ■ Use pre-recorded waveform files
Suite	<ul style="list-style-type: none"> ■ 1000BASE-T ■ 100BASE-T ■ 10BASE-T

Table 21: ParameterName and Value for Test Selection tab

Parameters	Description
Test Measurements for 1000BASE-T	<p>Specifies the test measurement name.</p> <p>Without Disturber</p> <ul style="list-style-type: none"> ■ TemplateA_Without_Disturber ■ TemplateB_Without_Disturber ■ TemplateC_Without_Disturber ■ TemplateD_Without_Disturber ■ TemplateF_Without_Disturber ■ TemplateH_Without_Disturber ■ PeakvoltageA_Without_Disturber ■ PeakvoltageB_Without_Disturber ■ PeakvoltageC_Without_Disturber ■ PeakvoltageD_Without_Disturber ■ DroopG_Without_Disturber ■ DroopJ_Without_Disturber ■ Transmitter Distortion <ul style="list-style-type: none"> ■ Distortion_Without_Disturber_With_TX_TCLK ■ Distortion_Without_Disturber_Without_TX_TCLK <p>With Disturber</p> <ul style="list-style-type: none"> ■ TemplateA_With_Disturber ■ TemplateB_With_Disturber ■ TemplateC_With_Disturber ■ TemplateD_With_Disturber ■ TemplateF_With_Disturber ■ TemplateH_With_Disturber ■ PeakvoltageA_With_Disturber ■ PeakvoltageB_With_Disturber ■ PeakvoltageC_With_Disturber ■ PeakvoltageD_With_Disturber ■ DroopG_With_Disturber ■ DroopJ_With_Disturber ■ Transmitter Distortion <ul style="list-style-type: none"> ■ Distortion_With_Disturber_With_TX_TCLK

Parameters	Description
	<ul style="list-style-type: none"> ■ Distortion_With_Disturber_Without_TX_TCLK <p>Transmitter Jitter</p> <ul style="list-style-type: none"> ■ MasterFiltered_Jitter_Without_TX_TCLK ■ MasterUnfiltered_Jitter_Without_TX_TCLK ■ SlaveFiltered_Jitter_Without_TX_TCLK ■ SlaveUnfiltered_Jitter_Without_TX_TCLK ■ MasterFiltered_Jitter_With_TX_TCLK ■ MasterUnfiltered_Jitter_With_TX_TCLK_TCLK ■ SlaveFiltered_Jitter_With_TX_TCLK ■ SlaveUnfiltered_Jitter_With_TX_TCLK <p>ReturnLoss_Transmitter CM Voltage</p>
Test Measurements for 100BASE-T	<p>Specifies the test measurement name.</p> <ul style="list-style-type: none"> ■ AOI_Template ■ Fall_Time_Pos ■ Fall_Time_Neg ■ Rise_Time_Pos ■ Rise_Time_Neg ■ RF_Symmetry_Pos ■ RF_Symmetry_Neg ■ Overshoot_Pos ■ Overshoot_Neg ■ Differential_Output_Voltage_Pos ■ Differential_Output_Voltage_Neg ■ Amplitude_Symmetry ■ Jitter ■ Duty Cycle Distortion ■ ReturnLoss_Transmitter ■ ReturnLoss_Receiver

Parameters	Description
Test Measurements for 10BASE-T	<p data-bbox="837 268 1214 300">Specifies the test measurement name.</p> <ul style="list-style-type: none"> <li data-bbox="837 321 992 352">■ Link Pulse <ul style="list-style-type: none"> <li data-bbox="886 373 1338 405">■ Link Pulse Load1 With Twisted Pair cable <li data-bbox="886 422 1338 453">■ Link Pulse Load2 With Twisted Pair cable <li data-bbox="886 470 1338 501">■ Link Pulse Load3 With Twisted Pair cable <li data-bbox="886 518 1370 550">■ Link Pulse Load1 Without Twisted Pair cable <li data-bbox="886 567 1370 598">■ Link Pulse Load2 Without Twisted Pair cable <li data-bbox="886 615 1370 646">■ Link Pulse Load3 Without Twisted Pair cable <li data-bbox="837 663 1062 695">■ Link Pulse Timing <ul style="list-style-type: none"> <li data-bbox="886 716 1409 747">■ Link Pulse Timing Load1 With Twisted Pair cable <li data-bbox="886 764 1409 795">■ Link Pulse Timing Load2 With Twisted Pair cable <li data-bbox="886 812 1409 844">■ Link Pulse Timing Load3 With Twisted Pair cable <li data-bbox="886 861 1442 892">■ Link Pulse Timing Load1 Without Twisted Pair cable <li data-bbox="886 909 1442 940">■ Link Pulse Timing Load2 Without Twisted Pair cable <li data-bbox="886 957 1442 989">■ Link Pulse Timing Load3 Without Twisted Pair cable <li data-bbox="837 1005 1073 1037">■ Differential Voltage <li data-bbox="837 1054 964 1085">■ TP_IDL <ul style="list-style-type: none"> <li data-bbox="886 1106 1312 1138">■ TP_IDL Load1 With Twisted Pair cable <li data-bbox="886 1155 1312 1186">■ TP_IDL Load2 With Twisted Pair cable <li data-bbox="886 1203 1312 1234">■ TP_IDL Load3 With Twisted Pair cable <li data-bbox="886 1251 1344 1283">■ TP_IDL Load1 Without Twisted Pair cable <li data-bbox="886 1299 1344 1331">■ TP_IDL Load2 Without Twisted Pair cable <li data-bbox="886 1348 1344 1379">■ TP_IDL Load3 Without Twisted Pair cable <li data-bbox="837 1396 938 1428">■ Jitter <ul style="list-style-type: none"> <li data-bbox="886 1449 1295 1480">■ Jitter Normal With Twisted Pair cable <li data-bbox="886 1497 1253 1528">■ Jitter 8.0 With Twisted Pair cable <li data-bbox="886 1545 1253 1577">■ Jitter 8.5 With Twisted Pair cable <li data-bbox="886 1593 1325 1625">■ Jitter Normal Without Twisted Pair cable <li data-bbox="886 1642 1286 1673">■ Jitter 8.0 Without Twisted Pair cable <li data-bbox="886 1690 1286 1722">■ Jitter 8.5 Without Twisted Pair cable <li data-bbox="837 1738 1016 1770">■ MAU Internal <li data-bbox="837 1787 1024 1818">■ MAU External <li data-bbox="837 1835 1101 1866">■ MAU Internal Inverted <li data-bbox="837 1883 1109 1915">■ MAU External Inverted <li data-bbox="837 1932 984 1963">■ Harmonic

Parameters	Description
	<ul style="list-style-type: none"> ■ Transmitter Return Loss ■ Receiver Return Loss ■ CM Voltage

Table 22: ParameterName and Value for Acquisitions

ParameterName	Value
Source 1	Specifies the test mode source channel for each listed signal. Valid values are CH1 to CH4.
Source 2	Specifies the test mode source channel for each listed signal. Valid values are CH1 to CH4.
Source 3	Specifies the test mode source channel for each listed signal. Valid values are CH1 to CH4.
Aux	TRUE or FALSE
Show Acquire Parameters	TRUE or FALSE

Table 23: ParameterName and Value for Preferences tab

Parameters	Description
Number of Runs	1 to 250
Acquire /Analyze each test	TRUE or FALSE
Action on Test measurement Failure	ON or OFF
Popup Settings	<ul style="list-style-type: none"> ■ Auto Close Warnings and Informations during Sequencing. Auto Close after (1 to 60) seconds ■ Auto Close Error Message during Sequencing Show in Reports. Auto Close after (1 to 60) seconds

Table 24: ParameterName and Value for Acquire (1000BASE-T)

Test Name	Acquire Type	Parameter Name	Values
TemplateA_Without_Disturber	TemplateA_Without_Disturber	AcquisitionAverage	16 to 256
TemplateB_Without_Disturber	TemplateB_Without_Disturber	TriggerLevel (A)	-5 V to 5 V
TemplateC_Without_Disturber	TemplateC_Without_Disturber	TriggerLevel (B)	-5 V to 5 V
TemplateD_Without_Disturber	TemplateD_Without_Disturber		
TemplateF_Without_Disturber	TemplateF_Without_Disturber		
TemplateH_Without_Disturber	TemplateH_Without_Disturber		
TemplateA_With_Disturber	TemplateA_With_Disturber		
TemplateB_With_Disturber	TemplateB_With_Disturber		
TemplateC_With_Disturber	TemplateC_With_Disturber		
TemplateD_With_Disturber	TemplateD_With_Disturber		
TemplateF_With_Disturber	TemplateF_With_Disturber		
TemplateH_With_Disturber	TemplateH_With_Disturber		

Test Name	Acquire Type	Parameter Name	Values
PeakVoltageA_Without_Disturber PeakVoltageB_Without_Disturber PeakVoltageC_Without_Disturber PeakVoltageD_Without_Disturber DroopG_Without_Disturber DroopJ_Without_Disturber PeakVoltageA_With_Disturber PeakVoltageB_With_Disturber PeakVoltageC_With_Disturber PeakVoltageD_With_Disturber DroopG_With_Disturber DroopJ_With_Disturber Distortion_Without_Disturber_With_TX_TCLK Distortion_With_Disturber_Without_TX_TCLK	PeakVoltageA_Without_Disturber PeakVoltageB_Without_Disturber PeakVoltageC_Without_Disturber PeakVoltageD_Without_Disturber DroopG_Without_Disturber DroopJ_Without_Disturber PeakVoltageA_With_Disturber PeakVoltageB_With_Disturber PeakVoltageC_With_Disturber PeakVoltageD_With_Disturber DroopG_With_Disturber DroopJ_With_Disturber Distortion_Without_Disturber_With_TX_TCLK Distortion_With_Disturber_Without_TX_TCLK	Acquisition Average	16 to 256
MasterFilter_Jitter_Without_TX_TCLK MasterUnfilter_Jitter_Without_TX_TCLK SlaveFilter_Jitter_Without_TX_TCLK SlaveUnfilter_Jitter_Without_TX_TCLK MasterFilter_Jitter_With_TX_TCLK MasterUnfilter_Jitter_With_TX_TCLK SlaveFilter_Jitter_With_TX_TCLK SlaveUnfilter_Jitter_With_TX_TCLK	MasterFilter_Jitter_Without_TX_TCLK MasterUnfilter_Jitter_Without_TX_TCLK SlaveFilter_Jitter_Without_TX_TCLK SlaveUnfilter_Jitter_Without_TX_TCLK MasterFilter_Jitter_With_TX_TCLK MasterUnfilter_Jitter_With_TX_TCLK SlaveFilter_Jitter_With_TX_TCLK SlaveUnfilter_Jitter_With_TX_TCLK	Measurement Duration Number Of Clock Edges	1 ms, 10 ms, 100 ms, 1000 ms 100000, 1000000, 10000000
Transmitter Return Loss	ReturnLoss_Transmitter	Acquisition Average	100 to 10000
CM Voltage	CM Voltage		

Table 25: ParameterName and Value for Acquire (100BASE-T)

Test Name	Acquire Type	Parameter Name	Values
AOI_Template	AOI_Template	Number of samples	5000 to 2147400000
Fall_Time_Pos Fall_Time_Neg Rise_Time_Pos Rise_Time_Neg RF_Symmetry_Pos RF Symmetry_Neg Overshoot_Pos Overshoot_Neg Differential_Output Voltage_Pos Difftrrential_Output_Voltage_Neg Amplitude_Symmetry	Fall_Time_Pos Fall_Time_Neg Rise_Time_Pos Rise_Time_Neg RF_Symmetry_Pos RF Symmetry_Neg Overshoot_Pos Overshoot_Neg Differential_Output Voltage_Pos Difftrrential_Output_Voltage_Neg Amplitude_Symmetry	Acquisition Type Number of Waveforms	Sample, Average 2 to 10000
Duty Cycle Distortion	Duty Cycle Distortion	Acquisition Type	Sample, Average
Transmitter Return Loss	ReturnLoss_Transmitter	Acquisition Average	100 to 10000
Receiver Return Loss	ReturnLoss_Receiver		

Table 26: ParameterName and Value for Acquire (10BASE-T)

Test Name	Acquire Type	Parameter Name	Values
Link Pulse Timing Load1 With Twisted Pair cable	Link Pulse Load1 With Twisted Pair cable	Number of Acquisitions	2 to 10000
Link Pulse Timing Load2 With Twisted Pair cable	Link Pulse Load2 With Twisted Pair cable	Number of Waveforms	1 to 10000
Link Pulse Timing Load3 With Twisted Pair cable	Link Pulse Load3 With Twisted Pair cable		
Link Pulse Timing Load1 Without Twisted Pair cable	Link Pulse Load1 Without Twisted Pair cable		
Link Pulse Timing Load2 Without Twisted Pair cable	Link Pulse Load2 Without Twisted Pair cable		
Link Pulse Timing Load3 Without Twisted Pair cable	Link Pulse Load3 Without Twisted Pair cable		
Differential Voltage	Differential Voltage	Acquisition Average	2 to 1000
		Acquisition Delay	1 to 10000 (Micro-seconds)
		Acquisition Type	<ul style="list-style-type: none"> ■ Sample ■ Average
TP_IDL Load1 With Twisted Pair cable	TP_IDL Load1 With Twisted Pair cable	Number of Acquisitions	2 to 10000
TP_IDL Load2 With Twisted Pair cable	TP_IDL Load2 With Twisted Pair cable	Number of Waveforms	1 to 10000
TP_IDL Load3 With Twisted Pair cable	TP_IDL Load3 With Twisted Pair cable		
TP_IDL Load1 Without Twisted Pair cable	TP_IDL Load1 Without Twisted Pair cable		
TP_IDL Load2 Without Twisted Pair cable	TP_IDL Load2 Without Twisted Pair cable		
TP_IDL Load3 Without Twisted Pair cable	TP_IDL Load3 Without Twisted Pair cable		
Jitter Normal With Twisted Pair Cable	Jitter Normal With Twisted Pair Cable	Number of Acquisitions	2 to 10000
Jitter 8.0 With Twisted Pair Cable	Jitter 8.0 With Twisted Pair Cable		
Jitter 8.5 With Twisted Pair Cable	Jitter 8.5 With Twisted Pair Cable		
Jitter Normal Without Twisted Pair Cable	Jitter Normal Without Twisted Pair Cable		
Jitter 8.0 Without Twisted Pair Cable	Jitter 8.0 Without Twisted Pair Cable		
Jitter 8.5 Without Twisted Pair Cable	Jitter 8.5 Without Twisted Pair Cable		
MAU Internal	MAU Internal		1000 to 10000
MAU External	MAU External		
MAU Internal Inverted	MAU Internal Inverted		
MAU External Inverted	MAU External Inverted		
Harmonic	Harmonic	Acquisition Delay	1 to 10000 (Micro-seconds)
		Math Average	2 to 10000
Transmitter Return Loss	Transmitter Return Loss	Acquisition Average	100 to 10000
Receiver Return Loss	Receiver Return Loss		
CM Voltage	CM Voltage		

Table 27: ParameterName and Value for Analyze (1000BASE-T)

Test Name	Acquisition Type	Parameter Name	Values
TemplateA_Without_Disturber TemplateB_Without_Disturber TemplateC_Without_Disturber TemplateD_Without_Disturber TemplateF_Without_Disturber TemplateH_Without_Disturber TemplateA_With_Disturber TemplateB_With_Disturber TemplateC_With_Disturber TemplateD_With_Disturber TemplateF_With_Disturber TemplateH_With_Disturber PeakVoltageA_Without_Disturber PeakVoltageB_Without_Disturber PeakVoltageC_Without_Disturber PeakVoltageD_Without_Disturber PeakVoltageA_With_Disturber PeakVoltageB_With_Disturber PeakVoltageC_With_Disturber PeakVoltageD_With_Disturber	TemplateA_Without_Disturber TemplateB_Without_Disturber TemplateC_Without_Disturber TemplateD_Without_Disturber TemplateF_Without_Disturber TemplateH_Without_Disturber TemplateA_With_Disturber TemplateB_With_Disturber TemplateC_With_Disturber TemplateD_With_Disturber TemplateF_With_Disturber TemplateH_With_Disturber PeakVoltageA_Without_Disturber PeakVoltageB_Without_Disturber PeakVoltageC_Without_Disturber PeakVoltageD_Without_Disturber PeakVoltageA_With_Disturber PeakVoltageB_With_Disturber PeakVoltageC_With_Disturber PeakVoltageD_With_Disturber	External Filter	<ul style="list-style-type: none"> ■ Include ■ Exclude
Distortion_Without_Disturber_Without_TX_T CLK Distortion_With_Disturber_Without_TX_TCL K	Distortion_Without_Disturber_Without_TX_T CLK Distortion_With_Disturber_Without_TX_TCL K	LP Filter	<ul style="list-style-type: none"> ■ Include ■ Exclude
		Hi Resolution	16 to 64
MasterFilter_Jitter_Without_TX_TCLK MasterUnfilter_Jitter_Without_TX_TCLK SlaveFilter_Jitter_Without_TX_TCLK SlaveUnfilter_Jitter_Without_TX_TCLK MasterFilter_Jitter_With_TX_TCLK MasterUnfilter_Jitter_With_TX_TCLK SlaveFilter_Jitter_With_TX_TCLK SlaveUnfilter_Jitter_With_TX_TCLK	MasterFilter_Jitter_Without_TX_TCLK MasterUnfilter_Jitter_Without_TX_TCLK SlaveFilter_Jitter_Without_TX_TCLK SlaveUnfilter_Jitter_Without_TX_TCLK MasterFilter_Jitter_With_TX_TCLK MasterUnfilter_Jitter_With_TX_TCLK SlaveFilter_Jitter_With_TX_TCLK SlaveUnfilter_Jitter_With_TX_TCLK	Clock Edge	<ul style="list-style-type: none"> ■ RISE ■ FALL
		Hysteresis	0% to 10%
Transmitter Return Loss	ReturnLoss_Transmitter	Smoothing Averages	1 to 10
		Load (Ohm)	<ul style="list-style-type: none"> ■ 85, 100, 115 ■ 100
CM Voltage	CM Voltage	Filter Type	<ul style="list-style-type: none"> ■ None ■ 1 MHz (High Pass) ■ 100 MHz (Low Pass) ■ 1-100 MHz (Base band)

Table 28: ParameterName and Value for Analyze (100BASE-T)

Test Name	Acquisition Type	Parameter Name	Values
Transmitter Return Loss Receiver Return Loss	Transmitter Return Loss Receiver Return Loss	Smoothing Averages	1 to 10
		Load(Ohm)	<ul style="list-style-type: none"> ■ 85, 100, 115 ■ 100
AOI_Template	AOI_Template	Fail Threshold	1 to 5000
Jitter Pos Jitter Neg	Jitter Pos Jitter Neg	Measurement Type	<ul style="list-style-type: none"> ■ Tie ■ Histogram

Table 29: ParameterName and Value for Analyze (10BASE-T)

Test Name	Acquire Type	Parameter Name	Values
Link Pulse Load1 With Twisted Pair cable Link Pulse Load2 With Twisted Pair cable Link Pulse Load3 With Twisted Pair cable Link Pulse Load1 Without Twisted Pair cable Link Pulse Load2 Without Twisted Pair cable Link Pulse Load3 Without Twisted Pair cable TP_IDL Load1 With Twisted Pair cable TP_IDL Load2 With Twisted Pair cable TP_IDL Load3 With Twisted Pair cable TP_IDL Load1 Without Twisted Pair cable TP_IDL Load2 Without Twisted Pair cable TP_IDL Load3 Without Twisted Pair cable MAU Internal MAU External MAU Internal Inverted MAU External Inverted	Link Pulse Load1 With Twisted Pair cable Link Pulse Load2 With Twisted Pair cable Link Pulse Load3 With Twisted Pair cable Link Pulse Load1 Without Twisted Pair cable Link Pulse Load2 Without Twisted Pair cable Link Pulse Load3 Without Twisted Pair cable TP_IDL Load1 With Twisted Pair cable TP_IDL Load2 With Twisted Pair cable TP_IDL Load3 With Twisted Pair cable TP_IDL Load1 Without Twisted Pair cable TP_IDL Load2 Without Twisted Pair cable TP_IDL Load3 Without Twisted Pair cable MAU Internal MAU External MAU Internal Inverted MAU External Inverted	Fail Threshold	1 to 5000
Link Pulse Timing Load1 With Twisted Pair cable Link Pulse Timing Load2 With Twisted Pair cable Link Pulse Timing Load3 With Twisted Pair cable Link Pulse Timing Load1 Without Twisted Pair cable Link Pulse Timing Load2 Without Twisted Pair cable Link Pulse Timing Load3 Without Twisted Pair cable	Link Pulse Timing Load1 With Twisted Pair cable Link Pulse Timing Load2 With Twisted Pair cable Link Pulse Timing Load3 With Twisted Pair cable Link Pulse Timing Load1 Without Twisted Pair cable Link Pulse Timing Load2 Without Twisted Pair cable Link Pulse Timing Load3 Without Twisted Pair cable		
Jitter Normal with Twisted Pair cable Jitter 8.0 with Twisted Pair cable Jitter 8.5 with Twisted Pair cable Jitter Normal without Twisted Pair cable Jitter 8.0 without Twisted Pair cable Jitter 8.5 without Twisted Pair cable	Jitter Normal with Twisted Pair cable Jitter 8.0 with Twisted Pair cable Jitter 8.5 with Twisted Pair cable Jitter Normal without Twisted Pair cable Jitter 8.0 without Twisted Pair cable Jitter 8.5 without Twisted Pair cable	MAU Type	<ul style="list-style-type: none"> ■ Internal ■ External

Test Name	Acquire Type	Parameter Name	Values
Differential Voltage	Differential Voltage	Peak	<ul style="list-style-type: none"> ■ Min ■ MinMax
Transmitter Return Loss Receiver Return Loss	Transmitter Return Loss Receiver Return Loss	Smoothing Average Load (Ohm)	1 to 10 <ul style="list-style-type: none"> ■ 85, 100, 111 ■ 100

ParameterName and Value for General, Acquire and Analyze: Specifies the ParameterName and Value for General, Acquire, and Analyze.

Table 30: ParameterName and Value for General

ParameterName	Value
Report Update Mode	<ul style="list-style-type: none"> ■ New ■ Append ■ Replace ■ in previous run, current session ■ in any run, any session
Report name	X:\Ethernet\Reports\DUT001.mht
Auto increment report name if duplicate	<ul style="list-style-type: none"> ■ Included ■ Excluded
Create report automatically at the end of the run	<ul style="list-style-type: none"> ■ Included ■ Excluded
Include pass/fail results Summary	<ul style="list-style-type: none"> ■ Included ■ Excluded
Include detailed results	<ul style="list-style-type: none"> ■ Included ■ Excluded
Include plot images	<ul style="list-style-type: none"> ■ Included ■ Excluded
Include setup configuration	<ul style="list-style-type: none"> ■ Included ■ Excluded
Include complete configuration	<ul style="list-style-type: none"> ■ Included ■ Excluded

ParameterName	Value
Include user comments	<ul style="list-style-type: none"> ■ Included ■ Excluded
View report after generating	<ul style="list-style-type: none"> ■ Included ■ Excluded
Save As type	<ul style="list-style-type: none"> ■ Web Archive (*.mht;*.mhtml) ■ PDF (*.pdf) ■ CSV (*.csv;)

Examples

This section provides the examples for the SCPI commands.

Example	Description
TEKEXP:*IDN?	It returns the active TekExpress application name running on the scope.
TEKEXP:*OPC?	It returns the last command execution status.
TEKEXP:ACQUIRE_MODE PRE-RECORDED	It sets the acquire mode as pre-recorded.
TEKEXP:ACQUIRE_MODE?	It returns LIVE when acquire mode is set to live.
TEKEXP:EXPORT REPORT	It returns the report file in bytes. This can be written into another file for further analysis.
TEKEXP:INFO? REPORT	It returns "100,"ReportFileName.mht"", when 100 is the filesize in bytes for the filename ReportFileName.
TEKEXP:INFO? WFM	It returns "100,"WfmFileName1.wfm""; "200,"WfmFileName2.wfm"" when 100 is the filesize in bytes for the filename WfmFileName1.wfm and 200 is the filesize in bytes for the filename WfmFileName2.wfm.
TEKEXP:INSTRUMENT "Real Time Scope",MSO58 (GPIB8::1::INSTR)	It sets the instrument value as MSO58 (GPIB8::1::INSTR) for the selected instrument type Real Time Scope.
TEKEXP:INSTRUMENT? "Real Time Scope"	It returns "MSO58 (GPIB8::1::INSTR)", when MSO58 (GPIB8::1::INSTR)" is the selected instrument for the instrument type Real Time Scope.
TEKEXP:LASTERROR?	It returns ERROR: INSTRUMENT_NOT_FOUND, when no instrument is found.
TEKEXP:LIST? DEVICE	It returns "Ethernet Tx" when Ethernet Tx application is the available device.
TEKEXP:LIST? INSTRUMENT,"Real Time Scope"	It returns "MSO58 (GPIB8::1::INSTR),MSO64 (TCPIP::134.64.248.91::INSTR)" when MSO58 (GPIB8::1::INSTR), MSO64 (TCPIP::134.64.248.91::INSTR) are the list of available instruments.

Example	Description
TEKEXP:MODE COMPLIANCE	It sets the execution mode as compliance.
TEKEXP:MODE?	It returns COMPLIANCE when the execution mode is compliance.
TEKEXP:POPOP "OK"	It sets OK as the response to active popup in the application.
TEKEXP:POPOP?	It returns "OK", when OK is the active popup information shown in the application.
TEKEXP:REPORT GENERATE	It generates report for the current session.
TEKEXP:REPORT? "Scope Model"	It returns "MSO58" when MSO58 is the scope model.
TEKEXP:REPORT? "DUT ID"	It returns "DUT001" when DNI_DUT001 is the DUT ID.
TEKEXP:RESULT? "PeakVoltageD_Without_Disturber"	It returns Pass, then the test result is Pass.
TEKEXP:RESULT? "PeakVoltageD_Without_Disturber", "Margin"	It returns list of values then that is 'Margin' column data.
TEKEXP:RESULT? "PeakVoltageD_Without_Disturber", "Units",0	It returns the unit of the first row of result.
TEKEXP:SELECT DEVICE,"TekExpress Ethernet"	It selects device "TekExpress Ethernet".
TEKEXP:SELECT TEST,"TemplateA_Without_Disturber", TRUE	It selects "TemplateA_Without_Disturber" measurement.
TEKEXP:SETUP DEFAULT	It restores the application to default setup.

References

1000BASE-T

1000BASE-T template

This measurement verifies that the transmitter output fits the time domains transmit templates.

Reference:

Subclause 40.6.1.2.3 of IEEE standard 802.3-2015

Description

According to standard, the Test Mode 1 signal from the DUT needs to be normalized. This should be compared to the differential output templates shown in Figure 40-26 of the standard. The normalization factors to be applied to various points:

For Point A: Normalization with the peak voltage at point A.

For Point B: Normalization with the negative of peak voltage at point A.

For Point C: Normalization with 0.5 times the peak voltage at point A.

For Point D: Normalization with the negative of 0.5 times the peak voltage at point A.

For Point F and H: The waveform around points F and H are compared to time domain transmit template 2 after the following normalization factors are applied:

Normalization with the peak voltage at point F.

Normalization with the peak voltage at point H.

According to standard, the waveform can be shifted in time to fit the template.

1000BASE-T peak voltage This measurement verifies the transmitter output levels.

Reference:

Subclause 40.6.1.2.1 of IEEE standard 802.3-2015

Description

According to standard, magnitude of peak differential output voltage measure at points A and B should be between 670 and 820 mV. Also, these conditions should be met:

$$\text{abs} \left(\frac{|PeakVoltageB| - \left(\frac{|PeakVoltageB| + |PeakVoltageA|}{2} \right)}{\frac{|PeakVoltageB| + |PeakVoltageA|}{2}} \right) < 1\%$$

$$\frac{|PeakVoltageC|}{|PeakVoltageD|} < 2\% \text{ of } 0.5 \text{ times } \frac{|PeakVoltageA| + |PeakVoltageB|}{2}$$

1000BASE-T droop This measurement verifies that the transmitter output level does not decay faster than the maximum specified rate.

Reference:

Subclause 40.6.1.2.2 of IEEE standard 802.3-2015

Description

According to standard, the Point G and J are exactly 500 ns from Points F and H respectively. The magnitude of voltage at Point G should be greater than 73.1% magnitude of voltage at Point F and magnitude of voltage at Point J should be greater than 73.1% magnitude of voltage at Point H.

1000BASE-T jitter (with TX_TCLK)

This measurement verifies that the transmitter output level does not reduce faster than the maximum specified rate.

Reference:

Subclause 40.6.1.2.5 of IEEE standard 802.3-2015

Description

Jitter Master Unfiltered — According to the standard, the peak-to-peak value of jitter waveform on MASTER TX_TCLK relative to unfiltered reference should be less than 1.4 ns.

Jitter Master Filtered — According to the standard, the peak-to-peak value of jitter waveform on MASTER TX_TCLK when filtered by a high pass filter, with the transfer function below + JTx out of Data related to the corresponding edge of MASTER TX_TCLK should be less than 0.3 ns.

$$H_{jf1}(f) = \frac{jf}{jf + 5000} \text{ f in Hz}$$

Jitter Slave Unfiltered — According to the standard, the peak-to-peak value of jitter waveform on SLAVE TX_TCLK relative to unfiltered reference should be less than 1.4 ns.

Jitter Slave Filtered — According to the standard, the peak-to-peak value of jitter waveform on SLAVE TX_TCLK when filtered by a high pass filter, $H_{jf2}(f)$ with the transfer function below + JTx out of data related to the corresponding edge of SLAVE TX_TCLK should be less than 0.4 ns + peak-to-peak value of jitter waveform on MASTER TX_TCLK when filtered by a high pass filter, $H_{jf1}(f)$.

$$H_{jF2}(f) = \frac{jf}{jf + 32000} \text{ f in Hz}$$

NOTE. *J denotes the square root of -1.*

1000BASE-T jitter (without TX_TCLK)

To provide an analysis of the Transmitter Timing Jitter test method defined in Clause 40.6.1.2.5 of IEEE 802.3-2002, and to propose an alternative method that may be used in cases where a device does not provide access to the TX_TCLK signal.

Reference:

1. IEEE standard 802.3-2015, subclause 40.6.1.1.1 – Test channel
2. Ibid., subclause 40.6.1.1.2, figure 40-20 – Test modes
3. Ibid., subclause 40.6.1.1.3, figure 40-25 – Test fixtures
4. Ibid., subclause 40.6.1.2.5 – Transmitter Timing Jitter
5. Test suite appendix 40.6.A – 1000BASE-T transmitter test fixtures

NOTE. *The references mentioned here are proposed, and not part of a standard. This is an alternate test method for jitter measurement being proposed, when TX_TCLK is not accessible. This is an informal test method.*

Transmitting Timing Jitter (Alternate Method):

Jitter Master Unfiltered — The peak-to-peak value of jitter waveform on data in Test Mode 2 relative to unjittered reference should be less than 1.4 ns (pass).

The peak-to-peak value of jitter waveform on data in Test Mode 2 relative to unjittered reference should be more than 1.4 ns (inconclusive).

Jitter Master Filtered — The peak-to-peak value of jitter waveform on data in Test Mode 2 relative to unjittered reference, when filtered by a high pass filter, $H_{jf1}(f)$ with the transfer function below should be less than 0.3 ns (pass).

The peak-to-peak value of jitter waveform on data in Test Mode 2 relative to unjittered reference, when filtered by a high pass filter, $H_{jf1}(f)$ with the transfer function below should be more than 0.3 ns (inconclusive).

$$H_{jf1}(f) = \frac{jf}{jf + 5000} \quad f \text{ in Hz}$$

Jitter Slave Unfiltered — The difference between the peak-to-peak value of jitter waveform on data in Test Mode 3 relative to unjittered reference and the peak-to-peak value of jitter waveform on data in Test Mode 2 relative to unjittered reference should be less than 1.4 ns (pass).

The difference between the peak-to-peak value of jitter waveform on data in Test Mode 3 relative to unjittered reference and the peak-to-peak value of jitter waveform on data in Test Mode 2 relative to unjittered reference should be more than 1.4 ns (fail).

Jitter Slave Filtered — The difference between the peak-to-peak value of jitter waveform on data in Test Mode 3 relative to unjittered reference, when filtered by a high pass filter,

$H_{jfl}(f)$ with the transfer function below, and the peak-to-peak value of jitter waveform on data in Test Mode 2 relative to unjittered reference, when filtered by a high pass filter,

$H_{jfl}(f)$ with the transfer function below, should be less than 0.4 ns (pass).

The difference between the peak-to-peak value of jitter waveform on data in Test Mode 3 relative to unjittered reference, when filtered by a high pass filter,

$H_{jfl}(f)$ with the transfer function below, and the peak-to-peak value of jitter waveform on data in Test Mode 2 relative to unjittered reference, when filtered by a high pass filter,

$H_{jfl}(f)$ with the transfer function below, should be more than 0.4 ns (fail).

$$H_{jfl}(f) = \frac{jf}{jf + 5000} \text{ f in Hz}$$

$$H_{jF2}(f) = \frac{jf}{jf + 32000} \text{ f in Hz}$$

1000BASE-T distortion

This measurement verifies that the peak transmitter distortion of the DUT is less than 10 mV for at least 60% of the UI within the eye-opening.

Reference:

IEEE standard 802.3-2015, sub clause 40.6.1.2.4

PMA Test suite, version 2.5, Test 40.1.6

Description

The peak distortion of the Test Mode 4 differential signal, when sampled with the symbol rate TX_TCLK at an arbitrary phase and processing this block of any 2047 consecutive samples, should be less than 10 mV.

1000BASE-T return loss This measurement verifies that the Return Loss of the Device Under Test (DUT) is above the conformance limit.

Reference:

Subclause 40.8.3.1 of IEEE standard 802.3-2015

Description

At least 16 dB over the frequency range of 1.0 MHz to 40 MHz and at least $10 - 20 \log_{10} (f / 80)$ dB over the frequency range 40 MHz to 100 MHz (f in MHz).

1000BASE-T CM voltage This measurement verifies that the common-mode voltage of the DUT is within the conformance limits.

Reference:

Subclause 40.8.3.3 of IEEE standard 802.3-2015

Description

The magnitude of the total common-mode output voltage, E_{cm_out} , on any transmit circuit, shall be less than 50 mV peak-to-peak when transmitting data at frequencies above 1 MHz.

100BASE-T

100BASE-T template This measurement verifies that the transmitter output fits the time domain transmit template.

Reference:

Annex J of ANSIX3.263-1995

Description

According to standard, Active Output Interface (AOI) transmitting scrambled Halt Line State should fit in the template.

100BASE-T differential output voltage

This measurement verifies that the differential output voltage of the device under test (DUT) is within the conformance limits.

Reference:

Subclause 9.1.2.2 of ANSI X3.263-1995

Description

According to standard, differential output voltage (V_{out}) should lie in the range of 950 mV to 1050 mV in both positive and negative excursion.

100BASE-T signal amplitude symmetry

This measurement verifies that the signal amplitude symmetry of the device under test (DUT) is within the conformance limits.

Reference:

Subclause 9.1.4 of ANSI X3.263-1995

Description

The ratio of the $+V_{out}$ magnitude to $-V_{out}$ magnitude shall be between the limits:

$$0.98 \leq |V_{out}| / |-V_{out}| \leq 1.02$$

100BASE-T rise and fall time

This measurement verifies that the response times of the DUT are within the conformance limits.

Reference:

Subclause 9.1.6 of ANSI X3.263-1995

Description

Active Output Interface (AOI) rise and fall time shall be in the range of 3.0 ns and 5.0 ns. Rise and fall times are defined as time difference between 10% and 90% voltage levels. Both positive and negative rise/fall times should be validated.

The difference between the maximum and the minimum of all measured rise and fall times should be less than 0.5 ns.

100BASE-T waveform overshoot This measurement verifies that the waveform overshoot of the DUT is below the conformance limit.

Reference:

Subclause 9.1.3 of ANSI X3.263-1995

Description

According to standard, Overshoot is the percentage excursion of the differential signal transition beyond V_{out} . Differential signal overshoot should not exceed 5%. Both positive and negative overshoot are to be measured.

100BASE-T Jitter This measurement verifies the jitter of the DUT is within the conformance limits.

Reference:

Subclause 9.1.9 of ANSI X3.263-1995

Description

The transmitter output jitter when measured at the output of the twisted-pair model should lie within ± 5.5 ns. As per B.4.3.3 Note for 14.3.1.2.3 of IEEE standard 802.3-2015, failure of this test does not demonstrate noncompliance.

The transmitter output jitter when measured without the twisted-pair model should lie within ± 8.0 ns.

100BASE-T return loss This measurement verifies the return loss at the transmitter or receiver of the device under test (DUT) is above the conformance limit.

Reference:

Subclause 9.1.5 and 9.2.2 of ANSI X3.263-1995

Description

Greater than 16 dB from 2 MHz to 30 MHz.

Greater than $(16 - 20 \log(f/30 \text{ MHz}))$ dB from 30 MHz to 60 MHz.

Greater than 10 dB from 60 MHz to 80 MHz.

100BASE-T duty cycle distortion This measurement verifies that the duty cycle distortion of the DUT is below the conformance limit.

Reference:

Subclause 9.1.3 of ANSI X3.263-1995

Description

According to standard, duty cycle distortion should be measured at the 50% voltage points on rise and fall transitions of the differential output waveform and should not exceed ± 0.25 ns.

10BASE-T

10BASE-T MAU Ext This measurement verifies that the transmitter output equalization meets standard specifications.

Reference:

Subclause 14.3.1.2.1 of IEEE standard 802.3-2015

Description

According to standard, the transmitter waveform should lie within the template (Normal and Inverted) for all data sequences at the twisted-pair model's output with 100 Ohm termination.

10BASE-T MAU Int This measurement verifies that the transmitter output equalization meets standard specifications.

Reference:

Subclause 14.3.1.2.1 of IEEE standard 802.3-2015

Description

According to standard, the transmitter waveform should lie within the template (Normal and Inverted) for all data sequences at the twisted-pair model's output with 100 Ohm termination.

10BASE-T TP_IDL This measurement verifies that the transmitter functions properly after a transition to the idle state.

Reference:

Subclause 14.3.1.2.1 of IEEE standard 802.3-2015

Description

According to standard, the TP_IDL pulse should lie within the template. This test shall be done across each of the specified test loading Load 1, Load 2, and Load 3 with and without twisted-pair model.

10BASE-T link pulse This measurement verifies that the link test pulse waveforms meet specification.

Reference:

Subclause 14.3.1.2.1 of IEEE standard 802.3-2015

Description

According to standard, the link test pulse should lie within the template. This test shall be done across each of the specified test loading Load 1, Load 2, and Load 3 with and without twisted-pair model.

10BASE-T differential voltage This measurement verifies that the differential voltage of the DUT is within the conformance limits.

Reference:

Subclause 14.3.1.2.1 of IEEE standard 802.3-2015

Description

Peak differential voltage of transmitter waveform when terminated with a 100 Ohm resistor should lie between 2.2 V and 2.8 V for all data sequences.

10BASE-T harmonic This measurement verifies that the harmonic content of the DUT is within the conformance limits.

Reference:

Subclause 14.3.1.2.1 of IEEE standard 802.3-2015

Description

Harmonic test is done when the DO circuit is driven by all ones. Each harmonic measured at the output of the transmitter shall be at least 27 dB below the fundamental.

-
- 10BASE-T return loss** This measurement verifies the return loss at the transmitter or receiver of the device under test (DUT) is above the conformance limit.
- Reference**
Subclause 14.3.1.2.2 of IEEE standard 802.3-2015 ab
- Description**
At least 15 dB over the frequency range of 5.0 to 10 MHz.
- 10BASE-T jitter** This measurement verifies the jitter of the DUT is within the conformance limits.
- Reference:**
Subclause 14.3.1.2.3 of IEEE standard 802.3-2015
Annexure B.4.3.2 Note for 14.3.1.2.3 of IEEE standard 802.3-2015
- Description**
The transmitter output jitter when measured at the output of the twisted-pair model should lie within ± 5.5 ns. As per B.4.3.3 Note for 14.3.1.2.3 of IEEE standard 802.3-2015, failure of this test does not demonstrate noncompliance.
The transmitter output jitter when measured without the twisted-pair model should lie within ± 8.0 ns.
- 10BASE-T CM Voltage** This measurement verifies that the common-mode voltage at the transmitter or receiver of the device under test (DUT) is above the conformance limit.
- Reference:**
Subclause 14.3.1.2.5 of IEEE standard 802.3-2015
- Description**
At least 15 dB over the frequency range of 5.0 to 10 MHz.

Index

A

- Acquire parameters
 - including in test reports, 55
 - viewing in reports, 57
- Acquisition tab, 24
- Analysis options, 48
- Application directories, 7
- Application panels overview, 12
- Application version (show), 9

B

- Button
 - calibration, 24
 - clear log, 49
 - save, 49
 - view optical modules, 24

C

- Calibration button, 24
- Clearing test results, 83
- Compensate the signal path, 82
- Configuration tab, 20
- Configuration tab parameter
 - instruments detected, 25
- Configuration tab parameters
 - global settings, 25
- Connected instruments
 - searching for, 17
- Connection requirements, 59
- Create a test setup from default settings, 86
- Create a test setup using an existing one, 86

D

- DUT ID, 22
- DUT parameter
 - device, 22
 - device profile, 22
 - optical module settings, 22
 - optical power, 22
- DUT type

- device, 22
- DUT-instrument setup, 59

E

- Email notification and setup, 19
- Equipment setup, 59
- Extensions, file names, 8

F

- File name extensions, 8

G

- GPIO, 17

I

- Installing the software
 - switch matrix application, 7
- Instrument-DUT setup, 59
- Instruments
 - discovering connected, 17
 - viewing connected, 17
- Instruments and accessories required, 6
- Instruments detected, 25

K

- Keep on top, 11

L

- LAN, 17
- License agreement (show), 9
- Live waveforms, 22
- Loading a test setup, 86
- Log view
 - save file, 49

M

- Menus

- Options, 16
- Preferences, 83

Minimum system requirements, 5

My TekExpress folder

- files stored in, 51

N

Names, file extensions, 8

Non-VISA, 17

O

Opening a saved test setup, 86

Options menu

- Instrument control settings, 17
- keep on top, 11

Oscilloscope compensation, 82

P

Panels, 12

Pattern, 22

Pattern type, 22

Preferences menu, 50

Preferences tab

- send an Email, 48
- setup panel, 48

R

Recalling a test setup, 86

Report contents, 57

Report name, 55

Report options, 55

Report sections, 57

Reports

- receiving in email notifications, 19

Reports panel, 12, 54

Resource file, 11

Results panel

- summary of test results, 50
- test name, 50

Results Panel, 83

Running tests, 83

S

Save log file, 49

Saving tests, 51

Schematic button (DUT-instrument setup), 59

SCPI commands

- TEKEXP:*IDN?, 95
- TEKEXP:*OPC?, 95
- TEKEXP:ACQUIRE_MODE, 96
- TEKEXP:ACQUIRE_MODE?, 96
- TEKEXP:EXPORT, 97
- TEKEXP:INFO?, 97
- TEKEXP:INSTRUMENT, 98
- TEKEXP:INSTRUMENT?, 98
- TEKEXP:LASTERROR?, 99
- TEKEXP:LIST?, 99
- TEKEXP:MODE, 100
- TEKEXP:MODE?, 100
- TEKEXP:POPUP, 101
- TEKEXP:POPUP?, 101
- TEKEXP:REPORT, 102
- TEKEXP:REPORT?, 102
- TEKEXP:RESULT?, 103
- TEKEXP:SELECT, 104
- TEKEXP:SELECT?, 104
- TEKEXP:SETUP, 105
- TEKEXP:STATE, 105
- TEKEXP:STATE?, 106
- TEKEXP:VALUE, 106
- TEKEXP:VALUE?, 107

Search for connected instruments, 17

Selecting test report contents, 55

Selecting tests, 23

Serial, 17

Session folders and files, 51

Setting up equipment, 59

Setup

- acquisition tab, 24

Setup files, 85

Setup panel

- DUT parameter, 20
- preferences tab, 20
- test selection, 20

Show acquire parameters, 24

Signal conditioning

- bandwidth, 22
- filter, 22

Software installation
 switch matrix application, 7
Source, 22
Status panel
 log view, 49
 message history, 49
 test status tab, 49
System requirements, 5

T

Tek Link, 17
Test Name, 24
Test reports, 57
Test results
 send by email, 19
Test Results
 clearing displayed, 83
Test selection
 Ethernet, 23
 optical tests, 23
 test description, 23
Test selection controls, 23
Test setup files, 51, 85
Test setups
 load, 86
 open, 86
 recalling, 86
Test status

 acquire status, 49
 analysis status, 49
 auto scroll, 49
Test-related files, 51
Tests
 running, 83
 selecting, 23

U

USB, 17
User Comments
 including in reports, 56

V

View a report, 57
View application license agreement, 9
View application software version, 9
View optical modules button, 24
VXI, 17

W

Waveform files
 locating and storing, 51
Wavelength, 22

