

TekExpress® PCI Express Transmitter Compliance and Validation Software Application Help

Register now!

Click the following link to protect your product.

www.tek.com/register



Copyright © 2026, Tektronix, Inc. All rights reserved. Licensed software products are owned by Tektronix or its subsidiaries or suppliers, and are protected by national copyright laws and international treaty provisions. Tektronix products are covered by U.S. and foreign patents, issued and pending. Information in this publication supersedes that in all previously published material. Specifications and price change privileges reserved.

TEKTRONIX and TEK are registered trademarks of Tektronix, Inc.

These are the original instructions in English.

Go to tek.com/eula to read the Tektronix End User License Agreement.



Contacting Tektronix

Tektronix, Inc.
13725 SW Karl Braun Drive
P.O. Box 500
Beaverton, OR 97077
USA

For product information, sales, service, and technical support:

In North America, call 1-800-833-9200.

Worldwide, visit www.tek.com to find contacts in your area.

Contents

Welcome	7
Getting help and support	10
Product documents	10
Conventions	10
Technical support	10
Getting started	12
Hardware requirements	12
Minimum system requirements	12
Instruments and accessories required	14
Software requirements	17
Downloading and installing the software	17
Activate the license	18
View software version and license key details	18
Setting up the test environment	19
Windows 10 user account settings	19
Install the software	20
Set application file permissions	20
About setting up tests	21
Equipment connection setup	22
Equipment connection setup through switch system	22
Test setup overview	26
Prerequisite	27
Compensate the signal path	27
Deskew and Attenuation	27
Running tests	29
Prerun checklist	30
Search instruments connected to the application	30
Starting the application	32
Application controls	34
Options menu functions	36
TekExpress instrument control settings	38
Configure email settings	39
Setup panel: Configure the test setup	42
DUT: Set DUT settings	43


Filter setup dialog box.	48
Automated DUT control setup.	49
NI USB 6501 DUT Controller Support.	51
Multiple-session run.	53
Test Selection: Select the tests.	54
Acquisitions: Set waveform acquisition settings.	56
Set acquisition options.	59
Set acquisition waveform save options.	60
Set acquisition waveform source for prerecorded waveform files.	61
Set acquisition signal source.	62
Configuration: Set measurement limits for tests.	62
CTLE optimization feature.	65
Scope noise characterization and compensation workflow.	67
Preferences: Set the test run preferences.	70
Status panel: View the test execution status.	72
View test execution status.	72
View test execution logs.	74
Results panel: View summary of test results.	75
Filter the test results.	75
Reports panel: Configure report generation settings.	77
Report configuration settings.	77
CXL Support.	79
Configure report view settings.	80
View a generated report.	82
Saving and recalling test setup.	87
Overview.	87
Save the configured test setup.	87
Load a saved test setup.	89
Perform a test using pre-run session files.	90
Save the test setup with a different name.	94
Switch Matrix application.	96
Product description.	96
Application overview.	96
File name extensions.	102
Status indicators.	102
Saved configurations.	103
De-embed settings.	103
Graphical view of switch matrix configuration.	107
Saving the configuration.	108
Feature description.	108
Error messages.	111
SCPI Commands.	113

About SCPI command.	113
Socket configuration for SCPI commands.	113
Set or query the device name of application.	123
Set or query the suite name of the application.	124
Set or query the test name of the application.	124
Set or query the version name of the application.	128
Set or query the general parameter values.	129
Query the available devices in the DUT panel of the application.	139
Query the available suites for the selected device.	139
Query the list of available tests of the application.	140
Query the available version names of the application.	144
Query the list of available instruments based on the specified instrument type.	144
Set or query the IP address of the instrument based on the specified instrument type.	145
Query the information of the generated report file.	145
Query the information of the generated waveform files.	146
Query the information of the generated image files.	146
Query the active TekExpress application name.	146
Set or query the DUTID of application.	147
Sets or query the acquire mode status.	147
Set or query the execution mode status.	148
Generate the report for the current session.	148
Query the value of specified report header field in the report.	148
Query the value of specified result detail available in report summary/details table.	149
Restore the setup to default settings.	150
Save the setup.	150
Save the settings to a specified session.	150
Open the setup from a specified session.	150
Query the current setup file name.	151
Run/stop/pause/resume the selected measurements execution in the application.	151
Query the current measurement execution status.	152
Query whether the current setup is saved or not saved.	152
Query the status of the previous command execution.	152
Query the last error occurred.	152
Set or query the popup details.	153
Sets or query the limit values in the limits editor window.	153
Set or query the waveform file recalled for the specified test name and acquire type.	154
Set or query the enable/disable status of Verbose function.	155
Set or query the View report after generating option status.	156
Returns the report as XML string.	156
Copies all the images from current run session to the given destination location.	157
Selects the specified test(s) and deselect all other tests.	157
Returns the complete information about the selected test.	157
Set the default session.	158
Save the run/config sessions.	158
Load the run/config session.	158
Delete the run/config session.	159

Run the run/config saved session.	159
Query the available list in the run/config session.	159
Query the current run/config session.	160
Override the run/config session.	160
Exit or close the application.	160
Example script.	160
References.	166
Application directories.	166
File name extensions.	166
View test-related files.	167
De-embed using filter files.	167
Setup files.	168
RF Switch configuration files.	174
How to run Base SRIS Tx Test Board tests.	176

Welcome

The TekExpress® PCI Express Automated Test Solution Software application (referred to as TekExpress PCIe or PCIe in the rest of the document) provides an automated, simple, and efficient way to test PCI Express interfaces and devices consistent to the requirements of the PCI Express specifications.

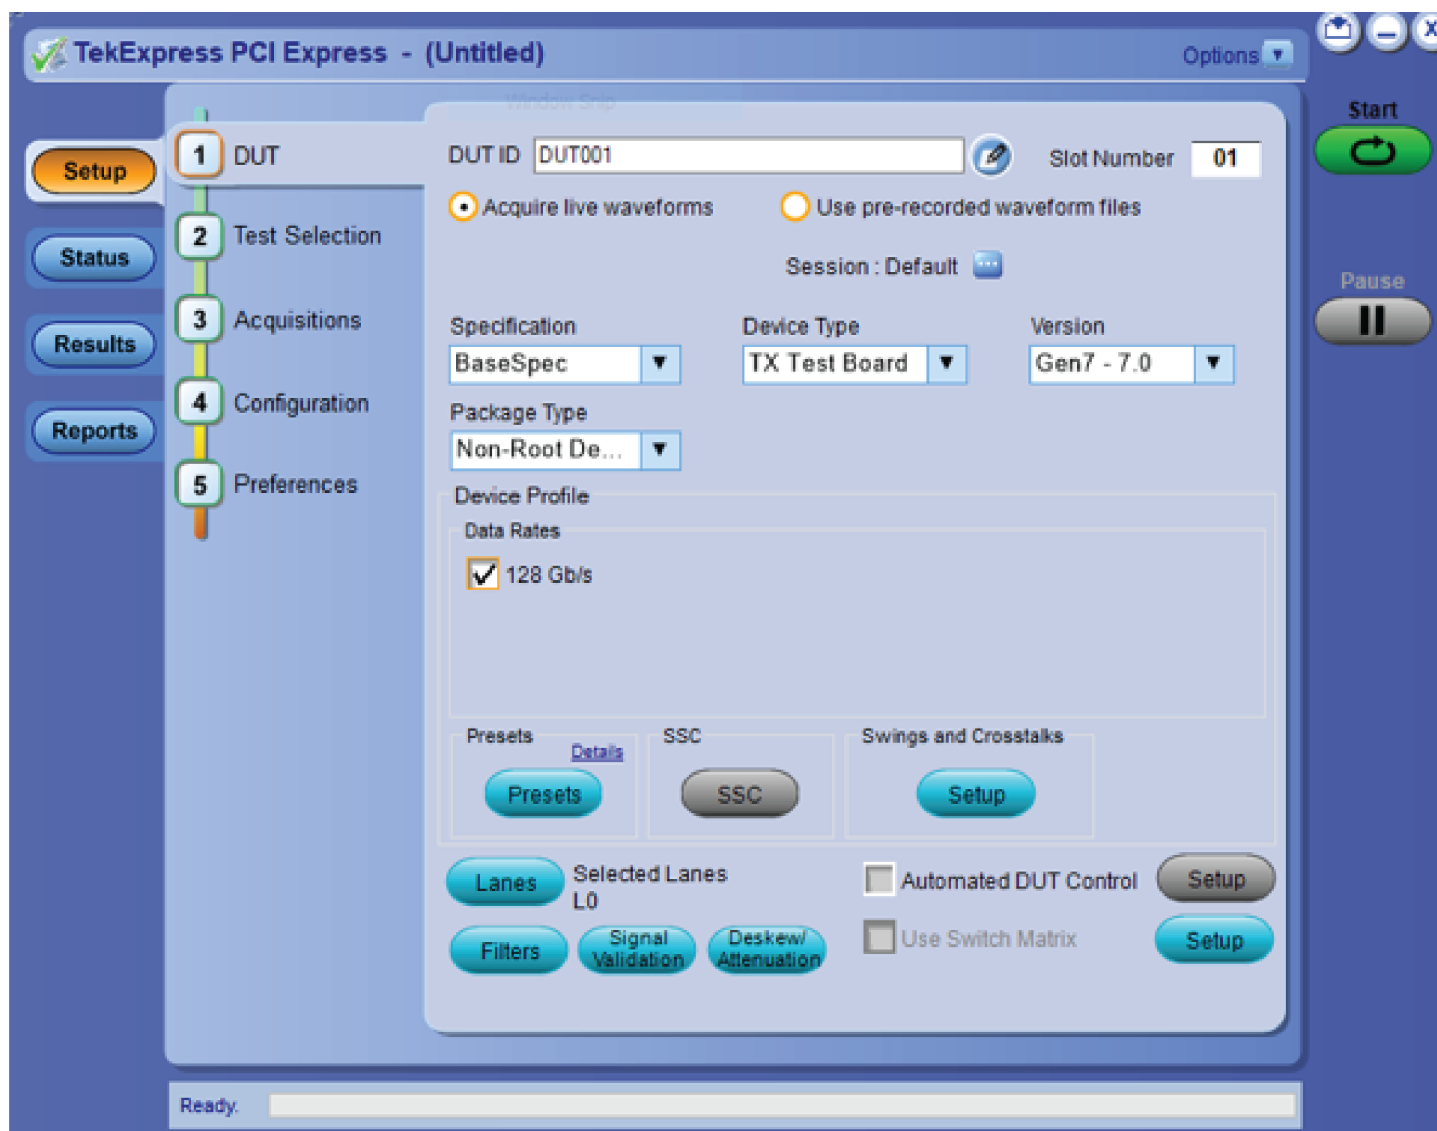

TekExpress PCI Express application start screen (with ATI Mode)

TekExpress PCIe key features and benefits

- **PCIe CEM Tx testing**
 - Supports Add-In-Card and System Board device types
 - Supports Gen6 testing using Tektronix PAMJet and Intel Sigtest analysis tool
 - Supports Gen1, Gen2, Gen3, Gen4 and Gen5 testing using Intel Sigtest
 - Supports Signal Quality test for all generations
 - Supports Preset test for Gen3, Gen4, Gen5 and Gen6 generations
 - Supports Pulse Width Jitter test for Gen4, Gen5 and Gen6 Add-In-Card device type

- **PCIe Base Tx testing**
 - Supports PCIe Gen5 Base Tx Common Clock and SRIS architecture
 - Supports Gen6 testing using Tektronix PAMJet and Intel Sigtest analysis tool
 - Supports Gen7 testing using Tektronix PAMJet analysis tool
 - Supports Gen3, Gen4 and Gen5 testing using Intel Sigtest
 - Supports Jitter and Voltage Signal Quality test and Preset test for all generations
- **U.2 (SFF-8639) Tx testing**
 - Supports Gen3 Host and Module device types
- **M.2 Tx testing**
 - Supports Gen3 M.2 Add-In-Card and Host device types
- **PCIe CXL testing**
 - Supports Gen3, Gen4, and Gen5 versions of CXL Base, CEM Card and CEM Host type device testing
- **PCIe Ref Clock Tx testing**
 - Supports Gen1 to Gen6 Ref Clock Jitter and Signal Integrity measurements
 - Supports automated scope noise characterization and compensation for Gen6 CEM/Base Spec and Gen7 Base Spec testing
 - Supports CTLE optimization for Gen6 CEM/Base Spec and Gen7 Base Spec testing
 - Supports channel embed and de-embed filter files
 - Supports de-embedding on each ATI channel using separate filter files
 - Supports Intel CJT, Skyworks Clock Jitter tool for ref clock analysis
 - Supports traditional break-out channel de-embedding and SigTest CTLE (for uncorrelated jitter measurements only)
 - Automated De-skew and attenuation for ATI Channels
 - Supports signal validation for all generations
 - Supports single and multiple acquisition for all suites and generations.
 - Trigger type support for Gen3, Gen4, Gen5 (Auto/Width/Edge), and Gen6/Gen7 (Edge).
 - Automated toggling of the DUT to switch presets for CEM, Base Spec, U.2, and M.2 device types using AWG/AFG/NI USB 6501 DUT Controller
 - Simple push button, enabling the users to manually toggle PCIe presets from AWG/AFG
 - Support for Gen4, Gen5 and Gen6 data-clock pattern custom toggle index in non standard devices
 - RF Switch support to test the x12 and x16 lanes using Mini-Circuit, Keithley and Gigatronics switches respectively.
 - For Gen6 multilane testing, Minicircuits Switch with 40GHz BW is supported.
 - Fully automated General, Jitter, Composite Eye, Transition Eye, and Non Transition Eye measurements
 - Provides individual or group test selection by using a tree-structure menu
 - Supports preset test selection for all device types
- Integrated Intel Sigtest for fully automated waveform analysis
 - Supports parallel execution of measurements using multiple instances of SigTest to accelerate the test analysis speed
 - Deploys recommended versions of SigTests for analysis

- Sigtest v6.1.16 : Gen6 CEM and Base Spec
- Sigtest v4.0.52: PCIe Gen4 CEM Spec, Gen4 and Gen5 Base Spec
- Sigtest v4.0.42: PCIe Gen3 Base spec
- Sigtest v3.2.0.3: PCIe Gen3 CEM Spec
- Option to browse and select different Sigtest versions and templates for debug
- Support Sigtest run in silent mode (not applicable for Sigtest v3.2.0.3)
- Built-in reporting features:
 - Provides a pass/fail summary table
 - Provides generation specific pass/fail status summary table
 - Provides margin details on each test
 - Provides a consolidated report for all tests
 - Supports .pdf, .mht and .csv formats
- Provides Tektronix Method of Implementation (MOI) for PCIe testing run-time setup instructions with image pop-ups and reference
- Illustrations for each test execution
- Provides an automation solution (for compliance) and debugging using both PAMJET and DPOJET
- TekExpress setup files in-line with PCI-SIG compliance workshop
- Supports SCPI commands to remotely communicate with the TekExpress application
- Tektronix ATI (200GS/s) channel support for CEM, Base Spec, U.2, M.2 and Ref clock testing for all generations (Not applicable for CEM System Board Gen1-4 and U.2 Host Gen3)
- 33 GHz oscilloscope supports CEM Gen5 TX testing using Tekconnect channels
- Supports Eye Diagram plots for Base Spec through DPOJET

Getting help and support

Product documents

Use the product documents for more information on the application functions, understand the theory of operation, how to remotely program or operate the application, and do other tasks.

TekExpress Application documents

To learn about	Use this document
How to use the application How to remotely control the instrument	TekExpress PCI Express Help PDF version can be downloaded from www.tek.com . Compiled HTML (CHM) version is integrated with the application. Press F1 key from the keyboard to start the help. Tektronix Part Number: 077-xxxx-xx

Conventions

This application help uses the following conventions:

- The term "Application," and "Software" refers to the TekExpress PCI Express Application.
- The term "DUT" is an abbreviation for Device Under Test.
- The term "select" is a generic term that applies to the two methods of choosing a screen item (button control, list item): using a mouse or using the touch screen.
- A **Note** identifies important information.

Icons used in the help

Icon	Description
	This icon identifies important information
	This icon identifies conditions or practices that could result in loss of data.
	This icon identifies additional information that will help you use the application more efficiently.

Technical support

Tektronix values your feedback on our products. To help us serve you better, please send us your suggestions, ideas, or comments on our application or oscilloscope. Contact Tektronix through mail, telephone, or the Web site. See [Contacting information](#) (on page 2) at the front of this document for contact information.

When you contact Tektronix technical support, please include the following information (be as specific as possible):

General information

- All instrument model numbers
- Hardware options, if any
- Modules used
- Your name, company, mailing address, phone number, FAX number
- Please indicate if you would like to be contacted by Tektronix about your suggestion or comments.

Application specific information

- Software version number
- Description of the problem such that technical support can duplicate the problem
- If possible, save the setup files for all the instruments used and the application
- If possible, save the TekExpress setup files, log.xml, *.TekX (session files and folders), and status messages text file

Getting started

Hardware requirements

Minimum system requirements

The following table shows the minimum system requirements needed for an oscilloscope to run TekExpress PCI Express.

System requirements

Component	Requirement
Oscilloscope	See Instruments and accessories required (on page 14)
Processor	Same as the oscilloscope
Operating system	Microsoft Windows 10 (64-bit only) Required Windows 10 user account settings (on page 19)
Memory	Same as the oscilloscope
Hard disk	Same as the oscilloscope
Display	Same as the oscilloscope NOTE: If TekExpress is running on an instrument having a video resolution lower than 800x600 (for example, a sampling oscilloscope), it is recommended that you connect a secondary monitor, which must be enabled before starting the application.
Firmware	Tekscope for MSO/DSA/DPO70000C, D, DX, SX and DPO714AX NOTE: For software version, refer to Readme TekExpress PCI Express.txt file at C:\Program Files\Tektronix\TekExpress\TekExpress PCI Express

Component	Requirement
Software	• DPOJET, Jitter and Eye Diagram Analysis Tool • For software version, refer to Readme TekExpress PCI Express.txt file at C:\Program Files\Tektronix\TekExpress\TekExpress PCI Express. • This feature is supported only for MSO/DPO70000 models • PAMJet Analysis Tool • For software version, refer to Readme TekExpress PCI Express.txt file at C:\Program Files\Tektronix\TekExpress\TekExpress PCI Express. • This feature is supported only for MSO/DPO70000 models. • The TekExpress PCIe Installer does not install PAMJet application. User needs to install the right PAMJet software and ensure that the option key is enabled. • Matlab Compiler Runtime (MCR): • MCR v9.10: Required for Gen5 CEM and Base testing using Sigtest Phoenix and also for refclock testing using Intel CJT (Requires manual installation). • MCR v9.11: Required for Gen6 CEM and Base testing using PAMJet (requires manual installation) and for all PCIe generation testing using DPOJET(Requires manual installation). • Microsoft .NET 4.7.2 Framework • Intel Sigtest: • Sigtest v6.1.16 : PCIe Gen6 CEM and Base Spec • Sigtest Phoenix v5.1.08 : PCIe Gen5 CEM and Base Spec • Sigtest v4.0.52: PCIe Gen4 CEM and Base Spec • Sigtest v4.0.42: PCIe Gen3 Base spec • Sigtest v3.2.0.3: PCIe Gen3 CEM Spec • Intel CJT, v6.0.4 For Ref-Clock Testing • Skyworks Clock Jitter Tool, v7.1 For Ref-Clock Testing

Instruments and accessories required

The following table lists the instruments and accessories required for TekExpress PCI Express application.

Instruments and accessories required for PCI Express application

Instrument/Accessory	Model number
Oscilloscope	MSO/DPO 70804DX (Up to PCIe Gen2)
	MSO/DPO 71254DX (Up to PCIe Gen3)
	DPO 71304SX (Up to PCIe Gen3)
	MSO/DPO 71604DX (Up to PCIe Gen3)
	MSO/DPO 72004DX (Up to PCIe Gen3)
	MSO/DPO 72304DX (Up to PCIe Gen3)
	MSO/DPO 72504DX (Up to PCIe Gen4)
	MSO/DPO 73304DX (Up to PCIe Gen5, except Base Gen5)
	DPO75002SX [Standalone or 2 Stack] All Generation Testing
	DPO75902SX [Standalone or 2 Stack] All Generation Testing
	DPO77002SX [Standalone or 2 Stack] All Generation Testing
	MSO70604, MSO70604C (Only PCIe Gen1)
	MSO70804, MSO70804C (Up to PCIe Gen2)
	MSO71254, MSO71254C (Up to PCIe Gen3)
	MSO71604, MSO71604C (Up to PCIe Gen3)
	MSO72004, MSO72004C (Up to PCIe Gen3)
	DPO70604C (Only PCIe Gen1)
	DPO70804C (Up to PCIe Gen2)
	DPO71254C (Up to PCIe Gen3)
	DPO71604C (Up to PCIe Gen3)
	DPO72004C (Up to PCIe Gen3)
	DPO72504D (Up to PCIe Gen4)
	DPO73304D (Up to PCIe Gen5, except Base Gen5)
	DSA72504D (Up to PCIe Gen4)
	DSA73304D (Up to PCIe Gen5, except Base Gen5)
	DPO714AX (Up to PCIe Gen4)

Instrument/Accessory	Model number
Arbitrary Function Generator (AFG) (for automatic test pattern toggling)	Tektronix AFG3252, AFG3252C, AFG31252
NOTE: The listed AFG/AWG instruments support both differential inputs (requires 2 channels) and 100 MHz burst mode	
Arbitrary Waveform Generator (AWG) (for automatic test pattern toggling)	▪ Tektronix AWG5002B/C, AWG5012B/C, AWG5014B/C ▪ Tektronix AWG7082B/C, AWG7122B/C ▪ Tektronix AWG70001A, AWG70002A, AWG70002B/1B
RF Switch • Use GPIB cable or USB-to-GPIB or USB cable to connect the oscilloscope to switch. • The GPIB address of the RF Switch and toggle instrument (AWG/AFG) must be different. • Mini circuit 50 GHz RF switch is not integrated to GEN6	▪ Keithley System S46T RF Microwave Switch Systems for x12 PCIe ▪ Gigatronix RF Switch 26GHz (8902-L-48TS26) for x16 PCIe ▪ MiniCircuit ZTM6SP4T40 for x12 PCIe ▪ MiniCircuit ZTM28SP6T40 for x16 PCIe
NIUSB-6501 for automatic toggling	Part Number: 779205-01 Discuss product recommendations, quote products, and place an order. ▪ Contact : + 91 80-4119 0000 ▪ Visit : https://www.ni.com/en-in/support/model.usb-6501.html
Other devices	▪ SMP-SMA cables ▪ TCA-SMA connectors ▪ Matched pair cables

Differential probes

P7513, P7513A, P7516, P7520A, P7625, P7630, P7633, P7713, P7716, P7720 with respective tips

Speed	Minimum oscilloscope bandwidth	TCA-SMA (Max 18 GHz)	TCA-292D (Max 33 GHz)	P7500 (Max 20 GHz)	P7700 (Max 20 GHz)	P7600 (Max 33 GHz)
2.5 GT/s	6 GHz	√	√	√	√	√
5.0 GT/s	12.5 GHz	√	√	√	√	√

Speed	Minimum oscilloscope bandwidth	TCA-SMA (Max 18 GHz)	TCA-292D (Max 33 GHz)	P7500 (Max 20 GHz)	P7700 (Max 20 GHz)	P7600 (Max 33 GHz)
8.0 GT/s	13 GHz	√	√	√	√	√
16.0 GT/s	25 GHz		√			√
32.0 GT/s	50 GHz		√			
100 MHz RefClk	5 GHz	√	√	√	√	√


Software requirements

This section briefly describes the system requirements needed to install the application.

Downloading and installing the software

Complete the following steps to download and install the latest TekExpress PCI Express application.

1. Go to www.tek.com.
2. Click **Downloads**. In the Downloads menu, select DOWNLOAD TYPE as Software and enter the application name in the MODEL OR KEYWORD field and click **SEARCH**.

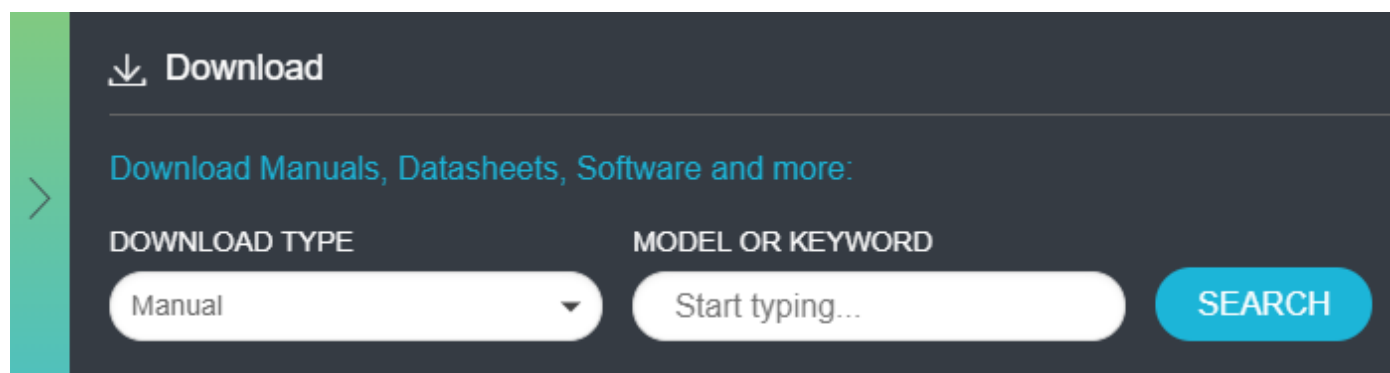

Tek Download

3. Select the latest version of software and follow the instructions to download the software. Copy the executable file into the oscilloscope.
4. Double-click the executable and follow the on-screen instructions.
The software is installed at C:\Program Files\Tektronix\TekExpress\TekExpress PCI Express.
5. Select from the Oscilloscope menu, to open the application.

Activate the license

To activate the license, access the oscilloscope's help documentation, navigate to the License Activation section, and follow the on-screen instructions using the oscilloscope interface.

View software version and license key details

To view version information of the application, click **Options > About TekExpress**.




Setting up the test environment

Windows 10 user account settings

Windows 10 instruments need to have the User Account Control Settings set to **Never Notify**. To set User Account Control Settings:

1. Go to **Control Panel > User Accounts > Change User Account Control settings**.
2. Set the sliding control to **Always notify** as shown in the image, and click **OK**.

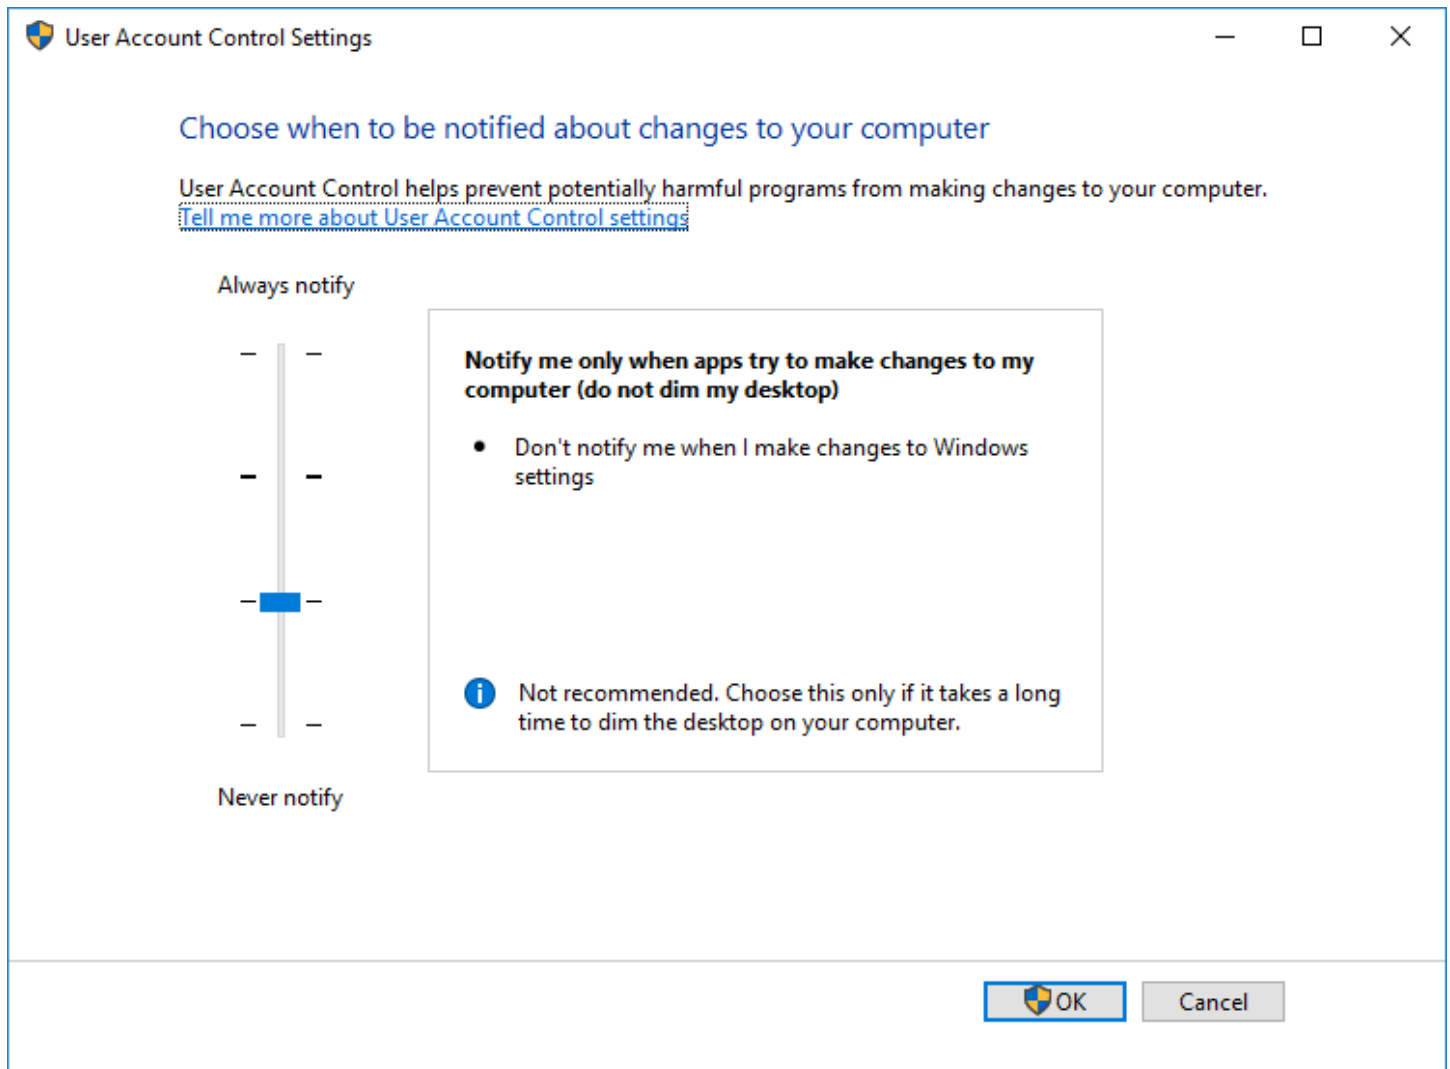

See also

[Instruments and accessories required](#) (on page 14)


Install the software

Use the following steps to install PCI Express software on any compatible instrument running Microsoft Windows 10 (64-bit). See [Minimum System Requirements](#) (on page 12) for details.

1. Close all applications (including the TekScope application).
2. Go to the www.tek.com Web site and search for TekExpress PCI Express to locate the installation file. Download the file **TekExpress_PCI_Deployment_Package.exe**.
3. Copy or download the PCIe installer file to the oscilloscope.
4. Double-click the installer .exe file to extract the installation files and start the InstallShield Wizard. Follow the on-screen instructions. The software installs in the following location:

C:\Program Files\Tektronix\TekExpress\TekExpress PCI Express

5. The installer updates the TekScope Analyze menu to include the installed options.

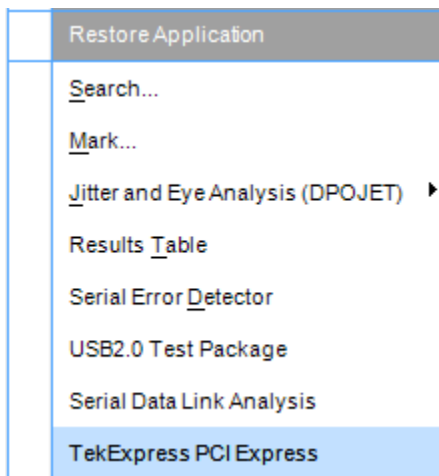

See also

[Minimum system requirements](#) (on page 12)

[Instruments and accessories required](#) (on page 14)

Set application file permissions

Before you run tests for the first time, do the following:

1. Understand where your test files are stored on the instrument.

After you install and start TekExpress PCIe, it creates the following folders on the oscilloscope:

- \My Documents\My TekExpress\PCI Express
- \My Documents\My TekExpress\PCI Express\Untitled Session

Every time you start TekExpress PCIe, an **Untitled Session** folder is created in the **PCIe** folder. The **Untitled Session** folder is automatically deleted when you exit the **PCIe** application. To preserve your test session files, save the test setup before exiting the TekExpress application.


CAUTION: Do not modify any of the session files or folders because this may result in loss of data or corrupted session files. Each session has multiple files associated with it. When you save a session, a .TekX file, and a folder named for the session that contains associated files, is created on the oscilloscope X: drive.

2. Map the shared My TekExpress folder as **X:** (X drive) on the instruments used in test setups running Microsoft Windows Operating System.

The My TekExpress folder has the share name format **<domain><user ID>My TekExpress**. Or, if the instrument is not connected to a domain, the share name format is **<instrument name><user ID>My TekExpress**. This shared folder is used to save the waveform files and is used during other file transfer operations.

NOTE: If the X: drive is mapped to any other shared folder, the application will display a warning message asking you to disconnect the X: drive manually.

3. Make sure that the My TekExpress folder (Drive X:) has read and write access:
 1. Right-click the folder and select **Properties**.
 2. Select the **General** tab and then click **Advanced**.
 3. In the Advanced Attributes dialog box, make sure that the option **Encrypt contents to secure data** is NOT selected (not checked).

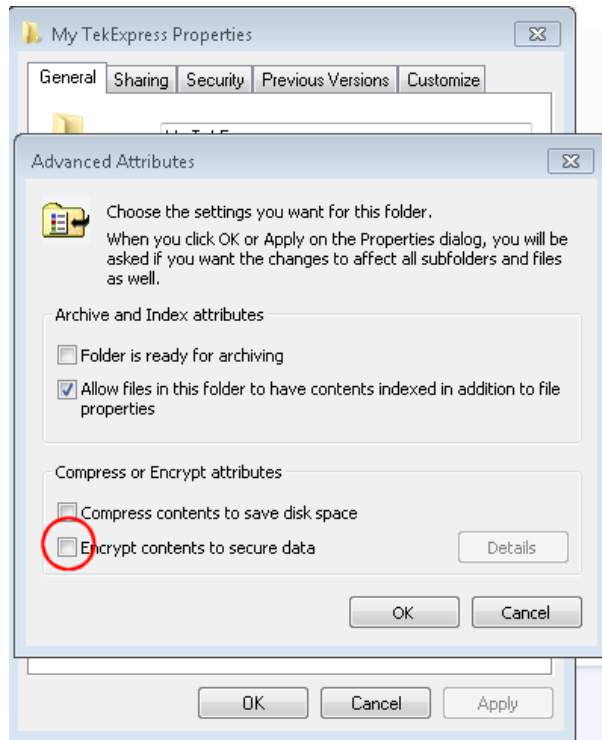

4. See the [prerun checklist](#) (on page 30) before you run a test.

See also

[Configuration: Set measurement limits for tests](#)

[Application directories](#) (on page 166)

[File name extensions](#) (on page 166)

About setting up tests

Set up tests using the tabs in the [Setup panel](#) (on page 42). Settings in the DUT tab use a top-down, left-to-right logic flow, so that any parameter that affects or acts as a filter for other parameters appears either to the top of or to the left of the affected parameters.

Tests are saved when you save a test setup. To avoid overwriting test results, remember to assign a unique name to the test either before running it or immediately after.

See also

[Test setup overview](#) (on page 26)

[Before you click start](#) (on page 20)

[About running tests](#) (on page 29)

Equipment connection setup


Click the **Setup > Test Selection > Schematic** button to open a PDF file that shows the compliance test setup diagrams (instrument, DUT, and cabling) for supported testing configurations.

See also

[Minimum system requirements](#) (on page 12)

[About setting up tests](#) (on page 21)


Equipment connection setup through switch system

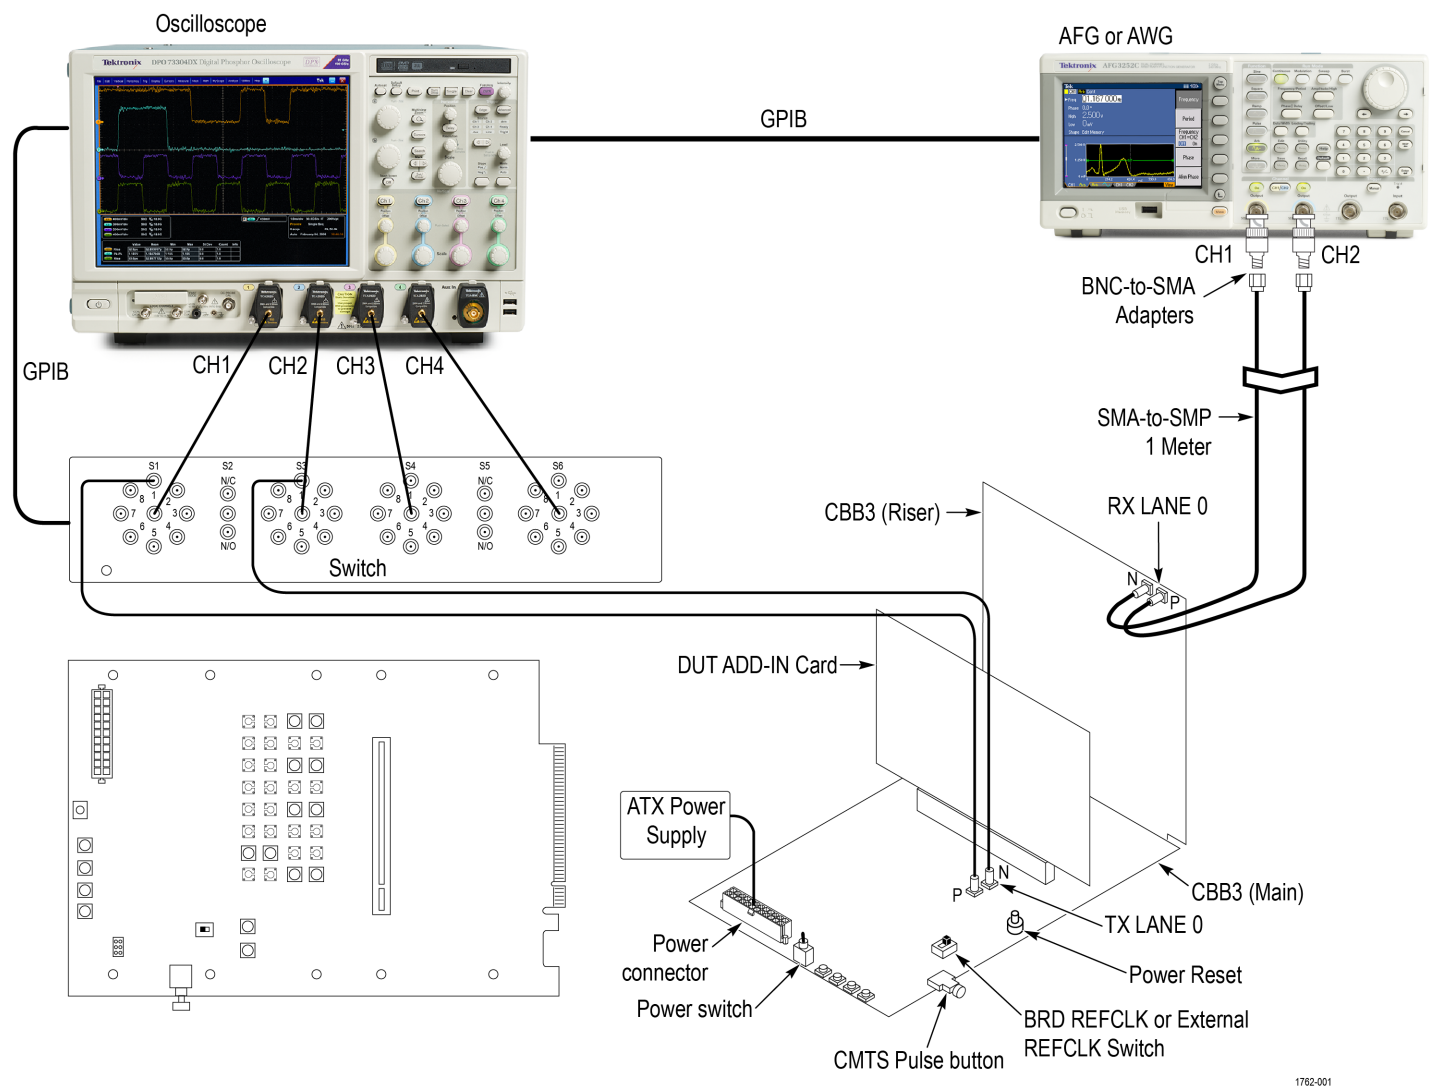

Add-in card connection setup through switch system

Switch: DUT Lane to Signal connection mapping			
TX LANE 0 P	S1 (relay) > Signal 1	TX LANE 0 N	S3 > Signal 1


Switch: DUT Lane to Signal connection mapping			
TX LANE 1 P	S1 > Signal 2	TX LANE 1 N	S3 > Signal 2
TX LANE 2 P	S1 > Signal 3	TX LANE 2 N	S3 > Signal 3
TX LANE 3 P	S1 > Signal 4	TX LANE 3 N	S3 > Signal 4
TX LANE 4 P	S1 > Signal 5	TX LANE 4 N	S3 > Signal 5
TX LANE 5 P	S1 > Signal 6	TX LANE 5 N	S3 > Signal 6
TX LANE 6 P	S1 > Signal 7	TX LANE 6 N	S3 > Signal 7
TX LANE 7 P	S1 > Signal 8	TX LANE 7 N	S3 > Signal 8
TX LANE 8 P	S4 > Signal 1	TX LANE 8 N	S6 > Signal 1
TX LANE 9 P	S4 > Signal 2	TX LANE 9 N	S6 > Signal 2
TX LANE 10 P	S4 > Signal 3	TX LANE 10 N	S6 > Signal 3
TX LANE 11 P	S4 > Signal 4	TX LANE 11 N	S6 > Signal 4
TX LANE 12 P	S4 > Signal 5	TX LANE 12 N	S6 > Signal 5
TX LANE 13 P	S4 > Signal 6	TX LANE 13 N	S6 > Signal 6
TX LANE 14 P	S4 > Signal 7	TX LANE 14 N	S6 > Signal 7
TX LANE 15 P	S4 > Signal 8	TX LANE 15 N	S6 > Signal 8

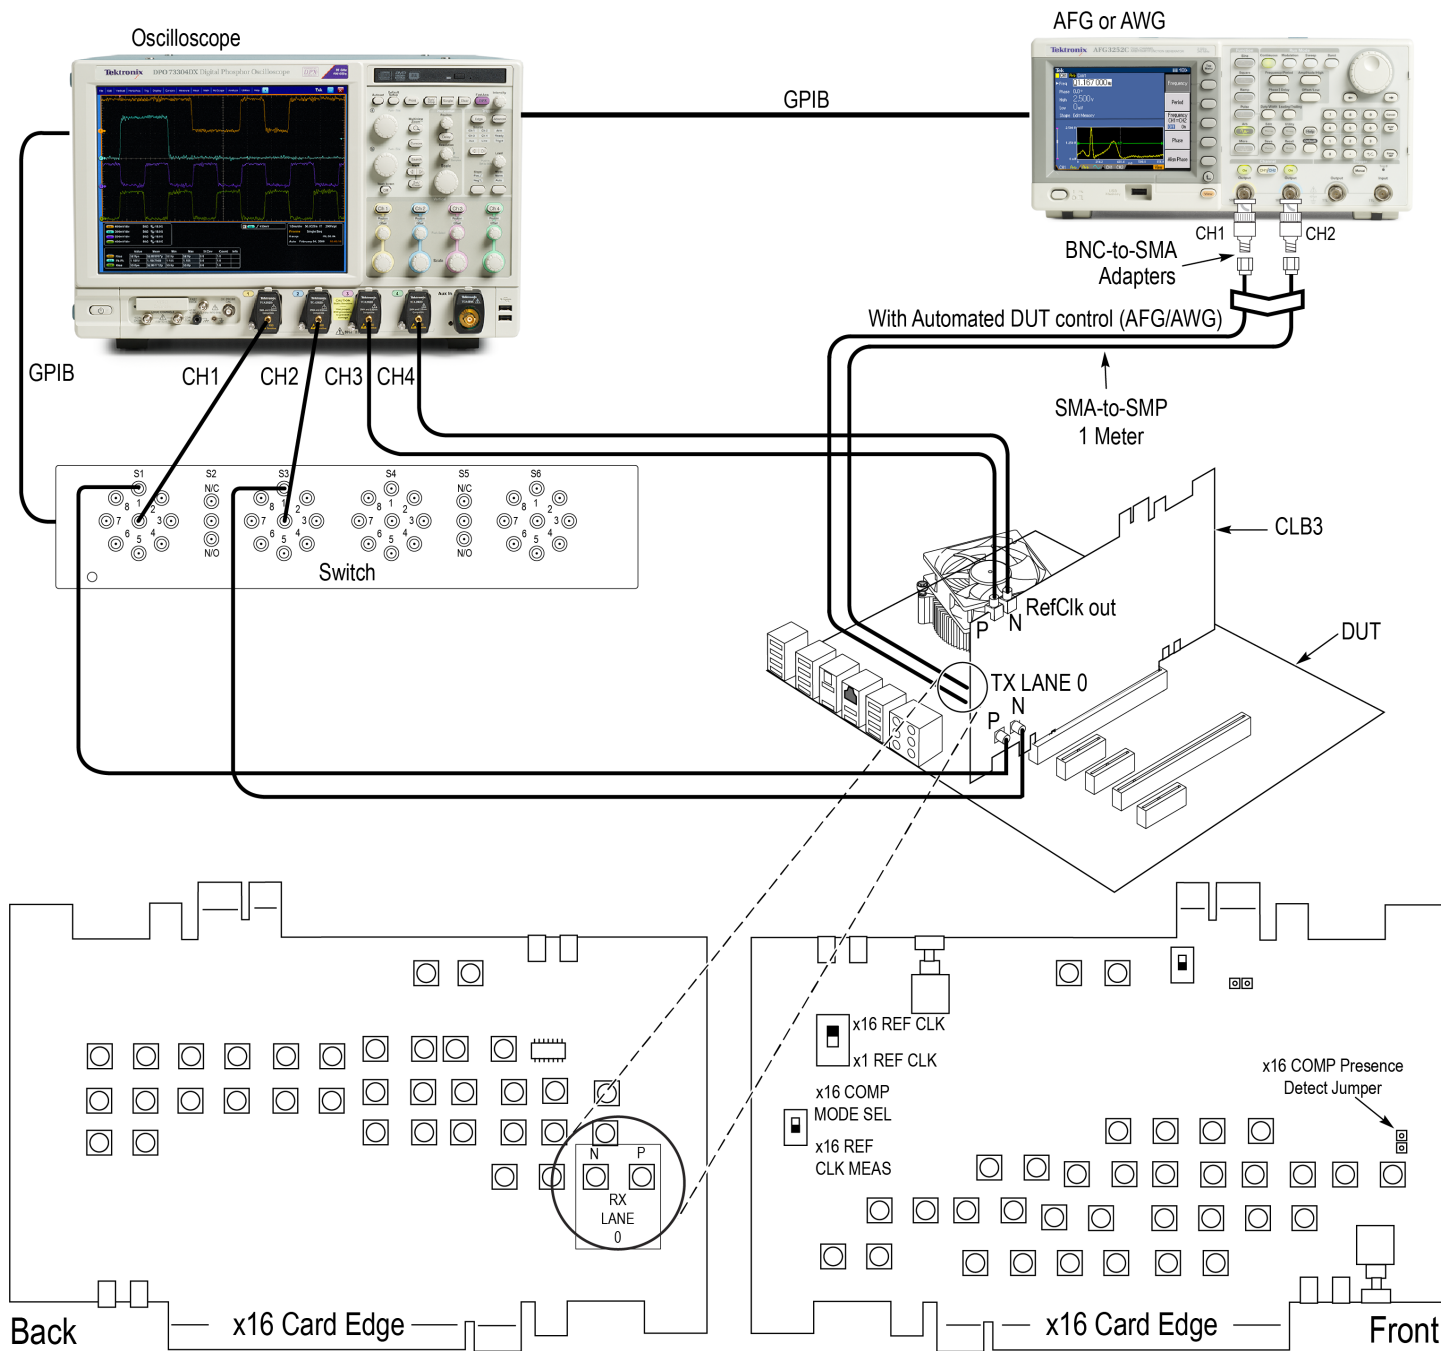

System board (normal) connection setup through switch system

Switch: DUT Lane to Signal connection mapping			
TX LANE 0 P	S1 (relay) > Signal 1	TX LANE 0 N	S3 > Signal 1
TX LANE 1 P	S1 > Signal 2	TX LANE 1 N	S3 > Signal 2
TX LANE 2 P	S1 > Signal 3	TX LANE 2 N	S3 > Signal 3
TX LANE 3 P	S1 > Signal 4	TX LANE 3 N	S3 > Signal 4

Switch: DUT Lane to Signal connection mapping			
TX LANE 4 P	S1 > Signal 5	TX LANE 4 N	S3 > Signal 5
TX LANE 5 P	S1 > Signal 6	TX LANE 5 N	S3 > Signal 6
TX LANE 6 P	S1 > Signal 7	TX LANE 6 N	S3 > Signal 7
TX LANE 7 P	S1 > Signal 8	TX LANE 7 N	S3 > Signal 8

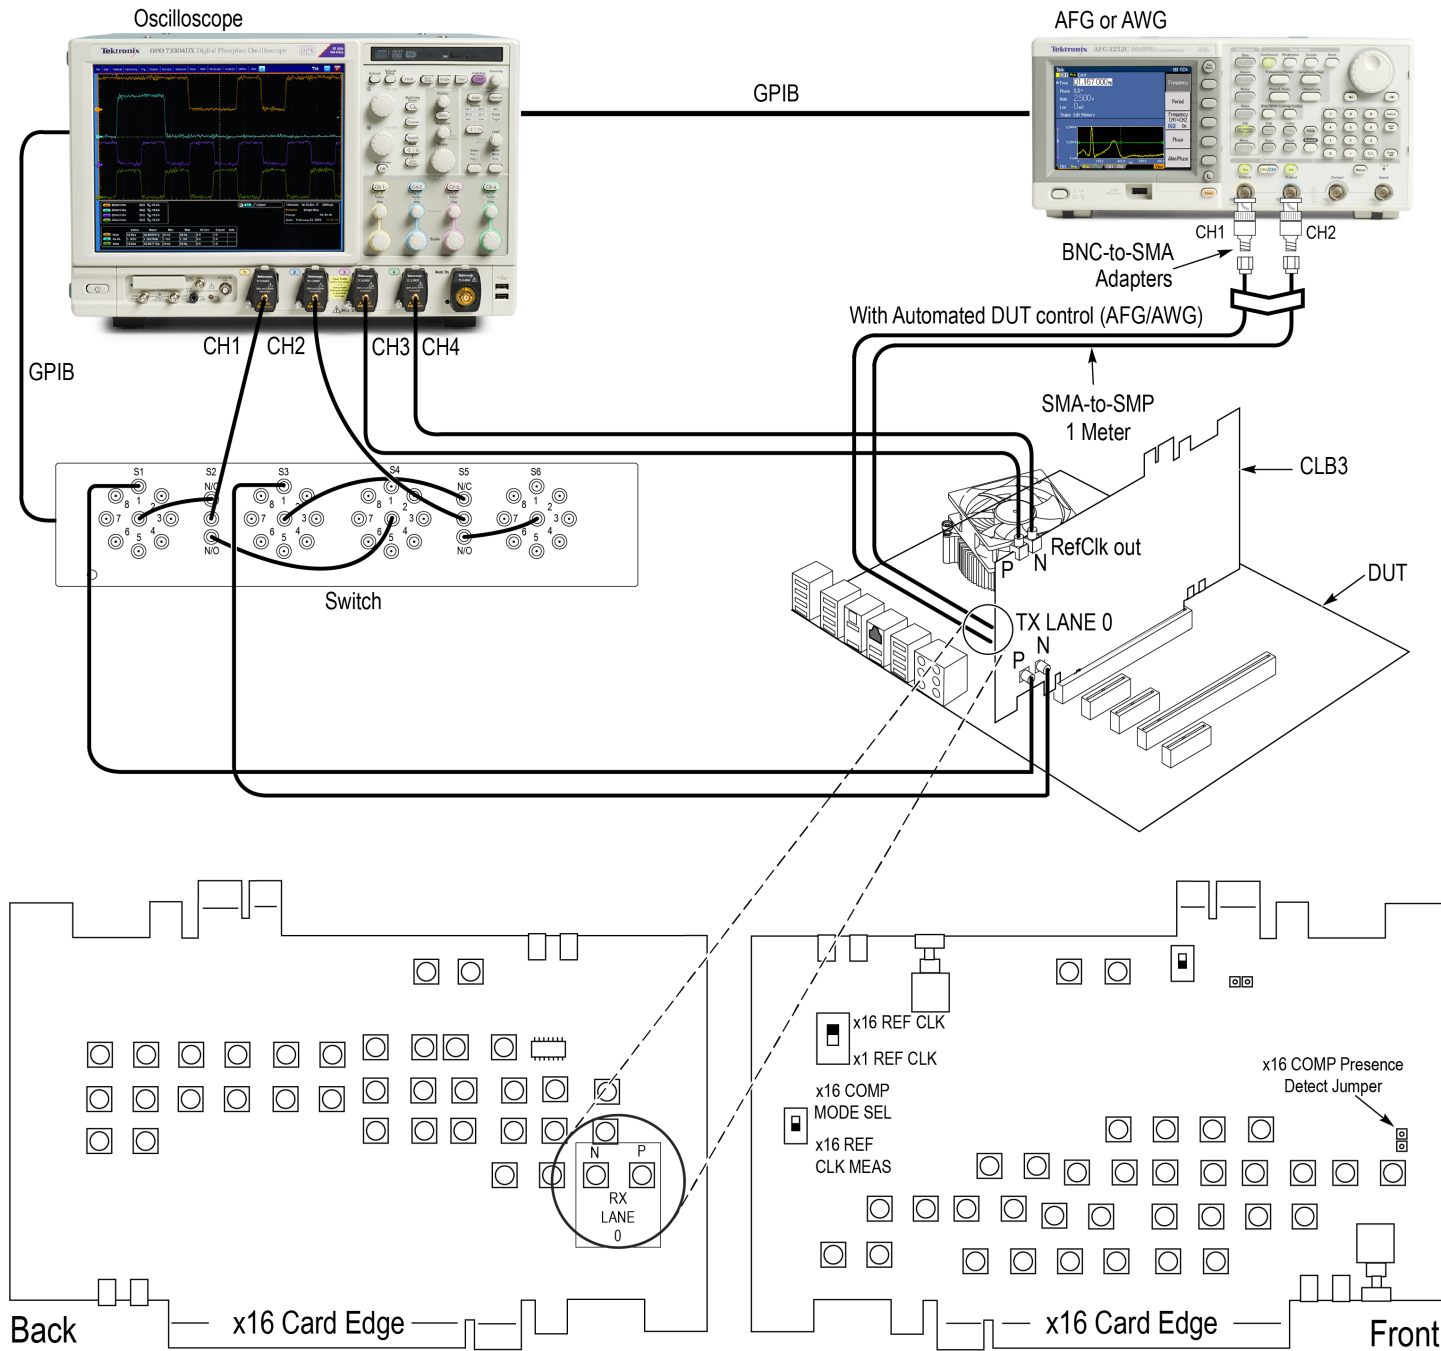

System board (cascade) connection setup through switch system

Switch: DUT Lane to Signal connection mapping			
TX LANE 0 P	S1 (relay) > Signal 1	TX LANE 0 N	S3 > Signal 1
TX LANE 1 P	S1 > Signal 2	TX LANE 1 N	S3 > Signal 2
TX LANE 2 P	S1 > Signal 3	TX LANE 2 N	S3 > Signal 3
TX LANE 3 P	S1 > Signal 4	TX LANE 3 N	S3 > Signal 4
TX LANE 4 P	S1 > Signal 5	TX LANE 4 N	S3 > Signal 5
TX LANE 5 P	S1 > Signal 6	TX LANE 5 N	S3 > Signal 6
TX LANE 6 P	S1 > Signal 7	TX LANE 6 N	S3 > Signal 7
TX LANE 7 P	S1 > Signal 8	TX LANE 7 N	S3 > Signal 8
TX LANE 8 P	S4 > Signal 1	TX LANE 8 N	S6 > Signal 1
TX LANE 9 P	S4 > Signal 2	TX LANE 9 N	S6 > Signal 2
TX LANE 10 P	S4 > Signal 3	TX LANE 10 N	S6 > Signal 3
TX LANE 11 P	S4 > Signal 4	TX LANE 11 N	S6 > Signal 4
TX LANE 12 P	S4 > Signal 5	TX LANE 12 N	S6 > Signal 5
TX LANE 13 P	S4 > Signal 6	TX LANE 13 N	S6 > Signal 6
TX LANE 14 P	S4 > Signal 7	TX LANE 14 N	S6 > Signal 7
TX LANE 15 P	S4 > Signal 8	TX LANE 15 N	S6 > Signal 8

NOTE: GPIB is the recommended interface to execute the switch matrix commands.

Test setup overview

Test setup includes acquisition and configuration parameters. You can also select report options when setting up tests. Use the options in the [Setup panel](#) (on page 42) and [Reports panel](#) (on page 77) to select and configure tests.

1. [Set up equipment](#) (on page 22).
2. [Do the prerun checklist](#) (on page 30).
3. [Set DUT parameters](#) (on page 43).
4. [Select one or more tests.](#)
5. [Select acquisitions](#) (on page 56).
6. [Configuration test parameters.](#)
7. [Set test measurement notification options.](#)
8. [Select report options](#) (on page 77).

See also

[About test setups](#) (on page 87)

[Before you click start](#) (on page 20)

[About running tests](#) (on page 29)

Prerequisite

Compensate the signal path

Use the following procedure to compensate the internal signal acquisition path. Perform this procedure if the ambient temperature has changed more than 5 °C (9 °F) since you performed the last signal path compensation. Perform the signal path compensation once a week. Failure to do so may result in the instrument not meeting warranted performance levels.


1. Power on and wait for the instrument to complete its warm up period before continuing with this procedure.
2. Disconnect any probes you have connected to the input channels.
3. Set the instrument to Menu mode.
4. Select Instrument Calibration from the Utilities menu.
5. Note any instructions that appear in the resulting control window.
6. Click Run SPC to begin the procedure. The procedure may take several minutes to complete.
7. Verify that the Status changes to Compensated after the procedure is complete. If the Calibration Status field indicates anything other than Compensated, see Signal Path Compensation Status for information on the readout and recommended action.

NOTE: When making measurements at vertical scale settings less than or equal to 5 mV, you should perform the signal path compensation at least once a week. Failure to do so may result in the instrument not meeting warranted performance levels at those volts/div settings.

Deskew and Attenuation


By clicking on the button opens up the Deskew and Attenuation Setup window which has the following options.

NOTE: Applicable for ATI mode testing in DPO7000SX series TekScopes

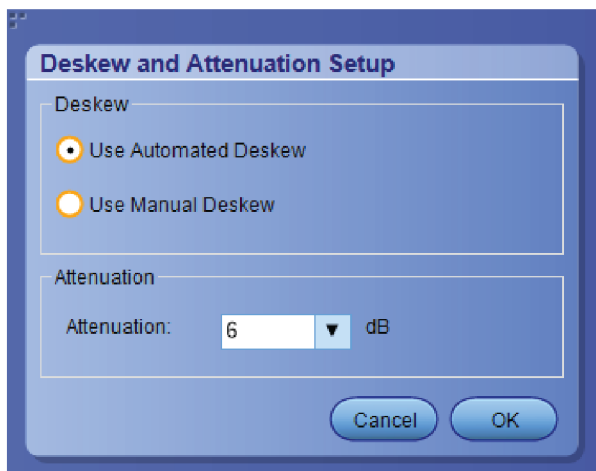


Deskew:

1. **Use Automated Deskew** (Which is selected by default) automated deskew works in the following way:
 - By selecting the automated deskew, the application runs the deskew operation before acquiring the DUT signal.
 - Deskew will be performed to remove the skew of the setup which is primarily the cable set and oscilloscope channel. Deskew requires a low-frequency signal with a small rise/fall time. Both these requirements are fulfilled by the fast edge on the oscilloscope.
 - During deskew the other end of the cable connected to the fixture/ISI board is connected to the fast edge. Fast edge has a skew of less than 1 ps. If the +ve and -ve channels of fast edge are phase-matched, the user can ensure that the setup (cable+oscilloscope channel) has a skew of less than 1 ps.

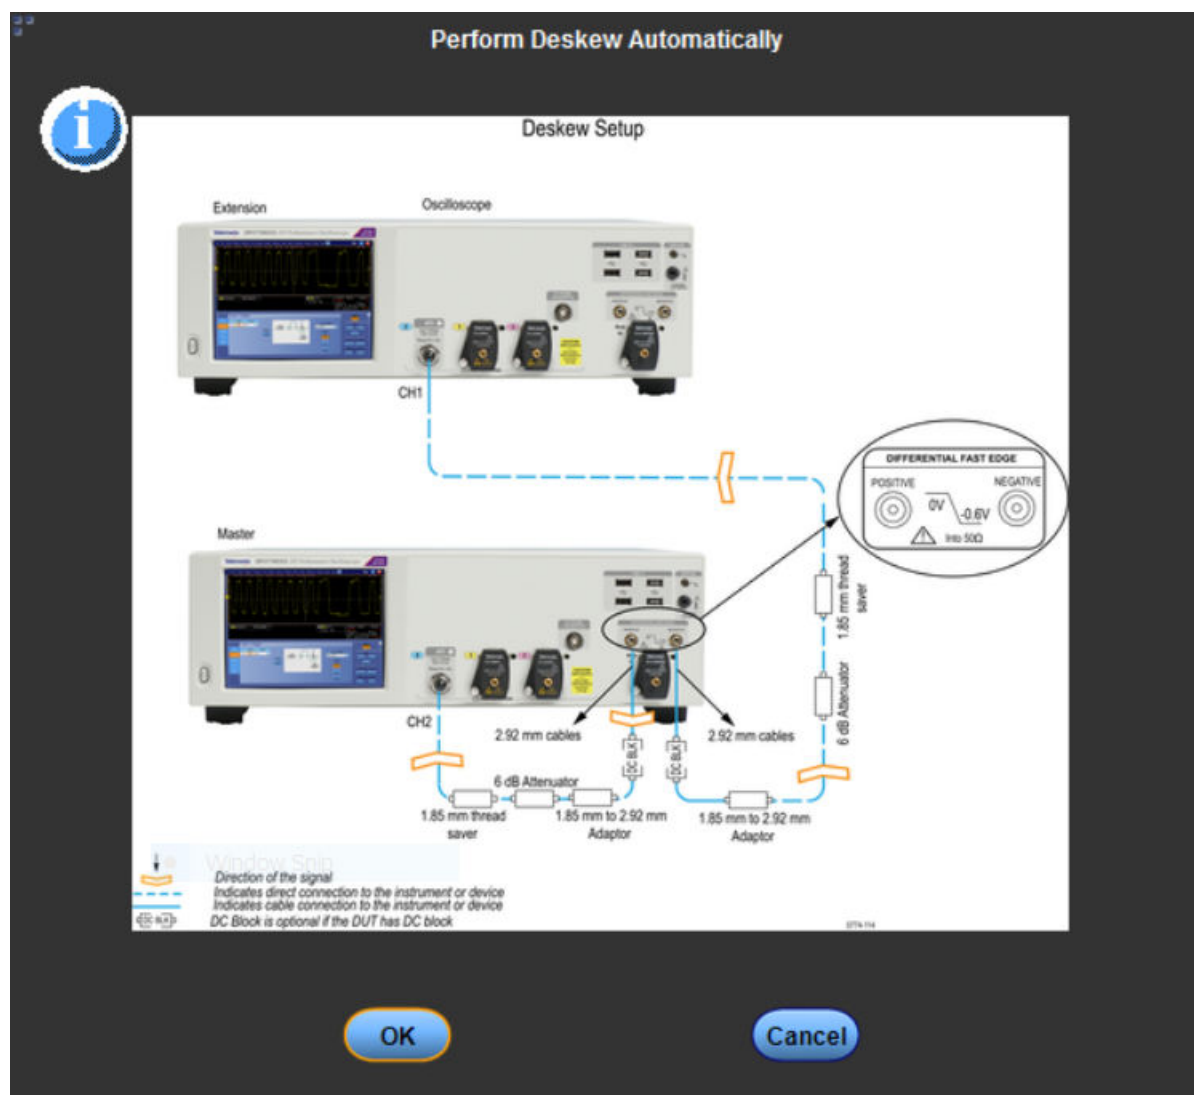

Deskew popup window

2. Use Manual Deskew

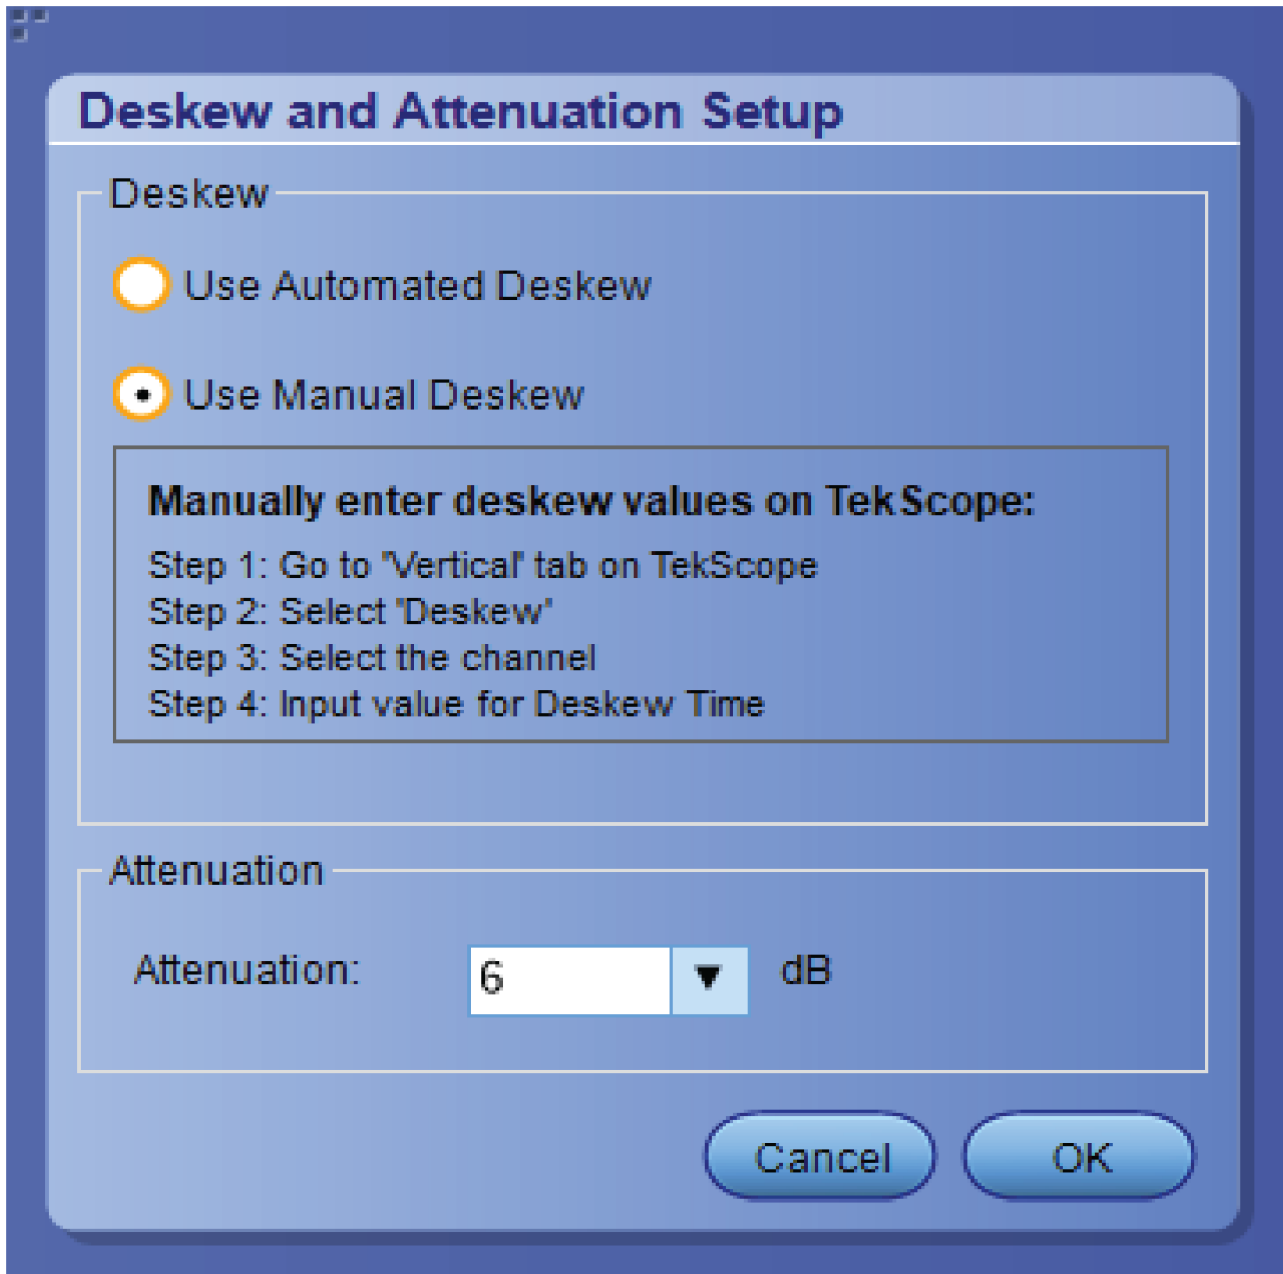

Attenuation:

1. Select the attenuation from the drop-down list.

Running tests

After selecting and configuring tests, review the [Prerun checklist](#) (on page 30) and then click **Start** to run the tests. While tests are running, you cannot access the Setup or Reports panels. To monitor the test progress, switch back and forth between the Status panel and the Results panel.

The application displays a report when the tests are complete. While the tests are running, other applications may display windows in the background. The TekScope application takes precedence over other applications, but you can switch to other applications by using the **Alt + Tab** key combination. To keep the TekExpress PCIe application on top, select **Keep On Top** from the TekExpress Options menu.

See also

[Before you click start](#) (on page 20)

[About configuring tests](#)

[About setting up tests](#) (on page 21)

Prerun checklist

Do the following before you click Start to run a test. If this is the first time you are running a test on a setup, refer to the information in [Before you click start](#) (on page 20).

1. Make sure that all the required instruments are properly warmed up (approximately 20 minutes).
2. Perform Signal Path Compensation (SPC):
 1. On the oscilloscope main menu, select the **Utilities** menu.
 2. Select **Instrument Calibration**.
3. Verify that the application is able to find the DUT. If it cannot, perform a search for connected instruments:
 1. In PCIe, select the **Setup** panel and then click the **Test Selection** tab.
 2. Select any test and then click **Configure**.
 3. In the Configuration section, click **Global Settings**.
 4. In the **Instruments Detected** section, click the drop-down arrow to the right of **Real Time Scope** and make sure that the oscilloscope with the (GPIB8::1::INSTR) designation is in the list.

See also

[Equipment connection setup](#) (on page 22)


Search instruments connected to the application

Use the TekExpress Instrument Control Settings dialog box to search the instruments (resources) connected to the application. The application uses TekVISA to discover the connected instruments.

NOTE: The instruments required for the test setup must be connected and detected by the application, before running the test.


To refresh the list of connected instruments:

1. Select **Options > Instrument Control Settings**.
2. In the **Search Criteria** section of the **Instrument Control Settings** dialog box, select the connection types of the instruments to search. Instrument search is based on the VISA layer, but different connections determine the resource type, such as LAN, GPIB, and USB. For example, if you choose LAN, the search will include all the instruments supported by the TekExpress that are communicating over the LAN.
3. Click **Refresh**. The TekExpress application searches for the connected instruments.

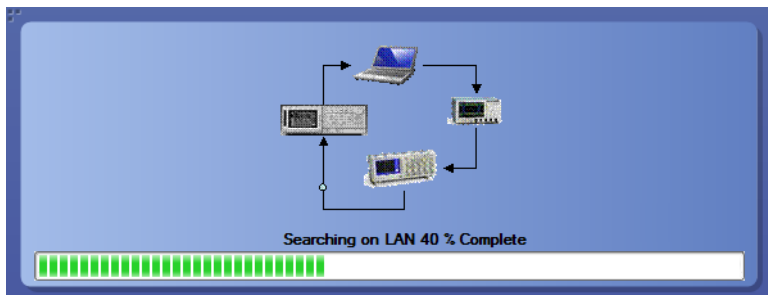

Search status of the instruments connected to LAN


4. When the search is complete, a dialog box lists the instrument-related details based on the search criteria. For example, for the Search Criteria as LAN and GPIB, the application displays all the LAN and GPIB instruments connected to the application.

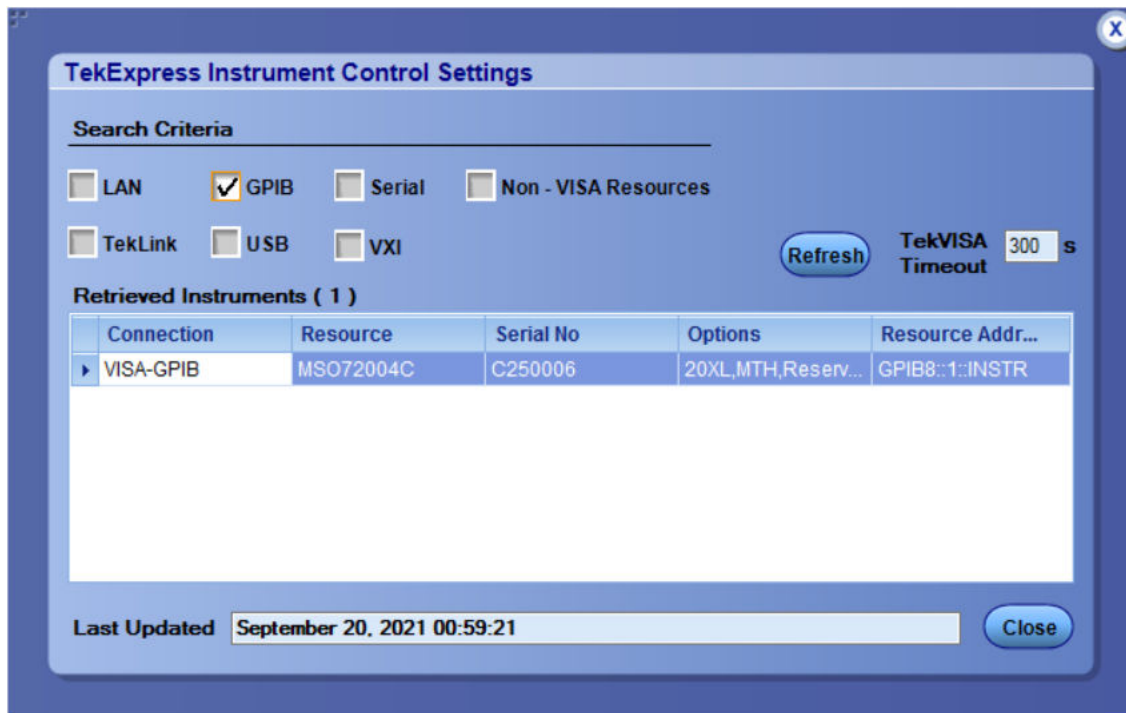


The details of the instruments are displayed in the Retrieved Instruments table. The time and date of instrument refresh is displayed in the Last Updated field.

Starting the application

To start the TekExpress PCI Express, select from the oscilloscope menu bar. **Applications > TekExpress PCI Express**

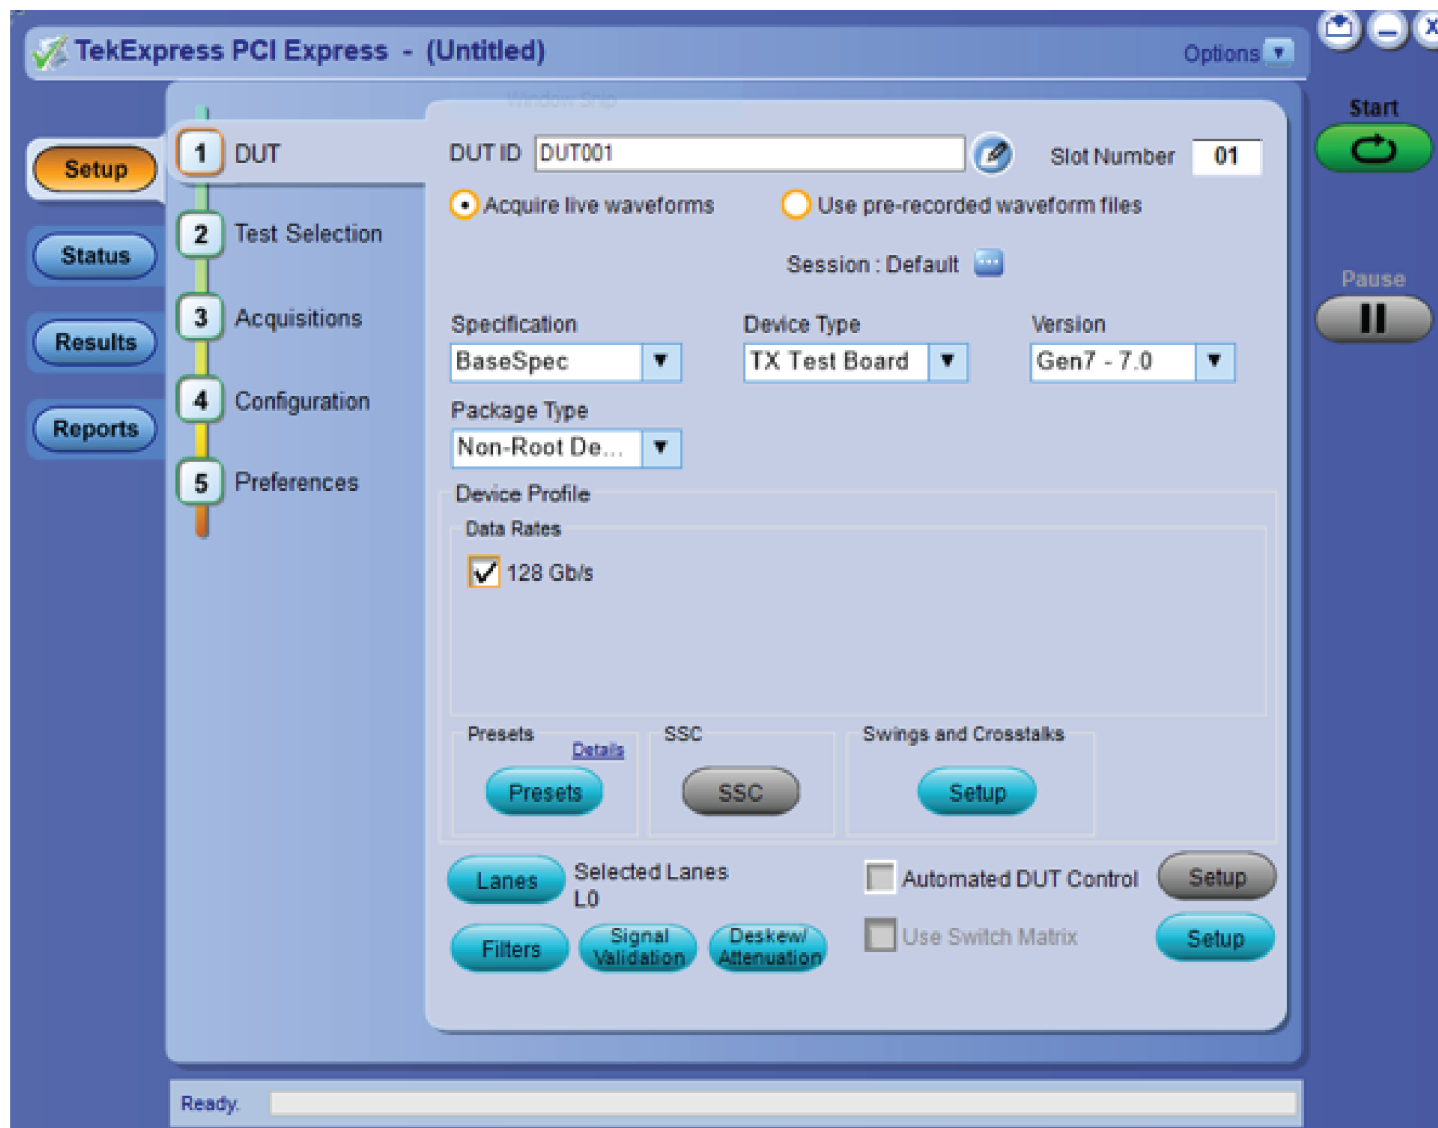

TekExpress PCI Express application start screen (with ATI Mode)

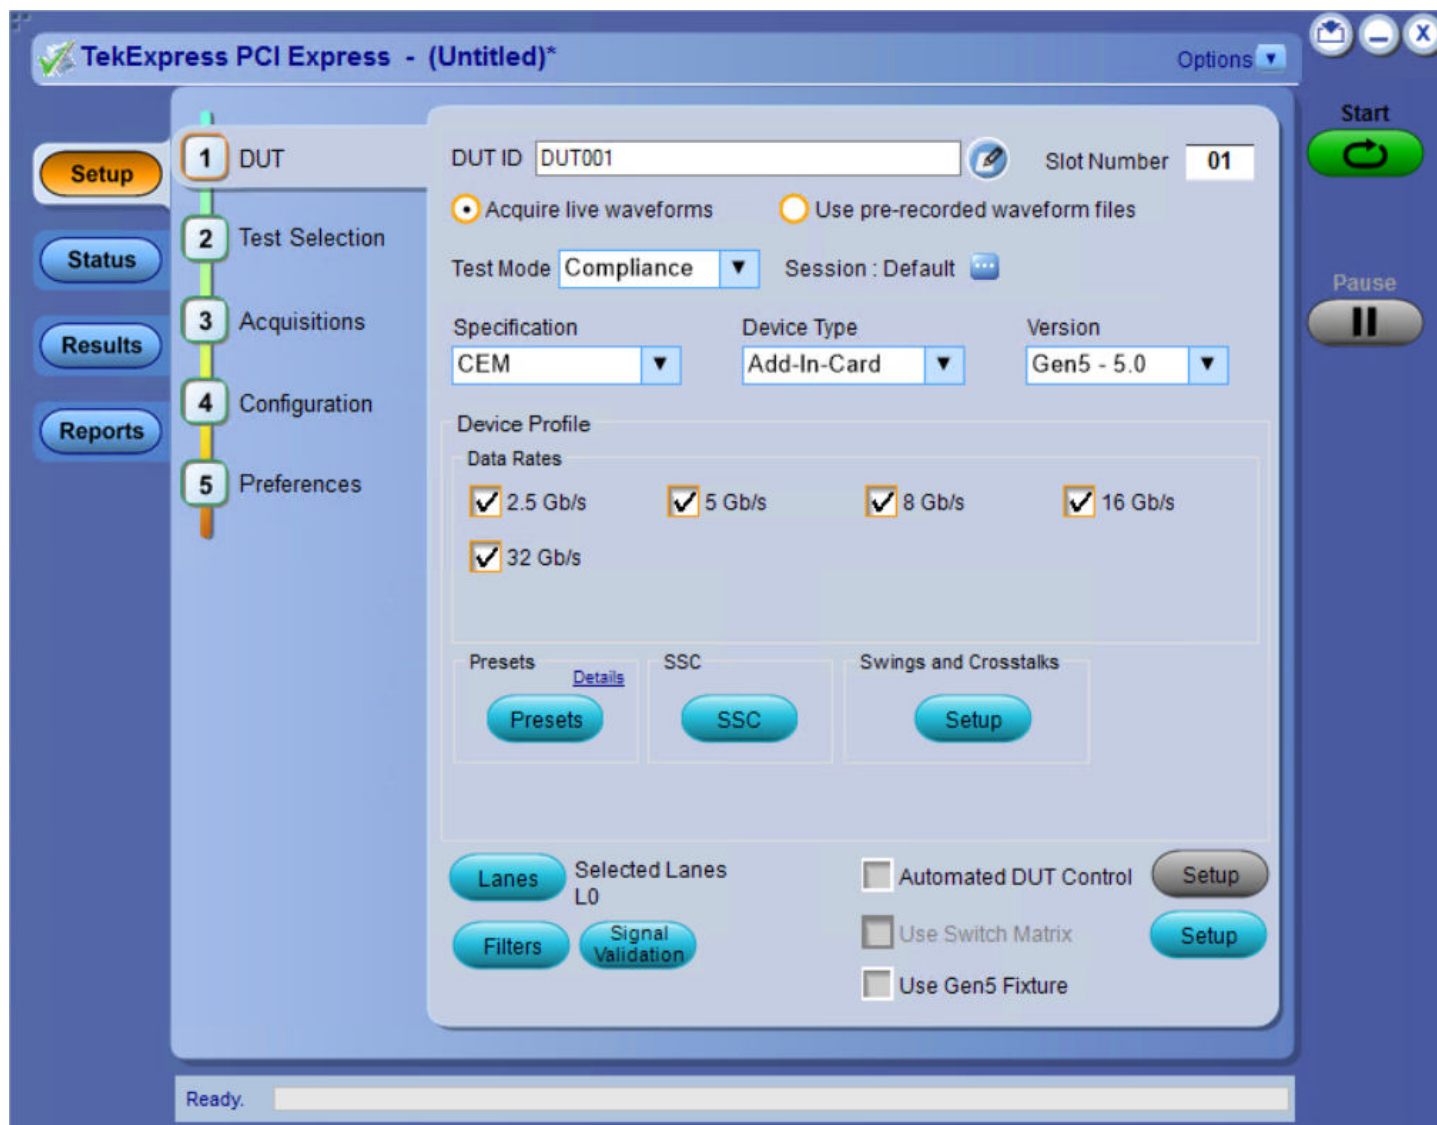

TekExpress PCI Express application start screen (Non-ATI Mode)


During start, a "My TekExpress" folder is created in the Documents folder of the current user and gets mapped to "X" drive. When the application is closed properly, the "X" drive gets unmapped. Session files are then stored inside the X:\PCI Express folder. If this file is not found, the application runs an instrument discovery program to detect connected instruments before starting TekExpress PCI Express.


To keep the TekExpress PCI Express application on top of any application, select **Keep On Top** from the [options menu](#) (on page 36). If the application goes behind the oscilloscope application, select **Applications > TekExpress PCI Express** to bring the application to the front.

Application controls

This section describes the application controls with functionality and its details.


Application control description

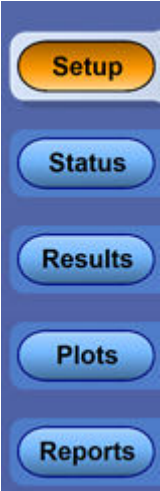Item	Description
Options menu (on page 36) Options 	Menu to display global application controls.
Test panel 	Controls that open tabs for configuring test settings and options.
Start / Stop button  	Use the Start button to start the test run of the measurements in the selected order. If prior acquired measurements are not cleared, then new measurements are added to the existing set. The button toggles to the Stop mode while tests are running. Use the Stop button to abort the test.
Pause / Continue button 	Use the Pause button to pause the acquisition. When a test is paused, this button changes as Continue .

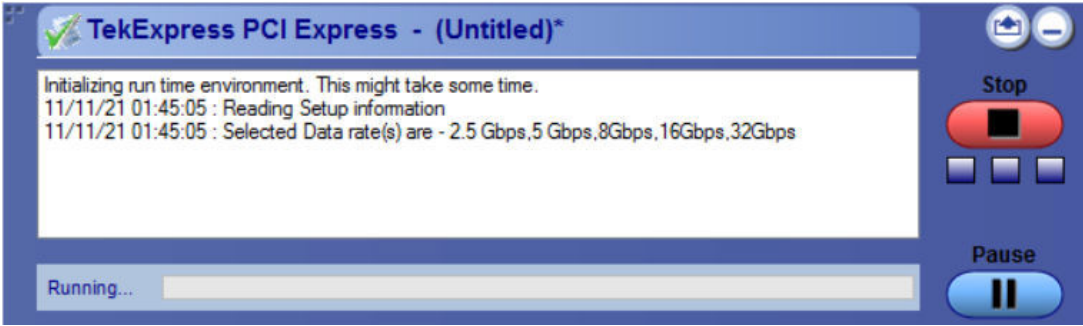Item	Description
Clear button 	Use the Clear button to clear all existing measurement results. Adding or deleting a measurement, or changing a configuration parameter of an existing measurement, also clears measurements. This is to prevent the accumulation of measurement statistics or sets of statistics that are not coherent. This button is available only on Results panel (on page 75). NOTE: This button is visible only when there are results data on the panel.
Application window move icon 	Place the cursor over the top of the application window to move the application window to the desired location
Minimize icon 	Minimizes the application.
Close icon 	Close the application.
Mini view / Normal view  	Mini view displays the run messages with the time stamp, progress bar, Start / Stop button, and Pause / Continue button. The application moves to mini view when you click the Start button. 

Options menu functions


To access the **Options** menu, click  in the upper-right corner of the application. It has the following selections:

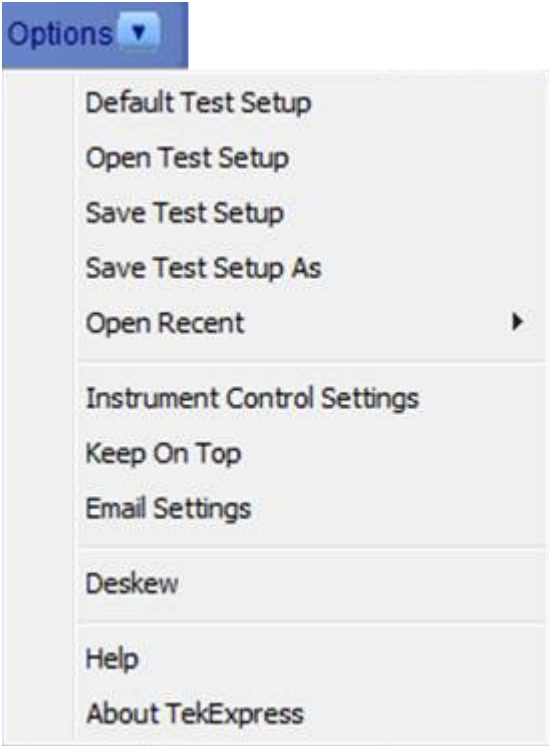

Options menu

Options menu settings

Menu	Function
Default Test Setup	Opens a new test setup with default configurations.
Open Test Setup	Opens a previously saved test setup. Displays the list of previously saved test setup file names. Make the selection and click OK to open the test setup.
Save Test Setup	Saves the current test configurations with the specified file name.
Save Test Setup As	Saves the current test setup with a different file name or file type.
Open Recent	Displays the recently opened test setup file names. Make the selection and click OK to open the test setup.

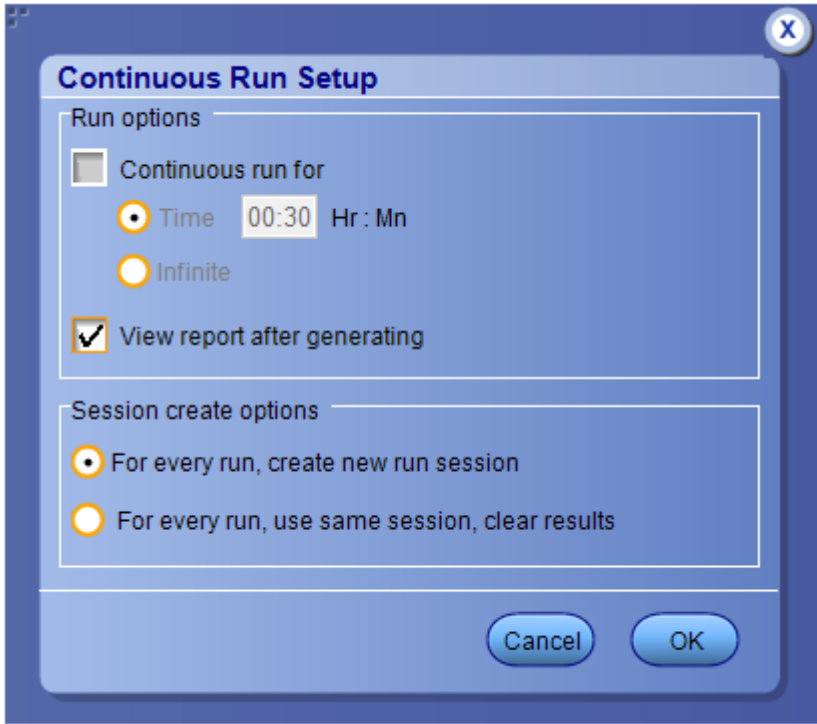
Menu	Function
Continuous Run Setup	Select to display a setup dialog box to configure the settings for continuous run of the tests with the set of conditions.  The continuous run setup dialog box consists of the following controls: ▪ Continuous run for: Select this to enable the continuous run function. ▪ This control also specifies the amount of time the continuous run should function using the following options: • Time: Select and specify the amount of time using the edit box in the format Hr : Mn. • Infinite: Select to set the continuous run to function for infinite amount of time. ▪ View report after generating: Select to generate and view the report after the run is complete. ▪ Session create options: This control configures the session creation settings. Use the following options to configure the settings: • For every run, create new run session: Select to create a new session after every run. • For every run, use same session, clear results: Select to use the same session for every new run. Clear the session data of the previous run before using the same session for the next run.
TekExpress instrument control settings (on page 38)	Detects, lists, and refreshes the connected instruments found on the specified connections (LAN, GPIB, USB, Serial, Non-VISA Resources, TekLink, and VXI).
Keep On Top	Always keeps the TekExpress application on top of all the applications.

Menu	Function
Configure email settings (on page 39)	Configures email options for test run and result notifications.
Deskew	Loads oscilloscope channel deskew settings into the application.
Help	Displays the TekExpress PCI Express help.
About TekExpress	Displays the application name, version, and hyperlink to end the user license agreement.

TekExpress instrument control settings

Use the **TekExpress Instrument Control Settings** dialog box to search the instruments (resources) connected to the application. You can use the **Search Criteria** options to search the connected instruments depending on the connection type. The details of the connected instrument is displayed in the Retrieved Instruments window.

To access, click **Options > Instrument Control Settings**. Select **USB** and **LAN** as search criteria for TekExpress application and click **Refresh**. The connected instruments displayed in the Retrieved Instruments window and can be selected for use under Global Settings in the test configuration section.

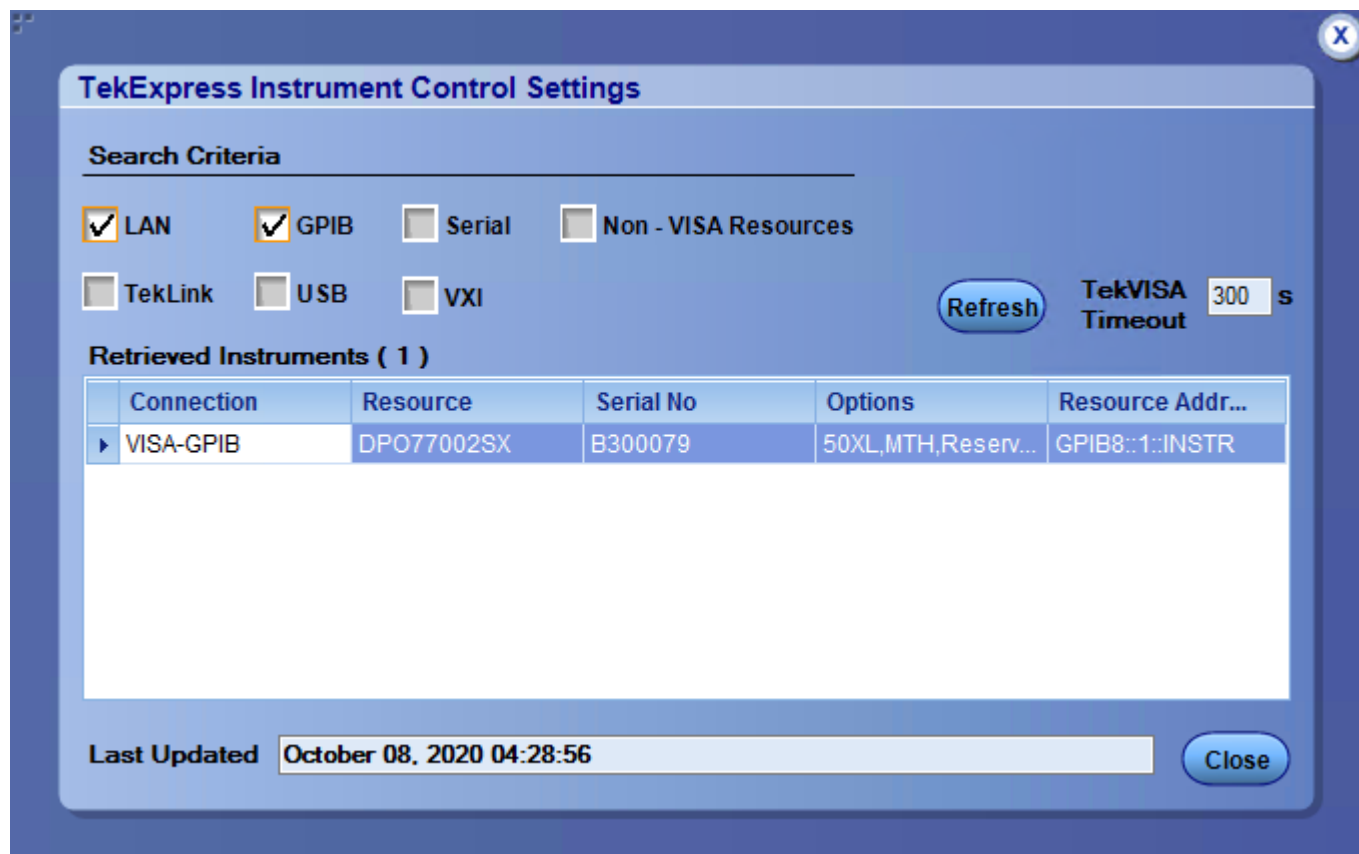


TekExpress instrument control settings window

See also

[Options menu functions](#) (on page 36)

Configure email settings

Use the **Email Settings** utility to get notified by email when a measurement completes or produces any error condition. Follow the steps to configure email settings:

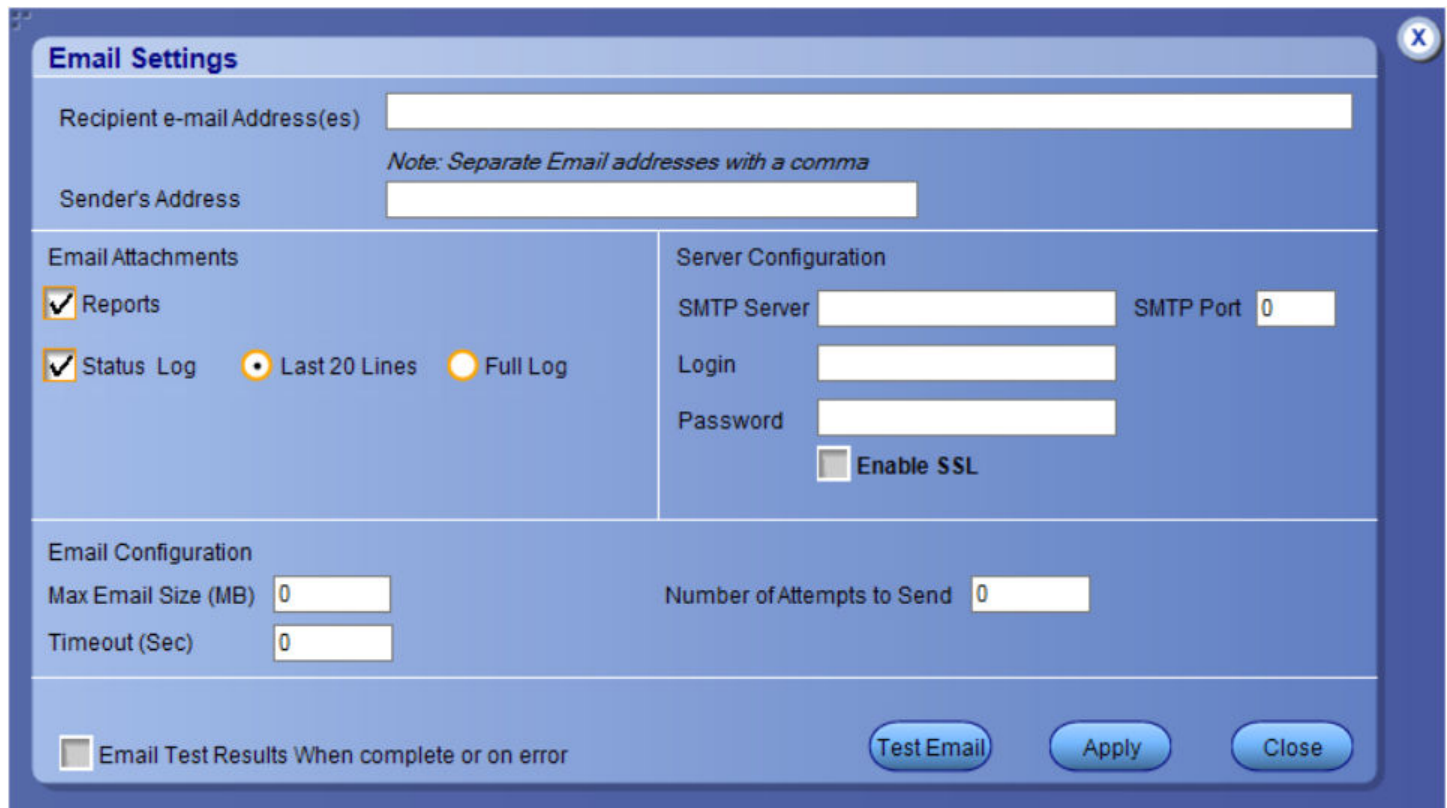

Email Settings

Recipient e-mail Address(es)

Note: Separate Email addresses with a comma

Sender's Address

Email Attachments

☒ Reports

☒ Status Log ☒ Last 20 Lines ☐ Full Log

Server Configuration

SMTP Server SMTP Port

Login

Password

☐ Enable SSL

Email Configuration

Max Email Size (MB) Number of Attempts to Send

Timeout (Sec)

☐ Email Test Results When complete or on error

Email settings window

1. Select **Options > Email Settings** to open the Email Settings dialog box.
2. (Required) For **Recipient email Address(es)**, enter one or more recipient email addresses. To include multiple addresses, separate the addresses with commas.
3. (Required) For **Sender's Address**, enter the email address used by the instrument. This address consists of the instrument name, followed by an underscore, followed by the instrument serial number, then the @ symbol, and the email server ID. For example: user@yourcompany.com.
4. (Required) In the **Server Configuration** section, type the SMTP Server address of the Mail server configured at the client location, and the SMTP Port number, in the corresponding fields.
If this server requires password authentication, enter a valid login name, password, and host name in the corresponding fields.


NOTE: If any of the above required fields are left blank, the settings will not be saved, and email notifications will not be sent.

5. In the **Email Attachments** section, select from the following options:
 - **Reports:** Select to receive the test report with the notification email.
 - **Status Log:** Select to receive the test status log with the notification email. If you select this option, then also select whether you want to receive the full log or just the last 20 lines.
6. In the **Email Configuration** section:
 - Enter a maximum file size for the email message. Messages with attachments larger than this limit will not be sent. The default is 0 MB.
 - Enter the number in the Number of Attempts to Send field, to limit the number of attempts that the system makes to send a notification. The default is 1. You can also specify a timeout period.
7. Select the **Email Test Results When complete or on error** check box. Use this check box to quickly enable or disable email notifications.

8. To test your email settings, click **Test Email**.
9. To apply your settings, click **Apply**.
10. Click **Close** when finished.

Setup panel: Configure the test setup


The Setup panel contains sequentially ordered tabs that help you guide through the test setup and execution process.

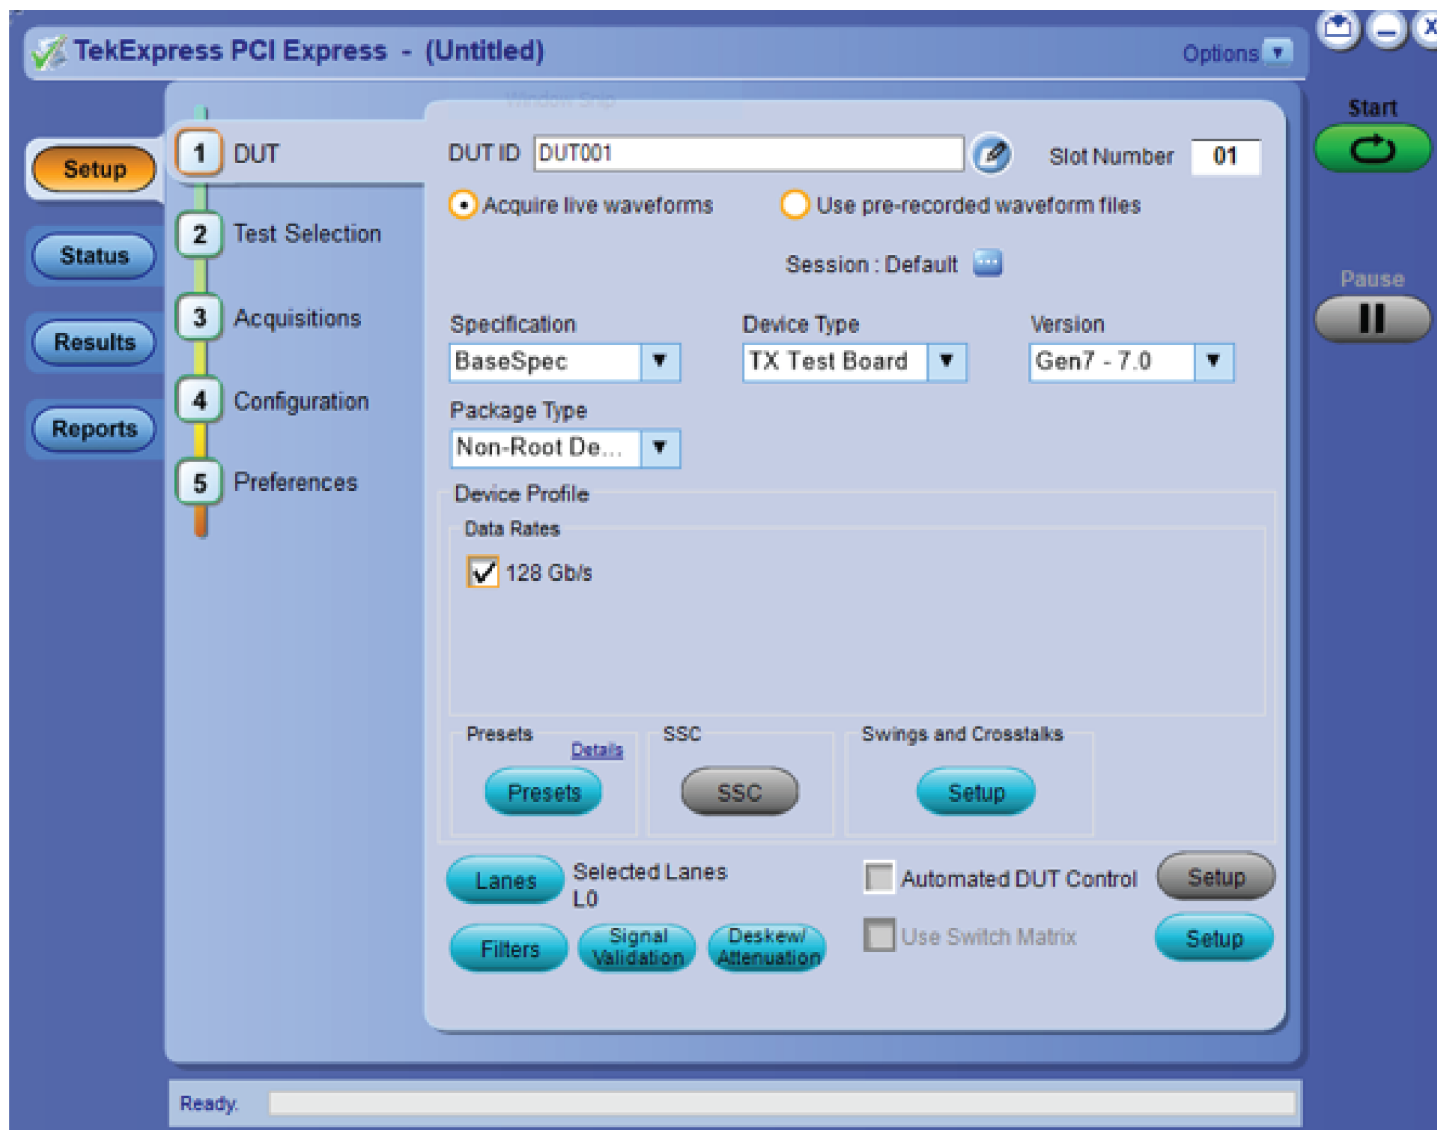

TekExpress PCI Express application start screen (with ATI Mode)

DUT: Set DUT settings

Use the DUT tab to select parameters for the device under test. These settings are global and apply to all tests of current session. DUT settings also affect the list of available tests in the Test Selection tab.

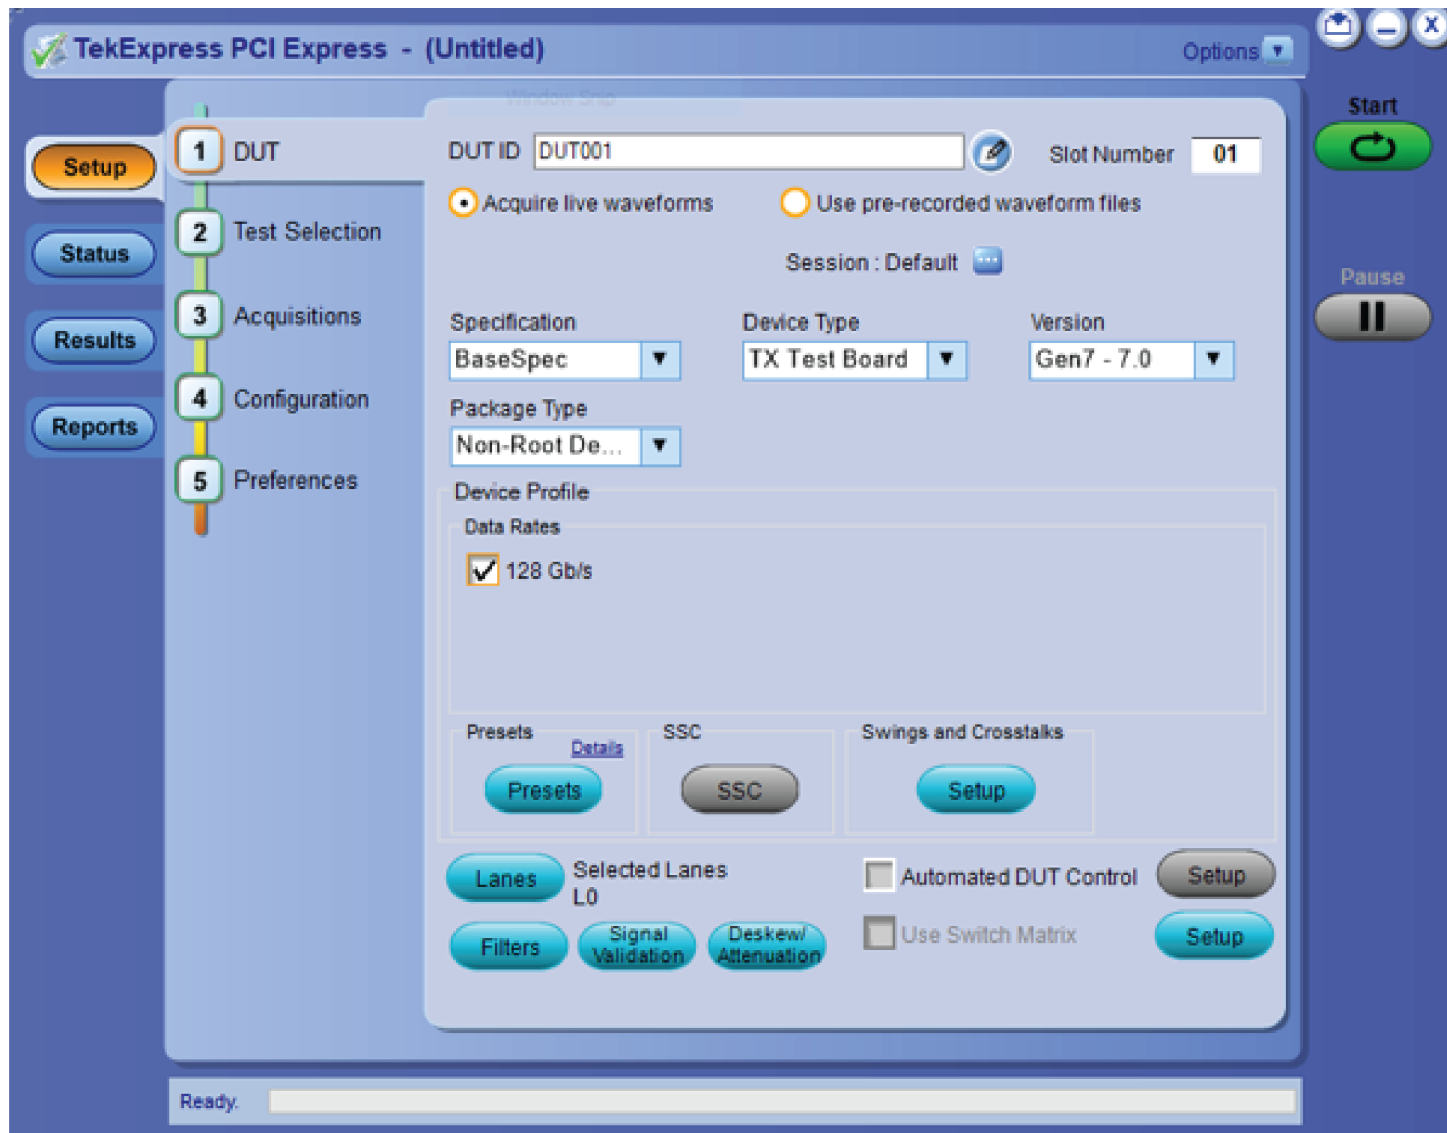

TekExpress PCI Express application start screen (with ATI Mode)

Click **Setup** > **DUT** to access the DUT parameters:

DUT tab configuration

Setting	Description
DUT ID	Adds an optional text label for the DUT to reports. The default value is DUT001. Maximum length for the DUT ID is 20 characters. NOTE: In pre-recorded mode, waveform recall will not be successful if the session name is lengthy, i.e. more than 10 characters.
Slot Number	The slot parameter (1, 2, 4, 8,16, or 32) of the DUT.

Setting	Description
 Comments icon (to the right of the DUT ID field)	Opens a Comments dialog box in which to enter optional text to add to a report. The maximum number of characters is 256. To enable or disable comments appearing on the test report, refer View a generated report (on page 82).
Acquire live waveforms	Acquire active signals from the DUT for testing.
Use prerecorded waveform files	Run tests on a saved waveform. Load a saved test setup (on page 89)
Test Mode	Sets the overall testing mode. Select Compliance or User Defined: - Compliance: Preselects tests and parameters to meet compliance specifications for the selected version, specification, and device type. - User Defined: Enables the user to select specific tests and set custom parameters for tests. NOTE: Not applicable for the <i>Device type / Specification type</i> BaseSpec
Session (on page 53)	Allows you to save multiple config sessions and run multiple config/run sessions together.
Specification	PCIe supports the CEM, BaseSpec, RefClockSpec, U.2 (SFF-8639), and M.2 specification.
Device Type	Sets the DUT device type. The device type available depends on the selected specification. Following are the device types for each specifications - CEM: - Add-In-Card - System-Board - BaseSpec: - TX Test Board - SRIS TX Test Board - RefClockSpec: - Ref Clock - U.2 (SFF-8639): - Module - Host - M.2 - M2_Add-In-Card - M2_Host NOTE: CXL device type support is newly added to the TekExpress PCIe TX application. Refer CXL Support (on page 79) for more details.

Setting	Description
Version	Sets the DUT generation version. Available versions are: ▪ CEM: Gen 1 (1.0a and 1.1), Gen2 (2.0), Gen3 (3.0), Gen4 (4.0), Gen5 (5.0), and Gen6 (6.0) ▪ Base Spec: Gen3 (3.0), Gen4 (4.0), Gen5 (5.0), Gen6 (6.0) and Gen7 (7.0) ▪ RefClockSpec: Gen 1 (1.0a and 1.1), Gen2 (2.0), Gen3 (3.0), Gen4 (4.0), Gen5 (5.0), and Gen6 (6.0) ▪ U.2: Gen3 (3.0) ▪ M.2: Gen3 (3.0) ▪ CXL: Gen3 (3.0), Gen4 (4.0) and Gen5 (5.0)
Device Profile	
Data Rates	Sets the data rates to test (2.5 Gb/s, 5 Gb/s, 8 Gb/s, 16 Gb/s, 32 Gb/s, 64 Gb/s and 128 Gb/s). The data rates available depend on the selected DUT version.
Filters	Opens the Filter Setup dialog box (on page 48) to select custom filter files with which to perform link analysis on the source waveforms.


Setting	Description																																																												
Presets	NOTE: This settings is only available for Gen2, Gen3, Gen4, Gen5, Gen6 and Gen7 DUT versions. Opens the Presets dialog box. User can select Gen2 preemphasis and Gen3 to Gen5 presets (P0 to P10) Gen6 and Gen7 (Q0 to Q10) for signal quality tests in respective tabs. All preemphasis and presets are selected by default. At least one preemphasis level/preset must be selected for each generation. Signal Quality Preset Selection 5 GB/s 8 GB/s 16 GB/s 32 GB/s ☒ 3.5 dB ☒ 6 dB Select All Deselect All Cancel OK Signal Quality Preset Selection 128 GB/s <table><tr><th></th><th>Preset</th><th>Preshoot1</th><th>Preshoot2</th><th>Deemphasis</th></tr><tr><td>☒</td><td>Q0</td><td>0.0</td><td>0.0</td><td>0.0</td></tr><tr><td>☒</td><td>Q01</td><td>1.6</td><td>0.0</td><td>0.0</td></tr><tr><td>☒</td><td>Q02</td><td>3.5</td><td>0.0</td><td>0.0</td></tr><tr><td>☒</td><td>Q03</td><td>0.0</td><td>0.0</td><td>-1.6</td></tr><tr><td>☒</td><td>Q04</td><td>0.0</td><td>0.0</td><td>-3.5</td></tr><tr><td>☒</td><td>Q05</td><td>4.7</td><td>-1.3</td><td>0.0</td></tr><tr><td>☒</td><td>Q06</td><td>3.5</td><td>-1.6</td><td>-3.5</td></tr><tr><td>☒</td><td>Q07</td><td>4.7</td><td>-2.9</td><td>0.0</td></tr><tr><td>☒</td><td>Q08</td><td>6.0</td><td>-3.5</td><td>0.0</td></tr><tr><td>☒</td><td>Q09</td><td>6.9</td><td>-4.4</td><td>-1.6</td></tr><tr><td>☒</td><td>Q10</td><td>0.0</td><td>0.0</td><td>-9.5</td></tr></table> Select All Deselect All Cancel OK		Preset	Preshoot1	Preshoot2	Deemphasis	☒	Q0	0.0	0.0	0.0	☒	Q01	1.6	0.0	0.0	☒	Q02	3.5	0.0	0.0	☒	Q03	0.0	0.0	-1.6	☒	Q04	0.0	0.0	-3.5	☒	Q05	4.7	-1.3	0.0	☒	Q06	3.5	-1.6	-3.5	☒	Q07	4.7	-2.9	0.0	☒	Q08	6.0	-3.5	0.0	☒	Q09	6.9	-4.4	-1.6	☒	Q10	0.0	0.0	-9.5
	Preset	Preshoot1	Preshoot2	Deemphasis																																																									
☒	Q0	0.0	0.0	0.0																																																									
☒	Q01	1.6	0.0	0.0																																																									
☒	Q02	3.5	0.0	0.0																																																									
☒	Q03	0.0	0.0	-1.6																																																									
☒	Q04	0.0	0.0	-3.5																																																									
☒	Q05	4.7	-1.3	0.0																																																									
☒	Q06	3.5	-1.6	-3.5																																																									
☒	Q07	4.7	-2.9	0.0																																																									
☒	Q08	6.0	-3.5	0.0																																																									
☒	Q09	6.9	-4.4	-1.6																																																									
☒	Q10	0.0	0.0	-9.5																																																									

Setting		Description
Swings and Crosstalks	Voltage Swing Limits	Sets the lane/link transmitter p-p voltage swing. This affects the limits applied to certain measurements based on the settings and does not change anything on the DUT tab.
	Crosstalk Limits	Sets specific eye test limits depending on if the DUT design uses interleaved or non interleaved routing. This affects the limits applied to certain measurements based on the settings and does not change anything on the DUT tab. This is applicable for Gen2. - When the DUT uses noninterleaved routing, select Crosstalk (noninterleaved routing). - When the DUT uses interleaved routing, select No Crosstalk (interleaved routing).
SSC (Spread Spectrum Clocking)		Enables or disables SSC clocking. This affects the limits applied to certain measurements based on the settings and does not change anything on the DUT tab.
Lanes		Opens the Test Lane Setup dialog box to select the lanes to test. Lanes required for compliance testing are colored orange. At least one lane must be selected. The Link Width setting determines the number of lanes that can be tested.
Automated DUT Control		Enables automatic toggling of the DUT into different test modes (generation/equalization). Requires the use of an AFG or AWG or NI USB toggle tool. Click Setup to access the Automated DUT control setup (on page 49)
Use Switch Matrix		Select to use the switch matrix. This solution allows you to map each of the several transmitter signals and forward the selected input either to another relay or to the oscilloscope channel. Click Setup to configure the switch matrix. Refer Switch Matrix application (on page 96) for more details on configurations. NOTE: Keithley supports maximum of 12 lanes and Gigatronics supports maximum of 16 lanes.
Signal validation	Signal validation	Sets the application to validate acquisition signals and perform the specified action to take when acquired signals do not meet requirements. Select the action from the list.
	Perform Pattern Decoding	Select to validate the pattern according to the respective lane and preset for Gen3.
Deskew/Attenuation		Provides the option of setting deskew and attenuation values on the scope either in an automated way or manual way. Refer Deskew and Attenuation (on page 27) for more details.


Setting	Description
Test Type	Use this procedure to choose between CEM or Base type of Ref Clock testing. Test Type ☒ CEM ☐ Base NOTE: This is only available for Ref Clock testing and the measurement limits will be changed based on this setting.

Filter setup dialog box


The filter setup dialog box lets you select custom filter files for performing link analysis on the source waveforms. The options available depends on the Specification selected.

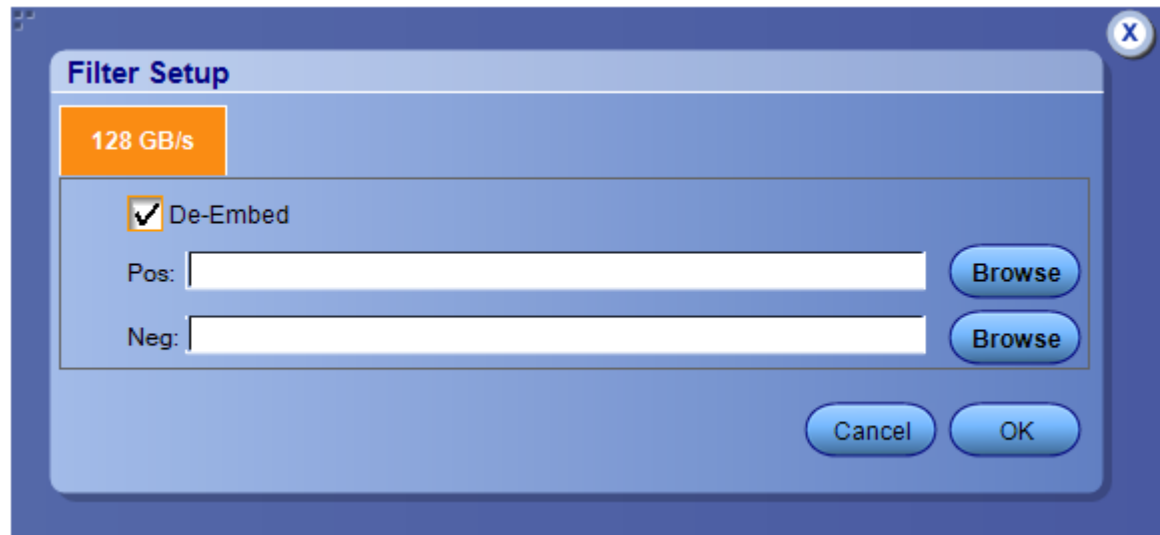

Filter Setup for Gen7 BaseSpec

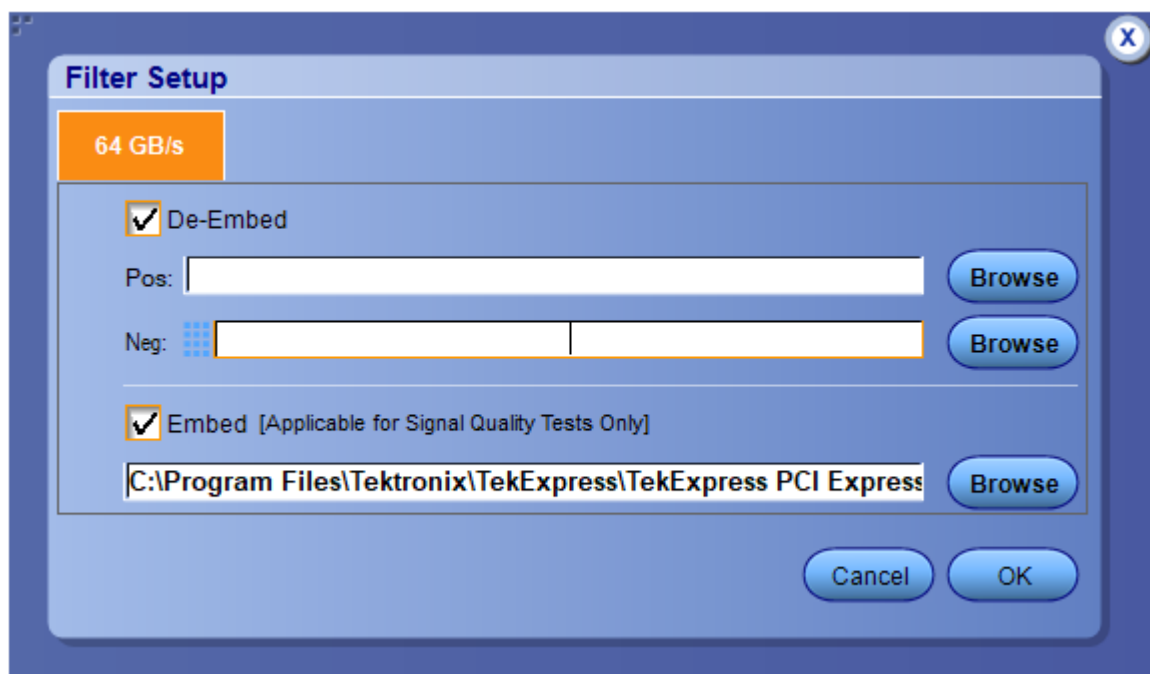

Filter Setup for Gen6 CEM

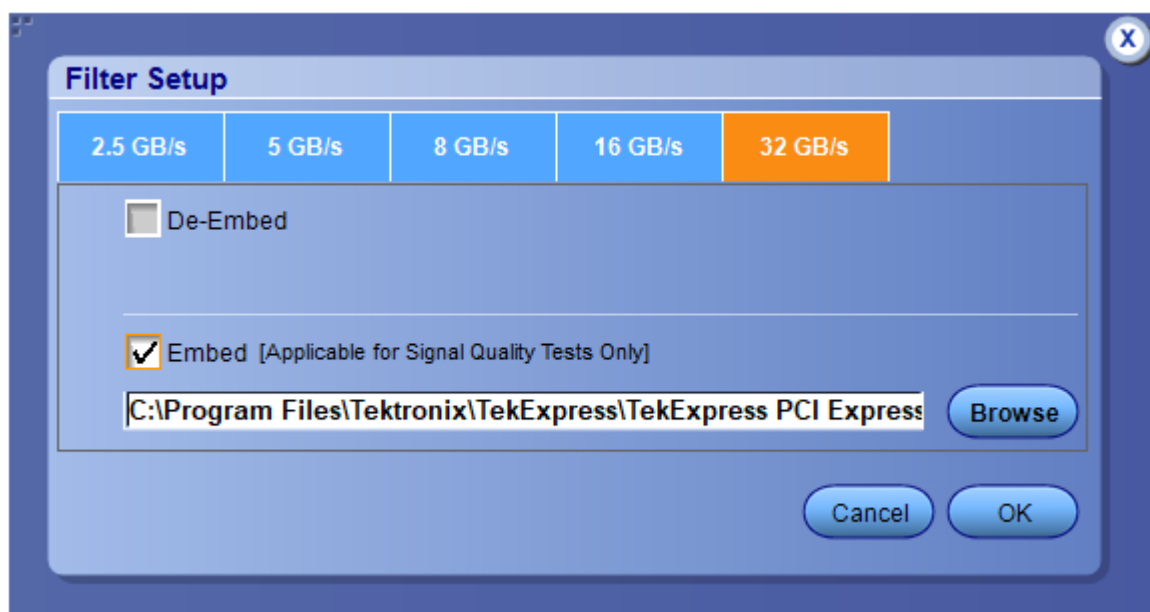

De-Embed

Select de-embed for the data rate; click **Browse** and select the de-embed filter file.

- For single ended probe in ATI Mode, select 2 de-embed filter files for positive and negative data respectively.
- For differential probe or TekConnect channels used, select single de-embed filter file for both positive and negative data.

Embed

Select Embed for the data rate; click **Browse** and select the embed filter file.

Automated DUT control setup

The Automated DUT Control dialog box sets the parameters needed for automatic toggling of the DUT into different test modes (generation/equalization). DUT automation requires the use of a signal source AFG or AWG or NI USB toggle.

Automated DUT Control

Initial State

Initial State of DUT

2.5Gbps

Initial State of Signal Source

On

Number of Gen4 Dataclock Patterns

9

Number of Gen5 Dataclock Patterns

9

Number of Gen6 Dataclock Patterns

9

Number of Gen7 Dataclock Patterns

9

Automation Settings

Automation Settings

Use Default Settings

Signal Source Parameters

Signal Type

Sine

Frequency

100M

Hz

Amplitude

300m

Vpp

Burst Count

100k

* Note: CH1 and CH2 of signal source are 180° apart

Cancel

OK

Parameter	Description
Initial State	
Initial State of DUT	Sets the starting state of the DUT.
Initial State of Signal Source	Sets the AFG/AWG state to On (default) or Off . The On state enables the AFG/AWG output before the application starts signal acquisition. Some DUTs will toggle to the next signal state when the AFG/AWG initial state is On. Set the initial state to Off for these types of DUTs before running automated tests.
Number of Gen4 Dataclock patterns	Allows to select the number of Gen4 dataclock patterns the DUT supports, between 0 to 15. NOTE: The dataclock pattern is selected as 9 by default.
Number of Gen5 Dataclock patterns	Allows to select the number of Gen5 dataclock patterns the DUT supports, between 0 to 15. NOTE: The dataclock pattern is selected as 9 by default.

Parameter	Description
Number of Gen6 Dataclock patterns	Allows to select the number of Gen6 dataclock patterns the DUT supports, between 0 to 15. NOTE: The dataclock pattern is selected as 9 by default.
Number of Gen7 Dataclock patterns	Allows to select the number of Gen7 dataclock patterns the DUT supports, between 0 to 15. NOTE: The dataclock pattern is selected as 9 by default.
Automation Settings	
Automation Settings (for AFG only)	The Automation Settings values are as follows : ▪ Use Default Settings: The signal source parameters are set to predefined values as recommended by the test specification. The signal source parameter fields are disabled and cannot be edited. ▪ Manually Configure Settings: The signal source parameters are set directly at the AFG. The signal source parameter fields are disabled and cannot be edited. The PCIe application turns on or off the signal source without changing the settings. ▪ Use Custom Settings: The signal source parameters are set to the values specified in the Signal Source Parameters area. The signal source parameter fields are enabled.
Signal Source Parameters	
Signal Type	Valid signal types are Sine and Square .
Frequency	Sets the AFG to output the specified frequency and amplitude values.
Amplitude	
Burst Count	Sets the AFG to output the specified signal burst count. NOTE: Ch 1 and Ch 2 on the AFG source are set to 180° phase difference in all modes except Manually Configure Settings. Using DC Caps or Manual toggle, you can eliminate the automatic toggling issues that is due to DC offset.


NI USB 6501 DUT Controller Support

The following information provides how to use NI USB 6501 DUT Controller Support.


- TekExpress PCIe TX application added support for National Instrument USB-6501 CBB controller device in TekExpress PCIe Express TX application. This device can be used to toggle the DUT.
- In order to detect the hardware and access it, the user will have to install the NI-DAQMX v20.7.1 software package in the Tekscope.

Steps to setup NI USB 6501 device in TekExpress:

1. Go to Configuration Panel.
2. Click on the **Instrument Control Settings** button.
3. In the **TekExpress Instrument Control Settings** pop-up window, check **Non-VISA Resources** and then click the **Refresh** button.
4. If the NI device is connected to the scope, it will be shown in the **Retrieved Instruments**.

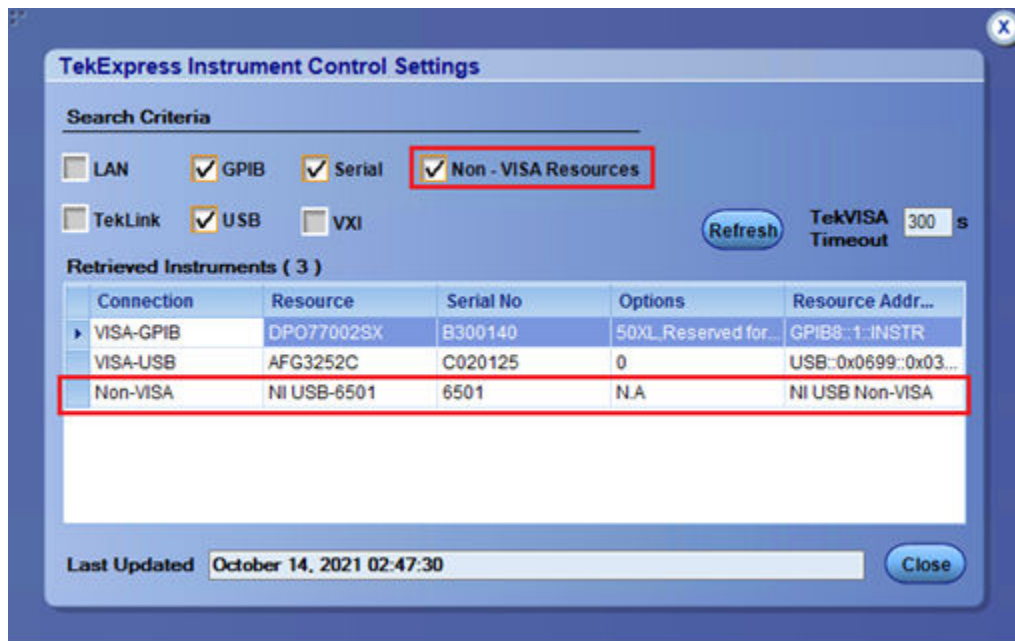

5. Close the pop-up window.
6. The device now can be selected under **Signal Source for DUT Automation**.

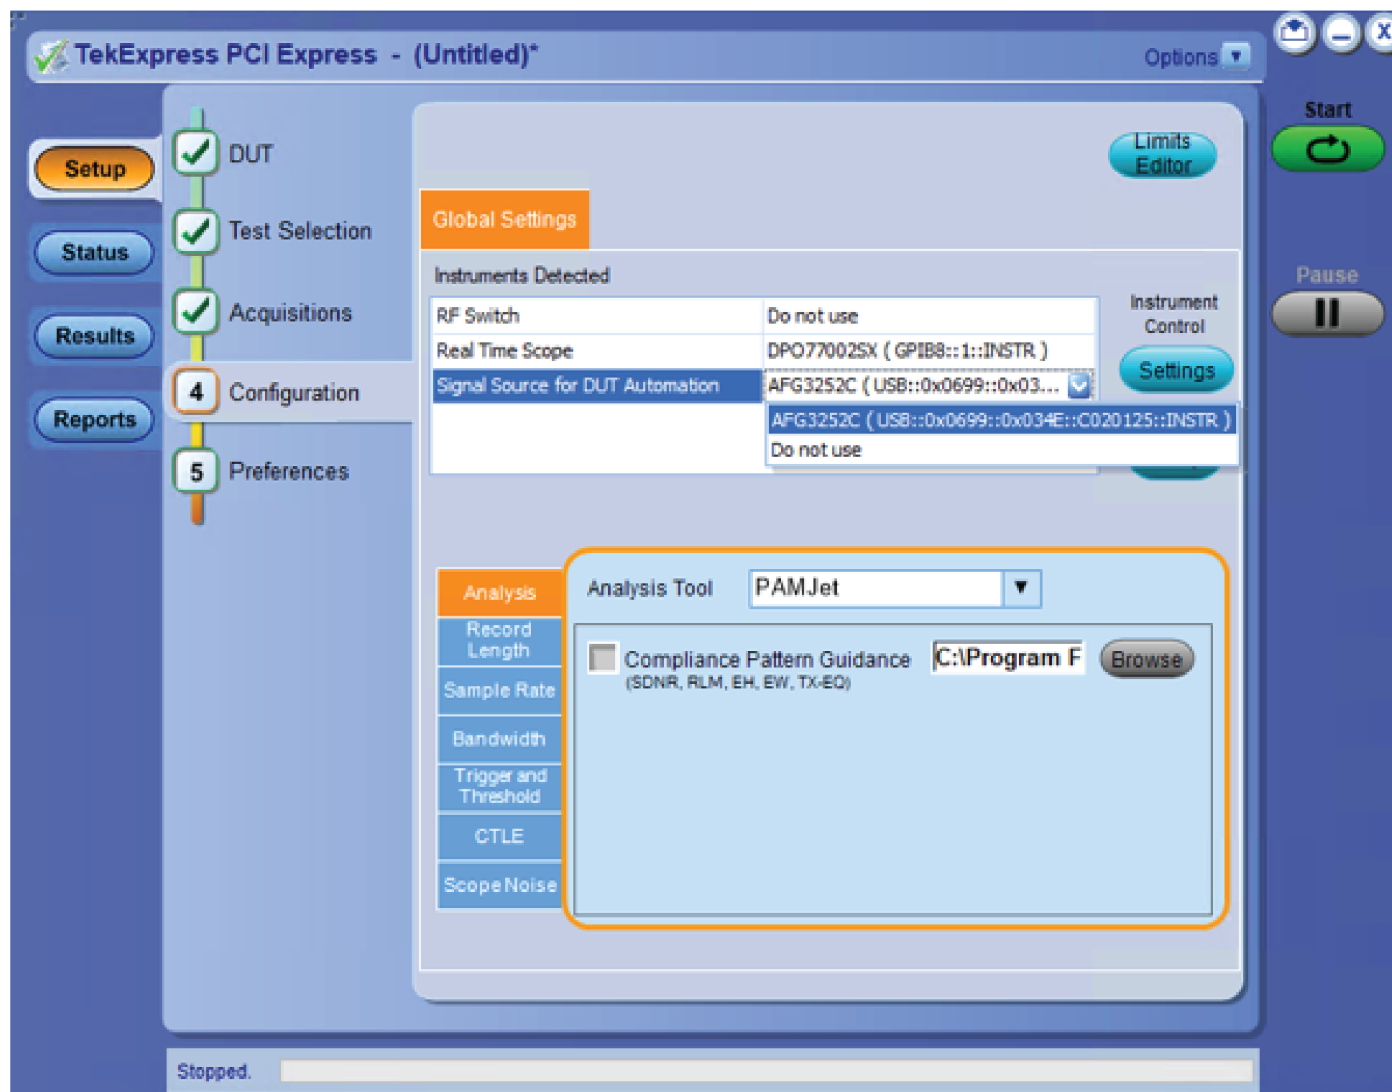


Multiple-session run

Multiple-sessions run feature allows you to save multiple config sessions and runs the multiple config/run sessions together.

Click () button in the DUT panel, displays the Run/Config Session window. The Run/Config session window provides the list of saved

sessions and the ability to run selected sessions..

- Config session – Session saved by user manually from Run/Config Sessions window.
- Run session – Session created automatically after the test is executed.

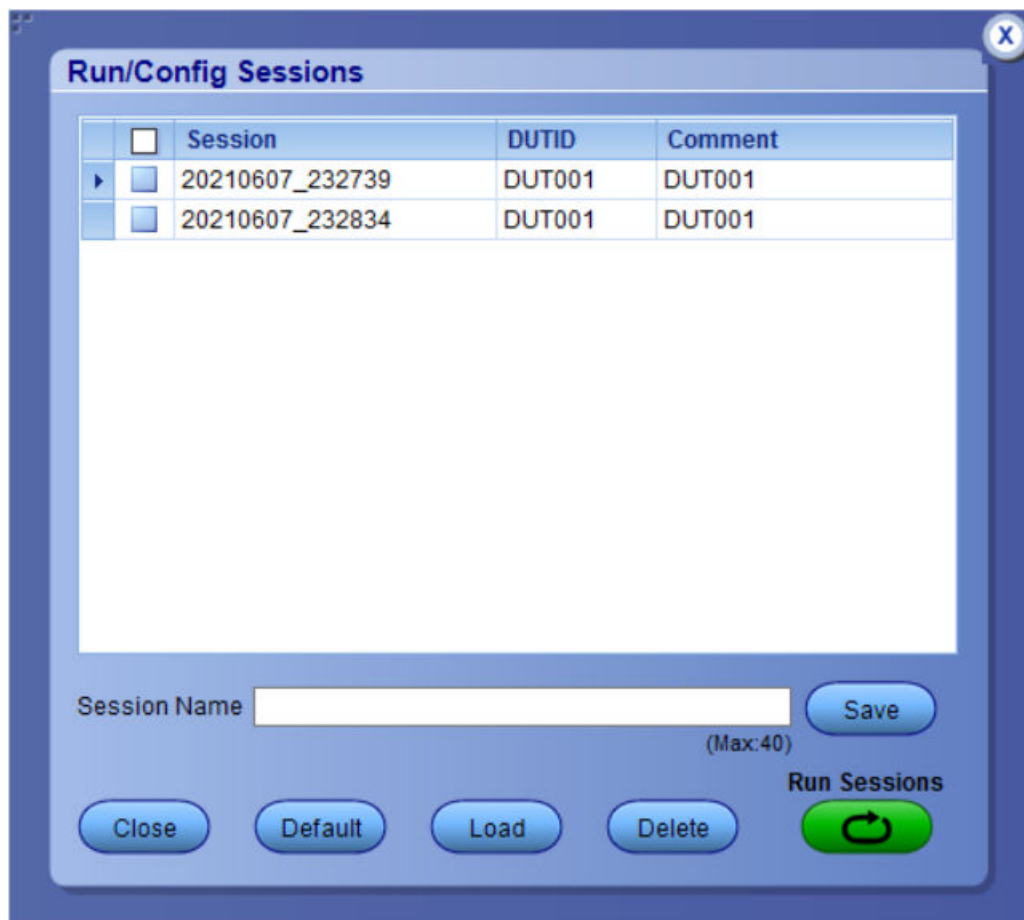


- **Session Name:** Enter the name to save the config session. The maximum number of character supported is 40 and special characters (.,,.,.,.,.,.,./,:?"<>|*) are not supported.
- **Save:** Save current configuration as a session with the given session name.
- **Close:** Close the Run/Config Session window.
- **Default:** Sets the application configurations to default values.
- **Load:** Load the selected config/run session.
- **Delete:** Delete the selected config/run session.
- **Run Sessions:** Run the selected config/run session.

Enable/ Disable the Multi Run session

By default the **Multi Run Session** is enabled in the application. Set the IsMultiSessionRunEnabled value to false to disable the **Multi Run Session** feature in the TekExpress.exe.Config file, which is downloaded along the application.

Test Selection: Select the tests

Use the Test Selection tab to select the tests. The test measurements available depends on the settings selected in the DUT tab.

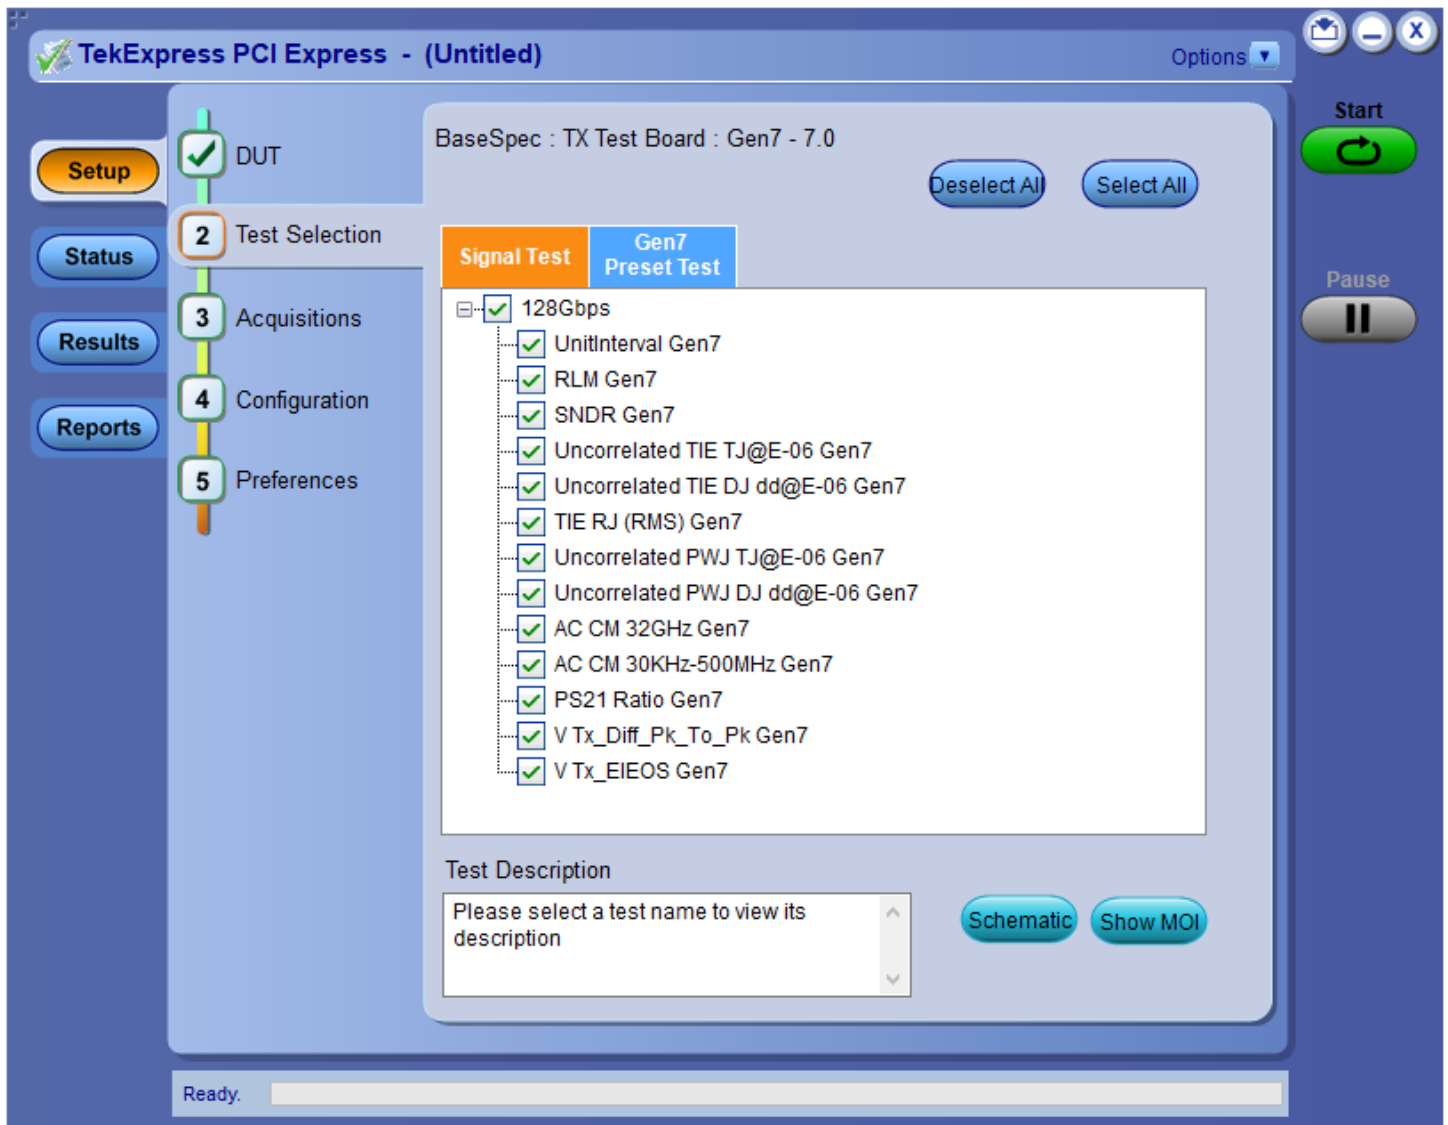

Test Selection tab configuration

Setting	Description
Signal Tests	Click + to expand a group of commands. Click the check box adjacent to a test group to select all tests in that group. Click check boxes adjacent to individual tests to select those tests.
Deselect All	Click Deselect All button to deselect all tests.
Select All	Click Select All button to select all tests.
Show MOI	Click Show MOI button to open the MOI (Methods of Implementation) document for all measurements.
Schematic	Click Schematic button to view a diagram that shows the correct DUT and equipment setup for the selected test. Use to verify your test equipment setup before running the test.
Gen3, Gen4, Gen5 Gen6 and Gen7 testing	Click the required Preset Test tab and select the presets tests.


Setting	Description
Lanes	Click the Lanes button in the Preset Test tab to view and select which lanes to use for preset testing. At least one lane must be selected.

Acquisitions: Set waveform acquisition settings


Use the **Acquisition** tab in the Setup panel to view and select test acquisition parameters, including the signal source channels, acquisition options, and waveform save options. This panel also shows the signal inputs required for the selected DUT parameters.

Contents displayed on this tab depend on whether you acquire active waveforms or use prerecorded waveform files (as set in the **DUT** tab. Contents displayed on this tab also depend on detected probes and the specified DUT type.

Active waveforms

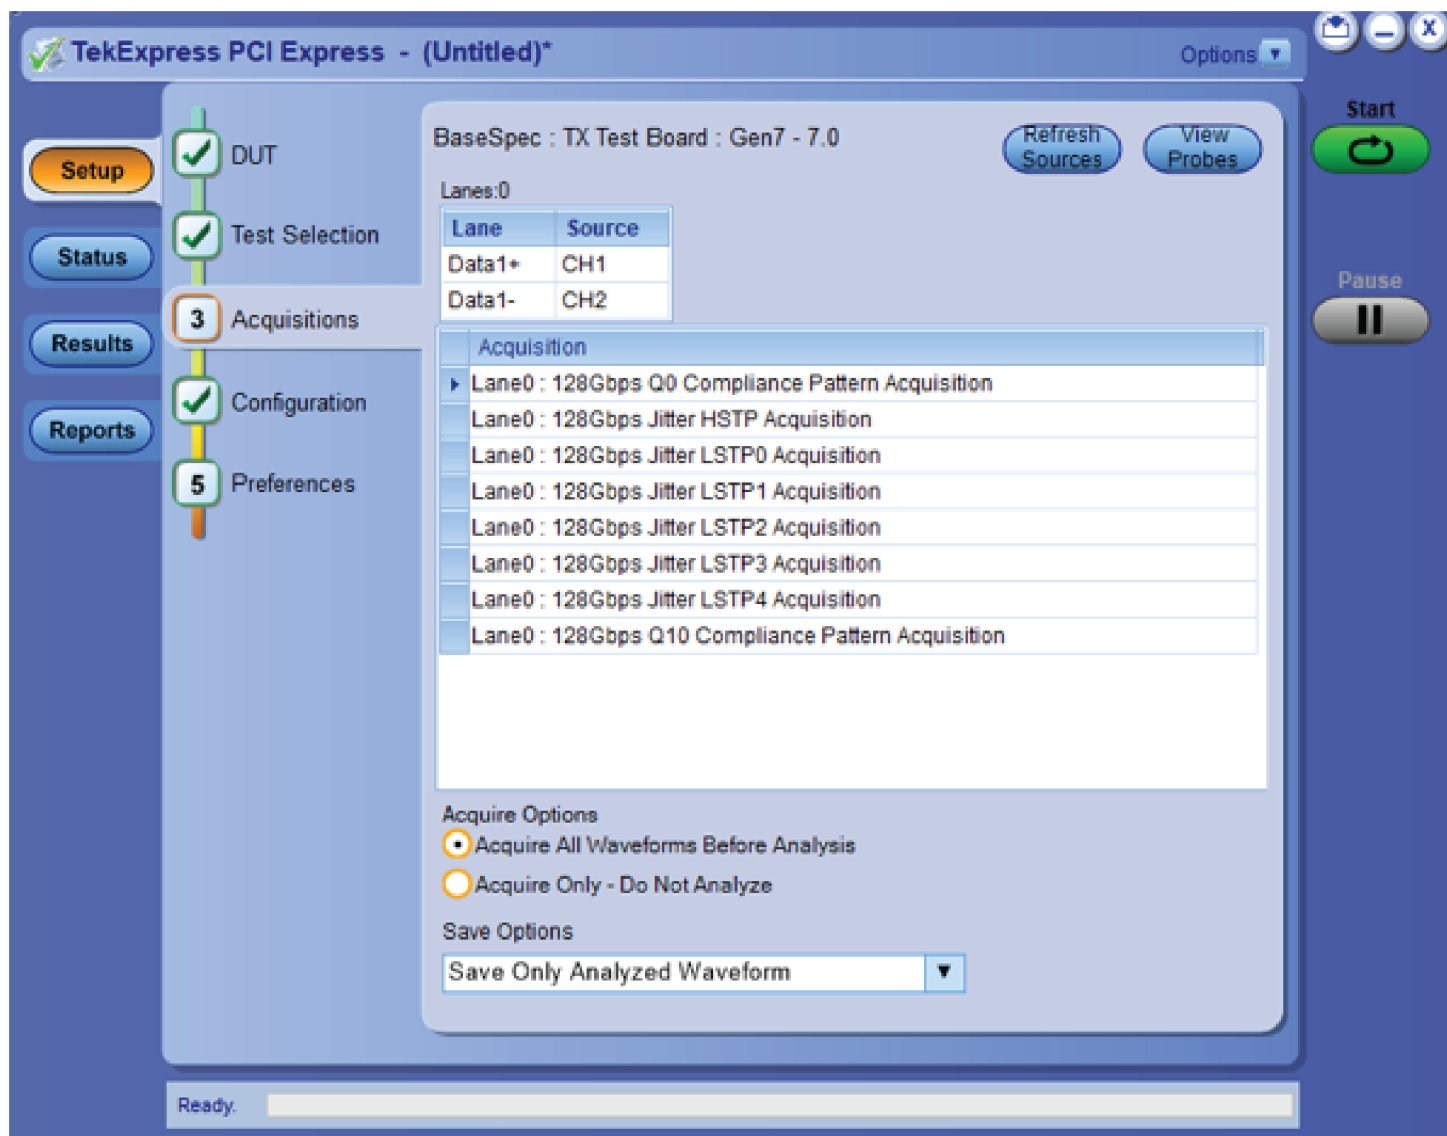


Acquisitions tab: using active waveforms (with ATI channels)

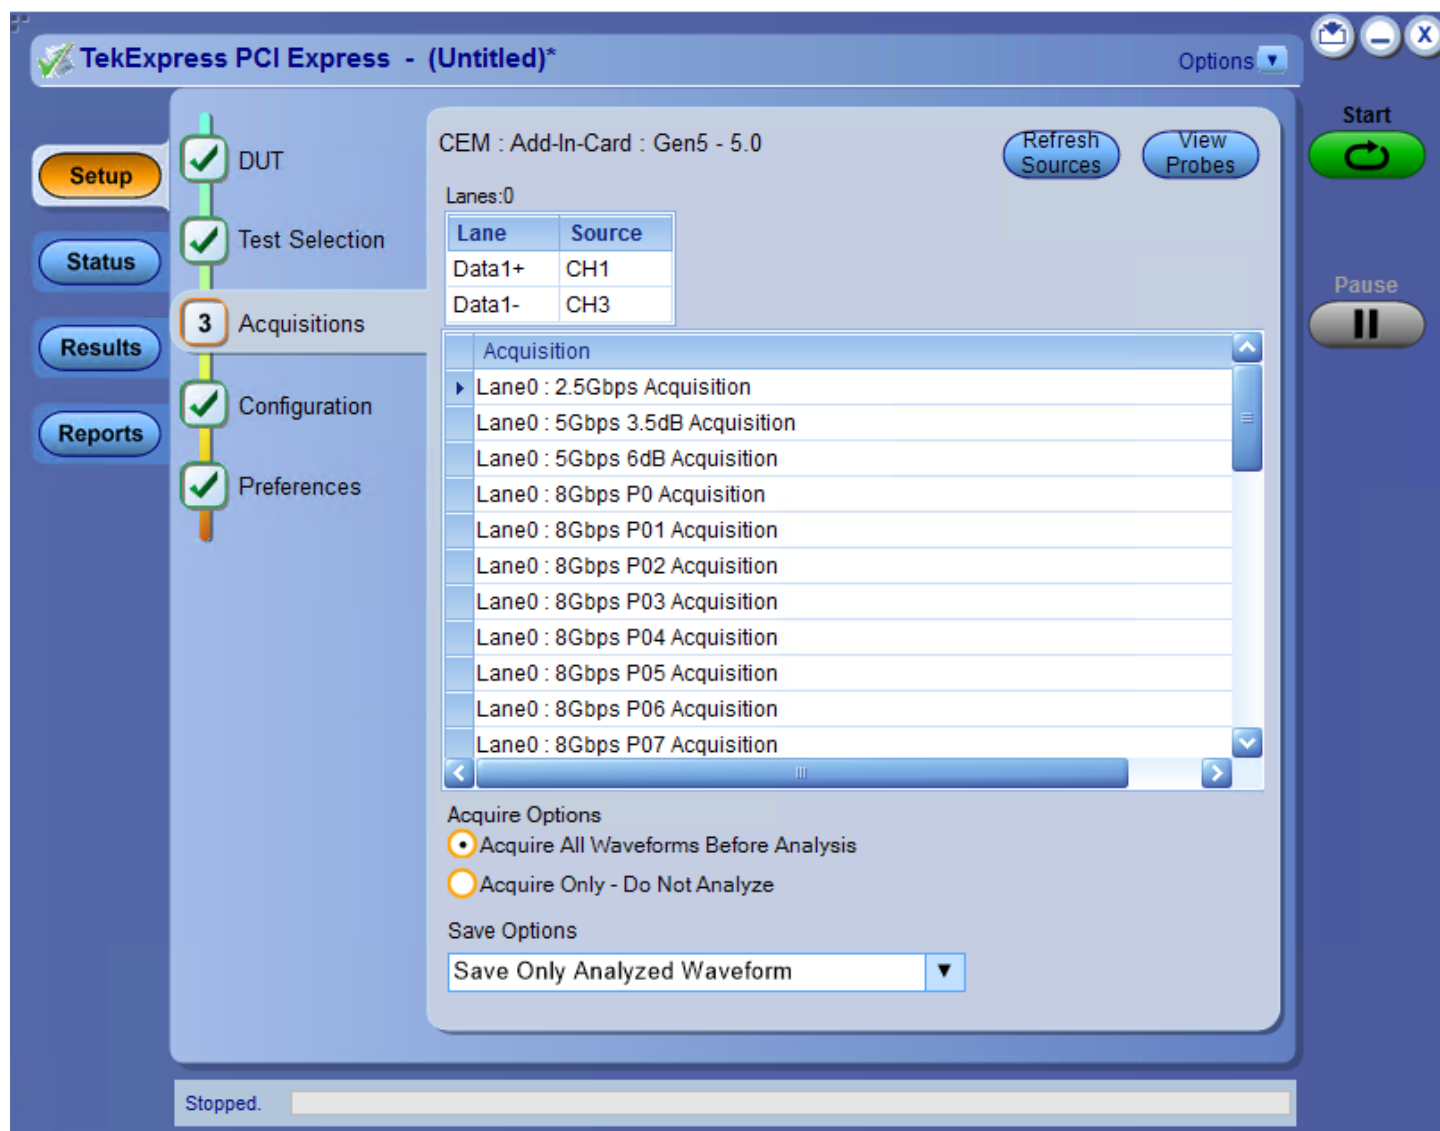


Acquisitions tab : using active waveforms (with Non-ATI channels)

Acquisitions tab configuration

Setting	Description
Source Selection	Click the Source fields to select signal sources for the listed lanes. The number of lanes shown depends on the parameters set in the DUT tab.
Refresh Sources	Click Refresh Sources to refresh the probe configuration after changing any probes. (This button performs the same function as the Refresh button in the Probe Configuration dialog box.)

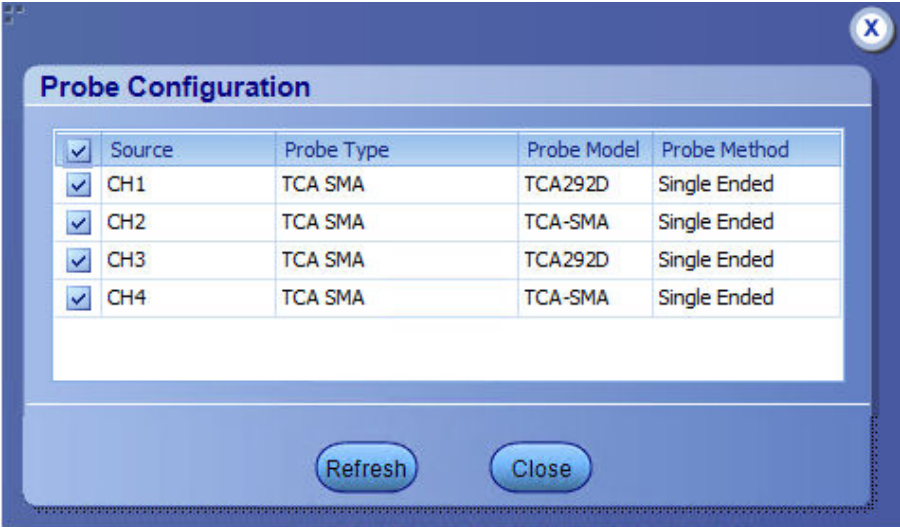Setting	Description
View Probes	Click View Probes to view the detected probe configuration. Use the View Probes dialog box to enable or disable probe signal source access in the application.  NOTE: Only Differential option is available under Probe Method for Trimode probes.
Acquire Options	Click the Acquire Options controls to set how the application acquires and analyzes signals.
Save Options	Click the Save Options field to set how the application saves acquired waveforms (save all waveforms, save all waveforms after applying filters, or discard all waveforms after running analysis).

Prerecorded waveforms

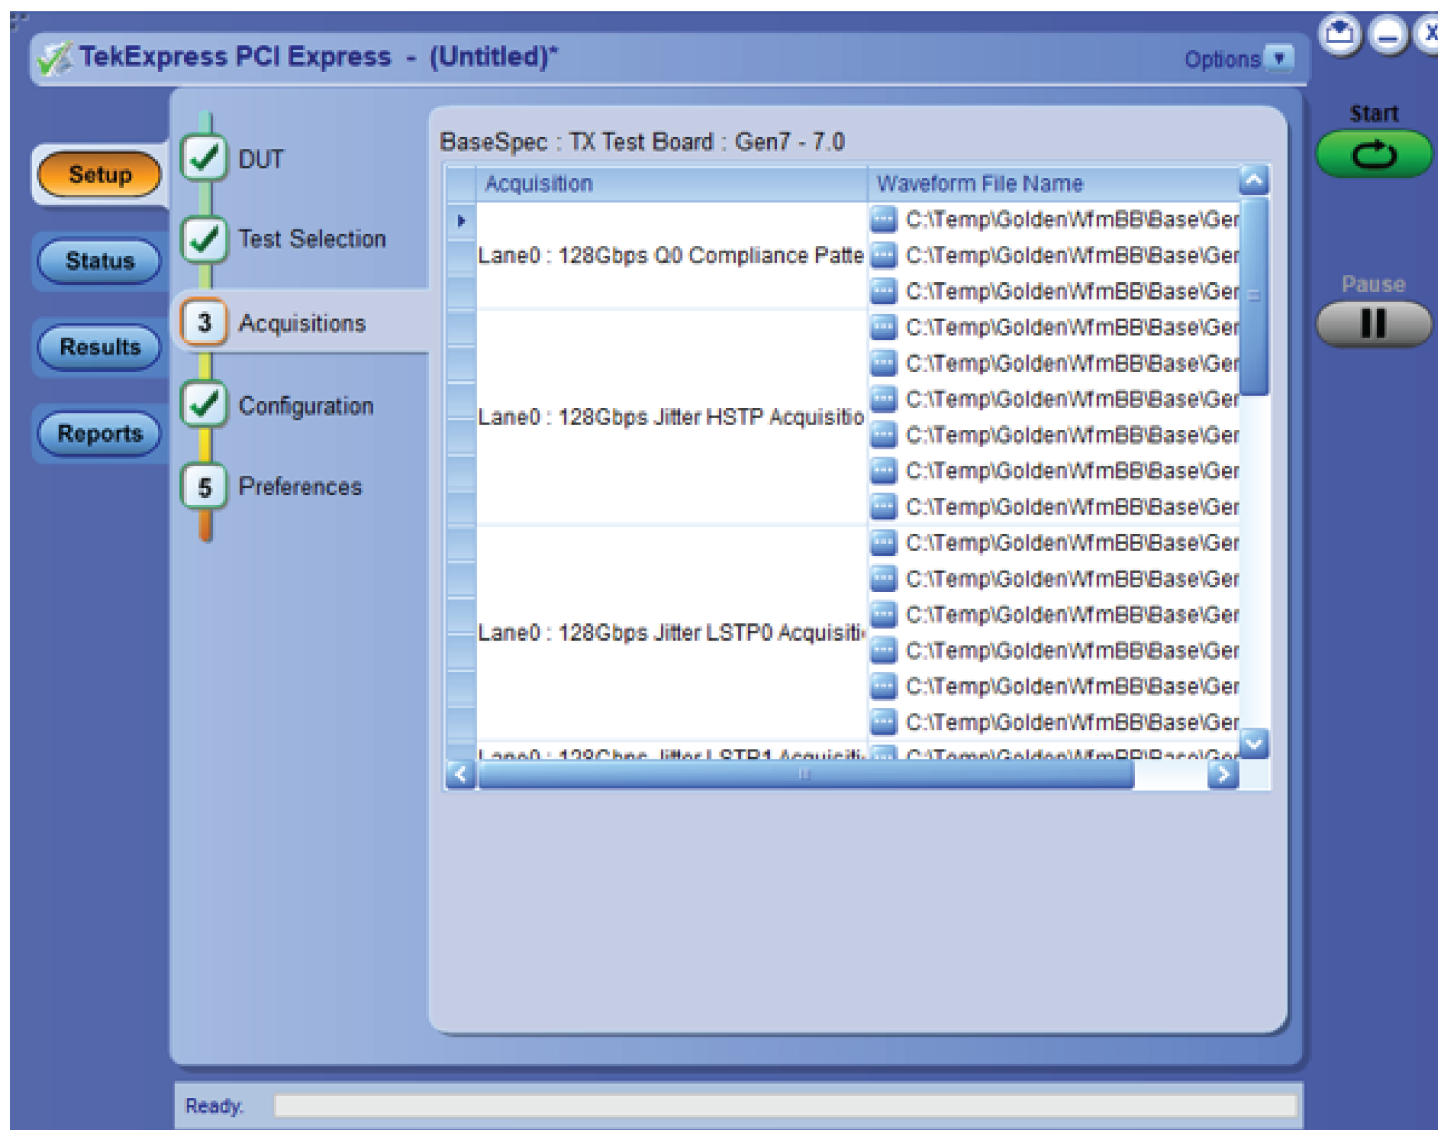

Acquisitions tab: using prerecorded waveforms

When using prerecorded waveform files, this panel lists available prerecorded waveform files. You can only select the source of the prerecorded waveform file for each test. See [Set acquisition waveform source for prerecorded waveform files](#) (on page 61).

Set acquisition options

Select an **Acquire Option** to set the order in which waveforms are acquired and analyzed:

- **Acquire All Waveforms Before Analysis:** Acquire all waveforms required by tests before performing analysis. All required user interventions (such as connecting to different lanes) are completed, and waveforms acquired, before the analysis is run. You can turn off the DUT after the acquisitions are completed.
- **Acquire Only – Do Not Analyze:** Acquire all waveforms required by tests, and then stop (do not use waveforms to perform test analysis). Use this setting for testing multiple DUTs once the test and application settings are correct. Acquire all required waveforms and save the session for each DUT, and then recall the waveforms at a later point to analyze in [Prerecorded](#) (on page 61) mode.

See also

[Set acquisitions signal source](#) (on page 62)

[Set acquisition waveform save options](#) (on page 60)

Set acquisition waveform save options

Select a **Save Option** to set how to save acquired test waveforms:

- **Save All the Waveforms:** Save all waveforms that were acquired for tests.
- **Save Only Analyzed Wfms:** Save waveforms that was used for analysis.
- **No Waveforms Saved – Discard after analysis:** Delete all acquired waveform data after analysis is complete.

Waveforms are saved to a folder that is unique to each session (a session starts when you click the Start button). The folder path is **X:\PCI Express\Untitled Session\<DUT ID>\<date>_<time>**. Images created for each analysis, CSV files with result values, reports, and other information specific to that particular execution are also saved in this folder. When the session is saved, content is moved to that session folder and the “Untitled Session” gets replaced by the session name.

Waveform file names

This application uses file name conventions to access the waveforms. It is recommended to save the waveforms with following file names.

- Differential data waveform:
Syntax:
E_DE_<DUTID>_<DataRate>_<SlotNum>_<LaneNum>_<PresetNum>_Noise_ISI_<SignalType>_CTLE_<runNum>
Example: *E_DUT001_16G_S01_Ln00_P01_ISI_d_R1.wfm*
- Single ended data positive waveform:
Syntax:
E_DE_<DUTID>_<DataRate>_<SlotNum>_<LaneNum>_<PresetNum>_<Noise>_ISI_<SignalType>_CTLE_<runNum>
Example: *E_DUT001_16G_S01_Ln00_P01_ISI_p_R1.wfm*
- Single ended data negative waveform:
Syntax:
E_DE_<DUTID>_<DataRate>_<SlotNum>_<LaneNum>_<PresetNum>_<Noise>_ISI_<SignalType>_CTLE_<runNum>
Example: *E_DUT001_16G_S01_Ln00_P01_ISI_n_R1.wfm*
- Differential clock waveform:
Syntax: *<DUTID>_<DataRate>_<SlotNum>_<LaneNum>_<PresetNum>_<Noise>_<SignalType>_CTLE_<runNum>*
Example: *DUT001_8G_S01_ClkLn00_P00_d_R1.wfm*
- Single ended clock positive waveform:
Syntax: *<DUTID>_<DataRate>_<SlotNum>_<LaneNum>_<PresetNum>_<Noise>_<SignalType>_CTLE_<runNum>*
Example: *DUT001_8G_S01_ClkLn00_P00_p_R1.wfm*
- Single ended clock negative waveform:
Syntax: *<DUTID>_<DataRate>_<SlotNum>_<LaneNum>_<PresetNum>_<Noise>_<SignalType>_CTLE_<runNum>*
Example: *DUT001_8G_S01_ClkLn00_P00_n_R1.wfm*
 - E: Only used when Embed Filter Package is applied
 - DE: Only used when De-Embed Filter Package is applied
 - Noise: Only used for noise waveform acquired
 - ISI: Only used when acquisition is done using External ISI board for Gen4 Signal Tests
 - CTLE: Only used for waveform acquired for CTLE optimization purpose

See also


[Set acquisitions signal source](#) (on page 62)

[Set acquisition waveform source for prerecorded waveform files](#) (on page 61)

[Set acquisition Acquire options](#) (on page 59)

Set acquisition waveform source for prerecorded waveform files

When using prerecorded waveform files, there are no acquisition source selections to make. You can only select the source of the prerecorded waveform files for each test.

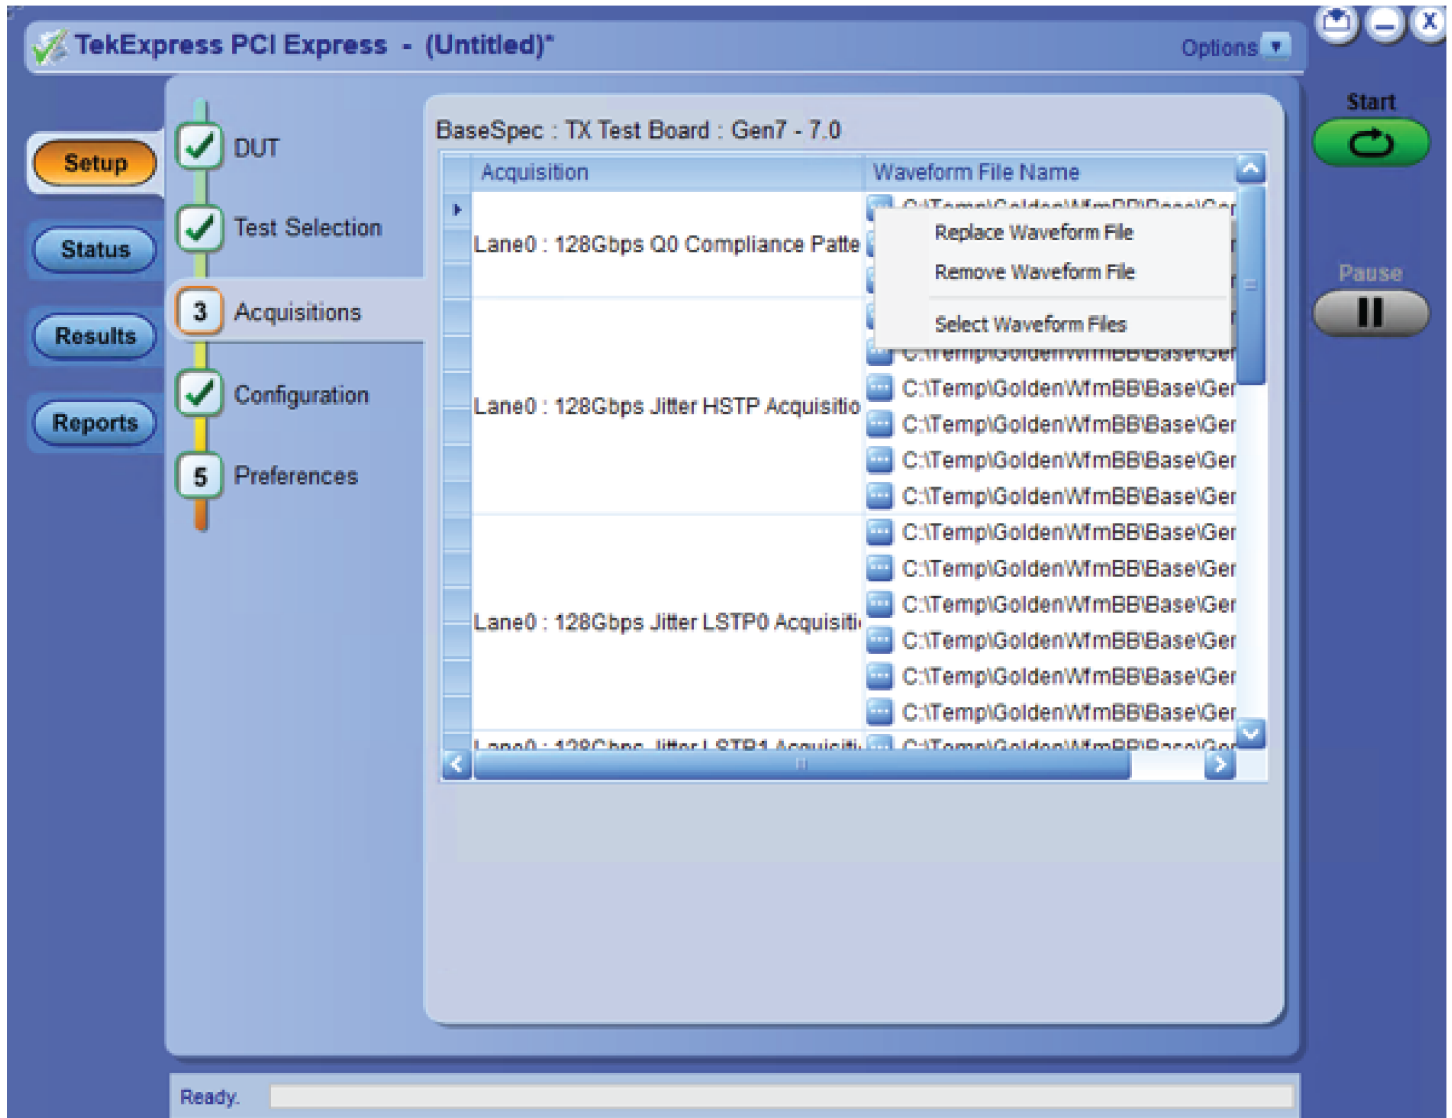

If you selected to use a prerecorded waveform file (in the DUT tab), the lane and source fields are not applicable and are not shown. The Acquisition tab instead shows a table of the waveforms used for the required test acquisitions.

You can load a different waveform file for each table item. To load a different waveform file:

1. Click the ellipsis button () of the waveform file to change.
2. Select the waveform task to perform (replace, remove, or select the waveform file).
3. Use the dialog box to navigate to and select the waveform file with which to replace the current file. You need to select all required differential waveforms for analysis (and single-ended waveforms also for analysis in Gen6 and Gen7 using PAMJET analysis tool). For example, select one data waveform and one clock waveform for each acquisition (except 2.5 Gbps) for testing a system board.

NOTE: Clock signals are not required for Gen1 (2.5 Gbps data rate) testing.


See also

- [Set acquisition signal source](#) (on page 62)
- [Set acquisition options](#) (on page 59)
- [Set acquisition waveform save options](#) (on page 60)

Set acquisition signal source

Use this procedure to set the channel sources for live waveform acquisitions. The number of Lane and Source fields shown depends on the number of lanes selected for testing in the **DUT** tab.

- Click **Setup > Acquisitions**.
- Click in the Source column of the field to change.
- Click the arrow button to list available sources from which to select.

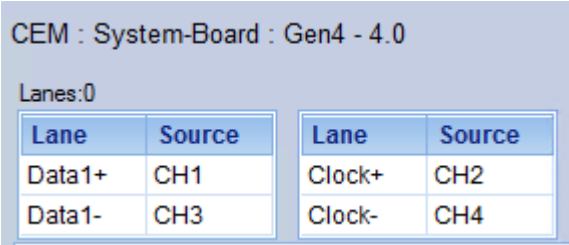

See also

- [Set acquisition options](#) (on page 59)
- [Set acquisition waveform save options](#) (on page 60)
- [Set acquisition waveform source for prerecorded waveform files](#) (on page 61)


Configuration: Set measurement limits for tests

Use Configuration tab to view and configure the Global Settings and the measurement configurations. The measurement specific configurations available in this tab depends on the selections made in the DUT panel and Test Selection panel.

NOTE: You cannot change test parameters that are grayed out.

Configuration tab: Common parameters

Settings	Description																																																						
Limit Editor	Displays the upper and lower limits for the applicable measurement using different types of comparisons. In the Compliance Mode, you can view the measurement high and low limits used for the tests displayed in the tree view of the Measurements tab. When running tests in User Defined Mode, you can edit the limit settings in the Limits Editor. Limits Editor View or Edit the values used for High Limit and Low Limit for each measurement A blank cell means no limit value is applied <table><tr><th>Test Name</th><th>Details</th><th>Datarate</th><th>Compare String</th><th>Low Limit</th><th>Compare String</th></tr><tr><td>Composit Eye Height</td><td>Composit Eye Heigh...</td><td>2.5Gbps</td><td>>= Greater Than O...</td><td>34</td><td></td></tr><tr><td>Composit Eye Height</td><td>Composit Eye Heigh...</td><td>5 Gbps</td><td>>= Greater Than O...</td><td>34</td><td></td></tr><tr><td>Composit Eye Height</td><td>Composit Eye Heigh...</td><td>8 Gbps</td><td>>= Greater Than O...</td><td></td><td></td></tr><tr><td>Dj_dd</td><td>Dj_dd(ps)</td><td>5 Gbps</td><td><= Less Than Or E...</td><td>57.0</td><td></td></tr><tr><td>Dj_dd</td><td>Dj_dd(ps)</td><td>8 Gbps</td><td>< Less Than</td><td>999.9</td><td></td></tr><tr><td>Mask Hits(All Bits)</td><td>Mask Hits</td><td>2.5Gbps</td><td>EQ (=)</td><td>0</td><td></td></tr><tr><td>Mask Hits(All Bits)</td><td>Mask Hits</td><td>5 Gbps</td><td>EQ (=)</td><td>0</td><td></td></tr><tr><td>Mask Hits(All Bits)</td><td>Mask Hits</td><td>8 Gbps</td><td>EQ (=)</td><td>0</td><td></td></tr></table> OK	Test Name	Details	Datarate	Compare String	Low Limit	Compare String	Composit Eye Height	Composit Eye Heigh...	2.5Gbps	>= Greater Than O...	34		Composit Eye Height	Composit Eye Heigh...	5 Gbps	>= Greater Than O...	34		Composit Eye Height	Composit Eye Heigh...	8 Gbps	>= Greater Than O...			Dj_dd	Dj_dd(ps)	5 Gbps	<= Less Than Or E...	57.0		Dj_dd	Dj_dd(ps)	8 Gbps	< Less Than	999.9		Mask Hits(All Bits)	Mask Hits	2.5Gbps	EQ (=)	0		Mask Hits(All Bits)	Mask Hits	5 Gbps	EQ (=)	0		Mask Hits(All Bits)	Mask Hits	8 Gbps	EQ (=)	0	
Test Name	Details	Datarate	Compare String	Low Limit	Compare String																																																		
Composit Eye Height	Composit Eye Heigh...	2.5Gbps	>= Greater Than O...	34																																																			
Composit Eye Height	Composit Eye Heigh...	5 Gbps	>= Greater Than O...	34																																																			
Composit Eye Height	Composit Eye Heigh...	8 Gbps	>= Greater Than O...																																																				
Dj_dd	Dj_dd(ps)	5 Gbps	<= Less Than Or E...	57.0																																																			
Dj_dd	Dj_dd(ps)	8 Gbps	< Less Than	999.9																																																			
Mask Hits(All Bits)	Mask Hits	2.5Gbps	EQ (=)	0																																																			
Mask Hits(All Bits)	Mask Hits	5 Gbps	EQ (=)	0																																																			
Mask Hits(All Bits)	Mask Hits	8 Gbps	EQ (=)	0																																																			

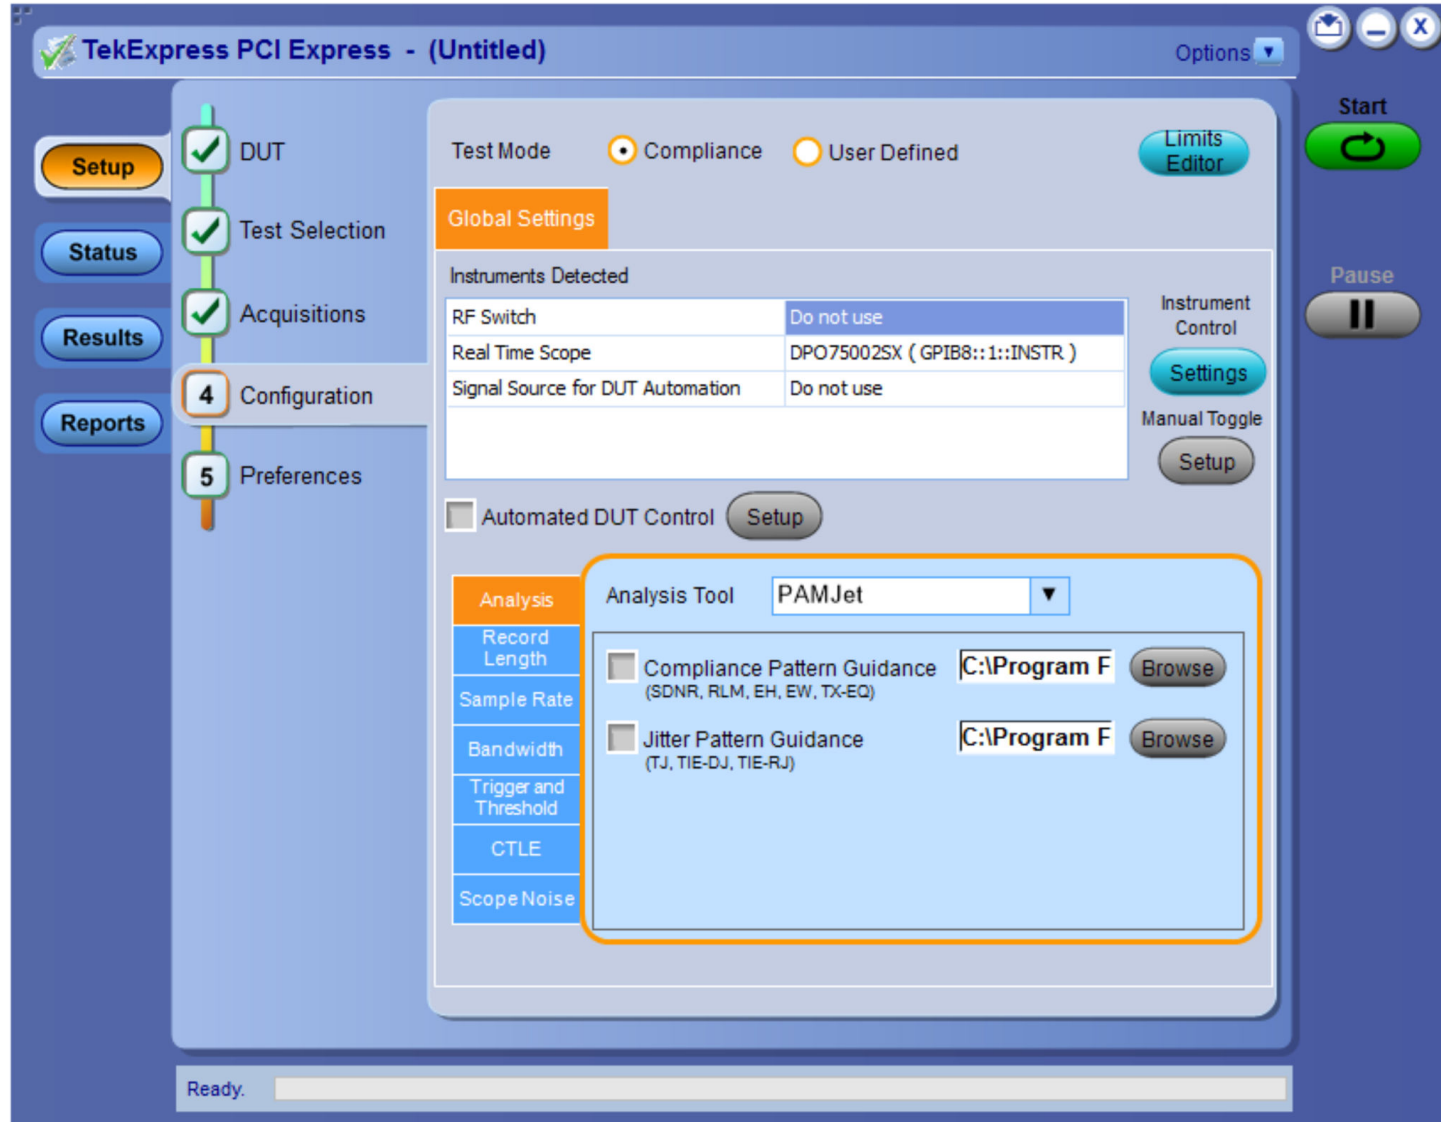

Configuration tab: Global Settings



Configuration tab: Global Settings configuration


Setting	Description
Test Mode	Determines whether test parameters are in compliance or can be edited (User Defined Mode). - Compliance: Most test parameter values cannot be edited. - User Defined: Enables editing of most test parameters. NOTE: Not applicable for the Device type / Specification type BaseSpec
Instruments Detected	Displays a list of the connected instruments found during the instrument discovery. Instrument types include equipment such as oscilloscopes and signal generators.
Instrument Control	Click Settings to search for connected instruments and view instrument connection details. Connected instruments displayed in TekExpress instrument control settings (on page 38) and can be selected for use under Global Settings in the test configuration section.
Manual Toggle	Click Setup to manually toggle AWG or AFG. This is enabled when the Signal Source for DUT Automation in Instruments Detected is selected.
Automated DUT Control	Enables automatic toggling of test patterns for DUT tests. Requires an AWG or AFG as part of the test setup. Click Setup to configure the DUT automation settings.
Record Length, Sample Rate, Bandwidth	These settings apply to all tests selected for the indicated data rate. - Record Length: Specifies the waveform record length. - Sample Rate: Specifies the oscilloscope sample rate to use for all tests. - Bandwidth: Specifies the oscilloscope bandwidth to use for all tests.
Sig Validation Threshold	Sets the threshold voltage to use for signal validation.
Trigger Type (Gen3/Gen4/Gen5)	- Edge - Width - Auto NOTE: When auto is selected, width trigger type is applied. If it fails, edge trigger type is applied.
CTLE	This configuration setting allows the user to configure for CTLE optimization for Gen6 jitter measurements. Refer CTLE optimization feature (on page 65) for more details.
Scope Noise	This configuration setting allows the user to apply scope noise compensation for CTLE optimization and measurement analysis for Gen6 and Gen7 data rate test. Refer Scope Noise Characterization (on page 67) for more details.
SigTest Configuration	Click Setup; select the executable (.exe) for Gen1 to Gen6 and template configuration for signal quality and preset tests for the data rates selected. Check/Un-check Silent mode to run sigtest in Silent mode/non-silent mode.
Analysis tool	- PAMJet (applicable for Gen6 and Gen7 only) - Sigtest (applicable for CEM, Base spec, U.2 and M.2 Gen1 to Gen6 only) - Intel CJT (applicable for Ref Clock only) - Skyworks Clock Jitter Tool (applicable for Ref Clock only)

Setting	Description
Compliance Pattern Guidance (SND, RLM, EH, EW, TX-EQ)	Specifies the PAMJet pattern guidance selection and file path for compliance pattern measurements (applicable for Gen6 and Gen7 only).
Jitter Pattern Guidance (TJ, TIE-DJ, TIE-RJ)	Specifies the PAMJet pattern guidance selection and file path for jitter pattern measurements (applicable for Gen6 and Gen7 only).

CTLE optimization feature

This configuration setting allows the user to configure for CTLE optimization for Gen6 and Gen7 jitter measurements.

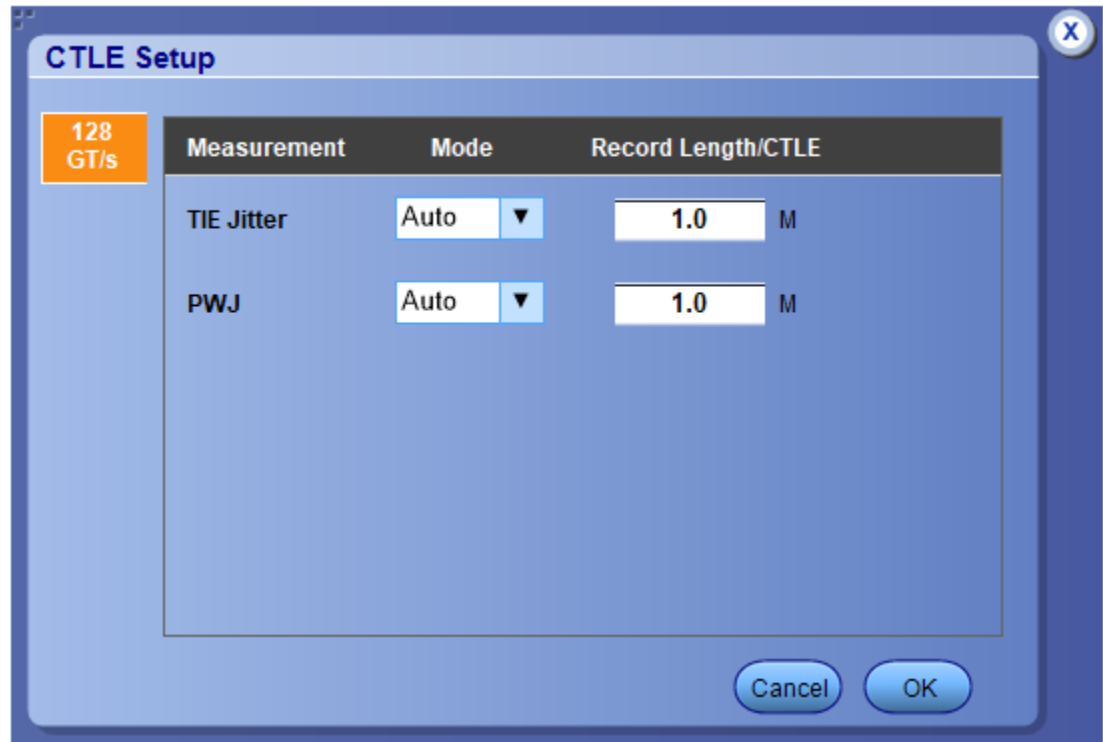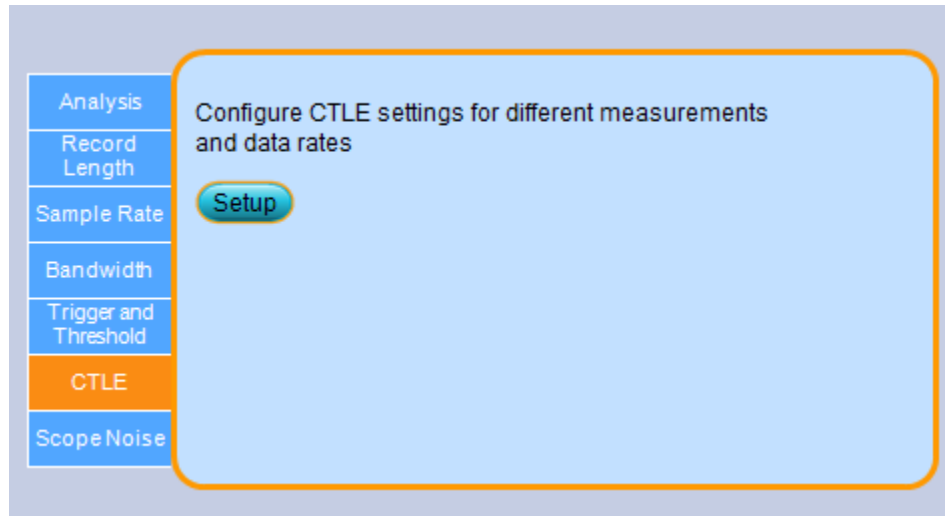

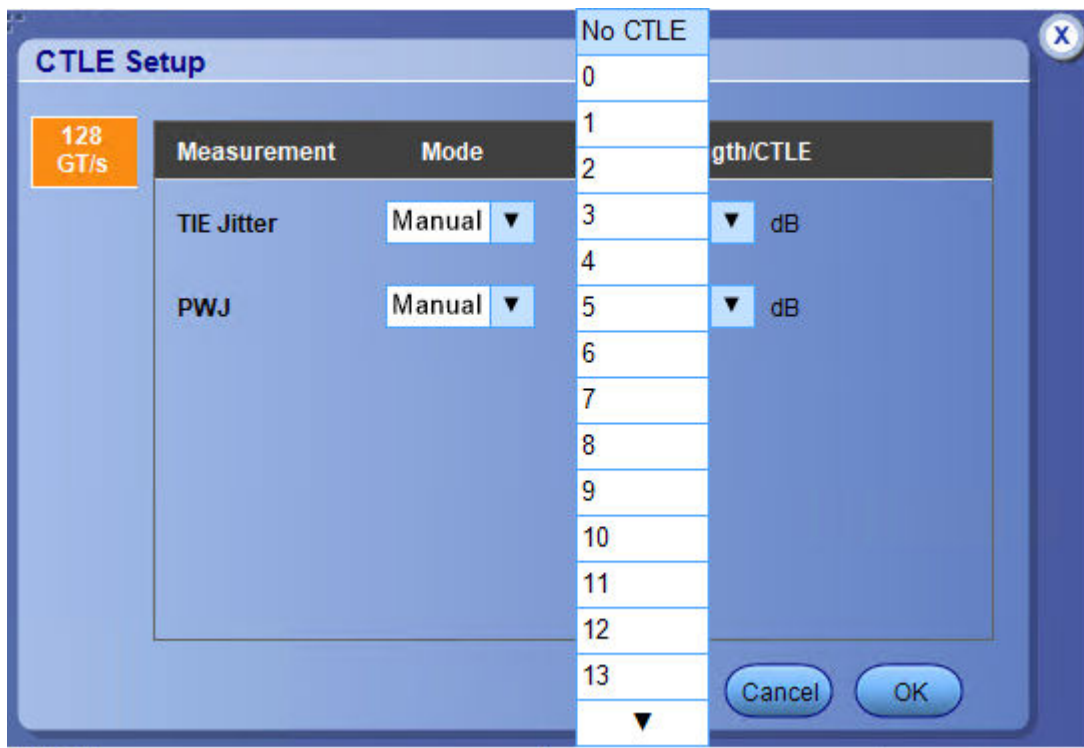


- Mode:
 - Select Optimal CTLE Computation mode between **Auto** and **Manual**
- Record Length:
 - The record length of the waveform to be acquired for CTLE optimization.
 - Range 1 M to 20 M. Default value is 1 M
- Optimum CTLE:
 - User defined CTLE value. Default value 0.0 dB

Scope noise characterization and compensation workflow

You can apply scope noise compensation for CTLE optimization and measurement analysis to test Gen6 and Gen7 data rate. The scope noise compensation can be applied in the following method:

- **Automate method:** create database using PAMJET Scope Noise Tool for the consumption of PAMJet application where the scope noise is computed during analysis based on the voltage scale data.
- **Manual method:** This method will use the scope noise compensation irrespective of Vertical Scale and CTLE applied. You must enter the scope noise compensation value for the corresponding measurement type.

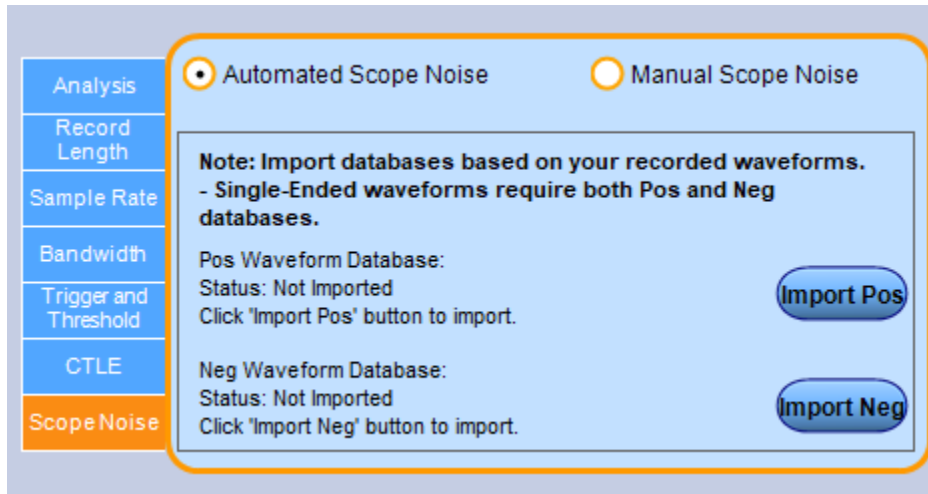

Use the radio buttons to switch between these methods.

Automated Scope Noise Mode


TekExpress PCI Express supports semi-automated scope noise characterization and compensation workflow. It is a two step process where first the user needs to create the characterization database and then consume the database at the time of test execution.

Creating scope noise characterization database.

Create the scope noise characterization database using PAMJet Scope Noise Tool as a pre-work before running tests using TekExpress PCI Express. Follow the steps to create the database:


1. Turn off all oscilloscope channels.
2. Launch PAMJet scopeNoiseTool.exe (SNC) from **C:\Program Files\TekApplications\PAMJET**
3. Select Ch1 and Ch2 option.
4. If attenuator is connected, set up the attenuation in the oscilloscope.
5. In the SNC tool, click **Characterize**. Once characterization is completed, the SNC database (.ndbx) for both Channels will be saved at **C:\ProgramData\Tektronix\TekScope\Calibration\Noise** with the date-time stamp.

NOTE: It is recommended to create a new database when the hardware setup is changed in the oscilloscope.

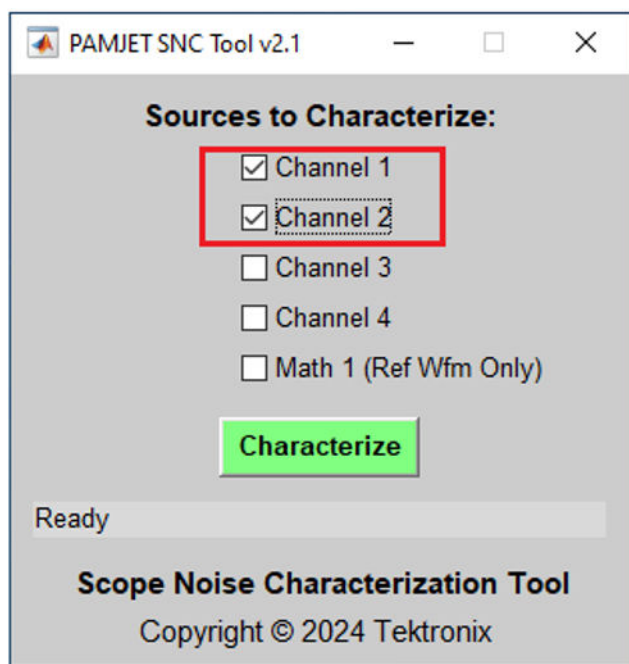


Consuming the SNC database during TekExpress run

1. Launch **TekExpress PCI Express**
2. Select **Configuration Panel**→ **Scope Noise tab**.
3. Click **Import Pos**; Browse and select the channel database used for the positive lane waveform for automatic scope noise compensation.
4. Click **Import Neg**; Browse and select the channel database used for the negative lane waveform for automatic scope noise compensation.
5. If an attenuator is connected, set the attenuation in the TekExpress DUT panel using the Deskew/Attenuation button.
6. Run the test session.

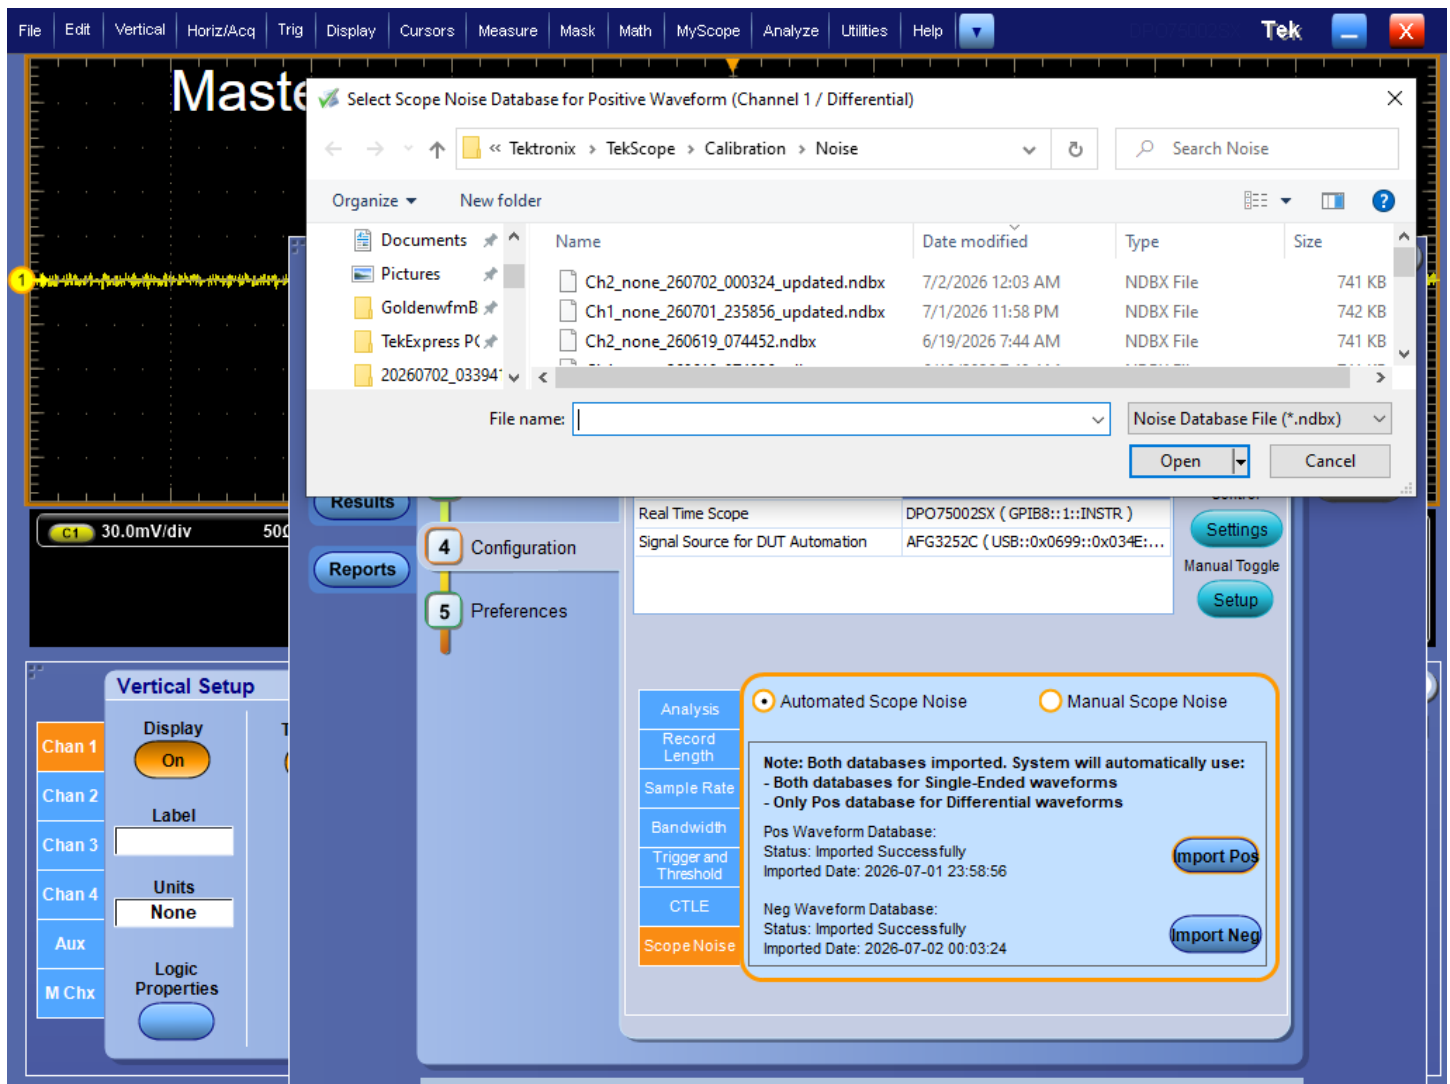

Preferences: Set the test run preferences

Use **Preferences** tab to set the application action on completion of a measurement. The **Preferences** tab has the feature to enable or disable certain options related to the measurement execution.

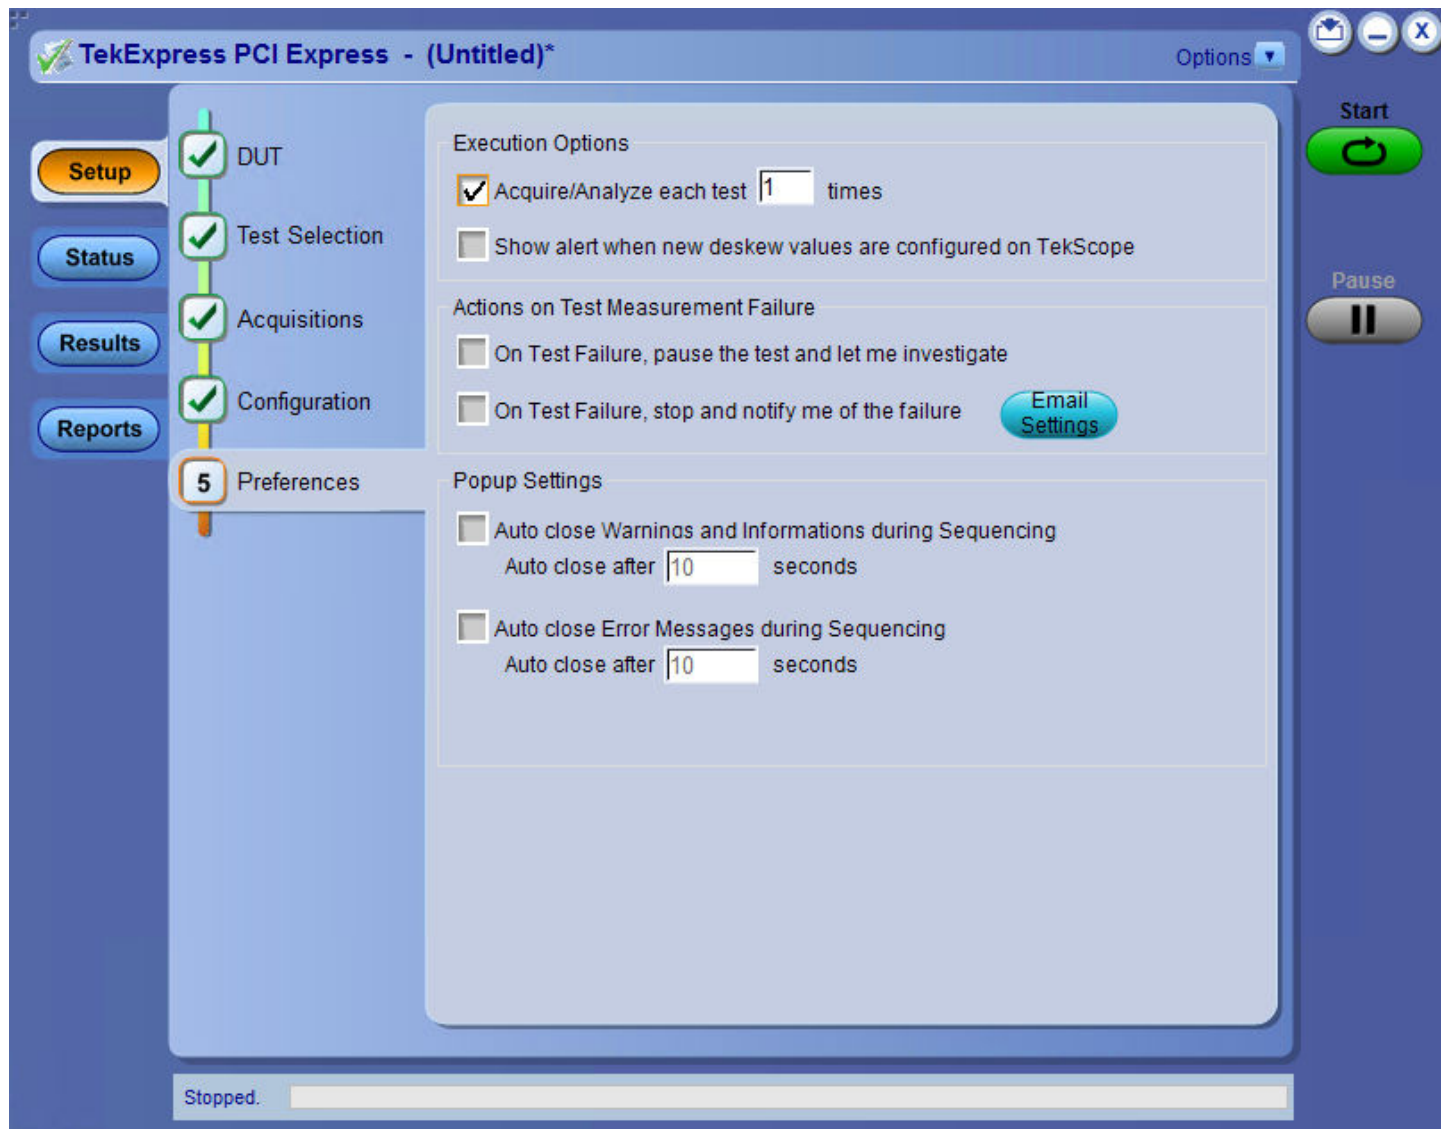

Preferences Tab

Refer the below table for the options available in the **Preferences** tab:

Preferences tab settings

Setting	Description
Execution Options	
Acquire/Analyze each test <no> times (not applicable to Custom Tests)	Default checkbox is selected and default value is 1. The minimum value is 1 and maximum value is 20.
Show alert when new deskew values are configured on TekScope	Select to display the alert when new deskew values are configured on TekScope.

Setting	Description
Actions on Test Measurement Failure	
On Test Failure, pause the test and let me investigate	Select to pause the test run and allow you to investigate when the test execution is failed.
On Test Failure, stop and notify me of the failure	Select to stop the test run on Test Failure, and to get notified via email. By default, it is unselected. Click Email Settings to configure the email settings to receive notifications.
Popup Settings	
Auto close Warnings and informations during Sequencing Auto close after <no> seconds	Select to close the warnings and information window automatically after the specified amount of time. Specify the time in seconds using the edit box.
Auto close Error Messages during Sequencing. Show in Reports Auto close after <no> seconds	Select to close the error message window automatically after the specified amount of time. Specify the time in seconds using the edit box.


Status panel: View the test execution status

The Status panel contains the **Test Status** and **Log View** tabs, which provides status on the test acquisition and analysis (Test Status) and listing of test tasks performed (Log View tab). The application opens the **Test Status** tab when you start to execute the test. Select the **Test Status** or the **Log View** tab to view these items while the test execution is in progress.

View test execution status

The tests are grouped and displayed based on the Clock and Data lane. It displays the tests along with the acquisition type, acquire, and analysis status of the tests. In pre-recorded mode, **Acquire Status** is not valid.

The **Test Status** tab presents a collapsible table with information about each test as it is running. Use the symbols to expand () and collapse () the table rows.

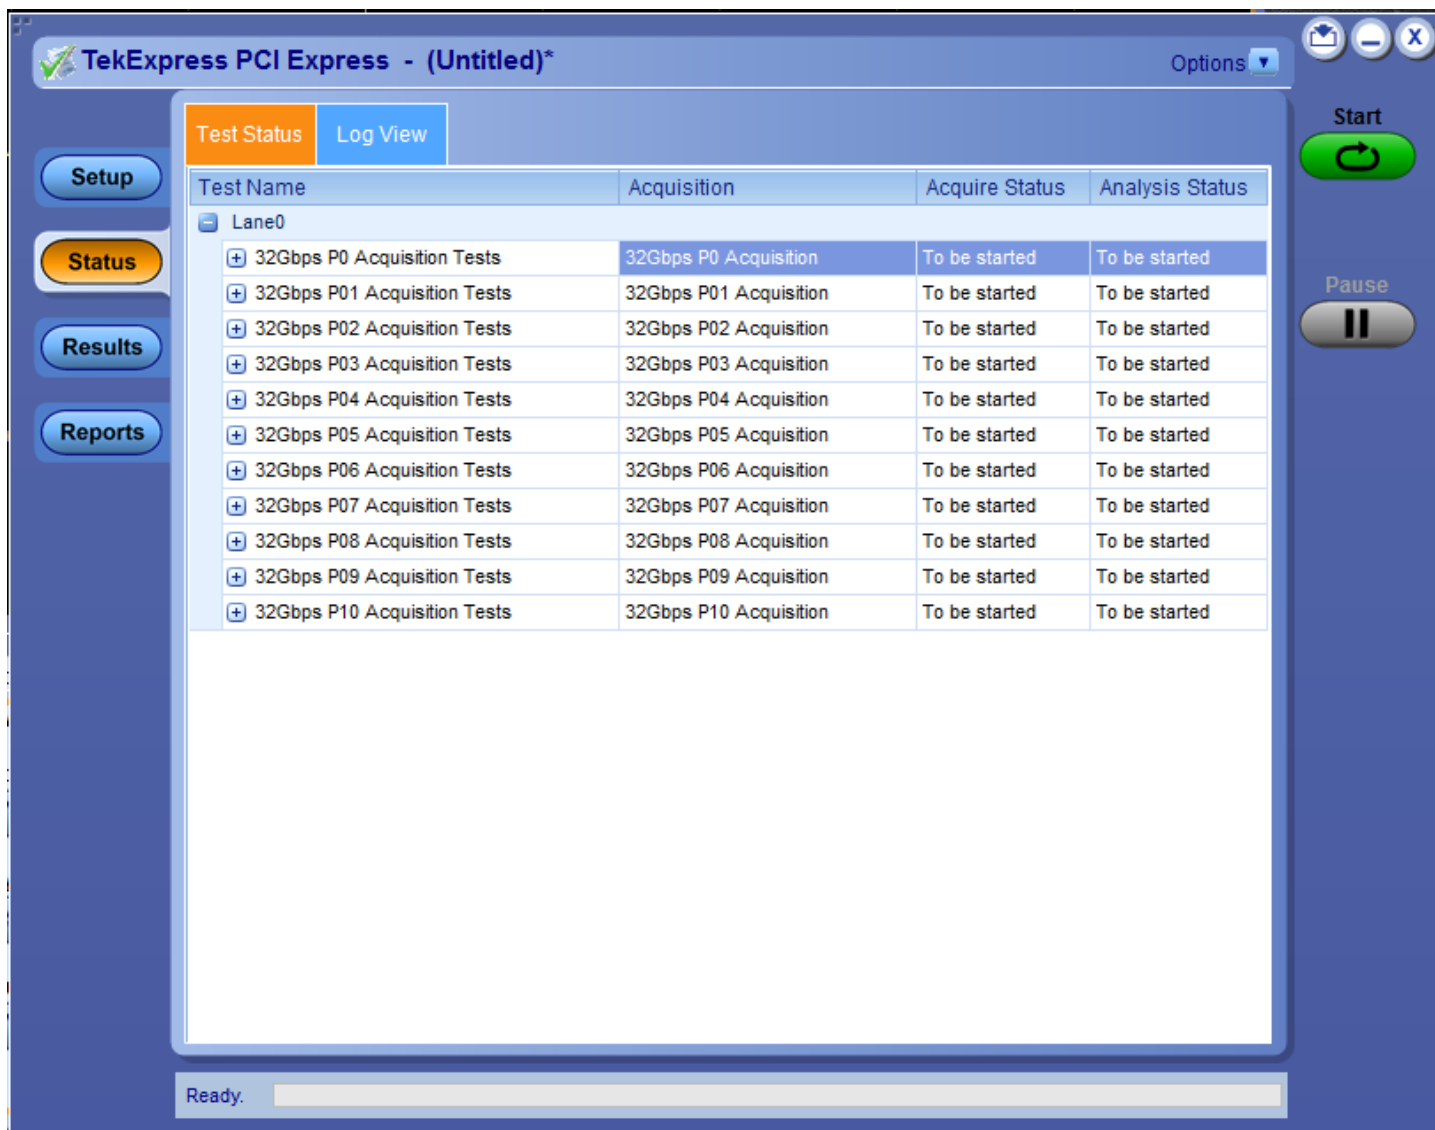

TekExpress PCI Express - (Untitled)* Options

Test Status Log View

Setup Status Results Reports

Test Name	Acquisition	Acquire Status	Analysis Status
- Lane0			
+ 32Gbps P0 Acquisition Tests	32Gbps P0 Acquisition	To be started	To be started
+ 32Gbps P01 Acquisition Tests	32Gbps P01 Acquisition	To be started	To be started
+ 32Gbps P02 Acquisition Tests	32Gbps P02 Acquisition	To be started	To be started
+ 32Gbps P03 Acquisition Tests	32Gbps P03 Acquisition	To be started	To be started
+ 32Gbps P04 Acquisition Tests	32Gbps P04 Acquisition	To be started	To be started
+ 32Gbps P05 Acquisition Tests	32Gbps P05 Acquisition	To be started	To be started
+ 32Gbps P06 Acquisition Tests	32Gbps P06 Acquisition	To be started	To be started
+ 32Gbps P07 Acquisition Tests	32Gbps P07 Acquisition	To be started	To be started
+ 32Gbps P08 Acquisition Tests	32Gbps P08 Acquisition	To be started	To be started
+ 32Gbps P09 Acquisition Tests	32Gbps P09 Acquisition	To be started	To be started
+ 32Gbps P10 Acquisition Tests	32Gbps P10 Acquisition	To be started	To be started

Ready.

Start Pause


Test execution status view in Status panel

Test execution status table headers

Control	Description
Test Name	Displays the measurement name.
Acquisition	Describes the type of data being acquired.
Acquire Status	Displays the progress state of the acquisition: ▪ To be started ▪ Started Acquisition ▪ Completed Acquisition
Analysis Status	Displays the progress state of the analysis: ▪ To be started ▪ In Progress ▪ Completed

View test execution logs

The Test Status tab displays the detailed execution status of the tests. Also, displays each and every execution step in detail with its timestamp information. The log details can be used to troubleshoot and resolve any issue/bug which is blocking the test execution process.

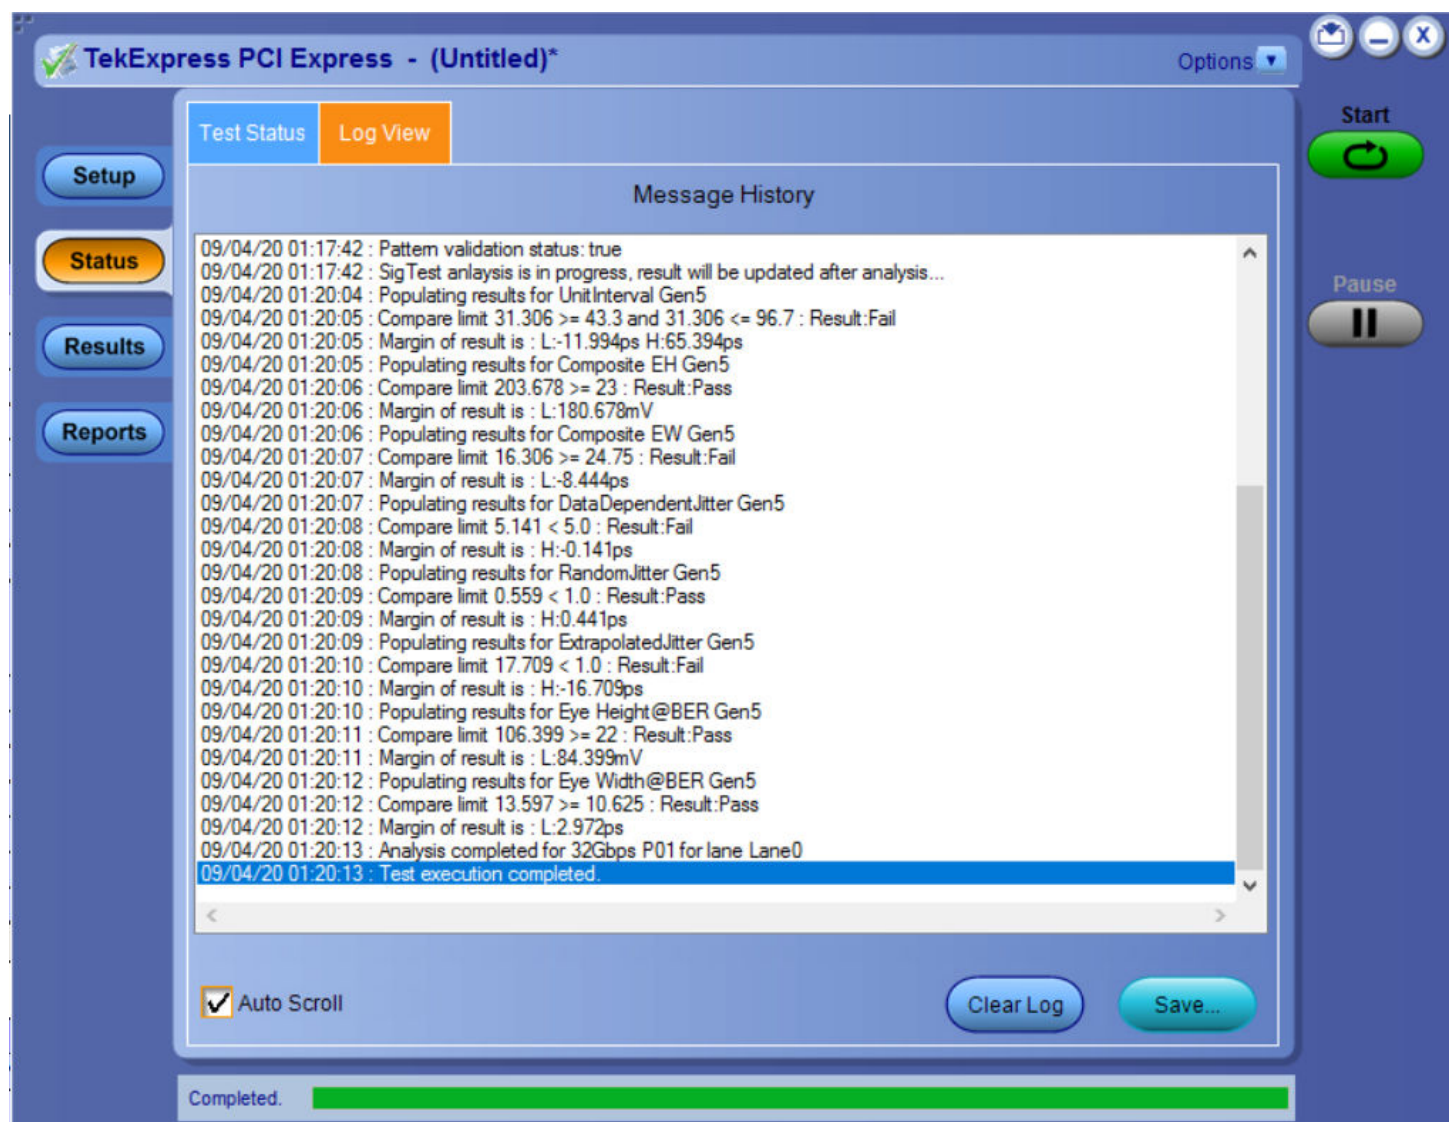

Log view in Status panel

Status panel settings

Control	Description
Message History	Lists all the executed test operations and timestamp information.
Auto Scroll	Enables automatic scrolling of the log view as information is added to the log during the test execution.
Clear Log	Clears all the messages from the log view.
Save	Saves the log file into a text file format. Use the standard Save File window to navigate to and specify the folder and file name to save the log text.

Results panel: View summary of test results

When a test execution is complete, the application automatically opens the **Results** panel to display a summary of test results.

In the Results table, each test result occupies a row. By default, results are displayed in summary format with the measurement details collapsed and with the Pass/Fail column visible.

TekExpress PCI Express - (ESS_Gen7_SRIS)

Options ▾

Start

Pause

Clear

Preferences ▾

Overall Test Result

Signal Tests Gen7 Preset Test

Description	Details	Preset	Pass/Fail	Value	Margin
[-] Lane0					
UnitInterval Gen7	Unit Interval Mean R1	Q0 Compliance Pattern Gen7	Informative	15.625 ps	LL: NA ps, HL: NA ps
RLM Gen7	RLM Mean R1	Q0 Compliance Pattern Gen7	Pass	95.423 %	LL: 0.423 %, HL: 4.577 %
SNDR Gen7	PCIe_SNDR Mean R1	Q0 Compliance Pattern Gen7	Pass	34.849 dB	LL: 0.849 dB, HL: dE
SNDR Gen7	PCIe_Pmax Mean R1	Q0 Compliance Pattern Gen7	Informative	343.15 mV	LL: 309.15 mV, HL: m
SNDR Gen7	PCIe_Sigma E Mean R1	Q0 Compliance Pattern Gen7	Informative	4.8885 mV	LL: -29.111 mV, HL: m
SNDR Gen7	PCIe_Sigma N Mean R1	Q0 Compliance Pattern Gen7	Informative	3.8287 mV	LL: -30.171 mV, HL: m
Uncorrelated TIE TJ@E-06 Gen7	TIE UTJ Mean R1	Jitter HSTP Gen7	Informative	0.80414 ps	LL: ps, HL: 1.19586 ps
Uncorrelated TIE TJ@E-06 Gen7	TIE UTJ Mean R1	Jitter LSTP0 Gen7	Informative	1.1149 ps	LL: ps, HL: 0.8851 ps

Ready.

Click icon on each measurement in the row to expand and to display the minimum and maximum parameter values of the measurement.

Filter the test results

Each column in the result table can be customized and displayed by enabling or disabling any column as per your requirement. You can change the view in the following ways:


- To remove or restore the Pass/Fail column, select **Preferences**→ **Show Pass/Fail**.
- To collapse all expanded tests, select **Preferences**→ **View Results Summary**.
- To expand all the listed tests, select **View Results Details** from the **Preferences menu** in the upper right corner.
- To enable or disable the wordwrap feature, select **Preferences**→ **Enable Wordwrap**.
- To view the results grouped by lane or test, select the corresponding item from the **Preferences** menu.
- To expand the width of a column, place the cursor over the vertical line that separates the column from the column to the right. When the cursor changes to a double-ended arrow, hold down the mouse button and drag the column to the desired width.
- To clear all test results displayed, click **Clear**.

Reports panel: Configure report generation settings

Click **Reports** panel to configure the report generation settings and select the test result information to include in the report. You can use the Reports panel to configure report generation settings, select test content to include in reports, generate the report, view the report, browse for reports, name and save reports, and select report viewing options.

Report configuration settings

The Configuration tab describes the report generation settings to configure the Reports panel. Select report settings before running a test or when creating and saving test setups. Report settings configured are included in saved test setups.

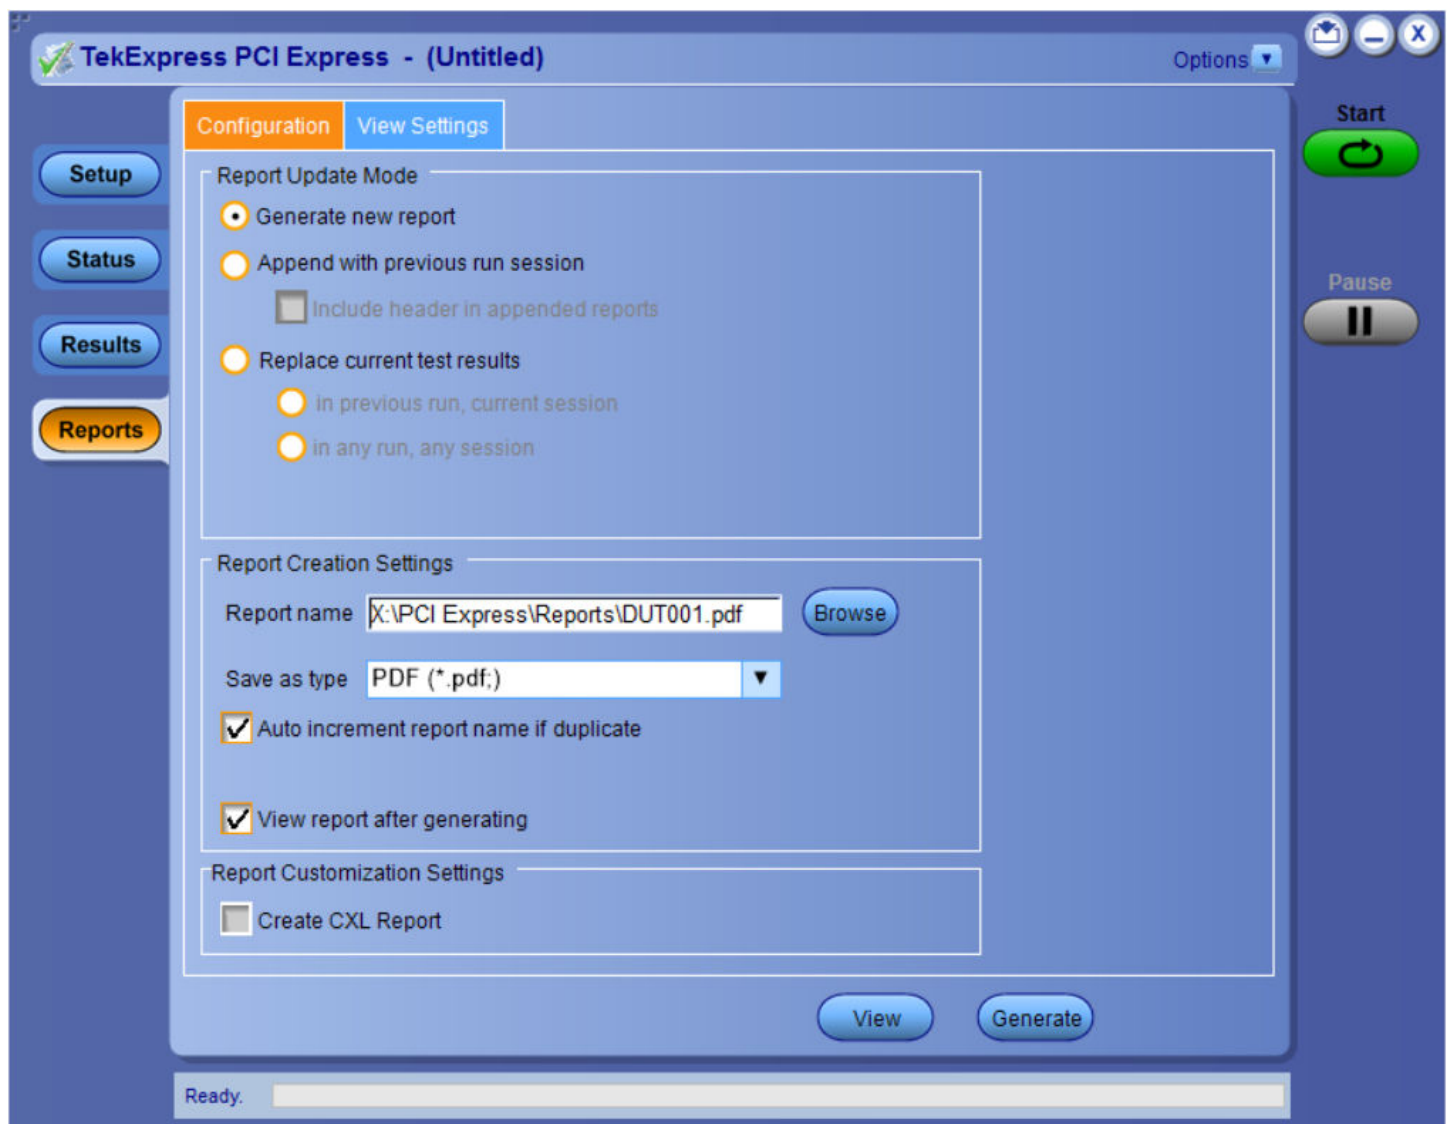

Report panel- Configuration tab

Report configuration panel settings

Control	Description
View	Click to view the most current report.
Generate	Generates a new report based on the current analysis results.
Report Update Mode Settings	
Generate new report	Each time when you click Run and when the test execution is complete, it will create a new report. The report can be in either .mht, .pdf, or .csv file formats.
Append with previous run session	Appends the latest test results to the end of the current test results report. Each time when you click this option and run the tests, it will run the previously failed tests and replace the failed test result with the new pass test result in the same report.
Include header in appended reports	Select to include header in appended reports.
Replace current test results	Replaces the previous test results with the latest test results. Results from newly added tests are appended to the end of the report.
In previous run, current session	Select to replace current test results in the report with the test result(s) of previous run in the current session.
In any run, any session	Select to replace current test results in the report with the test result(s) in the selected run session's report. Click and select test result of any other run session.
Report Creation Settings	
Report name	Displays the name and path of the <Application Name> report. The default location is at \\My Documents\\My TekExpress\\<Application Name>\\Reports. The report file in this folder gets overwritten each time you run a test unless you specify a unique name or select to auto increment the report name. To change the report name or location, do one of the following: - In the Report Path field, type the current folder path and name. - Double-click in the Report Path field and then make selections from the popup keyboard and click Enter. Be sure to include the entire folder path, the file name, and the file extension. For example: C:\\Documents and Settings\\your user name\\My Documents\\My TekExpress\\<Application Name> \\DUT001.mht. NOTE: You cannot set the file location using the Browse button. Open an existing report Click Browse, locate and select the report file and then click View at the bottom of the panel.
Save as type	Saves a report in the specified file type, selected from the drop-down list. The report is saved in .csv, .pdf, or .mht. NOTE: If you select a file type different from the default, be sure to change the report file name extension in the Report Name field to match.

Control	Description
Auto increment report name if duplicate	Sets the application to automatically increment the name of the report file if the application finds a file with the same name as the one being generated. For example: DUT001, DUT002, DUT003. This option is enabled by default.
View report after generating	Automatically opens the report in a Web browser when the test execution is complete. This option is selected by default.
Report Customization Settings	
Create CXL Report	Creates CXL device type for AIC/SYB of CEM Spec and Tx Test Board/SRIS Test Board of BaseSpec. NOTE: This option is unselected by default.


CXL Support

NOTE: CXL device type support is newly added to the TekExpress PCIe TX application.

- Supported Device Type and Data Rates:**

Device Types	Data Rates
CXL Add-In Card	8 GB/s 16 GB/s 32 GB/s
CXL System Board	8 GB/s 16 GB/s 32 GB/s
CXL TX Test Board	8 GB/s 16 GB/s 32 GB/s
CXL SRIS TX Test Board	16 GB/s 32 GB/s

- Specification Reference:** PCI Express Card Electromechanical Specification Revision 4.0 v1.0 and PCI Express Base Specification Revision 4.0 v1.0
- Test Setup:** The test setup for CXL is same as CEM or Base specification device types. Additionally, user needs to select **Create CXL Report** checkbox in the report panel to run the test in CXL mode.

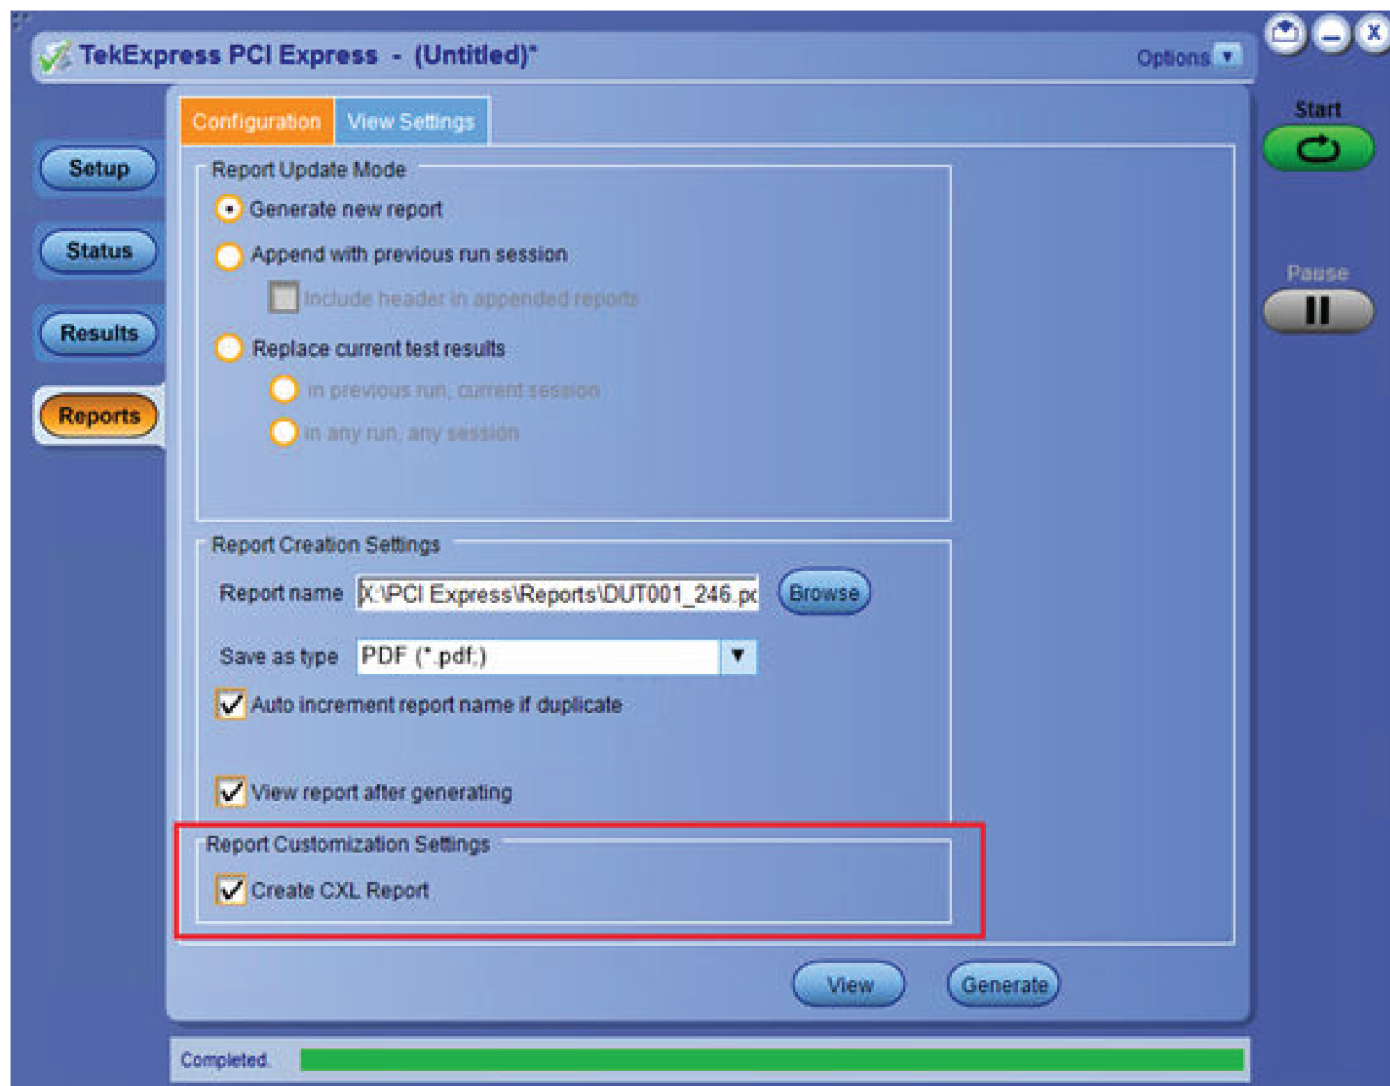

Configure report view settings

The **View Settings** tab describes the report view settings to configure the Reports panel. Select report view settings before running a test or when creating and saving test setups. Report settings configured are included in saved test setups.



Report panel-View settings tab

Report panel view settings

Control	Description
Contents To Save Settings	
Include pass/fail info in details table	Select to include pass/fail information in the details table of the report.
Include detailed results	Select to include detailed results in the report.
Include plot images	Select to include the plot images in the report.
Include setup configuration	Sets the application to include hardware and software information in the summary box at the top of the report. Information includes: the oscilloscope model and serial number, the oscilloscope firmware version, and software versions for applications used in the measurements.
Include user comments	Select to include any comments about the test that you or another user have added in the DUT tab of the Setup panel. Comments appear in the Comments section, below the summary box at the beginning of each report.

Control	Description
Include switch matrix configuration	Select to include the switch matrix configuration in the report.
Include Intermediate Results	Select to include intermediate test results for Gen4 and Gen5.
Group Test Result By	
Test Name	Select to group the test results based on the test name in the report..
Lane	Select to display the test results by lane.
Equalization	Select to display the test results by equalization.
Pass/Fail Results	Select to display the test results by pass or fail results.
Test Result	Select to group the test results based on the test result in the report.

View a generated report

Sample report and its contents

A report shows detailed results and plots, as set in the Reports panel.



TekExpress PCIe Tx

SRIS TX Test Board Test Report

Setup Information

DUT ID	DUT001	Fixture Type	Non Gen5
Date/Time	6/17/2026 5:57:25 AM	Scope Model	DPO75002SX
Device Type	BaseSpec	Scope Serial Number	B322431
Package Type	Non-Root Device	SPC, Factory Calibration	PASS;PASS
TekExpress PCIe Tx Version	v20.1.0.44	Scope F/W Version	v10.15.1 Build 3
TekExpress Framework Version	v5.12.0.22	DPOJET Version	v10.6.3.102
TekExpress Execution Mode	Pre-Recorded	Channel Info	ATI
Compliance Mode	No	Probe CH1 Model	none
Spec Version	Gen7 - 7.0	Probe CH1 Serial Number	N/A
Voltage Swing	Full	Probe CH2 Model	none
SSC Status	On	Probe CH2 Serial Number	N/A
SlotNumber	01	PAMJET Version	v10.11.1.56
Acquisition Count	1		
Analysis Tool	PAMJet		
Deskew Automation	Disabled		
Embed Filter File	N/A		
DeEmbed Filter File	N/A		
Overall Test Result	Pass		
Overall Execution Time	02:00:48		

DUT COMMENT: DUT001

Generation Pass/Fail Table

Generation	Pass/Fail	Test Pass Condition
Gen1	-	-
Gen2	-	-
Gen3	-	-
Gen4	-	-
Gen5	-	-
Gen6	-	-
Gen7	Pass	1. ALL normative signal quality tests must pass for ALL selected preset for EACH selected lane. 2. ALL TX-EQ preset tests must pass for EACH selected lane.

CTLE and Scope Noise Compensation Table

DataRate	Equalization	Embed Filter	Bessel-Thomson Filter	CTLE	Scope Noise Compensation
128Gbps	Q0 Compliance Pattern	Not Applied	Applied	No CTLE	Mode: Auto; Scope Noise Information: PCIe RLM Level 0 Noise 4.5990e-03 PCIe RLM Level 1 Noise 4.3798e-03 PCIe RLM Level 2 Noise 4.3609e-03 PCIe RLM Level 3 Noise 4.6258e-03
128Gbps	Jitter HSTP	Not Applied	Applied	12 dB	Mode: Auto; Scope Noise Information: Scope Noise data not found.
128Gbps	Jitter LSTP0	Not Applied	Applied	12 dB	Mode: Auto; Scope Noise Information: Scope Noise data not found.
128Gbps	Jitter LSTP1	Not Applied	Applied	12 dB	Mode: Auto; Scope Noise Information: Scope Noise data not found.
128Gbps	Jitter LSTP2	Not Applied	Applied	12 dB	Mode: Auto; Scope Noise Information: Scope Noise data not found.
128Gbps	Jitter LSTP3	Not Applied	Applied	12 dB	Mode: Auto; Scope Noise Information: Scope Noise data not found.
128Gbps	Jitter LSTP4	Not Applied	Applied	12 dB	Mode: Auto; Scope Noise Information: Scope Noise data not found.
128Gbps	Jitter Measurement Pattern	Not Applied	Applied	12 dB	Mode: Auto; Scope Noise Information: Scope Noise data not found.
128Gbps	Jitter HSTP (PWJ)	Not Applied	Applied	15 dB	Mode: Auto; Scope Noise Information: PCIe PWJ Noise 7.7715e-03

RLM Gen7								
Measurement Details	Lane Name	Data Rate	Equalization	Measured Value	Test Result	Margin	Low Limit	High Limit
RLM Mean R1	Lane0	128Gbps	Q0 Compliance Pattern	95.423 %	Pass	LL: 0.423 %, HL: 4.577 %	95 %	100 %
COMMENTS	Spec Reference : PCI Express Base Specification Revision 7.0 v1.0 Pattern Guidance: Enabled Pattern Guidance File: compliancePattern_Lane_0.txt							

[Back to Summary Table](#)

SNDR Gen7								
Measurement Details	Lane Name	Data Rate	Equalization	Measured Value	Test Result	Margin	Low Limit	High Limit
PCIe_Pmax Mean R1	Lane0	128Gbps	Q0 Compliance Pattern	343.15 mV	Informative	LL: 309.15 mV, HL: mV	34 mV	NA mV
PCIe_SigmaE Mean R1	Lane0	128Gbps	Q0 Compliance Pattern	4.8885 mV	Informative	LL: -29.1115 mV, HL: mV	34 mV	NA mV
PCIe_SigmaN Mean R1	Lane0	128Gbps	Q0 Compliance Pattern	3.8287 mV	Informative	LL: -30.1713 mV, HL: mV	34 mV	NA mV
PCIe_SNDR Mean R1	Lane0	128Gbps	Q0 Compliance Pattern	34.849 dB	Pass	LL: 0.849 dB, HL: dB	34 dB	NA dB
COMMENTS	Spec Reference : PCI Express Base Specification Revision 7.0 v1.0 Pattern Guidance: Enabled Pattern Guidance File: compliancePattern_Lane_0.txt							

[Back to Summary Table](#)

Uncorrelated TIE TJ@E-06 Gen7								
Measurement Details	Lane Name	Data Rate	Equalization	Measured Value	Test Result	Margin	Low Limit	High Limit
TIE UTJ Cumulative Mean R1	Lane0	128Gbps	Jitter Measurement Pattern	1.06311 ps	Pass	LL: ps, HL: 0.93689 ps	NA ps	2.0 ps
TIE UTJ Mean R1	Lane0	128Gbps	Jitter HSTP	0.80414 ps	Informative	LL: ps, HL: 1.19586 ps	NA ps	2.0 ps
TIE UTJ Mean R1	Lane0	128Gbps	Jitter LSTP0	1.1149 ps	Informative	LL: ps, HL: 0.8851 ps	NA ps	2.0 ps
TIE UTJ Mean R1	Lane0	128Gbps	Jitter LSTP1	1.1149 ps	Informative	LL: ps, HL: 0.8851 ps	NA ps	2.0 ps
TIE UTJ Mean R1	Lane0	128Gbps	Jitter LSTP2	1.1149 ps	Informative	LL: ps, HL: 0.8851 ps	NA ps	2.0 ps
TIE UTJ Mean R1	Lane0	128Gbps	Jitter LSTP3	1.1149 ps	Informative	LL: ps, HL: 0.8851 ps	NA ps	2.0 ps
TIE UTJ Mean R1	Lane0	128Gbps	Jitter LSTP4	1.1149 ps	Informative	LL: ps, HL: 0.8851 ps	NA ps	2.0 ps
COMMENTS	Spec Reference : PCI Express Base Specification Revision 7.0 v1.0 Pattern Guidance: Disabled Pattern Guidance: Disabled							

[Back to Summary Table](#)

Uncorrelated TIE DJ dd@E-06 Gen7								
Measurement Details	Lane Name	Data Rate	Equalization	Measured Value	Test Result	Margin	Low Limit	High Limit
TIE UDJD Cumulative Mean R1	Lane0	128Gbps	Jitter Measurement Pattern	0.125337 ps	Pass	LL: ps, HL: 0.62466 ps	NA ps	0.75 ps
TIE UDJD Mean R1	Lane0	128Gbps	Jitter HSTP	0.11322 ps	Informative	LL: ps, HL: 0.63678 ps	NA ps	0.75 ps
TIE UDJD Mean R1	Lane0	128Gbps	Jitter LSTP0	0.12776 ps	Informative	LL: ps, HL: 0.62224 ps	NA ps	0.75 ps
TIE UDJD Mean R1	Lane0	128Gbps	Jitter LSTP1	0.12776 ps	Informative	LL: ps, HL: 0.62224 ps	NA ps	0.75 ps
TIE UDJD Mean R1	Lane0	128Gbps	Jitter LSTP2	0.12776 ps	Informative	LL: ps, HL: 0.62224 ps	NA ps	0.75 ps
TIE UDJD Mean R1	Lane0	128Gbps	Jitter LSTP3	0.12776 ps	Informative	LL: ps, HL: 0.62224 ps	NA ps	0.75 ps
TIE UDJD Mean R1	Lane0	128Gbps	Jitter LSTP4	0.12776 ps	Informative	LL: ps, HL: 0.62224 ps	NA ps	0.75 ps
COMMENTS	Spec Reference : PCI Express Base Specification Revision 7.0 v1.0 Pattern Guidance: Disabled Pattern Guidance: Disabled							

[Back to Summary Table](#)

Uncorrelated PWJ TJ@E-06 Gen7								
Measurement Details	Lane Name	Data Rate	Equalization	Measured Value	Test Result	Margin	Low Limit	High Limit
UPW TJ Mean R1	Lane0	128Gbps	Jitter HSTP	0.6451 ps	Pass	LL: ps, HL: 1.3549 ps	NA ps	2 ps
COMMENTS		Spec Reference : PCI Express Base Specification Revision 7.0 v1.0						

[Back to Summary Table](#)

Uncorrelated PWJ DJ dd@E-06 Gen7								
Measurement Details	Lane Name	Data Rate	Equalization	Measured Value	Test Result	Margin	Low Limit	High Limit
UPW DJDD Mean R1	Lane0	128Gbps	Jitter HSTP	0.064727 ps	Pass	LL: ps, HL: 0.56027 ps	NA ps	0.625 ps
COMMENTS		Spec Reference : PCI Express Base Specification Revision 7.0 v1.0						

[Back to Summary Table](#)

AC CM 32GHz Gen7								
Measurement Details	Lane Name	Data Rate	Equalization	Measured Value	Test Result	Margin	Low Limit	High Limit
VTX ACCM_PK PK Mean R1	Lane0	128Gbps	Q0 Compliance Pattern	26.152 mV	Pass	LL: mV, HL: 48.848 mV	NA mV	75.00 mV
COMMENTS		Spec Reference : PCI Express Base Specification Revision 7.0 v1.0						

[Back to Summary Table](#)

AC CM 30KHz-500MHz Gen7								
Measurement Details	Lane Name	Data Rate	Equalization	Measured Value	Test Result	Margin	Low Limit	High Limit
VTX ACCM_PK PK_FILT Mean R1	Lane0	128Gbps	Q0 Compliance Pattern	13.904 mV	Pass	LL: mV, HL: 11.096 mV	NA mV	25.00 mV
COMMENTS		Spec Reference : PCI Express Base Specification Revision 7.0 v1.0						

[Back to Summary Table](#)

PS21 Ratio Gen7								
Measurement Details	Lane Name	Data Rate	Equalization	Measured Value	Test Result	Margin	Low Limit	High Limit
PS21 TX Mean R1	Lane0	128Gbps	Q0 Compliance Pattern	0.78107 dB	Pass	LL: dB, HL: 2.91893 dB	NA dB	3.7 dB
COMMENTS		Spec Reference : PCI Express Base Specification Revision 7.0 v1.0						

[Back to Summary Table](#)

V Tx_Diff_Pk_Tp_Pk Gen7								
Measurement Details	Lane Name	Data Rate	Equalization	Measured Value	Test Result	Margin	Low Limit	High Limit
VTX_DIFF_PK_P K Mean R1	Lane0	128Gbps	Q0 Compliance Pattern	805.4 mV	Pass	LL: 5.4 mV, HL: 194.6 mV	800 mV	1000 mV
COMMENTS		Spec Reference : PCI Express Base Specification Revision 7.0 v1.0						

[Back to Summary Table](#)

V Tx_EIEOS Gen7								
Measurement Details	Lane Name	Data Rate	Equalization	Measured Value	Test Result	Margin	Low Limit	High Limit
VTX_EIEOS Mean R1	Lane0	128Gbps	Q10 Compliance Pattern	814.31 mV	Pass	LL: 564.31 mV, HL: mV	250 mV	NA mV
COMMENTS		Spec Reference : PCI Express Base Specification Revision 7.0 v1.0						

[Back to Summary Table](#)

Setup Information

The summary box at the beginning of the report lists setup configuration information. This information includes the oscilloscope model and serial number, optical module model and serial number, and software version numbers of all associated applications.

Test Name Summary Table

The test summary table lists all the tests which are executed with its result status.

Measurement

The measurement table displays the measurement related details with its parameter value.

User comments

If you had selected to include comments in the test report, any comments you added in the DUT tab are shown at the top of the report.

Generation Pass/Fail Table

The Generation Pass/Fail Table shows the pass/fail result of each individual generation. This table is shown only when the results are grouped by Test Name.

Saving and recalling test setup

Overview

You can save the test setup and recall it later for further analysis. Saved setup includes the selected oscilloscope, general parameters, acquisition parameters, measurement limits, waveforms (if applicable), and other configuration settings. The setup files are saved under the setup name at X:\PCI Express

Name	Date modified	Type
 1-LP_20210331_210911	3/31/2021 9:06 PM	File folder
 1-LP_20210331_220738	3/31/2021 10:05 PM	File folder
 1-LP_20210331_223715	3/31/2021 10:35 PM	File folder
 1-LP_20210331_224851	3/31/2021 10:48 PM	File folder
 1-LP_20210331_230337	3/31/2021 11:02 PM	File folder
 1-LP_20210331_230921	3/31/2021 11:08 PM	File folder

Example of Test Setup File

Use test setups to:


- Recall a saved configuration.
- Run a new session or acquire live waveforms.
- Create a new test setup using an existing one.
- View all the information associated with a saved test, including the log file, the history of the test status as it executed, and the results summary.
- Run a saved test using saved waveforms.

NOTE: Images that are shown in this Saving and recalling test setup chapter are for illustration purpose only and it may vary depending on the TekExpress application.


Save the configured test setup

You can save a test setup before or after running a test. You can create a test setup from already created test setup or using a default test setup. When you save a setup, all the parameters, measurement limits, waveform files (if applicable), test selections, and other configuration settings are saved under the setup name. When you select the default test setup, the parameters are set to the application's default value.

- Select **Options > Save Test Setup** to save the opened setup.

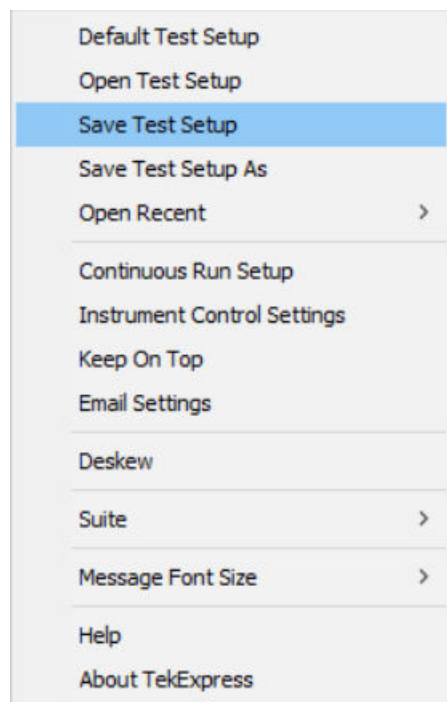


- Select **Options> Save Test Setup As** to save the setup with different name.

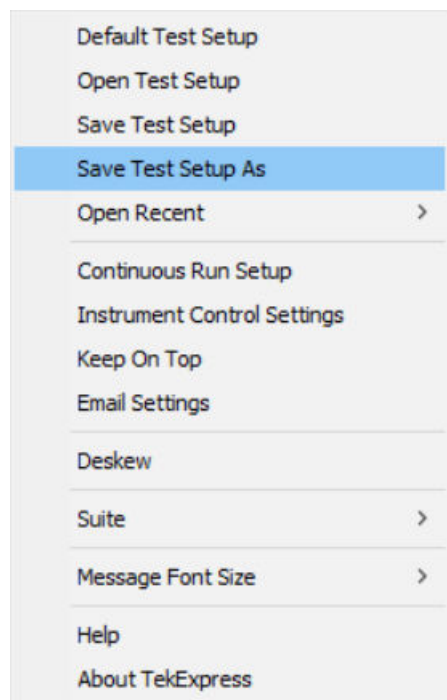


Load a saved test setup

To open (load) a saved test setup, do the following:

- Select **Options> Open Test Setup**.

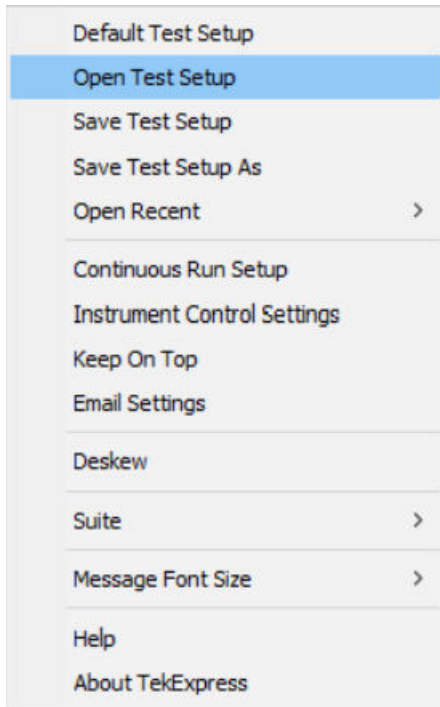

- From the **File Open** menu, select the setup file name from the list and click **Open**.

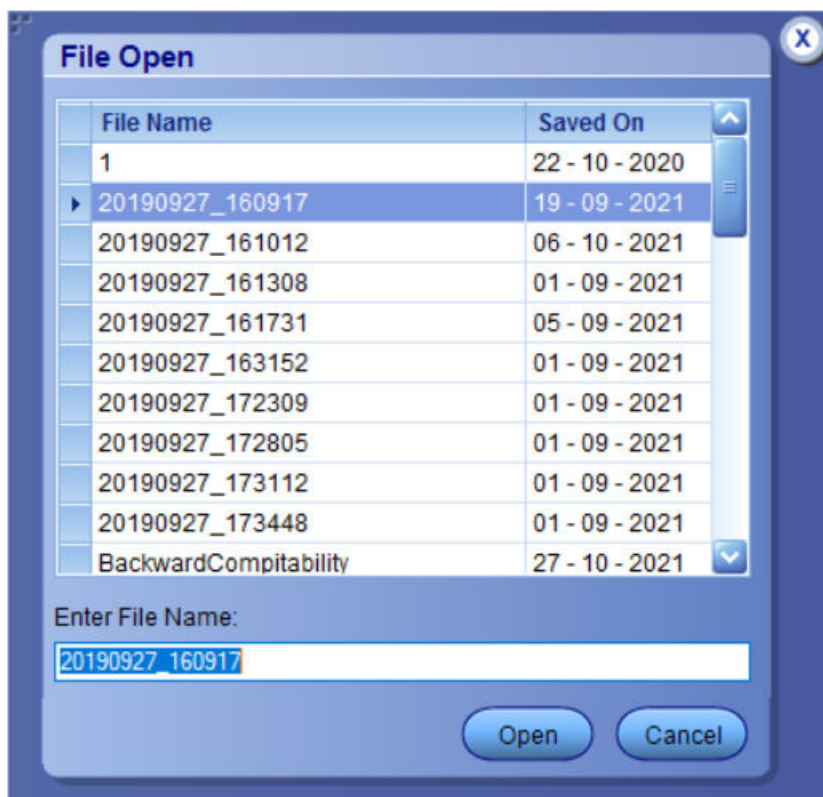


NOTE: Parameters that are set for the respective test setup will enable after opening the file.


Perform a test using pre-run session files

Complete the following steps to load a test setup from a pre-run session:

1. Select **Options> Open Test Setup**.

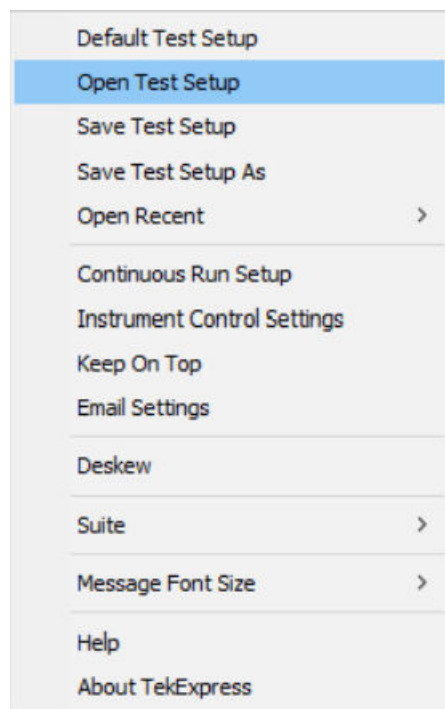


2. From the **File Open** menu, select a setup from the list and then click **Open**.

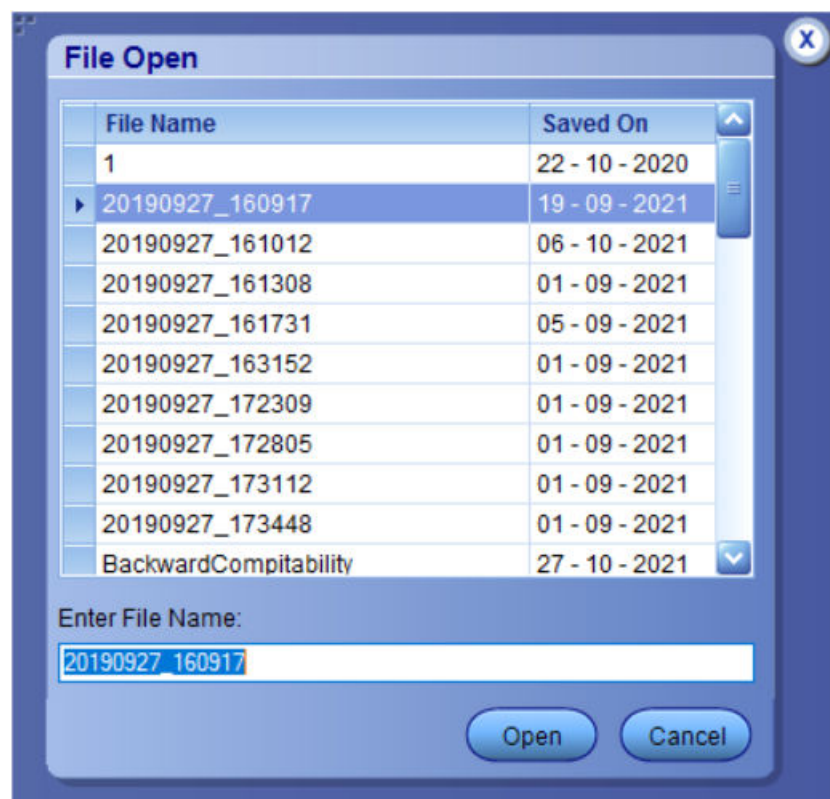


NOTE: Parameters that are set for the respective test setup will enable after opening the file.


3. Switch the mode to **Use Pre-recorded waveform files** in the DUT panel.

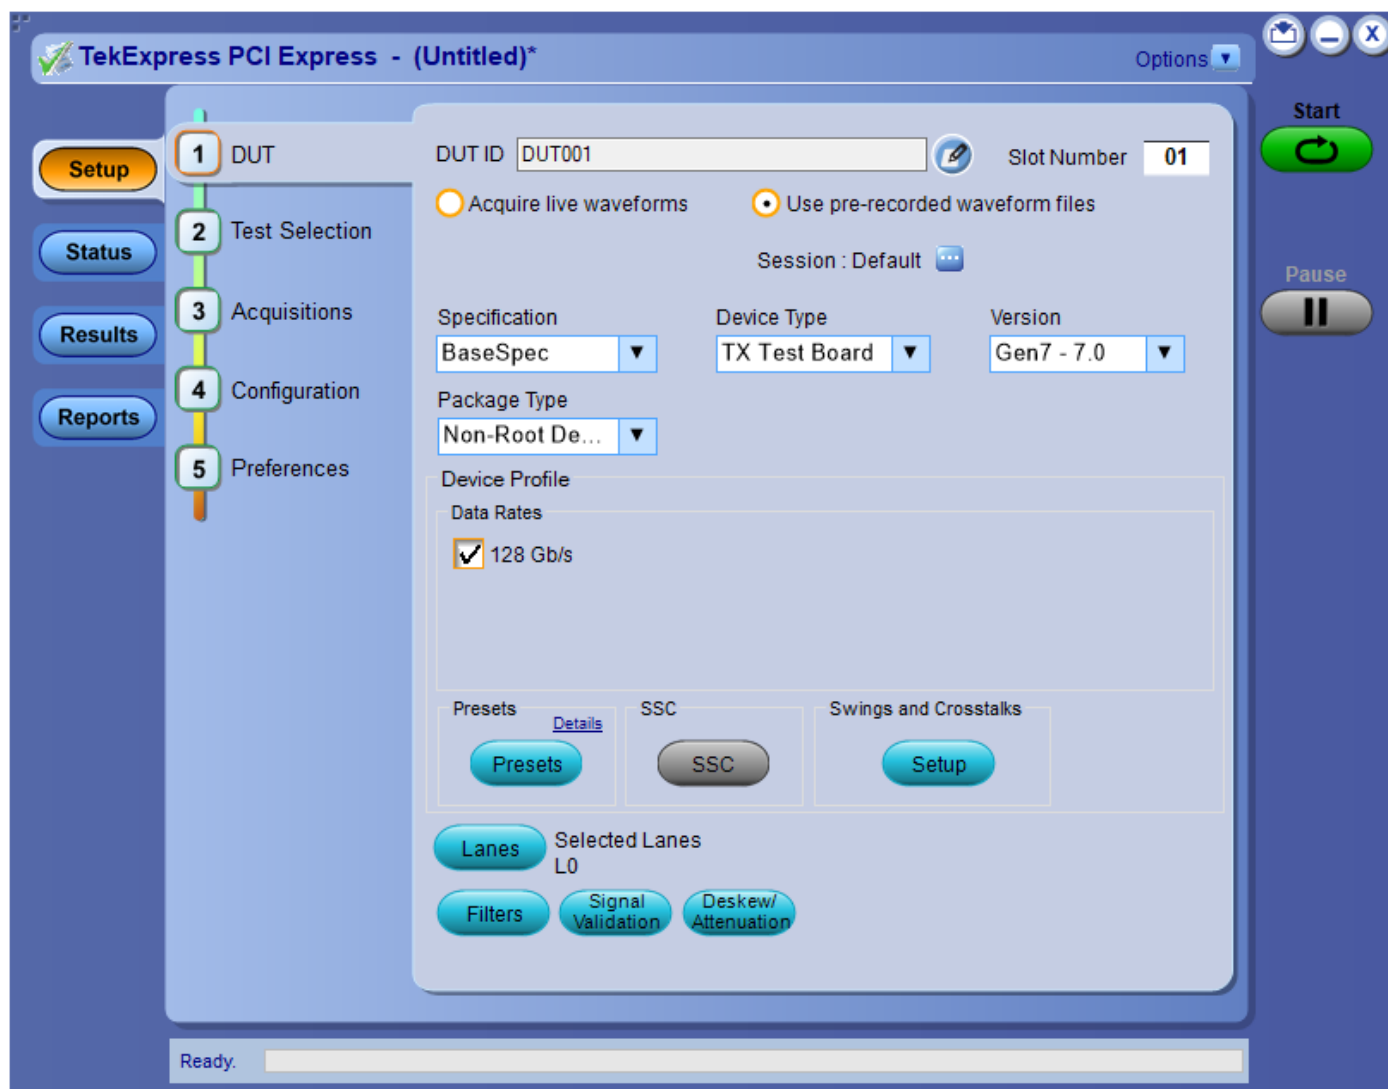

4. Select the required waveforms from the selected setup in the **Acquisitions** tab and click **Start**.

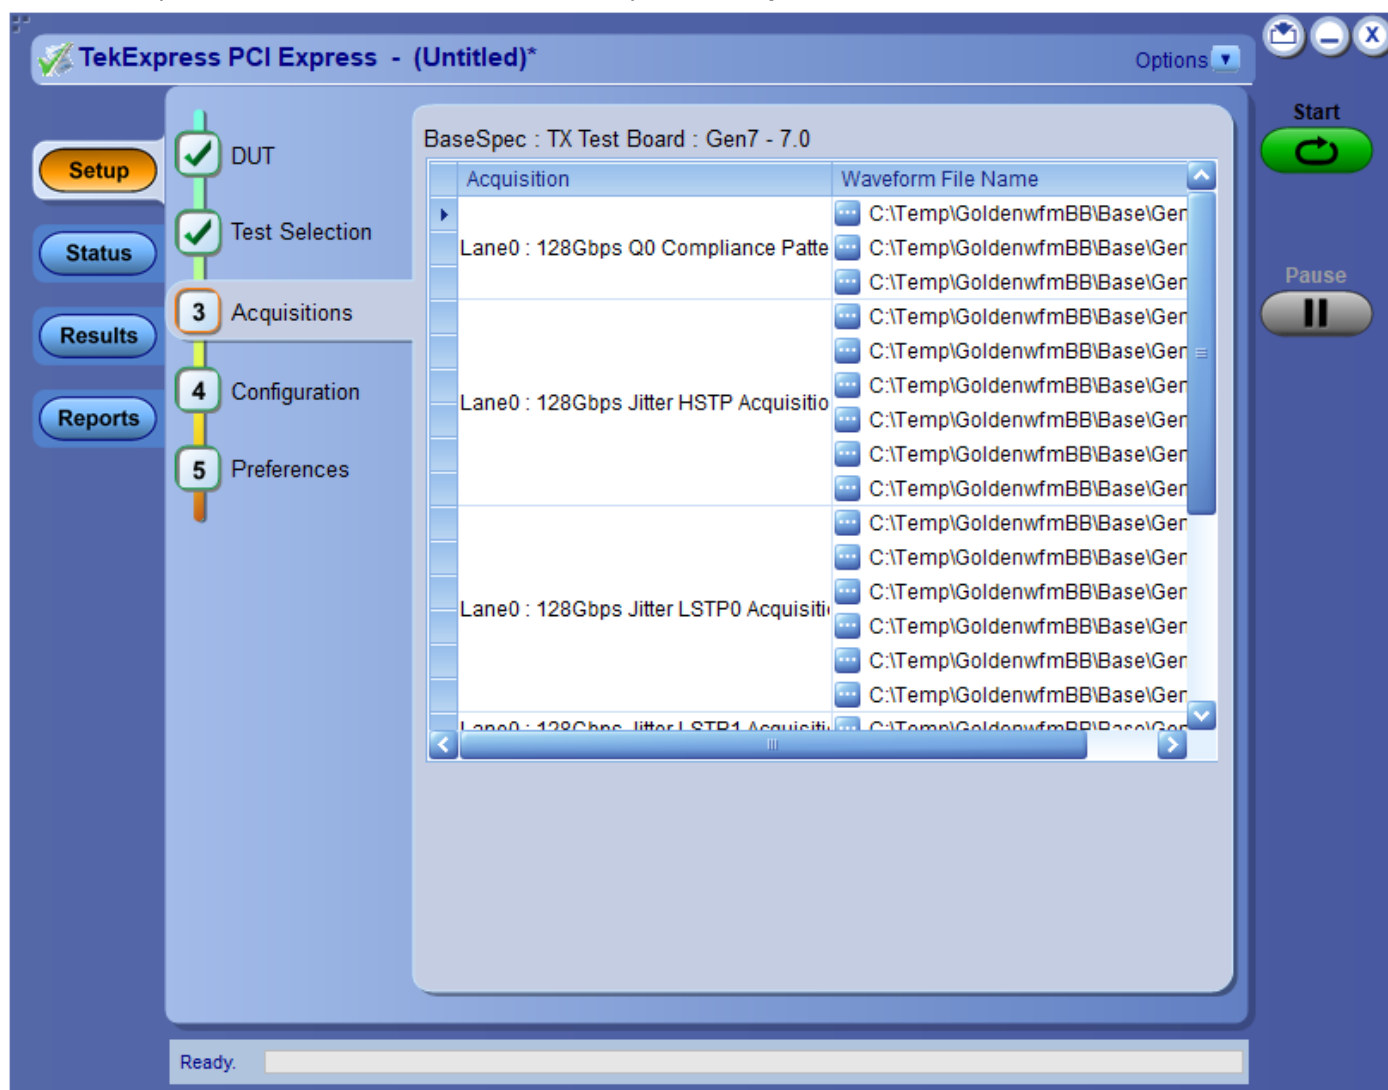

5. The selected waveform file can be removed/replaced by clicking on the () icon.

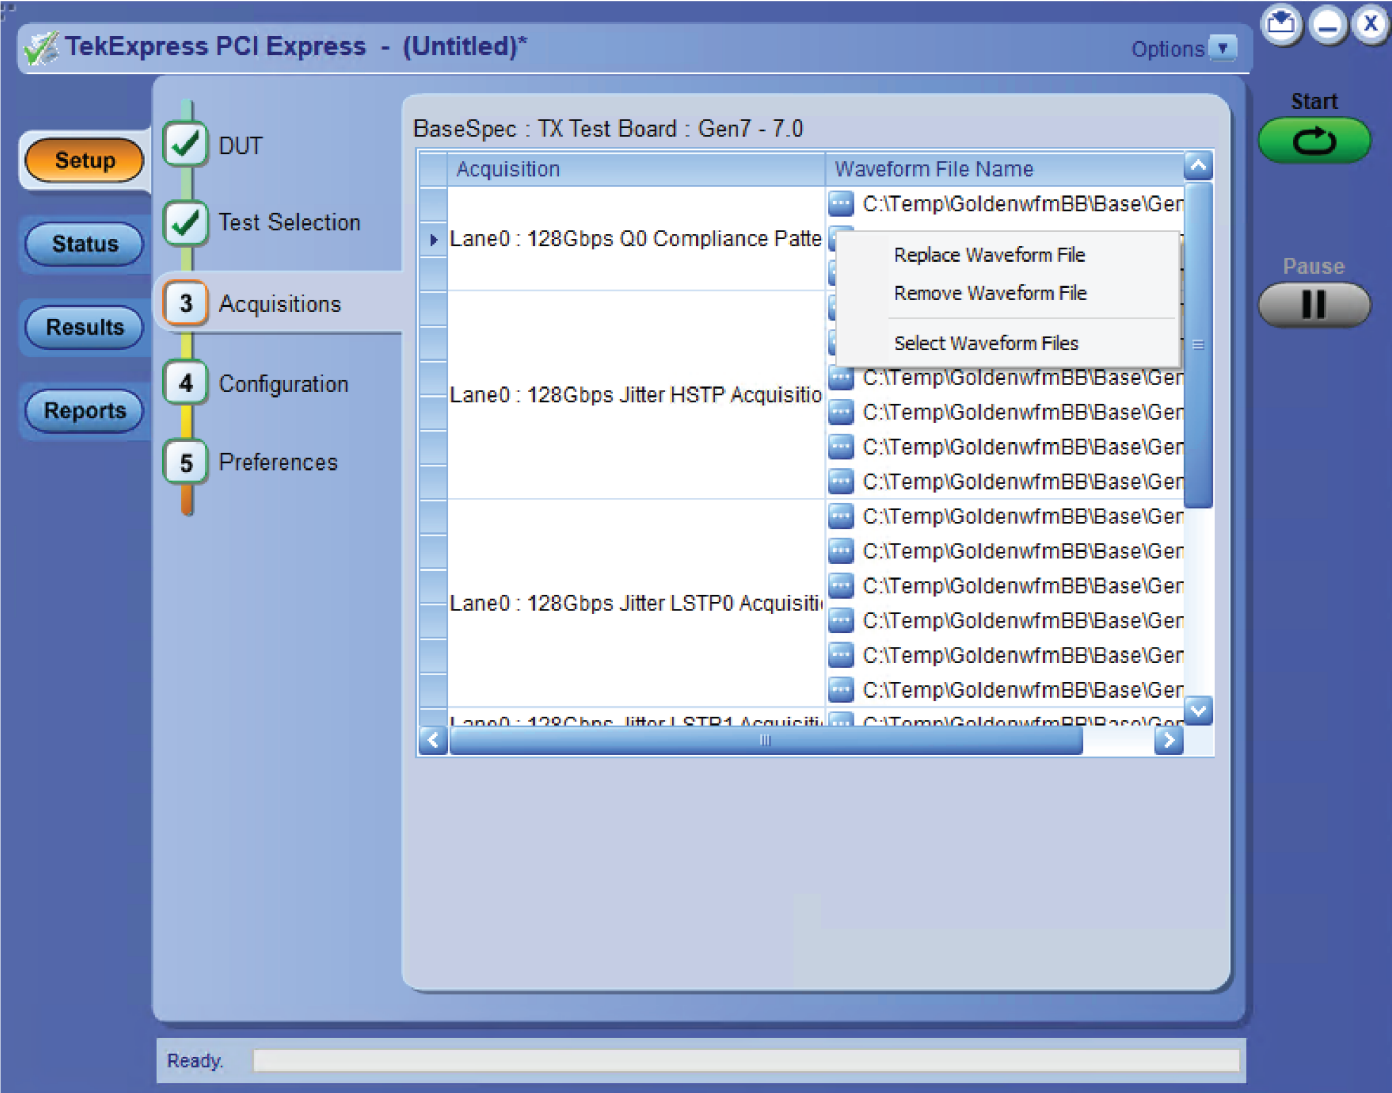

6. After successful completion of the test, the waveform report files are stored at **X:\<Application Name>\Reports**.

Name	Date modified	Type
 DUT001_2266.mht	10/27/2021 4:25 AM	MHTML Document
 DUT001_2265.mht	10/27/2021 1:24 AM	MHTML Document
 DUT001_2264.mht	10/6/2021 2:58 AM	MHTML Document
 DUT001_2263.mht	10/6/2021 2:40 AM	MHTML Document
 DUT001_2262.mht	10/6/2021 2:35 AM	MHTML Document
 DUT001_2261.mht	10/6/2021 2:23 AM	MHTML Document

7. The overall test result status after completion of the test execution is displayed in the Results Panel.

The screenshot shows the TekExpress PCI Express - (ESS_Gen7_SRIS) application window. The interface includes a sidebar with buttons for Setup, Status, Results, and Reports. The main area displays the 'Overall Test Result' for 'Signal Tests' under the 'Gen7 Preset Test' tab. A table lists various test results for Lane0, including UnitInterval Gen7, RLM Gen7, SNDR Gen7, and TIE TJ@E-06 Gen7. The table columns are Description, Details, Preset, Pass/Fail, Value, and Margin. The status bar at the bottom indicates 'Ready'.


Description	Details	Preset	Pass/Fail	Value	Margin
[-] Lane0					
+ UnitInterval Gen7	Unit Interval Mean R1	Q0 Compliance Pattern Gen7	Informative	15.625 ps	LL: NA ps, HL: NA ps
+ RLM Gen7	RLM Mean R1	Q0 Compliance Pattern Gen7	✓ Pass	95.423 %	LL: 0.423 %, HL: 4.577 %
+ SNDR Gen7	PCIe_SNDR Mean R1	Q0 Compliance Pattern Gen7	✓ Pass	34.849 dB	LL: 0.849 dB, HL: dE
+ SNDR Gen7	PCIe_Pmax Mean R1	Q0 Compliance Pattern Gen7	Informative	343.15 mV	LL: 309.15 mV, HL: m
+ SNDR Gen7	PCIe_Sigma E Mean R1	Q0 Compliance Pattern Gen7	Informative	4.8885 mV	LL: -29.111 mV, HL: m
+ SNDR Gen7	PCIe_Sigma N Mean R1	Q0 Compliance Pattern Gen7	Informative	3.8287 mV	LL: -30.171 mV, HL: m
+ Uncorrelated TIE TJ@E-06 Gen7	TIE UTJ Mean R1	Jitter HSTP Gen7	Informative	0.80414 ps	LL: ps, HL: 1.19586 ps
+ Uncorrelated TIE TJ@E-06 Gen7	TIE UTJ Mean R1	Jitter LSTP0 Gen7	Informative	1.1149 ps	LL: ps, HL: 0.8851 ps

Ready.


Save the test setup with a different name

To save a test setup with a different name, follow the steps:

1. Select **Options> Save Test Setup As**.

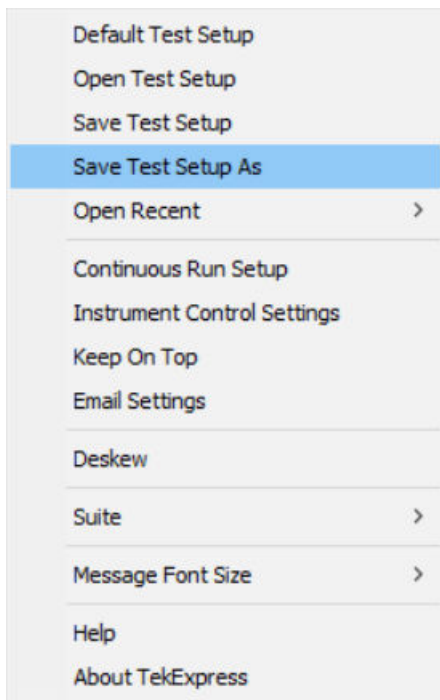

2. Enter the new test setup name and click **Save**.

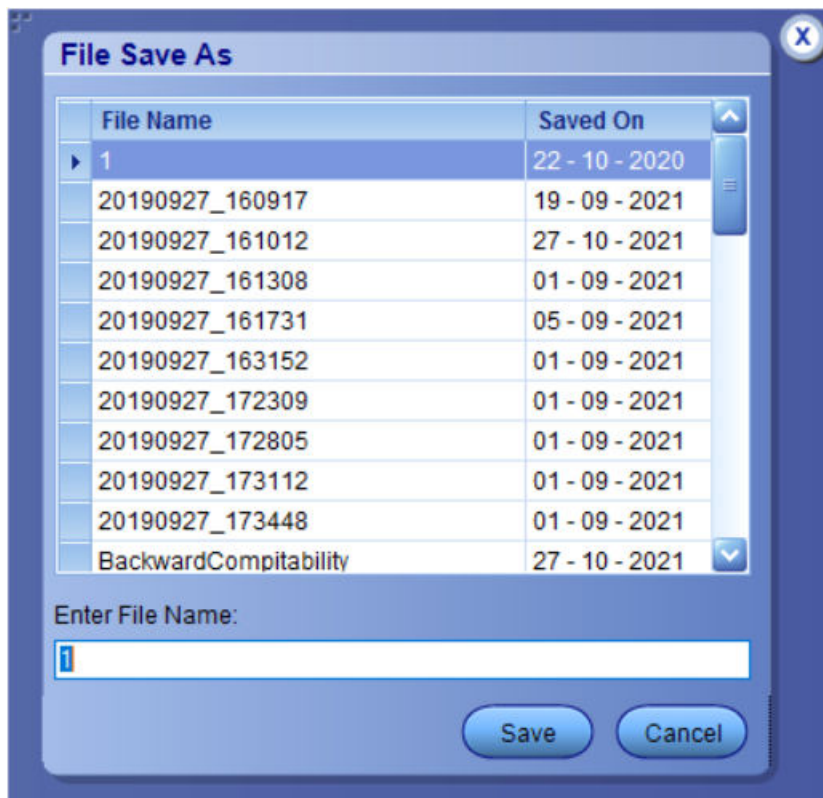


Switch Matrix application

Product description

Switch Matrix application allows to configure and setup automated multi-lane testing using RF switch. The solution allows you to map each of the several transmitter signals and forward the selected input either to another relay or to the oscilloscope channel.





Application overview



This section describes the Switch Matrix application settings.

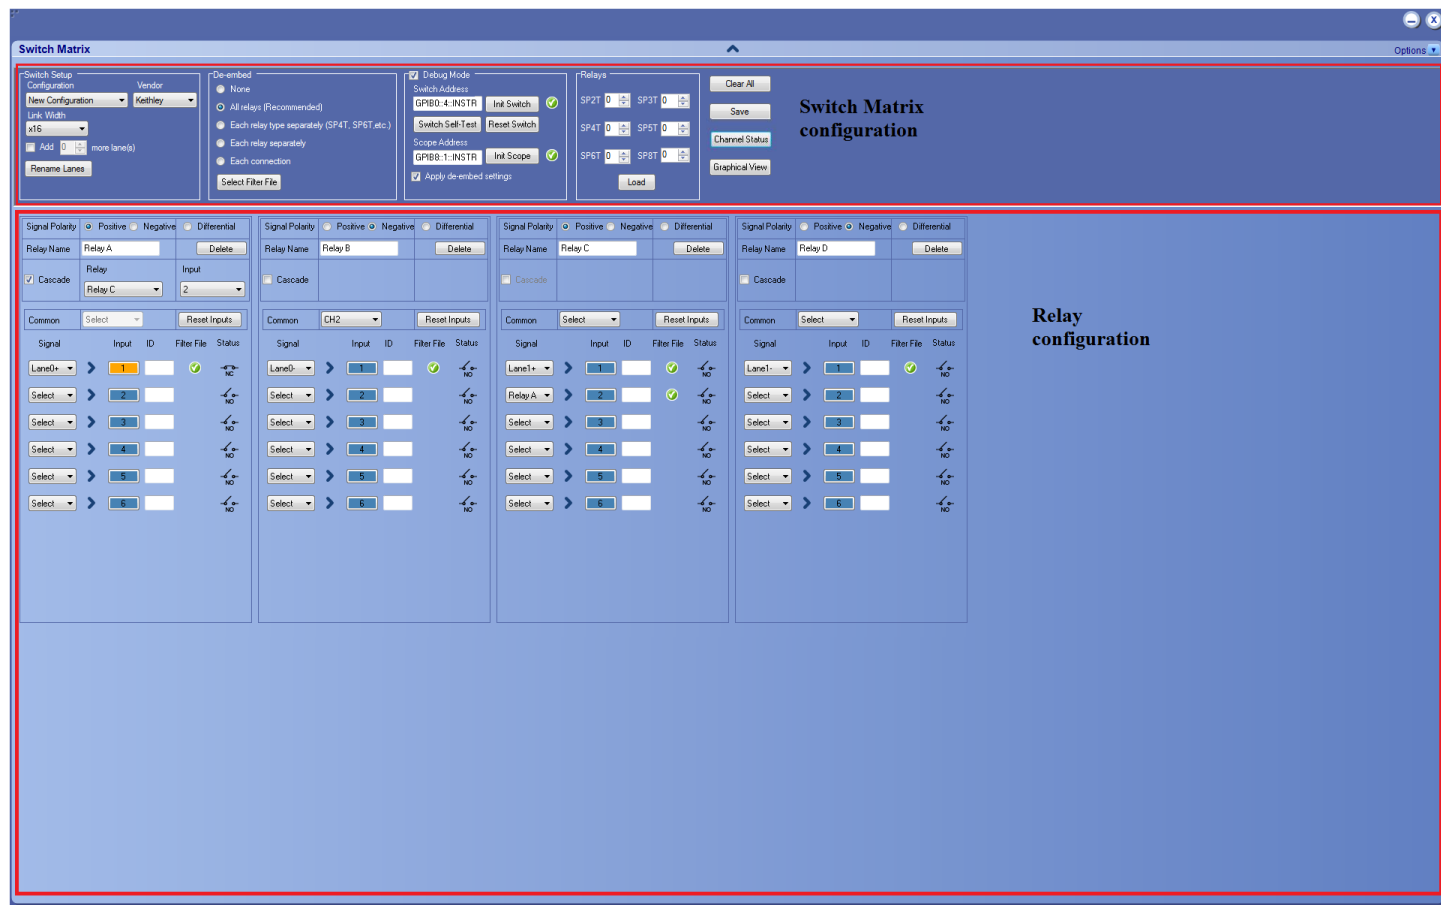






Switch Matrix configuration settings





Item	Description
	Click to expand/collapse the switch matrix configuration.

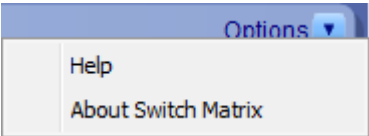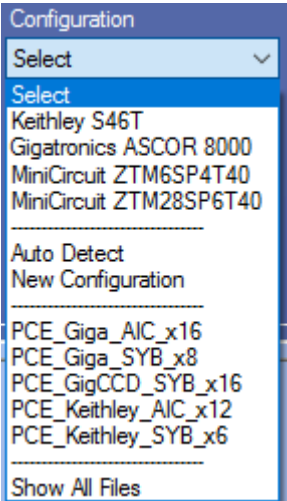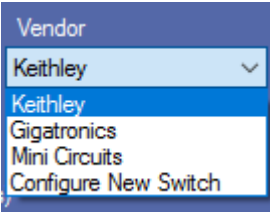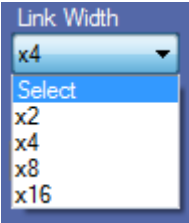Item	Description
Options 	Click Help to view the software help document and About Switch Matrix for software version.
Switch Matrix configuration	
Configuration 	Select the configuration option: ▪ Keithley S46T: 6-input-to-1-output switch configuration ▪ Gigatronics ASCOR 8000: 8-input-to-1-output switch configuration ▪ MiniCircuit ZTM6SP4T40: 4-input-to-1-output switch configuration ▪ MiniCircuit ZTM28SP6T40: 6-input-to-1-output switch configuration ▪ Auto Detect: Select to autodetect the switch. ▪ New Configuration: Select to manually configure the switch. ▪ Saved file names: Saved configuration file name(s) are displayed in the drop-down list. Select to recall the configuration. ▪ Below are the list of saved files available for Keithley and Gigatronics configurations. ▪ PCE_Giga_AIC_x16 ▪ PCE_Giga_SYB_x8 ▪ PCE_GigaCCD_SYB_x16 ▪ PCE_Keithley_AIC_x12 ▪ PCE_Keithley_SYB_x6 ▪ Show All Files (on page 103): Select to view the list of all saved files.
Vendor 	Select the vendor from the drop-down list. This field is displayed: ▪ When you select Configuration→ New Configuration to create a fresh configuration. ▪ When you open a saved configuration. The displayed vendor name is not editable. ▪ When Auto Detect is selected. The displayed vendor name is not editable.
Link Width (on page 108) 	Select the Link Width from the drop-down list. This determines the maximum number of lanes supported by the DUT.
Add <X> more lane(s) 	Select to add extra lanes (Additional1, Additional2,...) to the lanes list. The extra lanes added are displayed in the relay signals. You can add a maximum of 10 lanes.

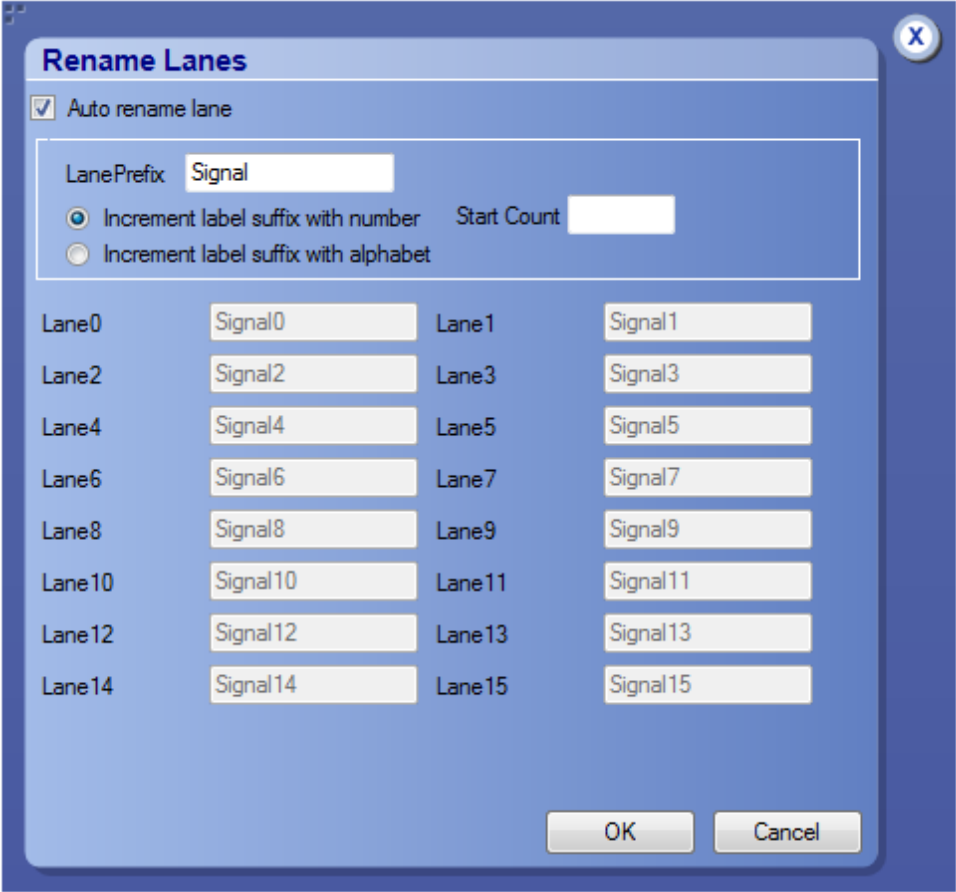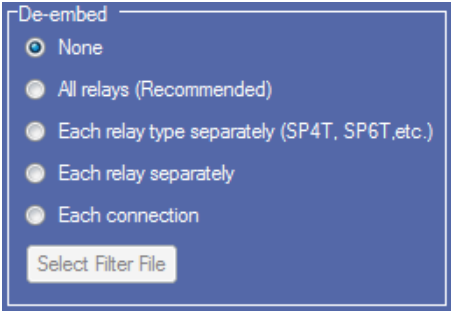Item	Description
Rename Lanes Rename Lanes	Click to rename the lanes. Enter the LanePrefix and select the increment label type to suffix by either number or alphabet. The number of lanes depends on the Link Width selected. Clear the Auto rename lane check box to set unique names for the lanes. 
De-embed	
De-embed NOTE: Configure at least one relay before configuring the de-embed settings. 	Select the De-embed option: - None All relays (Recommended) (on page 104) Each relay type separately (SP4T, SP6T, etc.) (on page 104) Each relay separately (on page 105) Each connection (on page 106) Select the de-embed option and click Select Filter File to browse and select the filter file(s).
Debug Mode	

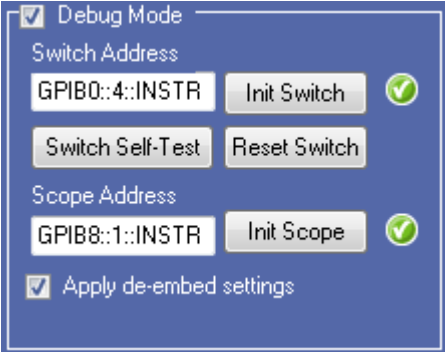Item	Description
Debug Mode (on page 109) 	Select Debug Mode to manually configure the switch. Switch Address Enter the Switch Address in the GPIB or TCPIP format. GPIB format: GPIB0:X:INSTR TCPIP format: TCPIP::IPADDR::INSTR Init Switch This will synchronize the configuration of relay(s) in the application with the relay(s) in the switch. Synchronization will be successful only for the relays whose configuration matches with the physical switch. Pass/Fail status is displayed next to the button. NOTE: Relay configurations (number of relays, number of relay inputs, and name of relays) in the application should match the physical switch, for successful synchronization. Switch Self-Test This will close and open all switch channels one-by-one and displays the pass/fail status of the channel next to the ID. A self-test report (CSV) is generated at the end of the process. You cannot abort this process. Initialize the switch before performing the self-test. Reset Switch Click Reset Switch to reset the switch. This will open all channels. Scope Address Enter the oscilloscope address in the GPIB or TCPIP format. GPIB format: GPIB0:X:INSTR TCPIP format: TCPIP::IPADDR::INSTR Init Scope Enter the oscilloscope address in the Scope Address field and click Init Scope to initialize the oscilloscope. This will establish the connection with the oscilloscope. The pass/fail status is displayed next to the button. Apply De-embed settings Select to apply de-embed settings to the channels. When the oscilloscope is initialized and de-embed settings are configured, closing a connection will apply the de-embed settings and then close the connection.
Relays	

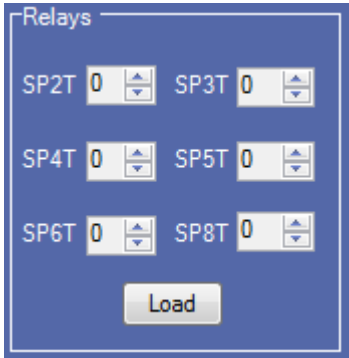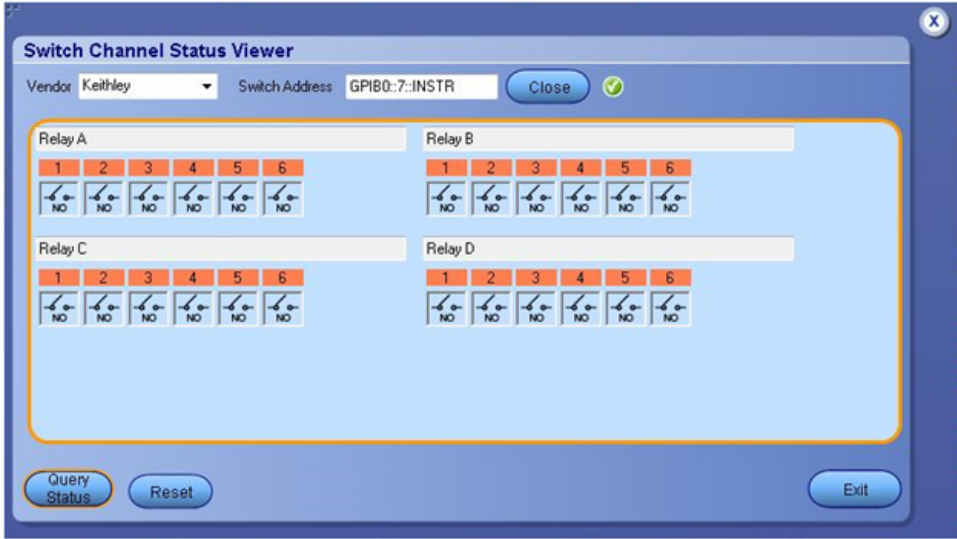Item	Description
Relays 	Select the relay(s). In SPnT, <i>n</i> represents the number of connection signals for the relay. For example, SP4T is a four signal connection relay. This field displays only for a new configuration. By default, zero relays are selected. Enter the total number of relays to be loaded in their respective input box and click Load. You can also click  or  to increase or decrease the number.
Save 	Click to save the configuration at <i>C:\ProgramData\Tektronix\Switch Matrix Configurations*.xml</i>. This operation checks whether all the required configurations are done. If any of the required configurations are not selected, then error popup is displayed, which prompts you to complete the configuration(s).
Clear All 	Click to clear all configurations. The application will be loaded with Configuration drop-down (default).
Channel Status 	Click to view the relays and status of channels of Keithley or Gigatronix switch. This updates the channel status dynamically. In Switch Channel Status Viewer, select the Vendor type, enter the Switch Address and click Init to initialize the switch. This will establish the connection with the switch. Click Query Status to get the details of the relays of the switch and the status of the channels. Click Reset to reset the status viewer. 

Item	Description
Graphical View 	Click to view the graphical representation of the configured relays. If the relays are cascaded, then they are also displayed in the graphical representation.
Relay configuration	
Signal Polarity 	Select the signal polarity of DUT: ▪ Positive: populates Lane0+, Lane1+, connection signals. ▪ Negative: populates Lane0-, Lane1-, connection signals. ▪ Differential: populates Lane0, Lane1, connection signals.
Relay Name 	Enter the relay name. This name should match the relay name of the connected switch.
Delete 	Click to delete the relay. This configuration is only available for the configured (loaded) relays, when Configuration > New Configuration is selected.
Cascade 	Select to cascade the relay by connecting the common channel as the input signal for another relay. Select the Relay and the Input of the relay. Check that the selected relay signal displays the appropriate relay name. The cascade settings is also displayed in the graphical view. Click here (on page 109) to get details about Cascade.
NOTE: Select the cascade settings before you save the configuration.	
Common 	Select the oscilloscope channel for Common. If cascaded, it displays the name of the relay. Click Reset Inputs to clear all connection signal settings.
NOTE: Select the common settings for all the relays, before you save the configuration.	

Item	Description
Signal Input ID Filter File Status Lane0+ > 1 ✓ Select > 2	Signal Select the DUT connection signal. This drop-down list shows the lanes based on Link Width (on page 108) and Signal Polarity (on page) settings. If the link width is x8 and signal polarity is Positive, then the Signal drop-down list will have Lane0+ to Lane7+ options. Input This button is enabled only in debug mode and if a valid signal is configured for the channel. Click to close or open the channel. ID Enter the three character alias name for the channel. This is shown in the graphical view of switch matrix configuration (on page 107). Filter File This column shows  or  indicating the status of the filter file configuration for the channel. If no de-embed option is selected, then this column remains blank. Status This column displays the status of the channel. Channel closed (normally closed) :  Channel opened (normally opened) : 

File name extensions

This application uses the following file name extensions:

File name extension	Description
.html	Saved configuration and Graphical view file formats
.xml	Switch Matrix configuration files


Status indicators

Status indicators	Description
	Success indicator
	Failure indicator
	Closed channel indicator (NC = Normally Closed)

Status indicators	Description
	Opened channel indicator (NO = Normally Opened)

Saved configurations

Click **Configuration**→ **Show All Files** to view the list of all saved files.

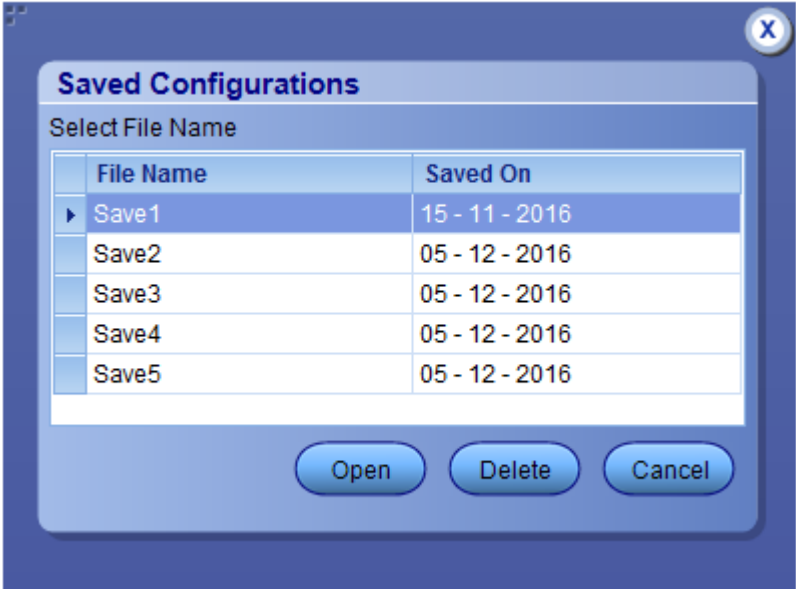


Saved configurations

Item	Description
Open	Opens the selected file.
Delete	Deletes the selected file.
Cancel	Closes the Saved Configurations window.

De-embed settings


De-embed allows you to apply filter file(s) for relay(s). Select the De-embed option and click **Select Filter File** to browse and select the filter file(s).

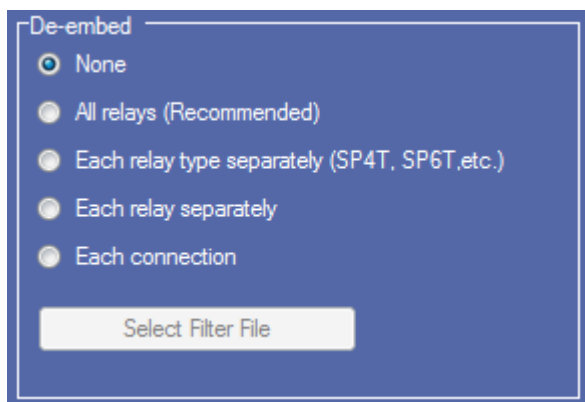

De-embed options

Apply a filter file for all relays


Select to apply a single filter file for all relays.

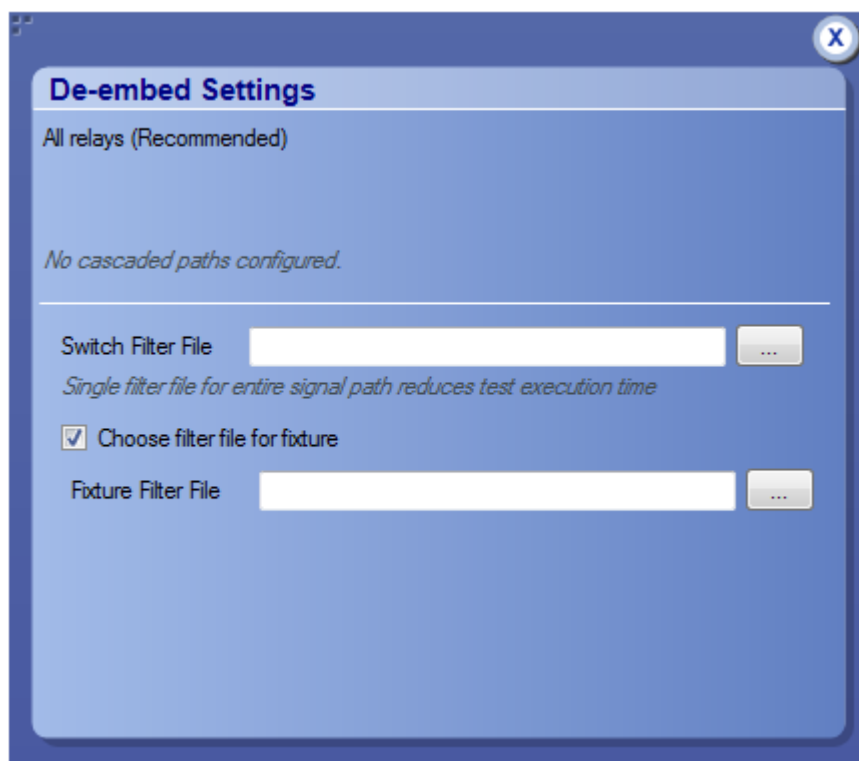



Click  to browse and select the filter file for the switch. To apply the filter file for the fixture, select **Choose filter file for fixture** and browse the filter file.

Apply a filter file for each relay type separately

Select to separately apply a single filter file for each relay type.

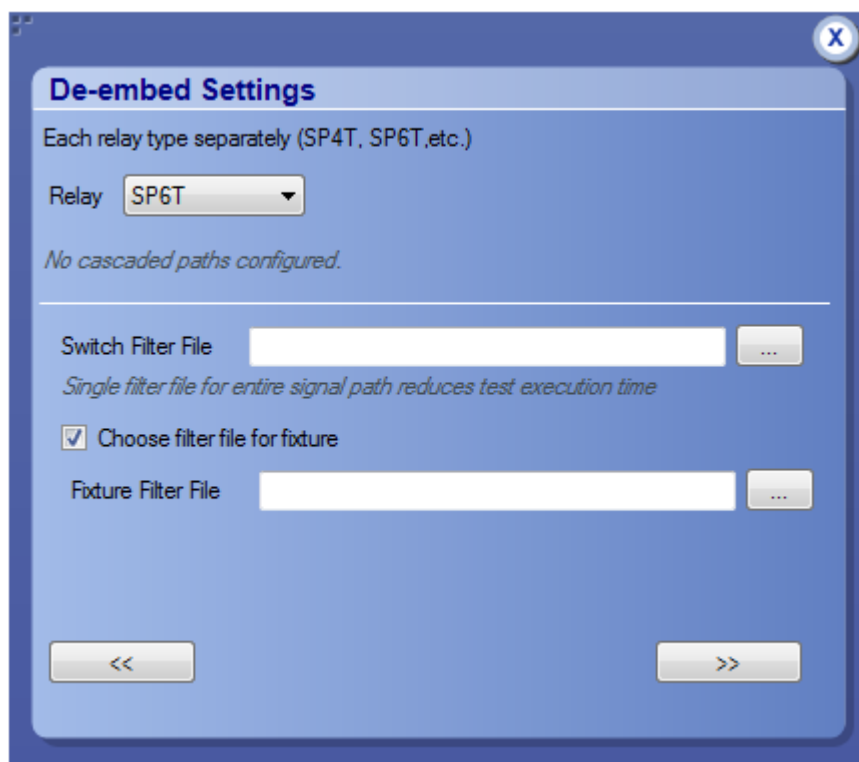


Select the Relay type from the drop-down list; click  to browse and select the filter file for the switch. To apply the filter file for the fixture, select **Choose filter file for fixture** and browse the filter file.

NOTE: Click  or  to select the previous or next relay type.



The selected relay types are highlighted in dark blue in the application.

Apply a filter file for each relay separately

Select to separately apply a filter file for each relay.

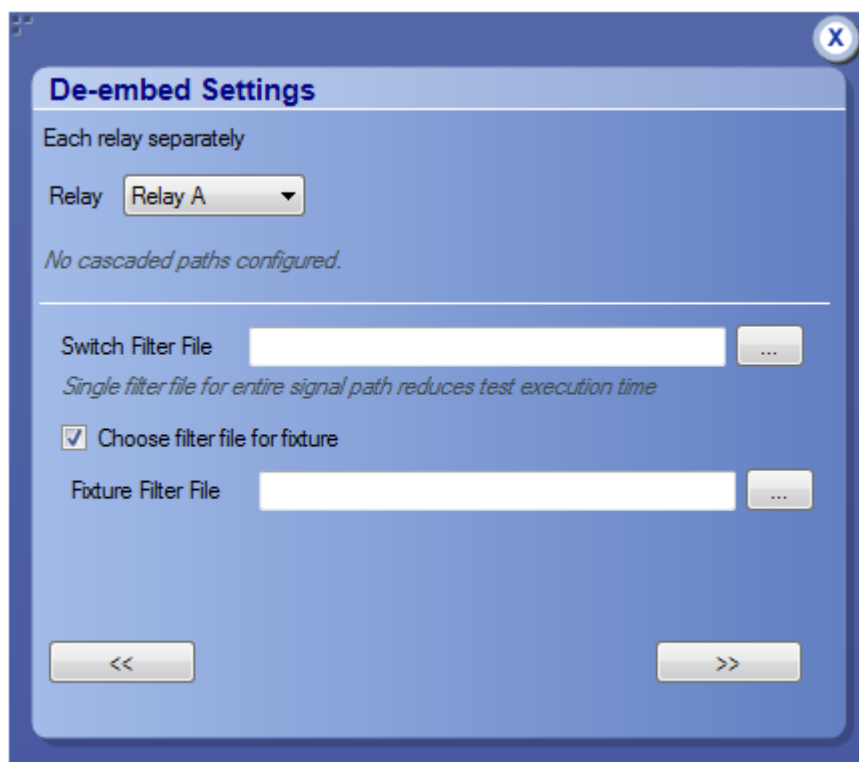


Select the Relay from the drop-down list; click  to browse and select the filter file for the switch. To apply the filter file for the fixture, select **Choose filter file for fixture** and browse the filter file.

NOTE: Click  or  to select the previous or next relay.


The selected relay is highlighted in dark blue in the application.

Apply a filter file for each connection separately

Select to apply a filter file for each connection.

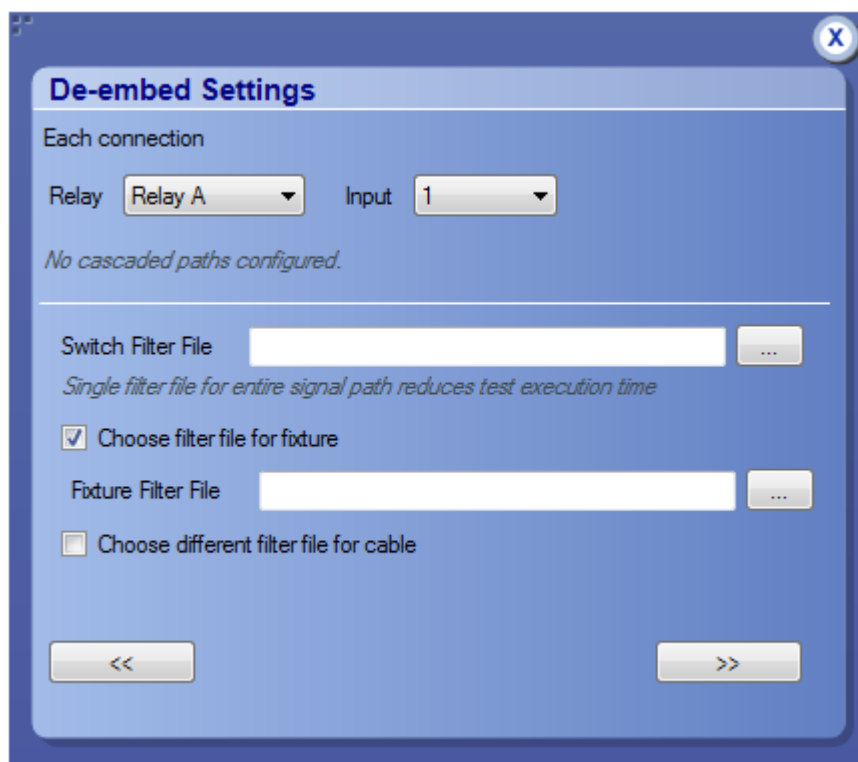

Select the Relay and the Input from the drop-down list; click  to browse and select the filter file for the switch. To apply the filter file for the fixture, select **Choose filter file for fixture** and browse the filter file. Select **Choose different filter file for cable** to browse and select the filter file for cable.

NOTE: Click  or  to select the previous or next channel.

The selected relay signal is highlighted in dark blue in the application.

Clicking  on the last input of a relay selects the first input of the next relay; clicking  on the first input of a relay selects the last input of the previous relay.

Graphical view of switch matrix configuration


The Graphical view displays the pictorial representation of the switch configuration.

The following figure displays the graphical view of a Keithley switch configuration.



Saving the configuration

Click **Save** in the configuration panel; in the Configuration Save dialog box, enter the file name and click **Save**. The default save path is *C:\ProgramData\Tektronix\Switch Matrix Configurations*.

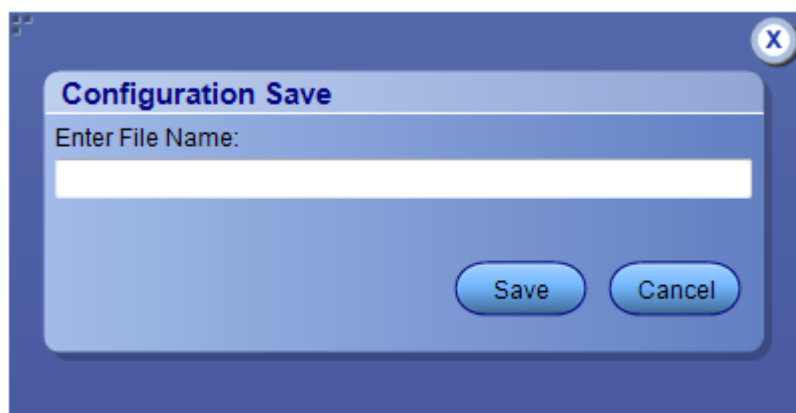

NOTE: Save configuration checks whether all the required configurations are done. If any of the required configurations are not selected, then error message is displayed, which prompts you to complete the configuration(s).

Feature description

Link width

Link width determines the number of DUT signals. For example, x8 represents an eight lane DUT.

This works in conjunction with the signal polarity selected for each relay. For example, if the link width is x8, and:

- If the signal polarity is **Positive**, then the signal drop-down list will have selections from Lane0+ to Lane7+.
- If the signal polarity is **Negative**, then the signal drop-down list will have selections from Lane0- to Lane7-.
- If the signal polarity is **Differential**, then the signal drop-down list will have selections from Lane0 to Lane7.

Debug mode

Init Switch

Enter the Switch Address and click **Init Switch** to initialize the switch. This will synchronize the configuration of relay(s) in the application with the relay(s) in the switch. Synchronization will only be successful for those relays that match the physical switch. Pass/Fail status is displayed next to the button.

The factory default GPIB address for Keithley (GPIB0::7::INSTR) and Gigatronics (GPIB0::4::INSTR) is populated in the switch address based on the configured vendor. You can enter the address in GPIB (GPIB0:X::INSTR) or TCPIP (TCPIP::IPADDR::INSTR) format.

NOTE: Relay configurations (number of relays, number of relay inputs, and name of relays) in the application should match the physical switch, for successful synchronization.

Switch Self-Test

This will close and open all switch channels one-by-one. A selftest report (CSV) is generated at the end of the process. You cannot abort this process.

NOTE: Initialize the switch before performing the Switch Self-Test.

Reset Switch

Click **Reset Switch** to reset the switch. This will open all channels.

Init Scope

Enter the oscilloscope address in the Scope Address field and click **Init Scope** to initialize the oscilloscope. This will establish the connection with the oscilloscope. The pass/fail status is displayed next to the button.

You can enter the address in GPIB (GPIB0:X::INSTR) or TCPIP (TCPIP::IPADDR::INSTR) format.

When the oscilloscope is initialized and de-embed settings are configured, closing a connection will apply the de-embed settings and then close the connection.

NOTE: The virtual GPIB address of the oscilloscope is GPIB8::1::INSTR.

If oscilloscope fails to respond to the *IDN? query during initialization, then the connection attempt is considered a failure.


Cascade (Relay cascade)

This feature allows you to cascade the relay by connecting the common channel as an input signal for another relay.

To cascade, select **Cascade** in the relay and select the Relay and Input of the relay. Check that the selected relay signal displays the relay name, specifying that the lane input signal is the output from that relay.



1346-001

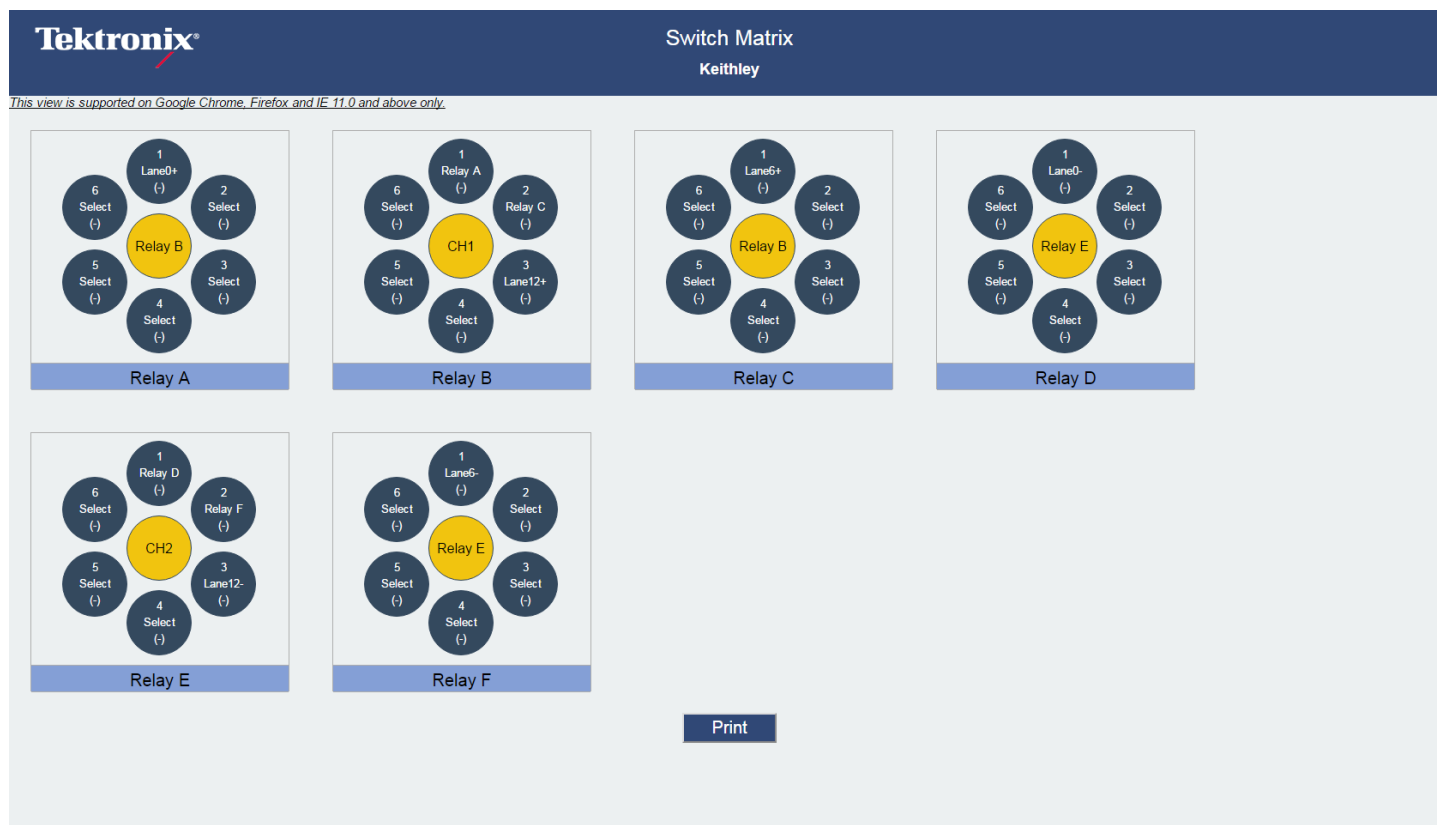

Graphical view of relay cascade configuration

NOTE: Switch Matrix application supports only single-level cascading of the relays. For example, if the Relay A output is cascaded to Relay B, then the Relay B output cannot be cascaded.

Error messages

Error message	Possible solution
"A filename cannot be empty and it cannot contain any of the following characters:\n\t. \ / : ? \" < > * ! @ # \$ % ^ & * () - + . , / \\ \' < > Also, the file name cannot be \"Keithley S46T\", \"Gigatronics ASCOR 8000\", \"MiniCircuit ZTM6SP4T40\", \"MiniCircuit ZTM28SP6T40\", \"Select\", \"New Configuration\", \"Custom\" , \"Auto Detect\" or \"Show All Files\""	
Configure appropriate signals before the de-embed settings.	Select at least one signal for a relay before configuring the de-embed settings.
Either the instrument address is invalid or instrument is not connected.	Check the GPIB connection from oscilloscope to switch and verify the instrument address.
Error occurred while trying to recall the configuration settings. Try re-creating configuration or recalling a different configuration file.	Re-create the configuration file or recall a different configuration file.

Error message	Possible solution
Error occurred while trying to access the connection for open/close operation.	
Filter file <FilterFileName> not found.	Reselect the de-embed filter file and try again.
Graphical view is not generated or does not exist.	
Initialize the switch	Initialize the switch and then perform the switch operations.
Instrument address doesn't belong to any supported switch.	Verify the switch address.
Instrument address is empty.	Instrument address cannot be empty. Enter a valid instrument address in the GPIB (<i>GPIB0:X:INSTR</i>) or TCPIP (<i>TCPIP::IPADDR::INSTR</i>) format.
No switch detected. Connect a Keithley or Mini Circuit switch and try auto detection by selecting Configuration > Auto Detect.	Check the GPIB connection from the oscilloscope to switch and whether the instrument is detected in TekVisa.
Number of relays cannot be more than 26	
Please ensure that the name(s) of the configured relay(s) match the ones present on the physical switch.	
Relay name cannot be empty	
Scope initialization failed. Check if the address is valid and ensure that the instrument is switched on and try again.	Validate the oscilloscope address try again.
Switch communication failed...	Ensure that the switch is on. Reset the switch and try again.
Switch initialization failed. Check if the address is valid and ensure that the instrument is switched on and try again.	Validate the switch address and ensure that the instrument is switched on. Try again.
The start count cannot be more than 74	
Timeout Error. Either the command is invalid or instrument is not active.	Check the command syntax and the connection of the instrument by SWITCH:*IDN command.
Two or more lanes have same name. The lane names should be unique.	
Two or more relays have same name.	

SCPI Commands

About SCPI command

You can use the Standard Commands for Programmable Instruments (SCPI) to communicate remotely with the TekExpress application. Complete the TCPIP socket configuration and the TekVISA configuration in the oscilloscope or in the device where you are executing the script.


NOTE: If you are using an external PC to execute the remote interface commands, then install TekVISA in the PC to make the configurations.

Socket configuration for SCPI commands


This section describes the steps to configure the TCPIP socket configuration in your script execution device and the steps to configure the TekVISA configuration in the oscilloscope to execute the SCPI commands.

TCPIP socket configuration

1. Click **Start**→ **Control Panel**→ **System and Security**→ **Windows Firewall**→ **Advanced settings**.

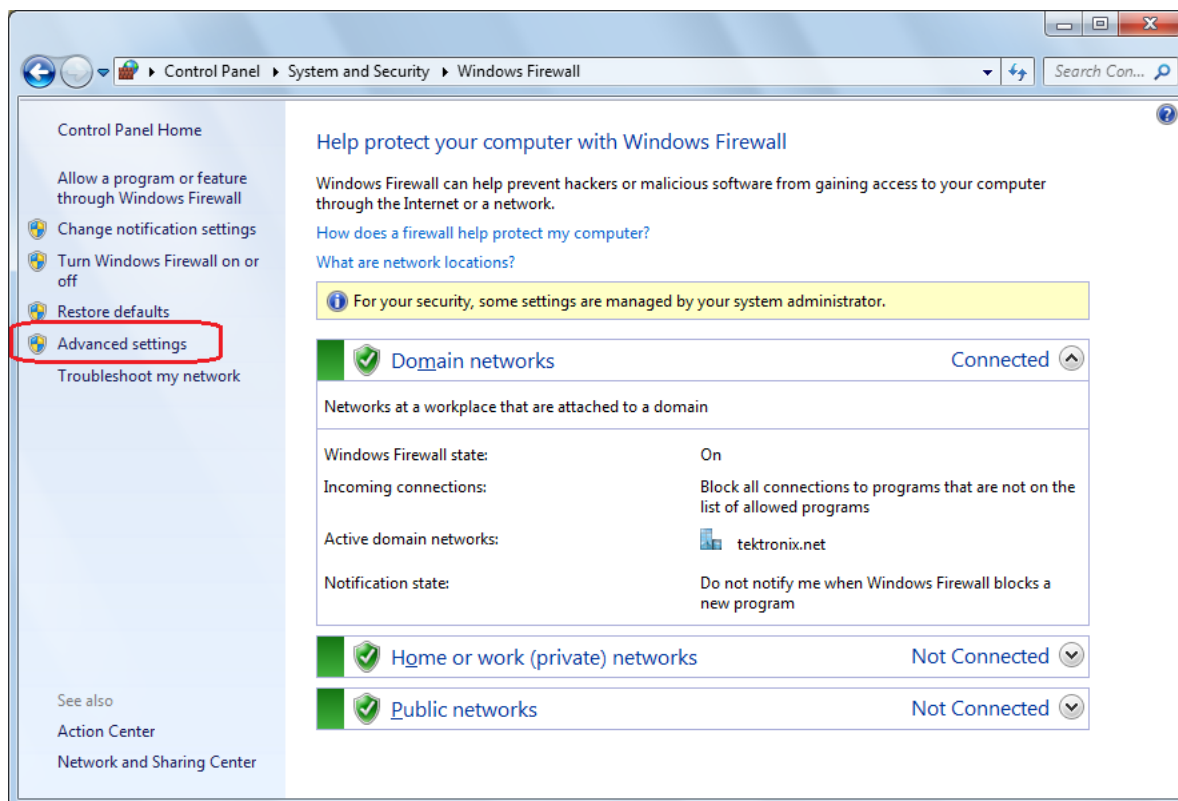

2. In Windows Firewall with Advanced Security menu, select **Windows Firewall with Advanced Security on Local Computer**→ **Inbound Rules** and click **New Rule...**

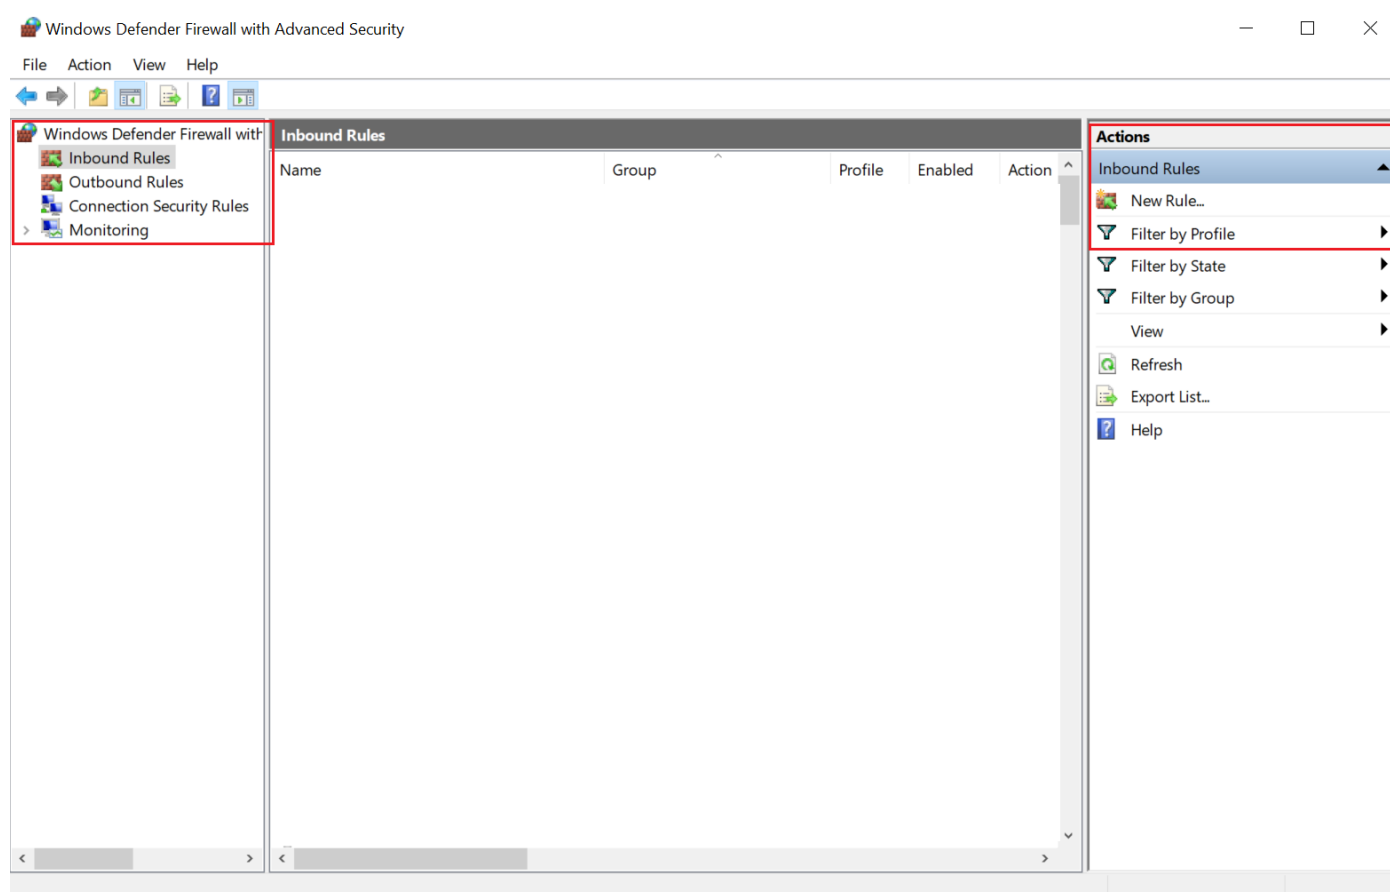

3. In **New Inbound Rule Wizard** menu

1. Select **Port** and click **Next**.

 New Inbound Rule Wizard**Rule Type**

Select the type of firewall rule to create.

Steps:

 Rule Type

 Protocol and Ports

 Action

 Profile

 Name

What type of rule would you like to create?

☐ **Program**

Rule that controls connections for a program.

☒ **Port**

Rule that controls connections for a TCP or UDP port.

☐ **Predefined:**

@FirewallAPI.dll,-80200

Rule that controls connections for a Windows experience.

☐ **Custom**

Custom rule.

< Back

Next >

Cancel

2. Select **TCP** as rule apply, enter 5000 for **Specific local ports** and click **Next**.

New Inbound Rule Wizard

**Protocol and Ports**

Specify the protocols and ports to which this rule applies.

Steps:

● Rule Type

● Protocol and Ports

● Action

● Profile

● Name

Does this rule apply to TCP or UDP?

☒ TCP

☐ UDP

Does this rule apply to all local ports or specific local ports?

☐ All local ports

☒ Specific local ports:

5000

Example: 80, 443, 5000-5010

< Back

Next >

Cancel

3. Select **Allow the connection** and click **Next**.

New Inbound Rule Wizard

**Action**

Specify the action to be taken when a connection matches the conditions specified in the rule.

Steps:

- Rule Type
- Protocol and Ports
- Action**
- Profile
- Name

What action should be taken when a connection matches the specified conditions?

☒ **Allow the connection**

This includes connections that are protected with IPsec as well as those are not.

☐ **Allow the connection if it is secure**

This includes only connections that have been authenticated by using IPsec. Connections will be secured using the settings in IPsec properties and rules in the Connection Security Rule node.

[Customize...](#)


☐ **Block the connection**

< Back

Next >

Cancel

4. Select **Domain, Private, Public** checkbox and click **Next**.

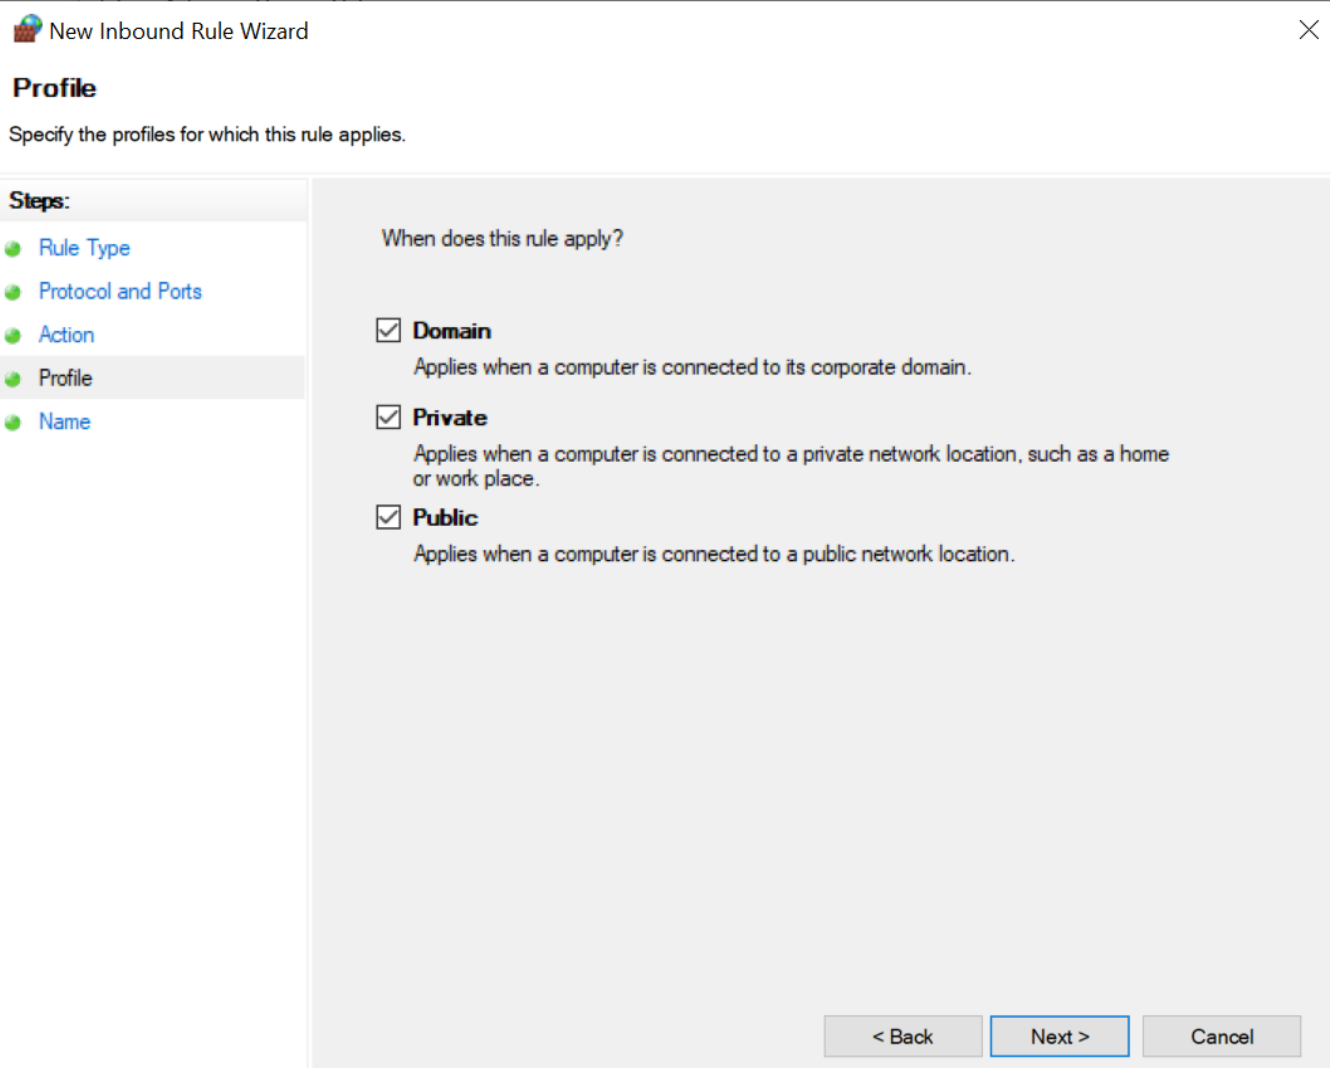

The image shows a 'New Inbound Rule Wizard' window with a 'Profile' step selected. The 'Steps' list on the left includes 'Rule Type', 'Protocol and Ports', 'Action', 'Profile', and 'Name'. The main area is titled 'When does this rule apply?' and contains three checked options: 'Domain' (Applies when a computer is connected to its corporate domain), 'Private' (Applies when a computer is connected to a private network location, such as a home or work place), and 'Public' (Applies when a computer is connected to a public network location). Navigation buttons at the bottom are '< Back', 'Next >', and 'Cancel'.

New Inbound Rule Wizard

Profile

Specify the profiles for which this rule applies.

Steps:

- Rule Type
- Protocol and Ports
- Action
- Profile**
- Name

When does this rule apply?

- ☒ **Domain**
Applies when a computer is connected to its corporate domain.
- ☒ **Private**
Applies when a computer is connected to a private network location, such as a home or work place.
- ☒ **Public**
Applies when a computer is connected to a public network location.

< Back Next > Cancel

5. Enter **Name**, Description (optional), and click **Finish**.

 New Inbound Rule Wizard**Name**

Specify the name and description of this rule.


Steps:

-  Rule Type
-  Protocol and Ports
-  Action
-  Profile
-  Name

Name:


Description (optional):

4. Check whether the Rule name is displayed in **Windows Firewall with Advanced Security** menu → **Inbound Rules**.

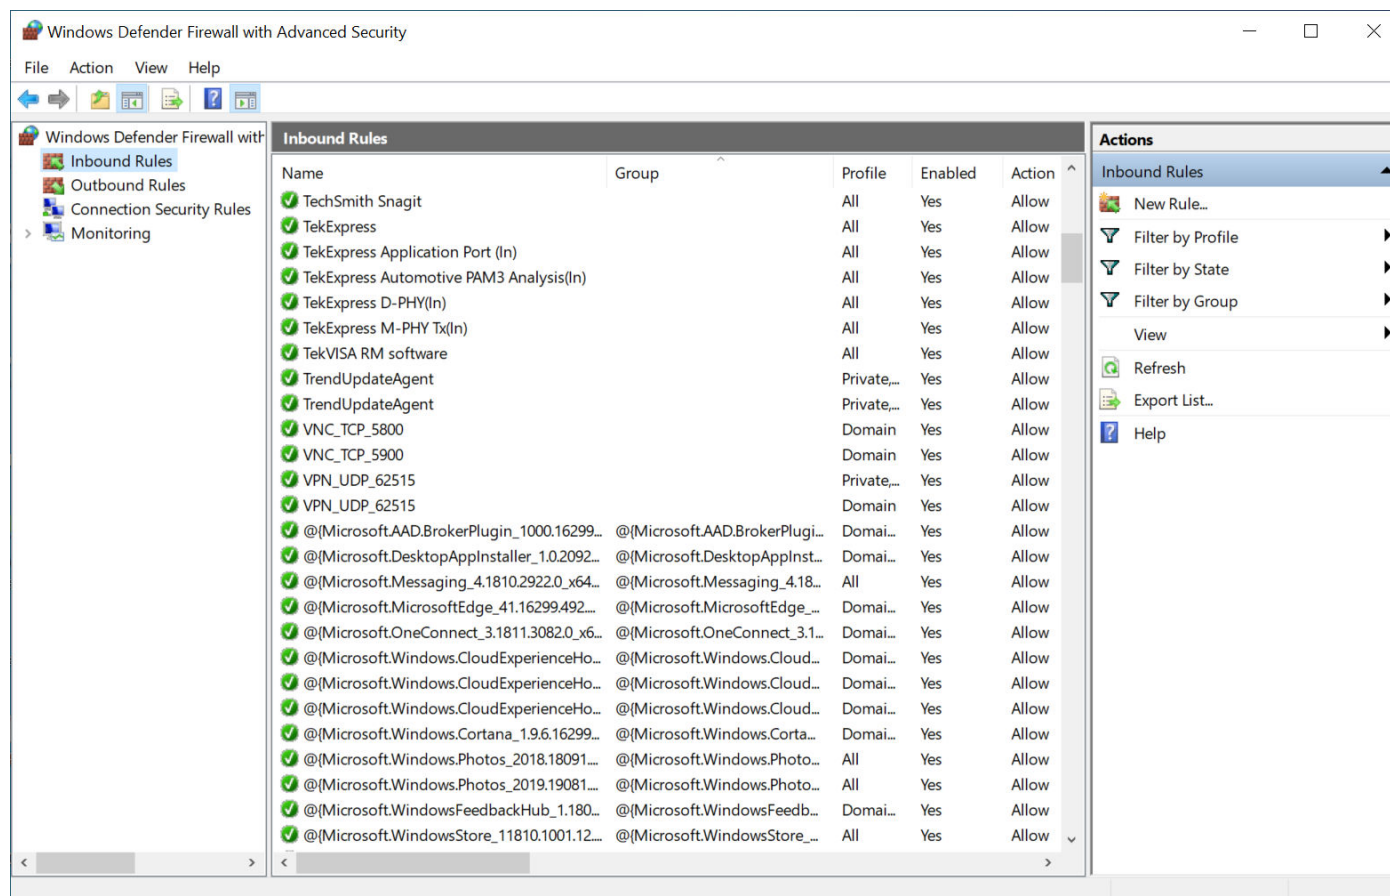

TekVISA configuration


1. Click **Start** → **All Programs** → **TekVISA** → **OpenChoice Instrument Manager**.

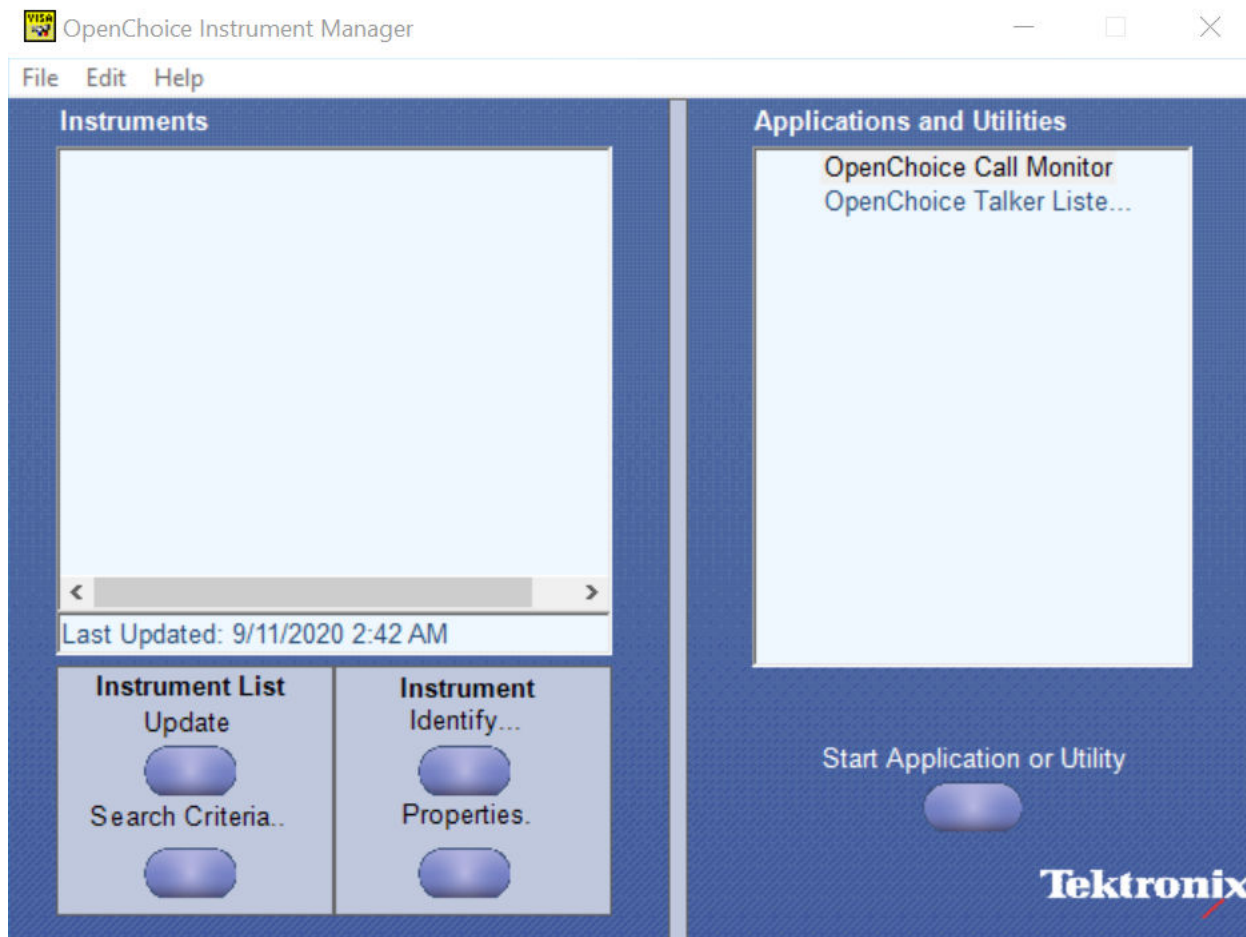


2. Click **Search Criteria**. In **Search Criteria** menu, click **LAN** to Turn-on. Select **Socket** from the drop-down list, enter

the IP address of the TekExpress device in **Hostname** and type **Port** as 5000. Click  to configure the IP address with Port.


Enter the Hostname as 127.0.0.1 if the TekVISA and TekExpress application are in the same system, else enter the IP address of the oscilloscope where the TekExpress application is running.

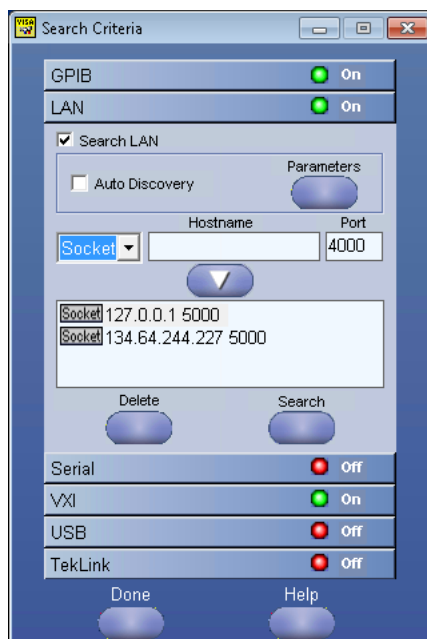

- Click **Search** to setup the TCPIP connection with the host. Check whether the TCPIP host name is displayed in **OpenChoice Instrument Manager**→ **Instruments**.

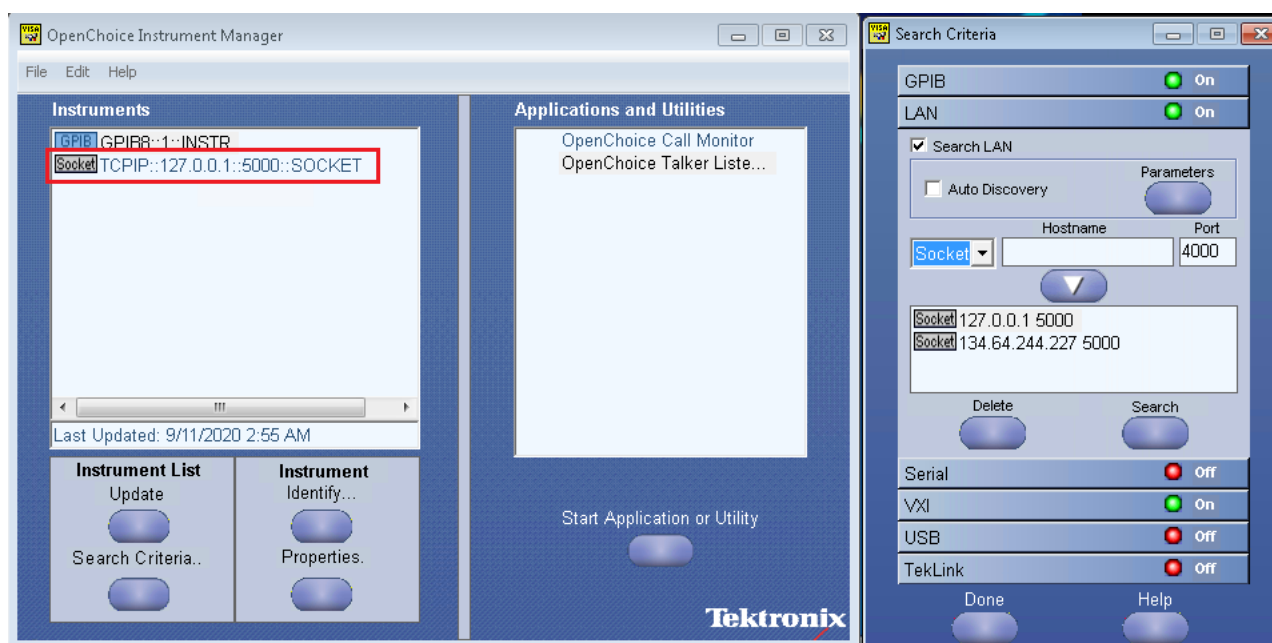

- Double-click **OpenChoice Talker Listener** and enter the Command ***IDN?** in command entry field and click **Query**. Check that the Operation is successful and Talker Listener Readout displays the Command / Data.

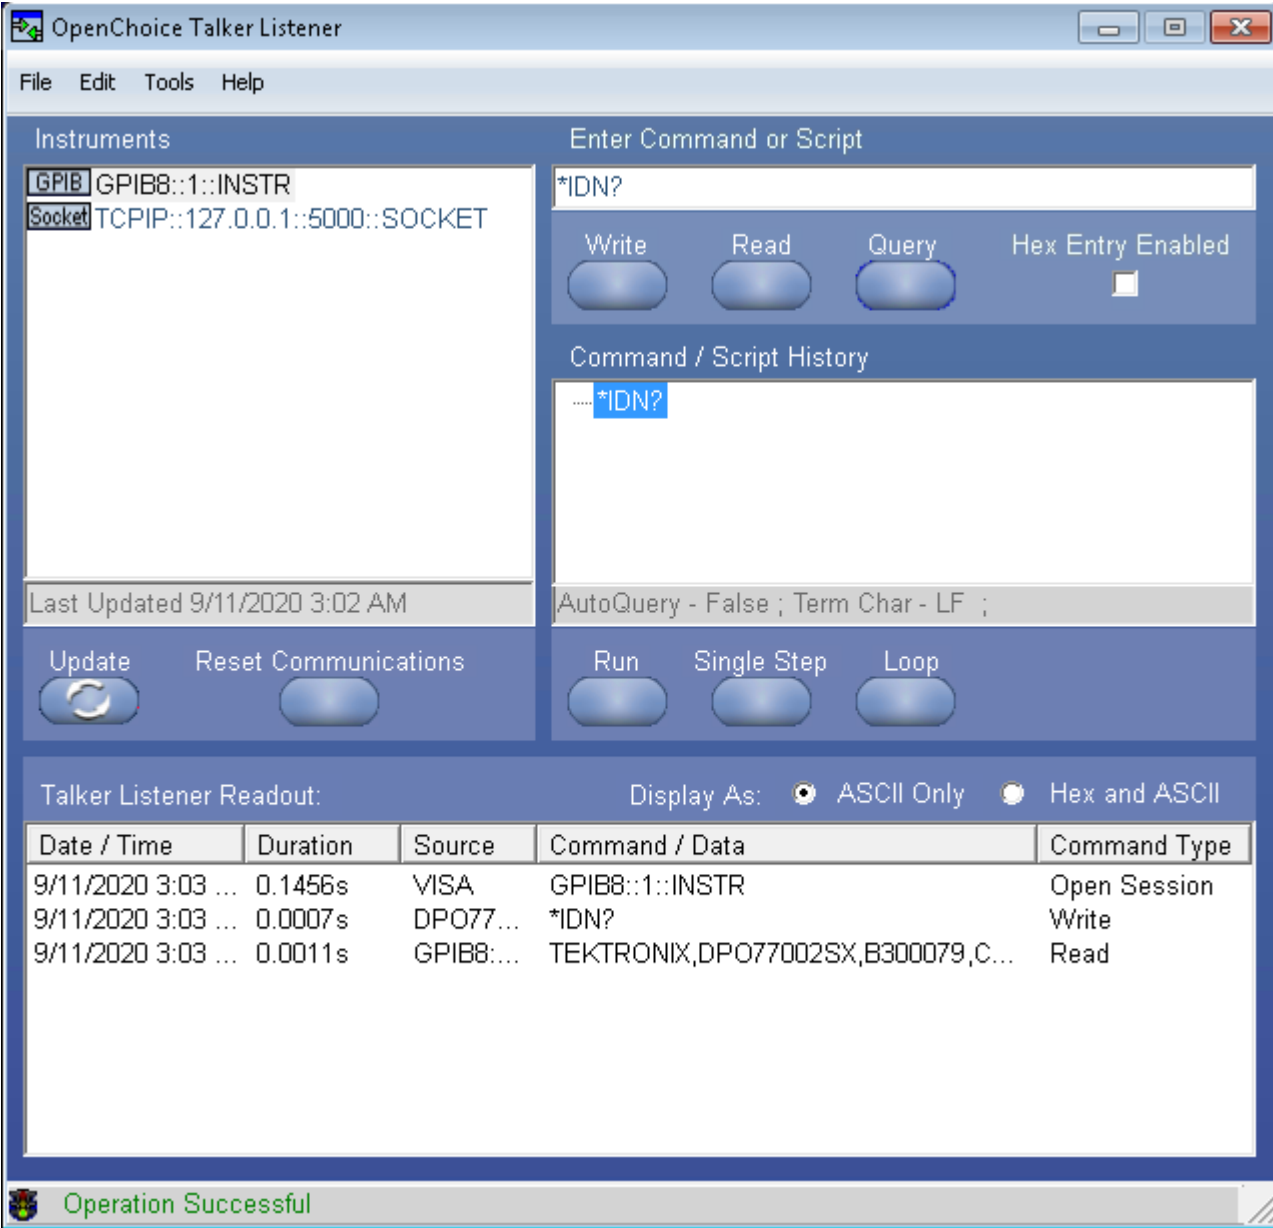

Set or query the device name of application

This command sets or queries the device name of the application.

Syntax

TEKEXP:SELECT DEVICE, "<DeviceName>" (Set)

TEKEXP:SELECT? DEVICE (Query)

Command arguments

Argument Name	Argument Type
<DeviceName>	<String>

Returns

<String>

Examples

TEKEXP:SELECT DEVICE, "<DUT001>" command sets the device name of the application to DUT001.

TEKEXP:SELECT? DEVICE command returns the selected device name of the application.

Set or query the suite name of the application

This command sets or queries the suite name of the application.

Syntax

TEKEXP:SELECT SUITE, "<SuiteName>" (Set)

TEKEXP:SELECT? SUITE (Query)

Command arguments

<SuiteName>
- For CEM, valid values are System-Board, Add-In-Card - For U.2(SFF-8639), valid values are Host, Module - For BaseSpec, valid value is TX Test Board and SRIS TX Test Board - For M.2, valid values are M2_Add-In-Card and M2_Host - For RefClockSpec valid value is Ref Clock

Returns

<String>

Examples

TEKEXP:SELECT SUITE, "<SuiteName>" command sets the suite name of the application.

TEKEXP:SELECT? SUITE command returns the selected suite of the application.

Set or query the test name of the application

This command selects or deselects the specified test name of the application.

Syntax

TEKEXP:SELECT TEST, "<TestName>", <Value> (Set)

TEKEXP:SELECT? TEST (Query)

Command arguments

TestName	Value
Tests for CEM - Median Peak Jitter Gen1 - Min Eye Width Gen1 - Min Time Between Crossovers Gen1 - Non Transition Eye Diagram Gen1	{True False} or {1 0} It represents selected or unselected. Where, True or 1 - Selected

TestName	Value
▪ Peak to Peak Jitter Gen1 ▪ RMS Jitter (Per Edge) Gen1 ▪ Transition Eye Diagram Gen1 ▪ Unit Interval Gen1 ▪ Composit Eye Height Gen2 ▪ Dj_dd Gen2 ▪ Min Eye Width Gen2 ▪ Min Time Between Crossovers Gen2 ▪ Non Transition Eye Diagram Gen2 ▪ Peak to Peak Jitter Gen2 ▪ RJ(RMS) Gen2 ▪ TJ @ E-12 Gen2 ▪ Transition Eye Diagram Gen2 ▪ Unit Interval Gen2 ▪ Composit Eye Height Gen3 ▪ Dj_dd Gen3 ▪ Min Eye Width Gen3 ▪ Min Time Between Crossovers Gen3 ▪ Non Transition Eye Diagram Gen3 ▪ Peak to Peak Jitter Gen3 ▪ RJ(RMS) Gen3 ▪ TJ @ E-12 Gen3 ▪ Transition Eye Diagram Gen3 ▪ Unit Interval Gen3 ▪ Composite Eye Height Gen4 ▪ Dj_dd Gen4 ▪ Extrapolated Eye Height Gen4 ▪ Min Eye Width Gen4 ▪ Min Time Between Crossovers Gen4 ▪ Non Transition Eye Diagram Gen4 ▪ Peak to Peak Jitter Gen4 ▪ RJ(RMS) Gen4 ▪ TJ @ E-12 Gen4 ▪ Transition Eye Diagram Gen4 ▪ Uncorrelated PWJ TJ@E-12 Gen4 ▪ Unit Interval Gen4 ▪ Composite EH Gen5 ▪ Composite EW Gen5 ▪ Deterministic DD Jitter Gen5 ▪ ExtrapolatedJitter Gen5 ▪ Eye Height@BER Gen5 ▪ Eye Width@Ber Gen5 ▪ RandomJitter Gen5 ▪ UnitInterval Gen5 ▪ TIE RJ(RMS) Gen5	False or 0 - Unselected

TestName	Value
- Uncorrelated TIE TJ @E-12 Gen5 (Add-In Card Only) - Uncorrelated TIE DJ dd@E-12 Gen5 (Add-In Card Only) - Uncorrelated PWJ TJ @E-12 Gen5 (Add-In Card Only) - Uncorrelated PWJ DJ dd@E-12 Gen5 (Add-In Card Only) - SNDR Gen6 (Add-In Card Only) - RLM Gen6 - Eye Height Gen6 - Eye Width Gen6 - TIE RJ (RMS) Gen6 (Add-In Card Only) - Uncorrelated TIE TJ@E-06 Gen6 (Add-In Card Only) - Uncorrelated TIE DJ dd@E-06 Gen6 (Add-In Card Only) - Uncorrelated PWJ TJ@E-06 Gen6 (Add-In Card Only) - Uncorrelated PWJ DJ dd@E-06 Gen6 (Add-In Card Only)	{True False} or {1 0} It represents selected or unselected. Where, True or 1 - Selected False or 0 - Unselected
Tests for BaseSpec - AC CM 4GHz Gen3 - AC CM 30KHz-500MHz Gen3 - DDj Gen3 - EIEOS Min Voltage Gen3 - F/2 Jitter Gen3 - PS21 Ratio Gen3 - PWJ RJ (RMS) Gen3 - TIE RJ (RMS) Gen3 - Uncorrelated PWJ DJ dd@E-12 Gen3 - Uncorrelated PWJ TJ@E-12 Gen3 - Uncorrelated TIE DJ dd@E-12 Gen3 - Uncorrelated TIE TJ @ E-12 Gen3 - V Tx_no_eq Gen3 - AC CM 4GHz Gen4 - AC CM 30KHz-500MHz Gen4 - DDj Gen4 - EIEOS Min Voltage Gen4 - F/2 Jitter Gen4 - PS21 Ratio Gen4 - PWJ RJ (RMS) Gen4 - TIE RJ (RMS) Gen4 - Uncorrelated PWJ DJ dd@E-12 Gen4 - Uncorrelated PWJ TJ@E-12 Gen4 - Uncorrelated TIE DJ dd@E-12 Gen4 - Uncorrelated TIE TJ @ E-12 Gen4	

TestName	Value
▪ V Tx_no_eq Gen4 ▪ AC CM 4GHz Gen5 ▪ AC CM 16GHz Gen5 ▪ DDj Gen5 ▪ EIEOS Min Voltage Gen5 ▪ F/2 Jitter Gen5 ▪ PS21 Ratio Gen5 ▪ PWJ RJ (RMS) Gen5 ▪ TIE RJ (RMS) Gen5 ▪ Uncorrelated PWJ DJ dd@E-12 Gen5 ▪ Uncorrelated PWJ TJ@E-12 Gen5 ▪ Uncorrelated TIE DJ dd@E-12 Gen5 ▪ Uncorrelated TIE TJ @ E-12 Gen5 ▪ V Tx_no_eq Gen5 ▪ SNDR Gen6 ▪ RLM Gen6 ▪ TIE RJ (RMS) Gen6 ▪ Uncorrelated TIE TJ@E-06 Gen6 ▪ Uncorrelated TIE DJ dd@E-06 Gen6 ▪ Uncorrelated PWJ TJ@E-06 Gen6 ▪ Uncorrelated PWJ DJ dd@E-06 Gen6 ▪ UnitInterval Gen6 ▪ AC CM 30KHz-500MHz Gen6 ▪ AC CM 16GHz Gen6 ▪ PS21 Ratio Gen6 ▪ V Tx_Diff_Pk_To_Pk Gen6 ▪ V Tx_EIEOS Gen6 ▪ SNDR Gen7 ▪ RLM Gen7 ▪ TIE RJ (RMS) Gen7 ▪ Uncorrelated TIE TJ@E-06 Gen7 ▪ Uncorrelated TIE DJ dd@E-06 Gen7 ▪ Uncorrelated PWJ TJ@E-06 Gen7 ▪ Uncorrelated PWJ DJ dd@E-06 Gen7 ▪ UnitInterval Gen7 ▪ AC CM 30KHz-500MHz Gen7 ▪ AC CM 32GHz Gen7 ▪ PS21 Ratio Gen7 ▪ V Tx_Diff_Pk_To_Pk Gen7 ▪ V Tx_EIEOS Gen7	

TestName	Value
Tests for U.2 ▪ Composit Eye Height Gen3 ▪ Dj_dd Gen3 ▪ Min Eye Width Gen3 ▪ Min Time Between Crossovers Gen3 ▪ Non Transition Eye Diagram Gen3 ▪ Peak to Peak Jitter Gen3 ▪ RJ(RMS) Gen3 ▪ TJ @ E-12 Gen3 ▪ Transition Eye Diagram Gen3 ▪ Unit Interval Gen3	
Tests for M.2 ▪ Composit Eye Height Gen3 ▪ Dj_dd Gen3 ▪ Min Eye Width Gen3 ▪ Min Time Between Crossovers Gen3 ▪ Non Transition Eye Diagram Gen3 ▪ Peak to Peak Jitter Gen3 ▪ RJ(RMS) Gen3 ▪ TJ @ E-12 Gen3 ▪ Transition Eye Diagram Gen3 ▪ Unit Interval Gen3	
Test for RefClockSpec ▪ HF RMS Jitter ▪ AC-REFCLK	

Returns

{True | False} or {1 | 0}

Examples

TEKEXP:SELECT TEST,"<TestName>",1 command selects the specified test in the Test Panel.

TEKEXP:SELECT TEST,"<ALL>" command select all the tests in the Test Panel.

TEKEXP:SELECT? TEST command returns the list of selected tests.

Set or query the version name of the application

This command sets or queries the version name of the application.

Syntax

TEKEXP:SELECT VERSION,"<VersionName>" (Set)

TEKEXP:SELECT? VERSION (Query)

Command arguments

Argument Name	Argument Type	Valid Values
<VersionName>	<String>	It is the name of the version on the DUT panel of the application.
VersionName		
▪ Gen1-1.0a (Applicable for DeviceName = CEM) ▪ Gen1-1.1 (Applicable for DeviceName = CEM) ▪ Gen2-2.0 (Applicable only DeviceName = CEM) ▪ Gen3-3.0 (Applicable only DeviceName = CEM, BaseSpec, U.2(SFF-8639 and M.2) ▪ Gen4-4.0 (Applicable only DeviceName = CEM and BaseSpec) ▪ Gen5-5.0 (Applicable only DeviceName = CEM, BaseSpec and RefClockSpec) ▪ Gen6-6.0 (Applicable only DeviceName = CEM and BaseSpec) ▪ Gen7-7.0 (Applicable only DeviceName = BaseSpec)		

Returns

<String>

Examples

TEKEXP:SELECT VERSION,"<VersionName>" command sets the version name of application.

TEKEXP:SELECT? VERSION command returns the version name of application.

Set or query the general parameter values

This command sets or queries the general parameter values of the application.

Syntax

TEKEXP:VALUE GENERAL,"<ParameterName>","<Value>" (Set)

TEKEXP:VALUE? GENERAL,"<ParameterName>" (Query)

General command parameters

ParameterName	Value
Value	Specifies the value parameters. ▪ For InstrumentType, valid values are: • Comment ▪ For DUTID, valid values are: • Comment
InstrumentType	Specifies the instrument type. Valid values are: ▪ Alternate Real Time Scope ▪ Real Time Scope
DataRate2Gb	▪ Included ▪ Excluded

ParameterName	Value
DataRate5Gb	▪ Included ▪ Excluded
DataRate8Gb	▪ Included ▪ Excluded
DataRate16Gb	▪ Included ▪ Excluded
DataRate32Gb	▪ Included ▪ Excluded
DataRate64Gb	▪ Included ▪ Excluded
DataRate128Gb	▪ Included ▪ Excluded
PreEmphasis3dB	▪ Included ▪ Excluded
PreEmphasis6dB	▪ Included ▪ Excluded
SSC	▪ On ▪ Off
VoltageSwing	▪ Full ▪ Reduced
Link Widths	▪ 1 Lane ▪ 2 Lanes ▪ 4 Lanes ▪ 8 Lanes ▪ 16 Lanes
SignalPreset8Gb	▪ Signal quality preset selection values are P0, P1, P2, P3, P4, P5, P6, P7, P8, P9, P10. ▪ To select multiple signal quality preset, specify as P0_P1_P2
SignalPreset16Gb	
SignalPreset32Gb	
SignalPreset64Gb	▪ Signal quality preset selection values are Q0, Q1, Q2, Q3, Q4, Q5, Q6, Q7, Q8, Q9, Q10. ▪ To select multiple signal quality preset, specify as Q0_Q1_Q2
SignalPreset128Gb	
Preset8Gb	▪ Preset selection values are P0_, P1_, P2_, P3_, P4_, P5_, P6_, P7_, P8_, P9_, P10_. ▪ To select multiple signal quality preset, specify as P0_P1_P2
Preset16Gb	
Preset32Gb	

ParameterName	Value
Preset64Gb	- Preset selection values are Q0_, Q1_, Q2_, Q3_, Q4_, Q5_, Q6_,Q7_, Q8_, Q9_, Q10_. - To select multiple signal quality preset, specify as Q0_Q1_Q2
Preset128Gb	
Acquisition	- BeforeAnalysis - AcquireOnly
SaveOptions	- Save All the Waveforms - Save Only Analyzed Waveform - No Waveforms saved - Discard after analysis
DeEmbed2Gb	- Included - Excluded
DeEmbed5Gb	- Included - Excluded
DeEmbed8Gb	- Included - Excluded
DeEmbed16Gb	- Included - Excluded
DeEmbed32Gb	- Included - Excluded
DeEmbed64Gb	- Included - Excluded
DeEmbed128Gb	- Included - Excluded
Embed8Gb	- Included - Excluded
Embed16Gb	- Included - Excluded
Embed32Gb	- Included - Excluded
Embed64Gb	- Included - Excluded
Embed128Gb	- Included - Excluded
Filterfile2Gb	Filterfile2Gb.flit
Filterfile5Gb	Filterfile5Gb.flit
FilterfileDeEmbed8Gb	FilterfileDeEmbed8Gb.flit
FilterfileEmbed8Gb	FilterfileEmbed8Gb.flit

ParameterName	Value
FilterfileDeEmbed16Gb	FilterfileDeEmbed16Gb.flr
FilterfileEmbed16Gb	FilterfileEmbed16Gb.flr
FilterfileDeEmbed32GbPos	FilterfileDeEmbed32GbPos.flr
FilterfileDeEmbed32GbNeg	FilterfileDeEmbed32GbNeg.flr
FilterfileEmbed32Gb	FilterfileEmbed32Gb.flr
FilterfileDeEmbed32Gb	FilterfileDeEmbed32Gb.flr
FilterfileDeEmbed64GbPos	FilterfileDeEmbed64GbPos.flr
FilterfileDeEmbed64GbNeg	FilterfileDeEmbed64GbNeg.flr
FilterfileEmbed64Gb	FilterfileEmbed64Gb.flr
FilterfileDeEmbed128GbPos	FilterfileDeEmbed128GbPos.flr
FilterfileDeEmbed128GbNeg	FilterfileDeEmbed128GbNeg.flr
FilterfileEmbed128Gb	FilterfileEmbed128Gb.flr
EnableDUTAutomation	- Included - Excluded
DeskewAutomation	- Included - Excluded
Automation Settings	- Use Default Settings - Manually Configure Settings - Use Custom Settings
Signal Type	- Square - Sine
Gen4DataClockPatternCount	0 to 9
Gen5DataClockPatternCount	0 to 9
Gen6DataClockPatternCount	0 to 9
Gen7DataClockPatternCount	0 to 9
RecordLength2Gb	2.5e6
RecordLength5Gb	10e6
RecordLength8Gb	10e6

ParameterName	Value
RecordLength16Gb	20e6
RecordLength32Gb	12.5e6
RecordLength64Gb	19M
RecordLength128Gb	19M
SampleRate2Gb	50e9
SampleRate5Gb	50e9
SampleRate8Gb	50e9
SampleRate16Gb	100e9
SampleRate32Gb	200e6
SampleRate64Gb	200e6
SampleRate128Gb	200e6
Bandwidth2Gb	6e9
Bandwidth5Gb	12.5e9
Bandwidth8Gb	13e9
Bandwidth16Gb	16e9
Bandwidth32Gb	▪ 33e9 (CEM) ▪ 50e9 (Base)
Bandwidth64Gb	50e9
Bandwidth128Gb	65e9
Signal Validation	▪ Prompt me if Signal Check Fails ▪ Skip Test if Signal Check Fails ▪ Turn Off Signal Check
SqSigtestPathGen3	Sigtest file path. Example: <i>C:\Program Files (x86)\SigTest 4.0.51\SigTest.exe</i>
PresetSigtestPathGen3	
SqtestPathGen4	
PresetSigtestPathGen4	
SqtestPathGen5	

ParameterName	Value
PresetSigtestPathGen5	
PHYSigtestPathGen5	
SigtestTemplate2Gbps	
SigtestTemplate5Gbps3Db	
SigtestTemplate5Gbps6Db	
SigtestTemplate8Gbps	
SigtestTemplate16Gbps	
SigtestTemplate32GbpsJitterMeas	
SigtestTemplate32GbpsVoltageMeas	
SigtestTemplate16GbpsPwjTest	
SigtestTemplate32GbpsPHYTest	
SigtestTemplate32GbpsSignalTest	
SigtestTemplate32GbpsPresetTest	
SigtestTemplate64GbpsSndrRImTest	
SigtestTemplate64GbpsTieTest	
SigtestTemplate64GbpsPwjTest	
SigtestTemplate64GbpsEyeTest	
SigtestTemplate64GbpsPresetTestACFit	
SigtestTemplate64GbpsPresetTestLFPR	
Include Intermediate Results	▪ Included ▪ Excluded
Awg Clock Setup	▪ Included ▪ Excluded
SRIS SSC	▪ On ▪ Off
SlotNumber	05

ParameterName	Value
Preset64GbMethodology	- Auto - LFPR Method - AC Method
Eye CTLE Mode Gen6	- Auto - Manual
EyeCTLERecordLengthGen6	Record length for Eye measurement CTLE Optimization in Gen6 (1.0 to 20.0)
EyeCTLEValueGen6	Manual CTLE for Eye measurement in Gen6 (No CTLE, 5, 6, 7, 8, 9, 10, 11, 12, 13, 14, 15)
Jitter CTLE Mode Gen6	- Auto - Manual
JitterCTLERecordLengthGen6	Record length for Jitter measurement CTLE Optimization in Gen6 (1.0 to 20.0)
JitterCTLEValueGen6	Manual CTLE for Jitter measurement in Gen6 (No CTLE, 5, 6, 7, 8, 9, 10, 11, 12, 13, 14, 15)
PWJ CTLE Mode Gen6	- Auto - Manual
PWJCTLERecordLengthGen6	Record length for PWJ measurement CTLE Optimization in Gen6 (1.0 to 20.0)
PWJCTLEValueGen6	Manual CTLE for PWJ measurement in Gen6 (No CTLE, 5, 6, 7, 8, 9, 10, 11, 12, 13, 14, 15)
Jitter CTLE Mode Gen7	- Auto - Manual
JitterCTLERecordLengthGen7	Record length for Jitter measurement CTLE Optimization in Gen7 (1.0 to 20.0)
JitterCTLEValueGen7	Manual CTLE for Jitter measurement in Gen7 (No CTLE, 5, 6, 7, 8, 9, 10, 11, 12, 13, 14, 15)
PWJ CTLE Mode Gen7	- Auto - Manual
PWJCTLERecordLengthGen7	Record length for PWJ measurement CTLE Optimization in Gen7 (1.0 to 20.0)
PWJCTLEValueGen7	Manual CTLE for PWJ measurement in Gen7 (No CTLE, 5, 6, 7, 8, 9, 10, 11, 12, 13, 14, 15)
Scope Noise Auto Mode	- Included - Excluded
PAMJetSNCDDB_Pos	To load positive channel scope noise database incase of auto scope noise compensation
PAMJetSNCDDB_Neg	To load negative channel scope noise database incase of auto scope noise compensation

ParameterName	Value
Scope Noise Compensation SNDR Gen6	To input manual scope noise compensation value for SNDR/RLM/Eye measurements of Gen6
Scope Noise Compensation TIE Jitter Gen6	To input manual scope noise compensation value for TIE Jitter measurements of Gen6
Scope Noise Compensation PWJ Gen6	To input manual scope noise compensation value for PWJ measurements of Gen6
Scope Noise Compensation SNDR Gen7	To input manual scope noise compensation value for SNDR/RLM/Eye measurements of Gen7
Scope Noise Compensation HSTP Gen7	To input manual scope noise compensation value for HSTP pattern of TIE Jitter measurements of Gen7
Scope Noise Compensation LSTP0 Gen7	To input manual scope noise compensation value for LSTP0 pattern of Jitter measurements of Gen7
Scope Noise Compensation LSTP1 Gen7	To input manual scope noise compensation value for LSTP1 pattern of Jitter measurements of Gen7
Scope Noise Compensation LSTP2 Gen7	To input manual scope noise compensation value for LSTP2 pattern of Jitter measurements of Gen7
Scope Noise Compensation LSTP3 Gen7	To input manual scope noise compensation value for LSTP3 pattern of Jitter measurements of Gen7
Scope Noise Compensation LSTP4 Gen7	To input manual scope noise compensation value for LSTP4 pattern of Jitter measurements of Gen7
AnalysisTool	▪ PAMJet (applicable for Gen6 and Gen7 only) ▪ Sigtest (applicable for CEM, Base spec, U.2 and M.2 Gen1 to Gen6 only) ▪ Intel CJT (applicable for Ref Clock only) ▪ Skyworks Clock Jitter Tool (applicable for Ref Clock only)
CompliancePatternGuide	▪ Included ▪ Excluded
JitterPatternGuide	▪ Included ▪ Excluded
PAMJetCompliancePatternFile	Compliance pattern file path. Example: C:\Program Files\Tektronix\TekExpress\TekExpress PCIExpress\Lib\PAMJetPatterns\compliancePattern_Lane_0.txt
PAMJetJitterPatternFile	Jitter pattern file path. Example: C:\Program Files\Tektronix\TekExpress\TekExpress PCIExpress\Lib\PAMJetPatterns\PAMJetJitterPattern.txt
Signal Validation Threshold(mV)	200

ParameterName	Value
Report Update Mode	▪ New ▪ Append ▪ Replace
Trigger Type	▪ Edge ▪ Width ▪ Auto
DUTID Comment	User comment
Timer Warning Info Message Popup	▪ "True" ▪ "False"
Timer Warning Info Message Popup Duration	0 to 20
Timer Error Message Popup	▪ "True" ▪ "False"
Timer Error Message Popup Duration	0 to 20
On Failure Stop and Notify	True or False
Automate with Switch	True or False
DeskewAlertEnabled	True or False
On Failure Stop and Notify	True or False
On Failure Pause	True or False
JitterTestAcquireType (For Basespec Only)	▪ CompliancePattern ▪ DataClockPattern
SigtestSilentMode	True or False
RefClockData (For RefClockSpecOnly)	True or False
Probing Type (For All)	▪ Differential ▪ Single Ended
RecordLengthRefGen5 (For RefClockSpec Only)	80e6
SampleRateRefGen5 (For RefClockSpec Only)	50e9
BandwidthRefGen5 (For RefClockSpec Only)	5e9

Command arguments for report settings

ParameterName	Value
Report Update Mode	• New • Append • Replace
Report Path	X:\<application name>\Reports\DUT001.mht
Save As Type	• Web Archive (*.mht;*.mhtml) • PDF (*.pdf;) • CSV (*.csv;)
Auto increment report name if duplicate	{True False} or {1 0} It represents selected or unselected. Where, • True or 1 - Selected • False or 0 - Unselected
Create report at the end	{True False} or {1 0} It represents selected or unselected. Where, • True or 1 - Selected • False or 0 - Unselected
Include Pass/Fail Results Summary	{True False} or {1 0} It represents selected or unselected. Where, • True or 1 - Selected • False or 0 - Unselected
Include Detailed Results	{True False} or {1 0} It represents selected or unselected. Where, • True or 1 - Selected • False or 0 - Unselected
Include Plot Images	{True False} or {1 0} It represents selected or unselected. Where, • True or 1 - Selected • False or 0 - Unselected
Include Setup Configuration	{True False} or {1 0} It represents selected or unselected. Where, • True or 1 - Selected • False or 0 - Unselected
CXL Report Selection	• Included • Excluded

ParameterName	Value
Include Complete Application Configuration	{True False} or {1 0} It represents selected or unselected. Where, • True or 1 - Selected • False or 0 - Unselected
Include User Comments	{True False} or {1 0} It represents selected or unselected. Where, • True or 1 - Selected • False or 0 - Unselected

Returns

<NRf> or <String>

Examples

TEKEXP:VALUE GENERAL,"<ParameterName>","<Value>" command set the value for the specified general parameter.

TEKEXP:VALUE? GENERAL,"<ParameterName>" command returns the value for the specified general parameter.

Query the available devices in the DUT panel of the application

This command queries the list of available devices on the DUT panel as comma separated values.

Syntax

TEKEXP:LIST? DEVICE (Query)

Command arguments

Device	Device Type and value	Description
<Device>	▪ CEM ▪ BaseSpec ▪ RefClockSpec ▪ U.2(SFF-8639) ▪ M.2	It is the name of the device on the DUT panel of the application.

Returns

<String>

Examples

TEKEXP:LIST? DEVICE command returns the list of available devices.

Query the available suites for the selected device

This command queries the list of available suites for the selected device as comma separated values.

Syntax

TEKEXP:LIST? SUITE (Query)

Command arguments

Device and Suite Type	Description
CEM - System-Board - Add-In-Card U.2(SFF-8639) - Host - Module BaseSpec - TX Test Board - SRIS TX Test Board M.2 - M2_Add-In-Card - M2_Host RefClockSpec - Ref Clock	It is the name of the suites for the selected device.

Returns

<String>

Examples

TEKEXP:LIST? SUITE command returns the list of available suites for the selected device.

Query the list of available tests of the application

This command queries the list of available tests of the application for the selected device as comma separated values.

Syntax

TEKEXP:LIST? TEST (Query)

Command arguments

TestName	String
Tests for CEM	- Median Peak Jitter Gen1 - Min Eye Width Gen1 - Min Time Between Crossovers Gen1 - Non Transition Eye Diagram Gen1 - Peak to Peak Jitter Gen1 - RMS Jitter (Per Edge) Gen1 - Transition Eye Diagram Gen1 - Unit Interval Gen1

TestName	String
	▪ Composit Eye Height Gen2 ▪ Dj_dd Gen2 ▪ Min Eye Width Gen2 ▪ Min Time Between Crossovers Gen2 ▪ Non Transition Eye Diagram Gen2 ▪ Peak to Peak Jitter Gen2 ▪ RJ(RMS) Gen2 ▪ TJ @ E-12 Gen2 ▪ Transition Eye Diagram Gen2 ▪ Unit Interval Gen2 ▪ Composit Eye Height Gen3 ▪ Dj_dd Gen3 ▪ Min Eye Width Gen3 ▪ Min Time Between Crossovers Gen3 ▪ Non Transition Eye Diagram Gen3 ▪ Peak to Peak Jitter Gen3 ▪ RJ(RMS) Gen3 ▪ TJ @ E-12 Gen3 ▪ Transition Eye Diagram Gen3 ▪ Unit Interval Gen3 ▪ Composite Eye Height Gen4 ▪ Dj_dd Gen4 ▪ Extrapolated Eye Height Gen4 ▪ Min Eye Width Gen4 ▪ Min Time Between Crossovers Gen4 ▪ Non Transition Eye Diagram Gen4 ▪ Peak to Peak Jitter Gen4 ▪ RJ(RMS) Gen4 ▪ TJ @ E-12 Gen4 ▪ Transition Eye Diagram Gen4 ▪ Uncorrelated PWJ TJ@E-12 Gen4 ▪ Unit Interval Gen4 ▪ Composite EH Gen5 ▪ Composite EW Gen5 ▪ Deterministic DD Jitter Gen5 ▪ ExtrapolatedJitter Gen5 ▪ Eye Height@BER Gen5 ▪ Eye Width@Ber Gen5 ▪ RandomJitter Gen5 ▪ UnitInterval Gen5 ▪ TIE RJ (RMS) Gen5 ▪ Uncorrelated PWJ DJ dd@E-12 Gen5 (Add-In Card Only) ▪ Uncorrelated PWJ TJ@E-12 Gen5 (Add-In Card Only) ▪ Uncorrelated TIE DJ dd@E-12 Gen5 (Add-In Card Only) ▪ Uncorrelated TIE TJ @ E-12 Gen5 (Add-In Card Only)

TestName	String
	▪ SNDR Gen6 (Add-In Card Only) ▪ RLM Gen6 ▪ Eye Height Gen6 ▪ Eye Width Gen6 ▪ TIE RJ (RMS) Gen6 (Add-In Card Only) ▪ Uncorrelated TIE TJ@E-06 Gen6 (Add-In Card Only) ▪ Uncorrelated TIE DJ dd@E-06 Gen6 (Add-In Card Only) ▪ Uncorrelated PWJ TJ@E-06 Gen6 (Add-In Card Only) ▪ Uncorrelated PWJ DJ dd@E-06 Gen6 (Add-In Card Only)
Tests for BaseSpec	▪ Average UI Gen3 ▪ AC CM 4GHz Gen3 ▪ AC CM 30KHz-500MHz Gen3 ▪ DDj Gen3 ▪ EIEOS Min Voltage Gen3 ▪ F/2 Jitter Gen3 ▪ PS21 Ratio Gen3 ▪ PWJ RJ (RMS) Gen3 ▪ TIE RJ (RMS) Gen3 ▪ Uncorrelated PWJ DJ dd@E-12 Gen3 ▪ Uncorrelated PWJ TJ@E-12 Gen3 ▪ Uncorrelated TIE DJ dd@E-12 Gen3 ▪ Uncorrelated TIE TJ @ E-12 Gen3 ▪ V Tx_no_eq Gen3 ▪ Average UI Gen4 ▪ AC CM 8Ghz Gen4 ▪ AC CM 30KHz-500MHz Gen4 ▪ DDj Gen4 ▪ EIEOS Min Voltage Gen4 ▪ F/2 Jitter Gen4 ▪ PS21 Ratio Gen4 ▪ PWJ RJ (RMS) Gen4 ▪ TIE RJ (RMS) Gen4 ▪ Uncorrelated PWJ DJ dd@E-12 Gen4 ▪ Uncorrelated PWJ TJ@E-12 Gen4 ▪ Uncorrelated TIE DJ dd@E-12 Gen4 ▪ Uncorrelated TIE TJ @ E-12 Gen4 ▪ V Tx_no_eq Gen4 ▪ Average UI Gen5 ▪ AC CM 4GHz Gen5 ▪ AC CM 16GHz Gen5 ▪ DDj Gen5 ▪ EIEOS Min Voltage Gen5 ▪ F/2 Jitter Gen5 ▪ PS21 Ratio Gen5 ▪ PWJ RJ (RMS) Gen5

TestName	String
	▪ TIE RJ (RMS) Gen5 ▪ Uncorrelated PWJ DJ dd@E-12 Gen5 ▪ Uncorrelated PWJ TJ@E-12 Gen5 ▪ Uncorrelated TIE DJ dd@E-12 Gen5 ▪ Uncorrelated TIE TJ @ E-12 Gen5 ▪ V Tx_no_eq Gen5 ▪ SNDR Gen6 ▪ RLM Gen6 ▪ TIE RJ (RMS) Gen6 ▪ Uncorrelated TIE TJ@E-06 Gen6 ▪ Uncorrelated TIE DJ dd@E-06 Gen6 ▪ Uncorrelated PWJ TJ@E-06 Gen6 ▪ Uncorrelated PWJ DJ dd@E-06 Gen6 ▪ UnitInterval Gen6 ▪ AC CM 30KHz-500MHz Gen6 ▪ AC CM 16GHz Gen6 ▪ PS21 Ratio Gen6 ▪ V Tx_Diff_Pk_To_Pk Gen6 ▪ V Tx_EIEOS Gen6 ▪ SNDR Gen7 ▪ RLM Gen7 ▪ TIE RJ (RMS) Gen7 ▪ Uncorrelated TIE TJ@E-06 Gen7 ▪ Uncorrelated TIE DJ dd@E-06 Gen7 ▪ Uncorrelated PWJ TJ@E-06 Gen7 ▪ Uncorrelated PWJ DJ dd@E-06 Gen7 ▪ UnitInterval Gen7 ▪ AC CM 30KHz-500MHz Gen7 ▪ AC CM 32GHz Gen7 ▪ PS21 Ratio Gen7 ▪ V Tx_Diff_Pk_To_Pk Gen7 ▪ V Tx_EIEOS Gen7
Tests for U.2	▪ Composit Eye Height Gen3 ▪ Dj_dd Gen3 ▪ Min Eye Width Gen3 ▪ Min Time Between Crossovers Gen3 ▪ Non Transition Eye Diagram Gen3 ▪ Peak to Peak Jitter Gen3 ▪ RJ(RMS) Gen3 ▪ TJ @ E-12 Gen3 ▪ Transition Eye Diagram Gen3 ▪ Unit Interval Gen3
Tests for M.2	▪ Composit Eye Height Gen3 ▪ Dj_dd Gen3 ▪ Min Eye Width Gen3

TestName	String
	▪ Min Time Between Crossovers Gen3 ▪ Non Transition Eye Diagram Gen3 ▪ Peak to Peak Jitter Gen3 ▪ RJ(RMS) Gen3 ▪ TJ @ E-12 Gen3Transition Eye Diagram Gen3 ▪ Unit Interval Gen3
Test for RefClockSpec	▪ RMS Jitter ▪ AC-REFCLK (Supported in Skyworks Clock Jitter Tool.)

Returns

<String>

Examples

TEKEXP:LIST? TEST command returns the list of available tests for the selected device.

Query the available version names of the application

This command queries the list of available version names of the application for the selected device as comma separated values.

Syntax

TEKEXP:LIST? VERSION (Query)

Returns

<String>

Examples

TEKEXP:LIST? VERSION command returns the list of version names for the selected device.

Query the list of available instruments based on the specified instrument type

This command queries the list of available instruments based on the specified instrument type.

Syntax

TEKEXP:LIST? INSTRUMENT, "<InstrumentType>" (Query)

Command argument

Argument Name	Argument value
<InstrumentType>	<String>

Returns

<String>

Examples

TEKEXP:LIST? INSTRUMENT,"Real Time Scope" command returns the list of available instruments based on the real time scope type.

Set or query the IP address of the instrument based on the specified instrument type

This command sets or queries the IP address of the instrument based on the specified instrument type.

Syntax

TEKEXP:INSTRUMENT? "<InstrumentType>" (Query)

TEKEXP:INSTRUMENT, "<InstrumentType>","<Value>" (Set)

Command argument

Argument Name	Argument Type
<InstrumentType>	<String>
<Value>	<String> TCPIP::XXX.XX.XXX.XXX::INSTR

Returns

<String>

Examples

TEKEXP:INSTRUMENT? "<InstrumentType>" command returns the IP address of the oscilloscope.

TEKEXP:INSTRUMENT, "<InstrumentType>","<value>" command sets the oscilloscope to the specified IP address.

Query the information of the generated report file

This command queries the information of the generated report file in the format "<FileSize>","<FileName>".

Pre-requisite

A session should be run earlier and the report should be generated to get the information of the report.

Syntax

TEKEXP:INFO? REPORT (Query)

Returns

<FileSize>:: <String>

<FileName>:: <String>

Examples

TEKEXP:INFO? REPORT command returns the information of the generated report in the format ("1215","DUT001.mht").

Query the information of the generated waveform files

This command queries the information of the generated waveform files in the format.

<File1Size,"File1Name">.

If there are more than one waveform, the waveform file names are displayed with the comma separated values in the format

<File1Size,"File1Name">,<File2Size,"File2Name">.

Syntax

TEKEXP:INFO? WFM (Query)

Returns

<FileSize>:: <String>

<FileName>:: <String>

Examples

TEKEXP:INFO? WFM command returns the information of the generated waveform in the format (20000858,"X:\PCI Express\Untitled Session\DUT001\20200916_041609\Iter1_Short Record-length for SCOPE Period_NoSSC_DIFF.wfm").

Query the information of the generated image files

This command queries the information of the generated image files in the format.

<File1Size,"File1Name">.

If there are more than one image, the image file names are displayed with the comma separated values in the format

<File1Size,"File1Name">,<File2Size,"File2Name">.

Syntax

TEKEXP:INFO? IMAGE (Query)

Returns

<FileSize>:: <String>

<FileName>:: <String>

Examples

TEKEXP:INFO? IMAGE command returns the information of the generated image in the format (109058, "X:\PCI Express\Untitled Session\DUT001\20200916_041609\Iter1_Short Record-length for SCOPE Period_NoSSC_DIFF.png";22794,"X:\PCI Express\Untitled Session\DUT001\20200916_041609\ScopePeriodPlot_Iteration1WithCursor.png").

Query the active TekExpress application name

This command queries the active TekExpress application name running on the oscilloscope.

Syntax

TEKEXP:*IDN? (Query)

Returns

<String>

Examples

TEKEXP:*IDN? command returns the active TekExpress application name running on the oscilloscope.

Set or query the DUTID of application

This command sets or queries the DUTID of the application.

Syntax

TEKEXP:VALUE DUTID, "<Value>" (Set)

TEKEXP:VALUE? DUTID (Query)

Command arguments

Argument Name	Argument Type
<Value>	<String>

Returns

<String>

Examples

TEKEXP:VALUE DUTID, "DUT001" command sets the DUTID of the application to DUT001.

TEKEXP:VALUE? DUTID command returns the DUTID of the application.

Sets or query the acquire mode status

This command sets or queries the acquire mode status.

Syntax

TEKEXP:ACQUIRE_MODE <Mode> (Set)

TEKEXP:ACQUIRE_MODE? (Query)

Command arguments

Argument Name	Argument value
<Mode>	- LIVE - PRE-RECORDED

Returns

LIVE | PRE-RECORDED

Examples

TEKEXP:ACQUIRE_MODE LIVE command sets the acquire mode to the Live mode.

TEKEXP:ACQUIRE_MODE? command returns the current acquire mode.

Set or query the execution mode status

This command sets or queries the execution mode status.

Syntax

```
TEKEXP:MODE <Mode> (Set)
TEKEXP:MODE? (Query)
```

Command arguments

Argument Name	Argument value
<Mode>	- COMPLIANCE - USER-DEFINED

Returns

COMPLIANCE | USER-DEFINED

Examples

```
TEKEXP:MODE COMPLIANCE command sets the execution mode to the compliance mode.
TEKEXP:MODE? command returns the current execution mode.
```

Generate the report for the current session

This command generates the report for the current session.

Syntax

```
TEKEXP:REPORT GENERATE(Set)
```

Arguments

N/A

Examples

```
TEKEXP:REPORT GENERATE command generates the report for the current session.
```

Query the value of specified report header field in the report

This command queries the value of specified report header field in the report.

Syntax

```
TEKEXP:REPORT? "<Device Field>" (Query)
```

Command arguments

Argument Name	Argument Type
---------------	---------------

<Device Field>

Device field is the header name of each field in the setup information section of the report.

Setup Information			
DUT ID	DUT001	Probe1 Model	"1x"
Data Time	2025-10-22 11:24:39	Probe1 Serial Number	"N/A"
Device Type	7ix-Device	Probe2 Model	"1x"
TelExpress AppEmulator Version	5.2.999.17 (DAILY)	Probe2 Serial Number	"N/A"
TelExpress Framework Version	5.2.999.17_INTERNAL	Probe3 Model	"1x"
Spec Version	Spec 1.0	Probe3 Serial Number	"N/A"
Overall Compliance Mode	Yes	Probe4 Model	"1x"
Overall Test Result	Pass	Probe4 Serial Number	"N/A"
		Scope Model	DPO5104
		Scope Serial Number	Non-Set
		SFC_FactoryCalibration	INTLUNCAL
		Scope F/W Version	10.0.1 Build 25
		DPOQT Version	10.1.0.64

<String>

Returns

<String>

Examples

TEKEXP:REPORT? "DUT ID" command returns the value of DUT ID field in the report.

Query the value of specified result detail available in report summary/details table

This command queries the value of specified result detail available in report summary/details table.

Syntax

TEKEXP:RESULT? "<TestName>" (Query)

TEKEXP:RESULT? "<TestName>", "<ColumnName>" (Query)

TEKEXP:RESULT? "<TestName>", "<ColumnName>", <RowNumber> (Query)

Command arguments

Argument Name	Argument Type
<TestName> It is the test name of which the details are required in the report.	<String>
<ColumnName> It is the column header name of which the details are required in the report.	<String>
<RowNumber> It is the row number of which the details are required in the report.	<String>

Returns

<String>

Examples

TEKEXP:RESULT? "<TestName>" will return the pass fail status of test.

TEKEXP:RESULT? "<TestName>", "<ColumnName>" will return all the row values of specific column for the test with comma separated values.

TEKEXP:RESULT? "<TestName>", "<ColumnName>", <RowNumber> will return the column value of specified row number.

Restore the setup to default settings

This command restores the setup to default settings.

Syntax

TEKEXP:SETUP Default (Set)

Arguments

N/A

Examples

TEKEXP:SETUP Default command restores the setup to default settings.

Save the setup

This command saves the setup.

Syntax

TEKEXP:SETUP Save (Set)

Examples

TEKEXP:SETUP Save command saves the setup.

Save the settings to a specified session

This command saves the settings to a specified session.

Syntax

TEKEXP:SETUP Save, "<SessionName>"

Command arguments

Argument Name	Argument value
<SessionName>	<String>

Examples

TEKEXP:SETUP Save, "<SessionName>" command saves the settings to a specified session.

Open the setup from a specified session

This command opens the setup from a specified session.

Syntax

TEKEXP:SETUP Open, "<SessionName>" (Set)

Command arguments

Argument Name	Argument value
<SessionName>	<String>

Examples

TEKEXP:SETUP Open, "<SessionName>" command opens the setup from a specified session.

Query the current setup file name

This command queries the current setup file name.

Syntax

TEKEXP:SETUP? CURRENT (Query)

Returns

<String>

Examples

TEKEXP:SETUP? CURRENT command returns the current setup file name.

Run/stop/pause/resume the selected measurements execution in the application

This command run/stop/pause/resume the selected measurements execution in the application.

Syntax

TEKEXP:STATE <operation mode> (Set)

Command arguments

Argument Name	Argument value
<operation mode>	▪ RUN ▪ STOP ▪ PAUSE ▪ RESUME

Returns

RUN | STOP | PAUSE | RESUME

Examples

TEKEXP:STATE RUN command runs the execution for the selected measurements.

Query the current measurement execution status

This command queries the current measurement execution status.

Syntax

TEKEXP:STATE? (Query)

Returns

RUNNING | PAUSED | WAIT | ERROR | READY

Examples

TEKEXP:STATE? command returns the current measurement execution status.

Query whether the current setup is saved or not saved

This command queries whether the current setup is saved or not saved.

Syntax

TEKEXP:STATE? SETUP (Query)

Returns

Saved or Not-Saved

Examples

TEKEXP:STATE? SETUP command returns whether the current setup is saved or not saved.

Query the status of the previous command execution

This command queries whether the previous command execution is completed successfully.

Syntax

TEKEXP:*OPC? (Query)

Returns

{0 | 1} or {True | False}

1 or True indicates that command execution is successful.

0 or False indicates that command execution is failed.

Examples

TEKEXP:*OPC? command returns whether the previous command operation is completed successfully.

Query the last error occurred

This command queries the last error occurred.

Syntax

TEKEXP:LASTERROR? (Query)

Returns

<String>

Examples

TEKEXP:LASTERROR? command returns the last error occurred.

Set or query the popup details

This command sets or queries the popup details.

Syntax

TEKEXP:POPUP? (Query)

TEKEXP:POPUP "<PopupResponse>" (Set)

Command arguments

Argument Name	Argument value
<PopupResponse>	▪ Yes ▪ No

Returns

The pop-up details return in the following format:

"<Tittle>",<message>",<response1>,<response2>".

Where,

<Tittle> :: <String>

<message> :: <String>

<response1>,<response2> :: <String>

Examples

TEKEXP:POPUP? command returns the popup details in following format ": "Do you really want to exit TekExpress?";Responses: "Yes, No".

TEKEXP:POPUP "Yes" command sets the popup response to Yes.

Sets or query the limit values in the limits editor window

This command sets or queries the limit values in the limits editor window.

Syntax

TEKEXP:VALUE LIMIT,<TestName>,<LimitHeader>,<Value1>,<CompareString>,<Value2>(Set)

TEKEXP:VALUE? LIMIT,<TestName>,<LimitHeader> (Query)

Command arguments

Argument Name	Argument Type	Valid Values
---------------	---------------	--------------

<TestName>	<String>	It is the test name.
<LimitHeader>	<String>	It is the value in Details filed.
<Value1>	<Nrf>	It is the Low Limit value.
<CompareString>	GELE	GELE ($\geq \leq$)
	GELT	GELT ($\geq <$)
	GTLE	GTLE ($> \leq$)
	LTGT	LTGT ($< >$)
	LEGE	LEGE ($\leq \geq$)
	LEGT	LEGT ($\leq >$)
	LTGE	LTGE ($< \geq$)
	EQUALTO	$==$ Equal To
	NOTEQUALTO	$!=$ Not Equal To
	GREATERTHAN	$>$ Greater Than
	LESSTHAN	$<$ Less Than
	GREATERTHANOREQUALTO	$\geq$ Greater Than Or Equal To
	LESSTHANOREQUALTO	$\leq$ Less Than Or Equal To
<Value2>	<Nrf>	It is the High Limit value.

Returns

<String> or <Nrf>

Examples

TEKEXP:VALUE LIMIT,<TestName>,<LimitHeader>,<Value1>,<CompareString>,<Value2> command sets the limits value for the specified testname and limit header.

TEKEXP:VALUE? LIMIT,<TestName>,<LimitHeader> command returns the limits value for the specified testname and limit header.

Set or query the waveform file recalled for the specified test name and acquire type

This command set or queries the waveform file recalled for the specified test name and acquire type.

If there are more than one waveform, the waveform file names are displayed with the symbol "\$" separated values in the format

<WaveformFileName1\$ WaveformFileName2>.

Syntax

TEKEXP:VALUE WFMFILE,<TestName>,<AcquireType>,<WaveformFileName> (Set)

TEKEXP:VALUE? WFMFILE,<TestName>,<AcquireType> (Query)

Command arguments

Argument Name	Argument Type	Valid Values
<TestName>	<String>	It is the test name.
<AcquireType>	<String>	It is the acquire type.
<WaveformFileName>	<String>	It is the waveform file name.

Returns

<String>

Examples

TEKEXP:VALUE WFMFILE,<TestName>,<AcquireType>,<WaveformFileName> command recalls the sepcified waveform file for the specified testname and acquire type.

TEKEXP:VALUE? WFMFILE,<TestName>,<AcquireType> command returns the waveform file name recalled for the specified testname and acquire type.

Set or query the enable/disable status of Verbose function

This command sets or queries the enable/disable status of Verbose function.

Syntax

TEKEXP:VALUE VERBOSE,"<Value>" (Set)

TEKEXP:VALUE? VERBOSE (Query)

Arguments

Argument Name	Argument value
<Value>	{True False} or {1 0} It represents enabled or disabled. Where, - True or 1 - enabled - False or 0 - disabled

Returns

{True | False} or {0 | 1}

Examples

TEKEXP:VALUE VERBOSE,"<Value>" command enable or disable the Verbose function.

TEKEXP:VALUE? VERBOSE command returns the enable or disable status of Verbose function.

Set or query the View report after generating option status

This command sets or queries the enable/disable status of the View report after generating function.

Syntax

TEKEXP:VALUE? GENERAL,"View Report After Generating" (Query)

TEKEXP:VALUE GENERAL,"View Report After Generating",<value> (Set)

Arguments

Argument Name	Argument value
<Value>	{True False} or {1 0} It represents enabled or disabled. Where, - True or 1 - enabled - False or 0 - disabled

Returns

{True | False} or {0 | 1}

Examples

TEKEXP:VALUE? GENERAL,"View Report After Generating" command returns the enable or disable status of view report after generating option.

TEKEXP:VALUE GENERAL,"View Report After Generating",<value> command enable or disable the view report after generating option.

Returns the report as XML string

This command returns the report as XML string.

Syntax

TEKEXP:REPORTASXML? (Query)

Returns

<String>

Examples

TEKEXP:REPORTASXML? command returns the report XML string.

Copies all the images from current run session to the given destination location

This command copies all the images from current run session to the given destination location.

Syntax

TEKEXP:COPYIMAGES <DestinationPath> (Set)

Command argument

<DestinationPath> :: <String>

Returns

NA

Examples

TEKEXP:COPYIMAGES C:\Temp command copies all the images from current run session to the mentioned location.

Selects the specified test(s) and deselect all other tests

This command selects the specified test(s) and deselect all other tests.

Syntax

TEKEXP:SELECTID <"TestID"> (Set)

Command argument

Argument Name	Argument value
TestID	String

Returns

NA

Examples

TEKEXP:SELECTID "11101" This command select the test associated with the ID and deselects all other tests in the application.

TEKEXP:SELECTID "11101,11102" This command selects the tests associated with the IDs and other tests will be deselected.

Returns the complete information about the selected test

This command returns the complete information about the selected test.

The information includes application name, TestID, Device selected, Suite selected, version, Test name, Test description.

Syntax

TEKEXP:TESTINFO? (Query)

Returns

<String>

Examples

TEKEXP:TESTINFO? This command returns the following details:

<TekExpress> <Test Id="11101" Device="TX-Device" Suite="Group1" Version="Spec 1.0" Name="Algorithm Library Measurement" Description="This is Algorithm Library measurement test. Refer Section-B of TekExpress SampleApp Development Guide for more details.

Set the default session

Sets the application configurations to default value.

Syntax

TEKEXP:SESSION DEFAULT (set)

Examples

TEKEXP:SESSION DEFAULT, sets the application configurations to default value.

Save the run/config sessions

Enter the name to save/config the session.

Syntax

TEKEXP:SESSION SAVE, "Session Name" (set)

Command arguments

Argument Name	Argument value
<Session Name>	<String>

Examples

TEKEXP:SESSION SAVE, "Session Name" saves the session.

Load the run/config session

Load the selected config/run session.

Syntax

TEKEXP:SESSION LOAD, "Session Name" (set)

Command arguments

Argument Name	Argument value
<Session Name>	<String>

Examples

TEKEXP:SESSION LOAD, "Session Name", load the selected config/run session.

Delete the run/config session

Deletes the selected config/run session.

Syntax

TEKEXP:SESSION DELETE, "Session1, Session2" (set)

Command arguments

Argument Name	Argument value
<Session Name>	<String>

Examples

TEKEXP:SESSION DELETE, "Session1, Session2", deletes the selected config/run session.

Run the run/config saved session

Run the selected config/run session.

Syntax

TEKEXP:SESSION RUN, "Session Name's separated by comma" (set)

Command arguments

Argument Name	Argument value
<Session Name>	<String>
Session Name's separated by comma (to run the multiple run sessions)	<String>

Examples

TEKEXP:SESSION RUN, "Session Name's separated by comma", runs the selected config/run session.

Query the available list in the run/config session

Returns the list of available config/run session.

Syntax

TEKEXP:SESSION? LIST

Returns

Returns the list of available config/run session.

Examples

TEKEXP:SESSION? LIST, returns the list of available config/run session.

Query the current run/config session

Returns the selected config/run session.

Syntax

TEKEXP:SESSION? CURRENT

Returns

Returns the selected config/run session.

Examples

TEKEXP:SESSION? CURRENT, returns the selected config/run session.

Override the run/config session

Overrides the selected config/run session.

Syntax

TEKEXP:SESSION SAVE, "SessionName", "True" (set)

Command arguments

Argument Name	Argument Type	Argument Value
<Session Name>	<String>	{True False} or {1 0} It represents enabled or disabled. Where, - True or 1 - enabled - False or 0 - disabled

Returns

{True | False} or {0 | 1}

Examples

TEKEXP:SESSION SAVE, "SessionName", "True", overrides the selected config/run session.

Exit or close the application

The command exits or close the application.

Syntax

TEKEXP:EXIT (Set)

Examples

TEKEXP:EXIT command close the application.

Example script

This example script demonstrates the automation of TekExpress PCI Express application.

```
import sys
from time import sleep
import platform
import os
import traceback
import socket_instrument
import csv

_dutId = 'Test DUTID'
_deviceName = "CEM"
_suiteName = "Add-In-Card"
_versionName = "Gen1 - 1.1"

[_param, _value] = ["Signal Validation", "Turn Off Signal Check"]
_measList = ["Unit Interval Gen1"]

#No need to change the IP address as it is running on same machine
ipAddress = "localhost"

si = socket_instrument.SocketInstrument(ipAddress, 5000)
print si.instId

# Set DUTID
si.write('TEKEXP:VALUE DUTID,"{0!s}"'.format(_dutId))
print si.query('TEKEXP:VALUE? DUTID')

# Set device
si.write('TEKEXP:SELECT DEVICE,"{0!s}"'.format(_deviceName))
while si.query('TEKEXP:SELECT? DEVICE') != '"{}"'.format(_deviceName):
    sleep(5)
print si.query('TEKEXP:SELECT? DEVICE')

# Set test suite
si.write('TEKEXP:SELECT SUITE,"{0!s}"'.format(_suiteName))
while si.query('TEKEXP:SELECT? SUITE') != '"{}"'.format(_suiteName):
    sleep(5)
print si.query('TEKEXP:SELECT? SUITE')

# Set test version
si.write('TEKEXP:SELECT VERSION,"{0!s}"'.format(_versionName))
while si.query('TEKEXP:SELECT? VERSION') != '"{}"'.format(_versionName):
    sleep(5)
print si.query('TEKEXP:SELECT? VERSION')
sleep(1)

# Set Signal Validation to 'Turn Off'
si.write('TEKEXP:VALUE GENERAL,"{0!s}", "{1!s}"'.format(_param, _value))
print si.query('TEKEXP:VALUE? GENERAL,"{0!s}"'.format(_param))
```

```

# To select the required tests, unselecting the other tests
si.write('TEKEXP:SELECT TEST,"Median Peak Jitter Gen1",FALSE')
si.write('TEKEXP:SELECT TEST,"Min Time Between Crossovers Gen1",FALSE')
si.write('TEKEXP:SELECT TEST,"Non Transition Eye Diagram Gen1",FALSE')
si.write('TEKEXP:SELECT TEST,"Peak to Peak Jitter Gen1",FALSE')
si.write('TEKEXP:SELECT TEST,"RMS Jitter (Per Edge) Gen1",FALSE')
si.write('TEKEXP:SELECT TEST,"Transition Eye Diagram Gen1",FALSE')
si.write('TEKEXP:SELECT TEST,"Min Eye Width Gen1",FALSE')
sleep(2)
for _meas in _measList:
si.write('TEKEXP:SELECT TEST,"{0!s}",TRUE'.format(_meas))
sleep(2)
selectedMeasurements = si.query('TEKEXP:SELECT? TEST')
selectedMeasurements = selectedMeasurements.replace('"','').split(',')
#print 'Selected Measurements'
#for meas in selectedMeasurements:
#print meas
# if any General Parameters User want to modify can be done here
# Execution Starts
"""Execution function with popup handling"""
appStatus = si.query('TEKEXP:STATE?')
if appStatus == 'READY':
si.write('TEKEXP:STATE RUN')
while str(si.query('TEKEXP:STATE?')) != 'RUNNING':
sleep(1)
appStatus = si.query('TEKEXP:STATE?')
try:
while str(appStatus) != 'READY':
appStatus = si.query('TEKEXP:STATE?')
if appStatus in ['RUNNING']:
sleep(2)
print('Application Status: ..{}..'.format(appStatus))
if appStatus in ['WAIT','ERROR']:
print('\n-----')
print('Application Status: {} Message'.format(appStatus))
info = str(si.query('TEKEXP:POPUP?'))
[Title, Message, Responses] = info.split(';')
ResponseOptions = str(Responses[12:-1]).strip('')
ResponseOptions = ResponseOptions.split(',')

```

```

print('\n\n'+Title+'\n\n'+Message+'\n')
print("-----")
for res in ResponseOptions:
print str(ResponseOptions.index(res)) + ' > ' + res
userResponse = int(input('Choose your option: '))
si.write('TEKEXP:POPUP "{0!s}"'.format(ResponseOptions[userResponse]))
print('\nResponse Sent: "{0!s}"'.format(ResponseOptions[userResponse]))
print("-----")
print("***** EXECUTION COMPLETED *****")
except Exception:
print("Exception Occured")
# Get the Measurement Results
allDetailsList = list()
allValuesList = list()
allMarginList = list()
resultList = list()
for meas in _measList:#selectedMeasurements:
allDetailsList = (si.query('TEKEXP:RESULT? "{0!s}", "{1!s}"'.format(meas, 'Details'))).replace('"', '').split(',')
allValuesList = (si.query('TEKEXP:RESULT? "{0!s}", "{1!s}"'.format(meas, 'Value'))).replace('"', '').split(',')
allMarginList = (si.query('TEKEXP:RESULT? "{0!s}", "{1!s}"'.format(meas, 'Margin'))).replace('"', '').split(',')
resultList = zip(allDetailsList, allValuesList, allMarginList)
# Define local variables
testResultList = list()
details = list()
values = list()
margins = list()
# Header Info for the CSV file
header1CSV=["Detail"]
header2CSV=["Value"]
header3CSV=["Margin"]
header=zip(header1CSV,header2CSV,header3CSV)
testResultList.append(header)
# Conversion to suitable for CSV formatting
testResultList.append(resultList)
# Open a CSV file object
csvFilePath = "C:\\users\\sqeind\\documents\\Test_PCI_Results.csv"
csvFilObj = open(csvFilePath,"wb")


```

```
# writing CSV file with the statistical values
mywriter=csv.writer(csvFilObj)
for rowVal in testResultList:
mywriter.writerows(rowVal)
# Closing the CSV file object
csvFilObj.close()
si.disconnect()
```


References

Application directories

You can find the application files at C:\Program Files\Tektronix\PCI Express. The application directory and associated files are organized as follows:

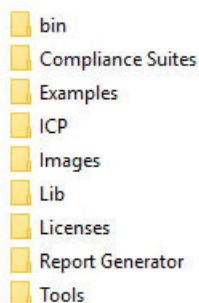

The following table lists the default directory names and their usage:

Application directories and usage

Directory names	Usage
Bin	Contains application libraries
Compliance Suites	Contains test suite specific files
Examples	Contains various support files
ICP	Contains instrument and application specific interface libraries
Images	Contains images of the application
Lib	Contains utility files specific to the application
Report Generator	Contains style sheets for report generation
Tools	Contains instrument and application specific files

File name extensions

The TekExpress PCI Express software uses the following file name extensions:

File name extension

File name extension	Description
*.TekX	Application session files (the extensions may not be displayed)
*.py	Python sequence file.


File name extension	Description
*.xml	Test-specific configuration information (encrypted) files. Application log files
*.csv	Test result reports Plot data
*.mht	Test result reports (default) Test reports can also be saved in HTML format
*.pdf	Test result reports Application help document
*.xslt	Style sheet used to generate reports
*.png	Captured images

View test-related files

Files related to tests are stored in My DocumentsPCI Express\Untitled session folder. Each test setup in this folder has both a test setup file and a test setup folder, both with the test setup name. The test setup file is preceded by the TekExpress icon.

Inside the test setup folder is another folder named for the DUT ID used in the test sessions. The default is DUT001.

Inside the DUT001 folder are the session folders and files. Each session also has a folder and file pair, both named for the test session using the naming convention (date)_(time). Each session file is stored outside its matching session folder:

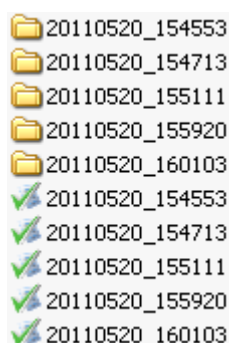

Each session folder contains image files of any plots generated from running the test session. If you selected to save all waveforms or ran tests using prerecorded waveform files, these are included here.

The first time you run a new, unsaved session, the session files are stored in the Untitled Session folder located at X: \PCI Express. When you name and save the session, the files are placed in a folder with the name that you specify. A copy of the test files stay in the Untitled Session folder until you run a new test or until you close the application.

De-embed using filter files

TekExpress PCIe provides an option to de-embed the signal path using filter files. You create the filter files. The filter files are .flt files composed of de-embed filter coefficients for a particular sampling rate. A filter file created for one sampling rate might not work for other sampling rates, so it is important to understand at what sampling rate the measurements are being performed.

Also, the de-embedding filters might differ based on the type of input. For example, if a single ended input is made using a matched SMA cable pair, a filter file for de-embedding a single SMA cable must be provided, since matched SMA cables mostly have similar s-parameters. So in this case, the same filter file is used to de-embed the SMA cable pair.

The maximum sampling rate provided on any channel combination on MSO/DPO/DSA70000C/D/DX series oscilloscopes is 50 GS/s in realtime mode. The maximum sampling rate provided on Ch1-Ch3 and Ch2-Ch4 channel combinations on MSO/DPO/DSA70000C/D/DX/SX series oscilloscopes is 100 GS/s, provided only 2 channels are on at a given time.

See also

[Configuration: Set measurement limits for tests](#)

Setup files

TekExpress PCI Express package contains setup files (*.TekX) which can be used at PCI-SIG workshop for compliance tests.

Setup files configuration details

Setup files (*.TekX)	Configuration details (exclusively used in Gen1/2/3 Gold Suite of PCI-SIG Work Shop (WS))
Compliance_CEM_AIC_x1	Specification - CEM Device Type - Add-In-Card Version - Gen3 - 3.0 Data Rates - 2.5 Gbps, 5 Gbps (Tx equalization 3.5dB, 6 dB) and 8 Gbps Signal Quality Preset Selection - P0, P7 and P8 for L0 and All Presets from P0 to P10 for Lane0 Link Width - 1 Lane (Selected test lane: L0) Automated DUT Control - unchecked Signal Validation - Pattern Decoding
Compliance_CEM_AIC_x2	Specification - CEM Device Type - Add-In-Card Version - Gen3 - 3.0 Data Rates - 2.5 Gbps, 5 Gbps (Tx equalization 3.5dB, 6 dB) and 8 Gbps Signal Quality Preset Selection - P0, P7 and P8 for L0 and All Presets from P0 to P10 for Lane0 Link Width - 2 Lanes (Selected test lane: L0) Automated DUT Control - unchecked Signal Validation - Pattern Decoding

Setup files (*.TekX)	Configuration details (exclusively used in Gen1/2/3 Gold Suite of PCI-SIG Work Shop (WS))
Compliance_CEM_AIC_x4	Specification - CEM Device Type - Add-In-Card Version - Gen3 - 3.0 Data Rates - 2.5 Gbps, 5 Gbps (Tx equalization 3.5dB, 6 dB) and 8 Gbps Signal Quality Preset Selection - P0, P7 and P8 for L0 and All Presets from P0 to P10 for Lane0 Link Width - 4 Lanes (Selected test lane: L0, L03) Automated DUT Control - unchecked Signal Validation - Pattern Decoding
Compliance_CEM_AIC_x8	Specification - CEM Device Type - Add-In-Card Version - Gen3 - 3.0 Data Rates - 2.5 Gbps, 5 Gbps (Tx equalization 3.5dB, 6 dB) and 8 Gbps Signal Quality Preset Selection - P0, P7 and P8 for L0 and All Presets from P0 to P10 for Lane0 Link Width - 8 Lanes (Selected test lane: L0, L03, L07) Automated DUT Control - unchecked Signal Validation - Pattern Decoding
Compliance_CEM_AIC_x16	Specification - CEM Device Type - Add-In-Card Version - Gen3 - 3.0 Data Rates - 2.5 Gbps, 5 Gbps (Tx equalization 3.5dB, 6 dB) and 8 Gbps Signal Quality Preset Selection - P0, P7 and P8 for L0 and All Presets from P0 to P10 for Lane0 Link Width - 16 Lanes (Selected test lane: L0, L07, L15) Automated DUT Control - unchecked Signal Validation - Pattern Decoding

Setup files (*.TekX)	Configuration details (exclusively used in Gen1/2/3 Gold Suite of PCI-SIG Work Shop (WS))
Compliance_CEM_SYB_x1	Specification - CEM Device Type - Add-In-Card Version - Gen3 - 3.0 Data Rates - 2.5 Gbps, 5 Gbps (Tx equalization 3.5dB, 6 dB) and 8 Gbps Signal Quality Preset Selection - P0, P7 and P8 for L0 and All Presets from P0 to P10 for Lane0 Link Width - 1 Lane (Selected test lane: L0) Automated DUT Control - unchecked Signal Validation - Pattern Decoding
Compliance_CEM_SYB_x2	Specification - CEM Device Type - Add-In-Card Version - Gen3 - 3.0 Data Rates - 2.5 Gbps, 5 Gbps (Tx equalization 3.5dB, 6 dB) and 8 Gbps Signal Quality Preset Selection - P0, P7 and P8 for L0 and All Presets from P0 to P10 for Lane0 Link Width - 2 Lanes (Selected test lane: L0) Automated DUT Control - unchecked Signal Validation - Pattern Decoding
Compliance_CEM_SYB_x4	Specification - CEM Device Type - Add-In-Card Version - Gen3 - 3.0 Data Rates - 2.5 Gbps, 5 Gbps (Tx equalization 3.5dB, 6 dB) and 8 Gbps Signal Quality Preset Selection - P0, P7 and P8 for L0 and All Presets from P0 to P10 for Lane0 Link Width - 4 Lanes (Selected test lane: L0, L03) Automated DUT Control - unchecked Signal Validation - Pattern Decoding


Setup files (*.TekX)	Configuration details (exclusively used in Gen1/2/3 Gold Suite of PCI-SIG Work Shop (WS))
Compliance_CEM_SYB_x8	Specification - CEM Device Type - Add-In-Card Version - Gen3 - 3.0 Data Rates - 2.5 Gbps, 5 Gbps (Tx equalization 3.5dB, 6 dB) and 8 Gbps Signal Quality Preset Selection - P0, P7 and P8 for L0 and All Presets from P0 to P10 for Lane0 Link Width - 8 Lanes (Selected test lane: L0,L03,L07) Automated DUT Control - unchecked Signal Validation - Pattern Decoding
Compliance_CEM_SYB_x16	Specification - CEM Device Type - Add-In-Card Version - Gen3 - 3.0 Data Rates - 2.5 Gbps, 5 Gbps (Tx equalization 3.5dB, 6 dB) and 8 Gbps Signal Quality Preset Selection - P0, P7 and P8 for L0 and All Presets from P0 to P10 for Lane0 Link Width - 16 Lanes (Selected test lane: L0,L07,L15) Automated DUT Control - unchecked Signal Validation - Pattern Decoding
Compliance_U2_Module_x1	Specification - U.2 (SFF8639) Device Type - Module Version - Gen3 - 3.0 Data Rates - 8 Gbps Signal Quality Preset Selection - P0, P7 and P8 for L0 and All Presets from P0 to P10 for Lane0 Link Width - 1 Lane (Selected test lane: L0) Automated DUT Control - unchecked Signal Validation - Pattern Decoding

Setup files (*.TekX)	Configuration details (exclusively used in Gen1/2/3 Gold Suite of PCI-SIG Work Shop (WS))
Compliance_U2_Module_x2	Specification - U.2 (SFF8639) Device Type - Module Version - Gen3 - 3.0 Data Rates - 8 Gbps Signal Quality Preset Selection - P0, P7 and P8 for L0 and All Presets from P0 to P10 for Lane0 Link Width - 2 Lanes (Selected test lane: L0) Automated DUT Control - unchecked Signal Validation - Pattern Decoding
Compliance_U2_Module_x4	Specification - U.2 (SFF8639) Device Type - Module Version - Gen3 - 3.0 Data Rates - 8 Gbps Signal Quality Preset Selection - P0, P7 and P8 for L0 and All Presets from P0 to P10 for Lane0 Link Width - 4 Lanes (Selected test lane: L0,L03) Automated DUT Control - unchecked Signal Validation - Pattern Decoding
Compliance_U2_Host_x1	Specification - U.2 (SFF8639) Device Type - Host Version - Gen3 - 3.0 Data Rates - 8 Gbps Signal Quality Preset Selection - P0, P7 and P8 for L0 and All Presets from P0 to P10 for Lane0 Link Width - 1 Lane (Selected test lane: L0) Automated DUT Control - unchecked Signal Validation - Pattern Decoding

Setup files (*.TekX)	Configuration details (exclusively used in Gen1/2/3 Gold Suite of PCI-SIG Work Shop (WS))
Compliance_U2_Host_x2	Specification - U.2 (SFF8639) Device Type - Host Version - Gen3 - 3.0 Data Rates - 8 Gbps Signal Quality Preset Selection - P0, P7 and P8 for L0 and All Presets from P0 to P10 for Lane0 Link Width - 2 Lanes (Selected test lane: L0) Automated DUT Control - unchecked Signal Validation - Pattern Decoding
Compliance_U2_Host_x4	Specification - U.2 (SFF8639) Device Type - Host Version - Gen3 - 3.0 Data Rates - 8 Gbps Signal Quality Preset Selection - P0, P7 and P8 for L0 and All Presets from P0 to P10 for Lane0 Link Width - 4 Lanes (Selected test lane: L0, L03) Automated DUT Control - unchecked Signal Validation - Pattern Decoding

How to open a setup file

1. Click **Options**→ **Open Test Setup**
2. Select the TekExpress Setup File as per your required configuration. Check Setup files configuration details table for configuration details.

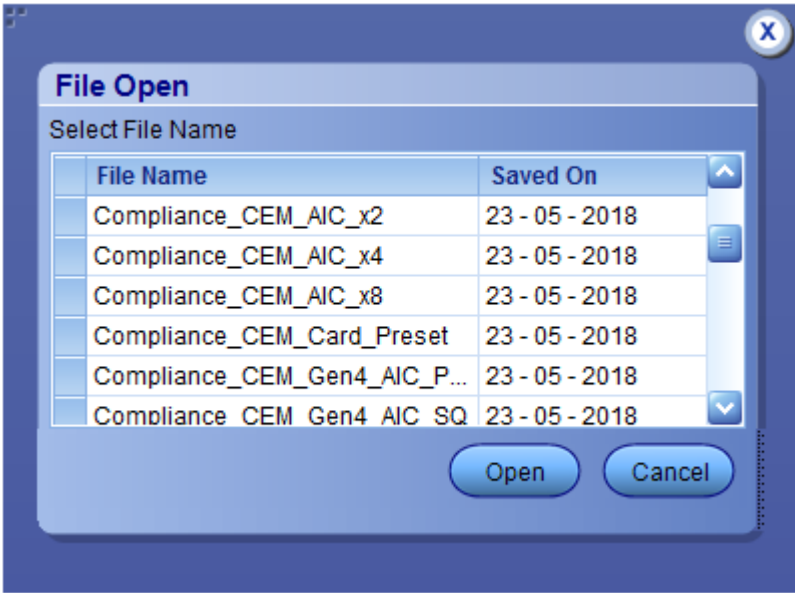

- 3. Make the configuration details and start the test execution.
- 4. Click **Save Test Setup As** and save the setup.

NOTE: You cannot edit the TekExpress Test Setup files as they are in **Read Only** mode.

NOTE: The setup files path is *C:\Program Files\Tektronix\TekExpress\TekExpress PCI Express\Setup Files*

RF Switch configuration files

TekExpress PCI Express package contains RF Switch configuration files.

File name	Configuration details
PCE_Keithley_SYB_x6	Recall this file for Keithley S46T RF Switch and System-Board device type. The below are the configuration details: Lane0 Positive to Lane05 Positive connected as Signal Inputs to Relay S1. Lane0 Negative to Lane05 Negative connected as Signal Inputs to Relay S3. Common output of relay A, B is connected to CH1, CH3 of the oscilloscope respectively. For 2-Unit, SX box >= 59 GHz, set the common outputs to CH1, CH3 respectively. Connect the Ref Clock Positive and Negative from CLB to CH3, CH4 of oscilloscope. For 2-Unit, SX box >=59GHz, set the Ref Clock Positive and Negative to CH2 and CH4 respectively.

File name	Configuration details
PCE_KthCCD_SYB_x12	Recall this file for Keithley S46T RF Switch and System-Board device type. The below are the configuration details: Lane0 Positive to Lane05 Positive connected as Signal Inputs to Relay A which is Cascade to Relay 4 and Input to NO. Lane0 Negative to Lane05 Negative connected as Signal Inputs to Relay B which is Cascade to Relay 5 and Input to NO. Lane06 Positive to Lane11 Positive connected as Signal Inputs to Relay C which is Cascade to Relay 4 and Input to NC. Lane06 Negative to Lane11 Negative connected as Signal Inputs to Relay D which is Cascade to Relay 5 and Input to NC. Relay 4 is selected as Positive and Relay 5 as Negative; common output of 4 and 5 is connected to CH1, CH2 of the oscilloscope respectively. For 2-Unit, SX box ≥ 59 GHz, set the common outputs to CH1, CH3 respectively. Connect the Ref Clock Positive and Negative from CLB to CH3, CH4 of oscilloscope. For 2-Unit, SX box ≥ 59GHz, set the Ref Clock Positive and Negative to CH2 and CH4 respectively.
PCE_Giga_SYB_x8	Recall this file for Gigatronics ASCOR 8000 Series RF Switch and System-Board device type. The below are the configuration details: Lane0 Positive to Lane07 Positive connected as Signal Inputs to Relay S1. Lane0 Negative to Lane07 Negative connected as Signal Inputs to Relay S3. Common output of relay S1, S3 is connected to CH1, CH3 of the oscilloscope respectively. For 2-Unit, SX box ≥ 59 GHz, set the common outputs to CH1, CH3 respectively. Connect the Ref Clock Positive and Negative from CLB to CH3, CH4 of oscilloscope. For 2-Unit, SX box ≥ 59GHz, set the Ref Clock Positive and Negative to CH2 and CH4 respectively.
PCE_GigCCD_SYB_x16	Recall this file for Gigatronics ASCOR 8000 Series RF Switch and System-Board device type. The below are the configuration details: Lane0 Positive to Lane07 Positive connected as Signal Inputs to Relay S1 which is Cascade to Relay S2 and Input to NO. Lane0 Negative to Lane07 Negative connected as Signal Inputs to Relay S3 which is Cascade to Relay S5 and Input to NO. Lane08 Positive to Lane15 Positive connected as Signal Inputs to Relay S4 which is Cascade to Relay S2 and Input to NC. Lane08 Negative to Lane15 Negative connected as Signal Inputs to Relay S6 which is Cascade to Relay s5 and Input to NC. Relay S2 is selected as Positive and Relay S5 as Negative; common output of S2 and S5 is connected to CH1, CH2 of the oscilloscope respectively. For 2-Unit, SX box ≥ 59 GHz, set the common outputs to CH1, CH3 respectively. Connect the Ref Clock Positive and Negative from CLB to CH3, CH4 of oscilloscope. For 2-Unit, SX box ≥ 59GHz, set the Ref Clock Positive and Negative to CH2 and CH4 respectively.

File name	Configuration details
PCE_Keithley_AIC_x12	Recall this file for Keithley S46T RF Switch and Add-In-Card device type. The below are the configuration details: Lane0 Positive to Lane05 Positive connected as Signal Inputs to Relay A. Lane0 Negative to Lane05 Negative connected as Signal Inputs to Relay B. Lane08 Positive to Lane11 Positive connected as Signal Inputs to Relay C. Lane08 Negative to Lane11 Negative connected as Signal Inputs to Relay D. Common output of relay A, B, C, D is connected to CH1, CH2, CH3, CH4 of the oscilloscope respectively. For 2-Unit, SX box ≥ 59 GHz, set the common outputs to CH1, CH3, CH2 and CH4 respectively.
PCE_Giga_AIC_x16	Recall this file for Gigatronics ASCOR 8000 Series RF Switch and Add-In-Card device type. The below are the configuration details: Lane0 Positive to Lane07 Positive connected as Signal Inputs to Relay S1. Lane0 Negative to Lane07 Negative connected as Signal Inputs to Relay S3. Lane08 Positive to Lane15 Positive connected as Signal Inputs to Relay S4. Lane08 Negative to Lane15 Negative connected as Signal Inputs to Relay S6. Common output of relay S1, S2, S3, S4 is connected to CH1, CH2, CH3, CH4 of the oscilloscope respectively. For 2-Unit, SX box ≥ 59 GHz, set the common outputs to CH1, CH3, CH2 and CH4 respectively.

How to run Base SRIS Tx Test Board tests


This document describes the procedure to run PCIe Base Spec Gen4/Gen5 SRIS Tx Test Board tests using TekExpress PCI Express.

Accessories required


- Gen4/Gen5 Base specification fixture
- SMA-SMP cables
- TCA-SMA 292D / TriMode probes
- AWG7002A or AWG7001A

Capture data signals at sampling rate of 100Gsps/200Gsps with 12.5 M record length. Ensure the PCIE_TX_Toggle_Patterns_v10.0.0.2.exe is installed on AWG-70K series and the recommended probes and real time oscilloscopes are used.

1. In DUT panel, select Specification as BaseSpec and Device Type as SRIS Tx Test Board.

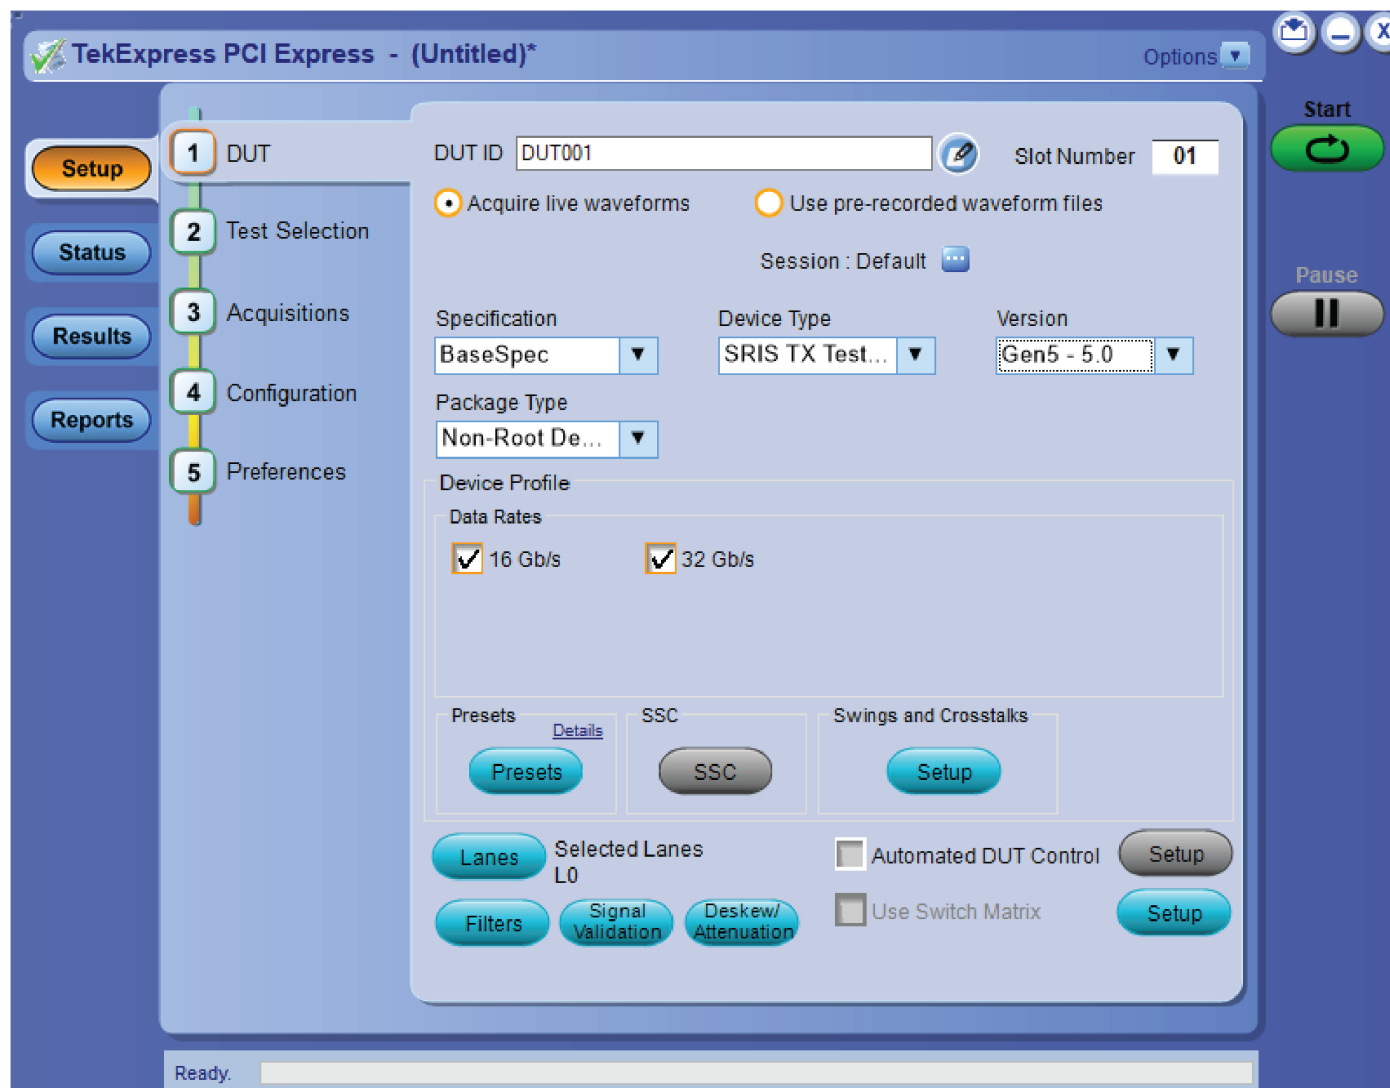

2. If AWG70K is detected then the AWG Clock Setup check box will be enabled in the configuration panel. Click the **Setup** button next to AWG Clock Setup check box. This will bring up the SRIS configuration, with a selection to choose SSC on/Off.

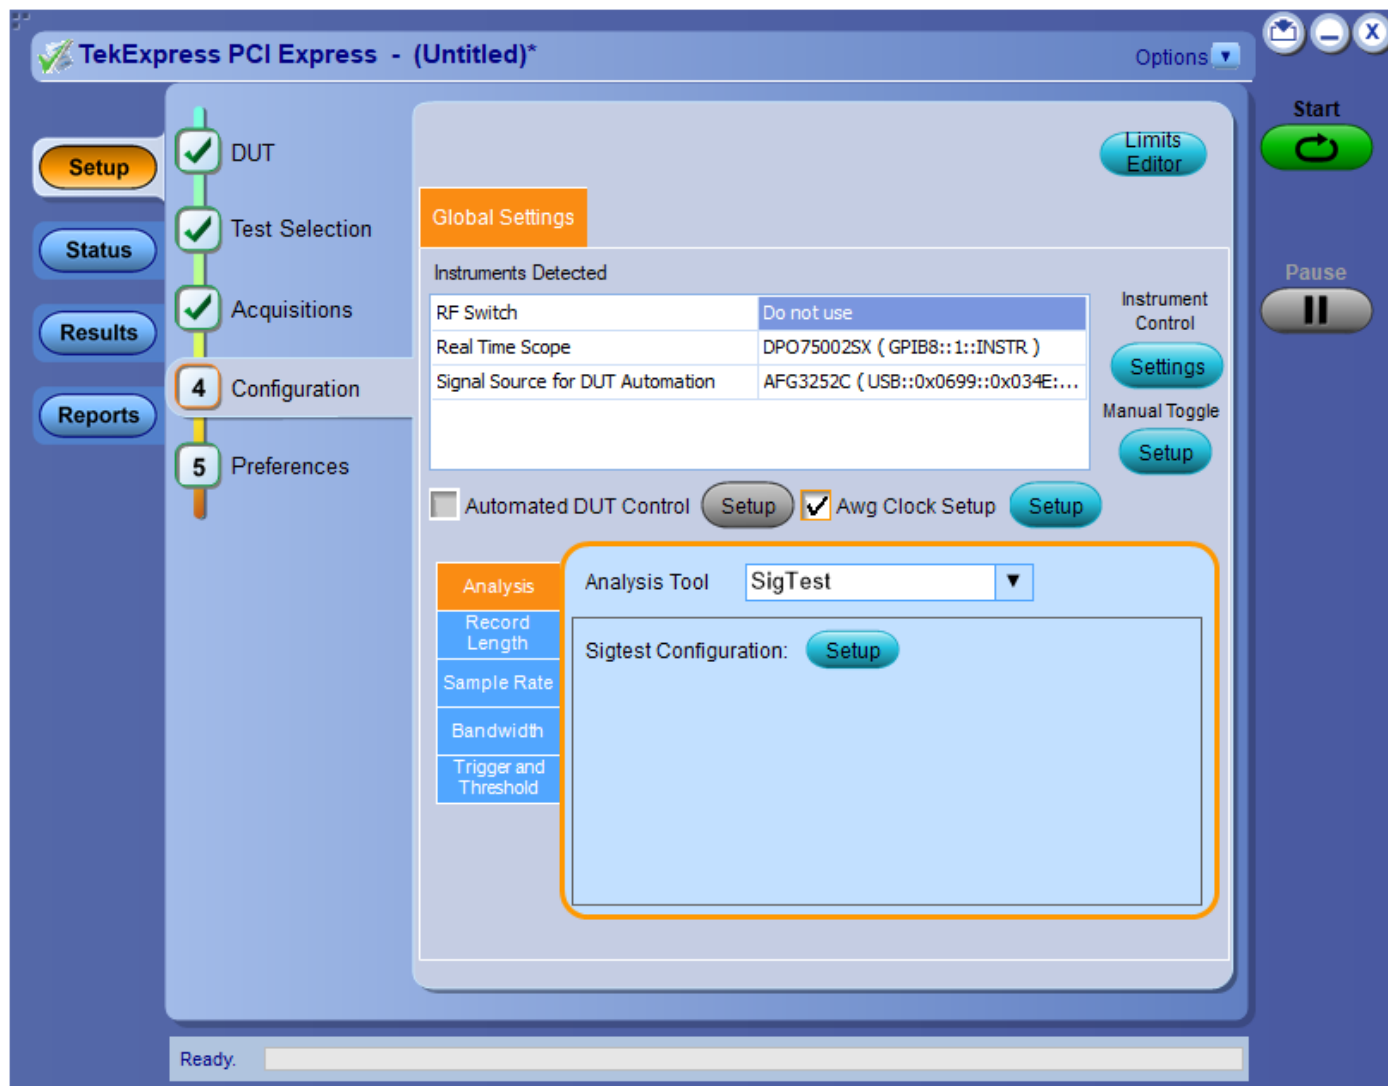

3. Based on the selections of the AWG Clock Setup check box, SSC on/Off selection and different combinations of AWG setup files will be loaded on the AWG. These combinations dictate if an external 100 MHz reference clock (with SSC on/Off) on Ch1 of the AWG will be transmitted. The following AWG files loaded as per configuration for Base specification (Device) and DUT Type SRIS Tx Test Board (Suite) for Gen4 and Gen5.

In Application If user selects the following: Base Specification, SRIS-TX-Test-Board DUT Type and Version Gen4 AND in Configure Panel the following selected...						
Sl.No	Signal Source for DUT Automation	Automated DUT Control Check Box	AWG Clock Setup Check Box	File Recalled from AWG-70000	Recommended Scenario	Comments
1	AWG70001A	Selected	Selected with SSC Off	PCIE_Toggle_Sequence_SRIS.awgpx	NO	Since toggle sequence is generated from CH2 of AWG and this does not have CH2, however if selected application will recall AWG file, we can see the clock source from CH1.
2	AWG70001A	Selected	Selected with SSC On	PCIE_Toggle_Sequence_SRIS_With_SSC.awgpx	NO	
3	AWG70001A	Not Selected	Selected with SSC Off	PCIE_SRIS_Clock_Without_SSC.awgpx	Yes	AWG, CH1 is used as an external clock source without SSC
4	AWG70001A	Not Selected	Selected with SSC On	PCIE_SRIS_Clock_With_SSC.awgpx	Yes	AWG, CH1 is used as an external clock source with SSC
5	AWG70001A	Selected	Not Selected	PCIE_Toggle_Sequence.awgpx	Yes	AWG, CH1 used for 'Automated DUT Control'.
6	AWG70002A	Selected	Selected with SSC Off	PCIE_Toggle_Sequence_SRIS.awgpx	Yes	AWG, CH1 is used as an external clock source without SSC and CH2 is used for 'Automated DUT Control'
7	AWG70002A	Selected	Selected with SSC On	PCIE_Toggle_Sequence_SRIS_With_SSC.awgpx	Yes	AWG, CH1 is used as an external clock source with SSC and CH2 is used for 'Automated DUT Control'.
8	AWG70002A	Not Selected	Selected with SSC Off	PCIE_SRIS_Clock_Without_SSC.awgpx	Yes	AWG, CH1 is used as an external clock source without SSC
9	AWG70002A	Not Selected	Selected with SSC On	PCIE_SRIS_Clock_With_SSC.awgpx	Yes	AWG, CH1 is used as an external clock source with SSC
10	AWG70002A	Selected	Not Selected	PCIE_Toggle_Sequence.awgpx	Yes	AWG, CH1 used for 'Automated DUT Control'.

4. Click **Start** and when the application prompts, power on the Gen4/Gen5 DUT. Ensure that the DUT transmits Gen4/Gen5 selected presets. Analysis will be done with SigTest.