

PCIe6.0 (CEM) Receiver Test Application Help

Register now!

Click the following link to protect your product.

www.tek.com/register



Copyright © 2026, Tektronix, Inc. All rights reserved. Licensed software products are owned by Tektronix or its subsidiaries or suppliers, and are protected by national copyright laws and international treaty provisions. Tektronix products are covered by U.S. and foreign patents, issued and pending. Information in this publication supersedes that in all previously published material. Specifications and price change privileges reserved.

TEKTRONIX and TEK are registered trademarks of Tektronix, Inc.

These are the original instructions in English.

Go to tek.com/eula to read the Tektronix End User License Agreement.



Contacting Tektronix

Tektronix, Inc.
13725 SW Karl Braun Drive
P.O. Box 500
Beaverton, OR 97077
USA

For product information, sales, service, and technical support:

In North America, call 1-800-833-9200.

Worldwide, visit www.tek.com to find contacts in your area.

Contents

Welcome	11
Getting help and support	13
Related documentation	13
Technical support	13
Conventions	13
Getting started	15
Required equipment and accessories	15
Installing the software	16
Operating basics	18
Launch the application	18
Close the application	18
Launch Real-Time Oscilloscope	19
Launch TekRxService	19
Application panels	21
Application panels overview	21
Connections panel	21
Settings panel	22
Help panel	35
Calibrations panel	35
Tests panel	63
Options panel	88
Programmatic interface commands	105
TEKRXTEST:SELECT:HOME	105
TEKRXTEST:SELECT:PCIe6CEM	105
PREF:BERT:IP	105
PREF:RTS:IP	106
CONN:BERT	106
CONN:RTS	106
SETTINGS:TEKRXSERVICE:ANALYSISTIMEOUT	107
SETTINGS:SIGTEST:VERSION	107
SETTINGS:SOCKETSERVER:IP	107
SETTINGS:SOCKETSERVER:LISTENINGPORT	107
SETTINGS:SOCKETSERVER:TIMEOUT	108
SETTINGS:MULTITONESJCAL:ENABLE	108
SETTINGS:MULTITONESJCAL:FREQUENCYCOUNT	108
SETTINGS:MULTITONESJCAL:MAXFREQUENCY	109
SETTINGS:MULTITONESJCAL:MINFREQUENCY	109
SETTINGS:MULTITONESJCAL:POINTS	109

SETTINGS:EYE:ACQUISITIONS.	109
SETTINGS:MULTITONESJCAL:DEFAULT.	110
SETTINGS:MULTITONESJCAL:GENERATE.	110
SETTINGS:TP1:CH1:EXTERNALATTEN.	110
SETTINGS:TP1:CH2:EXTERNALATTEN.	111
SETTINGS:TP2:CH1:EXTERNALATTEN.	111
SETTINGS:TP2:CH2:EXTERNALATTEN.	111
SETTINGS:RESTORE.	112
SETTINGS:RECALL.	112
SETTINGS:SAVE.	112
SETTINGS:RECALL:STATUS.	112
SETTINGS:RESTORE:STATUS.	113
SETTINGS:SAVE:STATUS.	113
TP1CAL:OPEN.	113
TP1CAL:WIZARD:OPEN.	113
TP1CAL:WIZARD:CLOSE.	114
TP1CAL:DELETE.	114
TP1CAL:REPORT.	114
TP1CAL:SAVE.	115
TP1CAL:EQUIP:INIT.	115
TP1CAL:AUTOCAL.	115
TP1CAL:AMPLITUDE:RUN.	115
TP1CAL:PRESET:RUN.	116
TP1CAL:RJ:RUN.	116
TP1CAL:SJ:RUN.	116
TP1CAL:MULTITONESJCAL:.	117
TP1CAL:SEASIMACQ:MODE.	117
TP1CAL:EQUIP:STATUS.	117
TP1CAL:AMPLITUDE:STATUS.	118
TP1CAL:PRESET:STATUS.	118
TP1CAL:RJ:STATUS.	118
TP1CAL:SJ:STATUS.	118
TP1CAL:MULTITONESJCAL:.	119
TP1CAL:AMPLITUDE:SETTING.	119
TP1CAL:RJ:SETTING.	119
TP1CAL:SJ:SETTING.	120
TP1CAL:SAVE:ID.	120
TP1CAL:SAVE:GENERATEDBY.	120
TP1CAL:SAVE:COMMENTS.	120
TP1CAL:ACDC:RUN.	121
TP1CAL:ACDC:STATUS.	121
TP1CAL:ACDC:SETTING.	121
TP1CAL:SJ@210MHz:RUN.	122
TP1CAL:SJ@210MHz:STATUS.	122
TP1CAL:IL:MODE.	122
TP1CAL:MANUAL:IL.	123

TP1CAL:MEASURELOSS:START	123
TP1CAL:MEASURELOSS:STATUS	123
TP2CAL:OPEN	123
TP2CAL:WIZARD:OPEN	124
TP2CAL:WIZARD:CLOSE	124
TP2CAL:DUT:TYPE	124
TP2CAL:SELECT:TP1	125
TP2CAL:DELETE	125
TP2CAL:REPORT	125
TP2CAL:SAVE	125
TP2CAL:EQUIP:INIT	126
TP2CAL:CMI:RUN	126
TP2CAL:ILMEAS:RUN	126
TP2CAL:CTLEANDPRESET:RUN	127
TP2CAL:STRESSEDEYE:RUN	127
TP2CAL:EQUIP:STATUS	127
TP2CAL:CMI:STATUS	128
TP2CAL:ILMEAS:STATUS	128
TP2CAL:CTLEANDPRESET:STATUS	128
TP2CAL:STRESSEDEYE:STATUS	128
TP2CAL:DMI:SETTING	129
TP2CAL:CMI:SETTING	129
TP2CAL:SAVE:ID	129
TP2CAL:SAVE:GENERATEDBY	130
TP2CAL:SAVE:COMMENTS	130
TP2CAL:ILMEASFORDMI:RUN	130
TP2CAL:ILMEASFORDMI:STATUS	130
TP2CAL:STRESSEDEYE:ACQUISITIONS	131
TP2CAL:SEASIMACQ:MODE	131
TP2CAL:DMI:RUN	131
TP2CAL:DMI:STATUS	132
TP2CAL:CTLEANDPRESET:ACQUISITIONS	132
TP2CAL:STRESSEDEYE:SJ	132
TP2CAL:STRESSEDEYE:DMI	133
TP2CAL:STRESSEDEYE:AMPLITUDE	133
TP2CAL:IL:MODE	133
TP2CAL:MANUAL:IL	133
TP2CAL:IL:SCOPEACQS	134
TP2CAL:IL:AVGS	134
TP2CAL:CTLEANDPRESET:CHKPRESET	134
TP2CAL:CTLEANDPRESET:CHKCTLE	135
TP2CAL:STRESSEDEYE:MANUALCALRUN	135
TP2CAL:STRESSEDEYE:EXHAUSTIVESWEEP	135
TP2CAL:STRESSEDEYE:LINEARSWEEP	136
TP2CAL:STRESSEDEYE:EXHAUSTIVE	136
TP2CAL:STRESSEDEYE:STEPSIZE	137

TEST:SELECT:CMI.	137
TEST:SELECT:RJ.	138
LOOPBACK:SELECT:CONFIGURATIONTYPE.	138
LOOPBACK:AAS:EYETHRESHOLDTYPE.	138
LOOPBACK:AAS:DELAYSEARCHTYPE.	139
LOOPBACK:SELECT:PRESETSNAME.	139
LOOPBACK:SELECT:PRESETSPRESHOOT.	139
LOOPBACK:SELECT:PRESETSDEEMPHASIS.	140
LOOPBACK:SELECT:BERTCTLEMODE.	140
LOOPBACK:SELECT:BERTCTLETYPE.	140
LOOPBACK:SELECT:BERTCTLEVALUE.	141
LOOPBACK:SELECT:LFEDFEMODE.	141
LOOPBACK:SELECT:AUTOSEARCHMODE.	141
LOOPBACK:SELECT:AUTOSEARCH.	142
LOOPBACK:AUTOSEARCH:TYPE.	142
JTOLTEST:OPEN.	142
JTOLTEST:WIZARD:OPEN.	143
JTOLTEST:WIZARD:CLOSE.	143
JTOLTEST:JITTERSTEP:HIGHFREQ.	143
JTOLTEST:LOADSTRESS.	143
JTOLTEST:FREQ:DEFAULT.	144
JTOLTEST:RUN.	144
JTOL:REPORT.	144
JTOLTEST:SAVE:ID.	145
JTOLTEST:SAVE:GENERATEDBY.	145
JTOLTEST:SAVE:COMMENTS.	145
JTOLTEST:SAVE.	145
JTOLTEST:RUNSTATUS.	146
JTOLTEST:FREQ.	146
JTOLTEST:PLOT:POINTS.	146
JTOLTEST:SELECT:SJAMPUNITS.	147
JTOLTEST:SELECT:CLOCKTYPE.	147
JTOLTEST:PLOT.	147
JTOLTEST:TABLE.	147
JTOLTEST:SELECT:DUTTYPE.	148
JTOLTEST:BERMEASUREMENT:PATTERN.	148
JTOLTEST:LINKTRAINING:LOOPBACKMODEGEN6.	149
JTOLTEST:LINKTRAINING:BERTINITIALPRESET.	149
JTOLTEST:LINKTRAINING:DUTINITIALPRESET.	149
JTOLTEST:LINKTRAINING:DUTTARGETPRESET.	150
JTOLTEST:LINKTRAINING:LANENUMBER.	150
JTOLTEST:LINKTRAINING:LINKNUMBER.	150
JTOLTEST:LINKTRAINING:STRESSTYPE.	151
JTOLTEST:LINKTRAINING:CTLE.	151
JTOLTEST:LINKTRAINING:DUTPOWERONTYPE.	151
JTOLTEST:LINKTRAINING:SCRIPTLOCATION.	152

JTOLTEST:LINKTRAINING:DUTPOWERDELAY.	152
JTOLTEST:CLOCK:ARCHITECTURE.	152
JTOLTEST:COMMONCLOCK:SKP:GEN12:INTERVAL.	153
JTOLTEST:COMMONCLOCK:SKP:GEN345:INTERVAL.	153
JTOLTEST:COMMONCLOCK:SKP:GEN6:INTERVAL.	153
JTOLTEST:FILTER:SKP.	154
JTOLTEST:INSERT:SKP.	154
JTOLTEST:LINKTRAINING:CTLETYPE.	154
JTOLTEST:LINKTRAINING:CBBAUTORESET.	155
JTOLTEST:LINKTRAINING:CBBPOWERCYCLE.	155
JTOLTEST:LINKTRAINING:CBBPOWERRESET.	155
JTOLTEST:LINKTRAINING:CBBWAITINGTIME.	156
JTOLTEST:LINKTRAINING:POWEROPTIONTYPE.	156
JTOLTEST:LINKTRAINING:ENABLEDUTLOOPBACKAFTERTEST.	156
JTOLTEST:LINKTRAINING:USERPATTERNLOCATION.	157
JTOLTEST:SKP:GEN12:DOUBLESKP.	157
JTOLTEST:SKP:GEN345:DOUBLESKP.	157
JTOLTEST:SKP:GEN6:DOUBLESKP.	158
JTOLTEST:SKP:GEN12:SYMBOLLENGTH.	158
JTOLTEST:SKP:GEN345:SYMBOLLENGTH.	158
JTOLTEST:SKP:GEN6:SYMBOLLENGTH.	159
JTOLTEST:SRNS:SKP:GEN12:INTERVAL.	159
JTOLTEST:SRNS:SKP:GEN345:INTERVAL.	160
JTOLTEST:SRNS:SKP:GEN6:INTERVAL.	160
JTOLTEST:SRIS:SKP:GEN12:INTERVAL.	160
JTOLTEST:SRIS:SKP:GEN345:INTERVAL.	160
JTOLTEST:SRIS:SKP:GEN6:INTERVAL.	161
LEQRXTEST:OPEN.	161
LEQRXTEST:WIZARD:OPEN.	161
LEQRXTEST:WIZARD:CLOSE.	162
LEQRXTEST:DUTTYPE.	162
LEQRXTEST:CLOCKTYPE.	162
LEQRXTEST:SHOW:CONNECTIONDIAGRAM.	163
LEQRXTEST:LINKTRAINING:BERTINITIALPRESET.	163
LEQRXTEST:LINKTRAINING:DUTINITIALPRESET.	163
LEQRXTEST:LINKTRAINING:DUTTARGETPRESET.	163
LEQRXTEST:LINKTRAINING:LINKNUMBER.	164
LEQRXTEST:LINKTRAINING:LANENUMBER.	164
LEQTEST:LINKTRAINING:RPOCALFILE.	164
LEQTEST:LINKTRAINING:CLEARRRPOCALFILE.	165
LEQTEST:LINKTRAINING:APPLYRPO.	165
LEQTEST:LINKTRAINING:RPOMODE.	165
LEQTEST:RUNRPO.	166
LEQRXTEST:LINKTRAINING:LOOPBACKMODEGEN 6.	166
LEQRXTEST:LINKTRAINING:BERTLFEDFEMODE.	166
LEQRXTEST:LINKTRAINING:DFE.	167

LEQRXTEST:LINKTRAINING:DFETYPE.....	167
LEQRXTEST:LINKTRAINING:LFE.....	167
LEQRXTEST:LINKTRAINING:LFETYPE.....	168
LEQRXTEST:LINKTRAINING:CTLETYPE.....	168
LEQRXTEST:LINKTRAINING:POWEROPTIONTYPE.....	168
LEQRXTEST:LINKTRAINING:CBBAUTORESET.....	169
LEQRXTEST:SSC:STATE.....	169
LEQRXTEST:LINKTRAINING:AUTOSEARCHANDTUNECDR.....	169
LEQRXTEST:LINKTRAINING:CBBPOWERCYCLE.....	170
LEQRXTEST:LINKTRAINING:CBBPOWERRESET.....	170
LEQRXTEST:LINKTRAINING:CBBWAITINGTIME.....	170
LEQRXTEST:LINKTRAINING:ENABLEDUTLOOPBACKAFTERTEST.....	171
LEQRXTEST:CLOCK:ARCHITECTURE.....	171
LEQTXTEST:REPORT.....	171
LEQRXTEST:REPORT.....	172
LEQRXTEST:COMMONCLOCK:SKP:GEN12:INTERVAL.....	172
LEQRXTEST:COMMONCLOCK:SKP:GEN345:INTERVAL.....	172
LEQRXTEST:COMMONCLOCK:SKP:GEN6:INTERVAL.....	173
LEQRXTEST:FILTER:SKP.....	173
LEQRXTEST:INSERT:SKP.....	173
LEQRXTEST:SKP:GEN12:DOUBLESKP.....	174
LEQRXTEST:SKP:GEN345:DOUBLESKP.....	174
LEQRXTEST:SKP:GEN6:DOUBLESKP.....	174
LEQRXTEST:SKP:GEN12:SYMBOLLENGTH.....	175
LEQRXTEST:SKP:GEN345:SYMBOLLENGTH.....	175
LEQRXTEST:SKP:GEN6:SYMBOLLENGTH.....	175
LEQRXTEST:SRNS:SKP:GEN12:INTERVAL.....	176
LEQRXTEST:SRNS:SKP:GEN345:INTERVAL.....	176
LEQRXTEST:SRNS:SKP:GEN6:INTERVAL.....	176
LEQRXTEST:SRIS:SKP:GEN12:INTERVAL.....	177
LEQRXTEST:SRIS:SKP:GEN345:INTERVAL.....	177
LEQRXTEST:SRIS:SKP:GEN6:INTERVAL.....	177
LEQRXTEST:LINKTRAINING:USERPATTERNLOCATION.....	178
LEQRXTEST:SSC:STATE.....	178
LEQRXTEST:LINKTRAINING:AUTOSEARCHANDTUNECDR.....	178
LOOPBACK:SELECT:BERTCTLEMODE.....	179
LEQRXTEST:LINKTRAINING:DUTPOWERONTYPE.....	179
LEQRXTEST:LINKTRAINING:DUTPOWERDELAY.....	179
LEQRXTEST:LINKTRAINING:SCRIPTLOCATION.....	180
LEQRXTEST:BERMEASUREMENT:PATTERN.....	180
LEQRXTEST:LINKTRAINING:STRESSTYPE.....	181
LEQRXTEST:LINKTRAINING:CTLE.....	181
LEQRXTEST:LINKTRAINING:ENABLEDUTLOOPBACKAFTERTEST.....	181
LEQRXTEST:RUN.....	182
LEQRXTEST:STATUS.....	182
LEQRXTEST:LINKTRAINING:STATUS.....	182

LEQRXTEST:LINKTRAINING:STOP.....	182
LEQRXTEST:TEST:ADDERROR.....	183
LEQRXTEST:TEST:CURRENTBER.....	183
LEQRXTEST:TEST:CURRENTERRORCOUNT.....	183
LEQRXTEST:TEST:CURRENTTOTALBITS.....	184
LEQRXTEST:TEST:RESULT.....	184
LEQRXTEST:SAVE:ID.....	184
LEQRXTEST:SAVE:GENERATEDBY.....	184
LEQRXTEST:SAVE:COMMENTS.....	185
LEQRXTEST:SAVE.....	185
LEQTXTEST:OPEN.....	185
LEQTXTEST:WIZARD:OPEN.....	186
LEQTXTEST:WIZARD:CLOSE.....	186
LEQTXTEST:SELECT:TP1FILE.....	186
LEQTXTEST:DUTTYPE.....	186
LEQTXTEST:CLOCKTYPE.....	187
LEQTXTEST:SELECT:TEST.....	187
LEQTXTEST:LINKTRAINING:BERTINITIALPRESET.....	187
LEQTXTEST:LINKTRAINING:LINKNUMBER.....	188
LEQTXTEST:LINKTRAINING:LANENUMBER.....	188
LEQTXTEST:LINKTRAINING:DUTPOWERONTYPE.....	188
LEQTXTEST:LINKTRAINING:DUTPOWERDELAY.....	189
LEQTXTEST:LINKTRAINING:SCRIPTLOCATION.....	189
LEQTXTEST:LINKTRAINING:CTLE.....	189
LEQTXTEST:STRESSTYPE.....	190
LEQTXTEST:AMPLITUDE.....	190
LEQTXTEST:APPLYSOFTSQ.....	190
LEQTXTEST:FILTERFILE.....	191
LEQTXTEST:DUTWFMSCALE.....	191
LEQTXTEST:LOOPBACKRUN.....	191
LEQTXTEST:DUTID.....	192
LEQTXTEST:CLEARALL.....	192
LEQTXTEST:RUN.....	192
LEQTXTEST:STATUS.....	192
LEQTXTEST:LINKTRAINING:STATUS.....	193
LEQTXTEST:LINKTRAINING:STOP.....	193
LEQTXTEST:SAVE:ID.....	193
LEQTXTEST:SAVE:COMMENTS.....	194
LEQTXTEST:SAVE:GENERATEDBY.....	194
LEQTXTEST:LINKTRAINING:CTLETYPE.....	194
LEQTXTEST:INITIALPRESET.....	195
LEQTXTEST:SELECTPRESET.....	195
LEQTXTEST:LINKTRAINING:CBBAUTORESET.....	195
LEQTXTEST:LINKTRAINING:CBBPOWERCYCLE.....	196
LEQTXTEST:LINKTRAINING:CBBPOWERRESET.....	196
LEQTXTEST:LINKTRAINING:CBBWAITINGTIME.....	196


LEQTXTEST:LINKTRAINING:POWEROPTIONTYPE..... 197

LEQTXTEST:SOFTWAREQTYPE <0/1>..... 197

LOOPBACK:SELECT:PATTERNNTYPE..... 197

Welcome

Welcome to the PCIe6.0 (CEM) TekRxTest application. This application performs the test as per the PCI Express Card Electromechanical Specification 0.7.

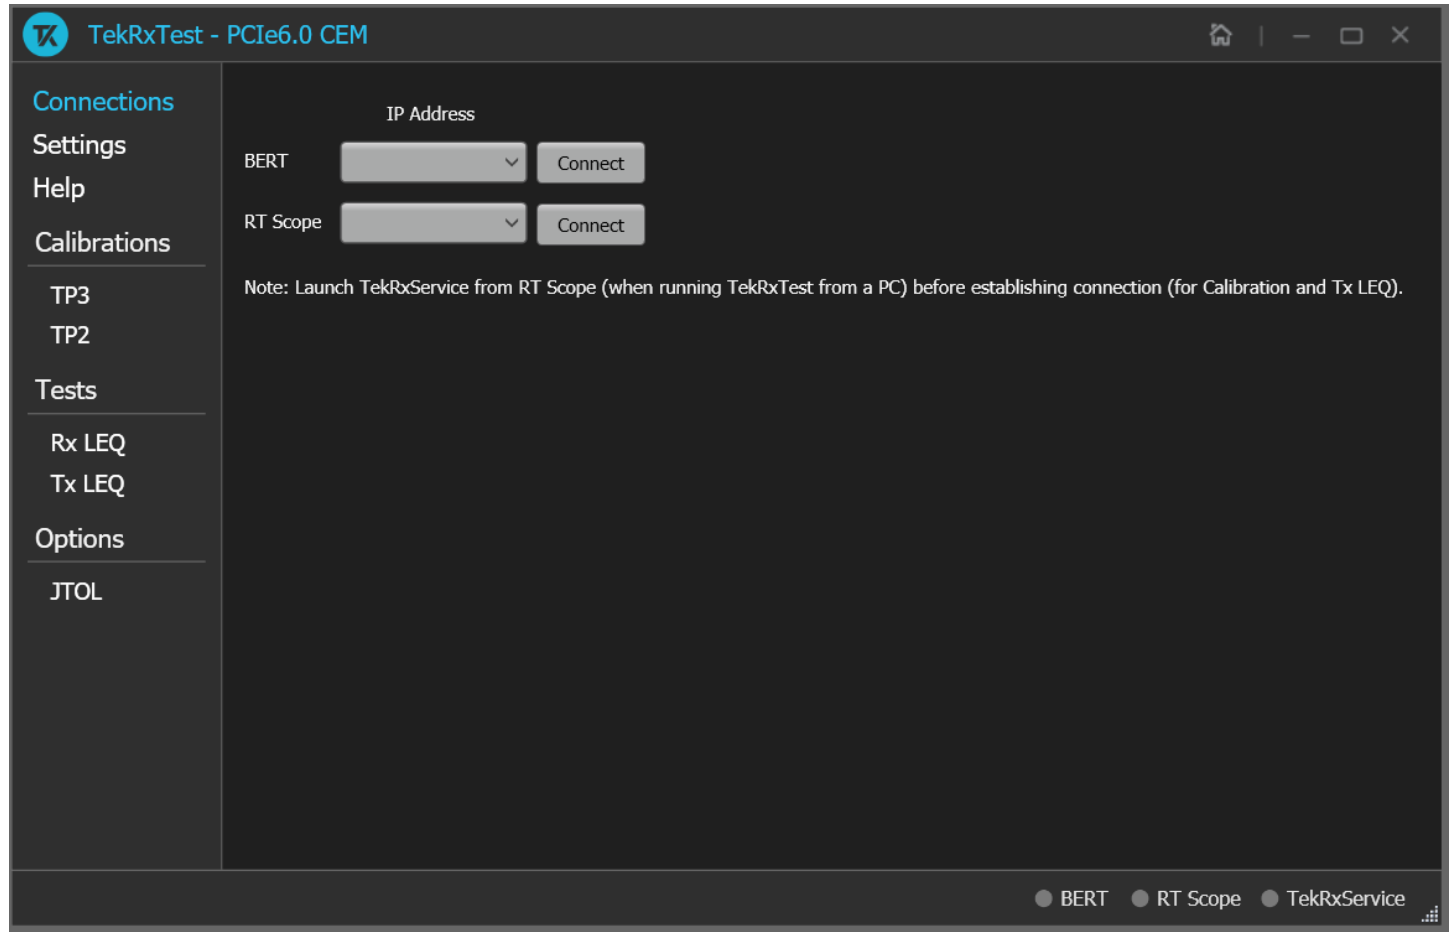

Connections panel

Key features and benefits

- Automated Calibration, Link Training, and Compliance Testing.
- Receiver JTOL test for AIC / System DUT.
- Jointly with Anritsu BERT MP1900A series, the receiver solution provides the tools and flexibility required to visualize and control the impairments, observe real-time eye performance for PCIe Gen6.0 devices.
- Reliable and accurate results reduce the test execution time and minimize the skill-set required to perform calibration and testing.

Getting help and support

Related documentation

The following documentation is available as part of the PCIe6.0 (CEM) test application.

Product documentation

Item	Purpose	Location
Application Help	Application operation and User Interface details	Help panel of the application

See also

[Technical support](#) (on page 13)

Technical support

Tektronix values your feedback on our products. To help us serve you better, please send us your suggestions, ideas, or comments on your application or Real Time Oscilloscope. Contact Tektronix through mail, telephone, or the Web site. See Contacting Tektronix on page 0 at the front of this document for contact information.

When you contact Tektronix Technical Support, please include the following information (be as specific as possible):

General information

- All instrument model numbers
- Hardware options, if any
- Modules used
- Your name, company, mailing address, phone number, and FAX number
- Please indicate if you would like to be contacted by Tektronix about your suggestion or comments.

Application specific information

- Software version number
- Description of the problem such that technical support can duplicate the problem
- If possible, save the setup files for all the instruments used and the application

Conventions

Help uses the following conventions:

- The term "Application", "Software", and "PCIe6.0 (CEM)" refers to the TekRxTest - Application.
- The term "DUT" is an abbreviation for Device Under Test.
- The term "select" is a generic term that applies to the two methods of choosing a screen item (button, control, list item): using a mouse or using the touch screen.

Icon descriptions

Icon	Meaning
	This icon identifies important information.
	This icon identifies conditions or practices that could result in loss of data.
	This icon identifies additional information that will help you use the application more efficiently.

Getting started

Required equipment and accessories

Item	Vendor	Type	R/O	Qty	Description	Notes
DPS75004SX	Tektronix	Equipment	Required	1	Dual-Stack 50 GHz Sx oscilloscope	50 G or better
DPO7RFK2	Tektronix	Tek accessory	Required	2	Attenuator kit	Attenuator kit + DC blocks
103047400	Tektronix	Tek accessory	Required	2	Connector savers (1.85 mm)	1.85 mm oscilloscope channel input connection
Anritsu MP1900A*	Anritsu	3 rd party equipment	Required	1	Bit Error Rate Tester (BERT)	Configuration provided by 3 rd party
DJA	Tektronix	Equipment SW option	Required	1	DPOJET advanced option	DPOJET advanced Jitter, Eye and Timing Analysis SW option
SDLA64	Tektronix	Equipment SW option	Required	1	Serial Data Link Analysis (SDLA) software	Embedding/De-embedding/s-parameter filter generation/ Receiver Virtualization and Analysis Software
PMCABLE1M	Tektronix	Tek accessory	Required	2	Cable pair; 2.92-to-2.92 mm, straight, 1.5 ps phase-matched, 40 GHz	Equipment connection to fixtures and DUT
174-6663-01	Tektronix	Tek accessory	Required	1	Cable pair; 2.92-to-2.92 mm, straight, 1.5 ps phase-matched, 500 mm, 40 GHz	Signal connection between oscilloscope and BERT for Tx LEQ
174-6666-01	Tektronix	Tek accessory	Required	2	Cable pair; SMA-to-SMA, Right Angle-Right Angle, 500 mm	Signal connection between oscilloscope and BERT for Tx LEQ and Trigger
174-6659-01	Tektronix	Tek accessory	Required	1	Cable pair; SMA - SMP cable pair	Refclk connection between DUT and BERT
MPR40M	Fairview Microwave	3 rd party	Required	2	Power divider	Split signal from DUT Tx to the oscilloscope and Error Detector
C7035	CentricRF	3 rd party	Optional	4	Right Angle Male-Female 2.92 mm adapter	Cable management

Item	Vendor	Type	R/O	Qty	Description	Notes
C7049	CentricRF	3 rd party	Required	3	2.92 mm Male to 2.92 mm Male adaptor	Power divider output to oscilloscope input
Redriver	3 rd party	3 rd party equipment	Optional	1	Active Gen 6 Redriver (back channel equalization)**	High loss back channels (DUT Tx to Error Detector) may need EQ
PowerUSB - Basic	PowerUSB	3 rd party	Optional	1	Power USB Power Strip	Automate DUT power cycle
TF-PCIE6-CEM-X16	Tektronix or PCI-SIG	Test fixtures	Required	1	Gen 6 CEM Test fixtures***	Tektronix fixtures are not officially approved by PCI-SIG
RXSW-NLP-PCIE6BC	Tektronix	SW option	Required	1	PCIe Gen 6 Receiver software	PCIe Gen 6 Rx BASE and CEM automation software - Node-Locked; Permanent
RXSW-NL1-PCIE6						PCIe Gen6 BASE and CEM Rx test software - Node Locked, Time Based, 1 year
RXSW-FLP-PCIE6BC						PCIe Gen 6 Rx BASE and CEM automation software - Floating; Permanent
RXSW-FL1-PCIE6						PCIe Gen 6 BASE and CEM Rx test software - Floating, Time Based, 1 year

* Configuration for BERT provided by 3rd party vendor

** Another matched pair of cables (e.g. 174-6663-xx) will be required if the Active redriver is used for Rx or Tx LEQ

*** Gen 6 CEM Test Fixtures are not backwards compatible for Gen3 & Gen4 CEM Rx

Installing the software

Complete the following steps to download and install the latest PCIe6.0 (CEM) TekRx test application.

1. Go to www.tek.com.
2. Click **Support**. In the Support menu, select Software Downloads and enter **PCIe6.0 (CEM) Rx** in the MODEL OR KEYWORD field and click **SEARCH**.

Datasheets, Manuals, and Software Downloads

While we're happy to "talk tech" with you all day long, we know you're in a hurry.

So we've made it easy for you to download product manuals, datasheets and downloadable software which includes firmware, drivers, etc. for all our current products, and many discontinued products as well. Just tell us which product you're using, and we'll provide you with list of latest documents and resources that you can download.

Enter Model:

PCIe6.0 (CEM) Rx

✓ Search by Product Category (optional)

SEARCH

3. Select the latest version of the software and follow the instructions to download.
4. Copy the executable file into the instrument you wish to install the software (Real-time oscilloscope or PC).
5. Follow the installation instruction that is available in the website. The software is installed at C:\Program Files\Tektronix\BERTScope\RxTest60
6. Double click the shortcut icon on the desktop to launch the application.
 - The TekRx test application can be installed on a Tektronix real-time oscilloscope or a PC (optional).
 - You must install the TekRxService and SigTest application in the real-time oscilloscope to successfully connect the application with the real-time oscilloscope.

Operating basics

Launch the application

To launch the test application, double click the shortcut icon **TekRxTest** on the desktop and select **PCIe6.0 (CEM)** in the application window.



TekRxTest application window


Close the application

To exit the application, click  on the application title bar. Follow on-screen instructions to save the unsaved session or test setup.

NOTE: Using other methods to exit the application may result in abnormal termination of the application.

Launch Real-Time Oscilloscope

The TekVISA Socket Server application on the oscilloscope provides the necessary connectivity between the TekRxTest application and scope. Although it is launched in the background when the scope boots up and the socket is initialized for communication, it is recommended to verify the status by clicking on the **Desktop Tray > TekVISA LAN Server Control** as shown in the image below. If it is ready to exchange data, then a wizard would appear as in the below image.

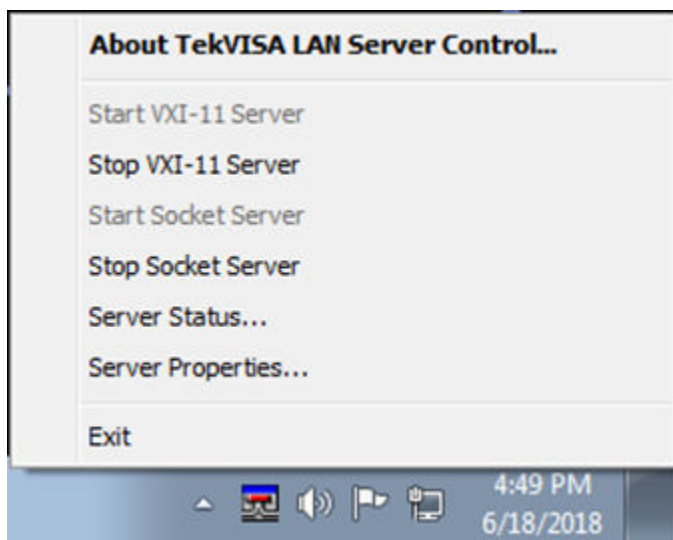


Launch Real-Time Oscilloscope

Note: In the unlikely event when the socket is not initialized, the process can be started by clicking on “Start Socket Server” which gets enabled during such a scenario.

Launch TekRxService

The PCIe6.0 (CEM) TekRxTest application interfaces with the oscilloscope for data acquisition, analysis and data retrieval utilizing TekRxService application. This software module should be launched at the time of initiating the TekRxTest application.

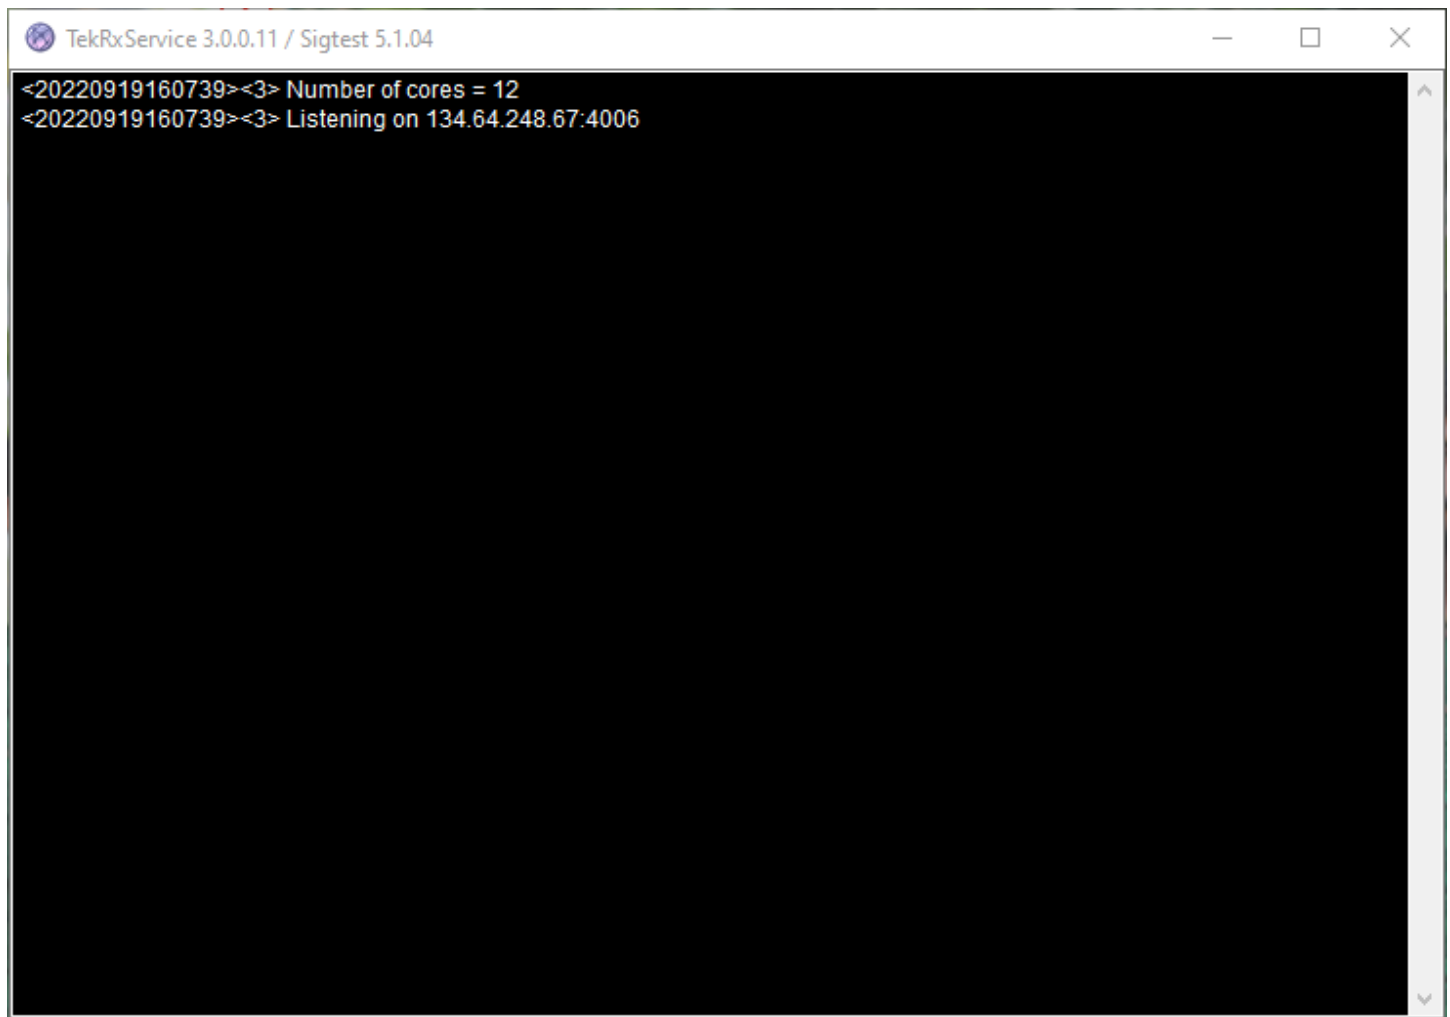

TekRxService application window

NOTE: TekRxService has to be launched if the application is being run on an external PC. To launch the application, double click the TekRxService batch file shortcut icon in the desktop of the real-time oscilloscope.

Application panels

Application panels overview


The PCIe6.0 (CEM) TekRxTest application uses panels to group the configurations and settings. Click on any panel to configure the associated settings. A panel may have one or more tabs that lists the selections available in that panel. Controls in a tab may change depending on the settings made in the same tab or another tab.

Application panels overview

Parameter	Description
Connections	This panel displays the real-time oscilloscope and BERT connection settings. You can connect to a real-time oscilloscope and BERT by entering the IP address of the instruments.
Settings	This panel allows configuring various settings for the Components, and TP2 Calibration.
Help	This panel displays the application help.
Calibrations	This panel allows you to configure the calibration parameters for TP3/TP2 and save the results.
Tests	This panel allows you to configure the Rx/Tx LEQ test settings and view the results.
Options	This panel allows you to configure the JTOL test settings and view the results.

Connections panel

The connections panel allows you to connect to a real-time oscilloscope and BERT with the PCIe6.0 (CEM) TekRxTest application. Enter the IP address of the instruments and click **Connect** to establish the connection.

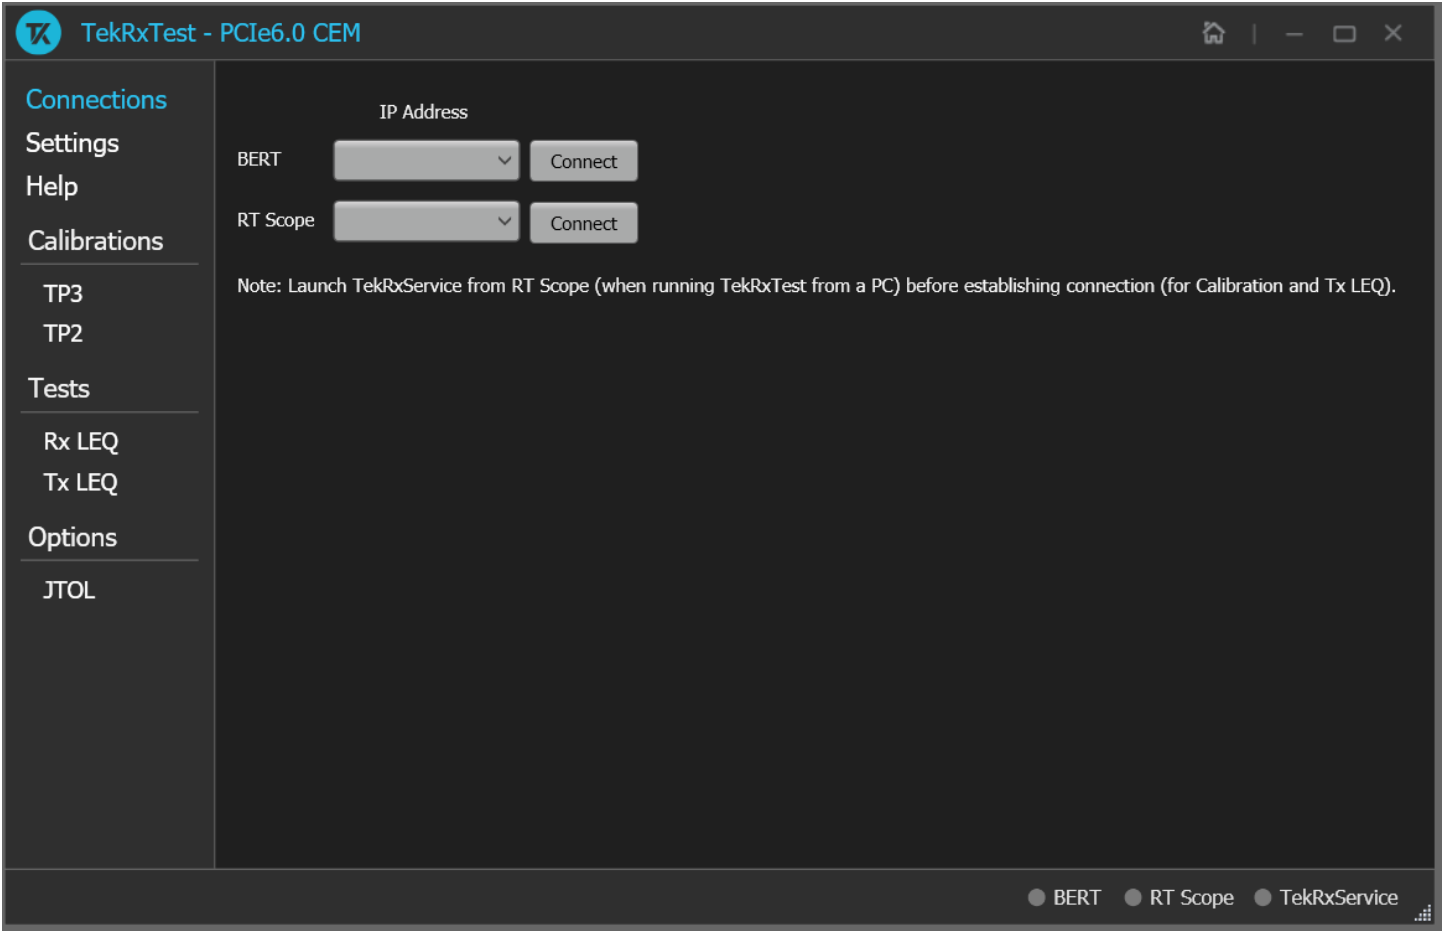


Connections panel

Connections panel

Connections	Description
BERT	Enter the BERT IP address in the address field and click Connect . When the BERT is connected successfully, the circle next to BERT in the right end corner turns green.
RT Scope	Enter the RT Scope IP address in the address field and click Connect. When the RT Scope is connected successfully, the circle next to RT Scope and TekRxService in the right end corner turns green. Once the RT Scope connection is established, the application automatically identifies oscilloscope model. Consequently, the 'Connection Diagram' wizard will display setup figure with DPO70000SX/DX Oscilloscope or with DPO714AX Oscilloscope for TP1/TP2/LEQ Tx tests. NOTE: Before you click Connect, if the TekRxTest application is running on an external PC, make sure to launch the TekRxService in the real-time oscilloscope.

Settings panel

This panel allows you to configure the settings for instruments, calibrations, and remote access. Click any tab to configure the associated settings.

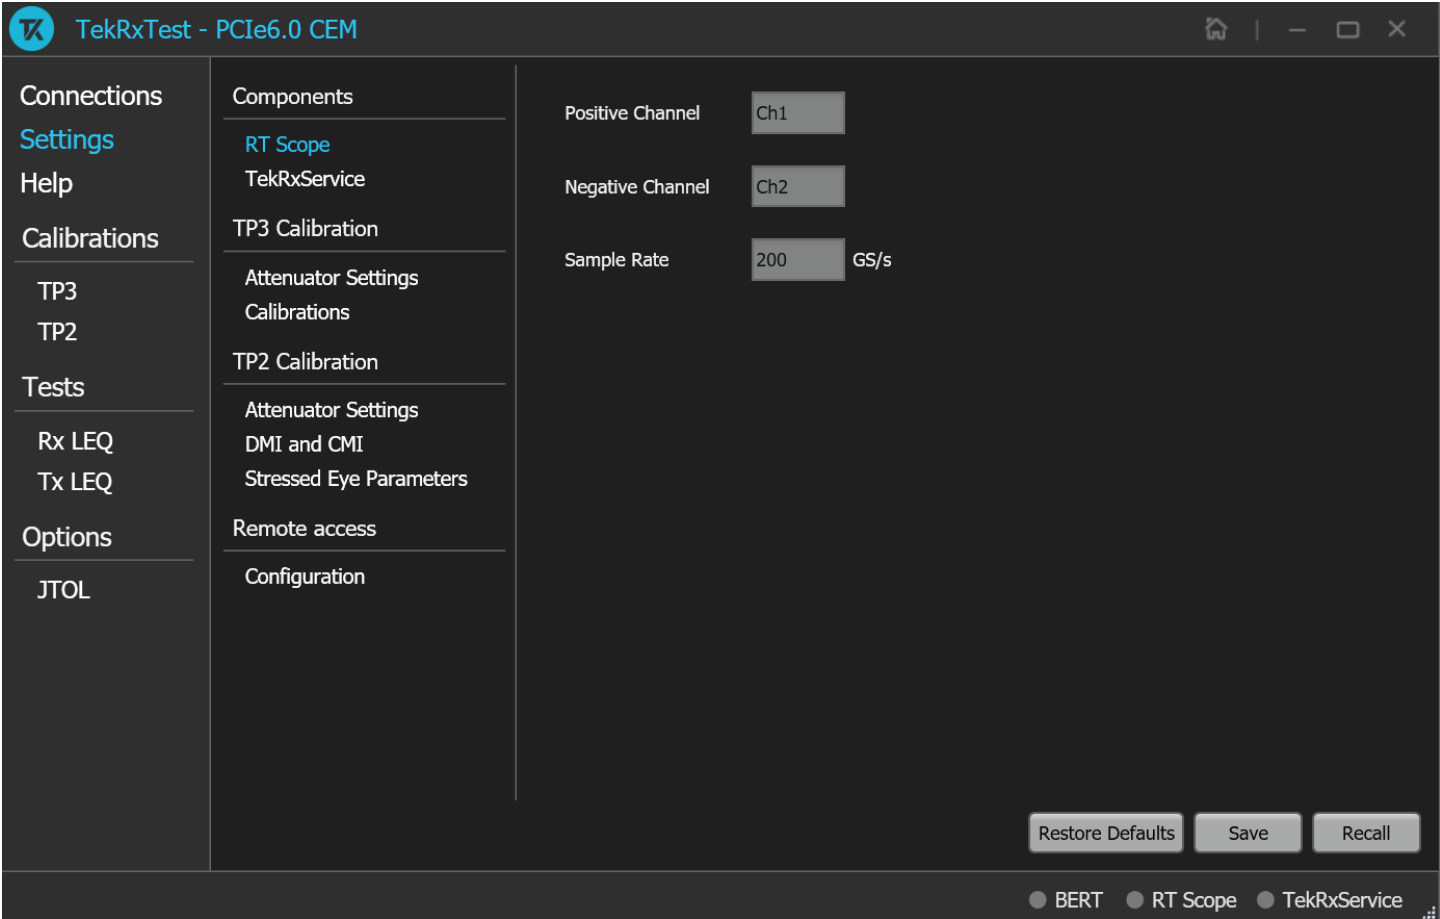


Settings panel

Settings panel configurations

Item	Description
Restore Defaults	Restores the application with default settings.
Save	Saves the current test setup.
Recall	Recalls the saved test setup.

Components settings

The components settings display the parameters for RT Scope and TekRxService.

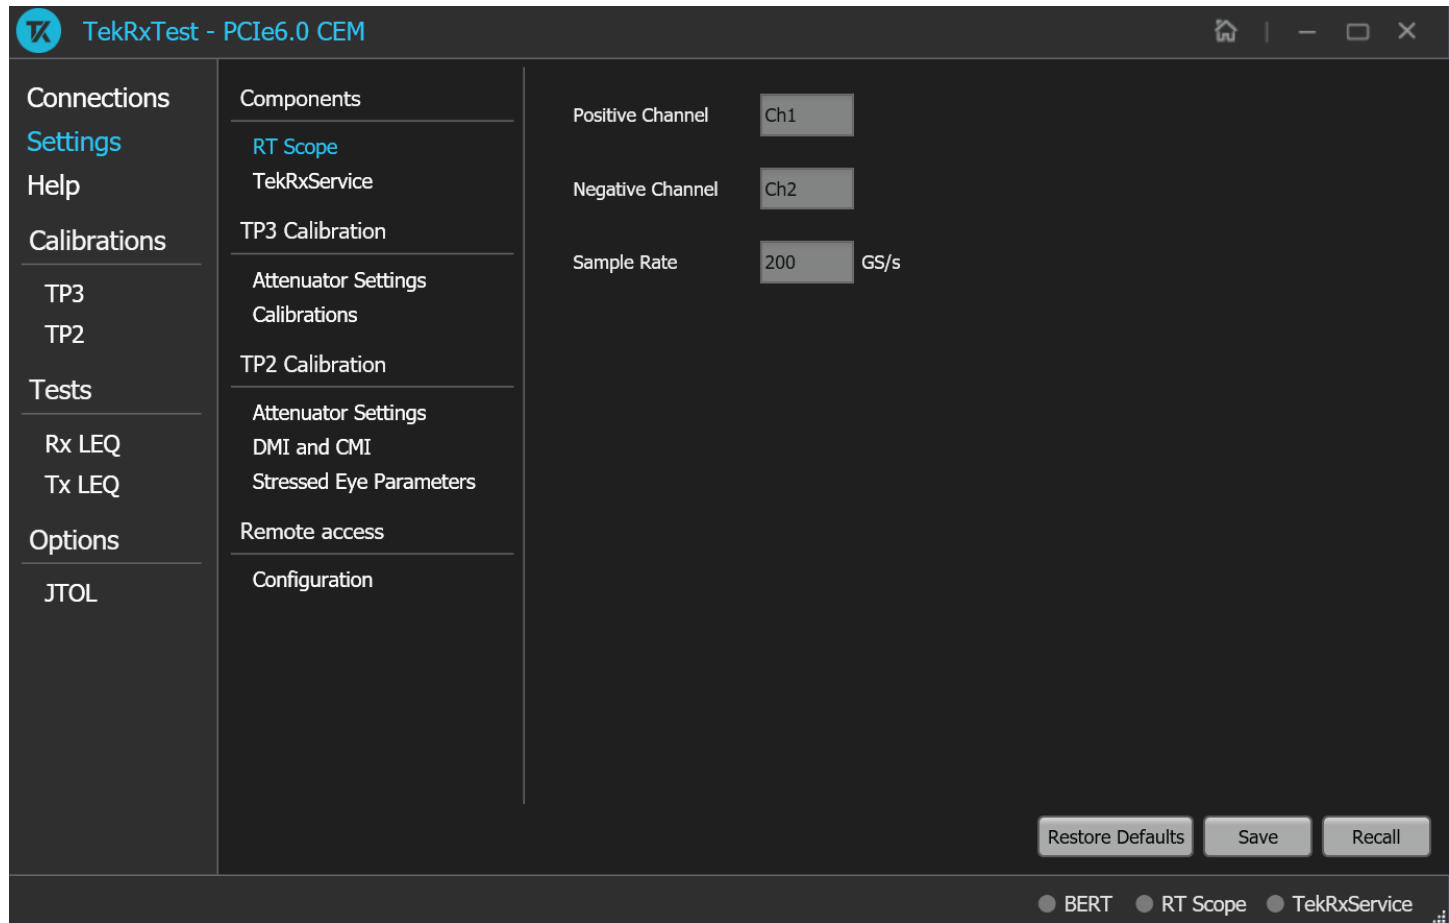

Settings Panel

Components: RT Scope

Parameter	Description
Positive Channel	Select the generator data positive channel from BERT.
Negative Channel	Select the generator data negative channel from BERT.
Sample Rate	Displays the RT Scope sample rate in GS/s. The Sample Rate automatically updates to .

TkTekRxTest - PCIe6.0 CEM

Connections

Settings

Help

Calibrations

TP3

TP2

Tests

Rx LEQ

Tx LEQ

Options

JTOL

Components

RT Scope

TekRxService

TP3 Calibration

Attenuator Settings

Calibrations

TP2 Calibration

Attenuator Settings

DMI and CMI

Stressed Eye Parameters

Remote access

Configuration

Analysis Time Out

300

s

Sigtest Version

6.1.16

Seasim Version

2.0.104e

Restore Defaults

Save

Recall

BERT


RT Scope

TekRxService


Components : TekRxService

TP3 Calibration

The TP3 calibration tab allows you to configure the channel settings including the attenuators and component de-embedding, multi-tone calibration.

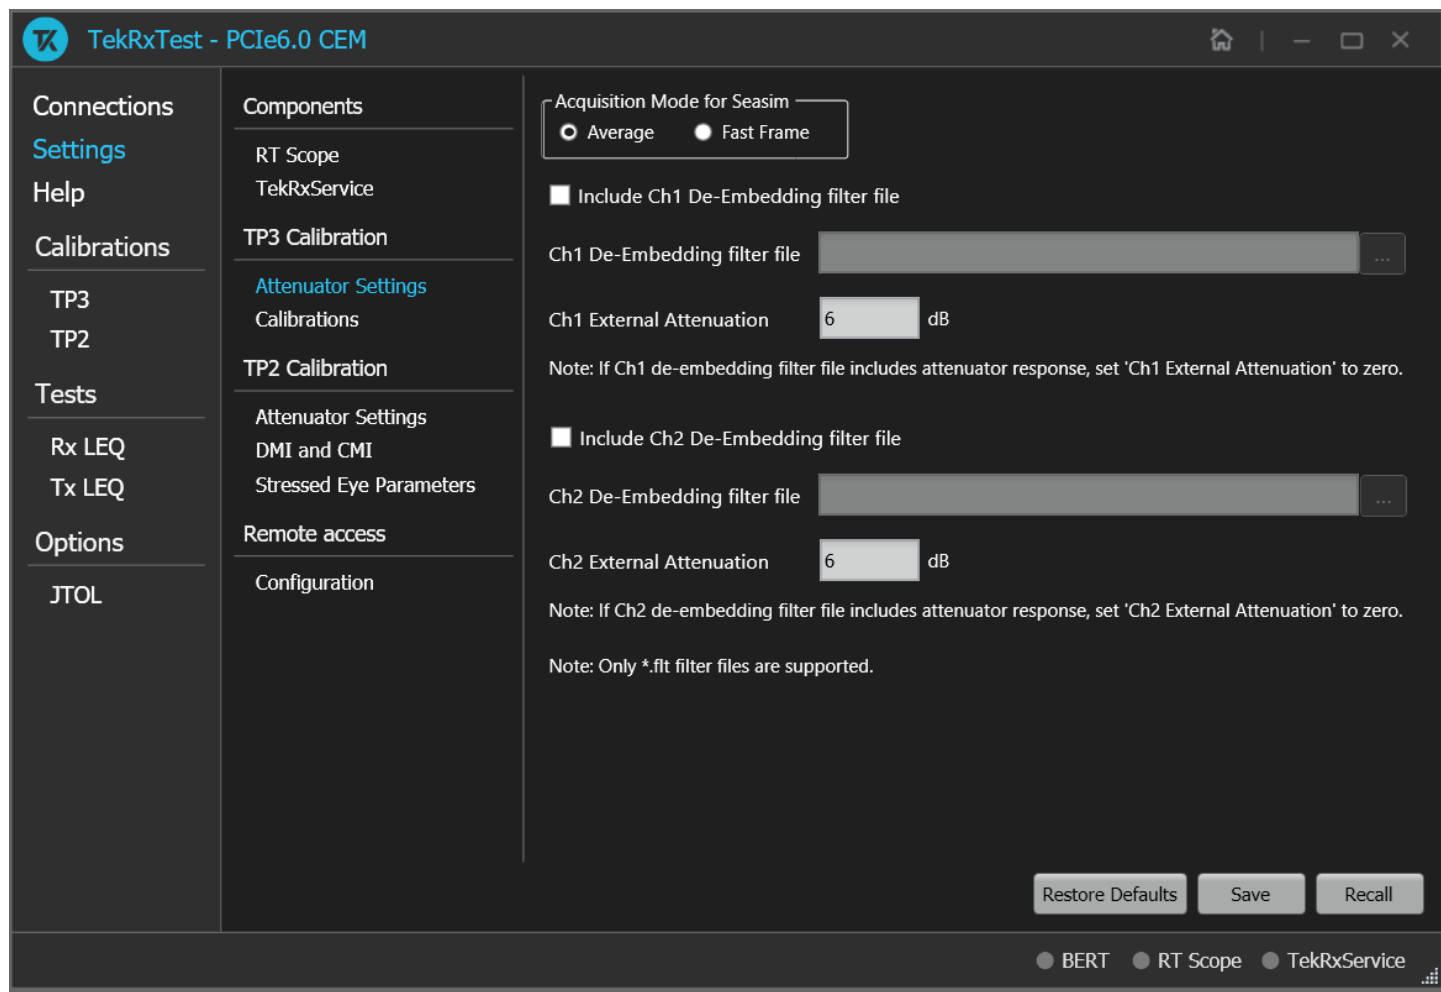

TP3 Calibration: Attenuator Settings (Average)

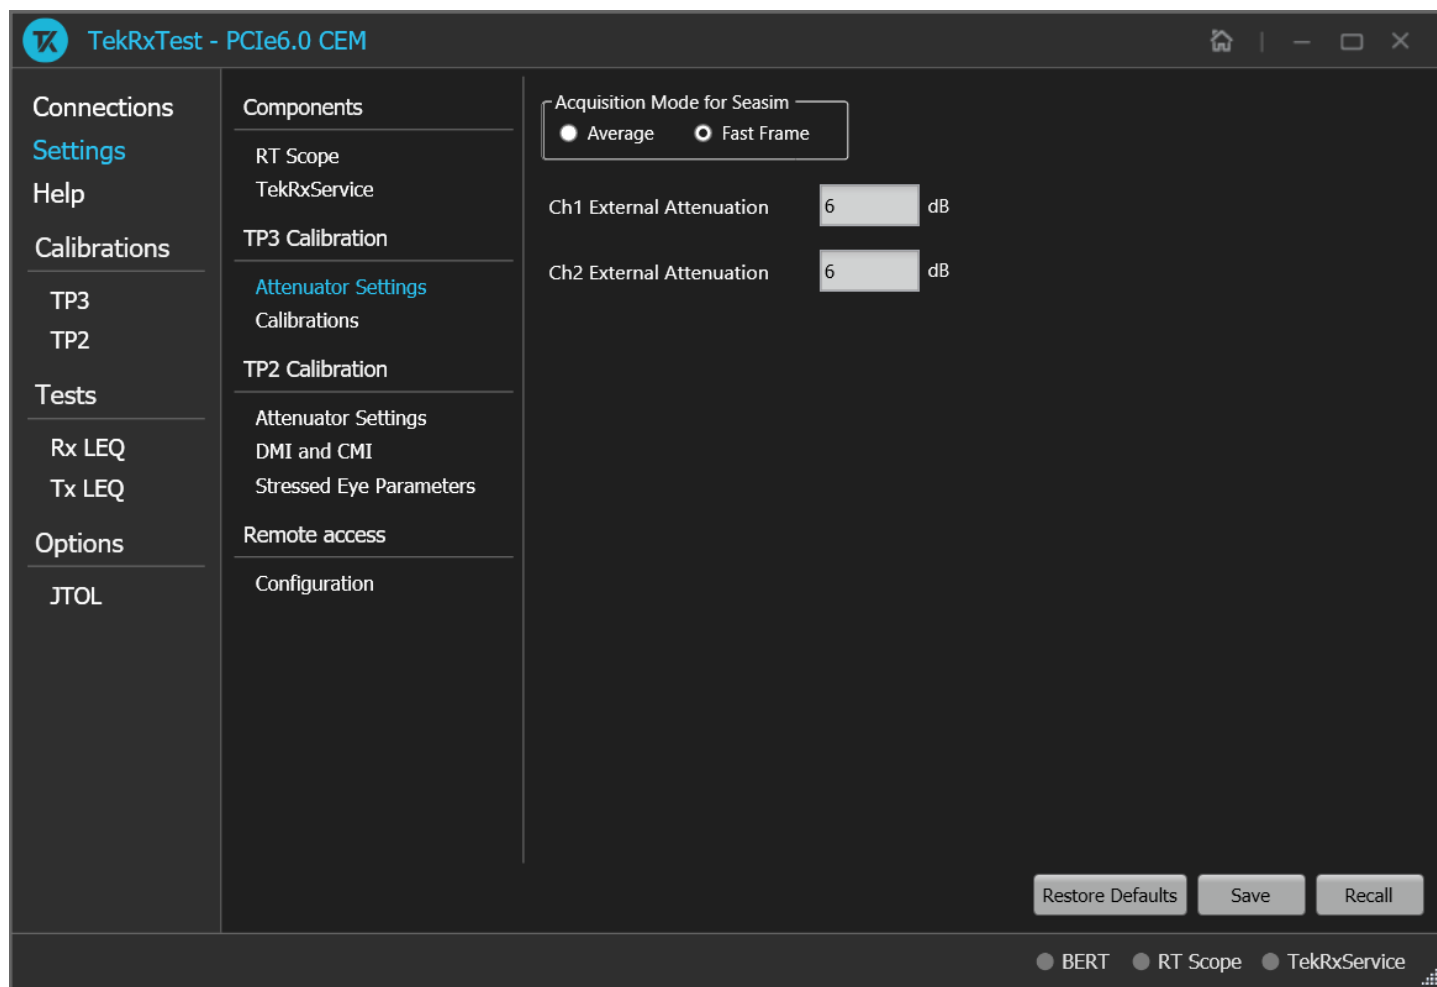

TP3 Calibration: Attenuator Settings (Fast Frame)


Parameter	Description
Acquisition Mode for Seasmim	Select the required acquisition mode for seasmim. - Average - Fast Frame
Include Ch1 De-Embedding filter file	Enable to apply Ch1 de-embedding filter file.
Ch1 De-Embedding filter file	Click to browse and navigate to the path and select the required Ch1 de-embedding filter file.
Ch1 External Attenuation	Enter the Ch1 external attenuation value in dB.
Include Ch2 De-Embedding filter file	Enable to apply Ch2 de-embedding filter file.
Ch2 De-Embedding filter file	Click to browse and navigate to the path and select the required Ch2 de-embedding filter file.
Ch2 External Attenuation	Enter the Ch2 external attenuation value in dB.

TP3 Calibration: Calibrations


Parameter	Description
Amplitude	Displays the calibration target for generator amplitude source.
RJ	Displays the calibration target for random jitter source.
SJ @ 100 MHz	Displays the calibration target for sinusoidal jitter source @ 100 MHz.
Multi-tone Calibration	Select to enable the multi-tone calibration. It displays the calibration settings for multiple tones.
Frequency Settings:	Frequencies at which the SJ calibration needs to be performed for JTOL Test.
Frequency (MHz)	Displays the table of frequencies in MHz for which Multi-tone calibration is to be performed.
Lower Amplitude Limit (UI p-p)	Displays the table of lower amplitude limit values at which SJ calibration starts for that frequency.
Higher Amplitude Limit (UI p-p)	Displays the table of higher amplitude limit values at which SJ calibration ends for that frequency.
Min Frequency	Enter the minimum frequency value.
Max Frequency	Enter the maximum frequency value.
# Frequencies	Enter the desired number of frequencies within the specified range.
# Points	Enter the desired number of points used for calibration.
Generate	Click to view the table populated with the frequencies.
Default	Click to view the table populated with default list of frequencies.

TP2 Calibration


The TP2 calibration tab allows you to configure the Attenuator settings, DMI and CMI calibration and Stressed Eye Parameters.

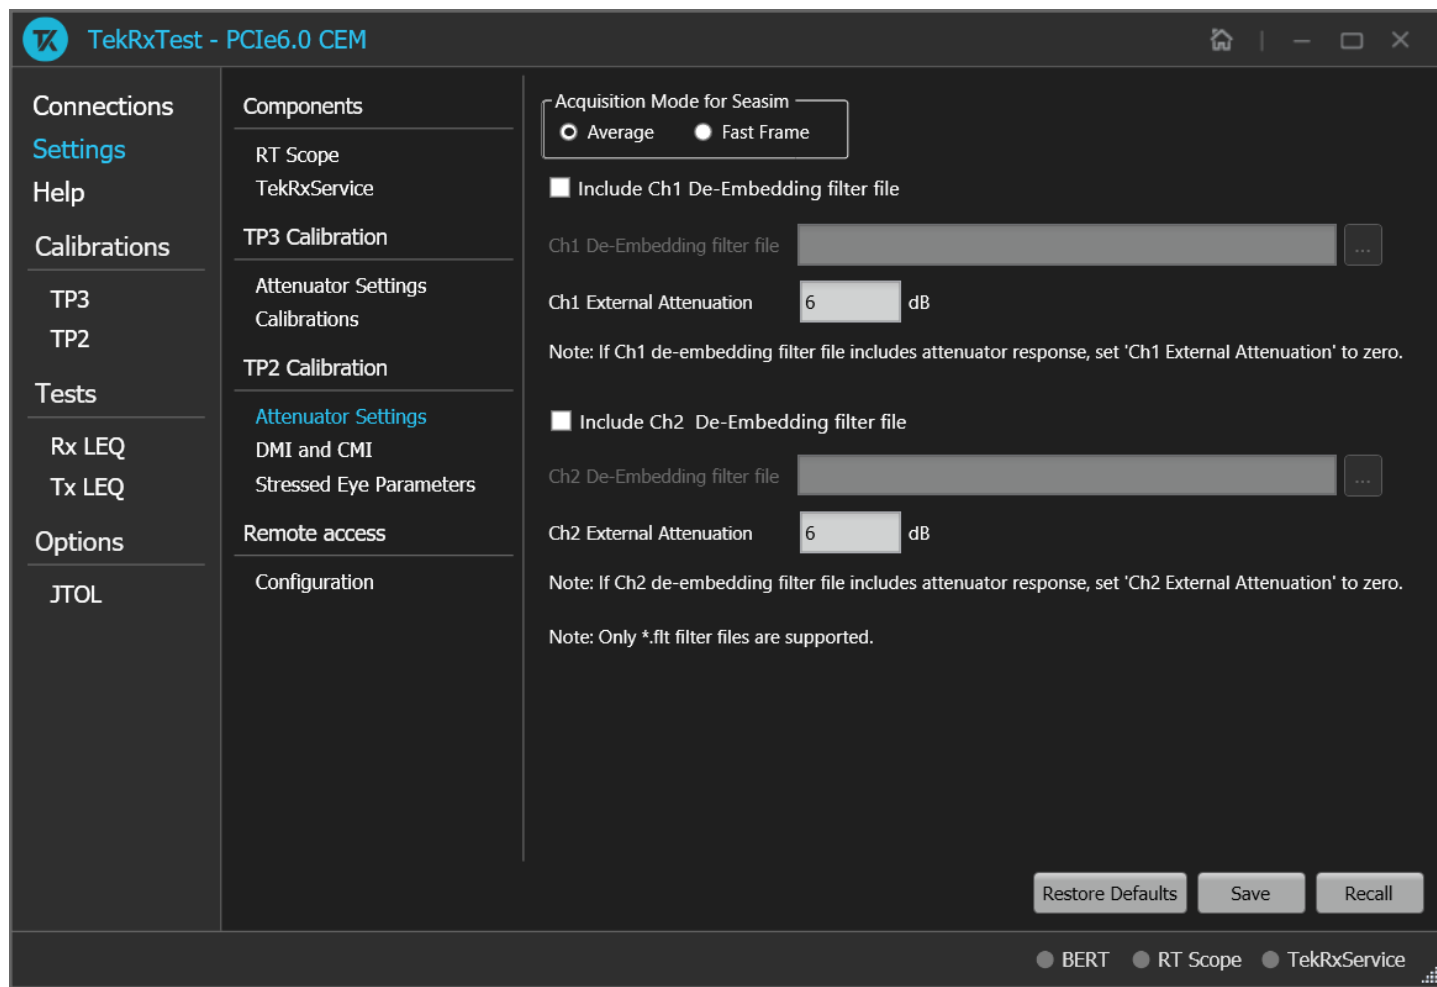

TP2 Calibration: Attenuator Settings (Average)

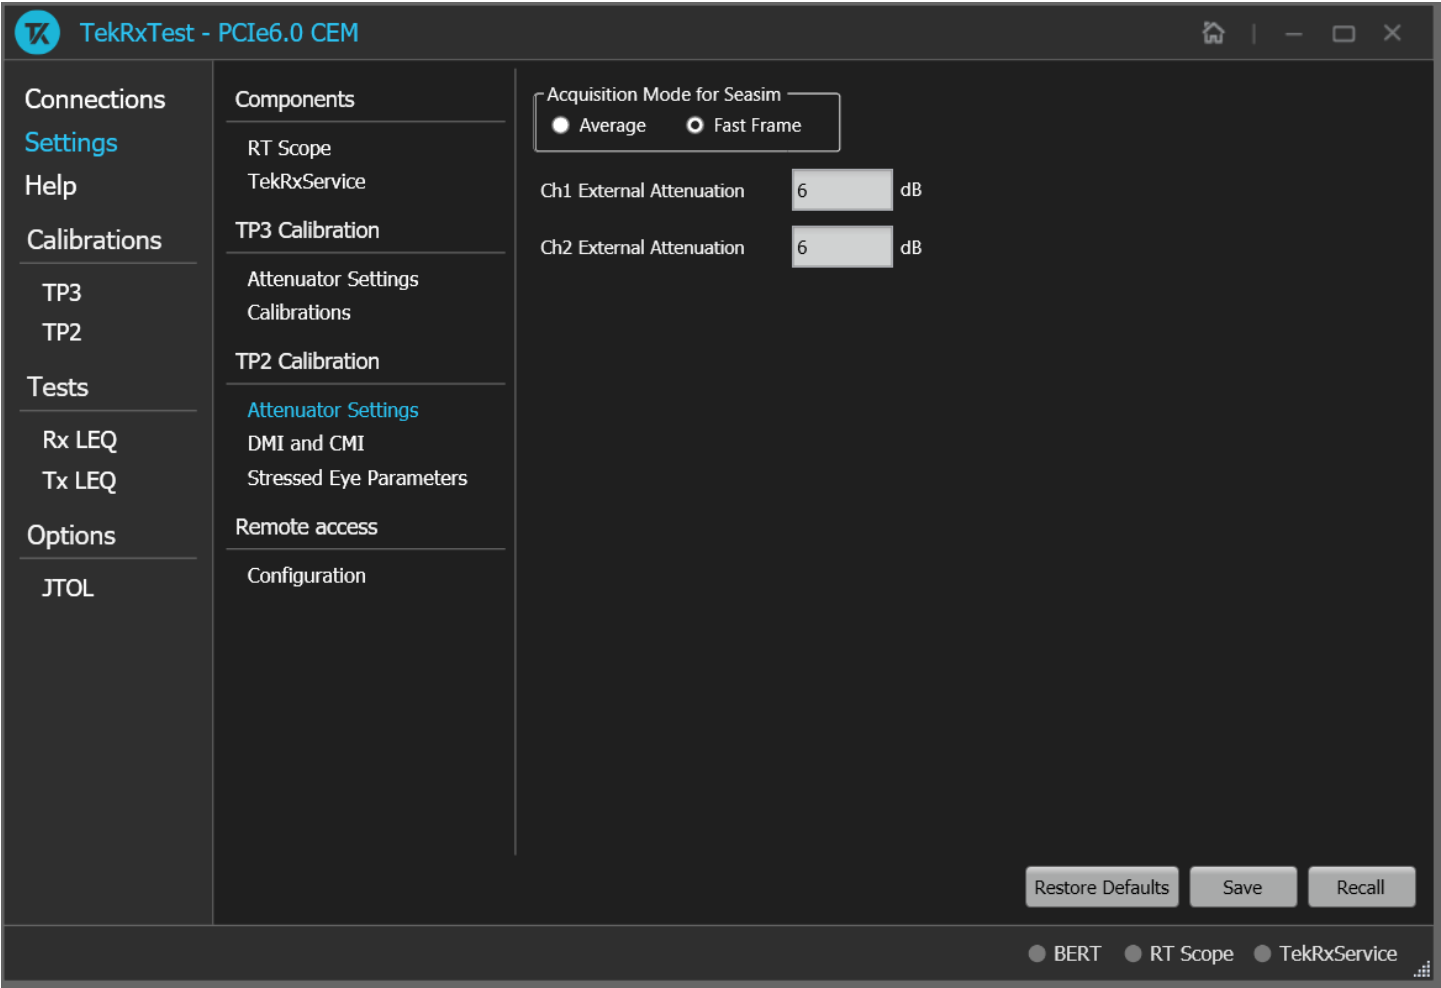


TP2 Calibration: Attenuator Settings (Fast Frame)

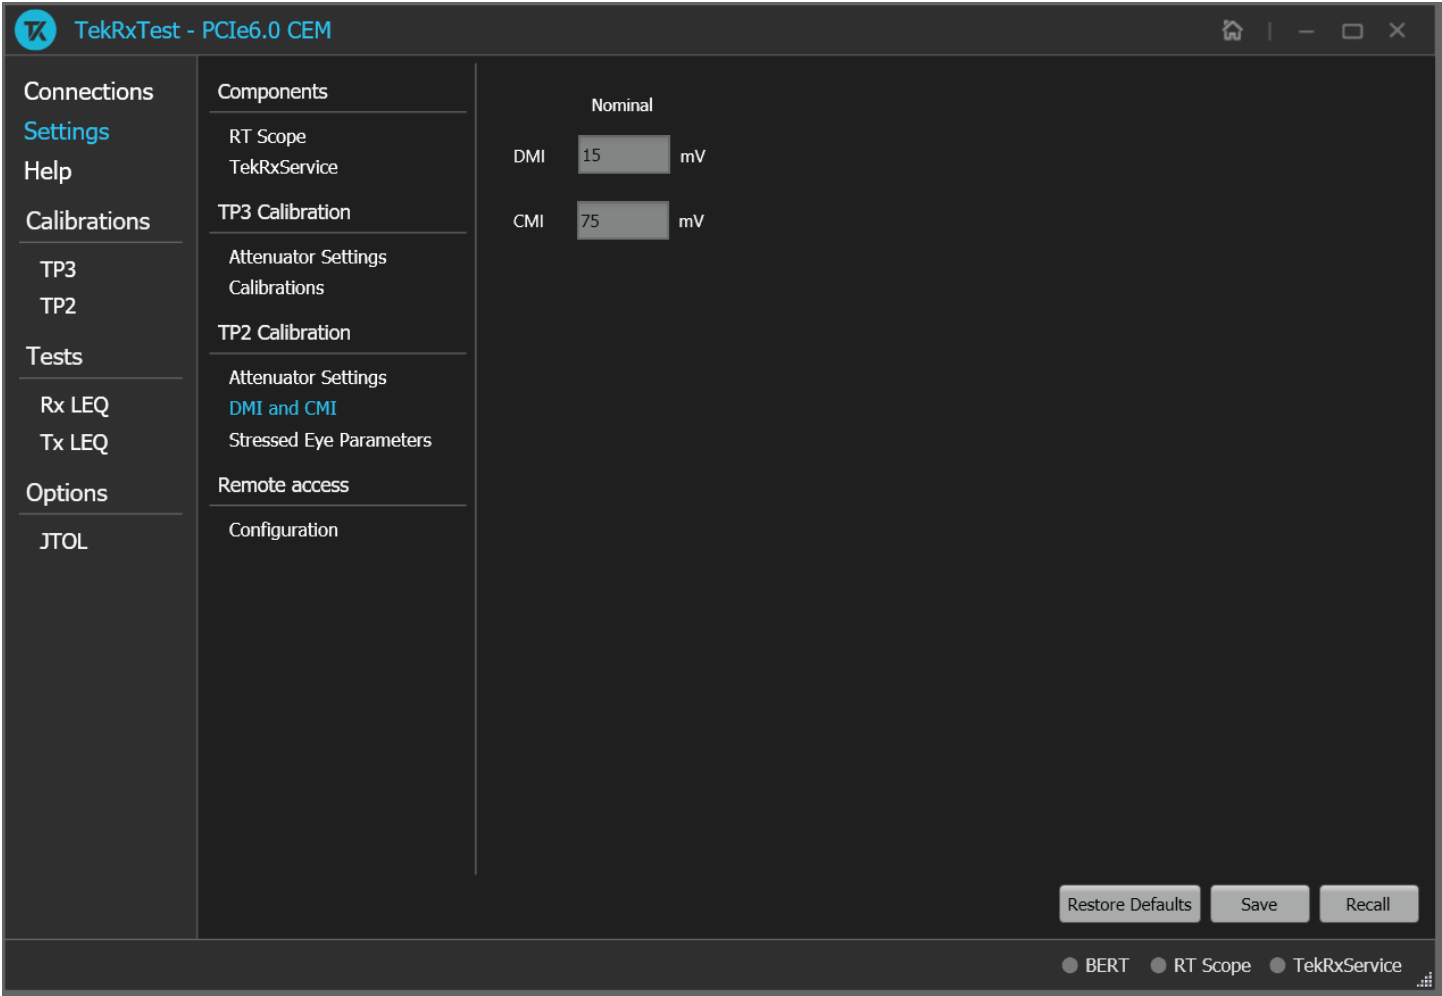

TP2 Calibration: DMI and CMI

TP2 Calibration: DMI and CMI

Parameter	Description
DMI	Displays the nominal DMI value in mV.
CMI	Displays the nominal CMI value in mV.

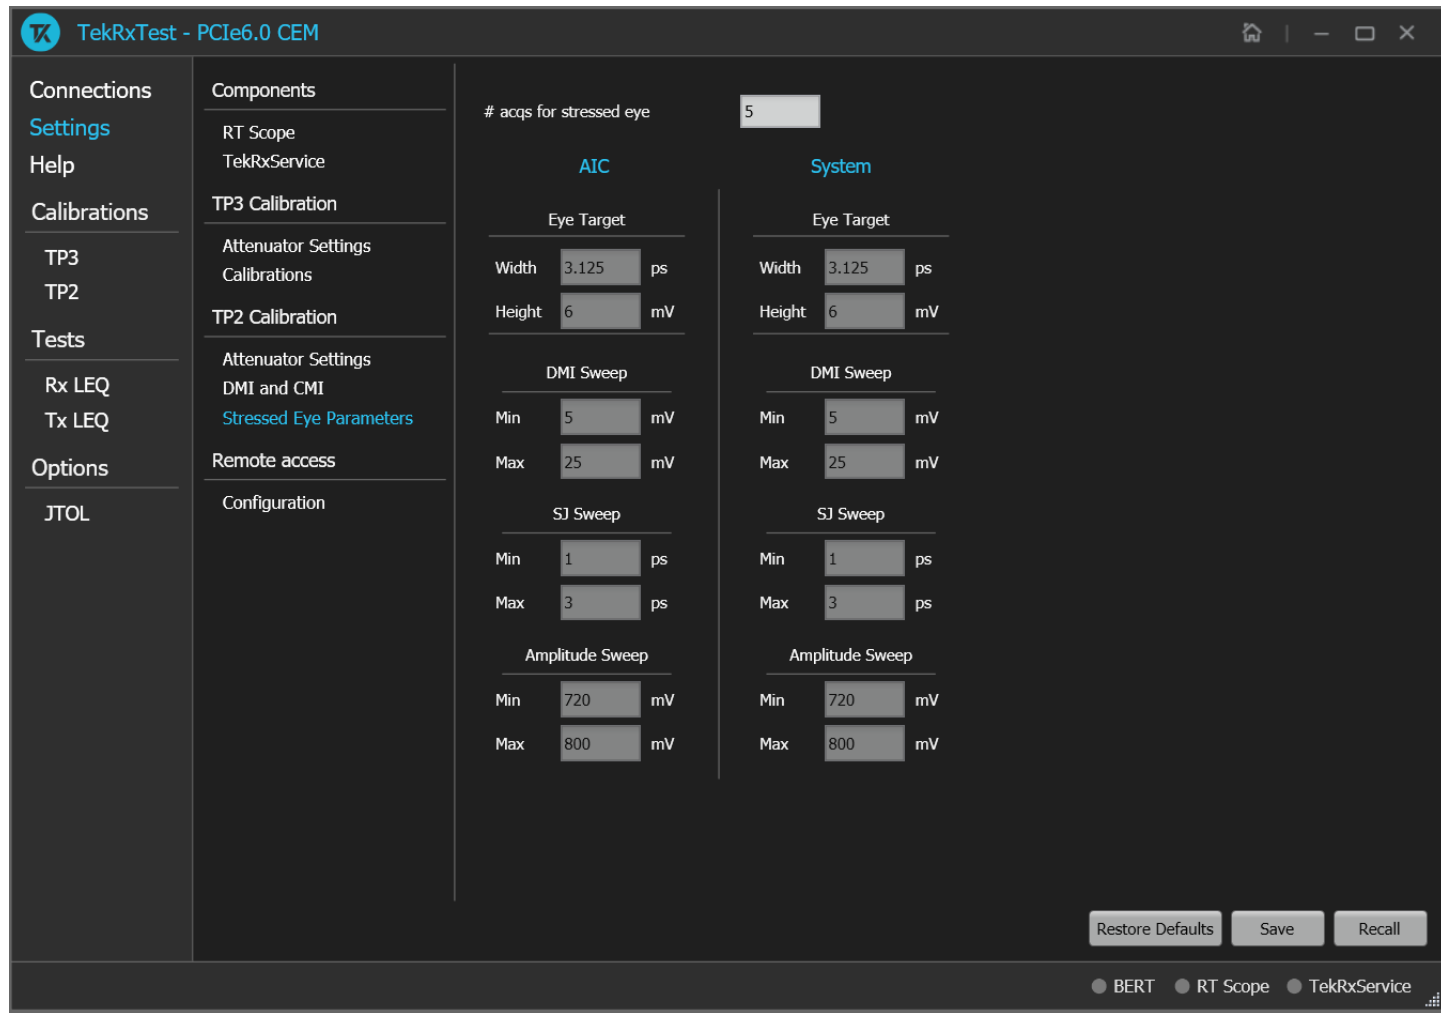

Parameter	Description
No. of acqs for stressed eye	Displays the number of acquisitions value for stressed eye.
Eye Target	
Width	Displays the target eye width value as per PCIe specification.
Height	Displays the target eye height value as per PCIe specification.
DMI Sweep	
Min	Displays the minimum value of DMI sweep during stressed eye calibration.
Max	Displays the maximum value of DMI sweep during stressed eye calibration.
SJ Sweep	
Min	Displays the minimum value of SJ sweep during stressed eye calibration.
Max	Displays the maximum value of SJ sweep during stressed eye calibration.

Parameter	Description
Amplitude Sweep	
Min	Displays the minimum value of amplitude sweep during stressed eye calibration.
Max	Displays the maximum value of amplitude sweep during stressed eye calibration.

Remote access: Configuration

The remote access tab allows you to configure the remote setting parameters to access the equipment remotely.

TkTekRxTest - PCIe6.0 CEM

Connections

Settings

Help

Calibrations

TP3

TP2

Tests

Rx LEQ

Tx LEQ

Options

JTOL

Components

RT Scope

TekRxService

TP3 Calibration

Attenuator Settings

Calibrations

TP2 Calibration

Attenuator Settings

DMI and CMI

Stressed Eye Parameters

Remote access

Configuration

Local IP Address

192.168.0.144

Listening Port

4004

Time Out

20

s

Restore Defaults

Save

Recall

BERT

RT Scope

TekRxService

Remote access: Configuration

Remote access: Configuration

Parameter	Description
Local IP Address	Displays the IP address for connecting to the application over socket server.
Listening Port	Displays the TCP/IP port number of the port that the socket server is listening. Default Value: 4004
Time Out	Displays the timeout value used when communicating with the socket server. Default Value: 20 Seconds

Help panel

The help panel launches the PCIe6.0 (CEM) TekRxTest application help document.

Calibrations panel

Complete TP3 and TP2 calibrations before you start the DUT testing using the PCIe6.0 (CEM) test application. Follow the instructions in the calibration wizards to automate the calibration for the test points. After calibrating the test points, you can save the results.

TP3 Calibration

The TP3 calibration panel allows you to perform calibration for TP3 and save the results. You can perform calibration for Signal Amplitude, Preset, Random Jitter (RJ), Sinusoidal Jitter (SJ), , and Multi-tone. Additionally, there is a provision to perform AC-DC Balancing.

The PCIe6.0 (CEM) TekRxTest application calibrates the following at TP3:

1. Amplitude - The differential voltage swing is required to be within 720 - 800 mV. This is done only after the transition and non-transition bit levels are made equal using de-emphasis.
2. Tx Equalization Presets - The various levels of de-emphasis and preshoot are required to be calibrated within the tolerance as specified.
3. RJ - It is calibrated to be ps (RMS value).
4. SJ - The SJ is calibrated over the desired range of 1-5 ps (pk-pk) including the nominal SJ specification of 0.1 UI (or 3.125 at 100 MHz frequency).
5. SJ @ 210 MHz - If the stressed eye calibration requires sinusoidal jitter levels greater than 0.1 UI
6. Multi-tone - It is calibrated over a specific range for multiple user-defined frequencies.

TP3Calibration procedure




TP3 Calibration



Click TP3 under the calibration tab to view the calibration results. Click  at the right end corner of the application to launch the TP1 calibration wizard. This wizard will guide you through the sequential procedure to perform the calibration.

1. **Connection Diagram:** This tab displays the connection diagram for TP3calibration. The connection diagram is same for AIC / System.

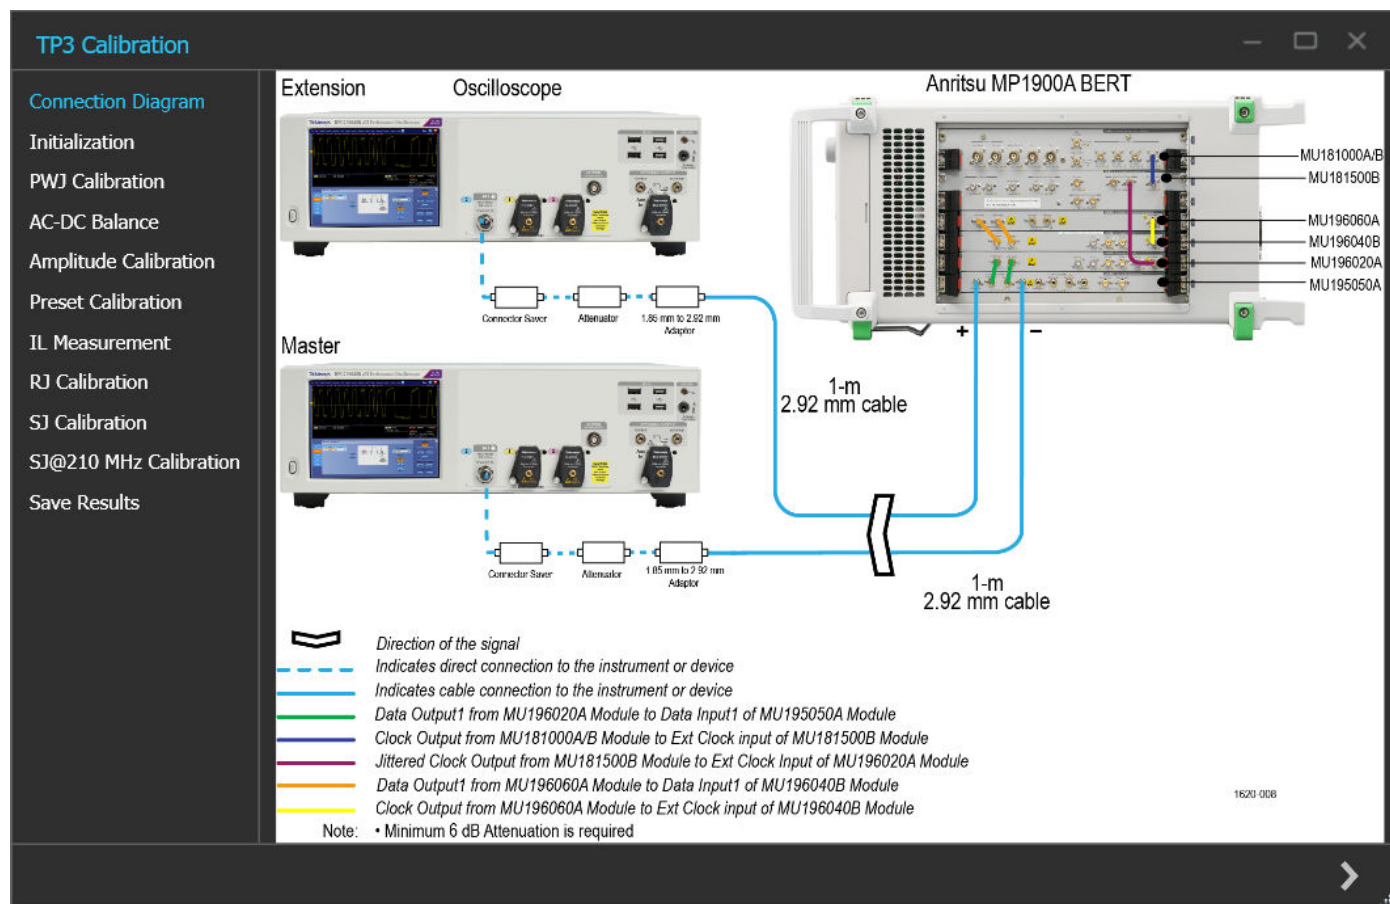

TP3 Calibration : Connection Diagram




Click to move to the next screen.

2. **Initialization:** This tab displays the description and allows you to initialize the equipment. Click **Initialize Equipment** and complete the initialization process.

You can click **Automatic Calibration** to perform the automatic calibration with the default settings for amplitude, Tx Equalization Presets, RJ, and SJ parameters without user intervention.

To skip the signal validation during initialization, enable the **Skip Signal Validation** check box.

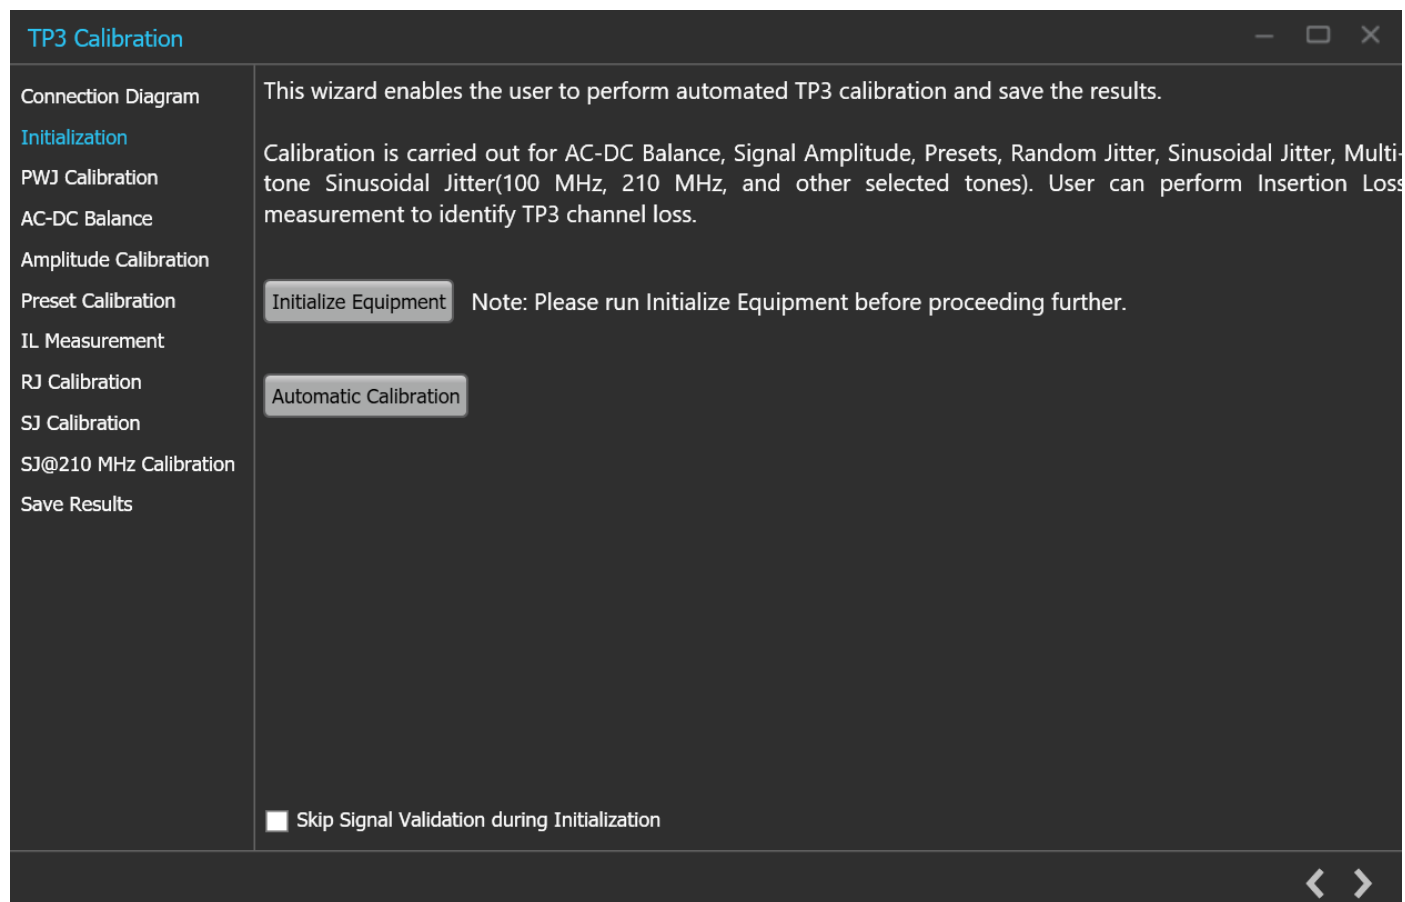


TP3 Calibration : Initialization



Click to move to the next screen.

3. **PWJ Calibration:** This tab displays the description and allows you to perform PWJ Calibration.

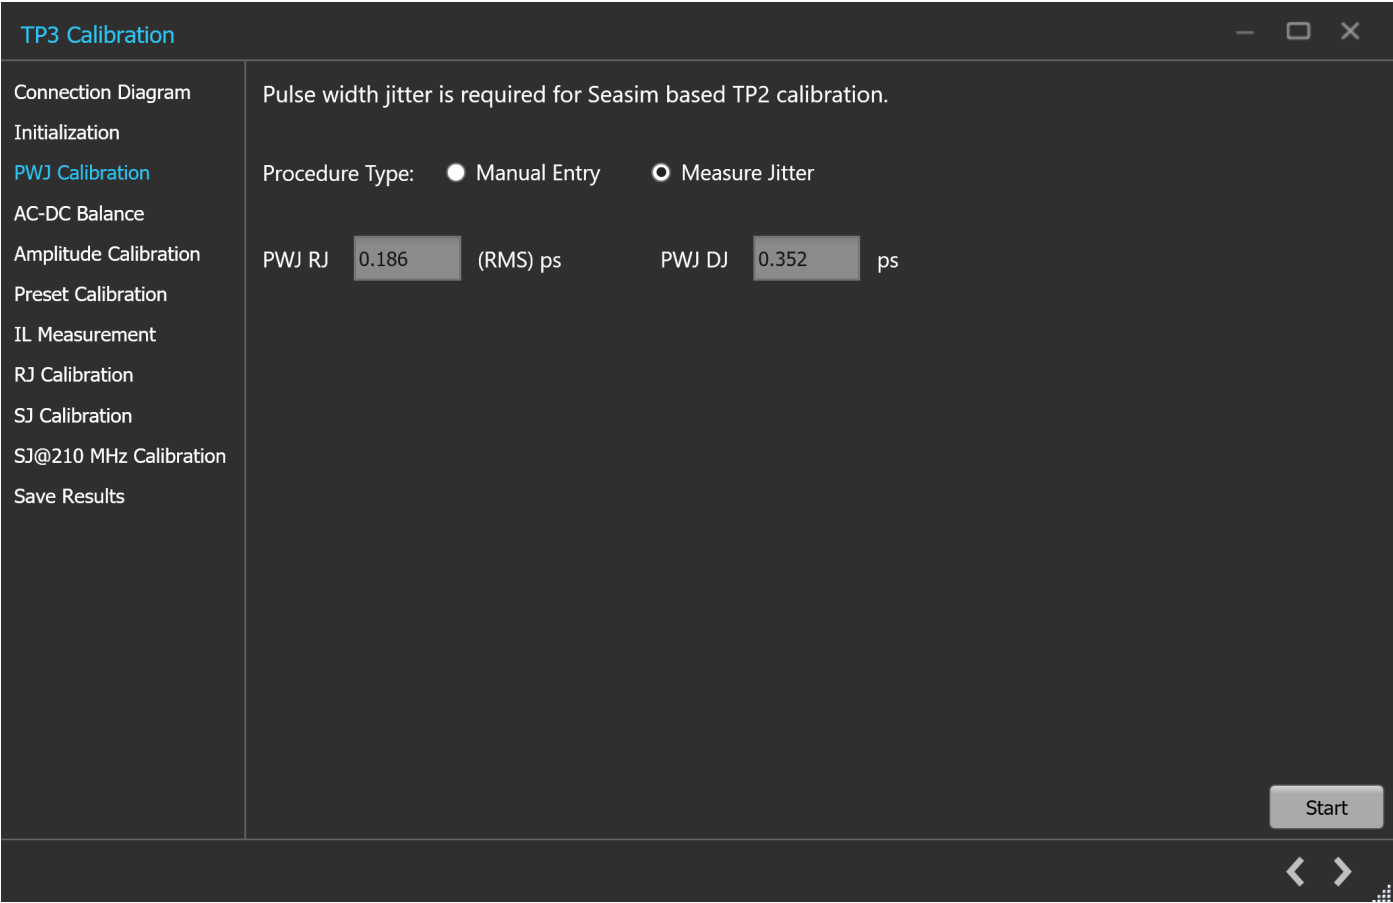


TP3 Calibration : PWJ Calibration

TP3 Calibration: PWJ Calibration

Parameter	Discription
Procedure Type	Select the required procedure type. Measure Jitter Manual entry
Manual Entry	Select the manual entry option and enter the calibration values in PWJ RJ value in (RMS) ps and PWJ DJ value in ps. Click on Start to start measurement.
Measure Jitter	Select the option and click on Start to initiate the measurement.
PWJ RJ / PWJ DJ	Displays the PWJ/RJ and PWJ/DJ values.
Start	Click on Start to start the measurement.

4. **AC-DC Balance:** This tab displays the graph plots of AC-DC balance.

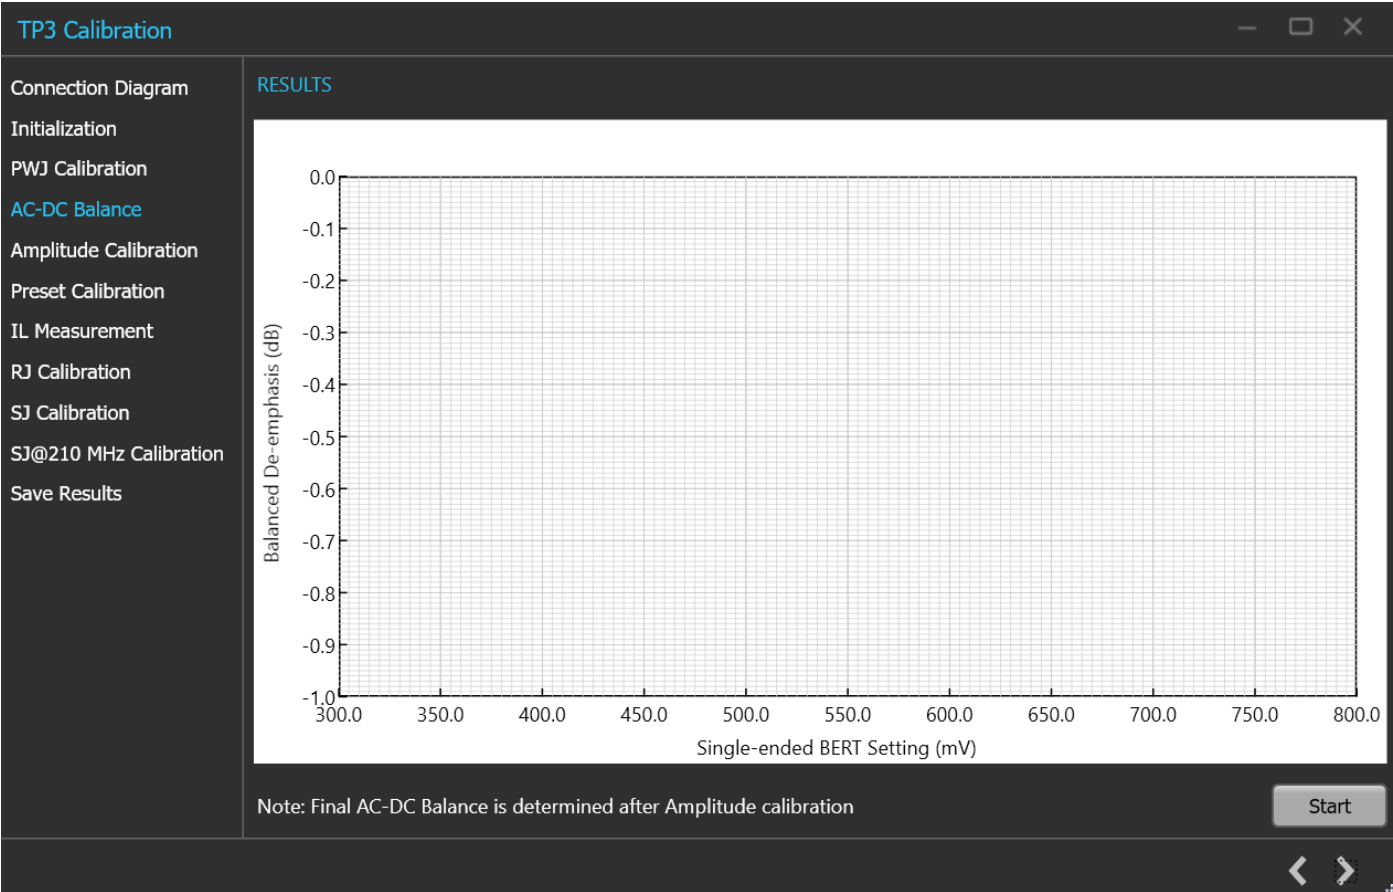

TP3 Calibration : AC-DC Balance


TP3 Calibration: AC-DC Balance

Parameter	Description
Start	Click Start to run the measurements.



Click to move to the next screen.

5. **Amplitude Calibration:** This tab displays the graph plots of amplitude calibration.

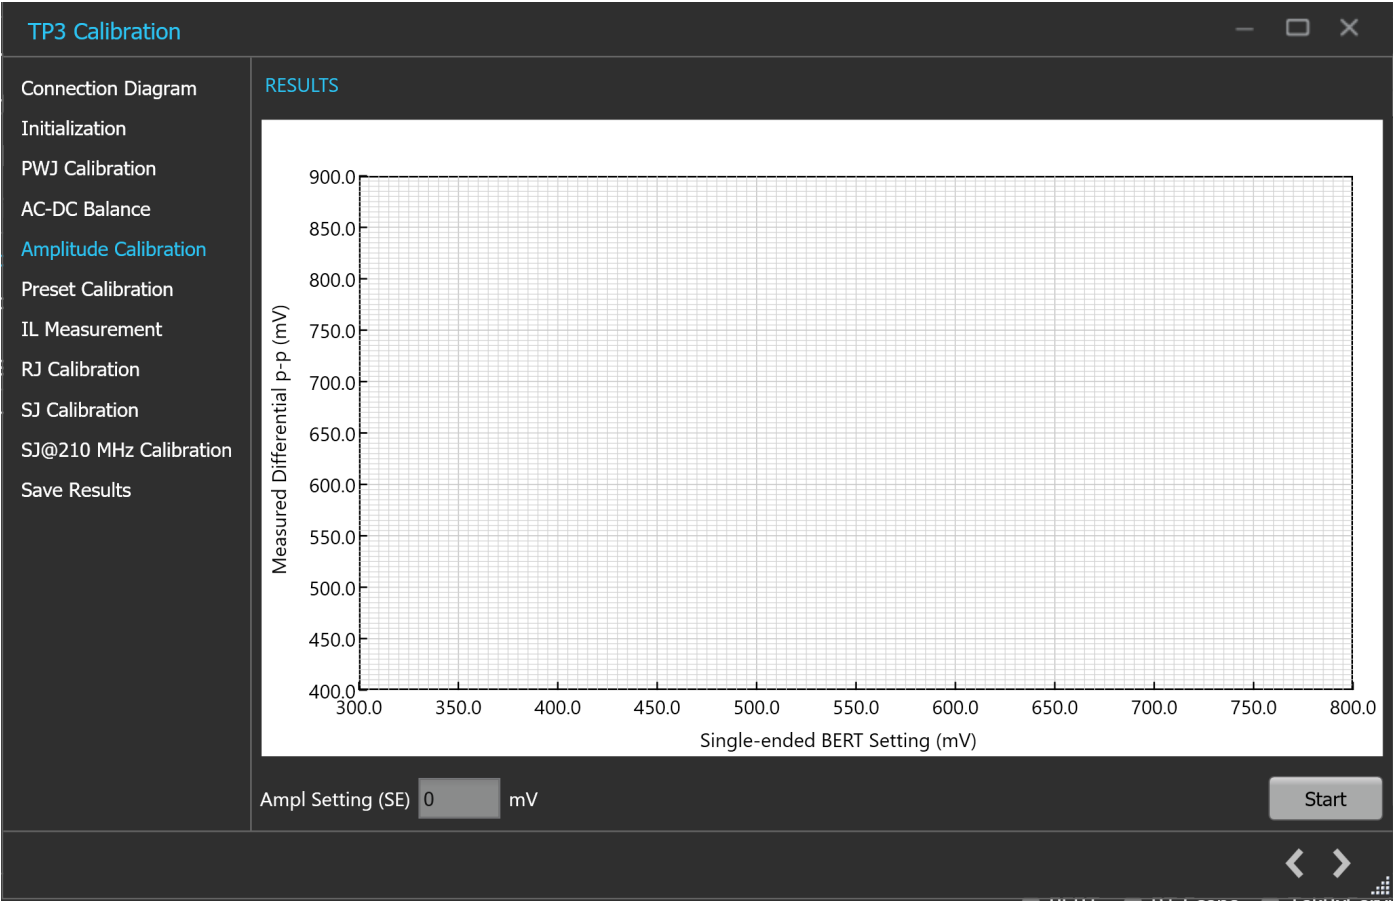

TP3 Calibration : Amplitude Calibration

TP3 Calibration: Amplitude Calibration

Parameter	Description
Ampl Setting (SE)	Displays the single-ended calibrated amplitude value corresponding to 800 mV differential.
Start	Click Start to run the measurements.



Click to move to the next screen.

6. **Preset Calibration:** This tab displays the graph plots of preset calibration.



TP3 Calibration : Preset Calibration


TP3 Calibration: Preset Calibration

Parameter	Description
Start	Click Start to run the measurements.



Click  to move to the next screen.

7. **IL Measurement:** This tab displays the description and allows you to perform IL Measurement.

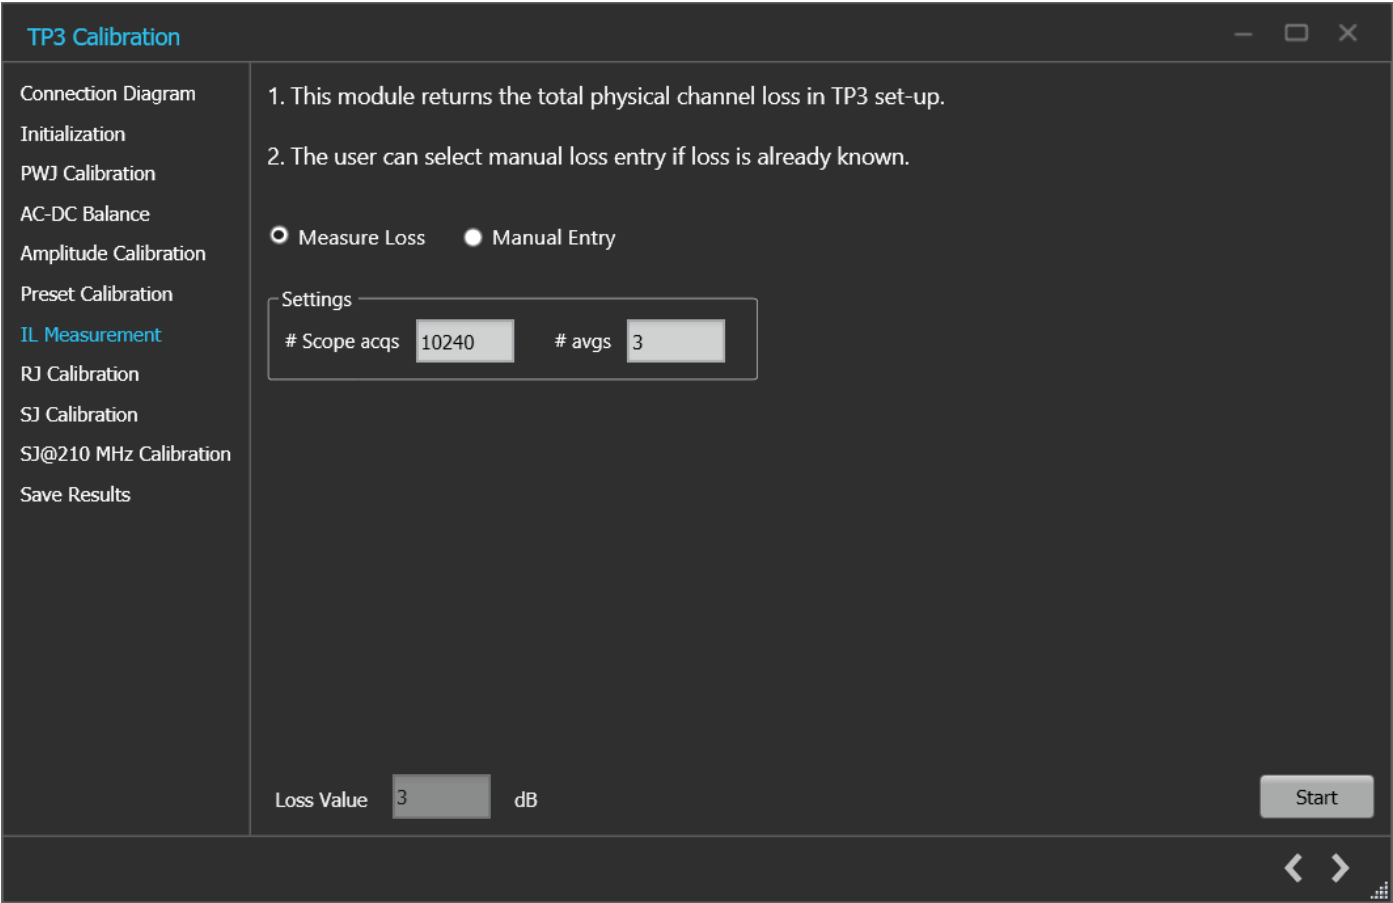


TP3 Calibration : IL Measurement

TP3 Calibration: IL Measurement

Parameter	Description
Manual Entry	Select the manual entry option and enter the loss value in dB.
Measure Loss	Select the measure loss option for the TekRxTest application to initiate measure loss.
Settings	
#Scope acqs	The number of scope acquisitions that allows the algorithm to make multiple insertion loss measurements and report the mean insertion loss. This way, any error in a particular acquisition will get averaged out. The mean of scope noise is usually zero. If we have a large number of samples and we average out those samples, then the noise component in the averaged sample will be zero.
# avgs	The number of averages that will run the insertion loss measurement multiple times and calculate the average value. This way, any error in a particular acquisition will get averaged out.
Loss Value	Displays the Final Loss value after computing.
Start	Click Start to run the measurements.

8. **RJ Calibration:** This tab displays the graph plots of RJ calibration.

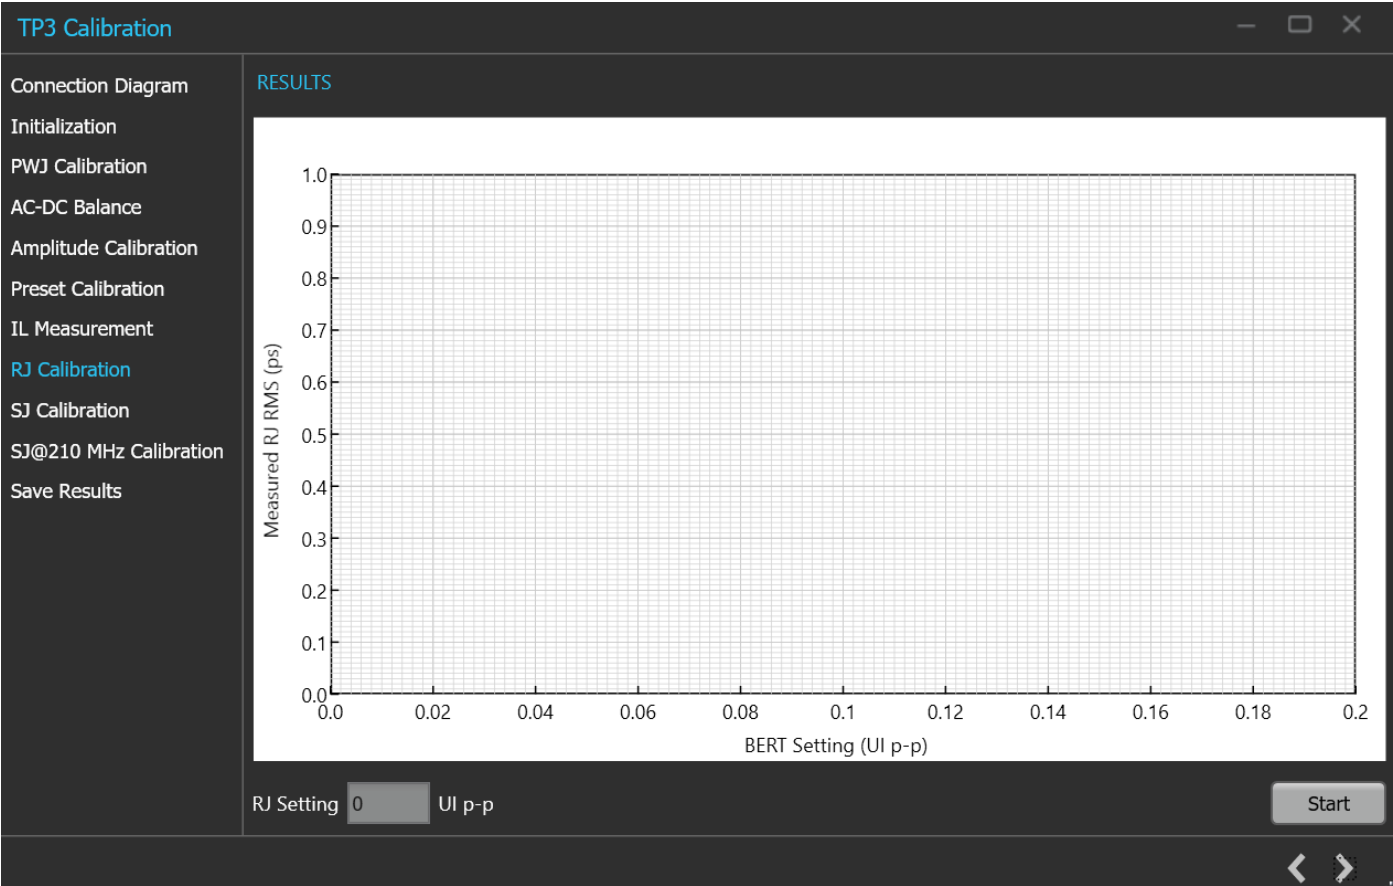

TP3 Calibration : RJ Calibration


TP3 Calibration: RJ Calibration

Parameter	Description
RJ Setting	Displays the calibrated RJ setting corresponding to the nominal value.
Start	Click Start to run the measurements.



Click to move to the next screen.

9. **SJ Calibration:** This tab displays the graph plots of SJ calibration.

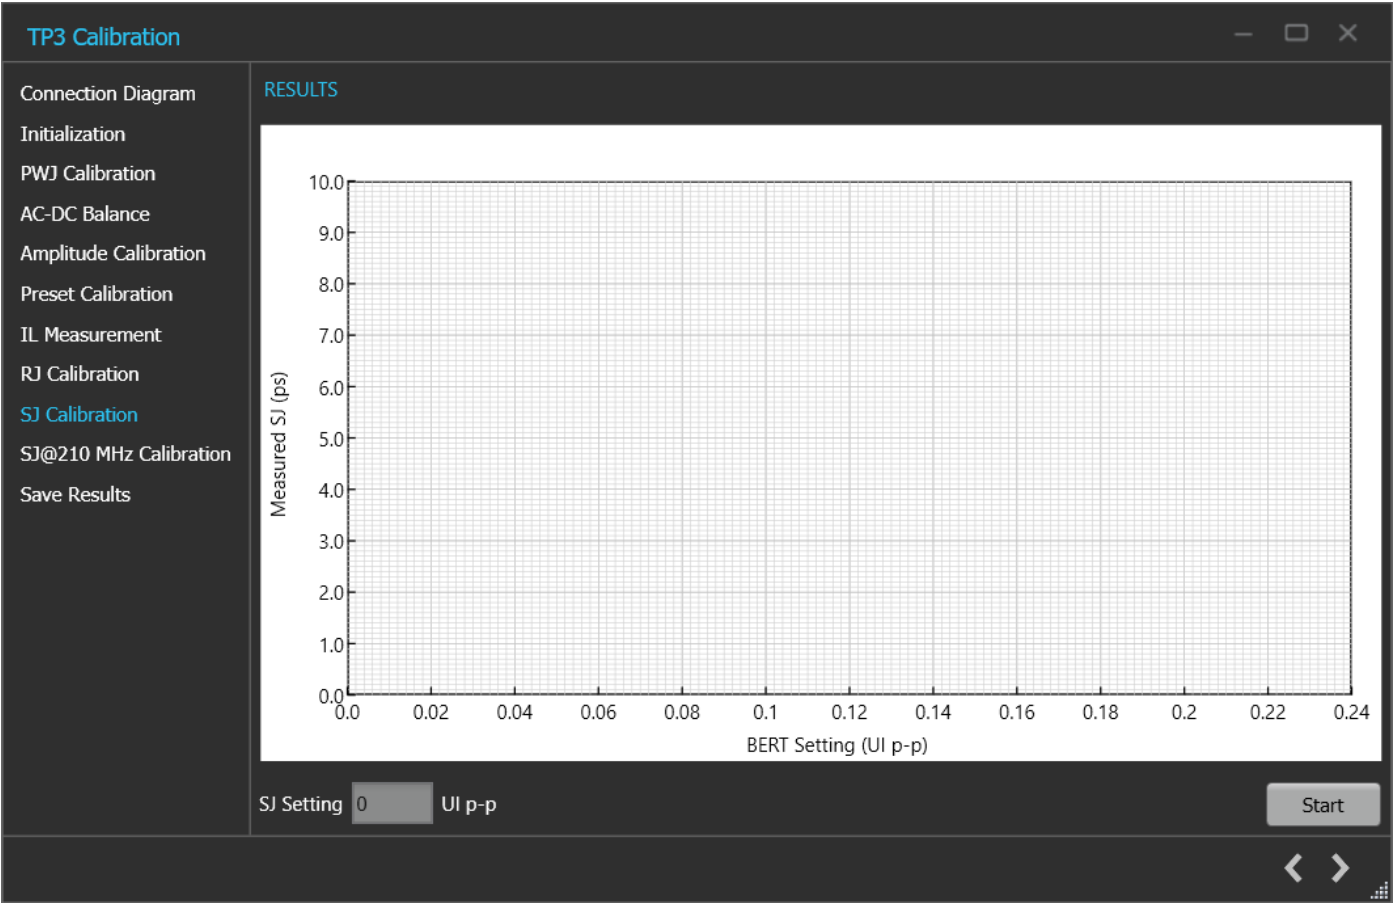

TP1 Calibration: SJ Calibration


TP3 Calibration: SJ Calibration

Parameter	Description
SJ Setting	Displays the calibrated SJ setting corresponding to the nominal target value.
Start	Click Start to run the measurements.



Click to move to the next screen.

10. **SJ@210 MHz Calibration:** This tab displays the graph plots of SJ@210 MHz calibration.

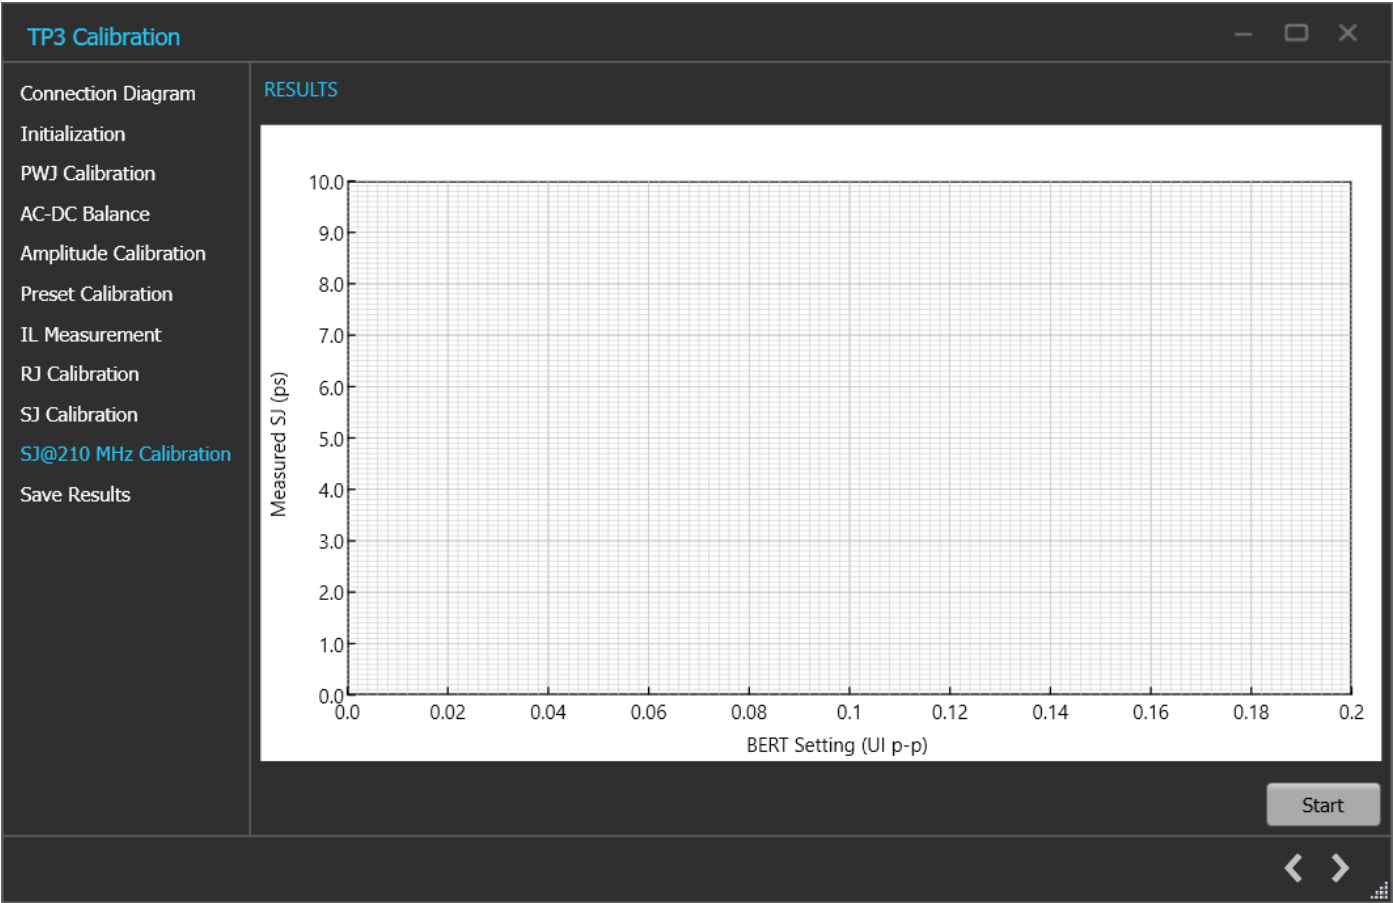


TP3 Calibration : SJ@ 210 MHz Calibration

Calibration: SJ@210 MHz Calibration

Parameter	Description
Start	Click Start to run the measurements.

11. **Multi-tone SJ:** This tab displays the graph plots of multi-tone SJ calibration.
- Enable the multi-tone option in the settings panel to display the Multi-tone SJ calibration panel in the TP3 calibration wizard window.

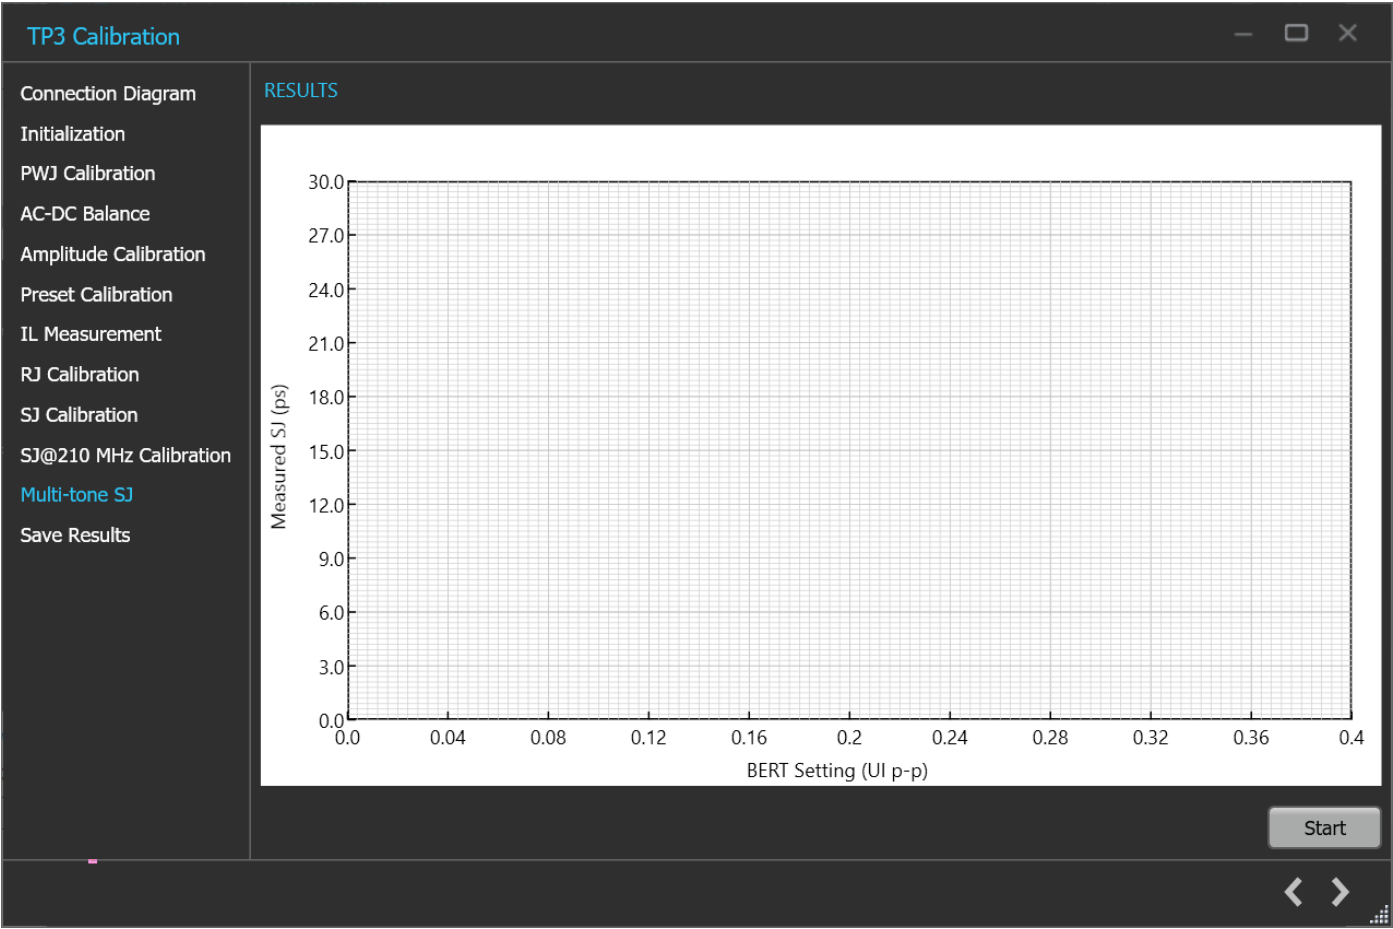

TP3 Calibration: Multi-tone SJ

TP3 Calibration: Multi-tone SJ

Parameter	Description
Start	Click Start to run the measurements.

12.**Save Results:** This tab allows you to save all the TP3 calibration results.

TP3 Calibration

Connection Diagram

Initialization

PWJ Calibration

AC-DC Balance

Amplitude Calibration

Preset Calibration

IL Measurement

RJ Calibration

SJ Calibration

SJ@210 MHz Calibration

Save Results

Unique ID

Generated By

Comments

Save

TP3 Calibration : Save Results

TP3 Calibration: Save Results

Parameter	Description
Unique ID	Enter the Unique ID of the calibrated equipment in the text box.
Generated By	Enter the user name in the text box.
Comments (Optional)	Enter the required comments in the comment box.
Save	Click to save the results.

Click  to complete the TP3 calibration and close the wizard.

NOTE: Completion of the TP3 calibration process or in the event of cancellation of the process, the BERT data generator is turned off automatically by the PCIe6.0 (CEM) TekRxTest application.

TP2 Calibration

You must perform TP3 calibration before you start performing the calibration for TP2.

The PCIe6.0 (CEM) TekRx test application calibrates the following at TP2:

1. DMI - The differential mode sinusoidal interference is required to be calibrated within 5 - 30 mV (pk-pk) by capturing the 2.1 GHz sinusoidal output for a duration of at least 125 us.
2. Preset selection- Tx equalization presets are used to find the optimal eye area with the optimal CTLE.
3. Stressed Eye calibration - As per the specification, various signal parameters and stress levels are computed to generate a signal that meets the stressed eye targets.

TP2 Calibration procedure




TP2 Calibration



Click **TP2** under the calibration tab to view the calibration results. Click  at the right end corner of the application, to launch the TP2 calibration wizard. This wizard will guide you through the sequential procedure to perform the calibration.

You must perform TP3 calibration before you start performing the calibration for TP2.

1. **Description:** This tab displays the description and allows you to select the DUT Type as Non-Root Complex or Root Complex.

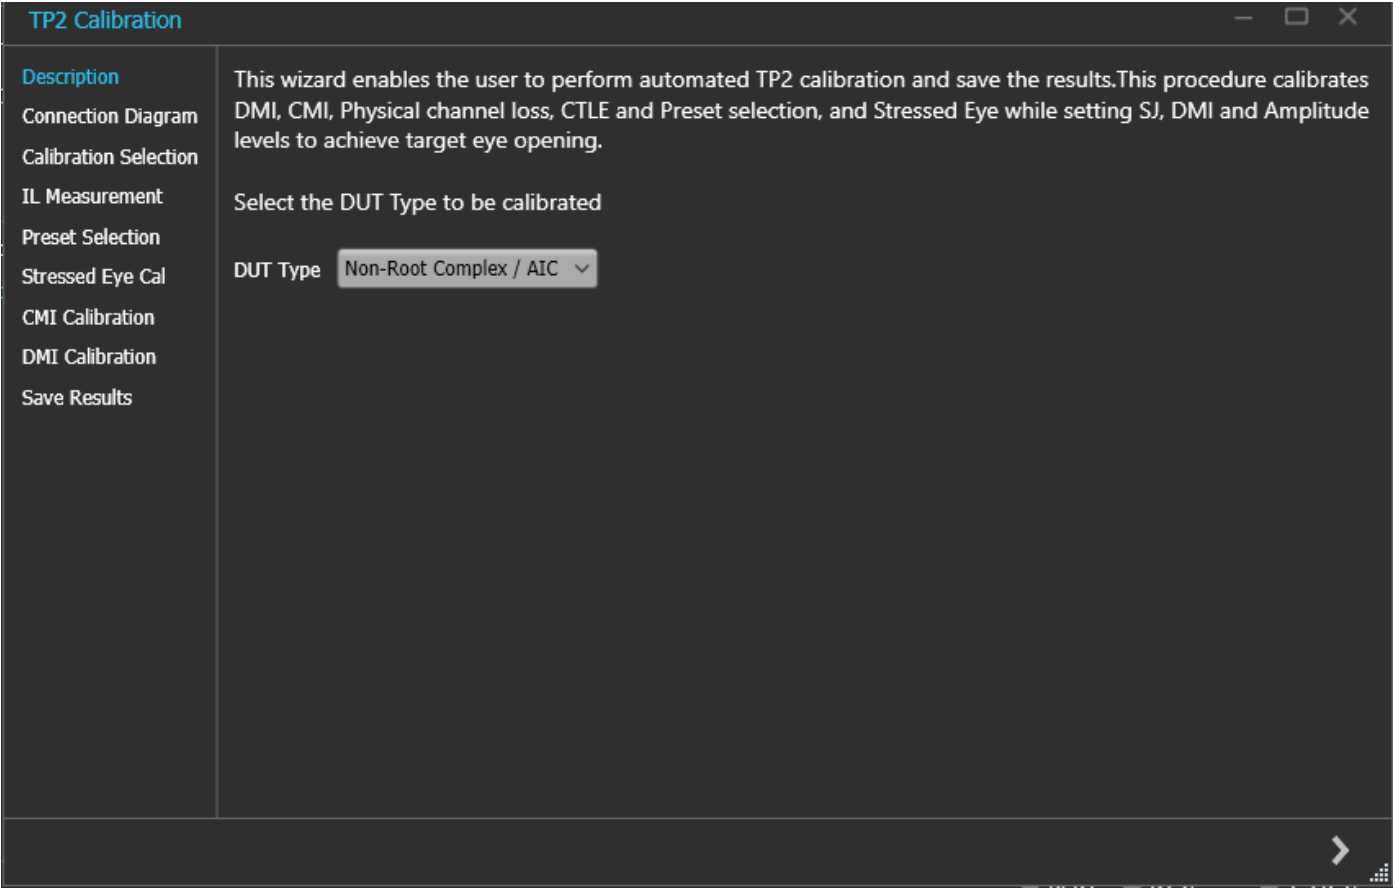

TP2 Calibration: Description


TP2 Calibration: Description

Parameter	Description
DUT Type	Non-Root Complex / AIC Card Root Complex / System




Click to move to the next screen.

2. **Connection Diagram:** This tab displays the connection diagram for the DUT Type selected in description screen.

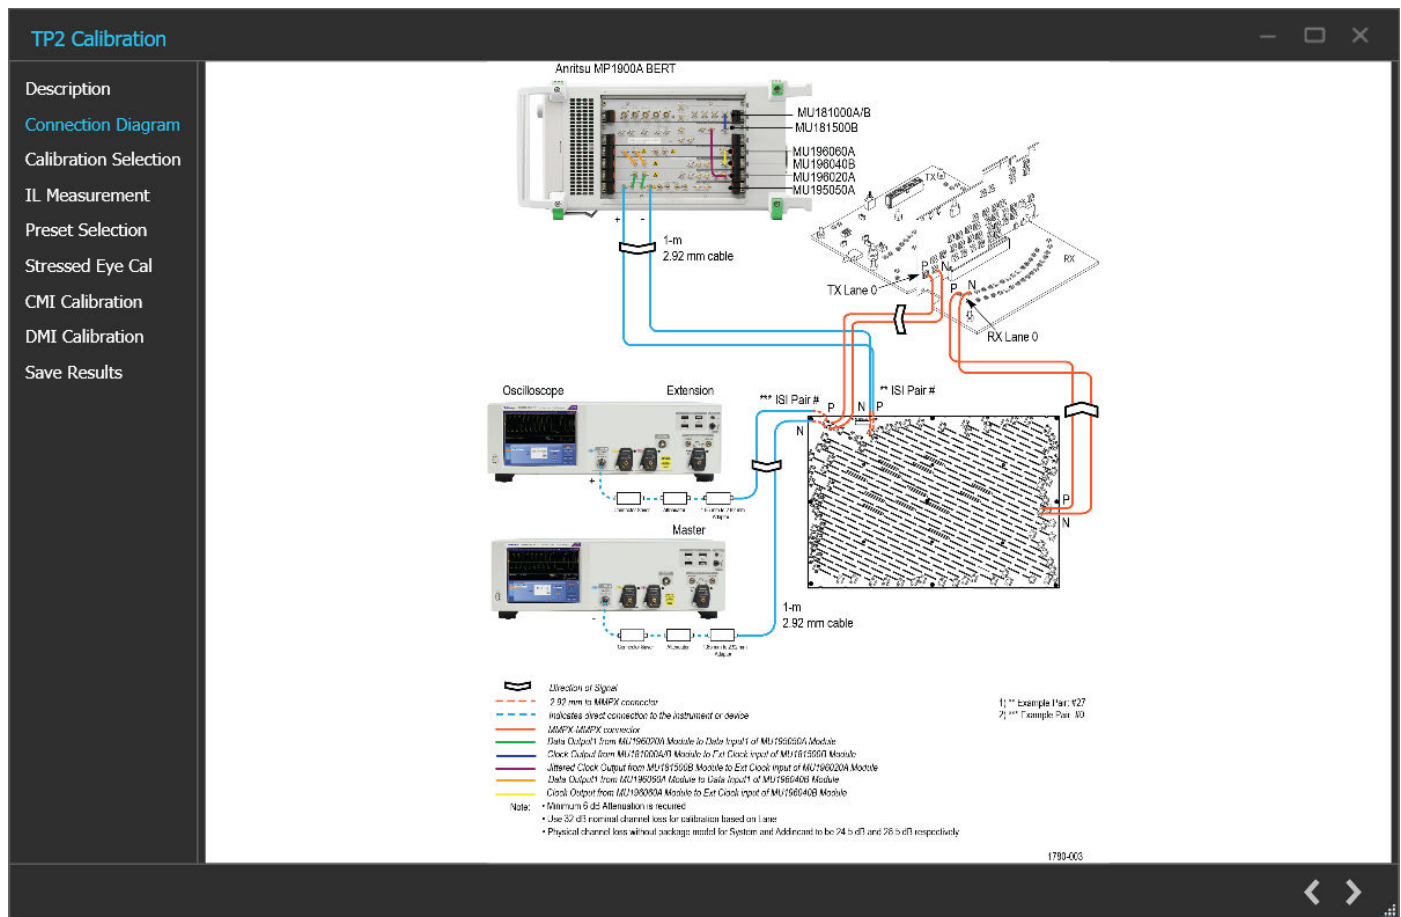

TP2 Calibration: Connection Diagram - AIC

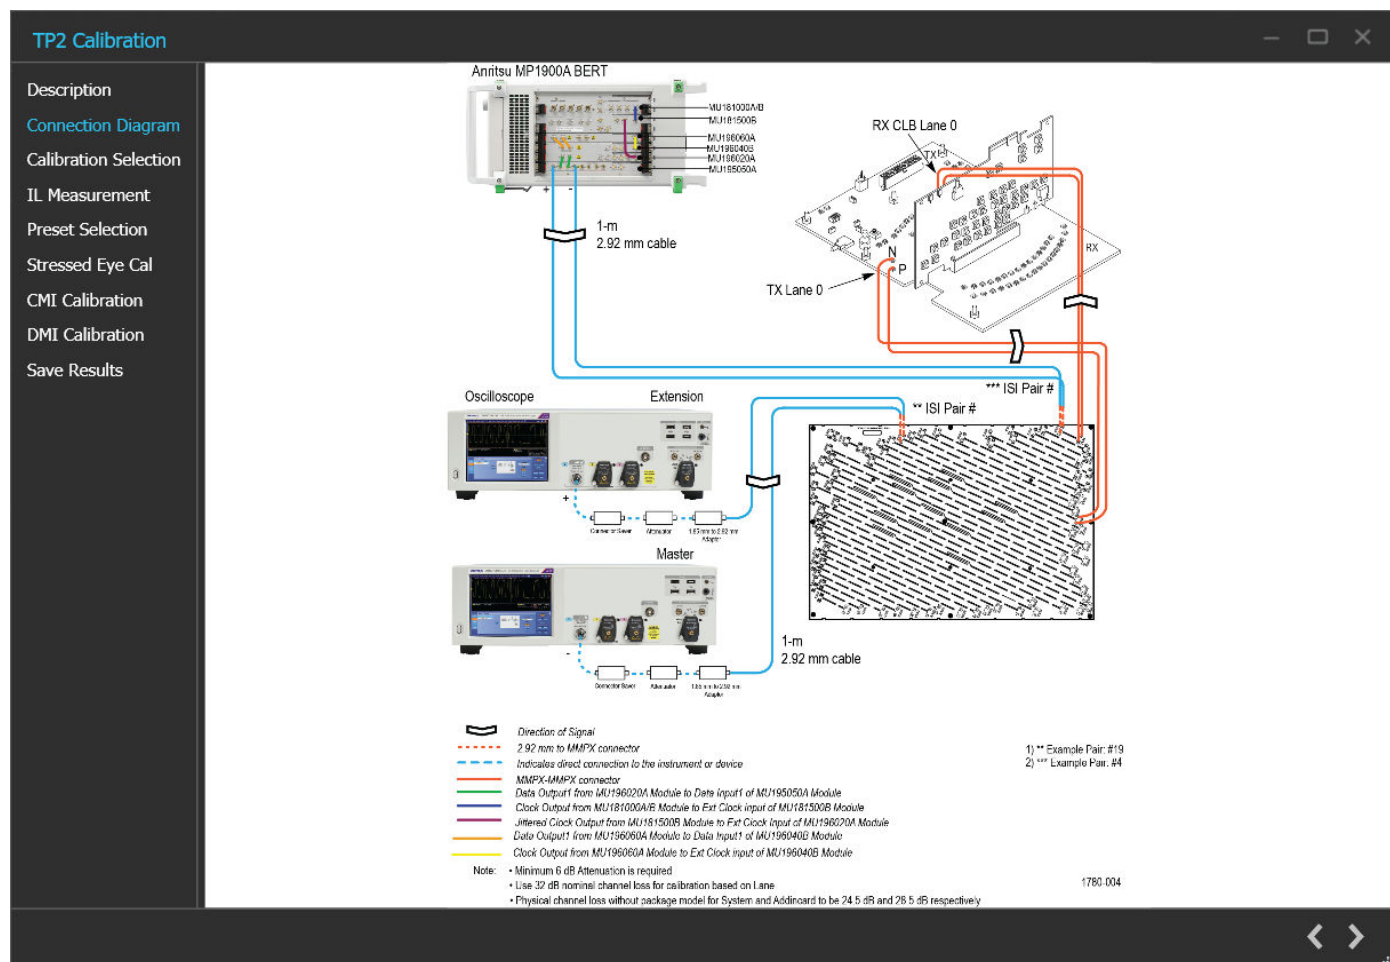


TP2 Calibration: Connection Diagram-System

The System Connection Diagram for TP2 Calibration is same as the connection diagram shown above for the DPO71AX Oscilloscope



Click to move to the next screen.

3. **Calibration Selection:** This tab allows you to select the TP3 Calibration file from the drop-down list and click **Initialize Equipment**.

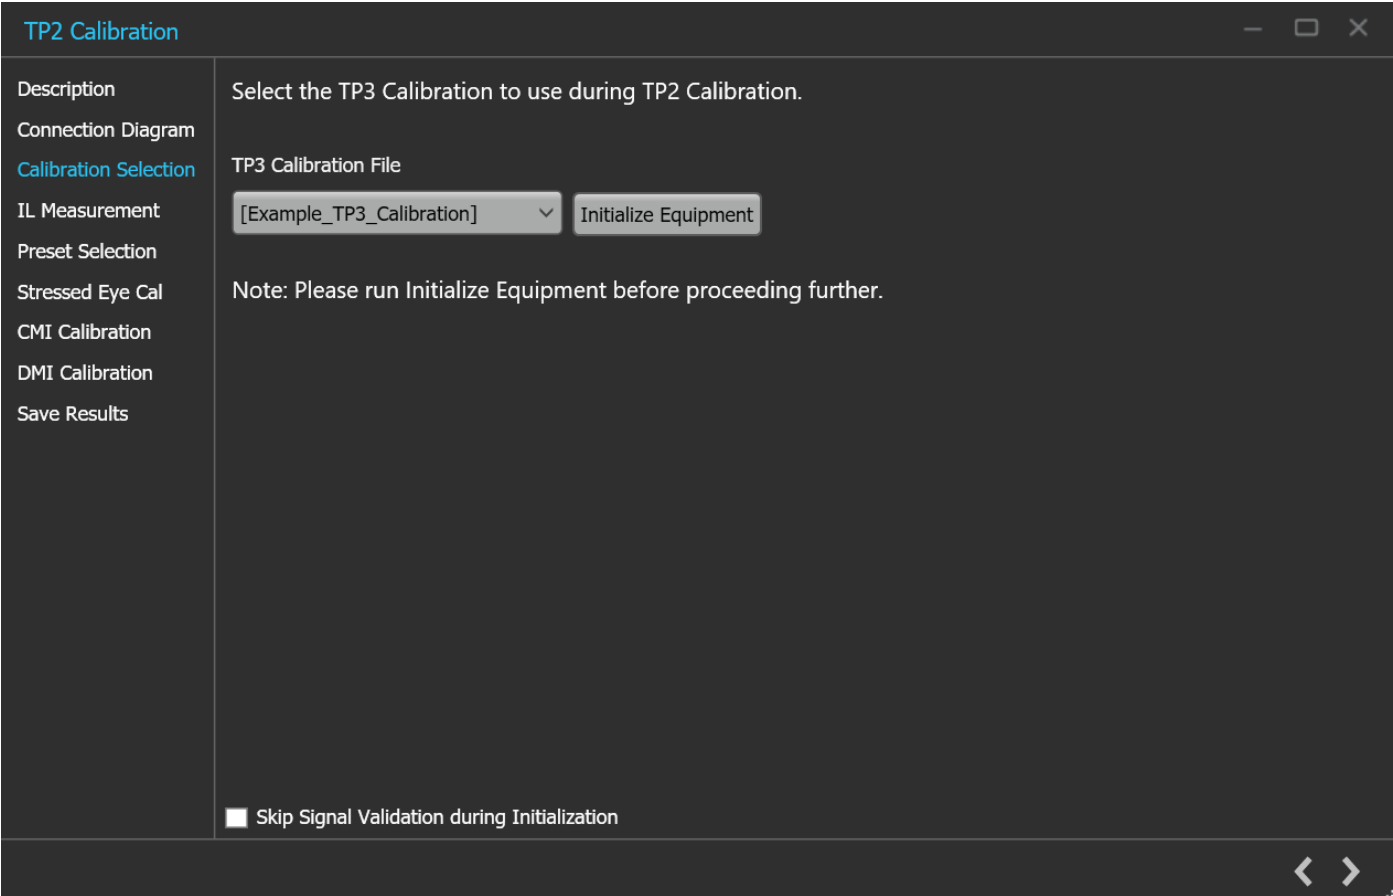

TP2 Calibration: Calibration Selection

TP2 Calibration: Calibration Selection

Parameter	Description
Calibration File	Select the desired calibration file and initialize the equipment.
Skip Signal Validation during Initialization	Check the checkbox to skip signal validation.



Click to move to the next screen.

4. IL Measurement:

The Stressed Eye calibration including CTLE selection and optimal preset identification needs to be performed with a full physical channel loss between . This includes the package embedding loss.

TP2 Calibration

Description

1. This module returns the full channel loss in the present set-up.
2. The user is expected to change the ISI pair number on the board to start with a full channel loss of 33 dB before proceeding with the next step.

Connection Diagram

```

graph LR
    BERT[BERT] -- "1 m 2.92 mm cable (TP1)" --> VIB[Variable ISI Board and Gen 6 CEM Fixture]
    VIB -- "1 m 2.92 mm cable (TP3)" --> RTScope[RT Scope]
    RTScope -- "Behavioral Rx package, Rx Eq and CDR (TP2)" --> StressedEye[Stressed Eye]
    StressedEye -- "TP2P" --> StressedEye
    subgraph IL_Measurement [30 dB - 33 dB (IL Measurement)]
        VIB
        RTScope
    end
  
```

Calibration Selection

IL Measurement

Preset Selection

Stressed Eye Cal

CMI Calibration

DMI Calibration

Save Results

☐ Measure Loss ☒ Manual Entry

Settings

Scope acqs: 10240 # avgs: 3 Loss Value: 33 dB

Start

TP2 Calibration : IL Measurement

TP2 Calibration: IL Measurement


Parameter	Description
Manual Entry	Select the manual entry option and enter the loss value in dB.
Measure Loss	Select the measure loss option for the TekRxTest application to initiate measure loss
Settings	
#Scope acqs	The number of scope acquisitions that allows the algorithm to make multiple insertion loss measurements and report the mean insertion loss. This way, any error in a particular acquisition will get averaged out. The mean of scope noise is usually zero. If we have a large number of samples and we average out those samples, then the noise component in the averaged sample will be zero.
# avgs	The number of averages that will run the insertion loss measurement multiple times and calculate the average value. This way, any error in a particular acquisition will get averaged out.
Loss Value	Displays the final loss value after computing.
Start	Click Start to run the measurements.



Click  to move to the next screen.

5. **Preset Selection:**

The PCIe TekRxTest application provides the facility to automatically compute and present the total physical channel loss in the TP2 set-up. Selection of optimum physical channel loss (obtained by means of changing the ISI pair), optimum CTLE, and Preset is a prerequisite for to obtain the stressed eye as per the specification. While arriving at the optimum combination of the parameters, the TekRxTest application guides you through the various steps in this process by means of pop-up messages in taking suitable actions.

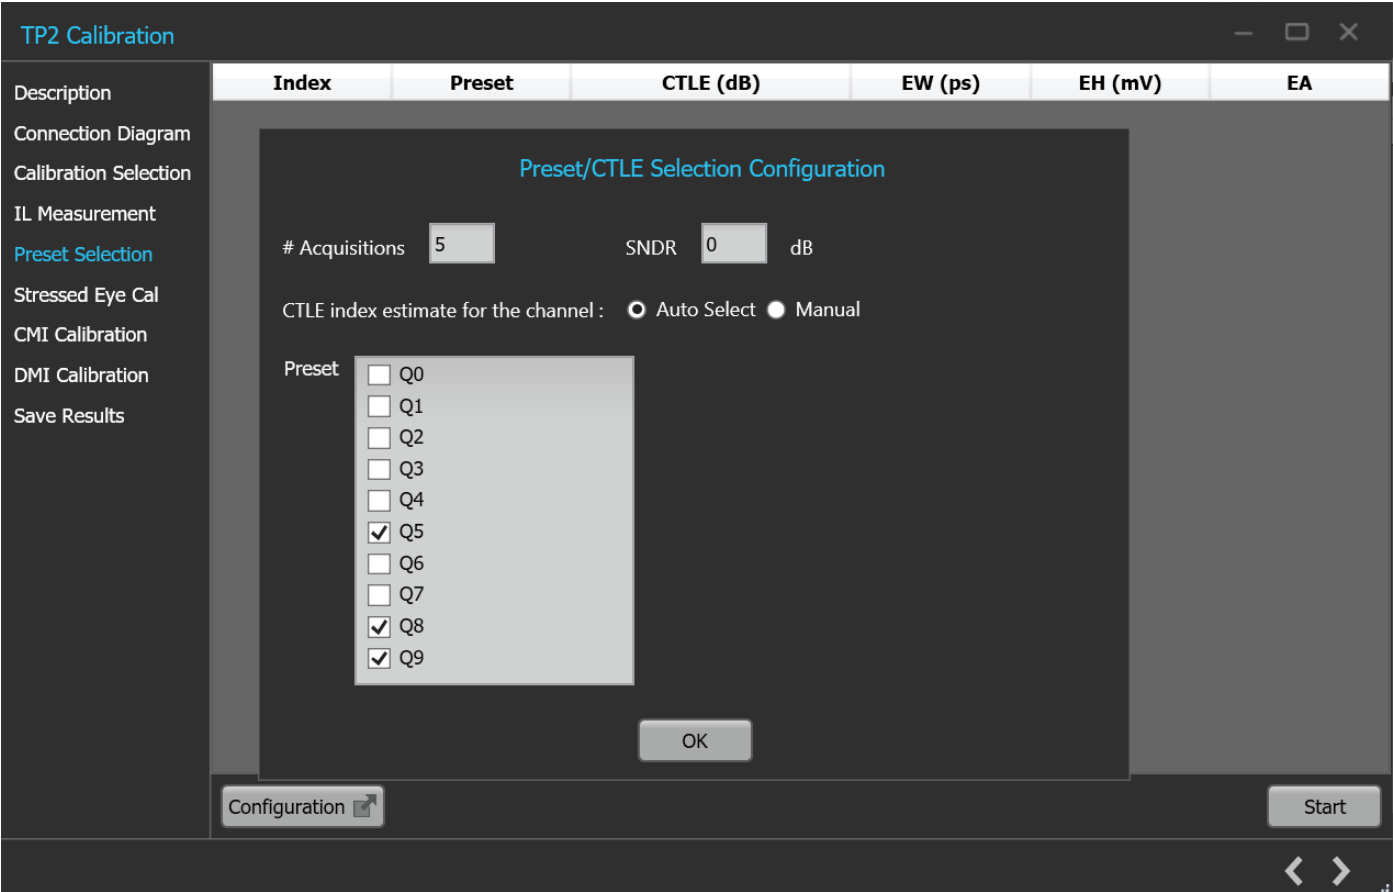

TP2 Calibration : Preset Selection

TP2 Calibration:

Preset Selection

Parameter	Description
# Acquisitions	Enter the number of waveforms to be acquired for Preset selection.
SNDR	Enter the value of Signal to Noise Distortion Ratio.
Preset	Select the presets from which the optimum will be chosen for TP2 calibration.
CTLE index estimate for the channel	Select the required CTLE index estimate method for the channel. Auto Select Manual 15 14

Parameter	Description
	13 12 11 10 9 8 7 6 5 4 3 2
Configuration	Select to Configure the Preset and CTLE configuration.
OK	Select to apply the configuration for Preset and CTLE.
Start	Click Start to run the measurements.



Click to move to the next screen.

6. Stressed Eye Calibration:

TP2 calibration for stressed eye requires information from the TP3 calibration that is performed for the set-up under consideration or from one of the saved results. The relevant calibration file can be chosen from the calibration selection page shown from a drop-down button listing all the TP3 calibration files stored in the PCIe Gen6 TekRxTest application repository.

TP2 Calibration

Description

Connection Diagram

Calibration Selection

IL Measurement

Preset Selection

Stressed Eye Cal

CMI Calibration

DMI Calibration

Save Results

Index	SJ (ps)	DMI (mV)	Ampl (mV)	EW (ps)	EH (mV)
-------	---------	----------	-----------	---------	---------

☐ Manual Calibration Run

SJ

0.75

ps

DMI

7.5

mV

Amplitude

800

mV

☐ Exhaustive Sweep

acqs


5

Configuration

Start

Eye Height Limit: (9.5 - 10.5) mV, Eye Width Limit: (1.4125 - 1.7125) ps, Selected Preset: NA, Selected CTLE NA
SJ Limits: (0 - 1.5) ps, DMI Limits: (0 - 15) mV, Amplitude Limits: (720 - 800) mV

TP2 Calibration : Stressed Eye Calibration

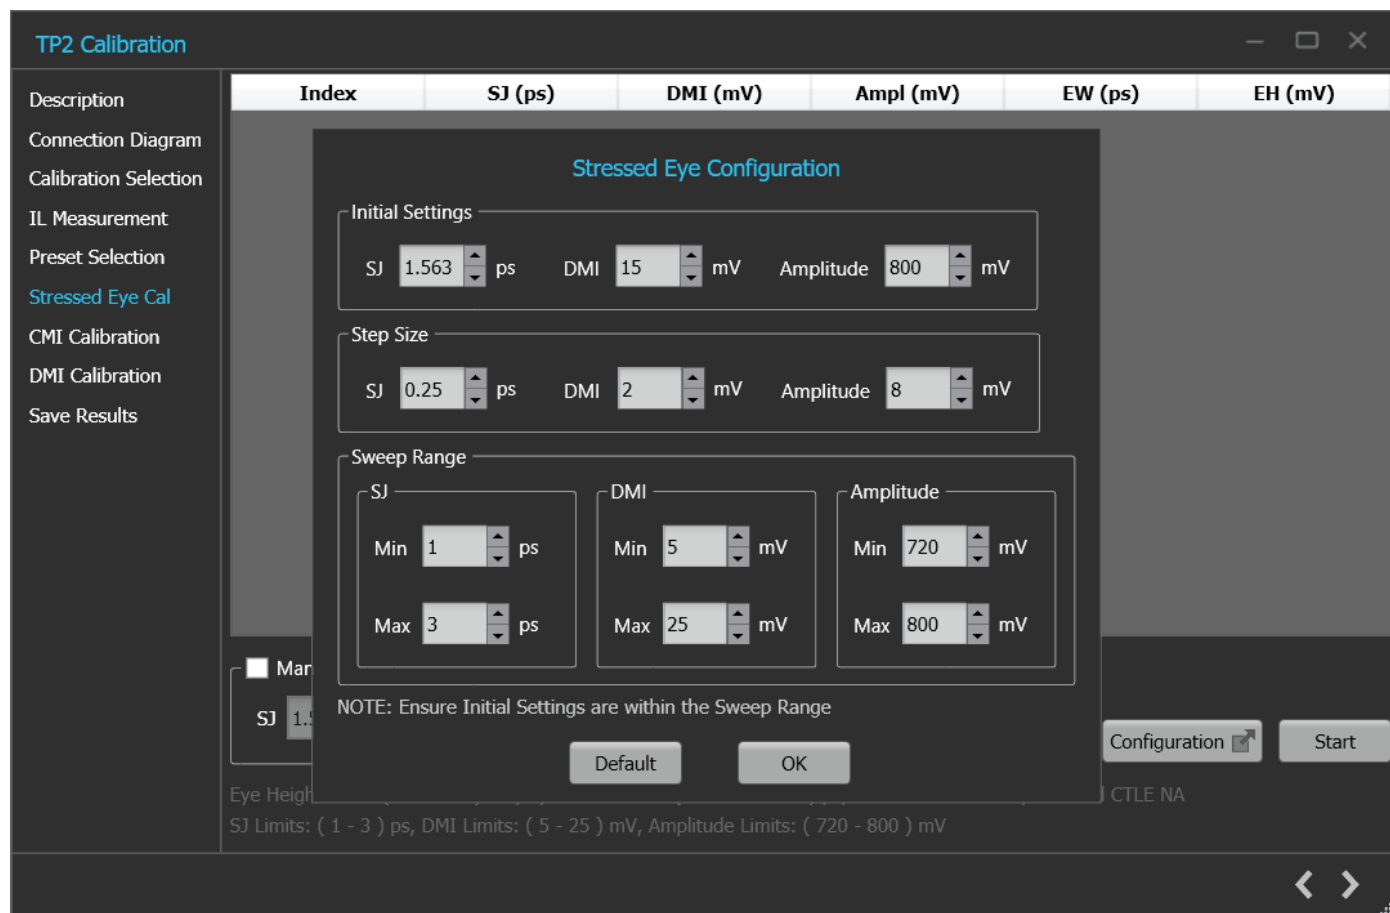

TP2 Calibration : Stressed Eye Configuration

TP2 Calibration: Stressed Eye Cal


Parameter	Description
Manual Calibration Run	Select to manually enter the SJ, DMI and Amplitude values for Stressed Eye calibration.
SJ	Displays the SJ value at which Eye Width (EW) and Eye height (EH) needs to be computed.
DMI	Displays the DMI value at which Eye Width (EW) and Eye height (EH) needs to be computed.
Amplitude	Displays the amplitude level at which Eye Width (EW) and Eye height (EH) needs to be computed.
Exhaustive Sweep	Select to run the stressed eye calibration for all combinations of Amplitude, SJ, and DMI within the sweep range with defined step sizes.
# acqs	Enter the number of waveforms used to obtain the average EW and EH.

Parameter	Description
Configuration	Select to configure initial settings, step size, sweep range. Initial Settings - Configure the Initial SJ / DMI / Amplitude value from which your Linear Sweep should start (Not applicable for Exhaustive Sweep). Step Size - Configure the SJ / DMI / Amplitude step size value by which the increment or decrement of your SJ / DMI / Amplitude values should happen for Stressed Eye Calibration. Sweep Range - Configure the SJ / DMI / Amplitude min and max sweep range for which the Stressed Eye Calibration is executed. Default - Select to apply the initial settings, step size and sweep range to the default values. OK - Select to apply the configured values of initial settings, step size, sweep range.
Start	Click Start to run the measurements.



Click to move to the next screen.

7. **CMI Calibration:** This tab displays the graph plots of CMI calibration.

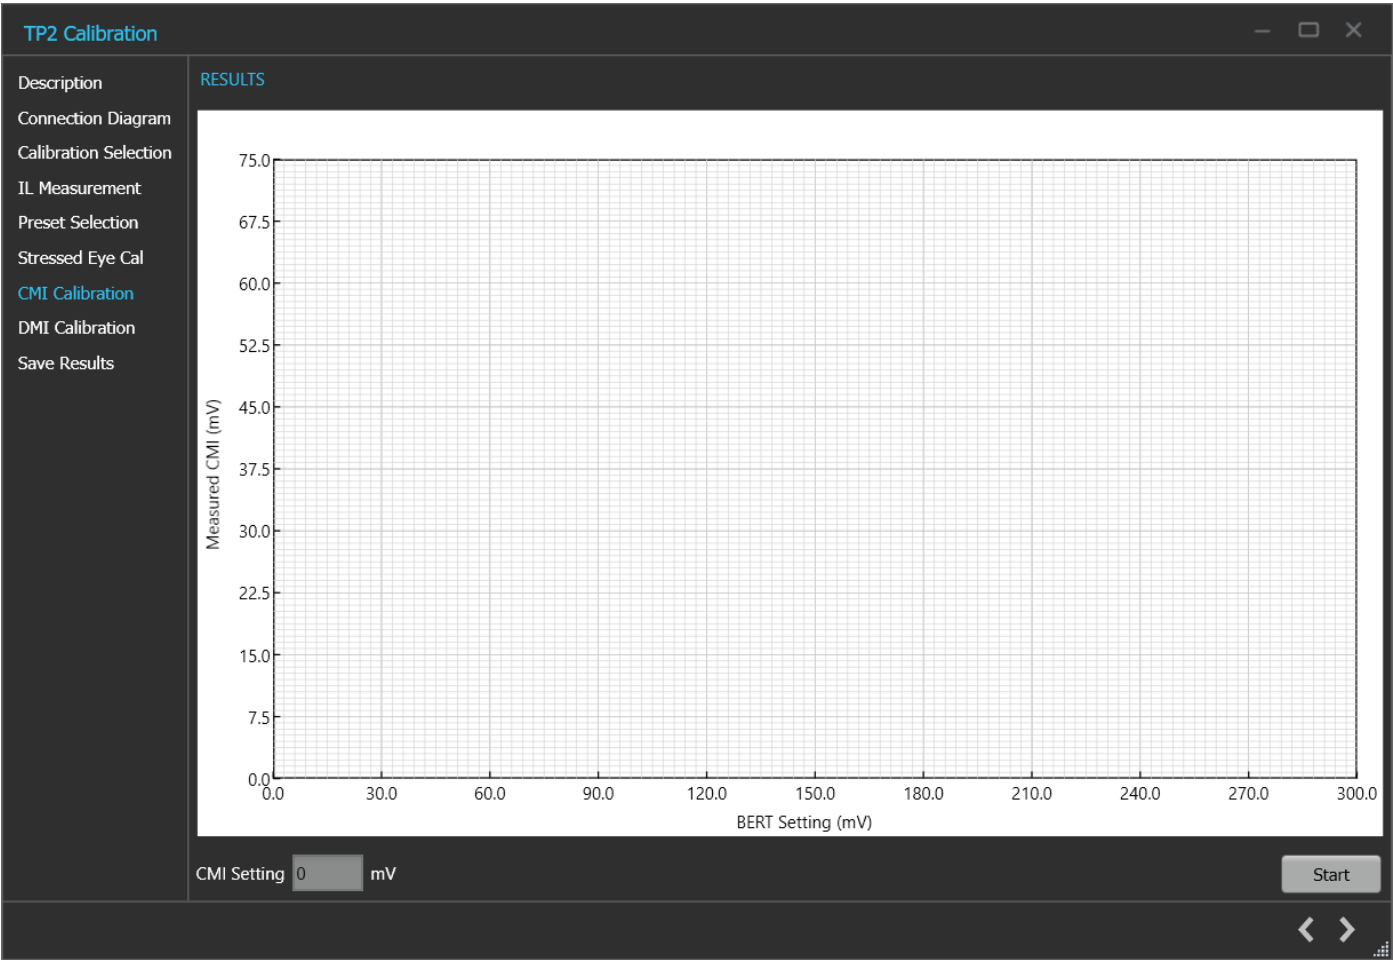

TP2 Calibration : CMI Calibration


TP2 Calibration: CMI Calibration

Parameter	Description
CMI Setting	Displays the calibrated CMI setting corresponding to nominal value.
Start	Click Start to run the measurement.



Click to move to the next screen.

8. **DMI Calibration:** This tab displays the graph plots of DMI calibration.

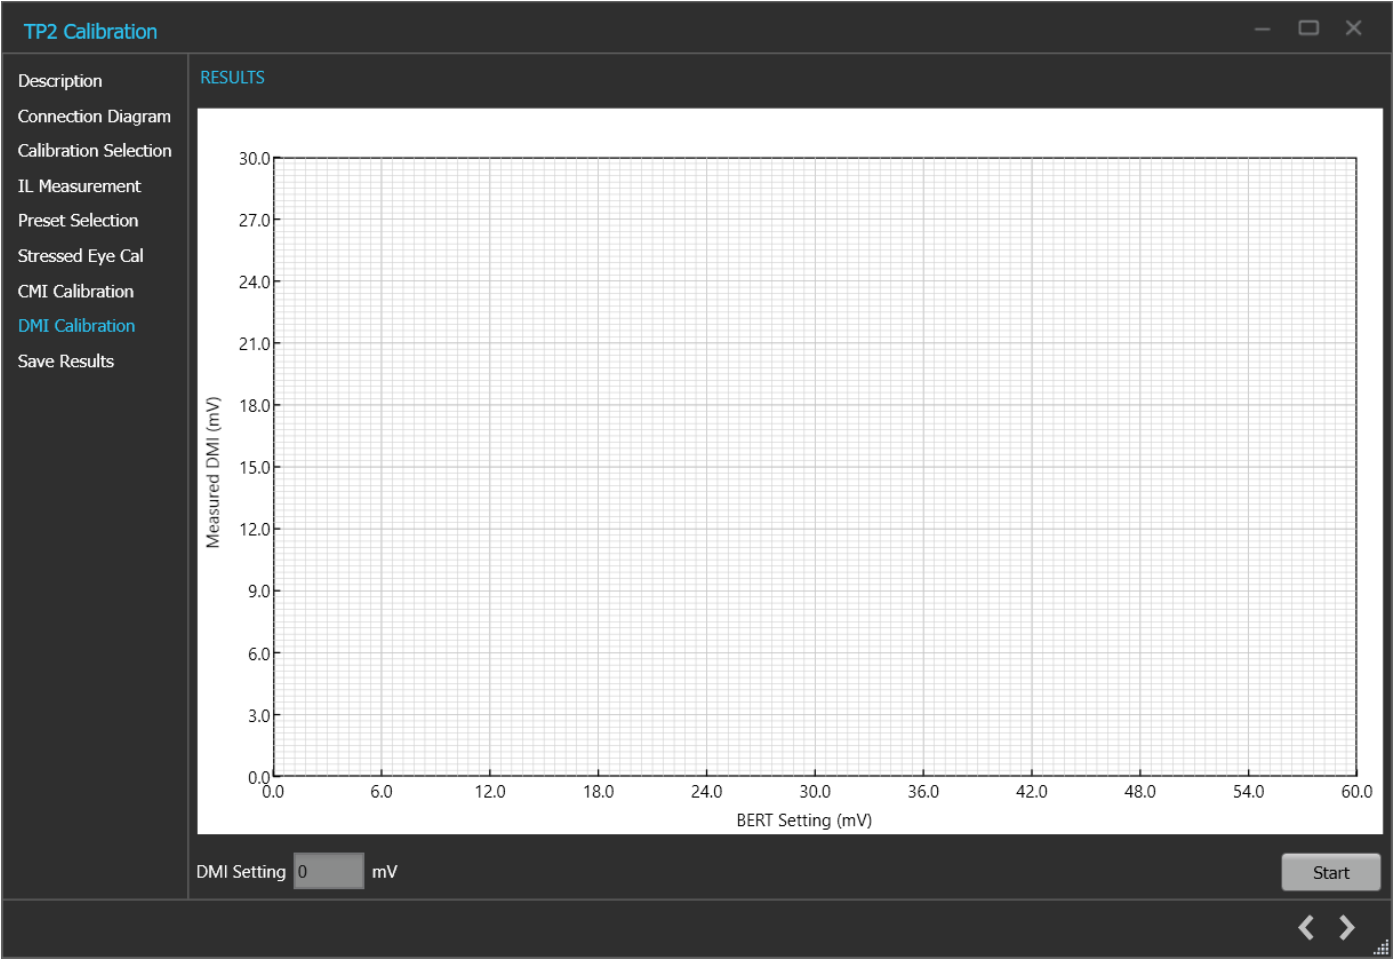

TP2 Calibration : DMI Calibration

TP2 Calibration: DMI Calibration

Parameter	Description
DMI Setting	Displays the calibrated DMI setting corresponding to nominal value.
Start	Click Start to run the measurement.



Click to move to the next screen.

9. **Save Results:** This tab allows you to save all the TP2 calibration results.

TP2 Calibration

Description

Connection Diagram

Calibration Selection

IL Measurement

Preset Selection

Stressed Eye Cal

CMI Calibration

DMI Calibration

Save Results

Unique ID

Generated By

ISI Pair

Comments

Save

TP2 Calibration : Save results

TP2 Calibration: Save Results

Click  to complete the TP2 calibration and close the wizard.

NOTE: Completion of the TP2 calibration process or in the event of cancellation of the process, the BERT data generator is turned off automatically by the PCIe6.0 (CEM) Test Application.


Tests panel

Rx LEQ Test

Rx LEQ Test procedure

Click **Rx LEQ Test** under the Tests panel to view the measurement results. Click  at the right end corner of the application, to launch the Rx LEQ test wizard. This wizard will guide you through the sequential procedure to perform the test.

1. **Calibration Selection:** This tab allows you to select the required DUT type, Clock Architecture, BERT Clock type and TP2 Calibration file from the drop-down list. The drop-down lists all the TP2 calibration files available as per the choice made under DUT Type selection.

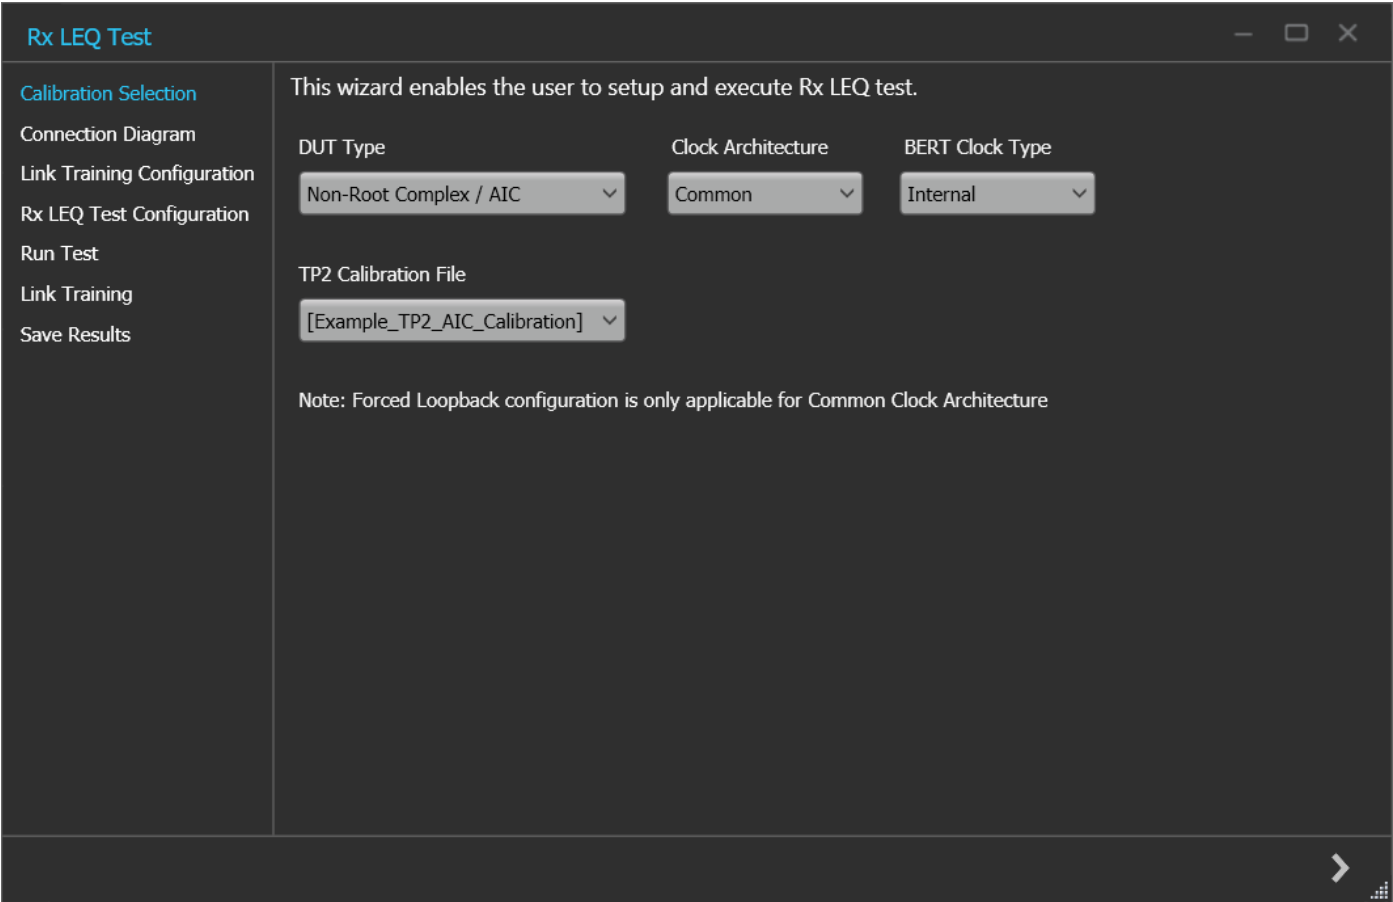

Rx LEQ Test: Calibration Selection


Rx LEQ Test: Calibration Selection

Parameter	Description
DUT Type	Select the required DUT type. Non-Root Complex / AIC Root Complex / System
Clock Architecture	Select the desired clock architecture.
BERT Clock Type	Select the required BERT clock type.
TP2 Calibration File	Select the required TP2 calibration file.




Click to move to the next screen.

2. **Connection Diagram:** This tab displays the connection diagram for the Rx LEQ test. The connection diagram is the different for AIC and System in case of Rx LEQ test.

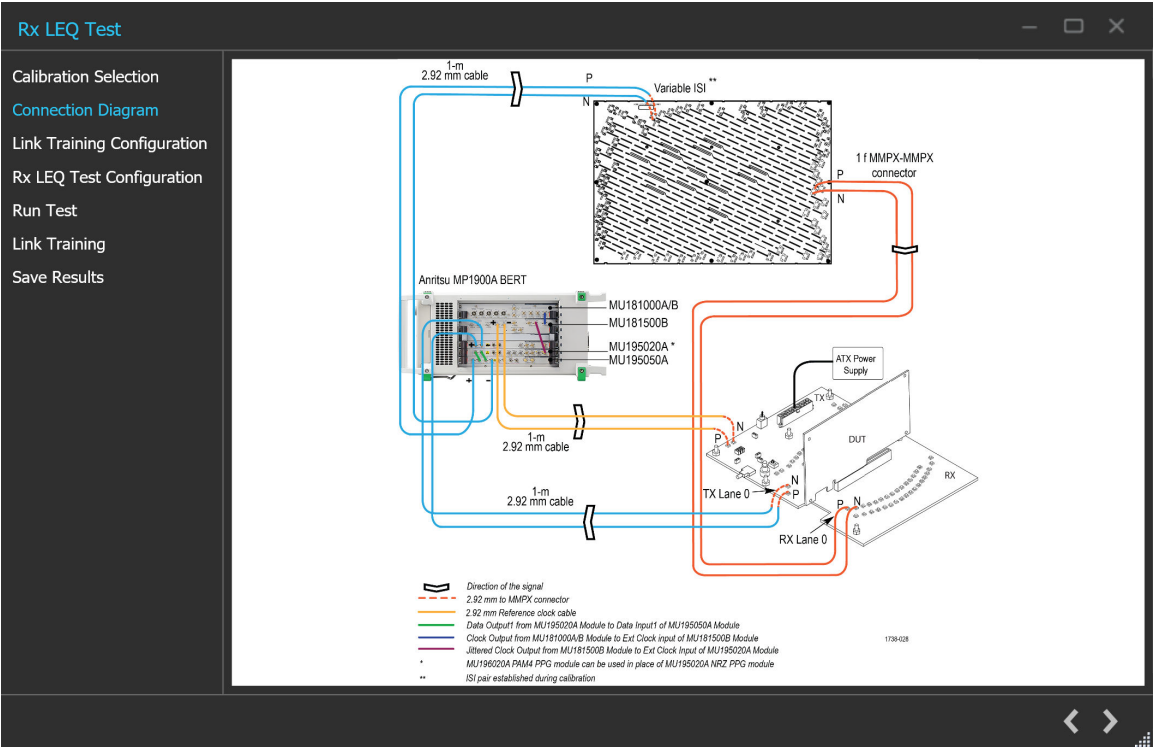

Rx LEQ Test: Connection Diagram(AIC)

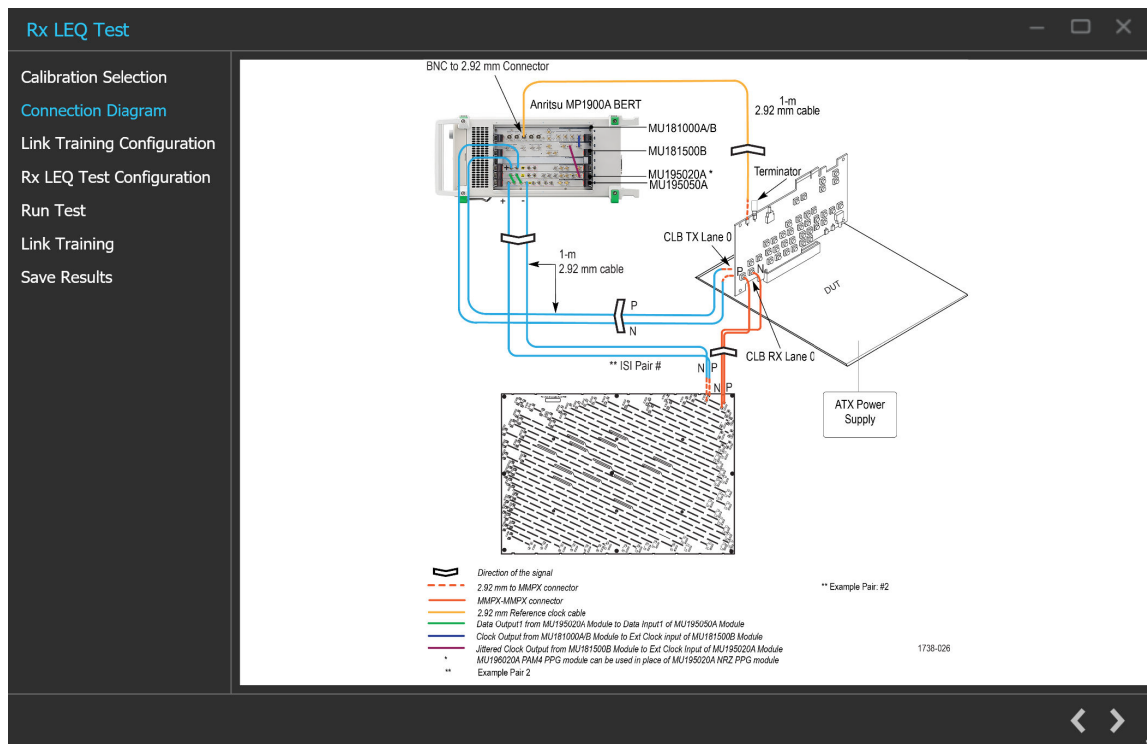

Rx LEQ Test: Connection Diagram(System)



Click  to move to the next screen.

3. **Link Training Configuration:** This tab allows you to configure the parameters for link training.

Rx LEQ Test

Calibration Selection
Connection Diagram
Link Training Configuration
Rx LEQ Test Configuration
Run Test
Link Training
Save Results

Link Training Forced Loopback

PCIe Slot Type: x16
Lane: 0
Loopback Mode: Recovery Full EQ
BERT Initial Preset: Q5
DUT Initial Preset: Q5
DUT Target Preset: Q5
Link Number: 0

☐ Transmit MCP in Loopback
☒ Keep DUT in loopback after test execution is complete
☒ Return Path Optimization

☐ Manual File Path: Clear
☐ Auto Run RPO

Note: Once the Run RPO process is complete, the calibration file will be automatically set in the Manual mode File Path.
This will overwrite BERT CTLE, if configured.

DUT Power Options

External CBB Controller

DUT Power ON Type : ☐ Manual ☒ Pause For Power Cycle ☐ Automatic

Script File Location: ...

Delay: 5 s

Rx LEQ Test: Link Training Configuration (Link Training-External)

Rx LEQ Test

Calibration Selection

Connection Diagram

Link Training Configuration

Rx LEQ Test Configuration

Run Test

Link Training

Save Results

Link TrainingForced Loopback

Preset Selection

BERT Initial PresetQ0

Preshoot20dB

Preshoot10dB

De-emphasis0dB

Loopback PatternModified Compliance

Auto Search Options

BasicPAM4 Fine

Advanced

EyeCoarse

DelayCoarse

BERT CTLE Selection

AutomaticManual

CTLE0dB

Note: The BERT CTLE is used for back-channel equalization.

BERT LFE / DFE Selection

AutomaticManual

LFE0dB

DFE0

Note: Auto Search options may differ based on ED Module (NRZ/PAM4) connected to BERT.

Rx LEQ Test: Link Training Configuration (Forced Loopback)

Rx LEQ Test: Link Training Configuration for Link Training

Parameter	Description
PCIe Slot Type	Select the required PCIe slot from the drop-down list.
Lane	Select the lane to be tested from the drop-down list.
Loopback Mode	Select the required loopback mode from the drop-down list.
BERT Initial Preset	Select the Preset to be set on the BERT PPG during loopback from the drop-down list.

Application Help

WWW.TEK.COM | 67

Parameter	Description
DUT Initial Preset	Select the Preset to be set on the DUT Tx during loopback from the drop-down list.
DUT Target Preset	Select the Preset to be set on the DUT Tx as the final preset during link training.
Link Number	Enter the link number value.
Keep DUT in loopback after test execution is complete	Select to keep the DUT in the loopback after test execution is complete.
Return Path Optimization	Select the required Return Path Optimization method . • Manual • Auto
DUT Power options	Select the required DUT power options. External CBB Controller
DUT Power ON Type	Select the required DUT power ON type. Manual Pause For Power Cycle Automatic
Script File Location	Browse and navigate to the path and select the required script file. Enabled only when Automatic is selected as DUT Power ON Type.
Delay	Enter the delay time in seconds.
Auto Reset	Select the required Auto Reset and enter the values in seconds. Power Cycle Power Reset Waiting Time PCIe CBB Controller should be connected to the BERT for the control to be functional.

Rx LEQ Test: Link Training Configuration for Forced Loopback

Parameter	Description
BERT Preset Selection	
Preset	Select the BERT Tx Preset setting from the drop-down list.
Preshoot	Displays the preshoot value corresponding to the choice of preset. Editable for Custom Preset selection.
De-emphasis	Displays the de-emphasis value corresponding to the choice of preset. Editable for P10 and Custom Preset selection.

Parameter	Description
Loopback Pattern	Select the required loopback pattern from the drop-down. Modified Compliance Compliance Clock Pattern PRBS7 PRBS9 PRBS10 PRBS11 PRBS15 PRBS20 PRBS23 PRBS31
Auto Search	Select to enable the auto search mode and choose from the drop-down. The drop-down contains the following elements: Fine Coarse
BERT CTLE Selection	
Automatic	Enables automatic CTLE selection for back-channel equalization in the BERT Error Detector.
Manual	Select to manually choose the BERT CTLE selection.
CTLE	Select to enable and enter the BERT Error Detector CTLE value in dB.



Click  to move to the next screen.

4. **Rx LEQ Test Configuration:** This tab allows you to configure the Rx LEQ test settings.

Rx LEQ Test

Calibration Selection

Connection Diagram

Link Training Configuration

Rx LEQ Test Configuration

Run Test

Link Training

Save Results

BasicSKP Ordered Set

☒ Apply SSC to Data and Clock output

BER Settings

BER1 E-6Error Limit1

Test Length

Duration15 sConfidence99.999 % at 5E+11 Bits

Stress Configuration

CalibratedCustomizedUn-Calibrated

CMI75 mVRJ0.25 ps (RMS)

DMI5 mV SJ2.563 ps

Amplitude800 mV (Diff)

Load Stresses

Note: Use the 'Load Stresses' option exclusively for loading preset and stress parameters in BERT


BER Measurement Pattern

Modified Compliance

Rx LEQ Test: Rx LEQ Test Configuration(Basic)

Application Help

WWW.TEK.COM | 70

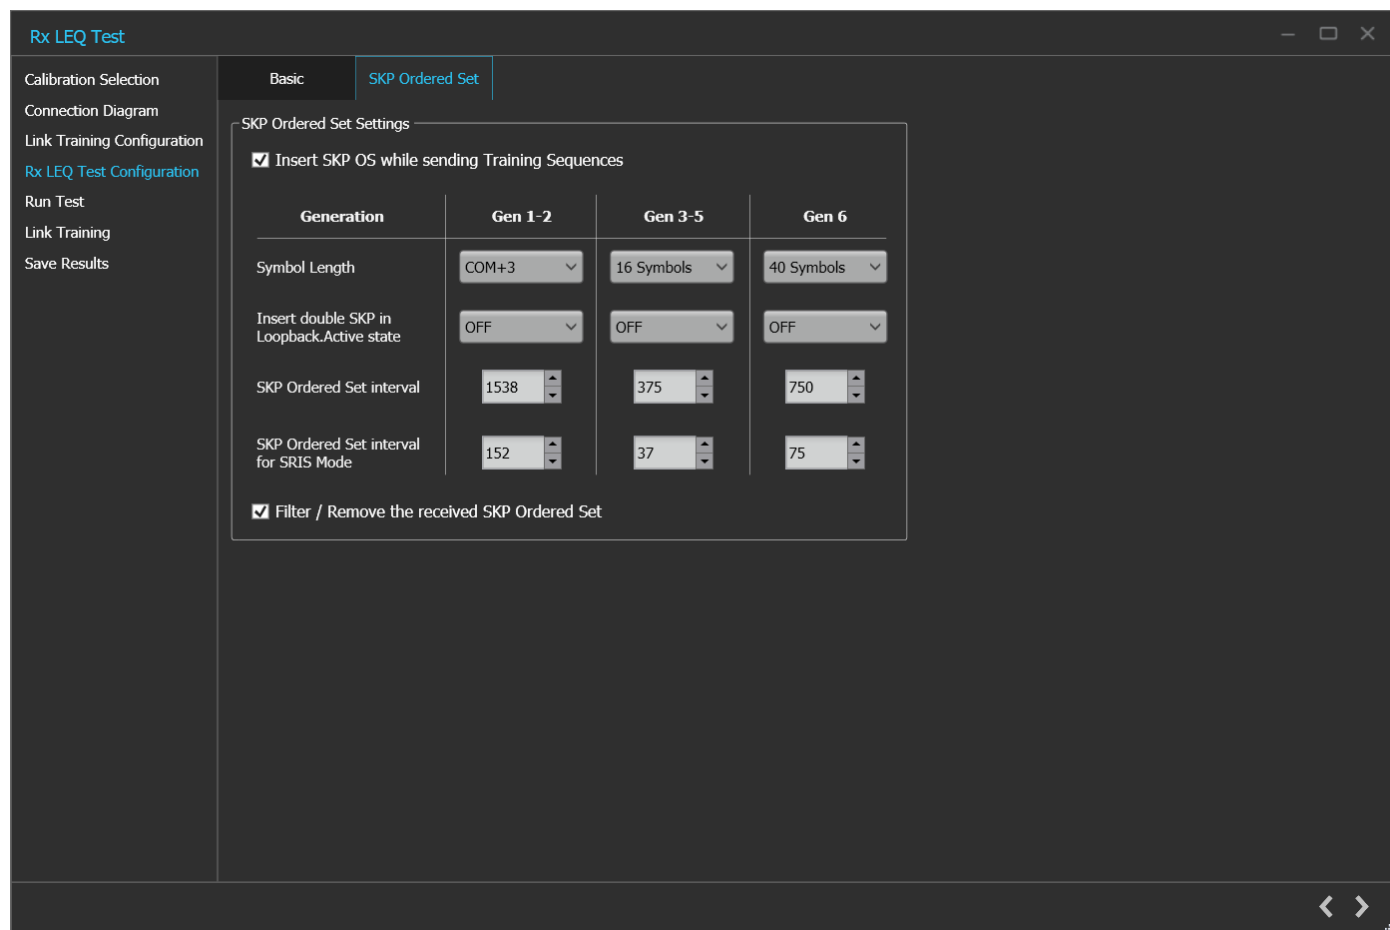

Rx LEQ Test: Rx LEQ Test Configuration(SKP Ordered Set)

Rx LEQ Test: Rx LEQ Test Configuration (Basic)

Parameter	Description
Apply SSC to data and clock output	Select to apply SSC to data and clock output.
BER	Number of bits in error that can be tolerated.
Error Limit	Enter the required error limit value. The default value is 1.
Test Length	Enter the test length value in second. Duration - Enter the test length duration value. Confidence - Displays the test length confidence value.
Stress Configuration	Select the stress configuration among calibrated, customized, un-calibrated.
CMI	Displays the CMI value in mV. The stress on the waveform is defined by the parameters of CMI.
DMI	Displays the DMI value in mV. The stress on the waveform is defined by the parameters of DMI.
Amplitude	Displays the amplitude value in mV. The stress on the waveform is defined by the parameters of Amplitude.

Parameter	Description
RJ	Displays the RJ value in ps. The stress on the waveform is defined by the parameters of RJ.
SJ	Displays the SJ value in ps. The stress on the waveform is defined by the parameters of SJ.
Load Stresses	Click Load Stresses to apply all the configured stress parameters CMI, DMI, SJ, and amplitude in the BERT. Use the Load Stresses option exclusively to load preset and stress parameters into BERT.
BER Measurement Pattern	Select the required BER measurement pattern from the drop-down list. Modified Compliance Compliance Jitter Meas PRBS7 PRBS9 PRBS10 PRBS11 PRBS15 PRBS20 PRBS23 PRBS31 User


Rx LEQ Test: Rx LEQ Test Configuration (SKP Ordered Set)

Parameter	Description
SKP Ordered Set Settings	
Insert SKP OS while sending Training Sequence	Click to insert SKP OS while sending training sequence.
Symbol Length	Select the required symbol length from the drop-down list for the corresponding generation.
Insert double SKP in Loopback.Active state	Select the required option (ON/OFF) from the drop-down list for the corresponding generation.
SKP Ordered Set interval	Select the required interval value from the drop-down list for the corresponding generation.
Filter/Remove the received SKP Order Set	Select to enable the filter or remove the received SKP ordered set.



Click  to move to the next screen.

5. **Run Test:** This tab allows you to configure the settings to run the test.

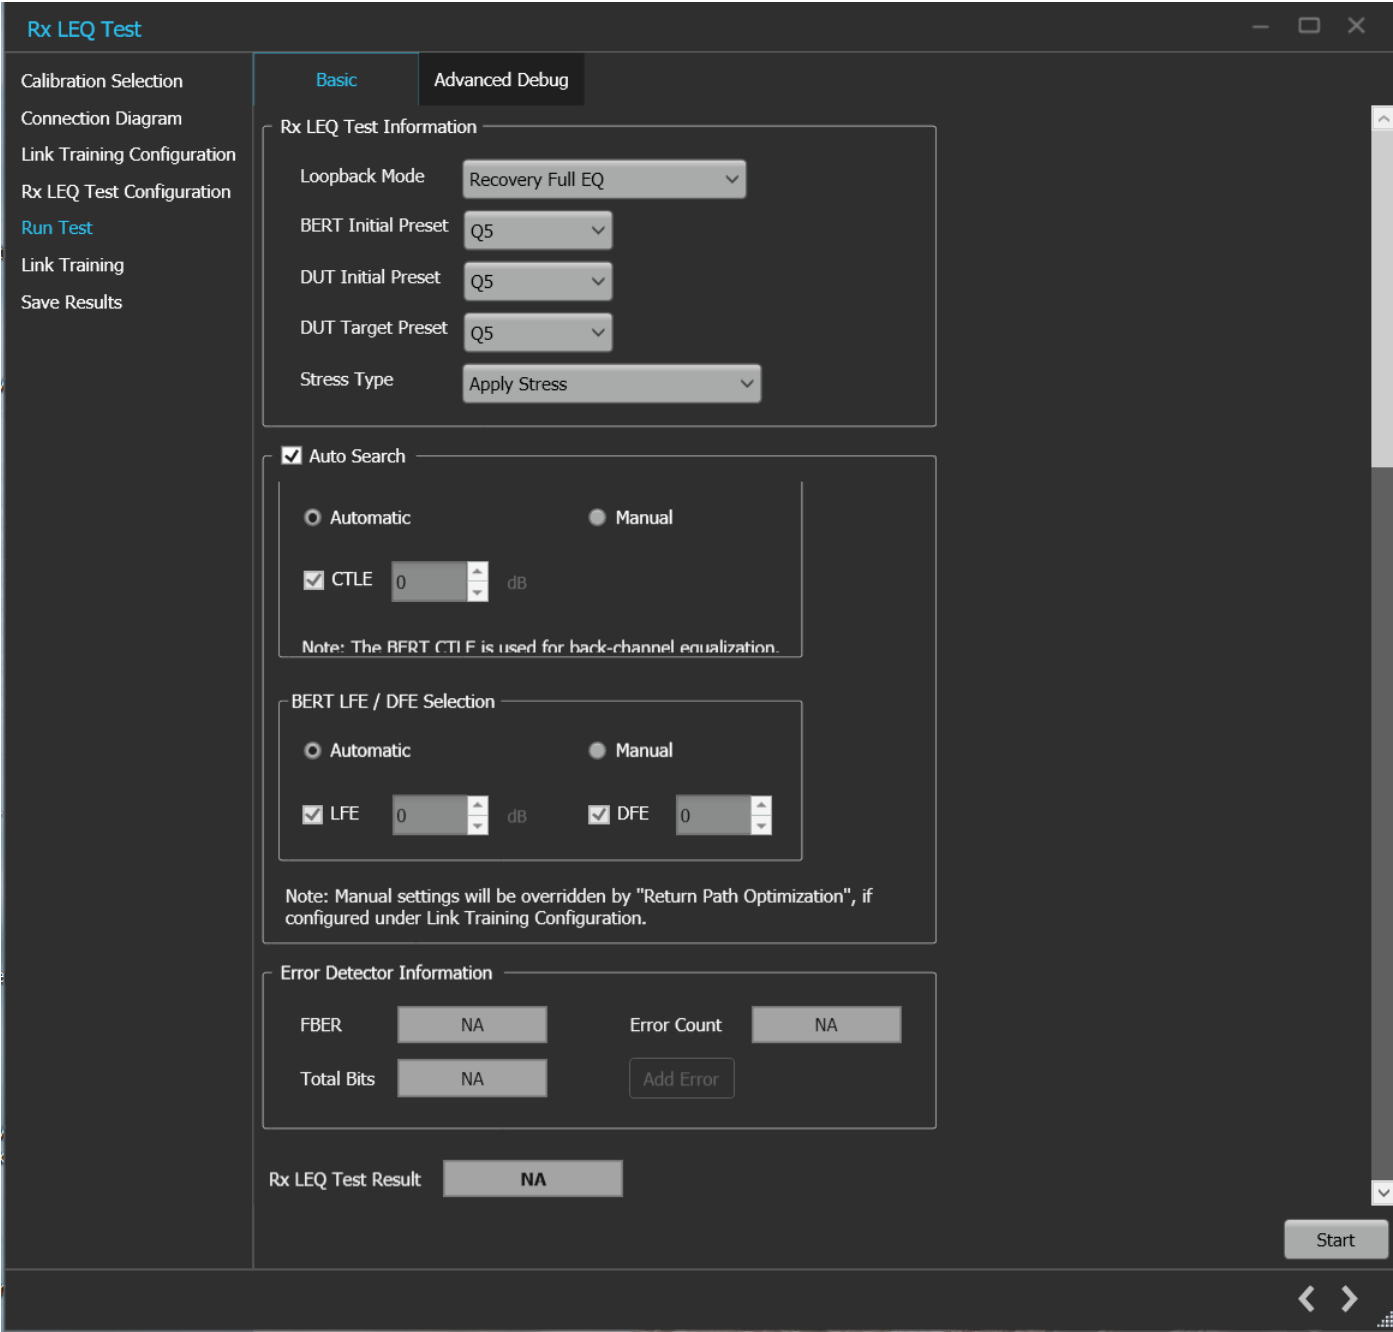

Rx LEQ Test: Run Test(Basic)

Rx LEQ Test

Calibration Selection

Connection Diagram

Link Training Configuration

Rx LEQ Test Configuration

Run Test

Link Training

Save Results

Basic

Advanced Debug

Stress Configuration

Customized

Un-Calibrated

☒ CMI

75

mV

☒ RJ

0.25

ps (RMS)

☒ DMI

5.05

mV

☒ SJ

2.563

ps

Amplitude

800

mV (Diff)

BERT Tx EQ

Customized

Un-Calibrated

Tx EQ Type

Preset

Preset

Q5

Pattern

Test Pattern

COMP

Comp

MCP

Note: Use COMP / FLIT / USER test pattern in case of SRNS and SRIS clock architecture

Auto Search

BERT CTLE Selection

☐ Automatic

☐ Manual

☒ CTLE

0

dB

Note: The BERT CTLE is used for back-channel equalization.

BERT LFE / DFE Selection

☐ Automatic

☐ Manual

☒ LFE

0

dB

☒ DFE

0

Auto Search

Error Detector Information

Error Count

NA

FBER

NA

Total Bits

NA

Status

NA

☐ Redo Link Training

Export

Reset

Start

Rx LEQ Test: Run Test(Advanced Debug)

Rx LEQ Test: Run Test (Basic)

Parameter	Description
Rx LEQ Test Information	
Loopback Mode	Select the required loopback mode from the drop-down list.
BERT Initial Preset	Select the Preset to be set on the BERT PPG during loopback from the drop-down list.
DUT Initial Preset	Select the Preset to be set on the DUT Tx during loopback from the drop-down list.
DUT Target Preset	Select the Preset to be set on the DUT Tx as the final preset during link training.
Stress Type	Select the required Stress type from the drop-down list. Apply stress Inhibit stress during loopback Disable stress
Auto Search and Tune CDR	Enable to perform Auto Search and Tune CDR after Link Training: Automatic - Search and set the appropriate CTLE on the Error Detector. Manual – Sets the configured CTLE value on the Error Detector. CTLE - Enable and enter the BERT CTLE value in dB
Error Detector Information	
FBER	Displays the FBER information.
Error Count	Displays the error count information.
Total Bits	Displays the total number of bits.
Rx LEQ Test Result	Displays the Rx LEQ test result.
Start	Click to start the test execution.

Rx LEQ Test: Run Test (Advanced Debug)


Parameter	Description
Stress Configuration	Select the stress configuration among Customized and Un-Calibrated.
CMI	Click to display the CMI value in mV. The stress on the waveform is defined by the parameters of CMI.
DMI	Click to display the DMI value in mV. The stress on the waveform is defined by the parameters of DMI.
Amplitude	Click to display the amplitude value in mV. The stress on the waveform is defined by the parameters of Amplitude.
RJ	Click to display the RJ value in ps. The stress on the waveform is defined by the parameters of RJ.

Parameter	Description
SJ	Click to display the SJ value in ps. The stress on the waveform is defined by the parameters of SJ.
BERT Tx EQ	Select BERT Tx EQ among Customized and Un-calibrated
Tx EQ Type	Select the Tx EQ type from the drop-down list.
Preset	Select the Preset from the drop-down list.
Test Pattern	Select the required test pattern type from the drop-down list.
Comp	Select the required Compliance pattern type from the drop-down list.
Auto Search and Tune CDR	Auto Search mode - Select to enable the auto search mode from the drop-down list. Fine Coarse BERT CTLE Selection: Automatic - Search and set the appropriate CTLE on the Error Detector. Manual - Sets the configured CTLE value on the Error Detector. BERT CTLE - Enter the BERT CTLE value in dB. Auto Search - Click to enable Auto Search when the DUT is in loopback Tune CDR - Click to enable CDR Tune when the DUT is in loopback
Error Count	Displays the error count information.
Total Bits	Displays the total number of bits.
FBER	Displays the FBER information.
Status	Displays the status information.
Export	Click to export the Advance debug settings.
Reset	Click to reset the Advance debug settings.
Redo Link Training	Select to enable the redo link training in-case of sync or clock error. Export Reset
Start	Click to start the text execution.



Click  to move to the next screen.

6. **Link Training:** This tab displays the loopback steps with its status in a tabular form

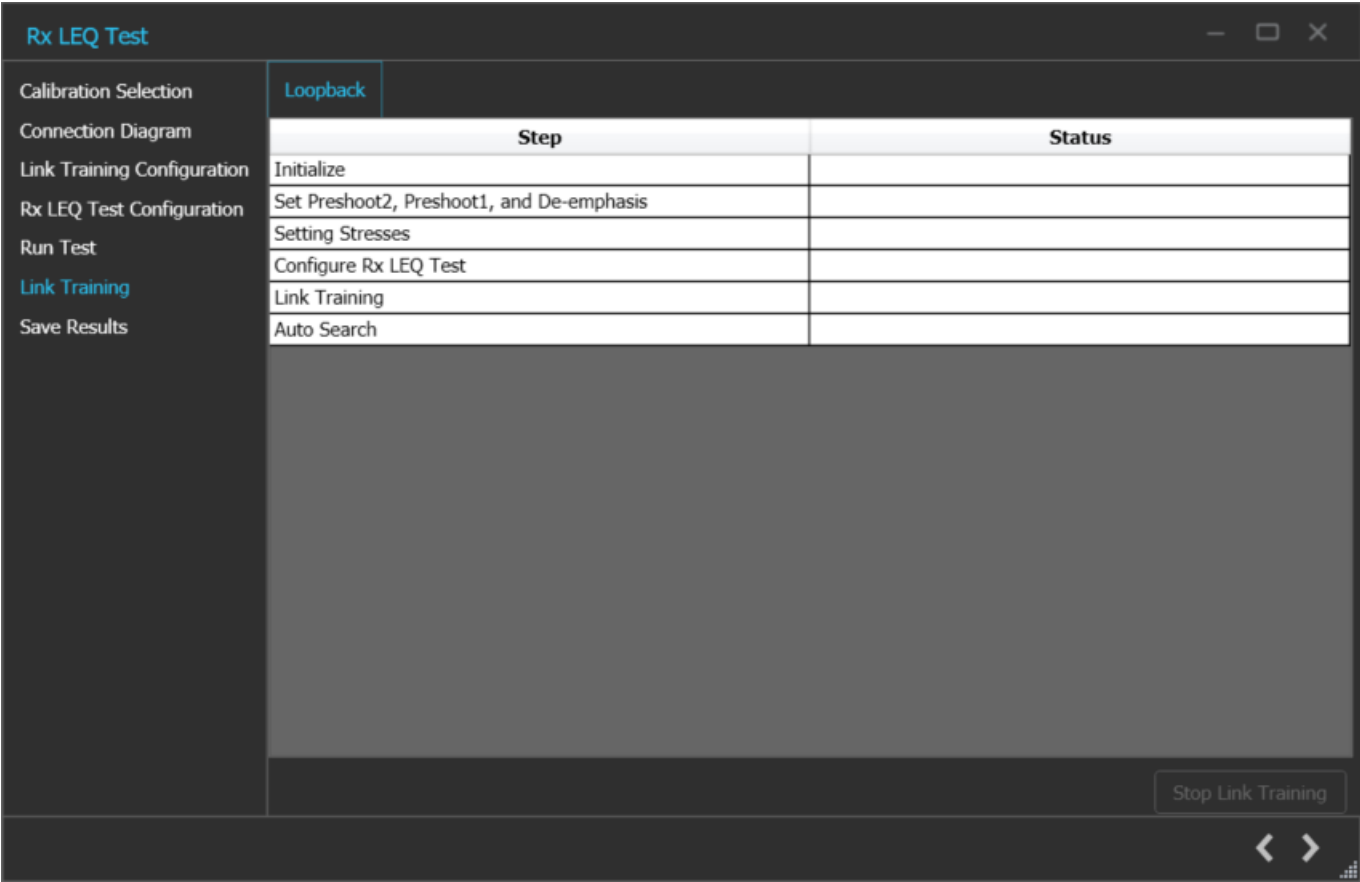

Rx LEQ Test: Link Training

Rx LEQ Test: Link Training

Parameter	Description
Step	Lists the different steps that are prerequisite for initiating link training
Status	Indicates the completion status of each activity
Initialize	Initialize the BERT for performing link training
Set Preshoot and Deemphasis	Sets the preset as per BERT Initial Preset in Link Training Configuration wizard It sets all the calibrated Presets on the BERT from P0-P9
Setting Stresses	Sets stresses as per the user selection in Configure Test wizard
Configure Rx LEQ Test	Sets the BERT, DUT initial and Target Presets, Loopback mode (Recovery, Config), Link and Lane number
Link Training	Initiates the link training process in MX183000A
Auto Search	Fine-tunes the error detector’s delay, threshold, and CTLE settings for the incoming DUT TX signal.
Tune CDR	Fine-tunes the Clock and Data Recovery (CDR) settings in the error detectors for the incoming DUT TX signal.



Click to move to the next screen.

7. **Save Results:** This tab allows you to save the Rx LEQ test results.

Rx LEQ Test

Calibration Selection

Connection Diagram

Link Training Configuration

Rx LEQ Test Configuration

Run Test

Link Training

Save Results

Unique ID

Generated By

Comments

Save

Rx LEQ Test: Save Results

Rx LEQ Test: Save Results

Parameter	Description
Unique ID	Enter the Unique ID of the calibrated equipment in the text box.
Generated By	Enter the user name in the text box.
Comments (Optional)	Enter the required comments in the comment box.
Save	Click to save the results.



Click to complete the Rx LEQ Test and close the wizard.


Tx LEQ Test

Tx LEQ Test procedure



Click **Tx LEQ Test** under the Tests panel to view the measurement results. Click  at the right end corner of the application, to launch the Tx LEQ test wizard. This wizard will guide you through the sequential procedure to perform the test.

1. **Calibration Selection:** This tab allows you to select required DUT type, BERT Clock type and TP3 Calibration file from the drop-down list.

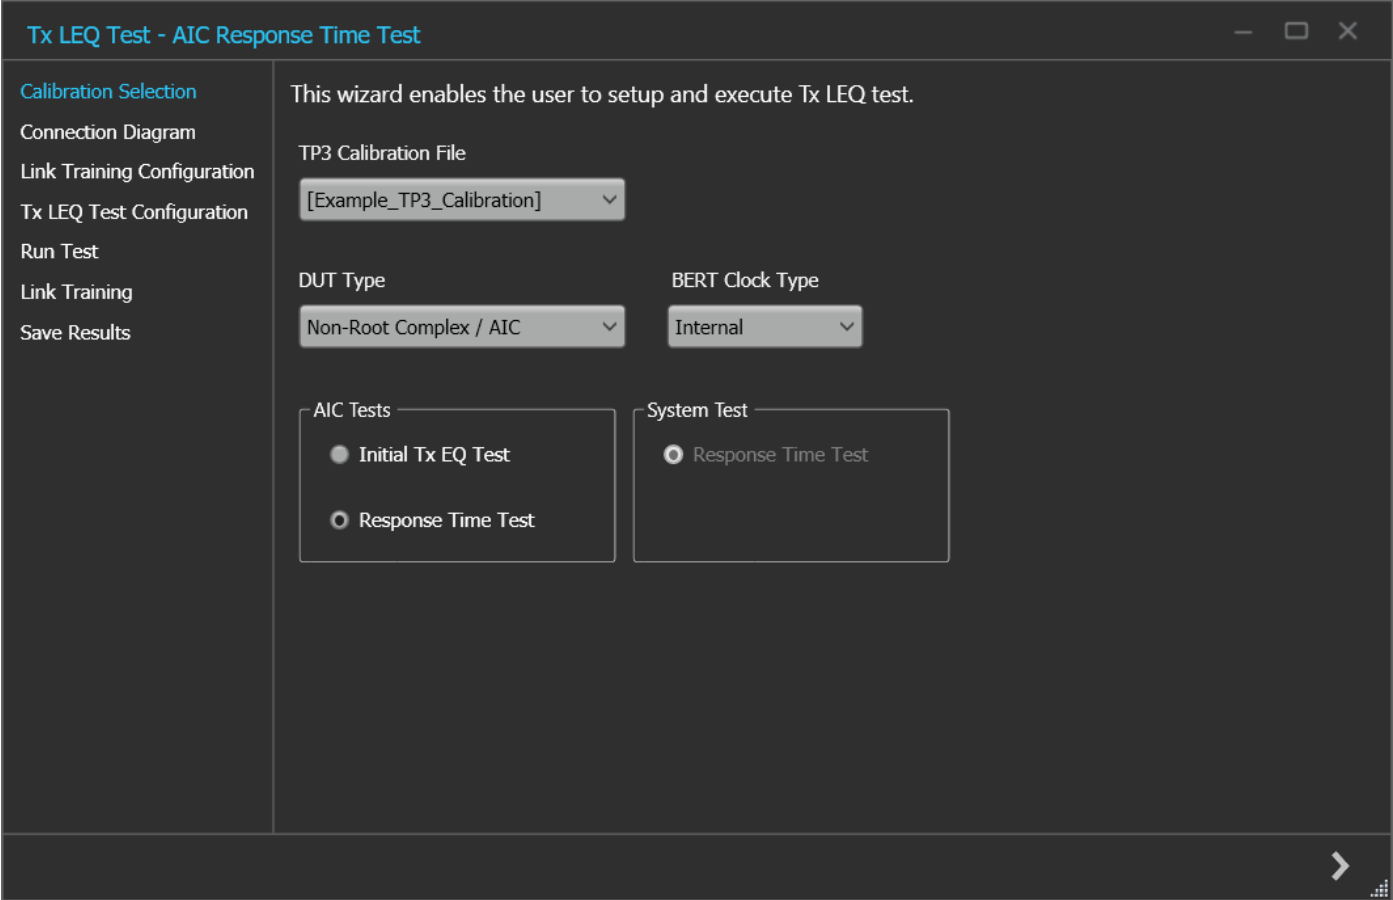

Tx LEQ Test: Calibration Selection


Tx LEQ Test: Calibration Selection

Parameter	Description
TP3 Calibration File	Select the required TP3 calibration file.
DUT Type	Select the required DUT type. Non-Root Complex / AIC Root Complex / System
BERT Clock Type	Select the required BERT clock type from the drop-down list.
AIC Tests	Select the required AIC test.
System Test	Select the required System test.




Click to move to the next screen.

2. **Connection Diagram:** This tab displays the connection diagram for the Tx LEQ test. The connection diagram is the different for AIC and System in case of Tx LEQ test.

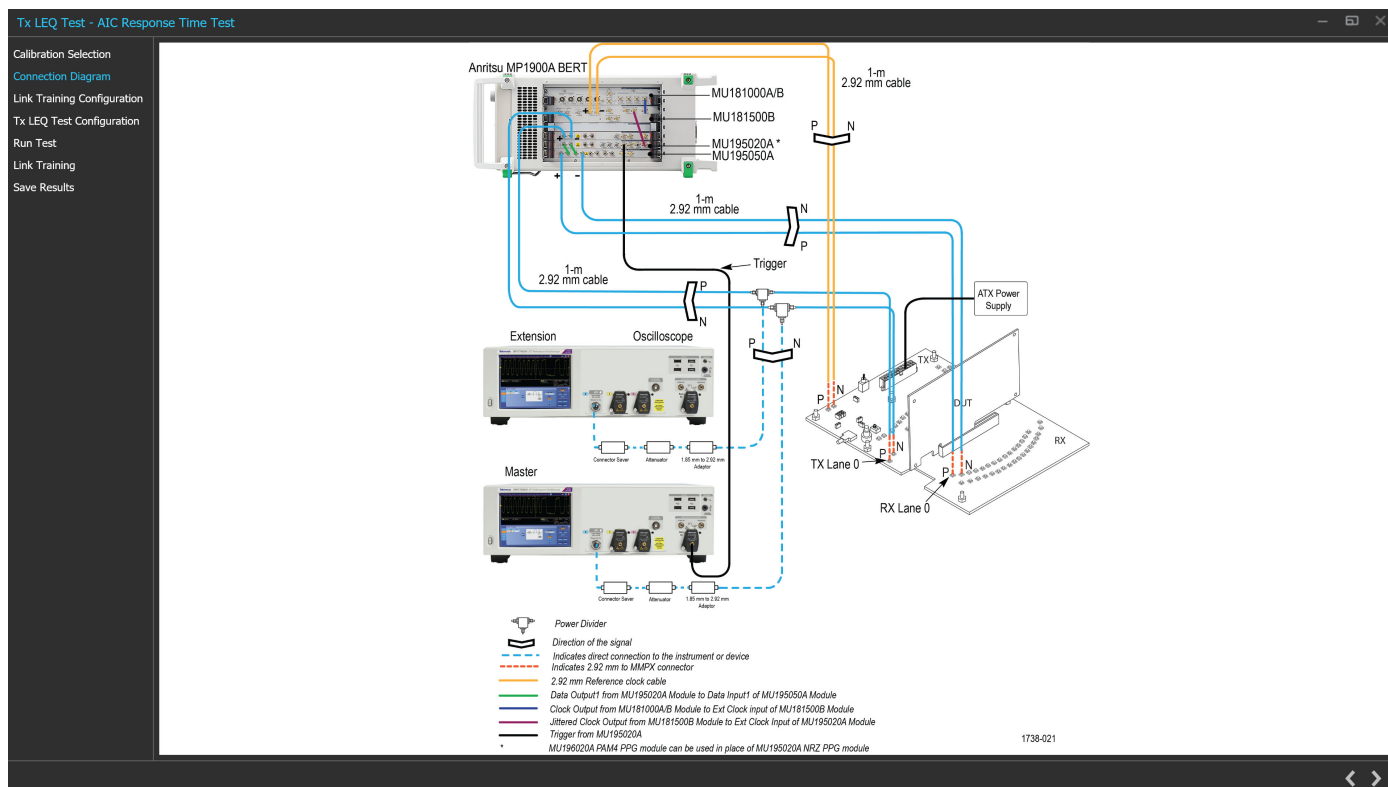

Tx LEQ Test: Connection Diagram(AIC)

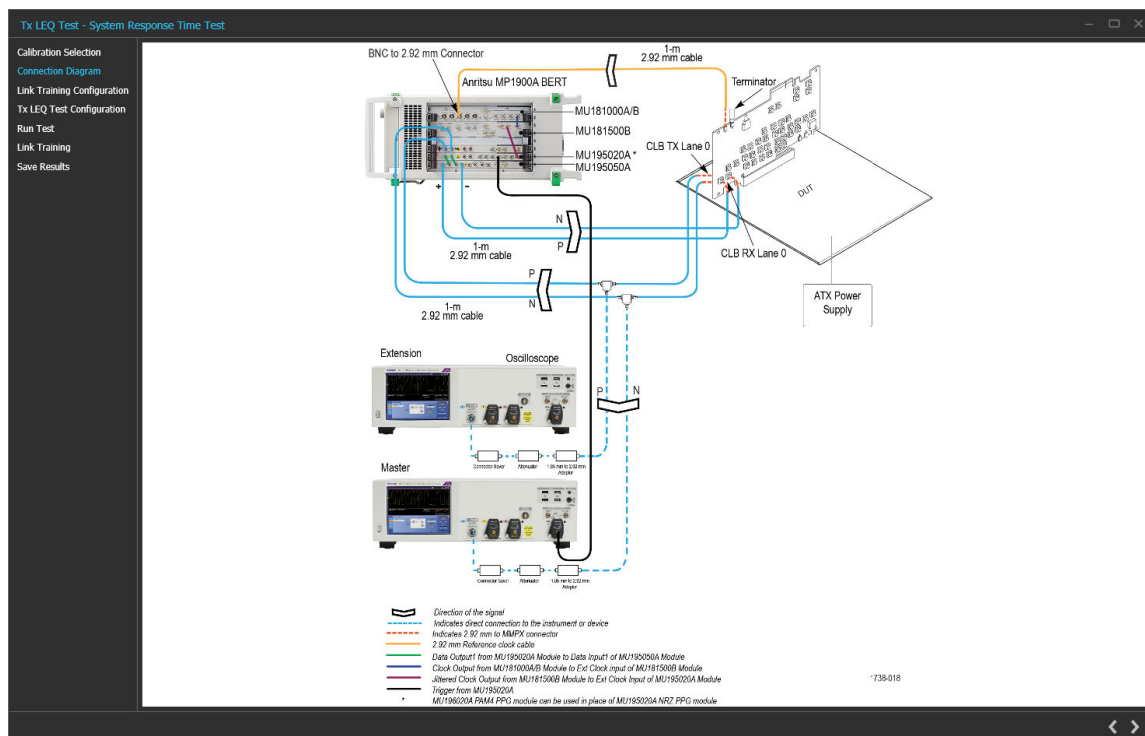

Tx LEQ Test: Connection Diagram(System)

The System Connection Diagram for Tx LEQ Test is same as the connection diagram shown above for the DPO71AX Oscilloscope



Click  to move to the next screen.

3. **Link Training Configuration:** This tab allows you to configure the parameters for link training.

Tx LEQ Test - AIC Response Time Test

Calibration Selection
 Connection Diagram
 Link Training Configuration
 Tx LEQ Test Configuration
 Run Test
 Link Training
 Save Results

Loopback Mode: Recovery Full EQ

BERT Initial Preset: Q5

Lane Number: 0

Link Number: 0

☒ BERT CTLE: 0 dB

☐ Transmit MCP in Loopback

☒ Return Path Optimization

☐ Manual File Path: Clear
☐ Auto Run RPO

Note: Once the Run RPO process is complete, the calibration file will be automatically set in the Manual mode File Path.
 This will overwrite BERT CTLE, if configured.

DUT Power Options

External CBB Controller

DUT Power ON Type : ☐ Manual ☐ Pause For Power Cycle ☒ Automatic

Script File Location: ...

Delay: 5 s

Tx LEQ Test: Link Training Configuration (External)

Tx LEQ Test: Link Training Configuration

Parameter	Description
Loopback Mode	Select the required loopback mode from the drop-down list.
BERT Initial Preset	Select the Preset to be set on the BERT PPG during loopback from the drop-down list.
BERT CTLE	Enter the BERT Error Detector CTLE value in dB.
Lane Number	Enter the lane number value.
Link Number	Enter the link number value.
Return Path Optimization	Select the required Return Path Optimization method . • Manual • Auto NOTE: Return path optimization must be performed individually for TXLEQ and RXLEQ.
DUT Power Options	Select the required DUT power options. External CBB Controller
DUT Power ON Type	Select the required DUT power ON type. Manual Pause For Power Cycle Automatic
Script File Location	Browse and navigate to the path and select the required script file. Available only when Automatic is selected as DUT Power ON Type.
Delay	Enter the delay time in seconds.
Auto Reset	Select the required Auto Reset and enter the values in seconds. Power Cycle Power Reset Waiting Time



Click  to move to the next screen.

4. **Tx LEQ Test Configuration:** This tab allows you to configure the Tx LEQ test settings.

Tx LEQ Test - AIC Response Time Test

Calibration Selection

Connection Diagram

Link Training Configuration

Tx LEQ Test Configuration

Run Test

Link Training

Save Results

DUT Waveform Scale50mV/Div

External Attenuation6dB

#Loopback Runs1

Amplitude Configuration

CalibratedCustomizedUn-Calibrated

Amplitude800mV (Diff)

Debug Options

☐ Disable Sigtest Analysis

☐ Use Advanced Algo for Minimal Electrical Change

Tx LEQ Test: Tx LEQ Test Configuration

Tx LEQ Test: Tx LEQ Test Configuration

Parameter	Description
Apply Software Equalization	Select to apply equalization on the waveform using CTLE Filter files during runtime. Automatic - This will find the optimum CTLE for the channel and apply that during waveform acquisition. Manual - User can browse and apply CTLE filter file which will be applied during waveform acquisition.
DUT Waveform Scale	Enter the DUT waveform scale value in mV/Div.
External Attenuation	Displays the value set on RT Scope
#Loopback Runs	Enter the number of loopback runs.
Amplitude Configuration	Select the required amplitude configuration type. Calibrated Customized Un-Calibrated
Amplitude	Enter the amplitude value in mV.
Debug Options	Select the required Debug option Disable Sigtest analysis Disable protocol response time Use advanced Algo for Minimal Electrical change



Click  to move to the next screen.

5. **Run Test:** This tab allows you to display all the presets with its details in the tabular format.

Tx LEQ Test - AIC Response Time Test

Calibration Selection

Connection Diagram

Link Training Configuration

Tx LEQ Test Configuration

Run Test

Link Training

Save Results

	DUT Initial Preset	Target Preset / Coeff	Preshoot2 (dB)	Preshoot1 (dB)	De-emphasis (dB)	Boost (dB)	Electrical Response Time (ns)	Coeff	Result
☒	Q9 ▾	Q0	-	-	-	-	-	-	-
☒	Q9 ▾	Q0 (Coeff)	-	-	-	-	-	-	-
☒	Q9 ▾	Q1	-	-	-	-	-	-	-
☒	Q9 ▾	Q1 (Coeff)	-	-	-	-	-	-	-
☒	Q9 ▾	Q2	-	-	-	-	-	-	-
☒	Q9 ▾	Q2 (Coeff)	-	-	-	-	-	-	-
☒	Q9 ▾	Q3	-	-	-	-	-	-	-
☒	Q9 ▾	Q3 (Coeff)	-	-	-	-	-	-	-
☒	Q9 ▾	Q4	-	-	-	-	-	-	-
☒	Q9 ▾	Q4 (Coeff)	-	-	-	-	-	-	-
☒	Q0 ▾	Q5	-	-	-	-	-	-	-
☒	Q0 ▾	Q5 (Coeff)	-	-	-	-	-	-	-
☒	Q0 ▾	Q6	-	-	-	-	-	-	-
☒	Q0 ▾	Q6 (Coeff)	-	-	-	-	-	-	-
☒	Q0 ▾	Q7	-	-	-	-	-	-	-
☒	Q0 ▾	Q7 (Coeff)	-	-	-	-	-	-	-
☒	Q0 ▾	Q8	-	-	-	-	-	-	-
☒	Q0 ▾	Q8 (Coeff)	-	-	-	-	-	-	-
☒	Q0 ▾	Q9	-	-	-	-	-	-	-
☒	Q0 ▾	Q9 (Coeff)	-	-	-	-	-	-	-

DUT ID

DUT_ID

Clear All

Check All

Start

<

>

Tx LEQ Test: Run Test(AIC Response Time Test)

Tx LEQ Test - AIC Response Time Test

Calibration Selection

Connection Diagram

Link Training Configuration

Tx LEQ Test Configuration

Run Test

Link Training

Save Results

	DUT Initial Preset	Target Preset / Coeff	Preshoot2 (dB)	Preshoot1 (dB)	De-emphasis (dB)	Boost (dB)	Electrical Response Time (ns)	Coeff	Result
☒	Q9 ▾	Q0	-	-	-	-	-	-	-
☒	Q9 ▾	Q0 (Coeff)	-	-	-	-	-	-	-
☒	Q9 ▾	Q1	-	-	-	-	-	-	-
☒	Q9 ▾	Q1 (Coeff)	-	-	-	-	-	-	-
☒	Q9 ▾	Q2	-	-	-	-	-	-	-
☒	Q9 ▾	Q2 (Coeff)	-	-	-	-	-	-	-
☒	Q9 ▾	Q3	-	-	-	-	-	-	-
☒	Q9 ▾	Q3 (Coeff)	-	-	-	-	-	-	-
☒	Q9 ▾	Q4	-	-	-	-	-	-	-
☒	Q9 ▾	Q4 (Coeff)	-	-	-	-	-	-	-
☒	Q0 ▾	Q5	-	-	-	-	-	-	-
☒	Q0 ▾	Q5 (Coeff)	-	-	-	-	-	-	-
☒	Q0 ▾	Q6	-	-	-	-	-	-	-
☒	Q0 ▾	Q6 (Coeff)	-	-	-	-	-	-	-
☒	Q0 ▾	Q7	-	-	-	-	-	-	-
☒	Q0 ▾	Q7 (Coeff)	-	-	-	-	-	-	-
☒	Q0 ▾	Q8	-	-	-	-	-	-	-
☒	Q0 ▾	Q8 (Coeff)	-	-	-	-	-	-	-
☒	Q0 ▾	Q9	-	-	-	-	-	-	-
☒	Q0 ▾	Q9 (Coeff)	-	-	-	-	-	-	-

DUT ID

DUT_ID

Clear All

Check All

Start

<

>

Tx LEQ Test: Run Test(AIC Response Time Test)


Tx LEQ Test: Run Test

Parameter	Description
DUT ID	Enter the DUT ID.
Clear All	Unchecks all the presets in the table.
Check All	Checks all the presets in the table.
Start	Click to start the test execution.



Click to move to the next screen.

6. **Link Training:** This tab displays the loopback steps with its status in a tabular form.

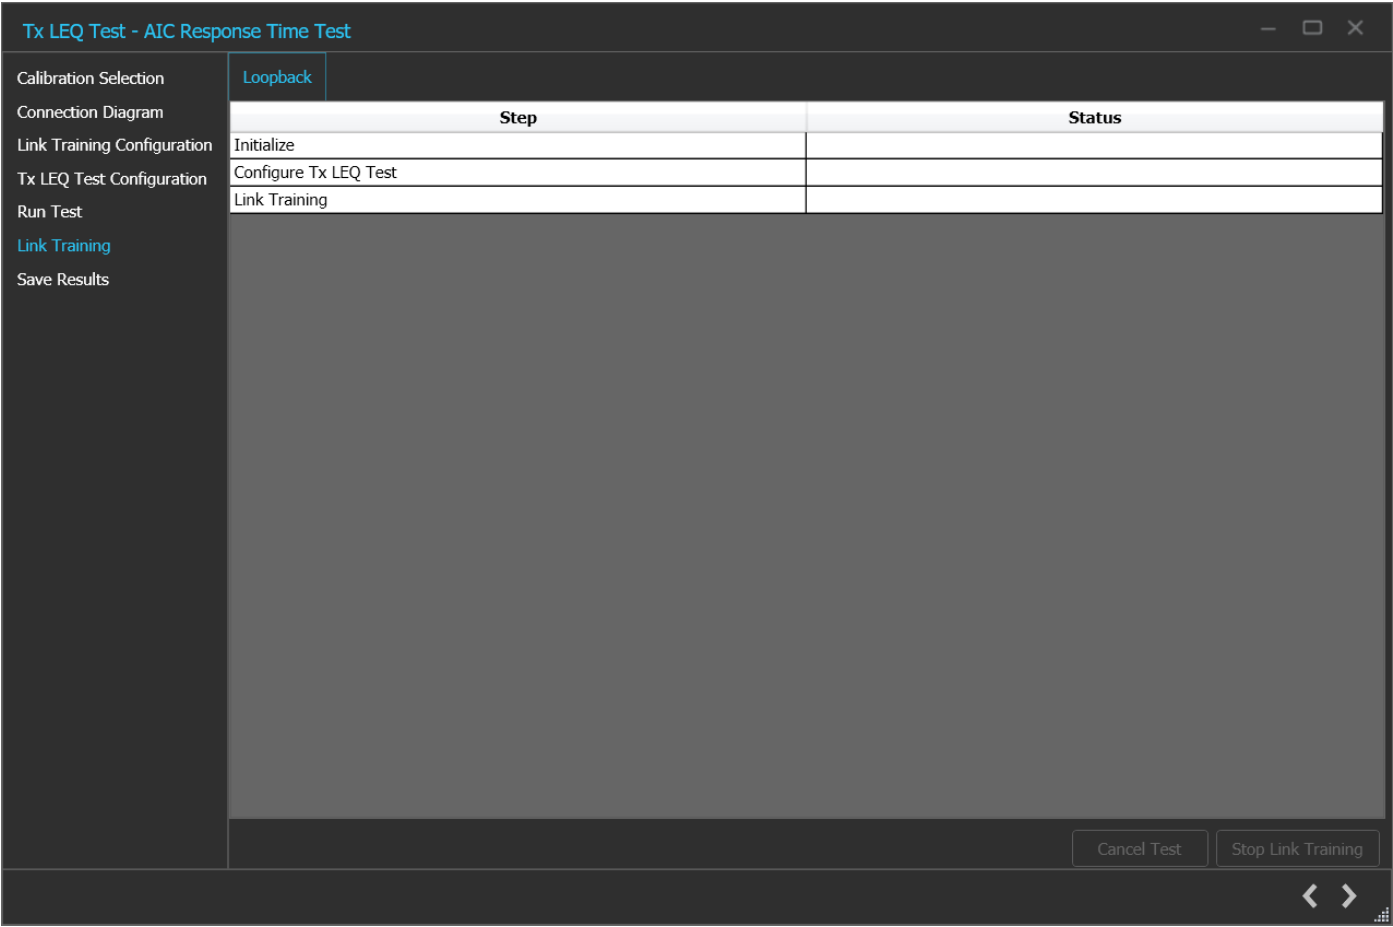

Tx LEQ Test: Link Training



Click to move to the next screen.

- 7. **Save Results:** This tab allows you to save the Tx LEQ test results.

Tx LEQ Test - AIC Response Time Test

Calibration Selection

Connection Diagram

Link Training Configuration

Tx LEQ Test Configuration

Run Test

Link Training

Save Results

Unique ID

Generated By

Comments

Save

Tx LEQ Test: Save Results

Tx LEQ Test: Save Results

Parameter	Description
Unique ID	Enter the Unique ID of the calibrated equipment in the text box.
Generated By	Enter the user name in the text box.
Comments (Optional)	Enter the required comments in the comment box.
Save	Click to save the results.

Click  to complete the Tx LEQ Test and close the wizard.


Options panel

JTOL Test

To test SJ at multiple frequencies for the JTOL test, you need to perform Multi-tone SJ calibration during Calibration. You can generate 30 KHz to 100 MHz with a maximum of 14 different frequencies.


The frequency settings table lists the frequencies calibrated during Multi-tone SJ calibration while performing calibration. If the newly generated frequency doesn't match with the calibrated frequency, then nearby calibrated frequency data will be used for running the JTOL test.

JTOL Test procedure

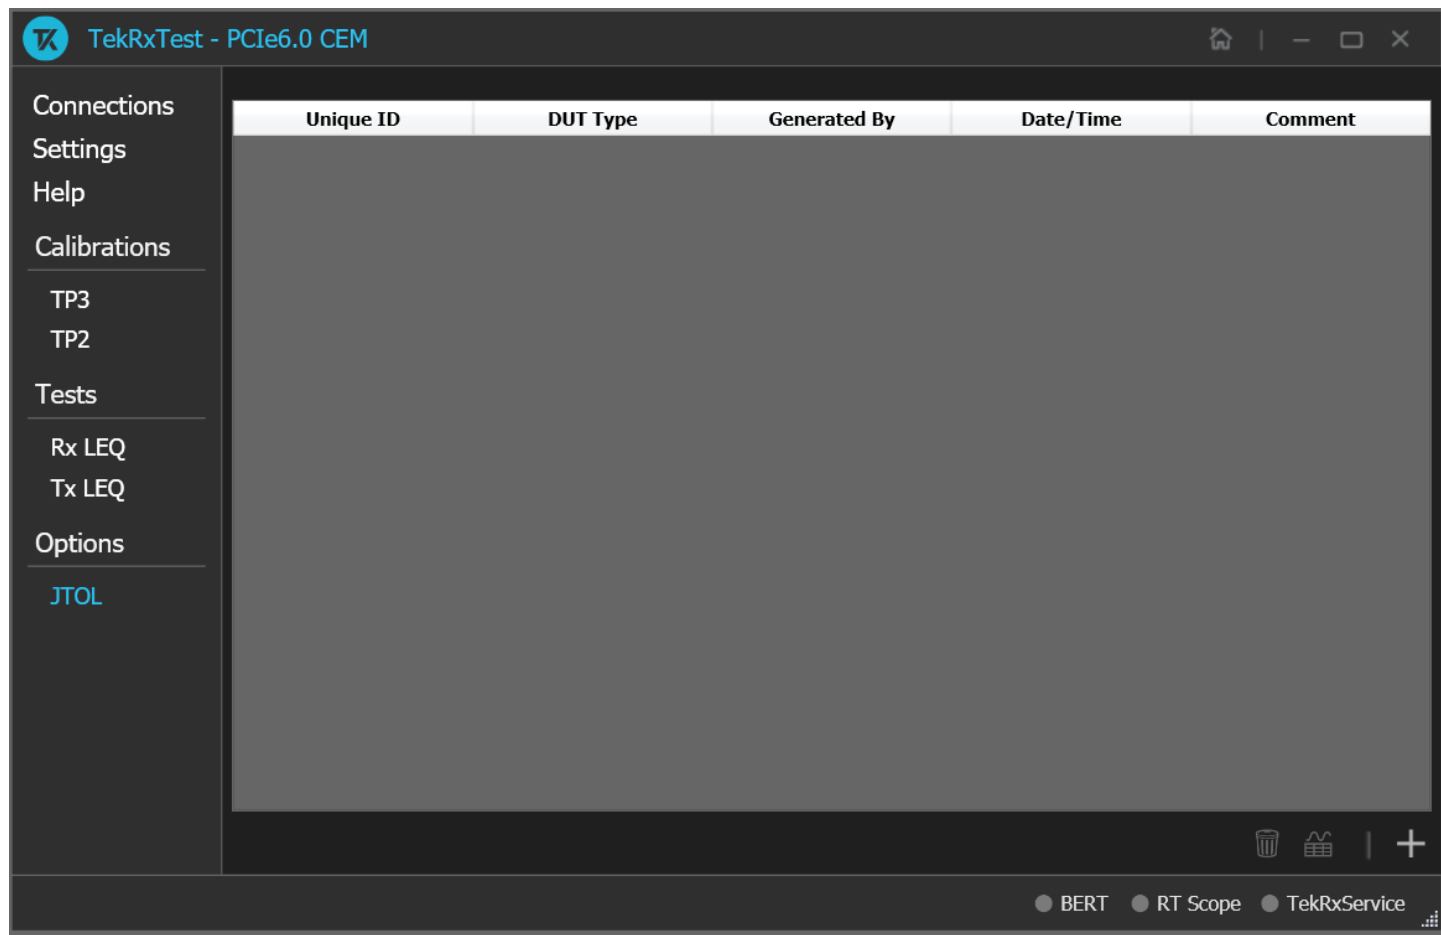

JTOL Test

- Click **JTOL Test** under the Tests panel to view the measurement results. Click  at the right end corner of the application, to launch the JTOL test wizard. This wizard will guide you through the sequential procedure to perform the test.
- Calibration Selection:** This tab allows you to select the calibration file from the drop-down list. The drop-down lists all the TP2 calibration files available as per the choice made under DUT Type selection.

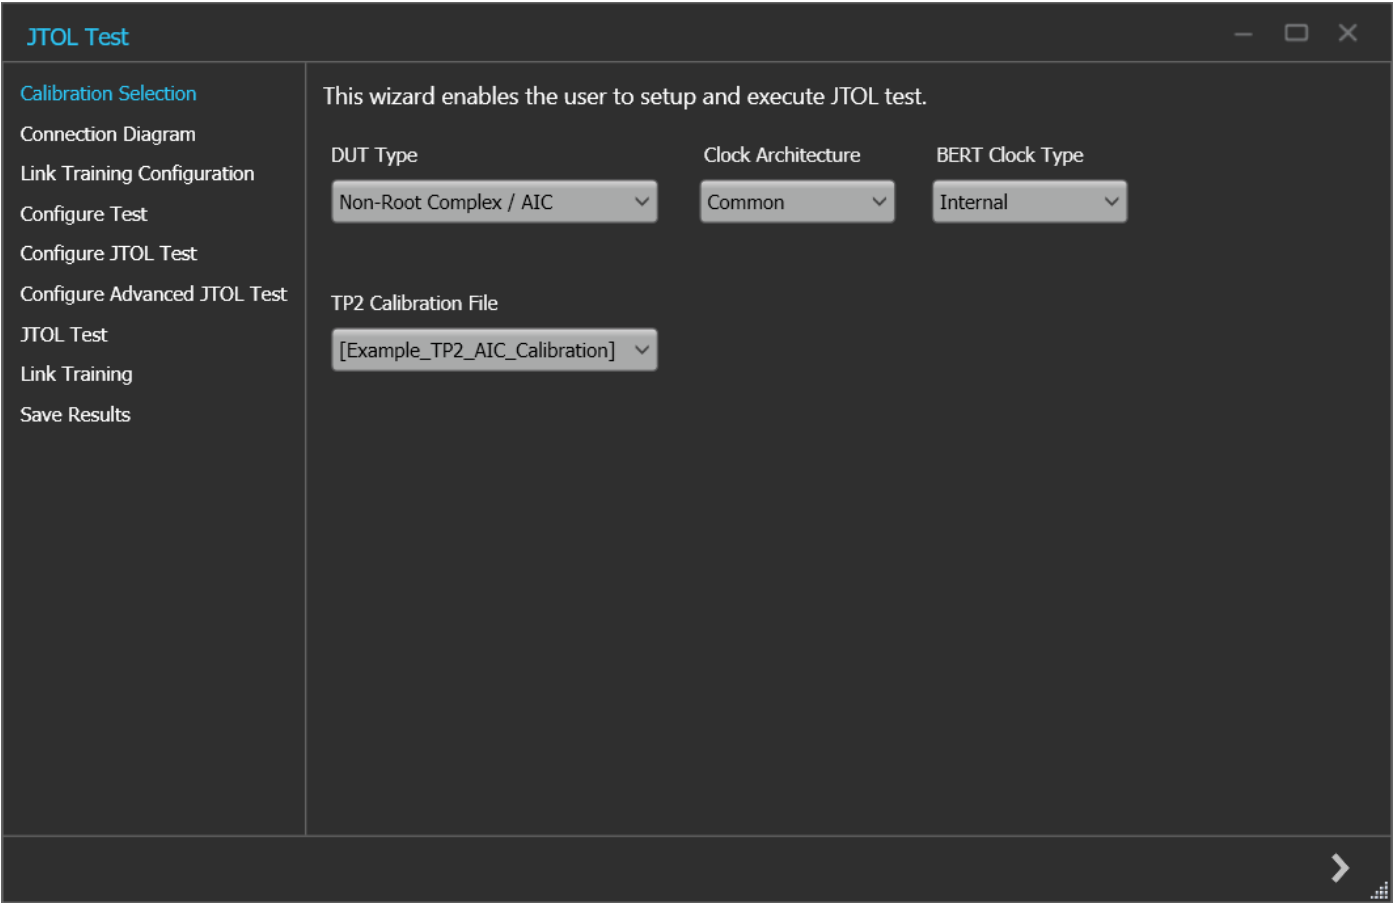

JTOL Test : Calibration Selection


JTOL Test: Calibration Selection

Parameter	Description
DUT Type	Select the required DUT type. Non-Root Complex / AIC Root Complex / System
Clock Architecture	Selects the clock architecture between Common, SRIS and SRNS.
BERT Clock Type	Select the required BERT clock type. 100 MHz External Internal
TP2 Calibration File	Select the required TP2 calibration file.



Click to move to the next screen.

2. **Connection Diagram:** This tab displays the connection diagram for the JTOL test. The connection diagram is the different for AIC and System in case of JTOL test.

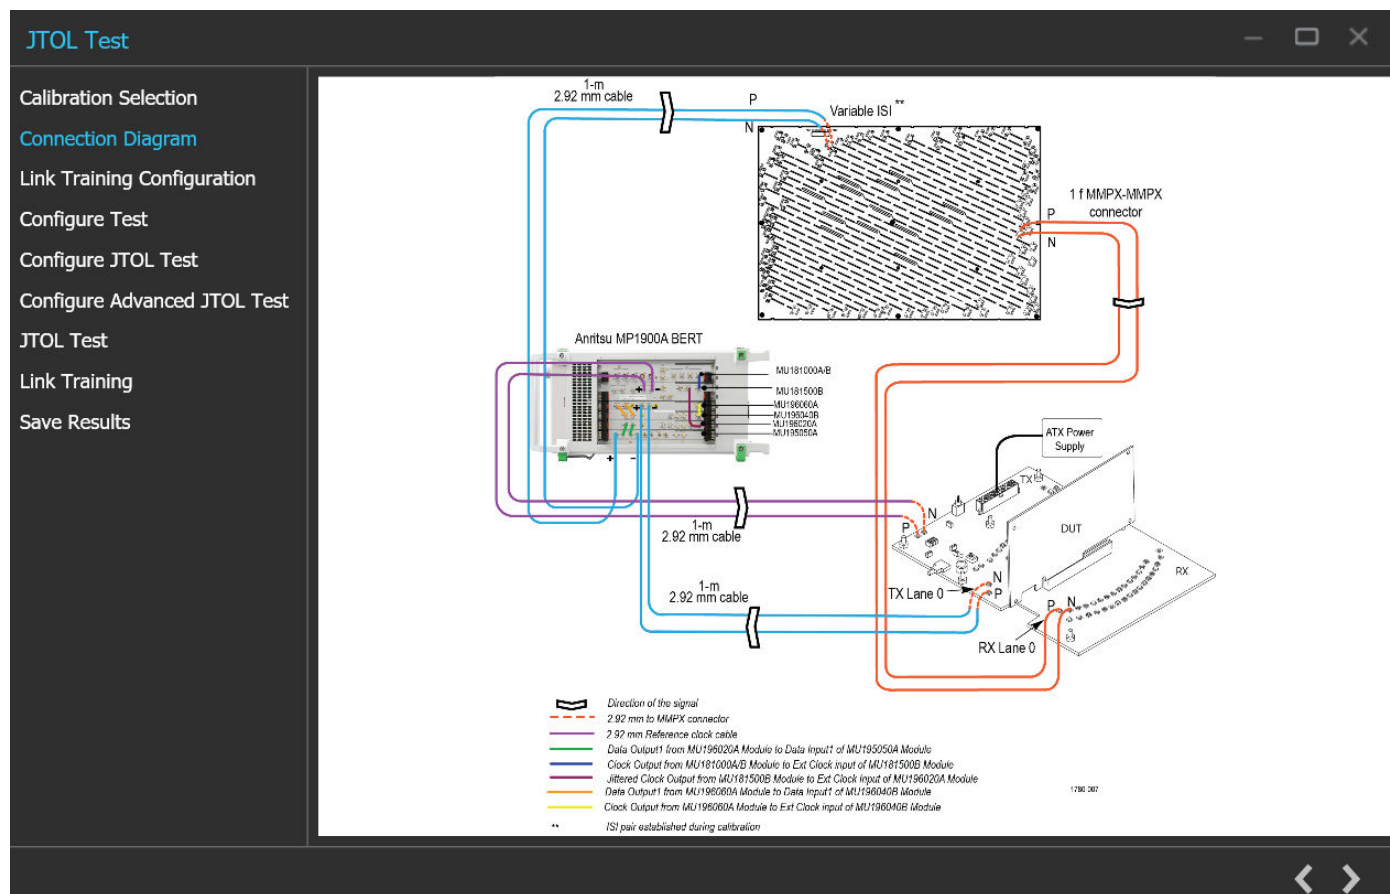

JTOL Test : Connection Diagram



Click  to move to the next screen.

3. **Link Training Configuration:** This tab allows you to configure the link training and forced loopback settings.

Figure 67: JTOL Test: Link Training Configuration (Link Training-External)

JTOL Test: Link Training Configuration for Link Training

Parameter	Description
PCIe Slot Type	Select the required PCIe slot from the drop-down list.
Lane	Select the lane to be tested from the drop-down list.
Loopback Mode	Select the required loopback mode from the drop-down list.
BERT Initial Preset	Select the Preset to be set on the BERT PPG during loopback from the drop-down list.
DUT Initial Preset	Select the Preset to be set on the DUT Tx during loopback from the drop-down list.

Parameter	Description
DUT Target Preset	Select the Preset to be set on the DUT Tx during loopback from the drop-down list.
Stress Type	Select the required stress type from the drop-down list.
Link Number	Enter the link number value.
BERT CTLE	Enable and enter the BERT Error Detector CTLE value in dB.
Keep DUT in loopback after test execution is complete	Select to enable the DUT in the loopback after test execution is complete.
Return Path Optimization	Select the required Return Path Optimization method . - Manual - Auto
DUT Power Options	Select the required DUT power options. External CBB Controller
DUT Power ON Type	Select the required DUT power ON type for External option. Manual Pause For Power Cycle Automatic
Script File Location	Browse and navigate to the path and select the required script file. Enabled only when Automatic is selected as DUT Power ON Type.
Delay	Enter the delay time in seconds.
Auto Reset	Select the required CBB Controller and enter the values in seconds. Power Cycle Power Reset Waiting Time

JTOL Test: Link Training Configuration for Forced Loopback

Parameter	Description
BERT Preset Selection	
Preset	Select the BERT Tx Preset setting from the drop-down list.
Preshoot	Displays the preshoot value corresponding to the choice of preset. Editable for P10 and Custom Preset selection.
De-emphasis	Displays the de-emphasis value corresponding to the choice of preset. Editable for Custom Preset selection.

Parameter	Description
Loopback Pattern	Select the pattern to be used during loopback from the drop-down list. The drop-down list contains the following elements: Modified Compliance Compliance PRBS7 PRBS9 PRBS10 PRBS11 PRBS15 PRBS20 PRBS23 PRBS31
Auto Search	Select to enable the auto search mode and choose from the drop-down. The drop-down contains the following elements: Fine Coarse
BERT CTLE Selection	
Automatic	Enables automatic CTLE selection for back-channel equalization in the BERT Error Detector.
Manual	Select to manually choose the BERT CTLE selection.
CTLE	Select to enable and enter the BERT Error Detector CTLE value in dB.



Click  to move to the next screen.

4. **Configure Test:** This tab allows you to configure the test settings.

Rx LEQ Test

Calibration Selection

Connection Diagram

Link Training Configuration

Rx LEQ Test Configuration

Run Test

Link Training

Save Results

BasicSKP Ordered Set

☒ Apply SSC to Data and Clock output

BER Settings

BER1 E-6Error Limit1

Test Length

Duration15 sConfidence99.999 % at 5E+11 Bits

Stress Configuration

CalibratedCustomizedUn-Calibrated

CMI75 mV

RJ0.25 ps (RMS)

DMI5 mV

SJ2.563 ps

Amplitude800 mV (Diff)

Load Stresses

Note: Use the 'Load Stresses' option exclusively for loading preset and stress parameters in BERT


BER Measurement Pattern

Modified Compliance

JTOL Test : Configure Test Basic

Application Help

WWW.TEK.COM | 95

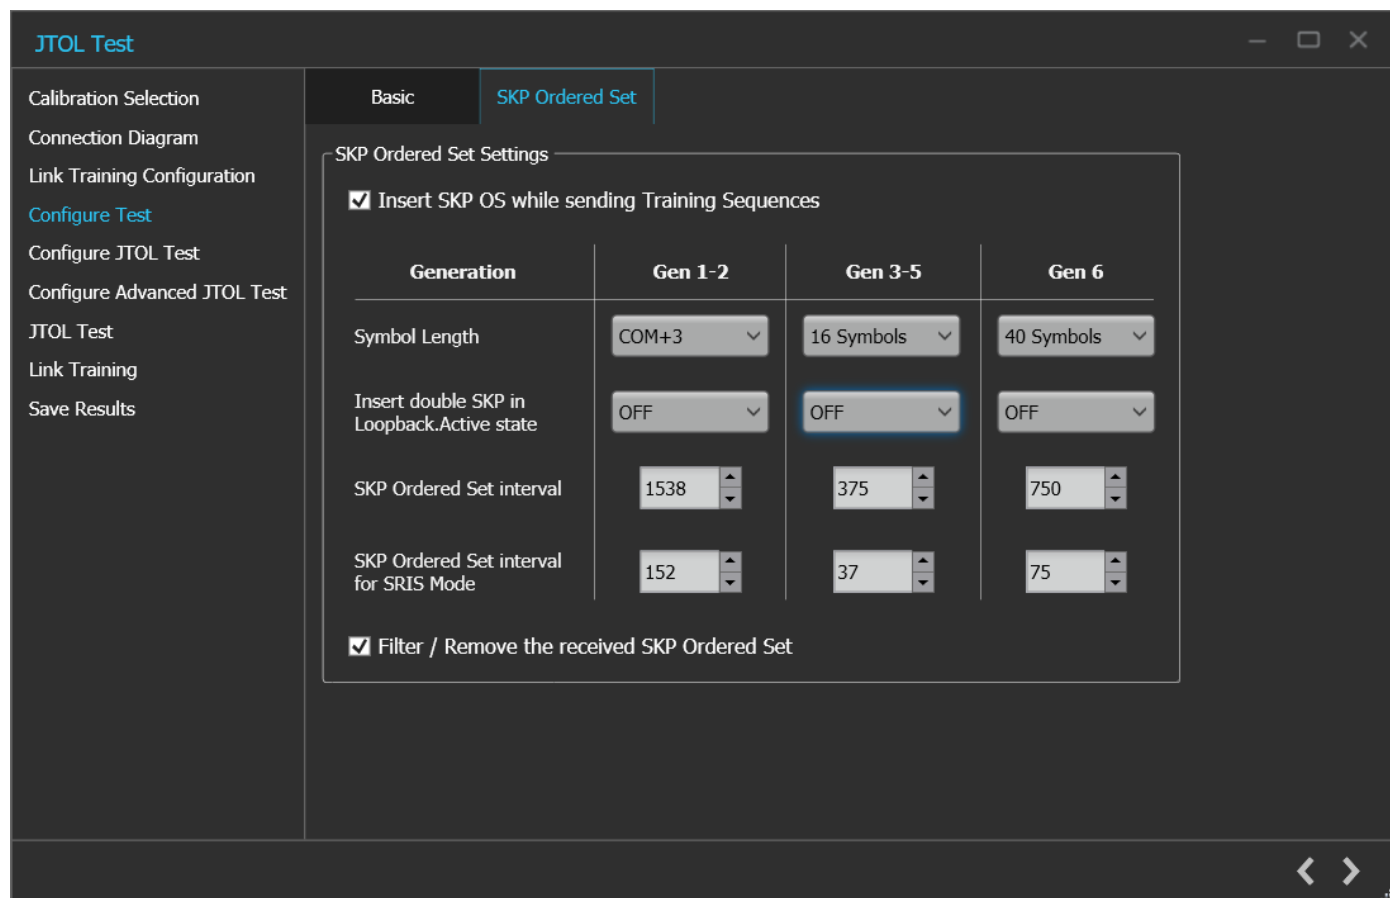

JTOL Test : Configure Test SKP Ordered Set

JTOL Test: Configure Test (Basic)

Parameter	Description
Apply SSC to data and clock output	Select to apply SSC to data and clock output.
BER Settings	BER - Enter the number of bits in error that can be tolerated. Error Limit - Enter the required error limit. The default value is 1.
Test Length	Duration - Enter the test length duration value. Confidence - Displays the test length confidence value.
Stress Configuration	Select the required stress configuration among calibrated, customized, un-calibrated.
Spread Spectrum Clocking (SSC)	Enables SSC for both Data and Clock
CMI	Displays the CMI value in mV. The stress on the waveform is defined by the parameters of CMI.
DMI	Displays the DMI value in mV. The stress on the waveform is defined by the parameters of DMI.
Amplitude	Displays the Amplitude value in mV. The stress on the waveform is defined by the parameters of Amplitude.
RJ	Displays the RJ value in ps or Ulp-p. The stress on the waveform is defined by the parameters of RJ.

Parameter	Description
SJ	Displays the SJ value in ps or Ulp-p. The stress on the waveform is defined by the parameters of SJ.
Load Stresses	Click Load Stresses to apply all the configured stress parameters CMI, DMI, SJ, and amplitude in the BERT. Use the Load Stresses option exclusively to load preset and stress parameters into BERT.


JTOL Test: Configure Test (SKP Order Set)

Parameter	Description
SKP Ordered Set Settings	
Insert SKP OS while sending Training Sequence	Click to insert SKP OS while sending training sequence.
Symbol Length	Select the required symbol length from the drop-down list for the corresponding generation.
Insert double SKP in Loopback.Active state	Select the required option (ON/OFF) from the drop-down list for the corresponding generation.
SKP Ordered Set interval	Select the required interval value from the drop-down list for the corresponding generation.
Filter/Remove the received SKP Order Set	Select to enable the filter or remove the received SKP ordered set.



Click  to move to the next screen.

5. **Configure JTOL Test:** This tab allows you to configure the JTOL test settings.

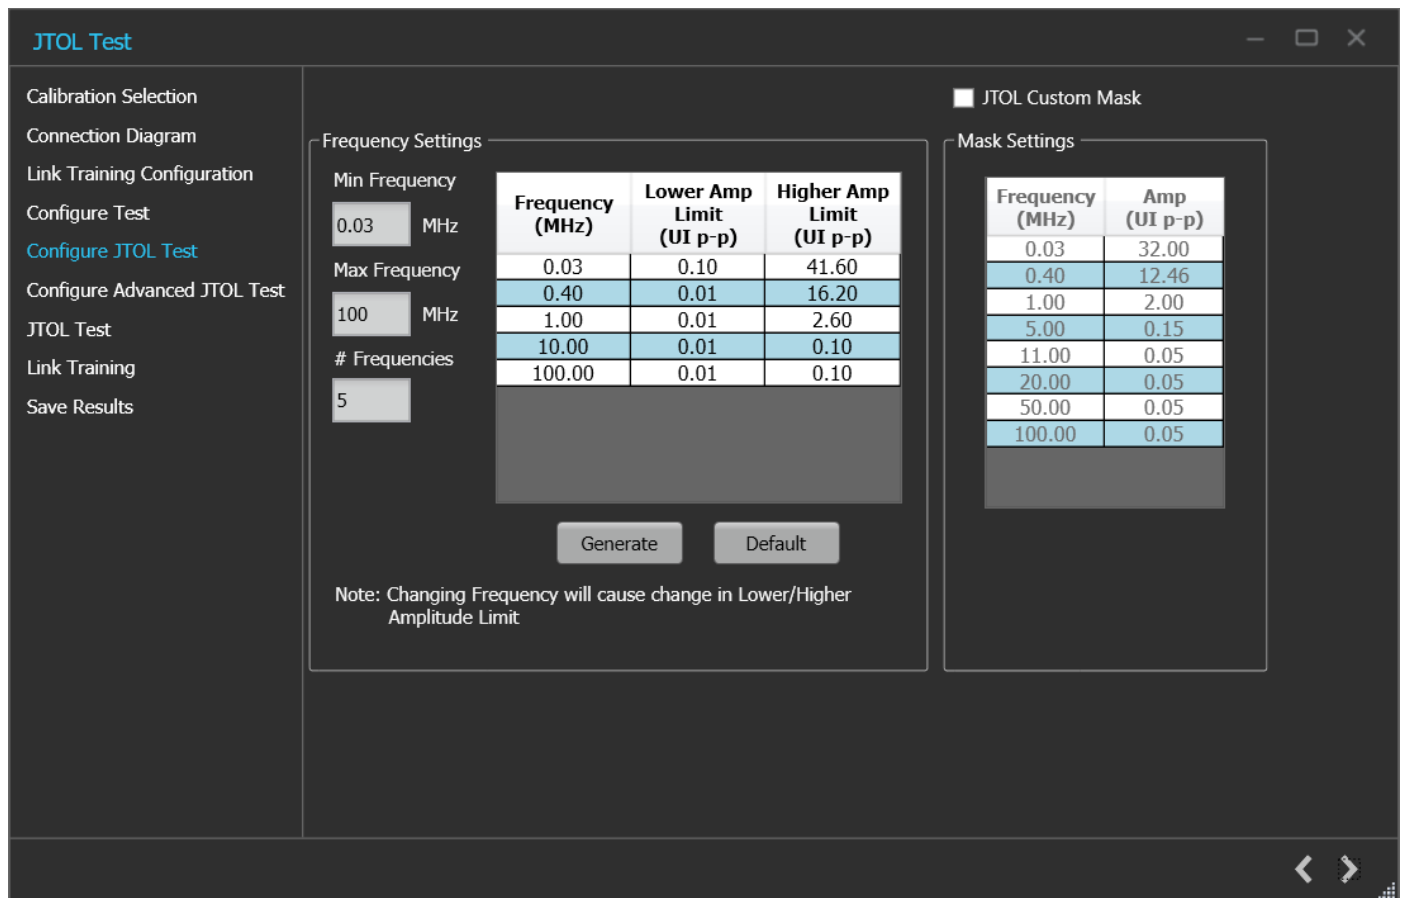

JTOL Test : Configure JTOL Test

JTOL Test: Configure JTOL Test

Parameter	Description
Frequency Settings	
Frequency (MHz)	Displays the table of frequencies in MHz for which JTOL test is to be performed.
Lower Amplitude Limit (UI p-p)	Displays the table of lower amplitude limit values at which JTOL test starts for that frequency.
Higher Amplitude Limit (UI p-p)	Displays the table of higher amplitude limit values at which JTOL test ends for that frequency.
Min Frequency	Enter the minimum frequency value.
Max Frequency	Enter the maximum frequency value.
# Frequencies	Enter the desired number of frequencies within the specified range.
Generate	Click to view the table populated with the frequencies.
Default	Click to view the table populated with default list of frequencies.
JTOL Custom Mask	Select to enable the JTOL Custom mask. On JTOL custom mask selection with the defined mask settings, mask will get generated on the plot.
Mask Settings	
Frequency (MHz)	Displays the table of knee frequencies for the mask.
Amplitude (UI p-p)	Displays the amplitude of SJ at each knee frequency.



Click  to move to the next screen.

6. **Configure Advanced JTOL Test:** This tab allows you to configure the advanced JTOL test settings.

JTOL Test

Calibration Selection

Connection Diagram

Link Training Configuration

Configure Test

Configure JTOL Test

Configure Advanced JTOL Test

JTOL Test

Link Training

Save Results

Relaxation Time

2s

Note: Relaxation time is the "Settling Time" in MX183000A which is the interval between amplitude jumps for a particular frequency.

Search Algorithms

Upwards Linear

Jitter Steps

Jitter Freq Range

Step (UI p-p)

Freq <= 100kHz

0.5

100kHz < Freq <= 1MHz

0.02

1MHz < Freq <= 10MHz

0.008

10MHz < Freq <= 100MHz

0.004

☒ BER Threshold Check

☐ Retest frequencies failing below Spec Mask

JTOL Test : Adv Configure JTOL Test

JTOL Test: Configure Advanced JTOL Test


Parameter	Description
Relaxation Time	Enter the amount of time BERT needs to relax before running BER for each amplitude point.
Search Algorithms	Select the required search algorithm from the drop-down for JTOL test. Binary Downwards Linear Downwards Log Upwards Log Upwards Linear Binary + Linear
Jitter Steps	
Jitter Freq Range	The different frequency ranges can have different step size for SJ amplitude sweep. Freq <= 100 KHz 100KHz < Freq <=1 MHz 1 MHz < Freq <=10 MHz 10 MHz <Freq <= 100 MHz

Parameter	Description
Step (UI p-p)	Sets the SJ amplitude step size for different frequency ranges. Sets the ratios for Downward and Upward-Log search algorithms. No steps size is defined for Binary + Linear search algorithm.
BER Threshold Check	When the user selects the BER Threshold Check (selected by default), it performs a BER check as the first step before initiating the Jitter Tolerance test. The BER is checked for the lowest SJ Tone and amplitude to ensure it meets the Threshold requirements as configured by the user on the Configure Test page. If the threshold is not met, the user is prompted to either continue with the test, recheck, or cancel the current instance and revisit the setup before restarting the test.
Retest frequencies failing below Spec Mask	In case a user-configured SJ tone fails below the limit as provided by the specification, the TekRxTest application will throw a prompt. In such a scenario, the user can either retest the tone or proceed with the test. We also allow the user to perform auto search before retesting at this point in case retesting the tone alone doesn't help.



Click  to move to the next screen.


7. **JTOL Test:** This tab displays a graphical representation of JTOL test result. It includes the result table tab which displays the JTOL test results in a tabular form.

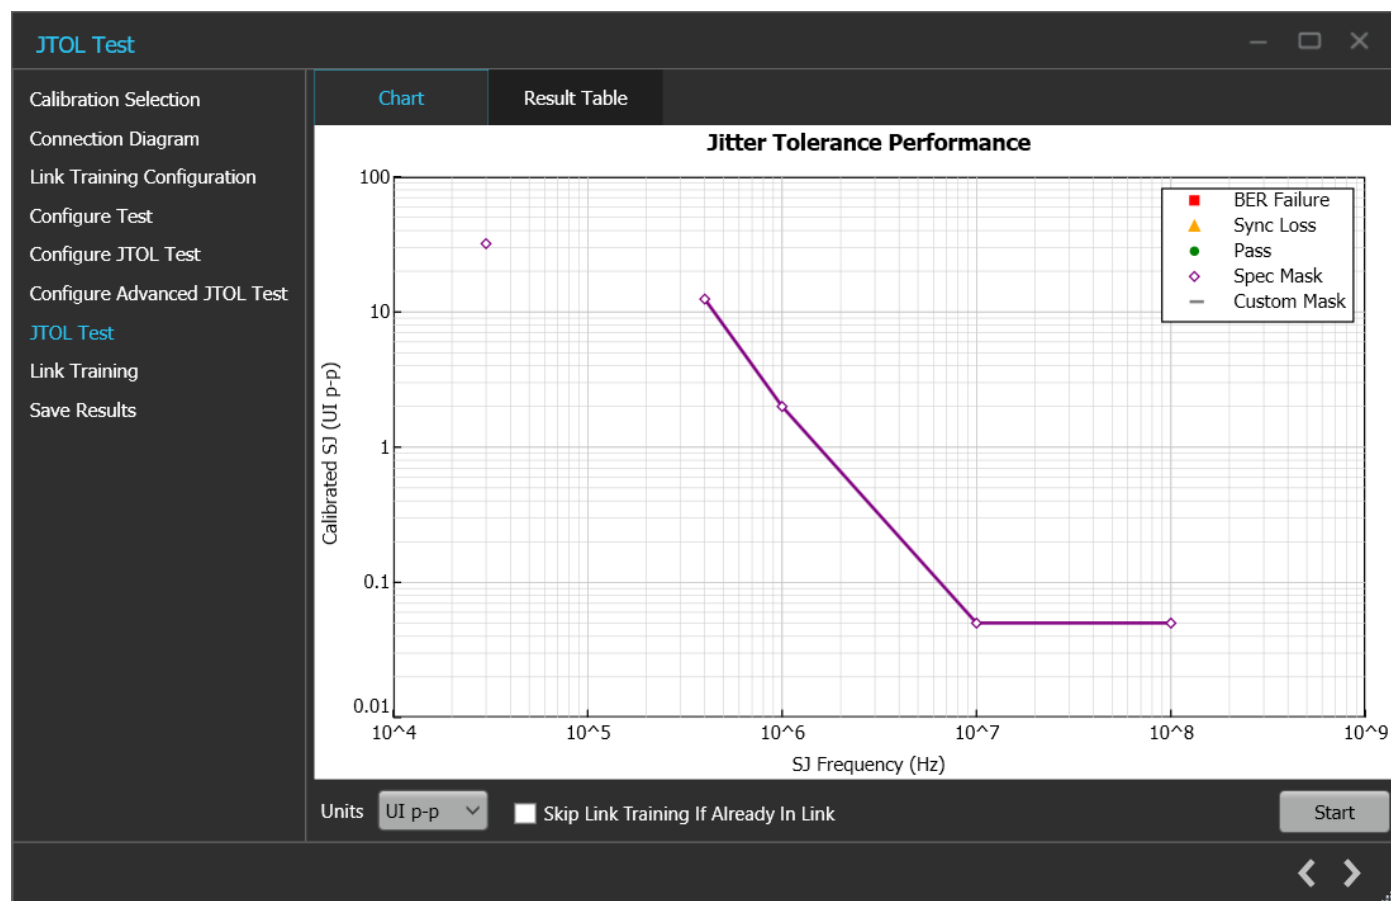

JTOL Test : Graph JTOL

JTOL Test: JTOL Chart

Parameter	Description
Units	Select the required unit from the drop-down list. The list contains the following elements: ps UI _{p-p}
Start	Click Start to run the test.
Skip Link Training	Select if DUT is already in link.

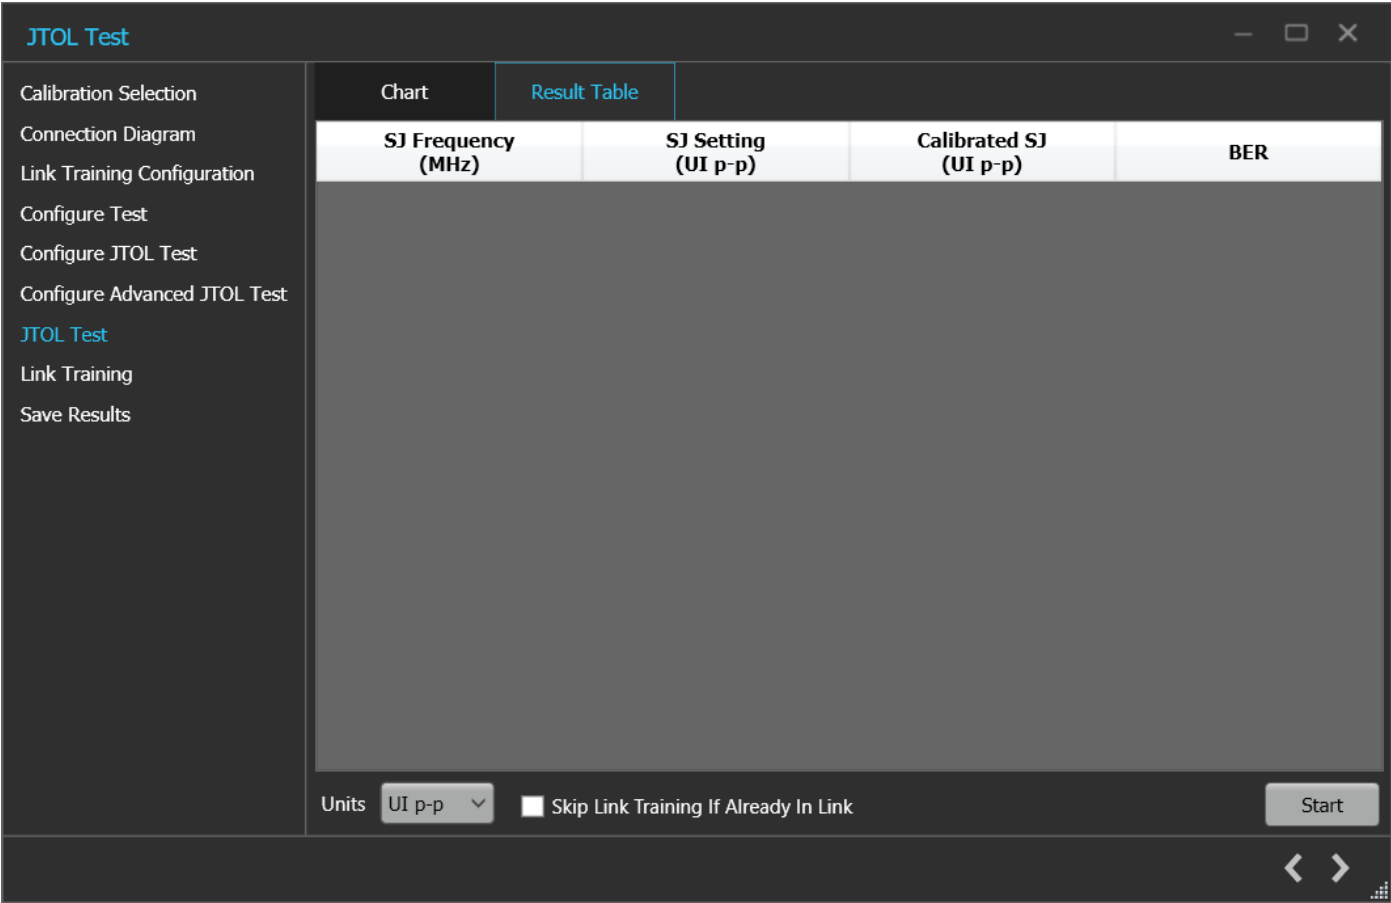

JTOL Test : JTOL Result Table


JTOL Test (Results Table)

Parameter	Description
SJ Frequency (MHz)	Displays the frequencies for which JTOL Test was performed.
SJ Setting (UI _{p-p} / ps)	Displays the SJ Amplitude on the BERT.
Calibrated SJ (UI _{p-p} / ps)	Displays the Calibrated SJ Amplitude.



Click  to move to the next screen.

8. **Link Training:**This tab displays the loopback steps with its status in a tabular form.

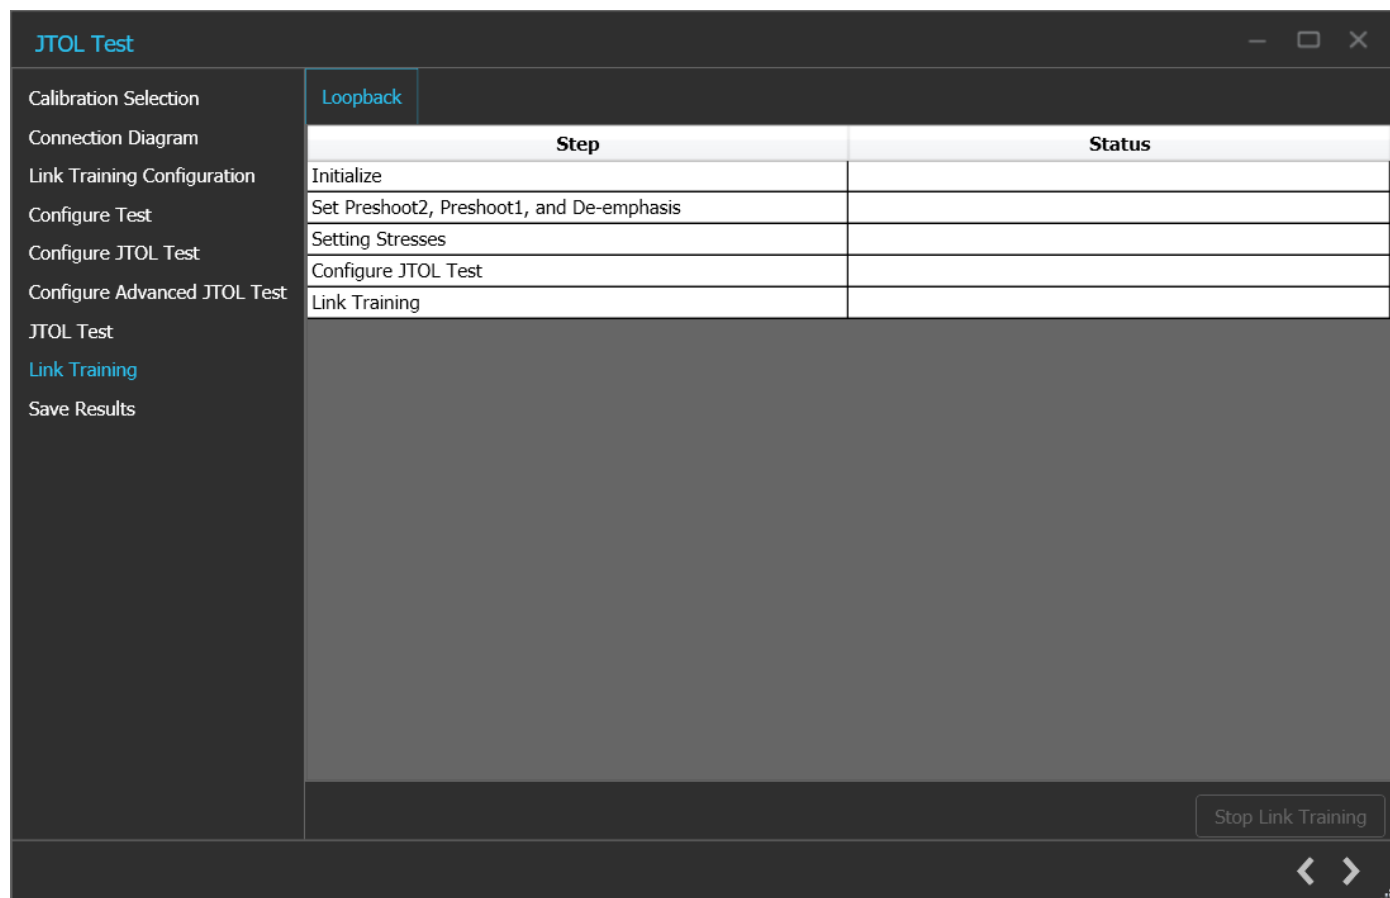

JTOL Test : Link Training

JTOL Test: Link Training

Parameter	Description
Step	Lists the different steps that are prerequisite for initiating link training
Status	Indicates the completion status of each activity
Initialize	Initialize the BERT for performing link training
Set Preshoot and deemphasis	Sets the preset as per BERT Initial Preset in Link Training Configuration wizard It sets all the calibrated Presets on the BERT from P0-P9
Setting Stresses	Sets stresses as per the user selection in Configure Test wizard
Configure JTOL Test	Sets the BERT, DUT initial and Target Presets, Loopback mode (Recovery, Config), Link and Lane number
Link Training	Initiates the link training process in MX 183000A

9. **Save Results:** This tab allows you to save the JTOL test results.

JTOL Test

Calibration Selection

Connection Diagram

Link Training Configuration

Configure Test

Configure JTOL Test

Configure Advanced JTOL Test

JTOL Test

Link Training

Save Results

Unique ID

Generated By

Comments

Save

JTOL Test : Save Results

JTOL Test: Save Results

Parameter	Description
Unique ID	Enter the Unique ID of the calibrated equipment in the text box.
Generated By	Enter the user name in the text box.
Comments (Optional)	Enter the required comments in the comment box.
Save	Click to save the results.



Click to complete the JTOL Test and close the wizard.

Programmatic interface commands

TEKRXTEST:SELECT:HOME

This command selects the home button.

Syntax

TEKRXTEST:SELECT:HOME

Inputs

NA

Outputs

NA

TEKRXTEST:SELECT:PCIe6CEM

This command selects the PCIe 6.0 CEM application.

Syntax

TEKRXTEST:SELECT:PCIe6CEM

Inputs

NA

Outputs

NA

PREF:BERT:IP

This command sets or returns the IP address of the BERT used to connect with the TekRxTest application.

Syntax

PREF:BERT:IP <IP address>

PREF:BERT:IP?

Inputs

<IP address> = <String>

Outputs

<String>

PREF:RTS:IP

This command sets or returns the IP address of the Real Time Oscilloscope used to connect with the TekRxTest application.

Syntax

```
PREF:RTS:IP <IP address>
```

```
PREF:RTS:IP?
```

Inputs

<IP address> = <String>

Outputs

<String>

CONN:BERT

This command sets or returns the connection status of the BERT with TekRxTest application.

Syntax

```
CONN:BERT <0 | 1>
```

```
CONN:BERT?
```

Inputs

<0 | 1>

0 indicates to disconnect the BERT.

1 indicates to connect the BERT.

Outputs

<0 | 1>

CONN:RTS

This command sets or returns the connection status of the Real Time Oscilloscope with TekRxTest application.

Syntax

```
CONN:RTS <0 | 1>
```

```
CONN:RTS?
```

Inputs

<0 | 1>

0 indicates to disconnect the Real Time Oscilloscope.

1 indicates to connect the Real Time Oscilloscope.

Outputs

<0 | 1>

SETTINGS:TEKRXSERVICE:ANALYSISTIMEOUT

This command sets or returns TekRxService analysis time out value.

Syntax

```
SETTINGS:TEKRXSERVICE:ANALYSISTIMEOUT<int>
```

```
SETTINGS:TEKRXSERVICE:ANALYSISTIMEOUT?
```

Inputs

<int> 15 to 1000

Outputs

<int>

SETTINGS:SIGTEST:VERSION

This command sets or returns the sigtest version number.

Syntax

```
SETTINGS:SIGTEST:VERSION <String>
```

```
SETTINGS:SIGTEST:VERSION?
```

Inputs

<String>

Outputs

<String>

SETTINGS:SOCKETSERVER:IP

This command returns the IP address of the socket server.

Syntax

```
SETTINGS:SOCKETSERVER:IP?
```

Inputs

NA

Outputs

<String>

SETTINGS:SOCKETSERVER:LISTENINGPORT

This command returns the listening port of the socket server.

Syntax

```
SETTINGS:SOCKETSERVER:LISTENINGPORT?
```

Inputs

NA

Outputs

<String>

SETTINGS:SOCKETSERVER:TIMEOUT

This command returns the time out value of the socket server.

Syntax

```
SETTINGS:SOCKETSERVER:TIMEOUT?
```

Inputs

NA

Outputs

<int>

SETTINGS:MULTITONESJCAL:ENABLE

This command sets or returns the enable or disable status of Multi-tone SJ calibration.

Syntax

```
SETTINGS:MULTITONESJCAL:ENABLE {0|1}
```

```
SETTINGS:MULTITONESJCAL:ENABLE?
```

Inputs

{0 | 1}

0 indicates to disable the multi-tone SJ calibration.

1 indicates to enable the multi-tone SJ calibration.

Outputs

{0 | 1}

SETTINGS:MULTITONESJCAL:FREQUENCYCOUNT

This command sets or returns the frequency count value for Multi-tone SJ calibration.

Syntax

```
SETTINGS:MULTITONESJCAL:FREQUENCYCOUNT <NR1>
```

```
SETTINGS:MULTITONESJCAL:FREQUENCYCOUNT?
```

Inputs

<NR1> 1 to 14

Outputs

<NR1>

SETTINGS:MULTITONESJCAL:MAXFREQUENCY

This command sets or returns the maximum frequency value for Multi-tone SJ calibration.

Syntax

```
SETTINGS:MULTITONESJCAL:MAXFREQUENCY <NR1>
```

```
SETTINGS:MULTITONESJCAL:MAXFREQUENCY?
```

Inputs

<NR1> 1 to 100 MHz

Outputs

<NR1>

SETTINGS:MULTITONESJCAL:MINFREQUENCY

This command sets or returns the minimum frequency value for Multi-tone SJ calibration.

Syntax

```
SETTINGS:MULTITONESJCAL:MINFREQUENCY <NR1>
```

```
SETTINGS:MULTITONESJCAL:MINFREQUENCY?
```

Inputs

<NR1> 0.03 to 99 MHz

Outputs

<NR1>

SETTINGS:MULTITONESJCAL:POINTS

This command sets or returns the number of points for Multi-tone SJ calibration.

Syntax

```
SETTINGS:MULTITONESJCAL:POINTS <NR1>
```

```
SETTINGS:MULTITONESJCAL:POINTS?
```

Inputs

<NR1> 2 to 8

Outputs

<NR1>

SETTINGS:EYE:ACQUISITIONS

This command sets or returns the number of acquisitions for stressed eye calibration.

Syntax

```
SETTINGS:EYE:ACQUISITIONS <int>
```

```
SETTINGS:EYE:ACQUISITIONS?
```

Inputs

<int> 1 to 20

Outputs

<int>

SETTINGS:MULTITONESJCAL:DEFAULT

This command sets the SJ Frequencies to its default value for multitone SJ calibration.

Syntax

```
SETTINGS:MULTITONESJCAL:DEFAULT
```

Inputs

NA

Outputs

NA

SETTINGS:MULTITONESJCAL:GENERATE

This command generates the SJ frequencies for multitone SJ calibration.

Syntax

```
SETTINGS:MULTITONESJCAL:GENERATE
```

Inputs

NA

Outputs

NA

SETTINGS:TP1:CH1:EXTERNALATTEN

This command sets or returns the external attenuation of CH1 for calibration.

Syntax

```
SETTINGS:TP1:CH1:EXTERNALATTEN <int>
```

```
SETTINGS:TP1:CH1:EXTERNALATTEN?
```

Inputs

<int> 0 to 10

Outputs

<int>

SETTINGS:TP1:CH2:EXTERNALATTEN

This command sets or returns the external attenuation of CH2 for calibration.

Syntax

SETTINGS:TP1:CH2:EXTERNALATTEN <int>

SETTINGS:TP1:CH2:EXTERNALATTEN?

Inputs

<int> 0 to 10

Outputs

<int>

SETTINGS:TP2:CH1:EXTERNALATTEN

This command sets or returns the external attenuation of CH1 for TP2 calibration.

Syntax

SETTINGS:TP2:CH1:EXTERNALATTEN <int>

SETTINGS:TP2:CH1:EXTERNALATTEN?

Inputs

<int> 0 to 10

Outputs

<int>

SETTINGS:TP2:CH2:EXTERNALATTEN

This command sets or returns the external attenuation of CH2 for TP2 calibration.

Syntax

SETTINGS:TP2:CH2:EXTERNALATTEN <int>

SETTINGS:TP2:CH2:EXTERNALATTEN?

Inputs

<int> 0 to 10

Outputs

<int>

SETTINGS:RESTORE

This command resets the application to default settings.

Syntax

```
Settings:Restore
```

Inputs

NA

Outputs

NA

SETTINGS:RECALL

This command recalls the settings as per specified file.

Syntax

```
SETTINGS:RECALL <"File path">
```

Inputs

<"File path"> = <String>

Outputs

NA

SETTINGS:SAVE

This command saves the settings into the specified file.

Syntax

```
Settings:Save <"File path">
```

Inputs

<"File path"> = <String>

Outputs

NA

SETTINGS:RECALL:STATUS

This command returns the status of the recall command execution.

Syntax

```
SETTINGS:RECALL:STATUS?
```

Inputs

NA

Outputs

<String>

SETTINGS:RESTORE:STATUS

This command returns the status of restore command execution.

Syntax

SETTINGS:RESTORE:STATUS?

Inputs

NA

Outputs

<String>

SETTINGS:SAVE:STATUS

This command returns the status of the save command execution.

Syntax

SETTINGS:SAVE:STATUS?

Inputs

NA

Outputs

<String>

TP1CAL:OPEN

This command opens the calibration panel.

Syntax

TP1CAL:OPEN

Inputs

NA

Outputs

NA

TP1CAL:WIZARD:OPEN

This command opens the calibration wizard.

Syntax

TP1CAL:WIZARD:OPEN

Inputs

NA

Outputs

NA

TP1CAL:WIZARD:CLOSE

This command closes the calibration wizard.

Syntax

TP1CAL:WIZARD:CLOSE

Inputs

NA

Outputs

NA

TP1CAL:DELETE

This command deletes the selected calibration file.

Syntax

TP1CAL:DELETE

Inputs

NA

Outputs

NA

TP1CAL:REPORT

This PI command generates a TP1 Calibration report for the specified unique ID.

Syntax

TP1CAL:REPORT <string>

Inputs

<string>

Outputs

NA

TP1CAL:SAVE

This command saves the current Calibration file to the database.

Syntax

TP1CAL:SAVE

Inputs

NA

Outputs

NA

TP1CAL:EQUIP:INIT

This command sets the equipment initialization run status for calibration.

Syntax

TP1CAL:EQUIP:INIT <0 | 1>

Inputs

<0 | 1>

0 - Stop the equipment initialization to run.

1 - Start the equipment initialization to run.

Outputs

NA

TP1CAL:AUTOCAL

This command sets the automatic calibration run status.

Syntax

TP1CAL:AUTOCAL <0 | 1>

Inputs

<0 | 1>

0 - Stop the automatic calibration run.

1 - Start the automatic calibration run.

Outputs

NA

TP1CAL:AMPLITUDE:RUN

This command sets the Amplitude calibration run status.

Syntax

TP1CAL:AMPLITUDE:RUN <0 | 1>

Inputs

<0 | 1>

0 - Stop the Amplitude calibration run.

1 - Start the Amplitude calibration run.

Outputs

NA

TP1CAL:PRESET:RUN

This command sets the Preset calibration run status.

Syntax

TP1CAL:PRESET:RUN <0 | 1>

Inputs

<0 | 1>

0 - Stop the the Preset calibration run.

1 - Start the the Preset calibration run.

Outputs

NA

TP1CAL:RJ:RUN

This command sets the RJ calibration run status.

Syntax

TP1CAL:RJ:RUN <0 | 1>

Inputs

<0 | 1>

0 - Stop the RJ calibration run.

1 - Start the RJ calibration run.

Outputs

NA

TP1CAL:SJ:RUN

This command sets the SJ calibration run status.

Syntax

TP1CAL:SJ:RUN <0 | 1>

Inputs

<0 | 1>

0 - Stop the SJ calibration run.

1 - Start the SJ calibration run.

Outputs

NA

TP1CAL:MULTITONESJCAL:

This command returns the Multi-tone SJ calibration run status.

Syntax

TP1CAL:MULTITONESJCAL:

Inputs

NA

Outputs

{InProgress | Done}

TP1CAL:SEASIMACQ:MODE

This command sets and queries the acquisition mode for seasim.

Syntax

TP1CAL:SEASIMACQ:MODE < 0 | 1 | 2>

Inputs

< 0 | 1 | 2>

0 - Average.

1 - FastFrame.

2 - LFPR.

Outputs

NA

TP1CAL:EQUIP:STATUS

This command returns the equipment initialization run status for calibration.

Syntax

TP1CAL:EQUIP:STATUS?

Inputs

NA

Outputs

{InProgress | Done}

TP1CAL:AMPLITUDE:STATUS

This command returns the amplitude calibration run status.

Syntax

TP1CAL:AMPLITUDE:STATUS?

Inputs

NA

Outputs

{InProgress | Done}

TP1CAL:PRESET:STATUS

This command returns the preset calibration run status.

Syntax

TP1CAL:PRESET:STATUS?

Inputs

NA

Outputs

{InProgress | Done}

TP1CAL:RJ:STATUS

This command returns the RJ calibration run status.

Syntax

TP1CAL:RJ:STATUS?

Inputs

NA

Outputs

{InProgress | Done}

TP1CAL:SJ:STATUS

This command returns the SJ calibration run status.

Syntax

TP1CAL:SJ:STATUS?

Inputs

NA

Outputs

{InProgress | Done}

TP1CAL:MULTITONESJCAL:

This command returns the Multi-tone SJ calibration run status.

Syntax

TP1CAL:MULTITONESJCAL:

Inputs

NA

Outputs

{InProgress | Done}

TP1CAL:AMPLITUDE:SETTING

This command returns the amplitude value for calibration.

Syntax

TP1CAL:AMPLITUDE:SETTING?

Inputs

NA

Outputs

TP1CAL:RJ:SETTING

This command returns the RJ calibrated value for calibration.

Syntax

TP1CAL:RJ:SETTING?

Inputs

NA

Outputs

<float>

TP1CAL:SJ:SETTING

This command returns the SJ calibrated value for calibration.

Syntax

```
TP1CAL:SJ:SETTING?
```

Inputs

NA

Outputs

<float>

TP1CAL:SAVE:ID

This command sets or returns the unique identifier used as key to save the report in database for calibration.

Syntax

```
TP1CAL:SAVE:ID <String>
```

```
TP1CAL:SAVE:ID?
```

Inputs

<String>

Outputs

<String>

TP1CAL:SAVE:GENERATEDBY

This command sets or returns the creator name who save the report in database for calibration.

Syntax

```
TP1CAL:SAVE:GENERATEDBY <String>
```

```
TP1CAL:SAVE:GENERATEDBY?
```

Inputs

<String>

Outputs

<String>

TP1CAL:SAVE:COMMENTS

This command sets or returns the comments given to save the report in database for calibration.

Syntax

```
TP1CAL:SAVE:COMMENTS <String>
```

TP1CAL:SAVE:COMMENTS?

Inputs

<String>

Outputs

<String>

TP1CAL:ACDC:RUN

This command runs the AC-DC balance calibration process.

Syntax

TP1CAL:ACDC:RUN <0 | 1>

Inputs

<0 | 1>

1 - Start the AC-DC balance calibration run.

0 - Stop the AC-DC balance calibration run.

Outputs

NA

TP1CAL:ACDC:STATUS

This command returns the AC-DC balance calibration run status.

Syntax

TP1CAL:ACDC:STATUS?

Inputs

NA

Outputs

{InProgress | Done}

TP1CAL:ACDC:SETTING

This command returns the AC-DC balanced value for calibration.

Syntax

TP1CAL:ACDC:SETTING?

Inputs

NA

Outputs

<float>

TP1CAL:SJ@210MHz:RUN

This command sets the SJ@210MHz calibration run status.

Syntax

```
TP1CAL:SJ@210MHz:RUN <0 | 1>
```

Inputs

<0 | 1>

1 - Start the SJ@210 MHz calibration run.

0 - Stop the SJ@210 MHz calibration run.

Outputs

NA

TP1CAL:SJ@210MHz:STATUS

This command returns the status of SJ@210 MHz Calibration run status.

Syntax

```
TP1CAL:SJ@210MHz:STATUS?
```

Inputs

NA

Outputs

{InProgress | Done}

TP1CAL:IL:MODE

This command sets or returns the type of insertion loss in TP3 calibration.

Syntax

```
TP1CAL:IL:MODE <0 | 1>
```

```
TP1CAL:IL:MODE?
```

Inputs

<0 | 1>

0 - Indicates the insertion loss type is in manual mode.

1 - Indicates the insertion loss type is in measure mode.

Outputs

<0 | 1>

TP1CAL:MANUAL:IL

This command sets or returns the manual insertion loss value for TP3 calibration.

Syntax

```
TP1CAL:MANUAL:IL <float>
```

```
TP1CAL:MANUAL:IL?
```

Inputs

<float> 0 to 10

Outputs

<float>

TP1CAL:MEASURELOSS:START

This command runs the automatic insertion loss calculation process.

Syntax

```
TP1CAL:MEASURELOSS:START <0 | 1>
```

Inputs

<0 | 1>

1 - Start the insertion loss measurement.

0 - Stop the insertion loss measurement.

Outputs

NA

TP1CAL:MEASURELOSS:STATUS

This command returns the automatic insertion loss measurement run status.

Syntax

```
TP1CAL:MEASURELOSS:STATUS?
```

Inputs

NA

Outputs

{InProgress | Done}

TP2CAL:OPEN

This command opens the TP2 calibration panel.

Syntax

TP2CAL:OPEN

Inputs

NA

Outputs

NA

TP2CAL:WIZARD:OPEN

This command opens the TP2 calibration wizard.

Syntax

TP2CAL:WIZARD:OPEN

Inputs

NA

Outputs

NA

TP2CAL:WIZARD:CLOSE

This command closes the TP2 calibration wizard.

Syntax

TP2CAL:WIZARD:CLOSE

Inputs

NA

Outputs

NA

TP2CAL:DUT:TYPE

This command sets or returns the DUT type used for TP2 calibration.

Syntax

TP2CAL:DUT:TYPE <0 | 1>

TP2CAL:DUT:TYPE?

Inputs

<0 | 1>

0 - Indicates the DUT type is Non-Root Complex.

1 - Indicates the DUT type is Root Complex.

Outputs

<0 | 1>

TP2CAL:SELECT:TP1

This command sets or returns the selected calibration file.

Syntax

TP2CAL:SELECT:TP1 <String>

TP2CAL:SELECT:TP1?

Inputs

<String>

Outputs

<String>

TP2CAL:DELETE

This command deletes the selected TP2 calibration file.

Syntax

TP2CAL:DELETE

Inputs

NA

Outputs

NA

TP2CAL:REPORT

This PI command generates a TP2 Calibration report for the specified unique ID.

Syntax

TP2CAL:REPORT <string>

Inputs

<string>

Outputs

NA

TP2CAL:SAVE

This command saves the current TP2 Calibration file to the database.

Syntax

TP2CAL:SAVE

Inputs

NA

Outputs

NA

TP2CAL:EQUIP:INIT

This command sets the equipment initialization run status for TP2 calibration.

Syntax

TP2CAL:EQUIP:INIT <0 | 1>

Inputs

<0 | 1>

0 - Stop the equipment initialization run.

1 - Start the equipment initialization run.

Outputs

NA

TP2CAL:CMI:RUN

This command sets the CMI calibration run status.

Syntax

TP2CAL:CMI:RUN <0 | 1>

Inputs

<0 | 1>

0 - Stop the CMI calibration run.

1 - Start the CMI calibration run.

Outputs

NA

TP2CAL:ILMEAS:RUN

This command sets the channel loss calculation run status.

Syntax

TP2CAL:ILMEAS:RUN <0 | 1>

Inputs

<0 | 1>

0 - Stop the channel loss calculation run.

1 - Start the channel loss calculation run.

Outputs

NA

TP2CAL:CTLEANDPRESET:RUN

This command sets the CTLE and preset selection run status.

Syntax

TP2CAL:CTLEANDPRESET:RUN <0 | 1>

Inputs

<0 | 1>

0 - Stop the CTLE and preset selection run.

1 - Start the CTLE and preset selection run.

Outputs

NA

TP2CAL:STRESSEDEYE:RUN

This command sets the stressed eye calibration run status.

Syntax

TP2CAL:STRESSEDEYE:RUN <0 | 1>

Inputs

<0 | 1>

0 - Stop the stressed eye calibration run.

1 - Start the stressed eye calibration run.

Outputs

NA

TP2CAL:EQUIP:STATUS

This command returns the equipment initialization run status for TP2 calibration.

Syntax

TP2CAL:EQUIP:STATUS?

Inputs

NA

Outputs

{InProgress | Done}

TP2CAL:CMI:STATUS

This command returns the CMI calibration run status for TP2 calibration.

Syntax

TP2CAL:CMI:STATUS?

Inputs

NA

Outputs

{InProgress | Done}

TP2CAL:ILMEAS:STATUS

This command returns the channel loss calculation run status for TP2 calibration.

Syntax

TP2CAL:ILMEAS:STATUS?

Inputs

NA

Outputs

{InProgress | Done}

TP2CAL:CTLEANDPRESET:STATUS

This command returns the CTLe and Preset selection run status for TP2 calibration.

Syntax

TP2CAL:CTLEANDPRESET:STATUS?

Inputs

NA

Outputs

{InProgress | Done}

TP2CAL:STRESSEDEYE:STATUS

This command returns the stressed eye calibration run status for TP2 calibration.

Syntax

TP2CAL:STRESSEDEYE:STATUS?

Inputs

NA

Outputs

{InProgress | Done}

TP2CAL:DMI:SETTING

This command returns the DMI calibrated value for TP2 calibration.

Syntax

TP2CAL:DMI:SETTING?

Inputs

NA

Outputs

<float>

TP2CAL:CMI:SETTING

This command returns the CMI calibrated value for TP2 calibration.

Syntax

TP2CAL:CMI:SETTING?

Inputs

NA

Outputs

<int>

TP2CAL:SAVE:ID

This command sets or returns the unique identifier used as key to save the report in database for TP2 calibration.

Syntax

TP2CAL:SAVE:ID <String>

TP2CAL:SAVE:ID?

Inputs

<String>

Outputs

<String>

TP2CAL:SAVE:GENERATEDBY

This command sets or returns the creator name who save the report in database for TP2 calibration.

Syntax

```
TP2CAL:SAVE:GENERATEDBY <String>
```

```
TP2CAL:SAVE:GENERATEDBY?
```

Inputs

<String>

Outputs

<String>

TP2CAL:SAVE:COMMENTS

This command sets or returns the comments given to save the report in database for TP2 calibration.

Syntax

```
TP2CAL:SAVE:COMMENTS <String>
```

```
TP2CAL:SAVE:COMMENTS?
```

Inputs

<String>

Outputs

<String>

TP2CAL:ILMEASFORDMI:RUN

This command sets the run status for Insertion loss calculation before DMI/CMI in TP2 calibration.

Syntax

```
TP2CAL:ILMEASFORDMI:RUN <0 | 1>
```

Inputs

<0 | 1>

0 - Stop the Insertion loss calculation before DMI/CMI.

1 - Start the Insertion loss calculation before DMI/CMI.

Outputs

NA

TP2CAL:ILMEASFORDMI:STATUS

This command returns the run status of Insertion loss calculation before DMI/CMI in TP2 calibration.

Syntax

TP2CAL:ILMEASFORDMI:STATUS?

Inputs

NA

Outputs

{InProgress | Done}

TP2CAL:STRESSEDEYE:ACQUISITIONS

This command sets or returns the number of acquisitions value for TP2 stressed eye calibration.

Syntax

TP2CAL:STRESSEDEYE:ACQUISITIONS<int>

TP2CAL:STRESSEDEYE:ACQUISITIONS?

Inputs

<int> 1 to 20

Outputs

<int>

TP2CAL:SEASIMACQ:MODE

This command sets and queries the acquisition mode for seasim.

Syntax

TP2CAL:SEASIMACQ:MODE < 0 | 1 | 2 >

Inputs

< 0 | 1 | 2 >

0 - Average.

1 - FastFrame.

2 - LFPR.

Outputs

NA

TP2CAL:DMI:RUN

This command sets the run status for TP2 DMI calibration.

Syntax

TP2CAL:DMI:RUN <0 | 1>

Inputs

Application Help

<0 | 1>

0 - Stop the TP2 DMI calibration.

1 - Start the TP2 DMI calibration.

Outputs

NA

TP2CAL:DMI:STATUS

This command returns the TP2 DMI calibration run status.

Syntax

TP2CAL:DMI:STATUS?

Inputs

NA

Outputs

{InProgress | Done}

TP2CAL:CTLEANDPRESET:ACQUISITIONS

This command sets or returns the number of acquisitions value for CTLE or Preset selection in TP2 calibration.

Syntax

TP2CAL:CTLEANDPRESET:ACQUISITIONS<int>

TP2CAL:CTLEANDPRESET:ACQUISITIONS?

Inputs

<int> 1 to 20

Outputs

<int>

TP2CAL:STRESSEDEYE:SJ

This command sets or returns the SJ stress value for Manual Stressed Eye Calibration run.

Syntax

TP2CAL:STRESSEDEYE:SJ <float>

TP2CAL:STRESSEDEYE:SJ?

Inputs

<float>

Outputs

<float>

TP2CAL:STRESSEDEYE:DMI

This command sets or returns the DMI stress value for Manual Stressed Eye Calibration run.

Syntax

```
TP2CAL:STRESSEDEYE:DMI <float>
```

```
TP2CAL:STRESSEDEYE:DMI?
```

Inputs

<float>

Outputs

<float>

TP2CAL:STRESSEDEYE:AMPLITUDE

This command sets or returns the amplitude value for Manual Stressed Eye Calibration run.

Syntax

```
TP2CAL:STRESSEDEYE:AMPLITUDE<int>
```

```
TP2CAL:STRESSEDEYE:AMPLITUDE?
```

Inputs

<int> 720 to 800

Outputs

<int>

TP2CAL:IL:MODE

This command sets or returns the type of insertion loss in TP2 calibration.

Syntax

```
TP2CAL:IL:MODE <0 | 1>
```

```
TP2CAL:IL:MODE?
```

Inputs

<0 | 1>

0 - Indicates the insertion loss type is manual entry.

1 - Indicates the insertion loss type is Measure loss.

Outputs

<0 | 1>

TP2CAL:MANUAL:IL

This command sets or returns the manual insertion loss value for TP2 calibration.

Syntax

```
TP2CAL:MANUAL:IL <float>
```

```
TP2CAL:MANUAL:IL?
```

Inputs

<float> 0 to 50

Outputs

<float>

TP2CAL:IL:SCOPEACQS

This command sets or returns the value for scope acquisitions for insertion loss in TP2 calibration.

Syntax

```
TP2CAL:IL:SCOPEACQS <int>
```

```
TP2CAL:IL:SCOPEACQS?
```

Inputs

16 to 10240

Outputs

<int>

TP2CAL:IL:AVGS

This command sets or returns the value for the number of waveforms averages for insertion loss in TP2 calibration.

Syntax

```
TP2CAL:IL:AVGS <int>
```

```
TP2CAL:IL:AVGS?
```

Inputs

1 to 10

Outputs

<int>

TP2CAL:CTLEANDPRESET:CHKPRESET

This command check and uncheck the check box for specific Presets.

Syntax

```
TP2CAL:CTLEANDPRESET:CHKPRESET <0 to 9> <1 | 0>
```

```
TP2CAL:CTLEANDPRESET:CHKPRESET <0 to 9>?
```

Inputs

<0 to 9> corresponds to Presets

<1 | 0>, 1 for check and 0 for uncheck

Outputs

<1 | 0>

TP2CAL:CTLEANDPRESET:CHKCTLE

This command check and uncheck the check box for specific CTLE's

Syntax

```
TP2CAL:CTLEANDPRESET:CHKCTLE <15 to 1> <1 | 0>
```

```
TP2CAL:CTLEANDPRESET:CHKCTLE <15 to 1> ?
```

Inputs

<15 to 1> corresponds to CTLE's

<1 | 0>, 1 for check and 0 for uncheck

Outputs

<1 | 0>

TP2CAL:STRESSEDEYE:MANUALCALRUN

This command sets or returns the enable or disable status of the manual calibration run for stressed eye.

Syntax

```
TP2CAL:STRESSEDEYE:MANUALCALRUN {0 | 1}
```

```
TP2CAL:STRESSEDEYE:MANUALCALRUN?
```

Inputs

{0 | 1}

0 - Indicates to disable the manual calibration run.

1 - Indicates to enable the manual calibration run.

Outputs

{0 | 1}

TP2CAL:STRESSEDEYE:EXHAUSTIVESWEEP

This command sets or returns the min, max settings for the specified sweep parameter for Exhaustive Sweep.

Syntax

```
TP2CAL:STRESSEDEYE:EXHAUSTIVESWEEP <string> <double/int>
```

```
TP2CAL:STRESSEDEYE:EXHAUSTIVESWEEP? <string>
```

Inputs

<string> (Sweep Parameter) - Indicates the parameter for which min, max value needs to be set. The Sweep parameters can be Amplitude, SJ.

<double/int> (MIN,MAX) - Indicates the min, max settings for the specified sweep parameter.

NOTE: If sweep parameter is amplitude then min, max values should be of type <int> or <double>

The min, max values should be within the below range:

1. 720 – 800 mV for Amplitude.

Example

TP2CAL:STRESSEDEYE:EXHAUSTIVESWEEP SJ .

Output

<double/int>

Example

TP2CAL:STRESSEDEYE:EXHAUSTIVESWEEP SJ?

.

TP2CAL:STRESSEDEYE:LINEARSWEEP

This command sets or returns the initial, min, max settings for the specified sweep parameter for Linear Sweep.

Syntax

TP2CAL:STRESSEDEYE:LINEARSWEEP <string> <double/int>

TP2CAL:STRESSEDEYE:LINEARSWEEP? <string>

Inputs

<string> (Sweep Parameter) - Indicates the parameter for which initial, min, max value needs to be set. The Sweep parameters can be

<double/int> (Initial,MIN,MAX) - Indicates the Initial, min, max settings for the specified sweep parameter.

NOTE: If sweep parameter is amplitude then initial, min, max values should be of type <int> or <double>

The initial min, max values should be within the below range:

1. ps for .

Example

TP2CAL:STRESSEDEYE:LINEARSWEEP .

Output

<double/int>

Example

TP2CAL:STRESSEDEYE:LINEARSWEEP ?

.

TP2CAL:STRESSEDEYE:EXHAUSTIVE

This command sets or returns enable or disable status of Exhaustive Sweep for TP2 Stressed Eye Calibration

Syntax

```
TP2CAL:STRESSEDEYE:EXHAUSTIVE <0 / 1>
```

```
TP2CAL:STRESSEDEYE:EXHAUSTIVE?
```

Inputs

```
<0 / 1>
```

0 - Indicates the Exhaustive Sweep is disabled.

1 - Indicates the Exhaustive Sweep is enabled.

Output

```
<0 | 1>
```

TP2CAL:STRESSEDEYE:STEPSIZE

The Command sets or returns the step size settings for the specified sweep parameter of TP2 Calibration

Syntax

```
TP2CAL:STRESSEDEYE:STEPSIZE <string> <double/int>
```

```
TP2CAL:STRESSEDEYE:STEPSIZE? <string>
```

Inputs

<string> (Sweep Parameter) - Indicates the parameter for which step size value needs to be set. The Sweep parameters can be

<double/int> (Step Size) - Indicates the step size value for the specified sweep parameter

NOTE: If sweep parameter is amplitude then step size value should be of type <int> or <double>

The Step Size values should be within the below range:

1. ps for .

Example

```
TP2CAL:STRESSEDEYE:STEPSIZE .
```

Output

```
<double/int>
```

Example

```
TP2CAL:STRESSEDEYE: STEPSIZE ?
```

```
.
```

TEST:SELECT:CMI

This command sets or returns the CMI value to be used for non-compliance test.

Syntax

```
TEST:SELECT:CMI <float>
```

```
TEST:SELECT:CMI?
```

Inputs

<float> 0 to 250

Outputs

<float>

TEST:SELECT:RJ

This command sets or returns the RJ value used for the test.

Syntax

TEST:SELECT:RJ <float>

TEST:SELECT:RJ?

Inputs

<float> 0 to 31.25 for customized stress selection.

<float> 0 to 0.496 for un-calibrated stress selection.

Outputs

<float>

LOOPBACK:SELECT:CONFIGURATIONTYPE

This command sets or returns the configuration type for loop back setting.

Syntax

LOOPBACK:SELECT:CONFIGURATIONTYPE <0 | 1>

LOOPBACK:SELECT:CONFIGURATIONTYPE?

Inputs

<0 | 1>

0 - Indicates the configuration type is Link training.

1 - Indicates the configuration type is Forced loopback.

Outputs

<0 | 1>

LOOPBACK:AAS:EYETHRESHOLDTYPE

This command sets or queries the eye threshold type to be set as a part of the JTOL test

Syntax

LOOPBACK:AAS:EYETHRESHOLDTYPE <string>

LOOPBACK:AAS:EYETHRESHOLDTYPE?

Inputs

<string> Fine, Coarse, OFF

Outputs

<string> Fine, Coarse, OFF

LOOPBACK:AAS:DELAYSEARCHTYPE

This command sets or queries the delay search type to be set as a part of JTOL Test

Syntax

LOOPBACK:AAS:DELAYSEARCHTYPE <string>

LOOPBACK:AAS:DELAYSEARCHTYPE?

Inputs

<string> Fine, Coarse, OFF

Outputs

<string> Fine, Coarse, OFF

LOOPBACK:SELECT:PRESETSNAME

This command sets or returns the PCIe Preset, controls preshoot and deemphasis values.

Syntax

LOOPBACK:SELECT:PRESETSNAME <int>

LOOPBACK:SELECT:PRESETSNAME?

Inputs

<int> 0-11; P0-P10 for Corresponding Preset and 11 for Custom Preset

Outputs

<int>

LOOPBACK:SELECT:PRESETSPRESHOOT

This command sets or returns the preshoot value to be applied during loopback training.

Syntax

LOOPBACK:SELECT:PRESETSPRESHOOT <float>

LOOPBACK:SELECT:PRESETSPRESHOOT?

Inputs

<float> 0 to 12

Outputs

<float>

LOOPBACK:SELECT:PRESETSDEEMPHASIS

This command sets or returns the preset deemphasis value to be applied during loopback training.

Syntax

```
LOOPBACK:SELECT:PRESETSDEEMPHASIS <float>
```

```
LOOPBACK:SELECT:PRESETSDEEMPHASIS?
```

Inputs

<float> -20 to 0

Outputs

<float>

LOOPBACK:SELECT:BERTCTLEMODE

This command sets or returns the BERT CTLE mode.

Syntax

```
LOOPBACK:SELECT:BERTCTLEMODE <0 | 1>
```

```
LOOPBACK:SELECT:BERTCTLEMODE?
```

Inputs

<0 | 1>

0 - Indicates BERT CTLE mode is Automatic.

1 - Indicates BERT CTLE mode is Manual.

Outputs

<0 | 1>

LOOPBACK:SELECT:BERTCTLETYPE

This command sets or returns the BERT CTLE Type when loopback configuration type selected is forced loopback.

Syntax

```
LOOPBACK:SELECT:BERTCTLETYPE<0 | 1>
```

```
LOOPBACK:SELECT:BERTCTLETYPE?
```

Inputs

<0 | 1>

0 - Indicates the BERT CTLE type is OFF.

1 - Indicates the BERT CTLE type is ON.

Outputs

<0 | 1>

LOOPBACK:SELECT:BERTCTLEVALUE

This command sets or returns the BERT CTLE value.

Syntax

```
LOOPBACK:SELECT:BERTCTLEVALUE <float>
```

```
LOOPBACK:SELECT:BERTCTLEVALUE?
```

Inputs

<float> -30 to 0.

Outputs

<float>

LOOPBACK:SELECT:LFEDFEMODE

This command sets or returns the BERT LFE DFE selection mode.

Syntax

```
LOOPBACK:SELECT:LFEDFEMODE <0 | 1>
```

```
LOOPBACK:SELECT:LFEDFEMODE?
```

Inputs

<0 | 1>

0 - Indicates BERT LFE DFE selection mode is Automatic.

1 - Indicates BERT LFE DFE selection mode is Manual.

Outputs

<0 | 1>

LOOPBACK:SELECT:AUTOSEARCHMODE

This command sets or returns the auto search mode when loopback configuration type selected is forced loopback.

Syntax

```
LOOPBACK:SELECT:AUTOSEARCHMODE <0 | 1>
```

```
LOOPBACK:SELECT:AUTOSEARCHMODE?
```

Inputs

<0 | 1>

0 – Fine

1 – Coarse

Outputs

<0 | 1>

LOOPBACK:SELECT:AUTOSEARCH

This command sets or queries the auto search mode to be performed as a part of JTOL Test

Syntax

```
LOOPBACK:SELECT:AUTOSEARCH <0|1>
```

```
LOOPBACK:SELECT:AUTOSEARCH?
```

Inputs

<0 | 1>

0 - turn OFF the Auto search mode

1 - turn ON the Auto search mode

Outputs

<0 | 1>

LOOPBACK:AUTOSEARCH:TYPE

This command sets or returns the BERT Auto Search Type.

Syntax

```
LOOPBACK:AUTOSEARCH:TYPE <0 | 1>
```

```
LOOPBACK:AUTOSEARCH:TYPE?
```

Inputs

<0 | 1>

0 - Auto search TYPE is Basic

1 - Auto search TYPE is Advanced

Outputs

<0 | 1>

0 - Auto search TYPE is Basic

1 - Auto search TYPE is Advanced

JTOLTEST:OPEN

This command opens the JTOL test panel.

Syntax

```
JTOLTEST:OPEN
```

Inputs

NA

Outputs

NA

JTOLTEST:WIZARD:OPEN

This command opens the JTOL test wizard.

Syntax

```
JTOLTEST:WIZARD:OPEN
```

Inputs

NA

Outputs

NA

JTOLTEST:WIZARD:CLOSE

This command closes the JTOL test wizard.

Syntax

```
JTOLTEST:WIZARD:CLOSE
```

Inputs

NA

Outputs

NA

JTOLTEST:JITTERSTEP:HIGHFREQ

This command sets or returns the jitter step size/ratio (high frequency) value for linear and log based search algorithms respectively.

Syntax

```
JTOLTEST:JITTERSTEP:HIGHFREQ <int>
```

```
JTOLTEST:JITTERSTEP:HIGHFREQ?
```

Inputs

<int> = 0.01 to 1 for log algorithms / 0.004 to 0.5 for linear algorithms.

Outputs

<int>

JTOLTEST:LOADSTRESS

This command loads stresses to the BERT for the JTOL Test.

Syntax

```
JTOLTEST:LOADSTRESS
```

Input

NA

Output

NA

JTOLTEST:FREQ:DEFAULT

This command loads the grid with calibrated SJ-tone values.

Syntax

```
JTOLTEST:FREQ:DEFAULT
```

Inputs

NA

Outputs

NA

JTOLTEST:RUN

This commands sets the run status of JTOL test.

Syntax

```
JTOLTEST:RUN <0 | 1>
```

Inputs

<0 | 1>

0 - Stop the JTOL test run.

1 - Start the JTOL test run.

Outputs

NA

JTOL:REPORT

This PI commands generates a JTOL test report for the specified unique ID.

Syntax

```
JTOL:REPORT <string>
```

Inputs

<string>

Outputs

NA

JTOLTEST:SAVE:ID

This command sets or returns the unique identifier used as key to save the report in database for JTOL test.

Syntax

```
JTOLTEST:SAVE:ID <String>
```

```
JTOLTEST:SAVE:ID?
```

Inputs

<String>

Outputs

<String>

JTOLTEST:SAVE:GENERATEDBY

This command sets or returns the creator name who save the report in database for JTOL test.

Syntax

```
JTOLTEST:SAVE:GENERATEDBY <String>
```

```
JTOLTEST:SAVE:GENERATEDBY?
```

Inputs

<String>

Outputs

<String>

JTOLTEST:SAVE:COMMENTS

This command sets or returns the comments given to save the report in database for JTOL test.

Syntax

```
JTOLTEST:SAVE:COMMENTS <String>
```

```
JTOLTEST:SAVE:COMMENTS?
```

Inputs

<String>

Outputs

<String>

JTOLTEST:SAVE

This command saves the current JTOL test file to the database.

Syntax

JTOLTEST:SAVE

Inputs

NA

Outputs

NA

JTOLTEST:RUNSTATUS

This command returns the JTOL test run status.

Syntax

JTOLTEST:RUNSTATUS?

Inputs

NA

Outputs

{InProgress | Done}

JTOLTEST:FREQ

This command returns the JTOL test result for the specified frequency.

Syntax

JTOLTEST:FREQ <Freq>?

Inputs

<Freq> = <int> Frequency for which JTOL results need to be shown.

Outputs

<String>

JTOLTEST:PLOT:POINTS

This command returns the number of plotted points in JTOL test plot.

Syntax

JTOLTEST:PLOT:POINTS?

Inputs

NA

Outputs

<int>

JTOLTEST:SELECT:SJAMPUNITS

This command sets or returns the SJ Amplitude unit for JTOL test.

Syntax

```
JTOLTEST:SELECT:SJAMPUNITS <0 | 1>
```

```
JTOLTEST:SELECT:SJAMPUNITS?
```

Inputs

<0 | 1>

0 - Indicates the unit is ps.

1 - Indicates the unit is UI p-p.

Outputs

<0 | 1>

JTOLTEST:SELECT:CLOCKTYPE

This command sets or returns the clock type used for JTOL test.

Syntax

```
JTOLTEST:SELECT:CLOCKTYPE <1>
```

```
JTOLTEST:SELECT:CLOCKTYPE?
```

Inputs

<1>

1 - Indicates the clock type is Internal.

Outputs

<1>

JTOLTEST:PLOT

This command displays the JTOL test results plot.

Syntax

```
JTOLTEST:PLOT
```

Inputs

NA

Outputs

NA

JTOLTEST:TABLE

This command displays the JTOL test results table.

Syntax

JTOLTEST:TABLE

Inputs

NA

Outputs

NA

JTOLTEST:SELECT:DUTTYPE

This command sets or returns the DUT Type used for JTOL test.

Syntax

JTOLTEST:SELECT:DUTTYPE <0 | 1>

JTOLTEST:SELECT:DUTTYPE?

Inputs

<0 | 1>

0 - Indicates the DUT type is Non-RootComplex.

1 - Indicates the DUT type is RootComplex.

Outputs

<0 | 1>

JTOLTEST:BERMEASUREMENT:PATTERN

This command sets or returns the BER Measurement patterns for link training in JTOL test.

Syntax

JTOLTEST:BERMEASUREMENT:PATTERN <0 | 1 | 2 | 4 | 5 | 6 | 7 | 8 | 9 | 10 | 11 | 12>

JTOLTEST:BERMEASUREMENT:PATTERN?

Inputs

<0-12>

<0 | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 | 12>

0 - Indicates BER Measurement pattern is Modified compliance.

1 - Indicates BER Measurement pattern is Compliance.

2 - Indicates BER Measurement pattern is Jitter Meas.

4 - Indicates BER Measurement pattern is PRBS7.

5 - Indicates BER Measurement Pattern is PRBS9.

6 - Indicates BER Measurement pattern is PRBS10.

7 - Indicates BER Measurement pattern is PRBS11.

8 - Indicates BER Measurement pattern is PRBS15.

- 9 - Indicates BER Measurement pattern is PRBS20.
- 10 - Indicates BER Measurement pattern is PRBS23.
- 11 - Indicates BER Measurement pattern is PRBS31.
- 12 - Indicates BER Measurement pattern is User.

Outputs

<0-12>

JTOLTEST:LINKTRAINING:LOOPBACKMODEGEN6

This command sets and gets the mode for loopback during the JTOL Test.

Syntax

JTOLTEST:LINKTRAINING:LOOPBACKMODEGEN6 <0 | 1 | 2 | 3>

JTOLTEST:LINKTRAINING:LOOPBACKMODEGEN6?

Inputs

<0 | 1 | 2 | 3>

- 0 - Indicates the loopbackmode is Config EQ Bypass to 64G.
- 1 - Indicates the loopbackmode is to Config No EQ.
- 2 - Indicates the loopbackmode is to Recovery EQ Bypass to 64G.
- 3 - Indicates the loopbackmode is to Recovery Full EQ

Outputs

<0 | 1 | 2 | 3>

JTOLTEST:LINKTRAINING:BERTINITIALPRESET

This command sets or returns the initial preset set at the BERT in the link training for JTOL test.

Syntax

JTOLTEST:LINKTRAINING:BERTINITIALPRESET <0 | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9>

JTOLTEST:LINKTRAINING:BERTINITIALPRESET?

Inputs

<0 | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9>

0 to 9 indicates P0 to P9.

Outputs

<0 | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9>

JTOLTEST:LINKTRAINING:DUTINITIALPRESET

This command sets or returns the initial preset for DUT in the link training for JTOL test.

Syntax

```
JTOLTEST:LINKTRAINING:DUTINITIALPRESET <0 | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9>
```

```
JTOLTEST:LINKTRAINING:DUTINITIALPRESET?
```

Inputs

```
<0 | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9>
```

0 to 9 indicates P0 to P9.

Outputs

```
<0 | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9>
```

JTOLTEST:LINKTRAINING:DUTTARGETPRESET

This command sets or returns the final preset for DUT in the link training for JTOL test.

Syntax

```
JTOLTEST:LINKTRAINING:DUTTARGETPRESET <0 | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9>
```

```
JTOLTEST:LINKTRAINING:DUTTARGETPRESET?
```

Inputs

```
<0 | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9>
```

0 to 9 indicates P0 to P9.

Outputs

```
<0 | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9>
```

JTOLTEST:LINKTRAINING:LANENUMBER

This command sets or returns the lane number for link training in JTOL test.

Syntax

```
JTOLTEST:LINKTRAINING:LANENUMBER <int>
```

```
JTOLTEST:LINKTRAINING:LANENUMBER?
```

Inputs

```
<int> 0 to 15
```

Outputs

```
<int>
```

JTOLTEST:LINKTRAINING:LINKNUMBER

This command sets or returns the link number for link training in JTOL test.

Syntax

```
JTOLTEST:LINKTRAINING:LINKNUMBER <int>
```

```
JTOLTEST:LINKTRAINING:LINKNUMBER?
```

Inputs

<int> 0 to 255

Outputs

<int>

JTOLTEST:LINKTRAINING:STRESSTYPE

This command sets or returns the type of stress to be used during the JTOL test.

Syntax

JTOLTEST:LINKTRAINING:STRESSTYPE <0 | 1 | 2>

JTOLTEST:LINKTRAINING:STRESSTYPE?

Inputs

<0 | 1 | 2>

0 - Indicates the stress type is Apply stress.

1 - Indicates the stress type is Inhibit stress during loopback.

2 - Indicates the stress type is Disable stress.

Outputs

<0 | 1 | 2>

JTOLTEST:LINKTRAINING:CTLE

This command sets or returns the CTLE value in link training for JTOL test.

Syntax

JTOLTEST:LINKTRAINING:CTLE <float>

JTOLTEST:LINKTRAINING:CTLE?

Inputs

<float> -12 to 0

Outputs

<float>

JTOLTEST:LINKTRAINING:DUTPOWERONTYPE

This command sets or returns the DUT Power ON type in the link training for JTOL test.

Syntax

JTOLTEST:LINKTRAINING:DUTPOWERONTYPE <0 | 1 | 2>

JTOLTEST:LINKTRAINING:DUTPOWERONTYPE?

Inputs

<0 | 1 | 2>

0 - Indicates the DUT Power ON type is Manual.

1 - Indicates the DUT Power ON type is Pause for power cycle.

2 - Indicates the DUT Power ON type is Automatic.

Outputs

<0 | 1 | 2>

JTOLTEST:LINKTRAINING:SCRIPTLOCATION

This command sets or returns the script file location for the link training in JTOL test.

Syntax

JTOLTEST:LINKTRAINING:SCRIPTLOCATION <Filepath>

JTOLTEST:LINKTRAINING:SCRIPTLOCATION ?

Inputs

<Filepath> = <String>

Outputs

<String>

JTOLTEST:LINKTRAINING:DUTPOWERDELAY

This command sets or returns the DUT Power ON delay value for link training in JTOL test.

Syntax

JTOLTEST:LINKTRAINING:DUTPOWERDELAY <int>

JTOLTEST:LINKTRAINING:DUTPOWERDELAY?

Inputs

<int> 0 to 300

Outputs

<int>

JTOLTEST:CLOCK:ARCHITECTURE

This command sets or returns the clock architecture type for the JTOL test.

Syntax

JTOLTEST:CLOCK:ARCHITECTURE <0 | 1 | 2>

JTOLTEST:CLOCK:ARCHITECTURE?

Inputs

<0 | 1 | 2>

0 - Indicates the clock architecture type is Common.

1 - Indicates the clock architecture type is SRIS.

2 - Indicates the clock architecture type is SRNS.

Outputs

<0 | 1 | 2>

JTOLTEST:COMMONCLOCK:SKP:GEN12:INTERVAL

This command sets or returns the Common Clock SKP ordered set interval value for Gen1 and Gen2 in JTOL test.

Syntax

JTOLTEST:COMMONCLOCK:SKP:GEN12:INTERVAL <int>

JTOLTEST:COMMONCLOCK:SKP:GEN12:INTERVAL?

Inputs

<int> = 80 to 3076

Outputs

<int>

JTOLTEST:COMMONCLOCK:SKP:GEN345:INTERVAL

This command sets or returns the Common Clock SKP ordered set interval value for Gen3, Gen4, and Gen5 in JTOL test.

Syntax

JTOLTEST:COMMONCLOCK:SKP:GEN345:INTERVAL <int>

JTOLTEST:COMMONCLOCK:SKP:GEN345:INTERVAL?

Inputs

<int> = 20 to 750

Outputs

<int>

JTOLTEST:COMMONCLOCK:SKP:GEN6:INTERVAL

This command sets or returns the Common Clock SKP ordered set interval value for Gen6 in JTOL test.

Syntax

JTOLTEST:COMMONCLOCK:SKP:GEN6:INTERVAL <int>

JTOLTEST:COMMONCLOCK:SKP:GEN6:INTERVAL?

Inputs

<int> = 370 to 1500

Outputs

<int>

JTOLTEST:FILTER:SKP

This command sets or returns the enable or disable status to filter/remove the received SKP ordered set in JTOL test.

Syntax

```
JTOLTEST:FILTER:SKP {0 | 1}
```

```
JTOLTEST:FILTER:SKP?
```

Inputs

{0 | 1}

0 - Disables the option to filter/remove the received SKP ordered set.

1 - Enables the option to filter/remove the received SKP ordered set.

Outputs

{0 | 1}

JTOLTEST:INSERT:SKP

This command sets or returns the enable or disable status to insert the SKP OS while sending training sequences in JTOL test.

Syntax

```
JTOLTEST:INSERT:SKP {0 | 1}
```

```
JTOLTEST:INSERT:SKP?
```

Inputs

{0 | 1}

0 - Disables the option to insert the SKP OS while sending training sequences.

1 - Enables the option to insert the SKP OS while sending training sequences.

Outputs

{0 | 1}

JTOLTEST:LINKTRAINING:CTLETYPE

This command sets or returns the enable or disable status of BERT CTLE type during Link training in JTOL test.

Syntax

```
JTOLTEST:LINKTRAINING:CTLETYPE <0 | 1>
```

```
JTOLTEST:LINKTRAINING:CTLETYPE?
```

Inputs

<0 | 1>

0 - Indicates the BERT CTLE type is disabled.

1 - Indicates the BERT CTLE type is enabled.

Outputs

<0 | 1>

JTOLTEST:LINKTRAINING:CBBAUTORESET

This command sets or returns the CBB auto reset method for Link Training in JTOL test.

Syntax

JTOLTEST:LINKTRAINING:CBBAUTORESET <0 | 1>

JTOLTEST:LINKTRAINING:CBBAUTORESET?

Inputs

<0 | 1>

0 - Indicates the CBB auto reset method is Power Reset.

1 - Indicates the CBB auto reset method is Power Cycle.

Outputs

<0 | 1>

JTOLTEST:LINKTRAINING:CBBPOWERCYCLE

This command sets or returns the time value to send a Power OFF signal to CBB during the specified time (seconds).

Syntax

JTOLTEST:LINKTRAINING:CBBPOWERCYCLE <float>

JTOLTEST:LINKTRAINING:CBBPOWERCYCLE?

Inputs

<float> 0.1 to 20.0 seconds

Outputs

<float>

JTOLTEST:LINKTRAINING:CBBPOWERRESET

This command sets or returns the time value to send a Power Reset signal to CBB during the specified time (seconds).

Syntax

JTOLTEST:LINKTRAINING:CBBPOWERRESET <float>

JTOLTEST:LINKTRAINING:CBBPOWERRESET?

Inputs

<float> 0.1 to 20.0 seconds

Outputs

<float>

JTOLTEST:LINKTRAINING:CBBWAITINGTIME

This command sets or returns the waiting time after the DUT is powered ON.

Syntax

```
JTOLTEST:LINKTRAINING:CBBWAITINGTIME <float>
```

```
JTOLTEST:LINKTRAINING:CBBWAITINGTIME?
```

Inputs

<float> 0.1 to 300 seconds

Outputs

<float>

JTOLTEST:LINKTRAINING:POWEROPTIONTYPE

This command sets or returns the DUT Power Option for Link Training in JTOL test.

Syntax

```
JTOLTEST:LINKTRAINING:POWEROPTIONTYPE <0 | 1>
```

```
JTOLTEST:LINKTRAINING:POWEROPTIONTYPE?
```

Inputs

<0 | 1>

0 - Indicates the power option is External.

1 - Indicates the power option is CBB Controller.

Outputs

<0 | 1>

JTOLTEST:LINKTRAINING:ENABLEDUTLOOPBACKAFTERTEST

This command sets or returns the enable and disable status to keep the DUT in loopback state even after JTOL test execution is complete.

Syntax

```
JTOLTEST:LINKTRAINING:ENABLEDUTLOOPBACKAFTERTEST {0 | 1}
```

```
JTOLTEST:LINKTRAINING:ENABLEDUTLOOPBACKAFTERTEST?
```

Inputs

{0 | 1}

0 - Indicates to disable the option to keep DUT in loopback state even after JTOL test execution is complete.

1 - Indicates to enable the option to keep DUT in loopback state even after JTOL test execution is complete.

Outputs

{0 | 1}

JTOLTEST:LINKTRAINING:USERPATTERNLOCATION

This command sets or returns the user pattern location file path for the link training in JTOL test.

Syntax

```
JTOLTEST:LINKTRAINING:USERPATTERNLOCATION <"Filepath">
```

```
JTOLTEST:LINKTRAINING:USERPATTERNLOCATION?
```

Inputs

<Filepath> = <String>

Outputs

<String>

JTOLTEST:SKP:GEN12:DOUBLESKP

This command sets or returns the ON or OFF status to insert the double SKP in loopback for Gen1 and Gen2 in JTOL test.

Syntax

```
JTOLTEST:SKP:GEN12:DOUBLESKP {0 | 1}
```

```
JTOLTEST:SKP:GEN12:DOUBLESKP?
```

Inputs

{0 | 1}

0 - Indicates the status is OFF.

1 - Indicates the status is ON.

Outputs

{0 | 1}

JTOLTEST:SKP:GEN345:DOUBLESKP

This command sets or returns the ON or OFF status to insert the double SKP in loopback for Gen3, Gen4, and Gen5 in JTOL test.

Syntax

```
JTOLTEST:SKP:GEN345:DOUBLESKP {0 | 1}
```

```
JTOLTEST:SKP:GEN345:DOUBLESKP?
```

Inputs

{0 | 1}

0 - Indicates the status is OFF.

1 - Indicates the status is ON.

Outputs

{0 | 1}

JTOLTEST:SKP:GEN6:DOUBLESKP

This command sets or returns the ON or OFF status to insert the double SKP in loopback for Gen6 in JTOL test.

Syntax

JTOLTEST:SKP:GEN6:DOUBLESKP {0 | 1}

JTOLTEST:SKP:GEN6:DOUBLESKP?

Inputs

{0 | 1}

0 - Indicates the status is OFF.

1 - Indicates the status is ON.

Outputs

{0 | 1}

JTOLTEST:SKP:GEN12:SYMBOLLENGTH

This command sets or returns the symbol length for Gen1 and Gen2 in JTOL test.

Syntax

JTOLTEST:SKP:GEN12:SYMBOLLENGTH <0 | 1 | 2 | 3 | 4>

JTOLTEST:SKP:GEN12:SYMBOLLENGTH?

Inputs

<0 | 1 | 2 | 3 | 4>

0 - Indicates the symbol length is COM+1.

1 - Indicates the symbol length is COM+2.

2 - Indicates the symbol length is COM+3.

3 - Indicates the symbol length is COM+4.

4 - Indicates the symbol length is COM+5.

Outputs

<0 | 1 | 2 | 3 | 4>

JTOLTEST:SKP:GEN345:SYMBOLLENGTH

This command sets or returns the symbol length for Gen3, Gen4 and Gen5 in JTOL test.

Syntax

JTOLTEST:SKP:GEN345:SYMBOLLENGTH <0 | 1 | 2 | 3 | 4>

JTOLTEST:SKP:GEN345:SYMBOLLENGTH?

Inputs

<0 | 1 | 2 | 3 | 4>

0 - Indicates the symbol length is 8.

1 - Indicates the symbol length is 12.

2 - Indicates the symbol length is 16.

3 - Indicates the symbol length is 20.

4 - Indicates the symbol length is 24.

Outputs

<0 | 1 | 2 | 3 | 4>

JTOLTEST:SKP:GEN6:SYMBOLLENGTH

This command sets or returns the symbol length for Gen6 in JTOL test.

Syntax

JTOLTEST:SKP:GEN6:SYMBOLLENGTH <0 | 1 | 2 | 3 | 4>

JTOLTEST:SKP:GEN6:SYMBOLLENGTH?

Inputs

<0 | 1 | 2 | 3 | 4>

0 - Indicates the symbol length is 24.

1 - Indicates the symbol length is 32.

2 - Indicates the symbol length is 40.

3 - Indicates the symbol length is 48.

4 - Indicates the symbol length is 56.

Outputs

<0 | 1 | 2 | 3 | 4>

JTOLTEST:SRNS:SKP:GEN12:INTERVAL

This command sets or returns the SRNS SKP ordered set interval value for Gen1 and Gen2 in JTOL test.

Syntax

JTOLTEST:SRNS:SKP:GEN12:INTERVAL <int>

JTOLTEST:SRNS:SKP:GEN12:INTERVAL?

Inputs

<int> = 80 to 3076

Outputs

<int>

JTOLTEST:SRNS:SKP:GEN345:INTERVAL

This command sets or returns the SRNS SKP ordered set interval value for Gen3, Gen4, and Gen5 in JTOL test.

Syntax

```
JTOLTEST:SRNS:SKP:GEN345:INTERVAL <int>
```

```
JTOLTEST:SRNS:SKP:GEN345:INTERVAL?
```

Inputs

<int> = 20 to 750

Outputs

<int>

JTOLTEST:SRNS:SKP:GEN6:INTERVAL

This command sets or returns the SRNS SKP ordered set interval value for Gen6 in JTOL test.

Syntax

```
JTOLTEST:SRNS:SKP:GEN6:INTERVAL <int>
```

```
JTOLTEST:SRNS:SKP:GEN6:INTERVAL?
```

Inputs

<int> = 370 to 1500

Outputs

<int>

JTOLTEST:SRIS:SKP:GEN12:INTERVAL

This command sets or returns the SRIS SKP ordered set interval value for Gen1 and Gen2 in JTOL test.

Syntax

```
JTOLTEST:SRIS:SKP:GEN12:INTERVAL <int>
```

```
JTOLTEST:SRIS:SKP:GEN12:INTERVAL?
```

Inputs

<int> = 76 to 3076

Outputs

<int>

JTOLTEST:SRIS:SKP:GEN345:INTERVAL

This command sets or returns the SRIS SKP ordered set interval value for Gen3, Gen4, and Gen5 in JTOL test.

Syntax

```
JTOLTEST:SRIS:SKP:GEN345:INTERVAL <int>
```

```
JTOLTEST:SRIS:SKP:GEN345:INTERVAL?
```

Inputs

<int> = 20 to 750

Outputs

<int>

JTOLTEST:SRIS:SKP:GEN6:INTERVAL

This command sets or returns the SRIS SKP ordered set interval value for Gen6 in JTOL test.

Syntax

```
JTOLTEST:SRIS:SKP:GEN6:INTERVAL <int>
```

```
JTOLTEST:SRIS:SKP:GEN6:INTERVAL?
```

Inputs

<int> = 38 to 152

Outputs

<int>

LEQRXTEST:OPEN

This command opens the LEQRx test panel.

Syntax

```
LEQRXTEST:OPEN
```

Inputs

NA

Outputs

NA

LEQRXTEST:WIZARD:OPEN

This command opens the LEQRx test wizard.

Syntax

```
LEQRXTEST:WIZARD:OPEN
```

Inputs

NA

Outputs

NA

LEQRXTEST:WIZARD:CLOSE

This command closes the LEQRx test wizard.

Syntax

```
LEQRXTEST:WIZARD:CLOSE
```

Inputs

NA

Outputs

NA

LEQRXTEST:DUTTYPE

This command selects the DUT Type for LEQRx test.

Syntax

```
LEQRXTEST:DUTTYPE <0 | 1>
```

```
LEQRXTEST:DUTTYPE?
```

Inputs

<0 | 1>

0 indicates the DUT type is Non-Root Complex/AIC.

1 indicates the DUT type is Root Complex/System.

Outputs

<0 | 1>

LEQRXTEST:CLOCKTYPE

This command selects the Clock Type for LEQRx test.

Syntax

```
LEQRXTEST:CLOCKTYPE <0 | 1>
```

```
LEQRXTEST:CLOCKTYPE?
```

Inputs

<0 | 1>

0 indicates the Clock type is 100 MHz External.

1 indicates the Clock type is Internal.

Outputs

<0 | 1>

LEQRXTEST:SHOW:CONNECTIONDIAGRAM

This command displays the connection diagram of the LEQRx test.

Syntax

```
LEQRXTEST:SHOW:CONNECTIONDIAGRAM
```

Inputs

NA

Outputs

NA

LEQRXTEST:LINKTRAINING:BERTINITIALPRESET

This command sets or returns the initial preset set at the BERT end for the link training in LEQRx test.

Syntax

```
LEQRXTEST:LINKTRAINING:BERTINITIALPRESET <0 | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9>
```

```
LEQRXTEST:LINKTRAINING:BERTINITIALPRESET?
```

Inputs

0 to 9 indicates P0 to P9.

Outputs

```
<0 | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9>
```

LEQRXTEST:LINKTRAINING:DUTINITIALPRESET

This command sets or returns the initial preset for the DUT in LEQRx test.

Syntax

```
LEQRXTEST:LINKTRAINING:DUTINITIALPRESET <0 | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9>
```

```
LEQRXTEST:LINKTRAINING:DUTINITIALPRESET?
```

Inputs

0 to 9 indicates P0 to P9.

Outputs

```
<0 | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9>
```

LEQRXTEST:LINKTRAINING:DUTTARGETPRESET

This command sets or returns the final preset for the DUT in LEQRx test.

Syntax

```
LEQRXTEST:LINKTRAINING:DUTTARGETPRESET <0 | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9>
```

LEQRXTEST:LINKTRAINING:DUTTARGETPRESET?

Inputs

0 to 9 indicates P0 to P9.

Outputs

<0 | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9>

LEQRXTEST:LINKTRAINING:LINKNUMBER

This command sets or returns the link number for link training in the LEQRx test.

Syntax

LEQRXTEST:LINKTRAINING:LINKNUMBER <int>

LEQRXTEST:LINKTRAINING:LINKNUMBER?

Inputs

<int> 0 to 255

Outputs

<int>

LEQRXTEST:LINKTRAINING:LANENUMBER

This command sets or returns the lane number for link training in the LEQRx test.

Syntax

LEQRXTEST:LINKTRAINING:LANENUMBER <int>

LEQRXTEST:LINKTRAINING:LANENUMBER?

Inputs

<int> 0 to 15

Outputs

<int>

LEQTEST:LINKTRAINING:RPOCALFILE

This command sets or gets the Return path optimization calibrated file .

Syntax

LEQTEST:LINKTRAINING:RPOCALFILE "FilePath"

LEQTEST:LINKTRAINING:RPOCALFILE?

Inputs

<Filepath> = <String>

Outputs

<String>

LEQTEST:LINKTRAINING:CLEARRPOCALFILE

This command clears the return path optimization file path

Syntax

```
LEQTEST:LINKTRAINING:CLEARRPOCALFILE
```

Inputs

NA

Outputs

NA

LEQTEST:LINKTRAINING:APPLYRPO

This command sets or returns the enable or disable status of Return Path Optimization

Syntax

```
LEQTEST:LINKTRAINING:APPLYRPO <0|1>
```

```
LEQTEST:LINKTRAINING:APPLYRPO ?
```

Inputs

<0 | 1 >

0 indicates the RPO is disabled.

1 indicates the RPO is enabled.

Outputs

<1 | 0>

LEQTEST:LINKTRAINING:RPOMODE

This command sets or returns the RPO mode selection .

Syntax

```
LEQTEST:LINKTRAINING:RPOMODE <0 | 1 >
```

```
LEQTEST:LINKTRAINING:RPOMODE?
```

Inputs

<0 | 1 >

0 indicates the RPO mode is Manual.

1 indicates the RPO mode is Auto.

Outputs

<1 | 0>

LEQTEST:RUNRPO

This command starts or stops the return path optimization .

Syntax

```
LEQTEST:RUNRPO <0 | 1 >
```

```
LEQTEST:RUNRPO?
```

Inputs

<0 | 1 >

0- Starts the Return path optimization run.

1- Stops the Return path optimization run.

Outputs

<1 | 0>

NOTE: The PI Commands for Return path optimization are same for TXLEQ and JTOL

LEQRXTEST:LINKTRAINING:LOOPBACKMODEGEN 6

This command sets to select the mode for loopback during Rx LEQ Test.

Syntax

```
LEQRXTEST:LINKTRAINING:LOOPBACKMODEGEN6 <0 | 1 | 2 | 3>
```

```
LEQRXTEST:LINKTRAINING:LOOPBACKMODEGEN6?
```

Inputs

<0 | 1 | 2 | 3>

0 indicates the loopback mode is Config EQ Bypass to 64G.

1 indicates the loopback mode is Config No EQ.

2 indicates the loopback mode is Recovery EQ Bypass to 64G.

3 indicates the loopback mode is Recovery Full EQ.

Outputs

<0 | 1 | 2 | 3>

LEQRXTEST:LINKTRAINING:BERTLFEDFEMODE

This command sets or returns the BERT LFE DFE selection mode.

Syntax

```
LEQRXTEST:LINKTRAINING:BERTLFEDFEMODE <0 | 1>
```

```
LEQRXTEST:LINKTRAINING:BERTLFEDFEMODE?
```

Inputs

<0 | 1>

0 - Indicates BERT LFE DFE selection mode is Automatic.

1 - Indicates BERT LFE DFE selection mode is Manual.

Outputs

<0 | 1>

LEQRXTEST:LINKTRAINING:DFE

This command sets or returns the DFE value for the link training in LEQ Rx test.

Syntax

```
LEQRXTEST:LINKTRAINING:DFE <int>
```

```
LEQRXTEST:LINKTRAINING:DFE?
```

Inputs

<int> 0 to 30

Outputs

<int>

LEQRXTEST:LINKTRAINING:DFETYPE

This command sets or returns the enable or disable status of BERT DFE type during Link training in LEQ Rx test.

Syntax

```
LEQRXTEST:LINKTRAINING: DFETYPE <0 | 1>
```

```
LEQRXTEST:LINKTRAINING: DFETYPE?
```

Inputs

<0 | 1>

0 - Indicates the BERT DFE is disabled.

1 - Indicates the BERT DFE is enabled.

Outputs

<0 | 1>

LEQRXTEST:LINKTRAINING:LFE

This command sets or returns the LFE value for the link training in LEQRx test.

Syntax

```
LEQRXTEST:LINKTRAINING:LFE <float>
```

```
LEQRXTEST:LINKTRAINING:LFE?
```

Inputs

<float> -2 to 0 in steps of 0.5

Outputs

<float>

LEQRXTEST:LINKTRAINING:LFETYPE

This command sets or returns the enable or disable status of BERT LFE type during Link training in LEQ Rx test.

Syntax

```
LEQRXTEST:LINKTRAINING: LFETYPE <0 | 1>
```

```
LEQRXTEST:LINKTRAINING: LFETYPE?
```

Inputs

<0 | 1>

0 - Indicates the BERT LFE is disabled.

1 - Indicates the BERT LFE is enabled.

Outputs

<0 | 1>

LEQRXTEST:LINKTRAINING:CTLETYPE

This command sets or returns the enable or disable status of BERT CTLE type during Link training in LEQ Rx test.

Syntax

```
LEQRXTEST:LINKTRAINING:CTLETYPE <0 | 1>
```

```
LEQRXTEST:LINKTRAINING:CTLETYPE?
```

Inputs

<0 | 1>

0 - Indicates the BERT CTLE type is disabled.

1 - Indicates the BERT CTLE type is enabled.

Outputs

<0 | 1>

LEQRXTEST:LINKTRAINING:POWEROPTIONTYPE

This command sets or returns the DUT power option for Link Training in LEQ Rx test.

Syntax

```
LEQRXTEST:LINKTRAINING:POWEROPTIONTYPE <0 | 1>
```

```
LEQRXTEST:LINKTRAINING:POWEROPTIONTYPE?
```

Inputs

<0 | 1>

0 - Indicates the power option is External.

1 - Indicates the power option is CBB Controller.

Outputs

<0 | 1>

LEQRXTEST:LINKTRAINING:CBBAUTORESET

This command sets or returns the CBB auto reset method for Link Training in LEQ Rx test.

Syntax

```
LEQRXTEST:LINKTRAINING:CBBAUTORESET <0 | 1>
```

```
LEQRXTEST:LINKTRAINING:CBBAUTORESET?
```

Inputs

<0 | 1>

0 - Indicates the CBB auto reset method is Power Reset.

1 - Indicates the CBB auto reset method is Power Cycle.

Outputs

<0 | 1>

LEQRXTEST:SSC:STATE

This command enable or disable applying SSC to data and clock output for LEQ Rx Test.

Syntax

```
LEQRXTEST:SSC:STATE <1 | 0>
```

```
LEQRXTEST:SSC:STATE?
```

Inputs

<0 | 1>

0 - Disable the option to apply SSC to data and clock output.

1 - Enable the option to apply SSC to data and clock output.

Outputs

<1 | 0>

LEQRXTEST:LINKTRAINING:AUTOSEARCHANDTUNECDR

This command enable or disable option to perform Auto Search and Tune CDR during LEQ Rx Test.

Syntax

```
LEQRXTEST:LINKTRAINING:AUTOSEARCHANDTUNECDR <1 | 0>
```

LEQRXTEST:LINKTRAINING:AUTOSEARCHANDTUNECDR?

Inputs

<0 | 1>

0 - Disable the option to perform Auto Search and Tune CDR.

1 - Enable the option to perform Auto Search and Tune CDR.

Outputs

<1 | 0>

LEQRXTEST:LINKTRAINING:CBBPOWERCYCLE

This command sets or returns the time value to sends a power OFF signal to CBB during the specified time (seconds).

Syntax

LEQRXTEST:LINKTRAINING:CBBPOWERCYCLE <float>.

LEQRXTEST:LINKTRAINING:CBBPOWERCYCLE?

Inputs

<float> 0.1 to 20.0 seconds

Outputs

<float>

LEQRXTEST:LINKTRAINING:CBBPOWERRESET

This command sets or returns the time value to send a Power Reset signal to CBB during the specified time (seconds).

Syntax

LEQRXTEST:LINKTRAINING:CBBPOWERRESET <float>

LEQRXTEST:LINKTRAINING:CBBPOWERRESET?

Inputs

<float> 0.1 to 20.0 seconds

Outputs

<float>

LEQRXTEST:LINKTRAINING:CBBWAITINGTIME

This command sets or returns the waiting time after the DUT is powered ON.

Syntax

LEQRXTEST:LINKTRAINING:CBBWAITINGTIME <float>

LEQRXTEST:LINKTRAINING:CBBWAITINGTIME?

Inputs

<float> 0.1 to 300 seconds

Outputs

<float>

LEQRXTEST:LINKTRAINING:ENABLEDUTLOOPBACKAFTERTEST

This command sets or returns the enable and disable status to keep the DUT in loopback state even after LEQ Rx test execution is complete.

Syntax

```
LEQRXTEST:LINKTRAINING:ENABLEDUTLOOPBACKAFTERTEST {0 | 1}
```

```
LEQRXTEST:LINKTRAINING:ENABLEDUTLOOPBACKAFTERTEST?
```

Inputs

{0 | 1}

0 - Indicates to disable the option to keep DUT in loopback state even after LEQ Rx test execution is complete.

1 - Indicates to enable the option to keep DUT in loopback state even after LEQ Rx test execution is complete.

Outputs

{0 | 1}

LEQRXTEST:CLOCK:ARCHITECTURE

This command sets or returns the clock architecture type for the LEQRx test.

Syntax

```
LEQRXTEST:CLOCK:ARCHITECTURE <0 | 1 | 2>
```

```
LEQRXTEST:CLOCK:ARCHITECTURE?
```

Inputs

<0 | 1 | 2>

0 - Indicates the clock architecture type is Common.

1 - Indicates the clock architecture type is SRIS.

2 - Indicates the clock architecture type is SRNS.

Outputs

<0 | 1 | 2>

LEQTXTEST:REPORT

This PI commands generates a LEQTX test report for the specified unique ID.

Syntax

```
LEQTXTEST:REPORT <string>
```

Inputs

<string>

Outputs

NA

LEQRXTEST:REPORT

This PI commands generates a LEQRX test report for the specified unique ID.

Syntax

LEQRXTEST:REPORT <string>

Inputs

<string>

Outputs

NA

LEQRXTEST:COMMONCLOCK:SKP:GEN12:INTERVAL

This command sets or returns the Common Clock SKP ordered set interval value for Gen1 and Gen2 in LEQ Rx test.

Syntax

LEQRXTEST:COMMONCLOCK:SKP:GEN12:INTERVAL <int>

LEQRXTEST:COMMONCLOCK:SKP:GEN12:INTERVAL?

Inputs

<int> = 80 to 3076

Outputs

<int>

LEQRXTEST:COMMONCLOCK:SKP:GEN345:INTERVAL

This command sets or returns the Common Clock SKP ordered set interval value for Gen3, Gen4, and Gen5 in LEQ Rx test.

Syntax

LEQRXTEST:COMMONCLOCK:SKP:GEN345:INTERVAL <int>

LEQRXTEST:COMMONCLOCK:SKP:GEN345:INTERVAL?

Inputs

<int> = 20 to 750

Outputs

<int>

LEQRXTEST:COMMONCLOCK:SKP:GEN6:INTERVAL

This command sets or returns the Common Clock SKP ordered set interval value for Gen6 in Rx LEQ test.

Syntax

LEQRXTEST:COMMONCLOCK:SKP:GEN6:INTERVAL <int>

LEQRXTEST:COMMONCLOCK:SKP:GEN6:INTERVAL?

Inputs

<int> = 370 to 1500

Outputs

<int>

LEQRXTEST:FILTER:SKP

This command sets or returns the enable or disable status to filter/remove the received SKP ordered set in LEQRx test.

Syntax

LEQRXTEST:FILTER:SKP {0 | 1}

LEQRXTEST:FILTER:SKP?

Inputs

{0 | 1}

0 - Disables the option to filter/remove the received SKP ordered set.

1 - Enables the option to filter/remove the received SKP ordered set.

Outputs

{0 | 1}

LEQRXTEST:INSERT:SKP

This command sets or returns the enable or disable status to insert the SKP OS while sending training sequences in LEQRx test.

Syntax

LEQRXTEST:INSERT:SKP {0 | 1}

LEQRXTEST:INSERT:SKP?

Inputs

{0 | 1}

0 - Disables the option to insert the SKP OS while sending training sequences.

1 - Enables the option to insert the SKP OS while sending training sequences.

Outputs

{0 | 1}

LEQRXTEST:SKP:GEN12:DOUBLESKP

This command sets or returns the ON or OFF status to insert the double SKP in loopback for Gen1 and Gen2 in LEQRx test.

Syntax

```
LEQRXTEST:SKP:GEN12:DOUBLESKP {0 | 1}
```

```
LEQRXTEST:SKP:GEN12:DOUBLESKP?
```

Inputs

{0 | 1}

0 - Indicates the status is OFF.

1 - Indicates the status is ON.

Outputs

{0 | 1}

LEQRXTEST:SKP:GEN345:DOUBLESKP

This command sets or returns the ON or OFF status to insert the double SKP in loopback for Gen3, Gen4, and Gen5 in LEQRx test.

Syntax

```
LEQRXTEST:SKP:GEN345:DOUBLESKP {0 | 1}
```

```
LEQRXTEST:SKP:GEN345:DOUBLESKP?
```

Inputs

{0 | 1}

0 - Indicates the status is OFF.

1 - Indicates the status is ON.

Outputs

{0 | 1}

LEQRXTEST:SKP:GEN6:DOUBLESKP

This command sets or returns the ON or OFF status to insert the double SKP in loopback for Gen6 in Rx LEQ test.

Syntax

```
LEQRXTEST:SKP:GEN6:DOUBLESKP <0 | 1 >LEQRXTEST:SKP:GEN6:DOUBLESKP?
```

Inputs

<0 | 1>

0 - Indicates the status is OFF.

1 - Indicates the status is ON.

Outputs

<0 | 1>

LEQRXTEST:SKP:GEN12:SYMBOLLENGTH

This command sets or returns the symbol length for Gen1 and Gen2 in LEQRx test.

Syntax

LEQRXTEST:SKP:GEN12:SYMBOLLENGTH <0 | 1 | 2 | 3 | 4>

LEQRXTEST:SKP:GEN12:SYMBOLLENGTH?

Inputs

<0 | 1 | 2 | 3 | 4>

0 - Indicates the symbol length is COM+1.

1 - Indicates the symbol length is COM+2.

2 - Indicates the symbol length is COM+3.

3 - Indicates the symbol length is COM+4.

4 - Indicates the symbol length is COM+5.

Outputs

<0 | 1 | 2 | 3 | 4>

LEQRXTEST:SKP:GEN345:SYMBOLLENGTH

This command sets or returns the symbol length for Gen3, Gen4 and Gen5 in LEQRx test.

Syntax

LEQRXTEST:SKP:GEN345:SYMBOLLENGTH <0 | 1 | 2 | 3 | 4>

LEQRXTEST:SKP:GEN345:SYMBOLLENGTH?

Inputs

<0 | 1 | 2 | 3 | 4>

0 - Indicates the symbol length is 8.

1 - Indicates the symbol length is 12.

2 - Indicates the symbol length is 16.

3 - Indicates the symbol length is 20.

4 - Indicates the symbol length is 24.

Outputs

<0 | 1 | 2 | 3 | 4>

LEQRXTEST:SKP:GEN6:SYMBOLLENGTH

This command sets or returns the symbol length for Gen6 in Rx LEQ test.

Syntax

LEQRXTEST:SKP:GEN6:SYMBOLLENGTH <0 | 1 | 2 | 3 | 4>LEQRXTEST:SKP:GEN6:SYMBOLLENGTH?**Inputs**

<0 | 1 | 2 | 3 | 4>

0 - Indicates the symbol length is 24.

1 - Indicates the symbol length is 32.

2 - Indicates the symbol length is 40.

3 - Indicates the symbol length is 48.

4 - Indicates the symbol length is 56.

Outputs

<0 | 1 | 2 | 3 | 4>

LEQRXTEST:SRNS:SKP:GEN12:INTERVAL

This command sets or returns the SRNS SKP ordered set interval value for Gen1 and Gen2 in LEQ Rx test.

Syntax

LEQRXTEST:SRNS:SKP:GEN12:INTERVAL <int>

LEQRXTEST:SRNS:SKP:GEN12:INTERVAL?

Inputs

<int> = 80 to 3076

Outputs

<int>

LEQRXTEST:SRNS:SKP:GEN345:INTERVAL

This command sets or returns the SRNS SKP ordered set interval value for Gen3, Gen4, and Gen5 in LEQ Rx test.

Syntax

LEQRXTEST:SRNS:SKP:GEN345:INTERVAL <int>

LEQRXTEST:SRNS:SKP:GEN345:INTERVAL?

Inputs

<int> = 20 to 750

Outputs

<int>

LEQRXTEST:SRNS:SKP:GEN6:INTERVAL

This command sets or returns the SRNS SKP ordered set interval value for Gen6 in Rx LEQ test.

Syntax

LEQRXTEST:SRNS:SKP:GEN6:INTERVAL <int>

LEQRXTEST:SRNS:SKP:GEN6:INTERVAL?

Inputs

<int> = 370 to 1500

Outputs

<int>

LEQRXTEST:SRIS:SKP:GEN12:INTERVAL

This command sets or returns the SRIS SKP ordered set interval value for Gen1 and Gen2 in LEQ Rx test.

Syntax

LEQRXTEST:SRIS:SKP:GEN12:INTERVAL <int>

LEQRXTEST:SRIS:SKP:GEN12:INTERVAL?

Inputs

<int> = 76 to 3076

Outputs

<int>

LEQRXTEST:SRIS:SKP:GEN345:INTERVAL

This command sets or returns the SRIS SKP ordered set interval value for Gen3, Gen4, and Gen5 in LEQ Rx test.

Syntax

LEQRXTEST:SRIS:SKP:GEN345:INTERVAL <int>

LEQRXTEST:SRIS:SKP:GEN345:INTERVAL?

Inputs

<int> = 20 to 750

Outputs

<int>

LEQRXTEST:SRIS:SKP:GEN6:INTERVAL

This command sets or returns the SRIS SKP ordered set interval value for Gen6 in Rx LEQ test.

Syntax

LEQRXTEST:SRIS:SKP:GEN6:INTERVAL <int>

LEQRXTEST:SRIS:SKP:GEN6:INTERVAL?

Inputs

<int> = 38 to 152

Outputs

<int>

LEQRXTEST:LINKTRAINING:USERPATTERNLOCATION

This command sets or returns the user pattern location file path for the link training in LEQRx test.

Syntax

```
LEQRXTEST:LINKTRAINING:USERPATTERNLOCATION <"Filepath">
```

```
LEQRXTEST:LINKTRAINING:USERPATTERNLOCATION?
```

Inputs

<Filepath> = <String>

Outputs

<String>

LEQRXTEST:SSC:STATE

This command enable or disable applying SSC to data and clock output for LEQ Rx Test.

Syntax

```
LEQRXTEST:SSC:STATE <1|0>
```

```
LEQRXTEST:SSC:STATE?
```

Inputs

<0 | 1>

0 - Disable the option to apply SSC to data and clock output.

1 - Enable the option to apply SSC to data and clock output.

Outputs

<1 | 0>

LEQRXTEST:LINKTRAINING:AUTOSEARCHANDTUNECDR

This command enable or disable option to perform Auto Search and Tune CDR during LEQ Rx Test.

Syntax

```
LEQRXTEST:LINKTRAINING:AUTOSEARCHANDTUNECDR <1|0>
```

```
LEQRXTEST:LINKTRAINING:AUTOSEARCHANDTUNECDR?
```

Inputs

<0 | 1>

0 - Disable the option to perform Auto Search and Tune CDR.

1 - Enable the option to perform Auto Search and Tune CDR.

Outputs

<1 | 0>

LOOPBACK:SELECT:BERTCTLEMODE

This command sets or returns the BERT CTLE mode for LEQ Rx Test.

Syntax

LOOPBACK:SELECT:BERTCTLEMODE <0 | 1>

LOOPBACK:SELECT:BERTCTLEMODE?

Inputs

<0 | 1>

0 - Indicates BERT CTLE mode is Automatic.

1 - Indicates BERT CTLE mode is Manual.

Outputs

<1 | 0>

LEQRXTEST:LINKTRAINING:DUTPOWERONTYPE

This command sets or returns the DUT Power ON type for link training in the LEQRx test.

Syntax

LEQRXTEST:LINKTRAINING:DUTPOWERONTYPE <0 | 1 | 2>

LEQRXTEST:LINKTRAINING:DUTPOWERONTYPE?

Inputs

<0 | 1 | 2>

0 indicates the DUT Power On type is Manual.

1 indicates the DUT Power On type is Pause for power cycle.

2 indicates the DUT Power On type is Automatic.

Outputs

<0 | 1 | 2>

LEQRXTEST:LINKTRAINING:DUTPOWERDELAY

This command gets or returns the delay value of the DUT power On for the link training in LEQRx test.

Syntax

LEQRXTEST:LINKTRAINING:DUTPOWERDELAY <int>

LEQRXTEST:LINKTRAINING:DUTPOWERDELAY?

Inputs

<int> 0 to 300

Outputs

<int>

LEQRXTEST:LINKTRAINING:SCRIPTLOCATION

This command sets or returns the script file location for the link training in LEQRx test.

Syntax

LEQRXTEST:LINKTRAINING:SCRIPTLOCATION <Filepath>

LEQRXTEST:LINKTRAINING:SCRIPTLOCATION?

Inputs

<Filepath> = <string>

Outputs

<string>

LEQRXTEST:BERMEASUREMENT:PATTERN

This command sets or returns the BER measurement patterns selected for the link training in LEQRx test.

Syntax

LEQRXTEST:BERMEASUREMENT:PATTERN <0 | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 | 11>

LEQRXTEST:BERMEASUREMENT:PATTERN?

Inputs

0- 11

<0 | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 | 11>

0 - Indicates BER Measurement pattern is Modified compliance.

1 - Indicates BER Measurement pattern is Jitter Meas.

2 - Indicates BER Measurement pattern is Compliance.

3 - Indicates BER Measurement pattern is PRBS7.

4 - Indicates BER Measurement Pattern is PRBS9.

5 - Indicates BER Measurement pattern is PRBS10.

6 - Indicates BER Measurement pattern is PRBS11.

7 - Indicates BER Measurement pattern is PRBS15.

8 - Indicates BER Measurement pattern is PRBS20.

9 - Indicates BER Measurement pattern is PRBS23.

10 - Indicates BER Measurement pattern is PRBS31.

11 - Indicates BER Measurement pattern is User

Outputs

<0 -11>

LEQRXTEST:LINKTRAINING:STRESSTYPE

This command sets or returns the stress type selected for the link training in LEQRx test.

Syntax

```
LEQRXTEST:LINKTRAINING:STRESSTYPE <0 | 1 | 2>
```

```
LEQRXTEST:LINKTRAINING:STRESSTYPE?
```

Inputs

<0 | 1 | 2>

0 indicates the stress type is Apply stress.

1 indicates the stress type is Inhibit stress during loopback.

2 indicates the stress type is Disable stress.

Outputs

<0 | 1 | 2>

LEQRXTEST:LINKTRAINING:CTLE

This command sets or returns the CTLE value for the link training in LEQ Rx test.

Syntax

```
LEQRXTEST:LINKTRAINING:CTLE <float>
```

```
LEQRXTEST:LINKTRAINING:CTLE?
```

Inputs

<float> -12 to 0

Outputs

<float>

LEQRXTEST:LINKTRAINING:ENABLEDUTLOOPBACKAFTERTEST

This command sets or returns the enable and disable status to keep the DUT in loopback state even after LEQRx test execution is complete.

Syntax

```
LEQRXTEST:LINKTRAINING:ENABLEDUTLOOPBACKAFTERTEST {0 | 1}
```

```
LEQRXTEST:LINKTRAINING:ENABLEDUTLOOPBACKAFTERTEST?
```

Inputs

{0 | 1}

0 indicates to disable the option to keep DUT in loopback state even after LEQ Rx Test execution is complete.

1 indicates to enable the option to keep DUT in loopback state even after LEQ Rx Test execution is complete.

Outputs

{0 | 1}

LEQRXTEST:RUN

This command sets the LEQRx test run status.

Syntax

```
LEQRXTEST:RUN <0 | 1>
```

Inputs

<0 | 1>

0 - Stop the LEQRx test run.

1 - Start the LEQRx test run.

Outputs

<0 | 1>

LEQRXTEST:STATUS

This command returns the run status of LEQRx test.

Syntax

```
LEQRXTEST:STATUS?
```

Inputs

NA

Outputs

{Inprogress | Done}

LEQRXTEST:LINKTRAINING:STATUS

This command returns the result status of link training during LEQRx test.

Syntax

```
LEQRXTEST:LINKTRAINING:STATUS?
```

Inputs

NA

Outputs

{Returns | Success | Fail}

LEQRXTEST:LINKTRAINING:STOP

This command stops the link training process during LEQRx test.

Syntax

Application Help

LEQRXTEST:LINKTRAINING:STOP

Inputs

NA

Outputs

NA

LEQRXTEST:TEST:ADDERROR

This command manually add errors during BER run during LEQRx test.

Syntax

LEQRXTEST:TEST:ADDERROR

Inputs

NA

Outputs

NA

LEQRXTEST:TEST:CURRENTBER

This command returns the current BER value in the DUT.

Syntax

LEQRXTEST:TEST:CURRENTBER?

Inputs

NA

Outputs

<String>

LEQRXTEST:TEST:CURRENTERRORCOUNT

This command returns the number of errors in the DUT for LEQRx test..

Syntax

LEQRXTEST:TEST:CURRENTERRORCOUNT?

Inputs

NA

Outputs

<int>

LEQRXTEST:TEST:CURRENTTOTALBITS

This command returns the total number of bits transmitted during test execution in LEQRx test.

Syntax

```
LEQRXTEST:TEST:CURRENTTOTALBITS?
```

Inputs

NA

Outputs

<float>

LEQRXTEST:TEST:RESULT

This command returns the result status of the LEQRx test.

Syntax

```
LEQRXTEST:TEST:RESULT?
```

Inputs

NA

Outputs

{Pass | Fail}

LEQRXTEST:SAVE:ID

This command sets or returns the unique identifier used as key to save the report in database for LEQRx test.

Syntax

```
LEQRXTEST:SAVE:ID <string>
```

```
LEQRXTEST:SAVE:ID?
```

Inputs

<string>

Outputs

<string>

LEQRXTEST:SAVE:GENERATEDBY

This command sets or returns the creator name who save the report in database for LEQRx test.

Syntax

```
LEQRXTEST:SAVE:GENERATEDBY <string>
```

```
LEQRXTEST:SAVE:GENERATEDBY?
```

Inputs

<string>

Outputs

<string>

LEQRXTEST:SAVE:COMMENTS

This command sets or returns the comments given to save the report in database for LEQRx test.

Syntax

```
LEQRXTEST:SAVE:COMMENTS <String>
```

```
LEQRXTEST:SAVE:COMMENTS?
```

Inputs

<string>

Outputs

<string>

LEQRXTEST:SAVE

This command saves the LEQRx test report to the database.

Syntax

```
LEQRXTEST:SAVE
```

Inputs

NA

Outputs

NA

LEQTXTEST:OPEN

This command opens LEQTx test panel.

Syntax

```
LEQTXTEST:OPEN
```

Inputs

NA

Outputs

NA

LEQTXTEST:WIZARD:OPEN

This command opens LEQTx test wizard.

Syntax

```
LEQTXTEST:WIZARD:OPEN
```

Inputs

NA

Outputs

NA

LEQTXTEST:WIZARD:CLOSE

This command closes LEQTx test wizard.

Syntax

```
LEQTXTEST:WIZARD:CLOSE
```

Inputs

NA

Outputs

NA

LEQTXTEST:SELECT:TP1FILE

This command selects the Calibration file for LEQTx test..

Syntax

```
LEQTXTEST:SELECT:TP1FILE <string>
```

```
LEQTXTEST:SELECT:TP1FILE?
```

Inputs

<string>

Outputs

<string>

LEQTXTEST:DUTTYPE

This command sets or returns the DUT type for LEQTx test.

Syntax

```
LEQTXTEST:DUTTYPE <0 | 1>>
```

```
LEQTXTEST:DUTTYPE?
```

Inputs

<0 | 1>

0 - Indicates the DUT type is Non-Root Complex/AIC.

1 - Indicates the DUT type is Root Complex/System.

Outputs

<0 | 1>

LEQTXTEST:CLOCKTYPE

This command sets or returns the Clock type for LEQTx test..

Syntax

```
LEQTXTEST:CLOCKTYPE <0 | 1>
```

```
LEQTXTEST:CLOCKTYPE?
```

Inputs

<0 | 1>

0 - Indicates the Clock type is 100 MHz External.

1 - Indicates the Clock type is Internal.

Outputs

<0 | 1>

LEQTXTEST:SELECT:TEST

This command sets or returns the LEQTx test selected to be executed.

Syntax

```
LEQTXTEST:SELECT:TEST <0 | 1 | 2>
```

```
LEQTXTEST:SELECT:TEST?
```

Inputs

<0 | 1 | 2>

0 - Indicates the tests are AIC Initial Tx EQ tests.

1 - Indicates the tests is AIC Response Time test.

2 - Indicates the tests is System Response Time test.

Outputs

<0 | 1 | 2>

LEQTXTEST:LINKTRAINING:BERTINITIALPRESET

This command sets or returns the initial preset set at the BERT end for the link training in LEQTx test.

Syntax

```
LEQTXTEST:LINKTRAINING:BERTINITIALPRESET <0 | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9>
```

```
LEQTXTEST:LINKTRAINING:BERTINITIALPRESET?
```

Inputs

0 to 9 indicates P0 to P9

Outputs

```
<0 | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9>
```

LEQTXTEST:LINKTRAINING:LINKNUMBER

This command sets or returns the link number for link training in LEQTx test.

Syntax

```
LEQTXTEST:LINKTRAINING:LINKNUMBER <int>
```

```
LEQTXTEST:LINKTRAINING:LINKNUMBER?
```

Inputs

<int> 0 to 255

Outputs

<int>

LEQTXTEST:LINKTRAINING:LANENUMBER

This command sets or returns the lane number for link training in LEQTx test.

Syntax

```
LEQTXTEST:LINKTRAINING:LANENUMBER <int>
```

```
LEQTXTEST:LINKTRAINING:LANENUMBER?
```

Inputs

<int> 0 to 255

Outputs

<int>

LEQTXTEST:LINKTRAINING:DUTPOWERONTYPE

This command sets or returns the DUT Power ON type for the link training in LEQTx test.

Syntax

```
LEQTXTEST:LINKTRAINING:DUTPOWERONTYPE <0 | 1 | 2>
```

```
LEQTXTEST:LINKTRAINING:DUTPOWERONTYPE?
```

Inputs

<0 | 1 | 2>

- 0 - Indicates the DUT Power ON type is Manual.
- 1 - Indicates the DUT Power ON type is Pause for power cycle.
- 2 - Indicates the DUT Power ON type is Automatic.

Outputs

<0 | 1 | 2>

LEQTXTEST:LINKTRAINING:DUTPOWERDELAY

This command sets or returns the DUT Power On delay value for link training in LEQTx test.

Syntax

LEQTXTEST:LINKTRAINING:DUTPOWERDELAY <int>

LEQTXTEST:LINKTRAINING:DUTPOWERDELAY?

Inputs

<int> 0 to 300

Outputs

<int>

LEQTXTEST:LINKTRAINING:SCRIPTLOCATION

This command sets or returns the script file location for the link training in LEQTx test.

Syntax

LEQTXTEST:LINKTRAINING:SCRIPTLOCATION <Filepath>

LEQTXTEST:LINKTRAINING:SCRIPTLOCATION?

Inputs

<Filepath> = <string>

Outputs

<string>

LEQTXTEST:LINKTRAINING:CTLE

This command sets or returns the CTLE value for LEQ Tx test.

Syntax

LEQTXTEST:LINKTRAINING:CTLE <float>

LEQTXTEST:LINKTRAINING:CTLE?

Inputs

<float> -30 to 0

Outputs

<float>

LEQTXTEST:STRESSTYPE

This command sets or returns the Amplitude Configuration type for the LEQTx test.

Syntax

```
LEQTXTEST:STRESSTYPE <0 | 1 | 2>
```

```
LEQTXTEST:STRESSTYPE?
```

Inputs

<0 | 1 | 2>

0 - Indicates the Amplitude Configuration type is Calibrated.

1 - Indicates the Amplitude Configuration type is Customized.

2 - Indicates the Amplitude Configuration type is Un-calibrated.

Outputs

<0 | 1 | 2>

LEQTXTEST:AMPLITUDE

This command sets or returns the amplitude value for LEQTx test.

Syntax

```
LEQTXTEST:AMPLITUDE <int>
```

```
LEQTXTEST:AMPLITUDE?
```

Inputs

<int>

Outputs

<int>

LEQTXTEST:APPLYSOFTEQ

This command sets or returns the enable or disable status to apply software CTLE to the DUT Waveform in LEQTx test.

Syntax

```
LEQTXTEST:APPLYSOFTEQ {0 | 1}
```

```
LEQTXTEST:APPLYSOFTEQ?
```

Inputs

{0 | 1}

0 - Disables the option to apply software CTLE to the DUT Waveform.

1 - Enables the option to apply software CTLE to the DUT Waveform.

Outputs

{0 | 1}

LEQTXTEST:FILTERFILE

This command sets or returns the filter file name for software CTLE in LEQTx test.

Syntax

```
LEQTXTEST:FILTERFILE <string>
```

```
LEQTXTEST:FILTERFILE?
```

Inputs

<String>

Outputs

<String>

LEQTXTEST:DUTWFMSCALE

This command sets or returns the waveform scale value for the DUT waveform in LEQTx test.

Syntax

```
LEQTXTEST:DUTWFMSCALE <float>
```

```
LEQTXTEST:DUTWFMSCALE?
```

Inputs

<float> 20 to 200

Outputs

<float>

LEQTXTEST:LOOPBACKRUN

This command sets or returns the number of retrials when loopback is failed in LEQTx test.

Syntax

```
LEQTXTEST:LOOPBACKRUN <int>
```

```
LEQTXTEST:LOOPBACKRUN?
```

Inputs

<int>

Outputs

<int>

LEQTXTEST:DUTID

This command sets or returns the DUT ID for creating folder to save the waveforms in LEQTx test.

Syntax

```
LEQTXTEST:DUTID <String>
```

```
LEQTXTEST:DUTID?
```

Inputs

<String>

Outputs

<String>

LEQTXTEST:CLEARALL

This command un-checks all the presets for LEQTx test.

Syntax

```
LEQTXTEST:CLEARALL
```

Inputs

NA

Outputs

NA

LEQTXTEST:RUN

This command sets the run status of LEQTx test.

Syntax

```
LEQTXTEST:RUN <0 | 1>
```

```
LEQTXTEST:RUN?
```

Inputs

<0 | 1>

0 - Stops the LEQTx test run.

1 - Starts the LEQTx test run.

Outputs

<0 | 1>

LEQTXTEST:STATUS

This command returns the run status of LEQTx test.

Syntax

LEQTXTEST:STATUS?

Inputs

NA

Outputs

{InProgress | Done}

LEQTXTEST:LINKTRAINING:STATUS

This command returns the status of linktraining during LEQTx test.

Syntax

LEQTXTEST:LINKTRAINING:STATUS?

Inputs

NA

Outputs

{Running | Success | Fail}

LEQTXTEST:LINKTRAINING:STOP

This command stops the link training process.

Syntax

LEQTXTEST:LINKTRAINING:STOP

Inputs

NA

Outputs

NA

LEQTXTEST:SAVE:ID

This command sets or returns the unique identifier used as key to save the report in database for LEQTx test.

Syntax

LEQTXTEST:SAVE:ID <String>

LEQTXTEST:SAVE:ID?

Inputs

<String>

Outputs

<String>

LEQTXTEST:SAVE:COMMENTS

This command sets or returns the comments given to save the report in database for LEQTx test.

Syntax

```
LEQTXTEST:SAVE:COMMENTS <string>
```

```
LEQTXTEST:SAVE:COMMENTS ?
```

Inputs

<string>

Outputs

<string>

LEQTXTEST:SAVE:GENERATEDBY

This command sets or returns the creator name who save the report in database for LEQTx test.

Syntax

```
LEQTXTEST:SAVE:GENERATEDBY <String>
```

```
LEQTXTEST:SAVE:GENERATEDBY?
```

Inputs

<String>

Outputs

<String>

LEQTXTEST:LINKTRAINING:CTLETYPE

This command sets or returns the enable or disable status of BERT CTLE type during Link training in LEQ Tx test.

Syntax

```
LEQTXTEST:LINKTRAINING:CTLETYPE <0 | 1>
```

```
LEQTXTEST:LINKTRAINING:CTLETYPE?
```

Inputs

<0 | 1>

0 - Indicates the BERT CTLE type is disabled.

1 - Indicates the BERT CTLE type is enabled.

Outputs

<0 | 1>

LEQTXTEST:INITIALPRESET

This command sets the DUT Initial preset for AIC response test in LEQTx test.

Syntax

```
LEQTXTEST:INITIALPRESET <Row index> <0 | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9>
```

Inputs

<Row index> = <int> 0 to 19

0 = Indicates the DUT initial preset is P0.

1 = Indicates the DUT initial preset is P1.

2 = Indicates the DUT initial preset is P2.

3 = Indicates the DUT initial preset is P3.

4 = Indicates the DUT initial preset is P4.

5 = Indicates the DUT initial preset is P5.

6 = Indicates the DUT initial preset is P6.

7 = Indicates the DUT initial preset is P7.

8 = Indicates the DUT initial preset is P8.

9 = Indicates the DUT initial preset is P9.

Outputs

NA

LEQTXTEST:SELECTPRESET

This command sets the preset or coefficients for LEQTx test execution.

Syntax

```
LEQTXTEST:SELECTPRESET <Row index> {0 | 1}
```

Inputs

<Row index> = <int> 0 to 9 for Initial Tx EQ and 0 to 19 for response time.

0 = Disables the preset checkbox.

1 = Enables the preset checkbox.

Outputs

NA

LEQTXTEST:LINKTRAINING:CBBAUTORESET

This command to sets or returns the CBB auto reset method for Link Training in LEQ Tx test.

Syntax

```
LEQTXTEST:LINKTRAINING:CBBAUTORESET <0 | 1>
```

```
LEQTXTEST:LINKTRAINING:CBBAUTORESET?
```

Inputs

<0 | 1>

0 - Indicates the CBB auto reset method is Power Reset.

1 - Indicates the CBB auto reset method is Power Cycle.

Outputs

<0 | 1>

LEQTXTEST:LINKTRAINING:CBBPOWERCYCLE

This command sets or returns the time value to send a power OFF signal to CBB during the specified time (seconds).

Syntax

LEQTXTEST:LINKTRAINING:CBBPOWERCYCLE <float>

LEQTXTEST:LINKTRAINING:CBBPOWERCYCLE?

Inputs

<float> 0.1 to 20.0 seconds

Outputs

<float>

LEQTXTEST:LINKTRAINING:CBBPOWERRESET

This command sends a power reset signal to CBB during the specified time (seconds).

Syntax

LEQTXTEST:LINKTRAINING:CBBPOWERRESET <float>

LEQTXTEST:LINKTRAINING:CBBPOWERRESET?

Inputs

<float> 0.1 to 20.0 seconds

Outputs

<float>

LEQTXTEST:LINKTRAINING:CBBWAITINGTIME

This command sets or returns the waiting time after the DUT is powered ON.

Syntax

LEQTXTEST:LINKTRAINING:CBBWAITINGTIME <float>

LEQTXTEST:LINKTRAINING:CBBWaitingTime?

Inputs

<float> 0.1 to 300 seconds

Outputs

<float>

LEQTXTEST:LINKTRAINING:POWEROPTIONTYPE

This command sets or returns the DUT power option for Link Training in LEQ Tx test.

Syntax

LEQTXTEST:LINKTRAINING:POWEROPTIONTYPE <0 | 1>

LEQTXTEST:LINKTRAINING:POWEROPTIONTYPE?

Inputs

<0 | 1>

0 - Indicates the power option is External.

1 - Indicates the power option is CBB Controler.

Outputs

<0 | 1>

LEQTXTEST:SOFTWAREQTYPE <0/1>

This command sets or returns the Software Equalization type.

Syntax

LEQTXTEST:SOFTWAREQTYPE <0/1>

Inputs

<0 | 1>

0 - Indicates Software Equalization type is Automatic.

1 - Indicates Software Equalization type is Manual.

Outputs

<0 | 1>

LOOPBACK:SELECT:PATTERN

This command sets or returns the pattern used for BER Measurement.

Syntax

LOOPBACK:SELECT:PatternType <0 | 1 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 >

LOOPBACK:SELECT:PatternType?

Inputs

0 indicates that Pattern type is Modified Compliance

1 indicates that Pattern type is Compliance

3 indicates that Pattern type is PRBS7

4 indicates that Pattern type is PRBS9
5 indicates that Pattern type is PRBS10
6 indicates that Pattern type is PRBS11
7 indicates that Pattern type is PRBS15
8 indicates that Pattern type is PRBS20
9 indicates that Pattern type is PRBS23
10 indicates that Pattern type is PRBS31

Outputs

<0 | 1 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 >